


Start assembly:



1. Remove the bottom layer board, door layer board, top layer board, and side left bracket and install them with long screws (note that the layer board and bracket are aligned with single grooves).

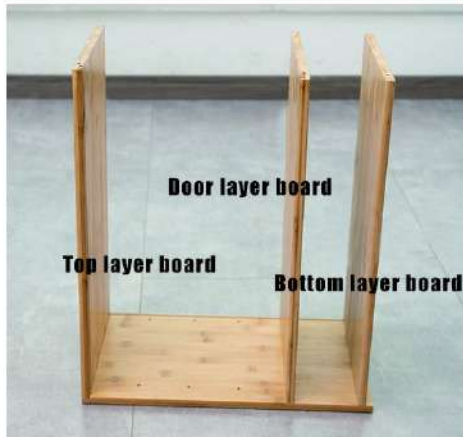

2. Take out the small backboard and insert it along the groove.



3. Take out the large back panel and insert the back panel stopper along the groove.



4. Remove the door panel and handle and install them with short screws.



5. Take out the door panel and insert it into the double grooves along the top layer and door layer respectively.



6. Place the layer board.



7. Remove the right bracket on the side and install it with long screws.



8. Take out the metal strips and insert them into the corresponding holes on the side brackets.



9. Finally, place the ordinary layer board onto the metal strip.

Installation Manual

Accessory list:

