
# **Nesting Square End Table**

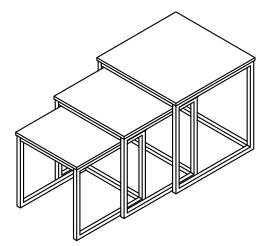

Thank you for purchasing the Nesting Square End Table. We have found it helpful to have a second person present during the assembly process.


# **Nesting Square End Table Assembly Instructions**


NO.	DRAWING	DESCRIPTION	QTY	NO.	DRAWING	DESCRIPTION	QTY
A1	$\bigcirc$	LARGE TABLE TOP	1	B1	$\langle$	MEDIUM TABLE TOP	1
A2		LARGE SIDE FRAME	2	B2		MEDIUM SIDE FRAME	2
А3		LARGE STRETCHER TOP	2	В3		MEDIUM STRETCHER TOP	2
A4		LARGE STRETCHER BASE	1	B4		MEDIUM STRETCHER BASE	1


### Parts

NO.	DRAWING	DESCRIPTION	QTY
C1	$\diamond$	SMALL TABLE TOP	1
C2		SMALL SIDE FRAME	2
C3		SMALL STRETCHER TOP	2
C4		SMALL STRETCHER BASE	2

NO.	DRAWING	DESCRIPTION	QTY
D	9)0000000000	M6x40MM BOLT	34
Е		M6x20MM BOLT	18
F	$\bigcirc$	FLAT WASHER	52
G		ALLEN KEY	1

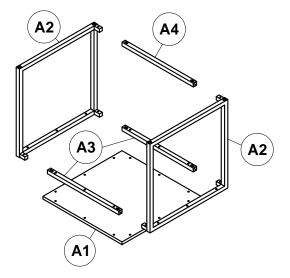

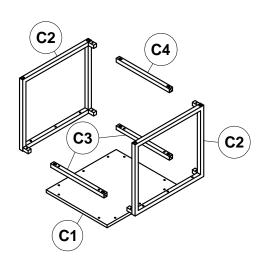

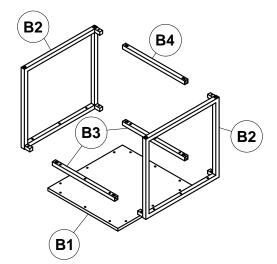

### Step 1

Read through these instructions thoroughly before beginning assembly. We have found this to be of great value when assembling this product.

#### Step 2


Remove all parts and hardware from packing material. Wooden pieces should be placed on a non abrasive surface to prevent damage to the finish

#### Step 3

Attach stretchers (A3&A4/B3&B4/C3&C4) to Side Frame (A2/B2/C2) using 18-M6x20MM Hex Bolts (E), Flat Washer (F).

NOTE: DO NOT TIGHTEN FIRMLY AT THIS TIME!


Repeat this step for Large, Medium and Small Leg Frames.

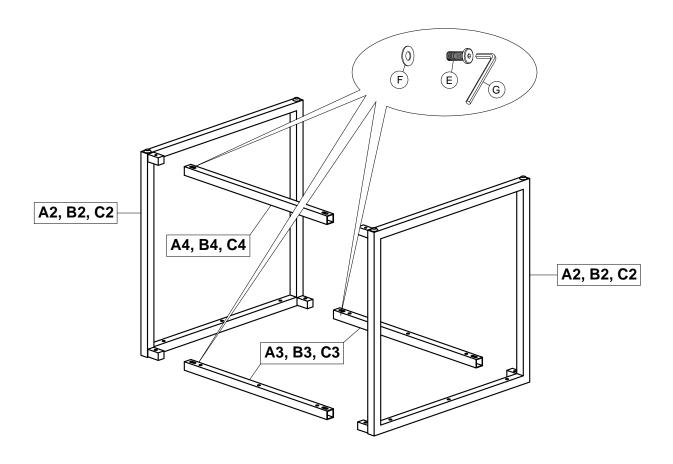


#### Step 4

Lay Table Top Assembly (A1,B1,C1) upside down on a non abrasive surface. Attach Leg-Frame (A-Frame to A1 Top, B-Frame to B1 Top, C-Frame to C1 Top) using 34-M6x40MM Hex Bolts (D) and Flat Washer (F). NOTE: TIGHTEN ALL BOLTS AT THIS TIME!

NOTE: Use same Assembly Method to attach Leg Frames to Top on Large, Medium and Small Assemblies.

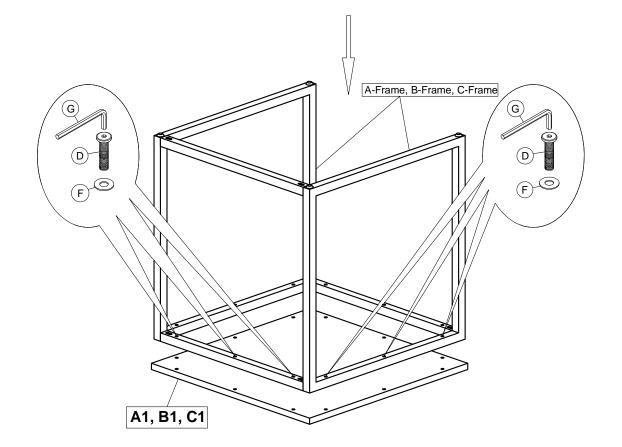

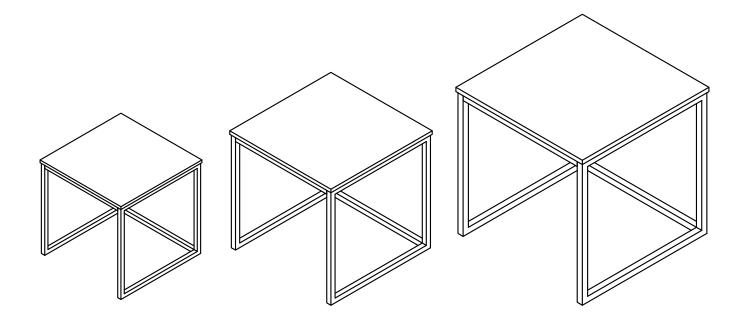

## CARE

Clean with a non abrasive cloth using a mild soap. Make sure to wipe dry.