















































Assembly Instruction

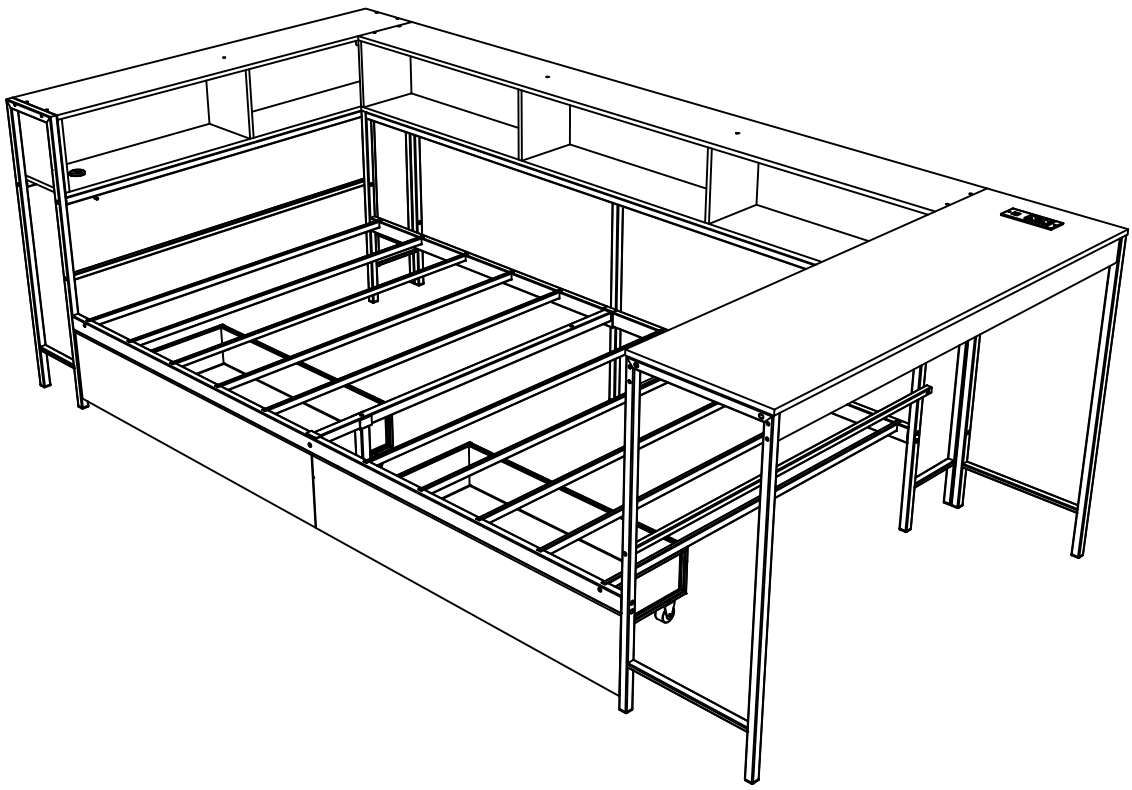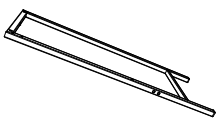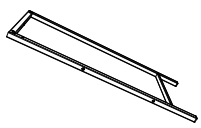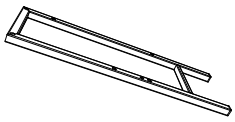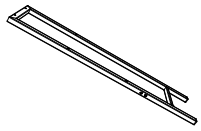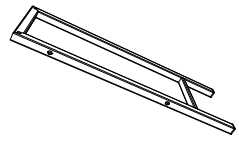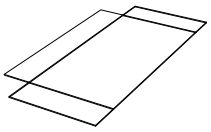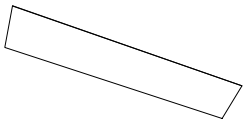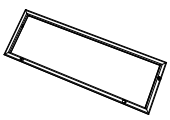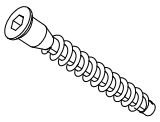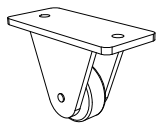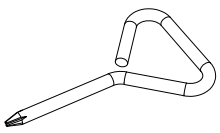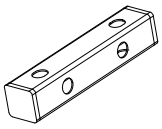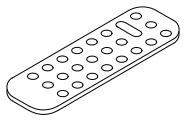



Assembly Instruction

①  1pcs	②  1pcs	③  2pcs
④  2pcs	⑤  1pcs	⑥  1pcs
⑦  1pcs	⑧  1pcs	⑨  1pcs
⑩  2pcs	⑪  1pcs	⑫  1pcs
⑬  8pcs	⑭  1pcs	⑮  2pcs
⑯  2pcs	⑰  2pcs	⑱  2pcs
⑲  2pcs	⑳  1pcs	㉑  1pcs
㉒  1pcs	㉓  1pcs	㉔  1pcs
㉕  1pcs	㉖  2pcs	㉗  2pcs
㉘  1pcs	㉙  3pcs	㉚  1pcs
㉛  1pcs	㉜  1pcs	㉝  1pcs
㉞  2pcs	㉟  2pcs	


Assembly Instruction

A  M5*40mm 35PCS	B  M6*30mm 29PCS	C  M6*35mm 22PCS	D  M6*35mm 4PCS
E  M4*10mm 5PCS	F  1PCS	G  M6*50mm 5PCS	H  M6 4PCS
I  M4*14mm 24PCS	J  4PCS	K  M6*25mm 8PCS	L  1PCS
M  1PCS	N  M4*18mm 24PCS	O  1.0 8PCS	P  1PCS
Q  1PCS	R  M4 1PCS	S  M6 1PCS	T  M6 1PCS
U  24.2cm 1PCS	V  1PCS	W  1PCS	

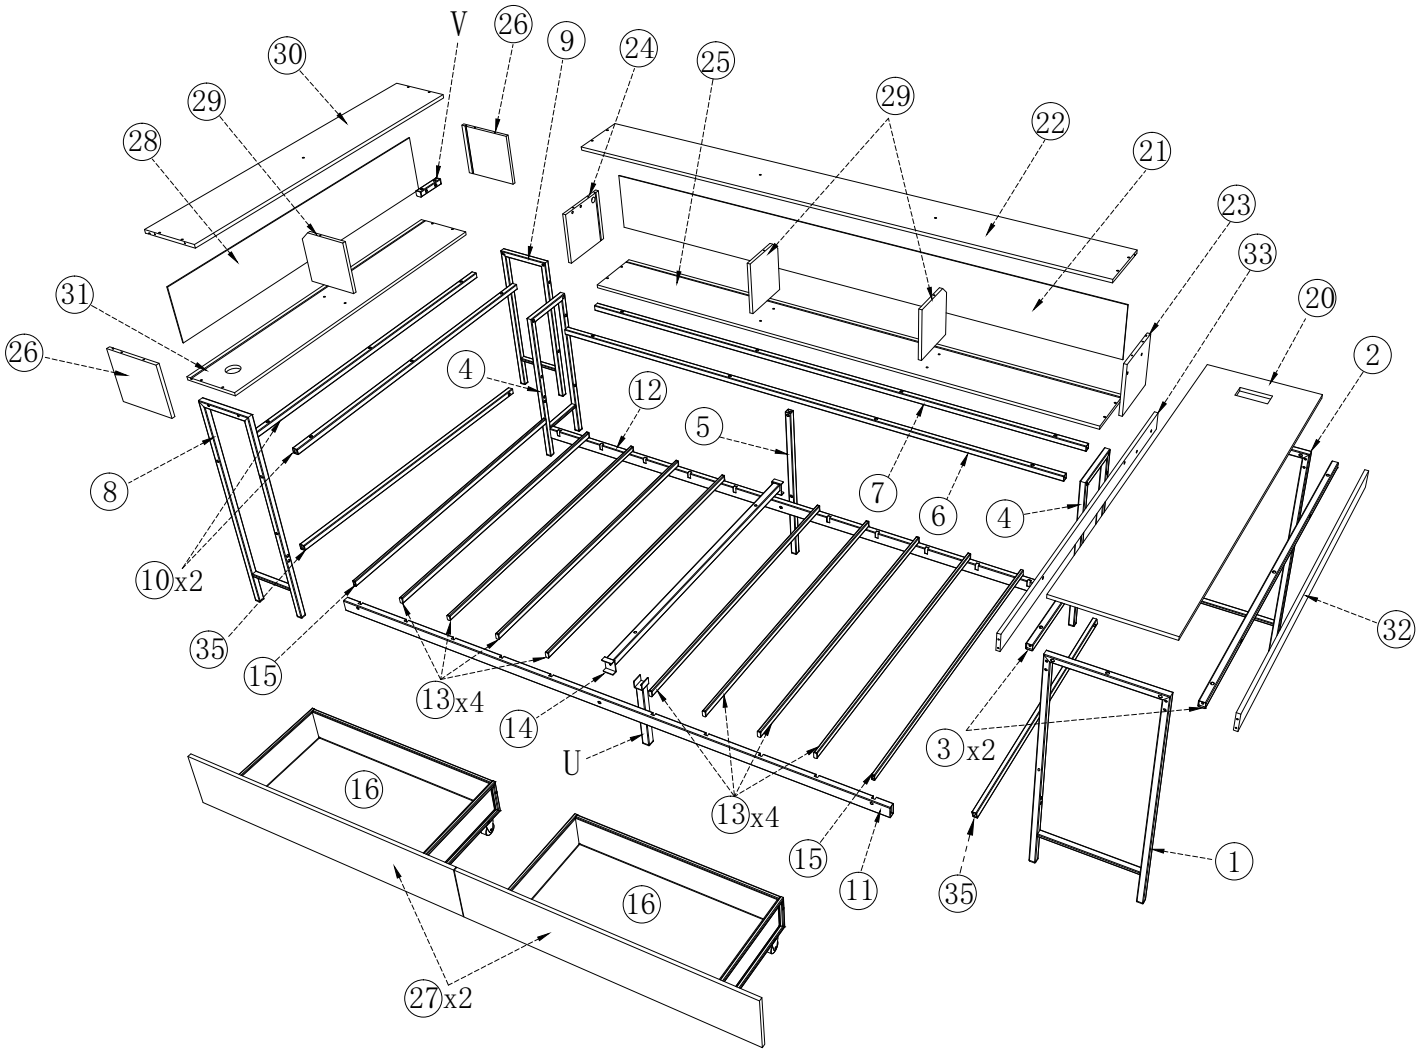
V
26
9
24
25
29
22
21
23
33
20
2
30
29
28
31
26
4
12
5
8
7
6
4
10x2
35
15
13x4
14
U
3x2
32
16
13x4
15
11
35
1
16
27x2

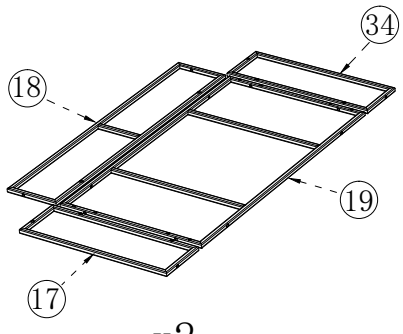
34
18
19
17


x2

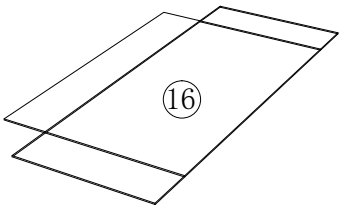
16

x2


STEP 1

A	M5*40mm 6pcs

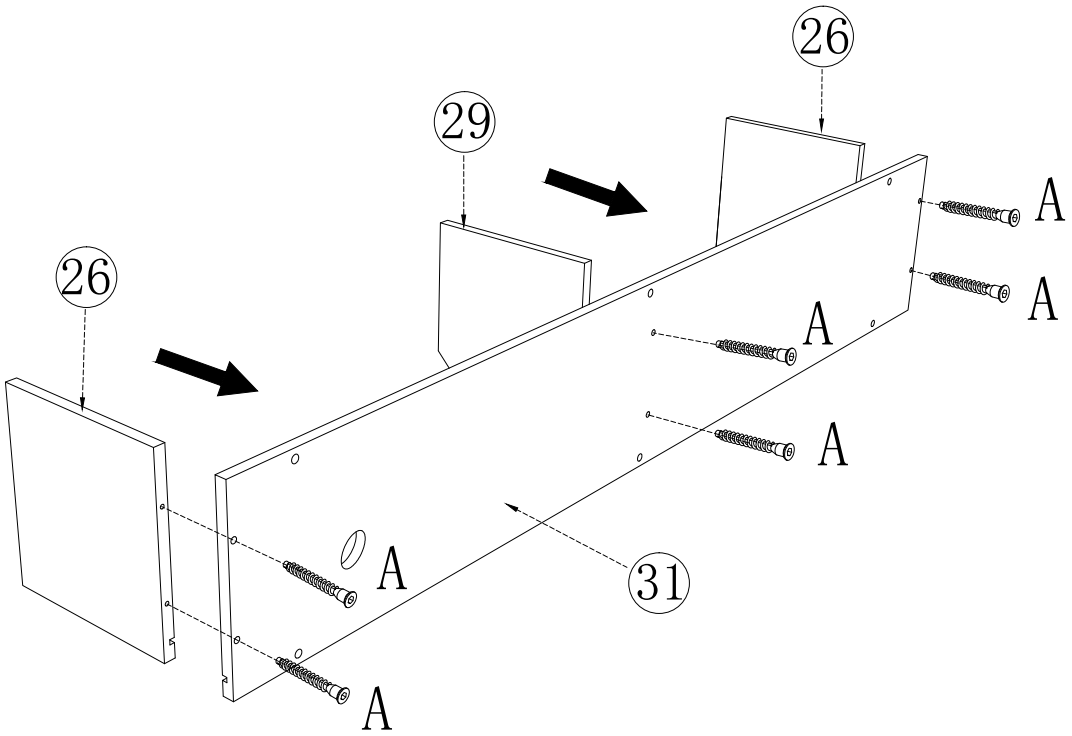


STEP 2

A	M5*40mm 5pcs

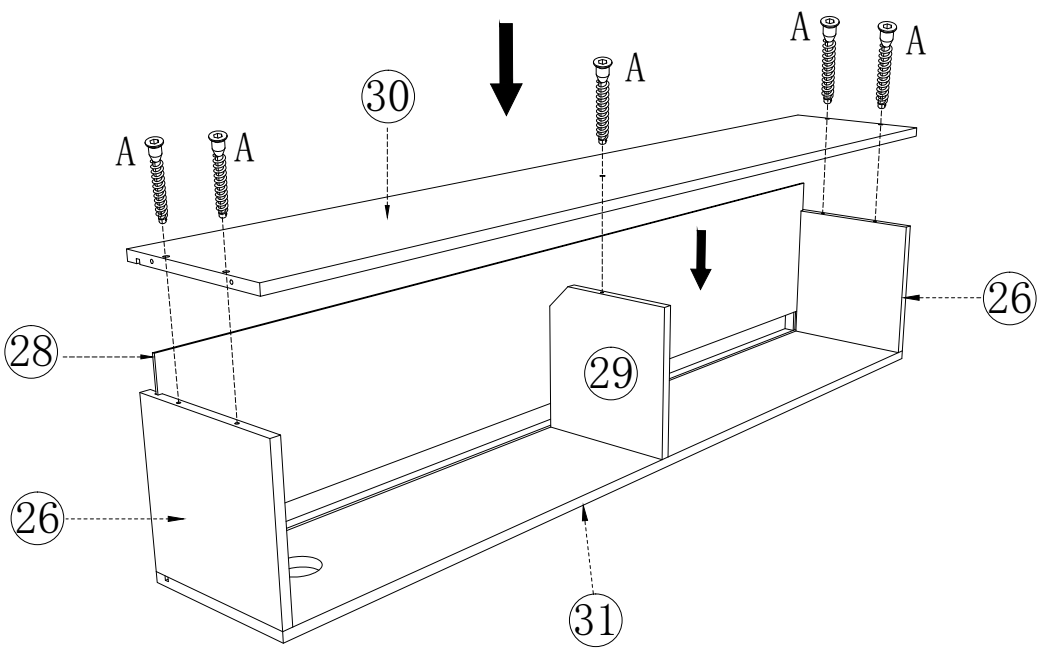


STEP 3

B	M6*30mm 2pcs

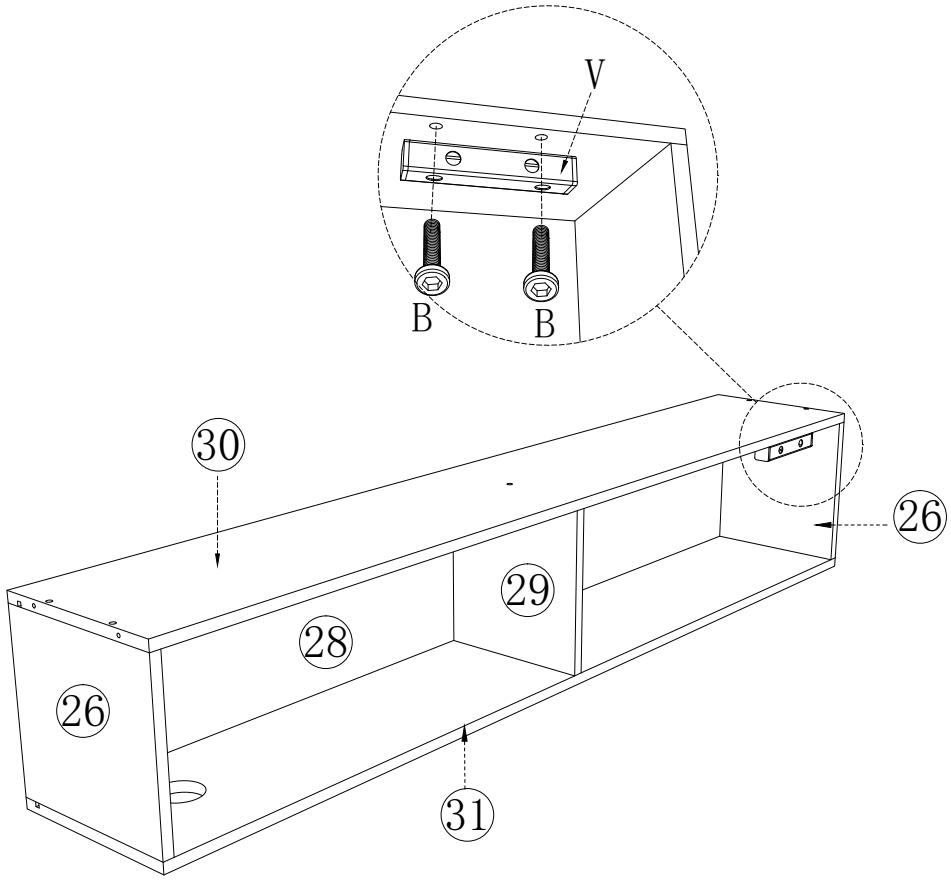


STEP 4

A	M5*40mm 8pcs

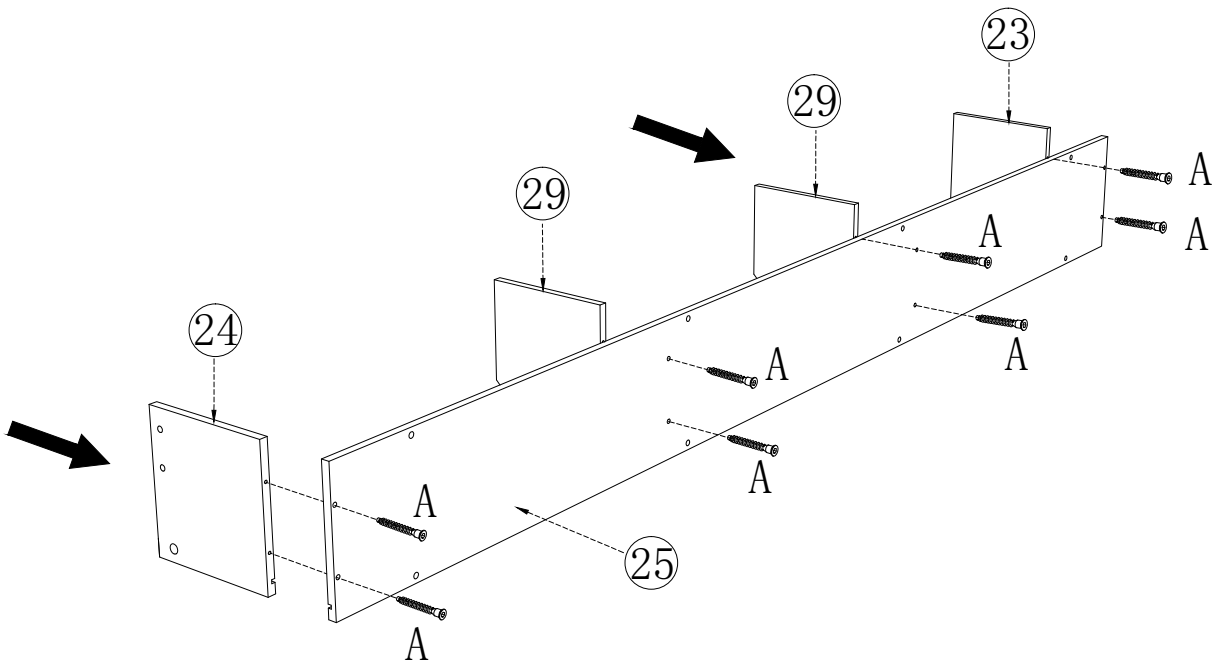


STEP 5

A	M5*40mm 6pcs

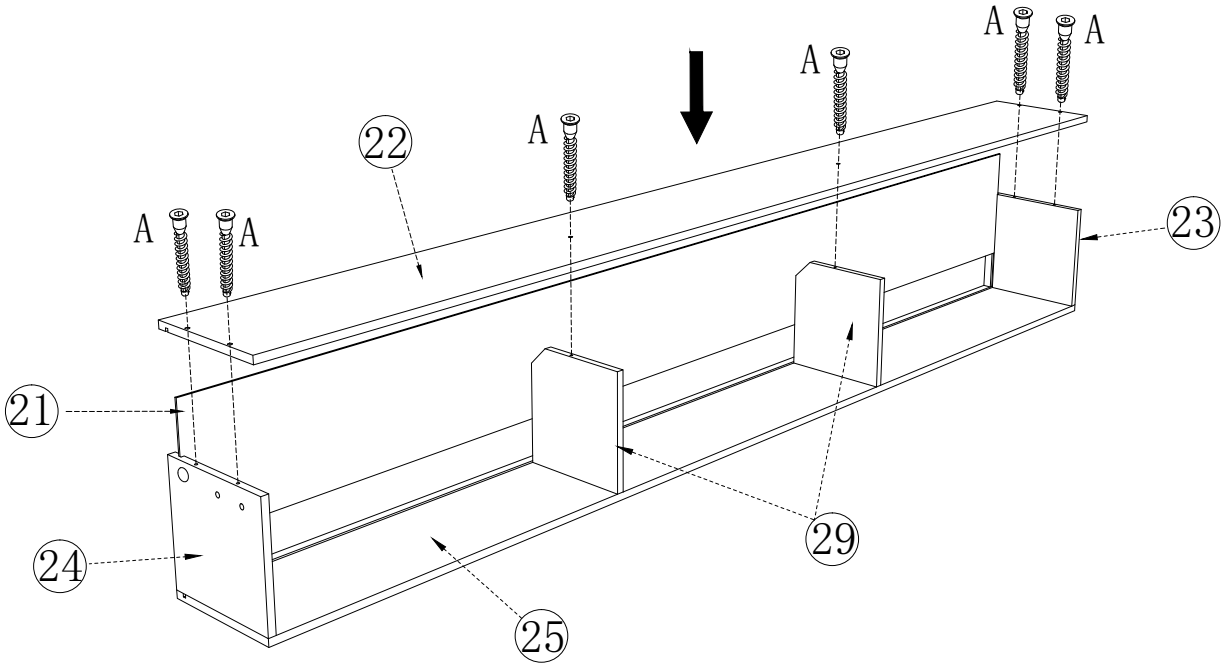


STEP 6

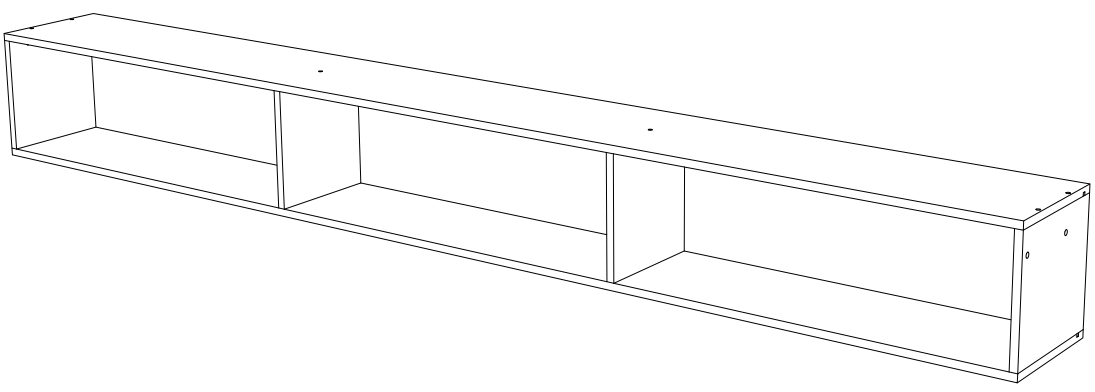


STEP 7

I	M4*14mm	8pcs
J		4pcs

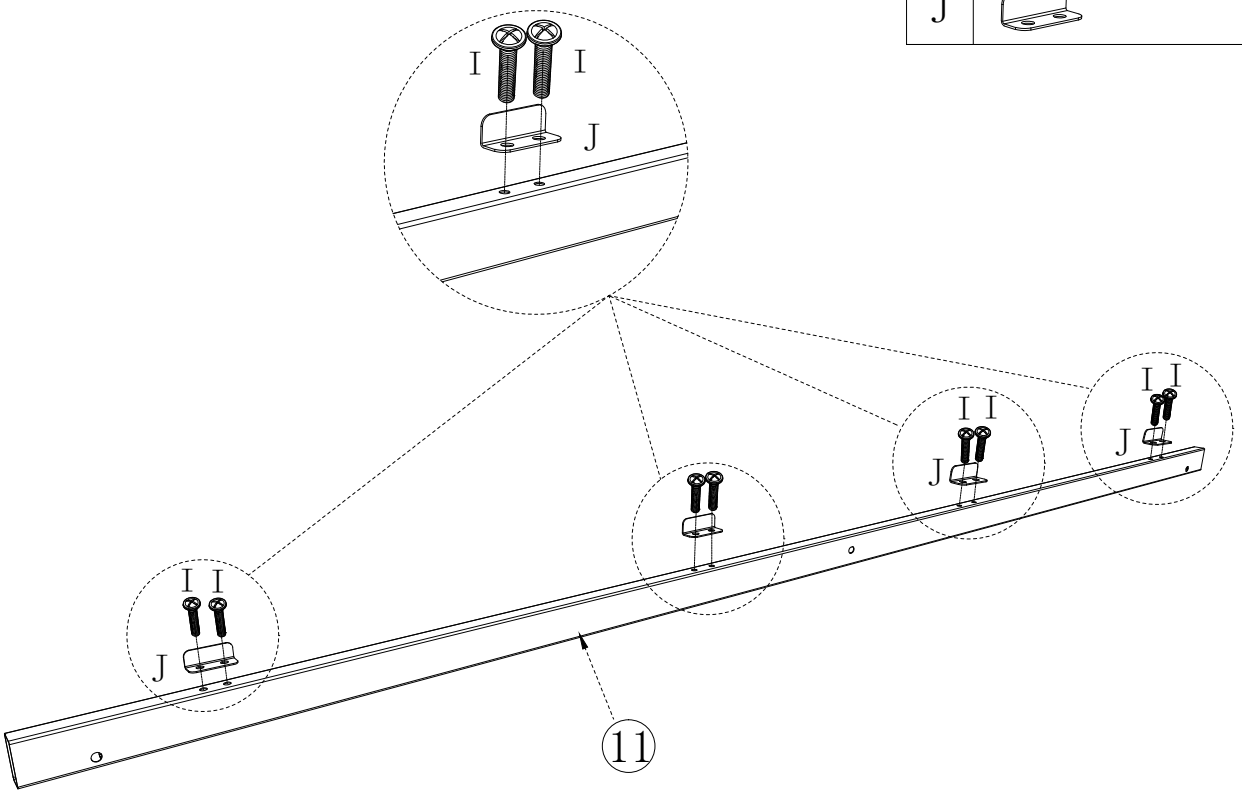


STEP 8

K	M6*25mm	4pcs

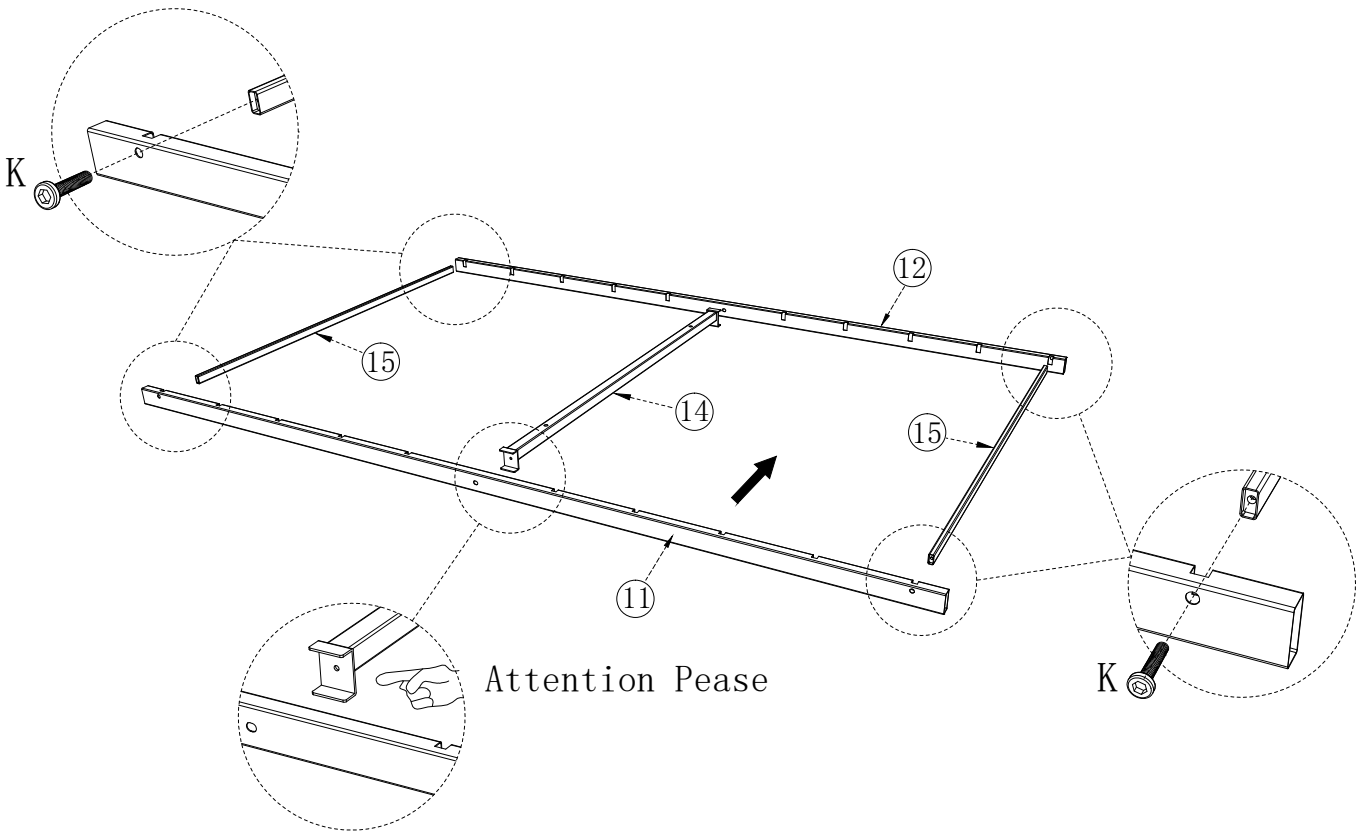


STEP 9

C	M6*35mm	8pcs

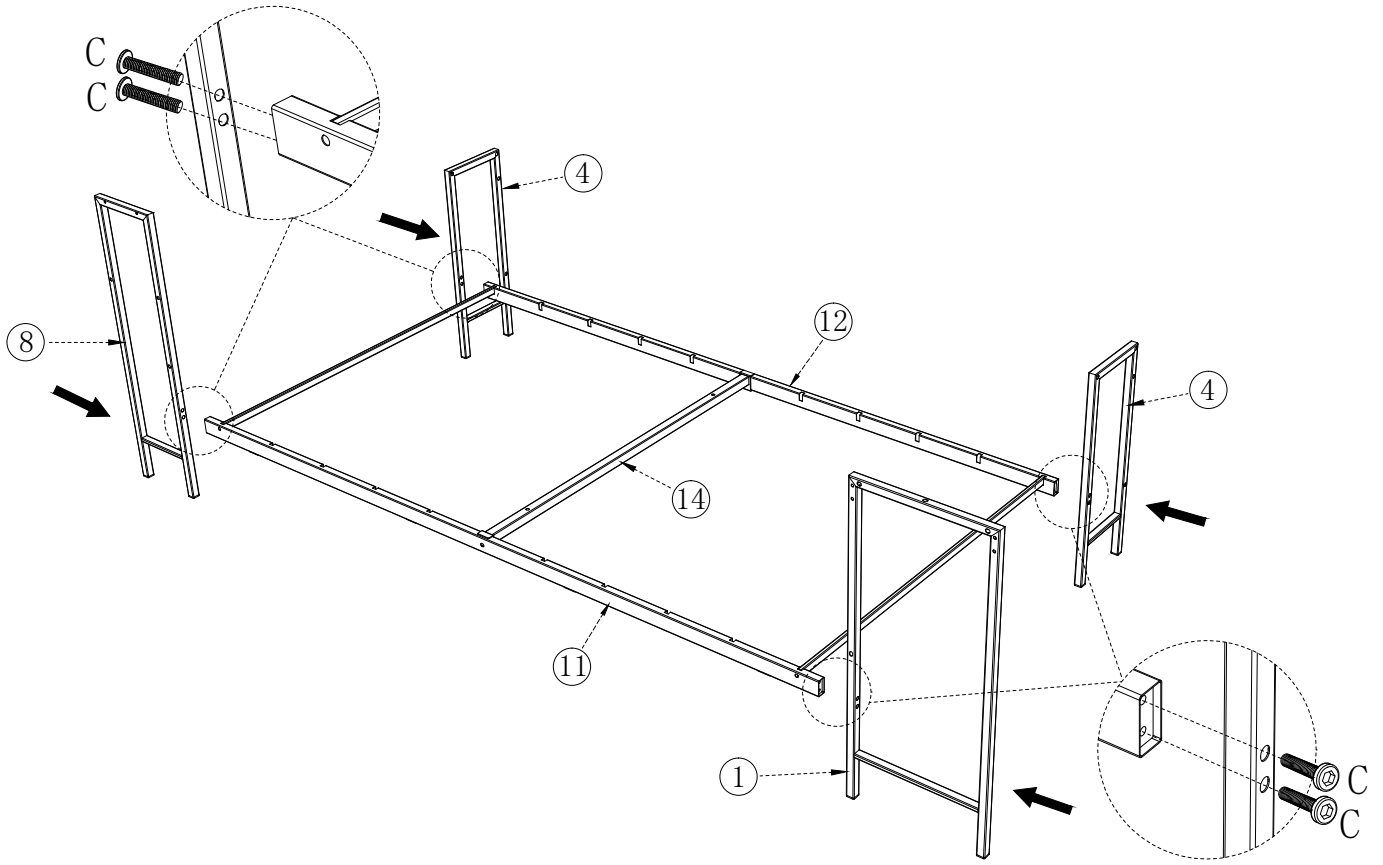


STEP 10

C	M6*35mm	1pcs
G	M6*50mm	1pcs

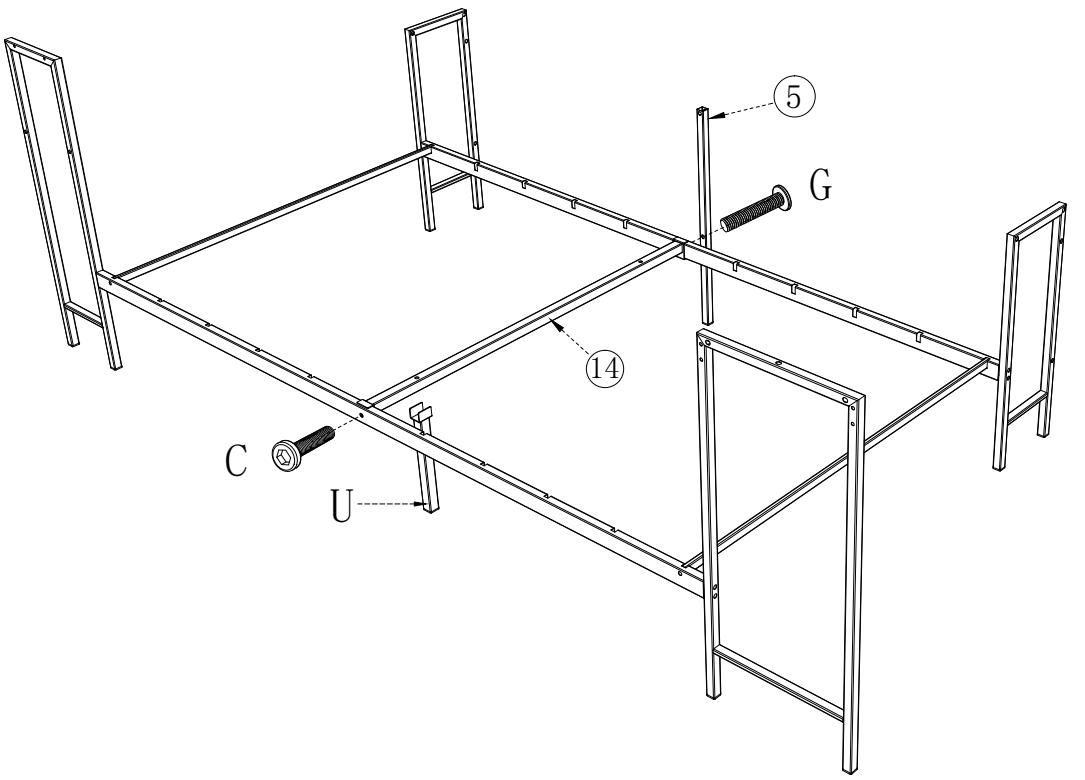


STEP 11

D	M6*35mm 4pcs

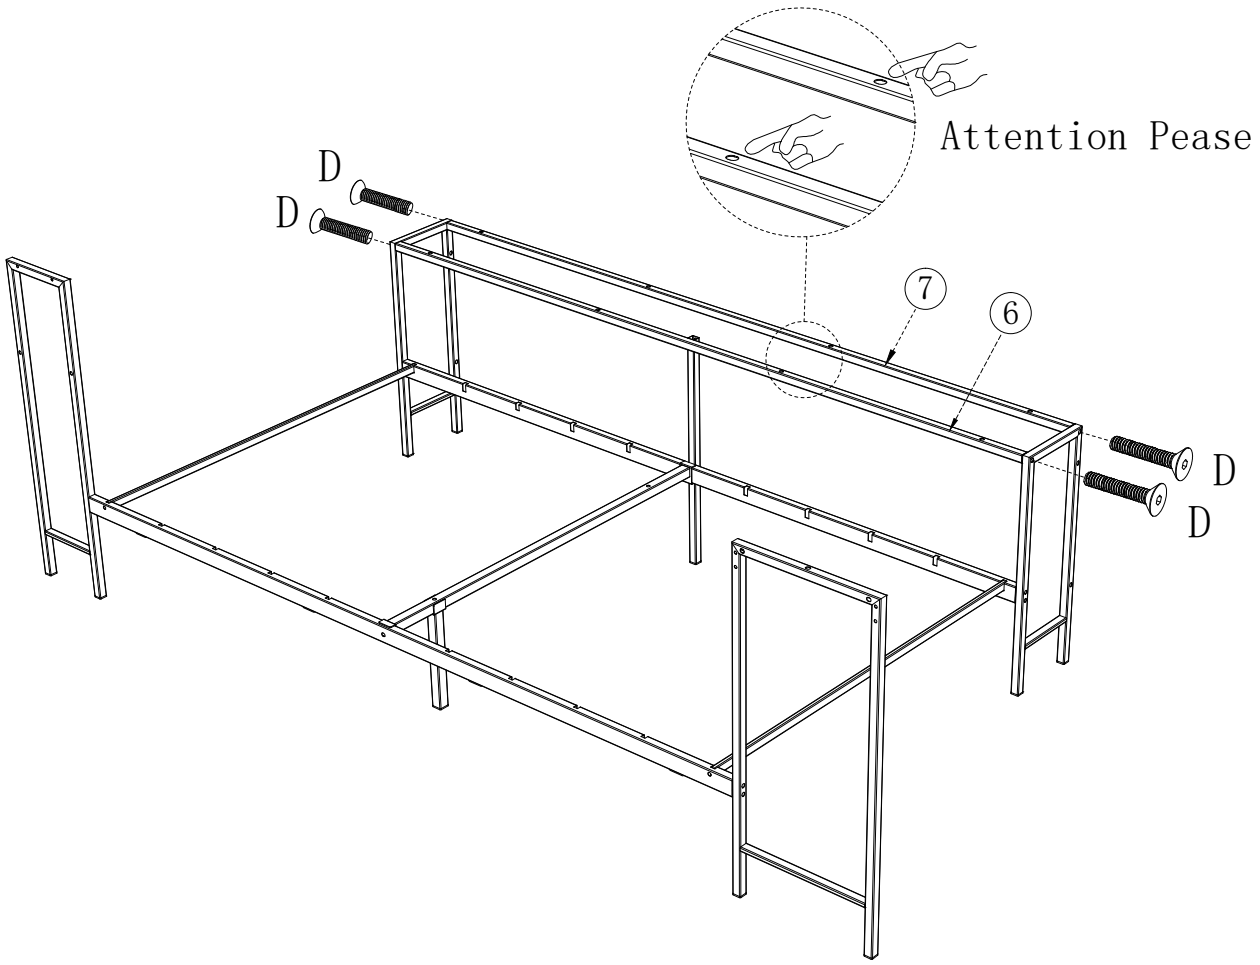


STEP 12

B	M6*30mm 1pcs

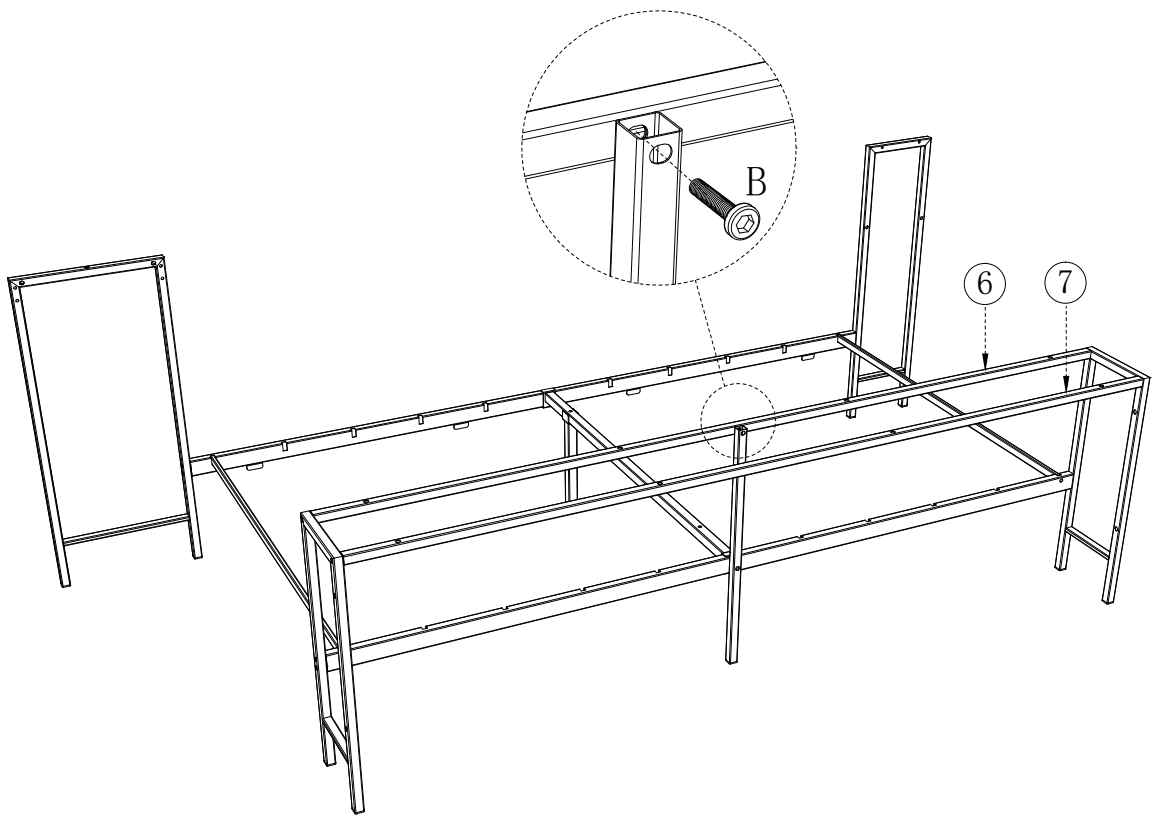


STEP 13

G	M6*50mm	2pcs
H	M6	2pcs

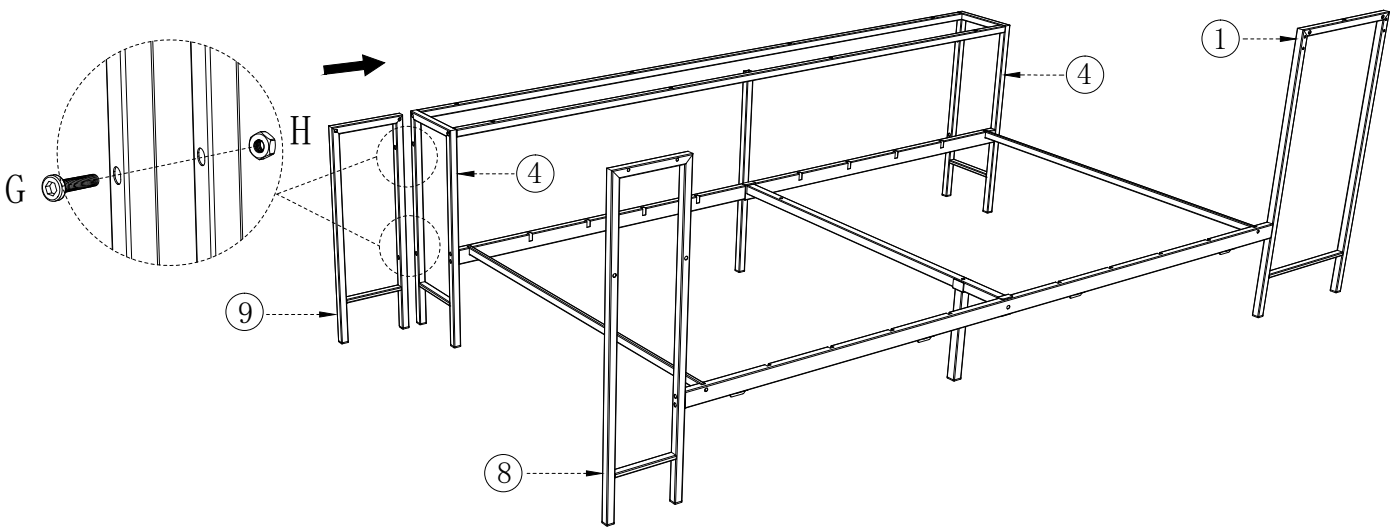


STEP 14

C	M6*35mm	4pcs

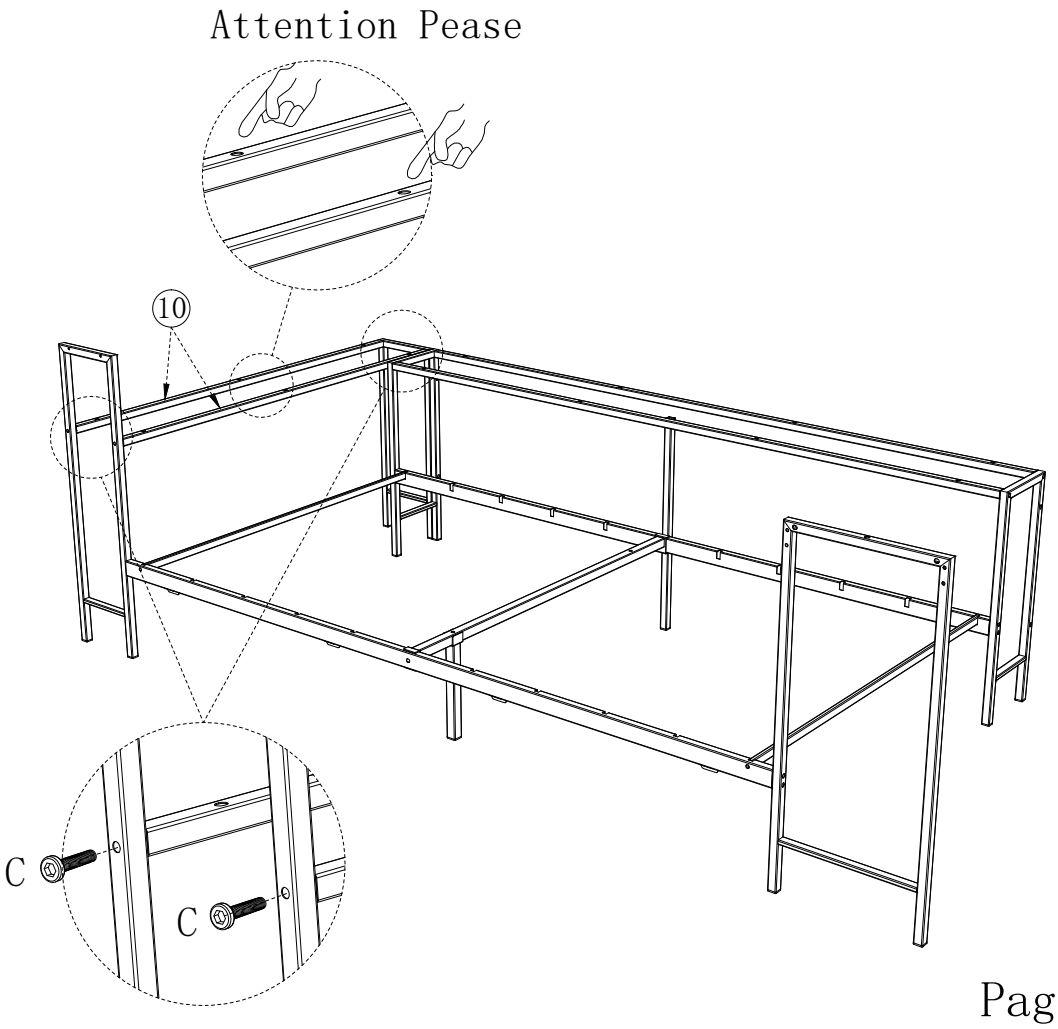


STEP 15

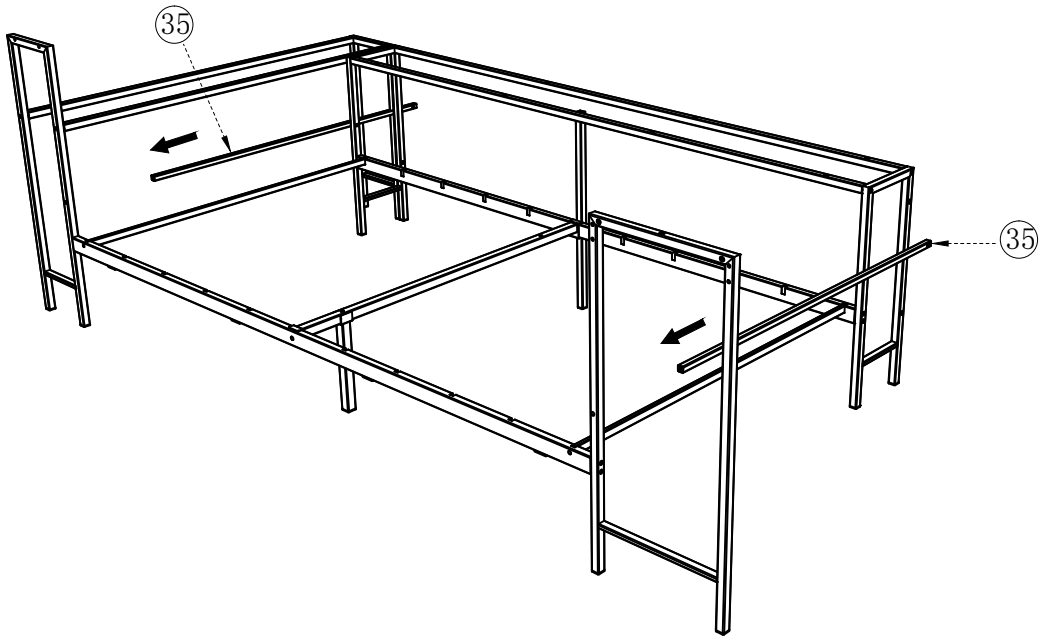


STEP 16

C		M6*35mm 4pcs

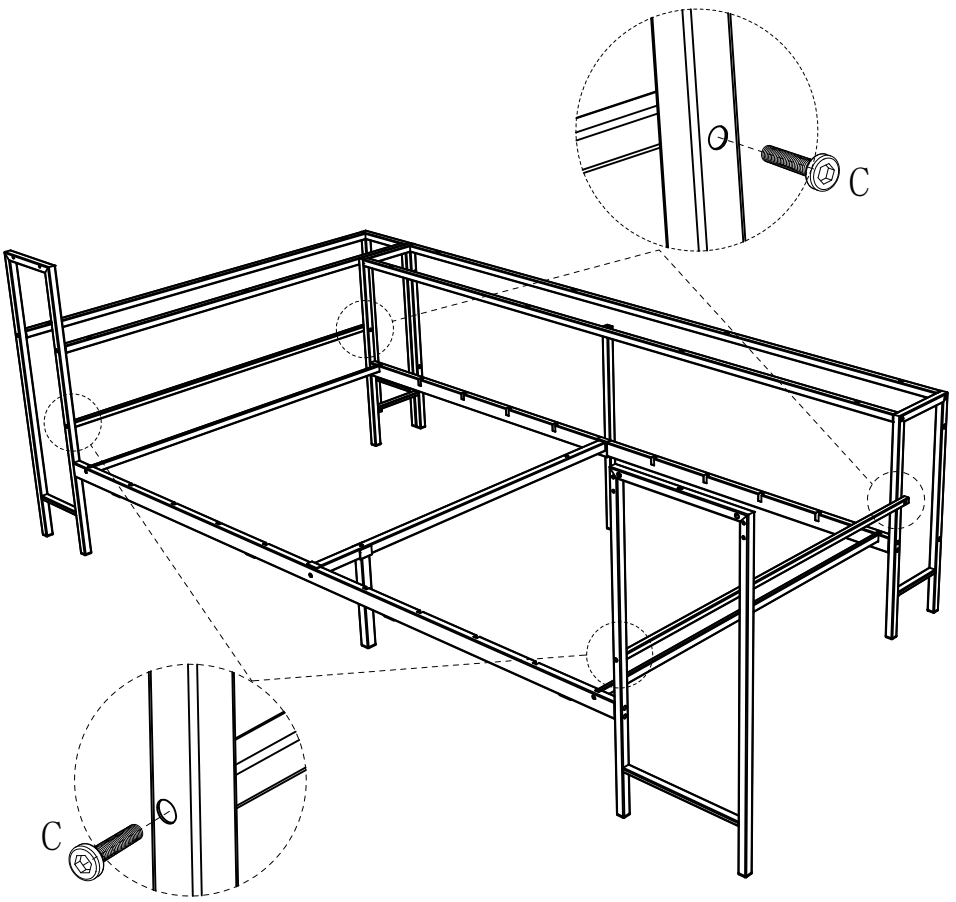


STEP 17

G	M6*50mm	2pcs
H	M6	2pcs

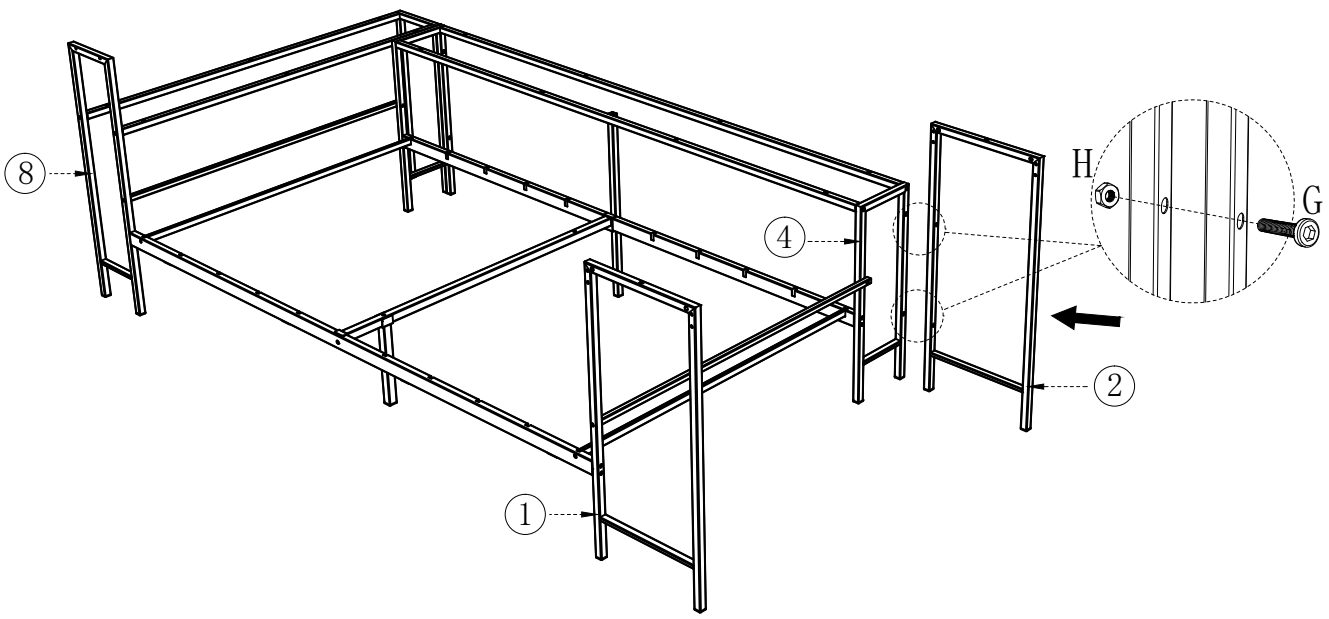


STEP 18

B	M6*30mm	4pcs

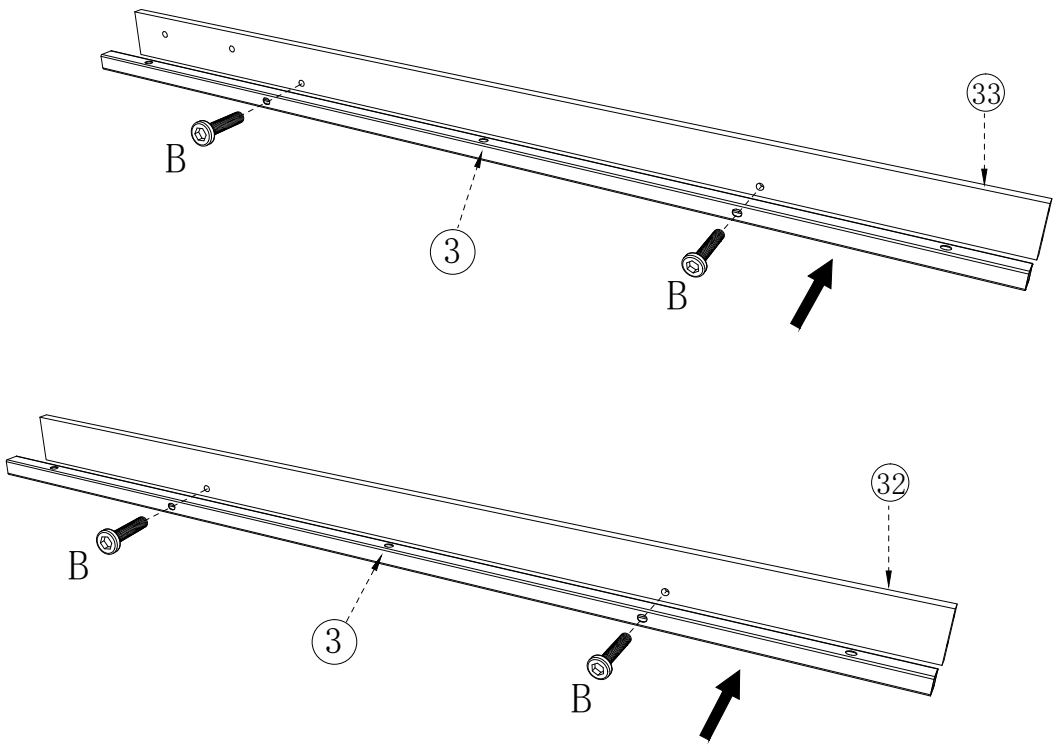


STEP 19

B	M6*30mm 6pcs

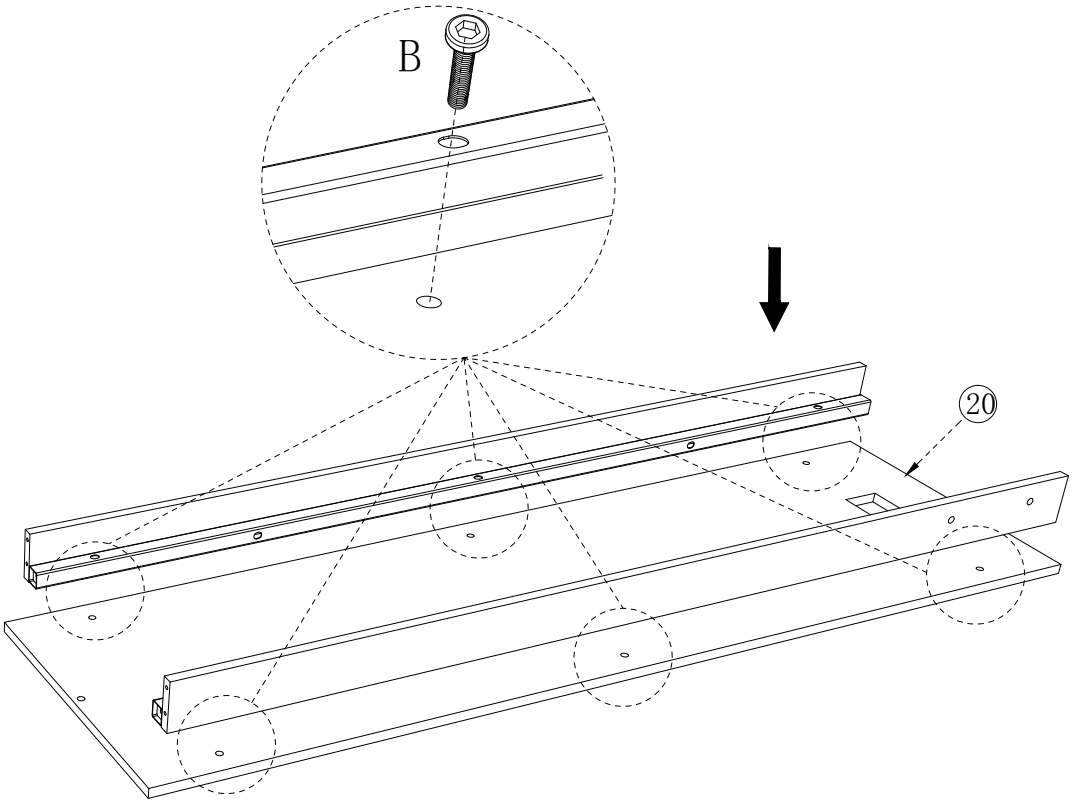


STEP 20

B	M6*30mm 2pcs

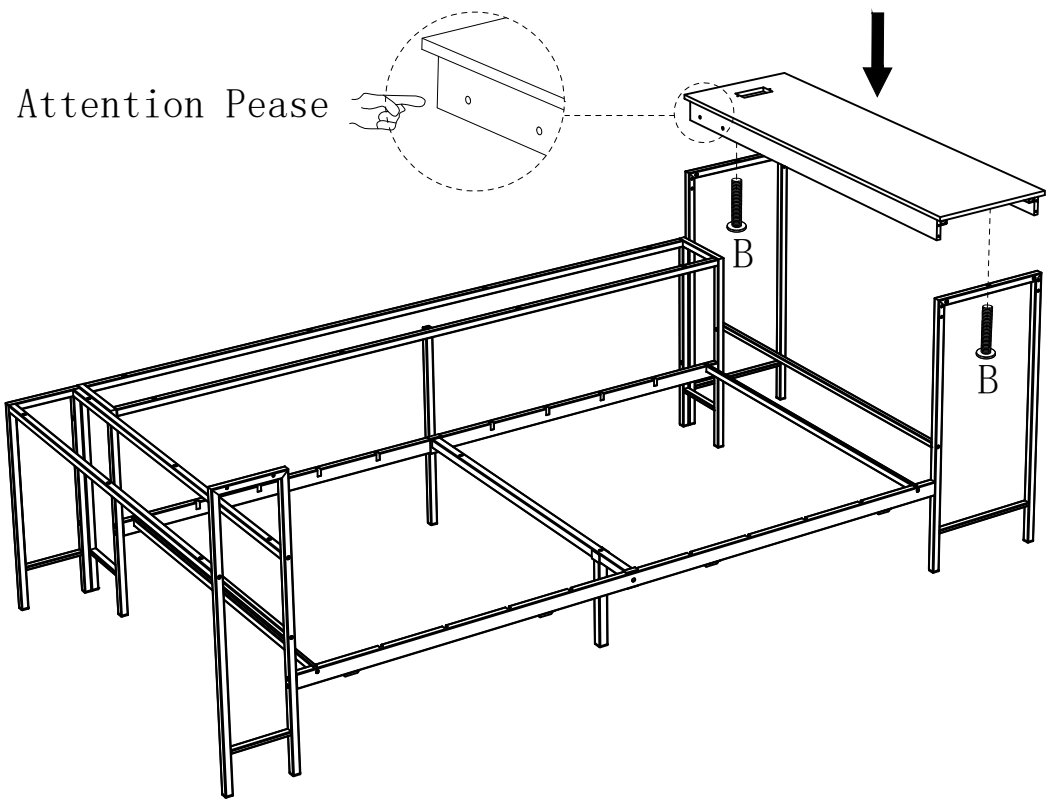


STEP 21

A	M5*40mm	8pcs
C	M6*35mm	4pcs
E	M4*10mm	2pcs
F		1pcs

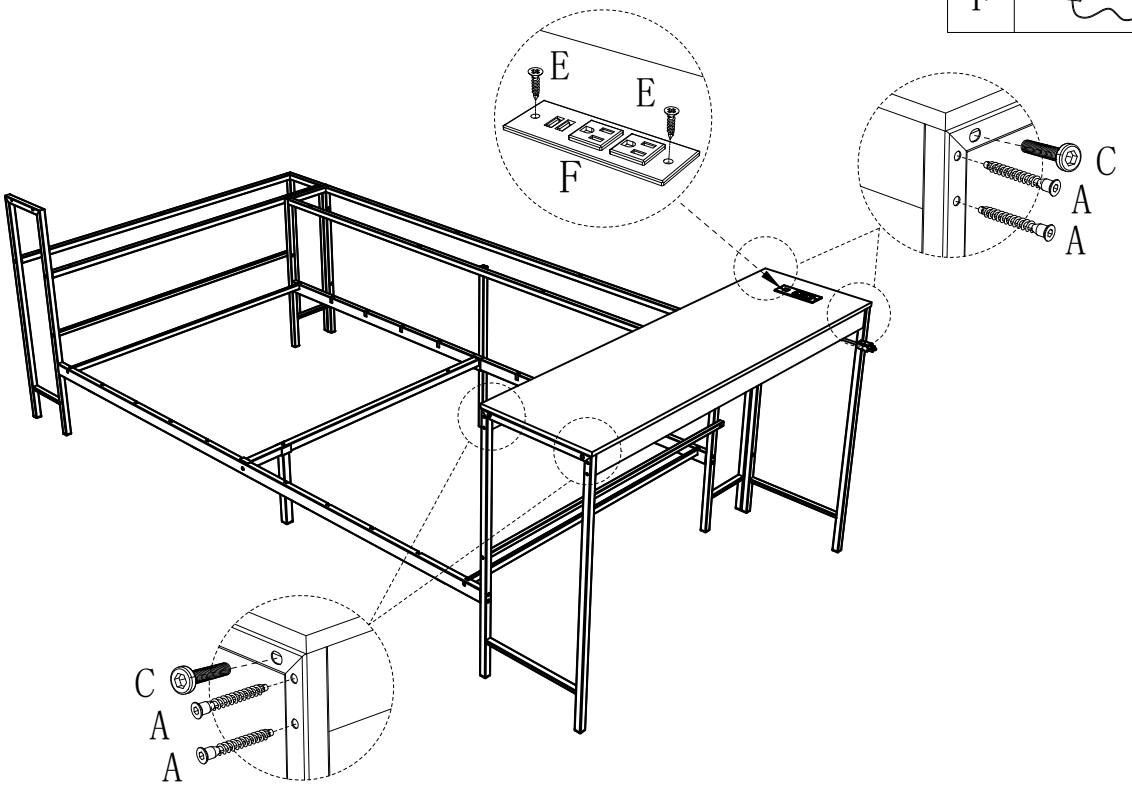


STEP 22

B	M6*30mm	8pcs

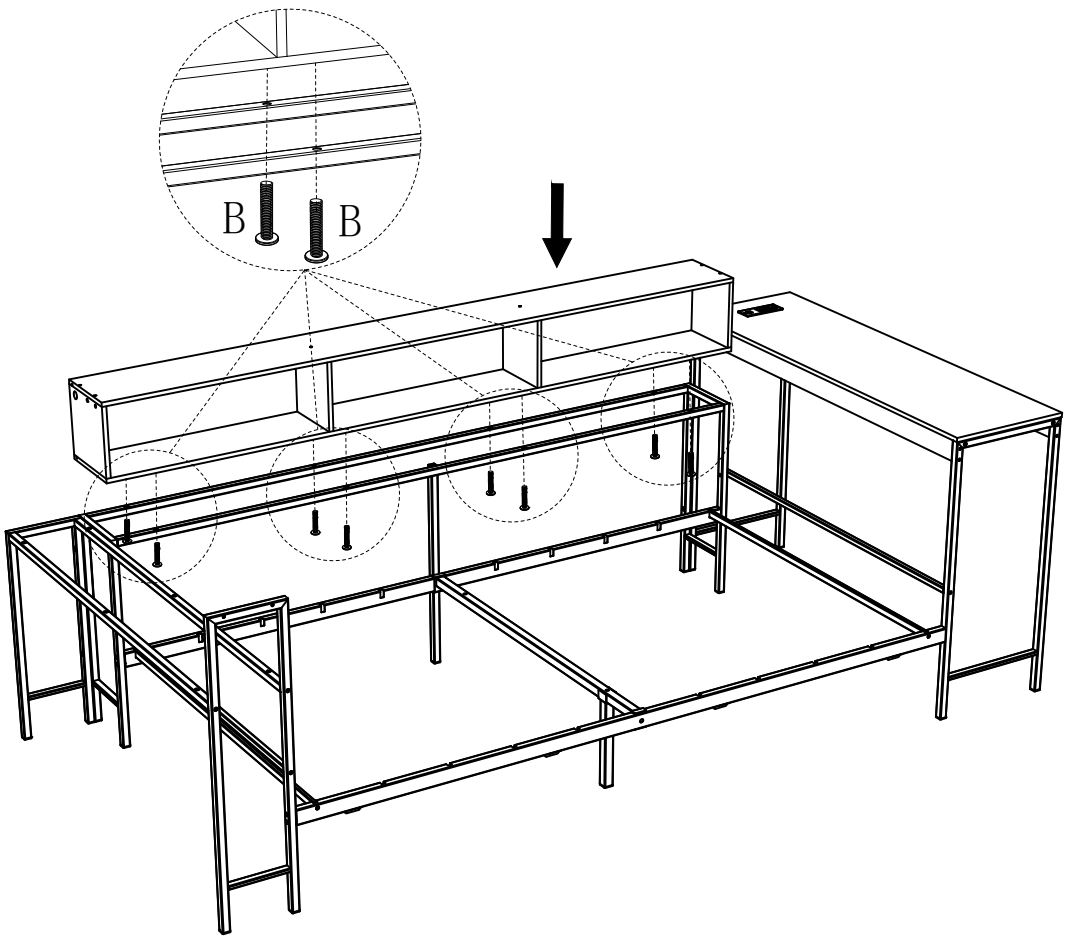


STEP 23

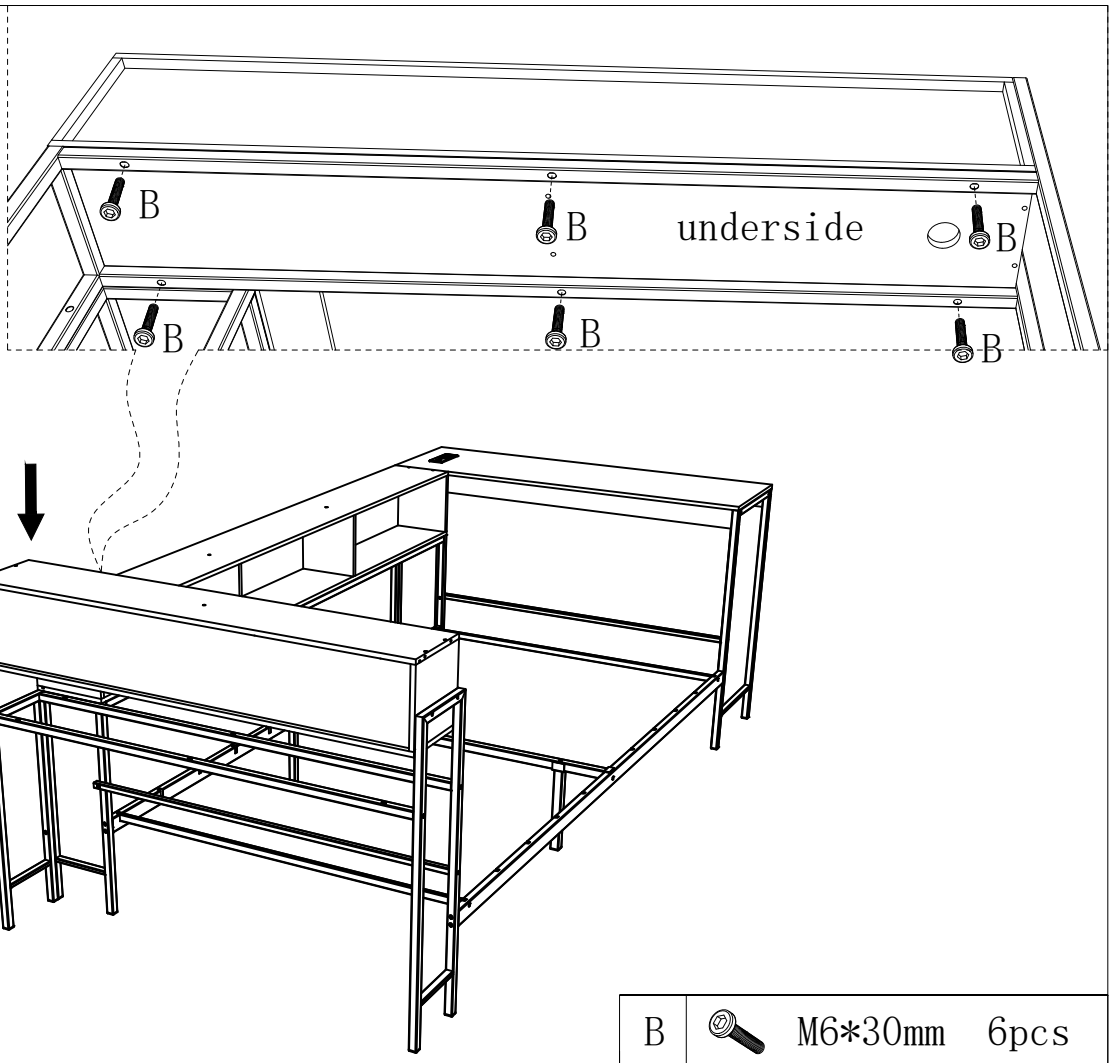


B	M6*30mm	6pcs

STEP 24

A	M5*40mm	2pcs
E	M4*10mm	3pcs
P		1pcs

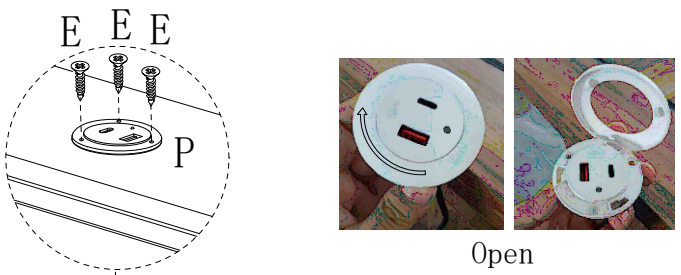


Open

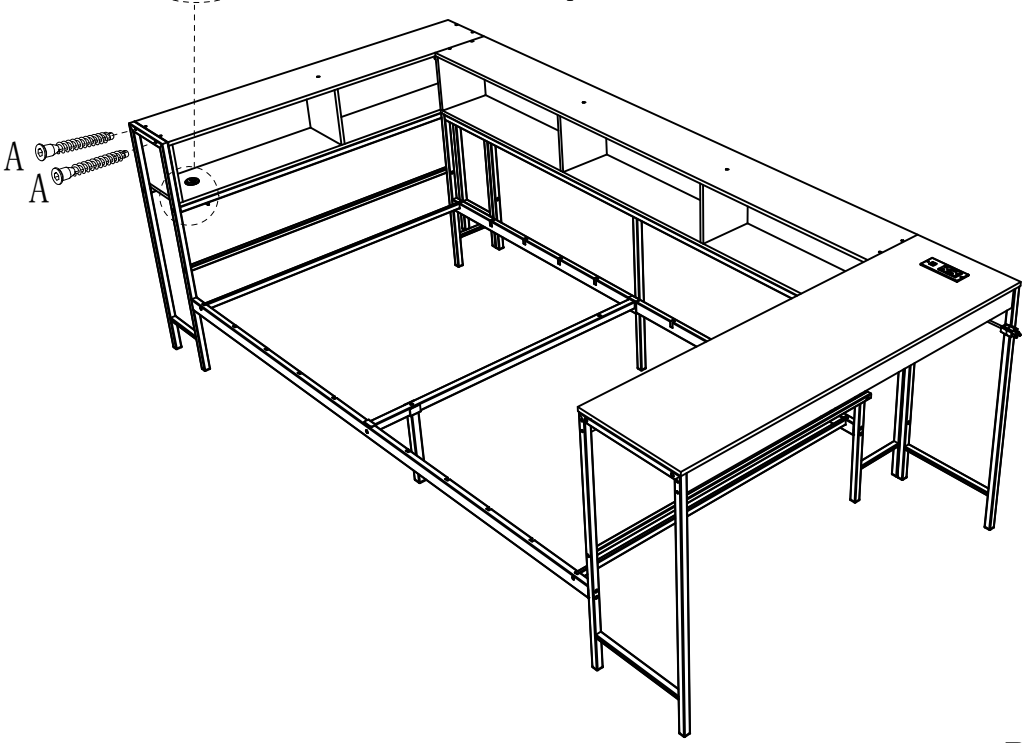


STEP 25


K		M6*25mm 4pcs

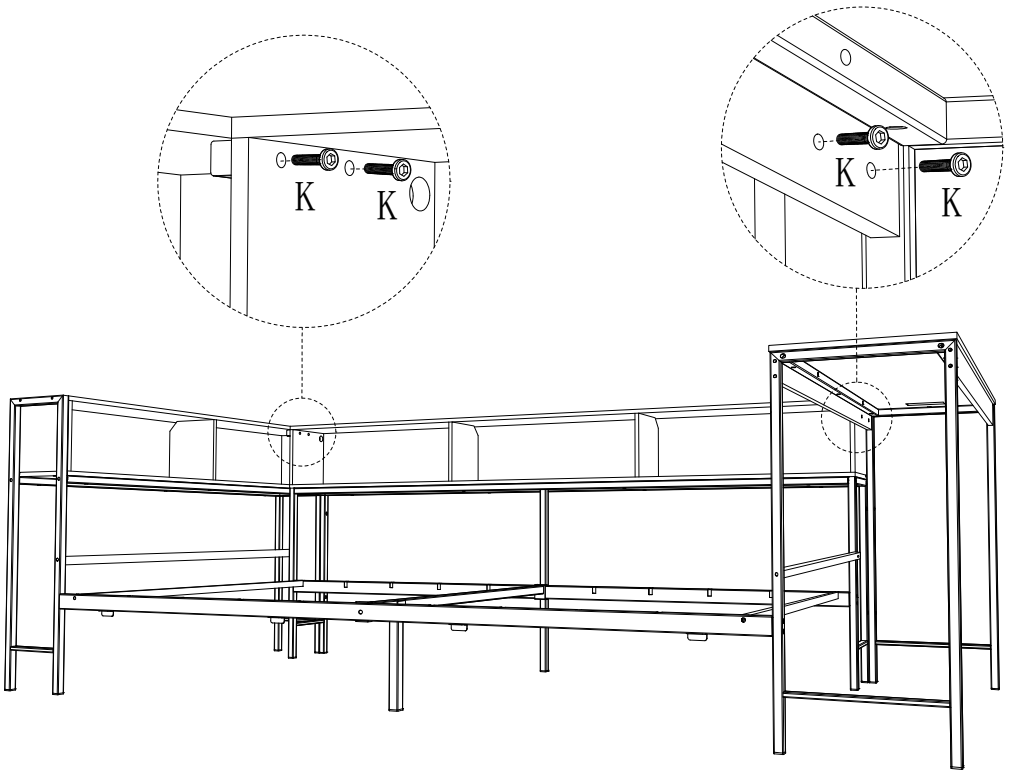


STEP 26

L		1pcs
M		1pcs


Step 1: The light belt first passes through the hole behind the board.

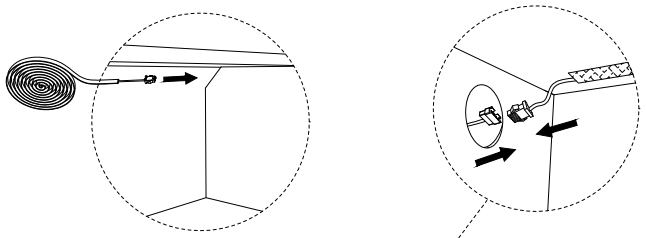

Step 2: Connect the plug
Step 3: Paste led light bar

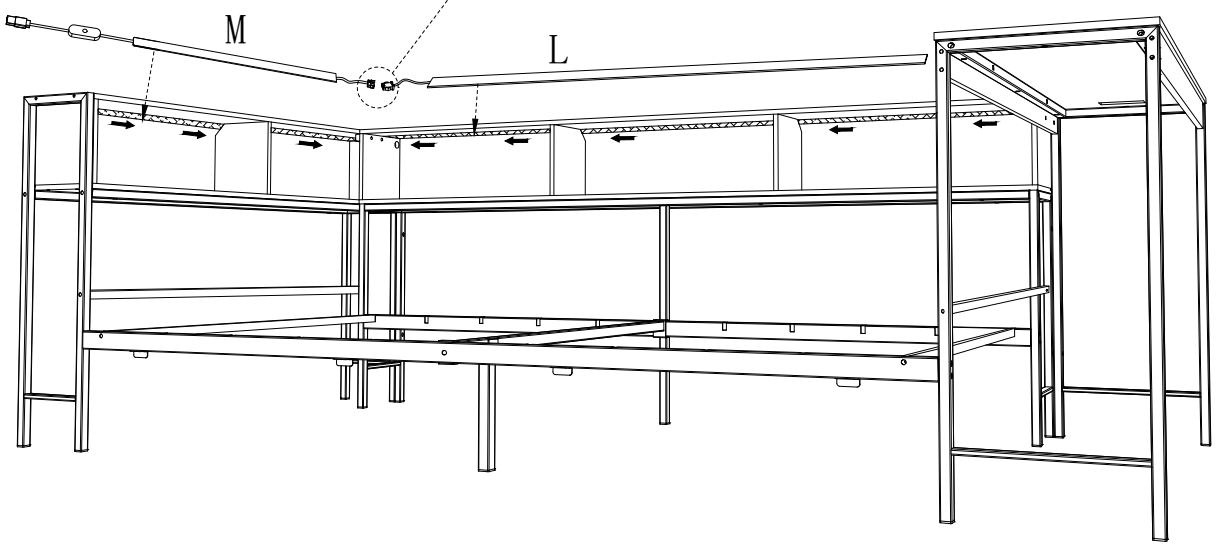


STEP 27

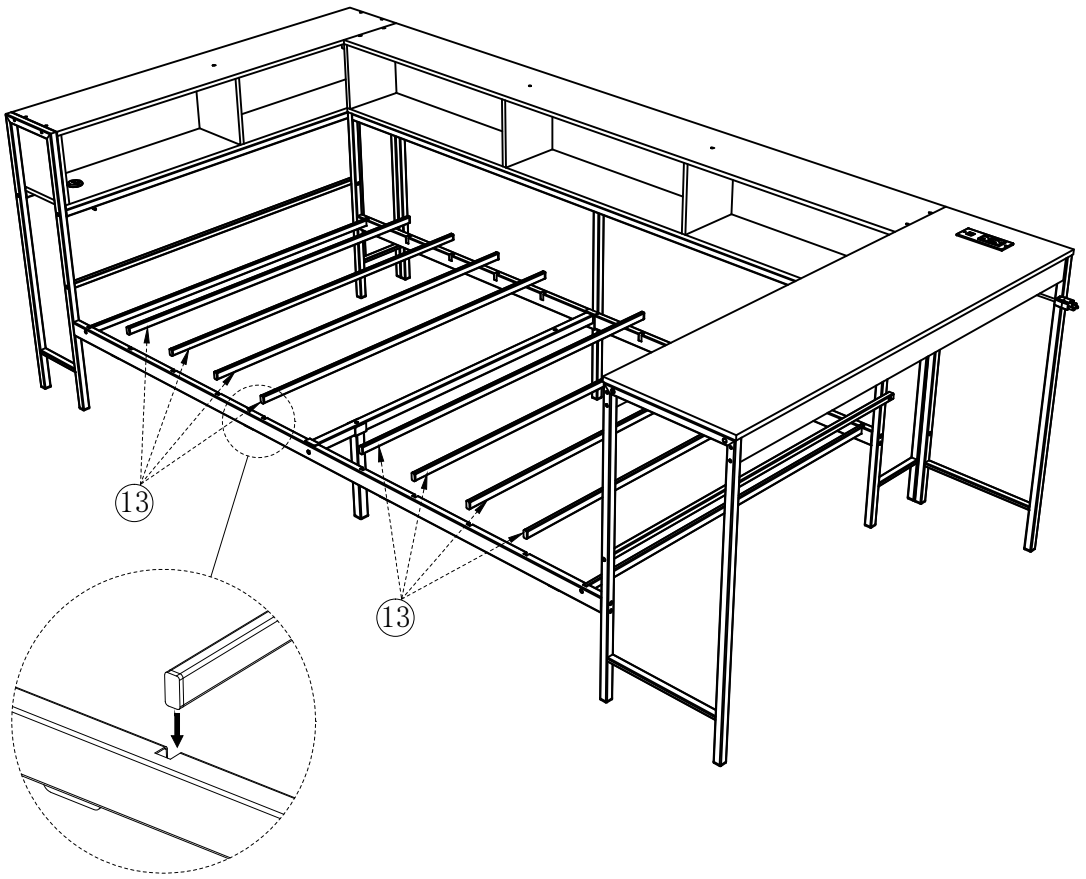


STEP 28

N	M4*18mm	12pcs

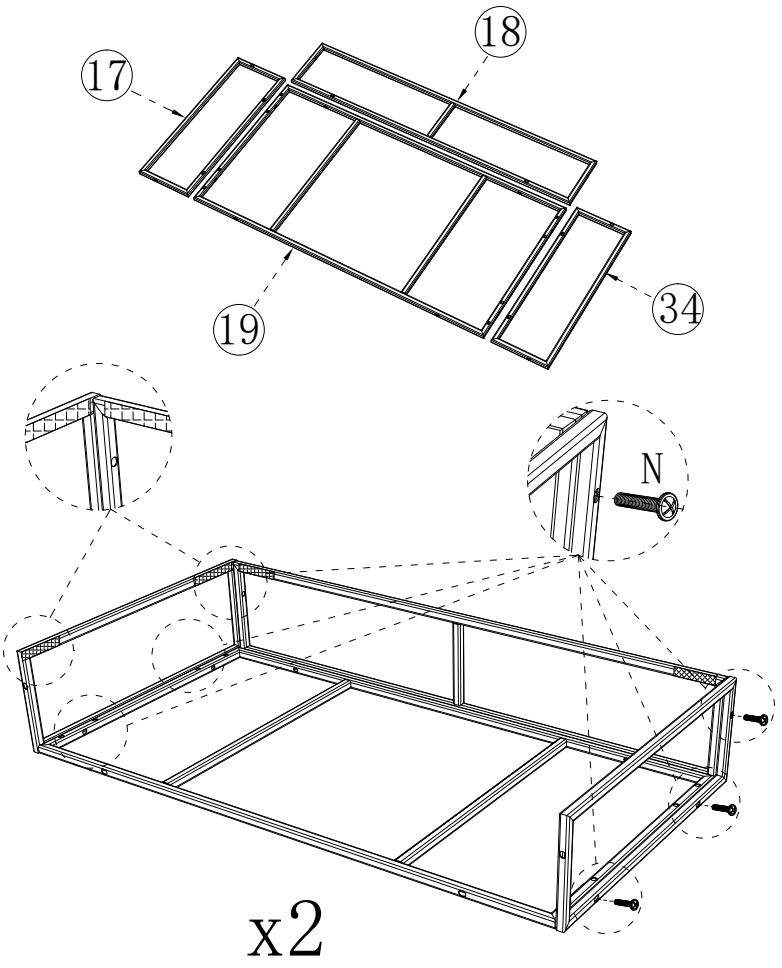


STEP 29

I	M4*14mm	16pcs
0	1.0	8pcs

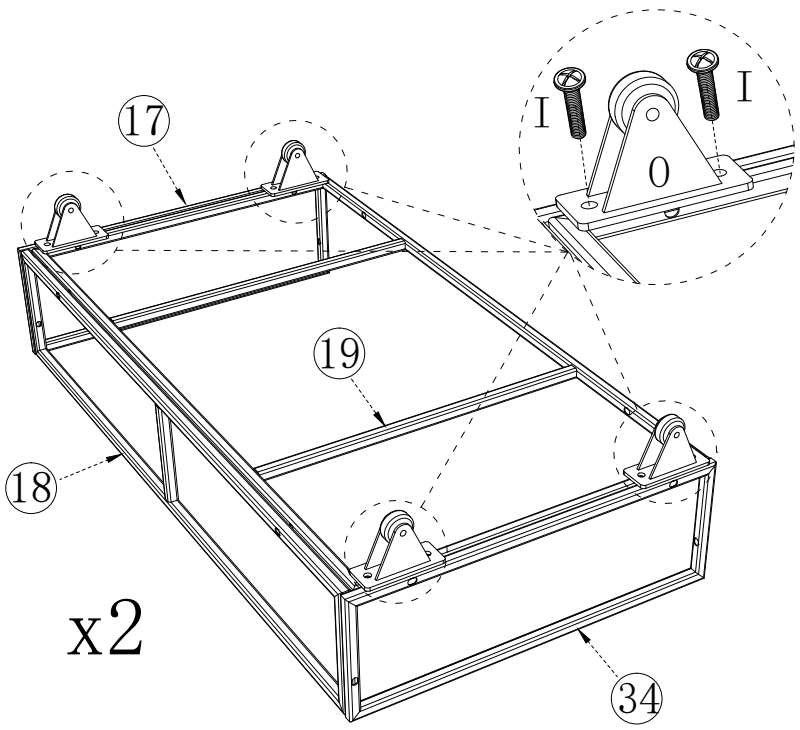


STEP 30

N	M4*18mm 12pcs

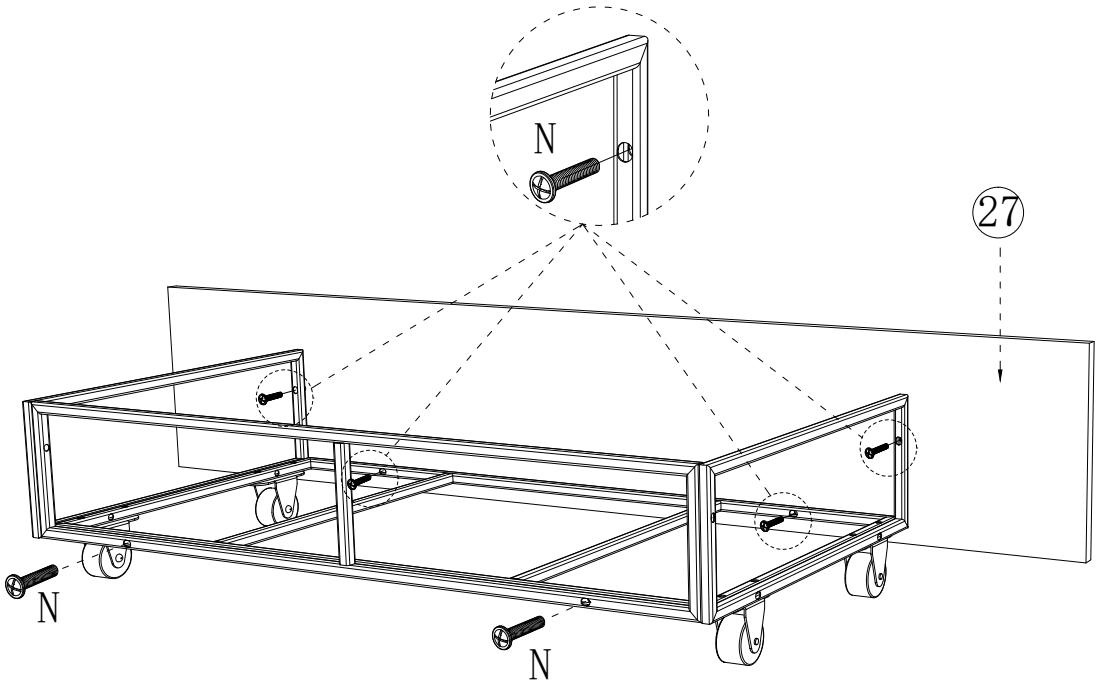


x2

STEP 31

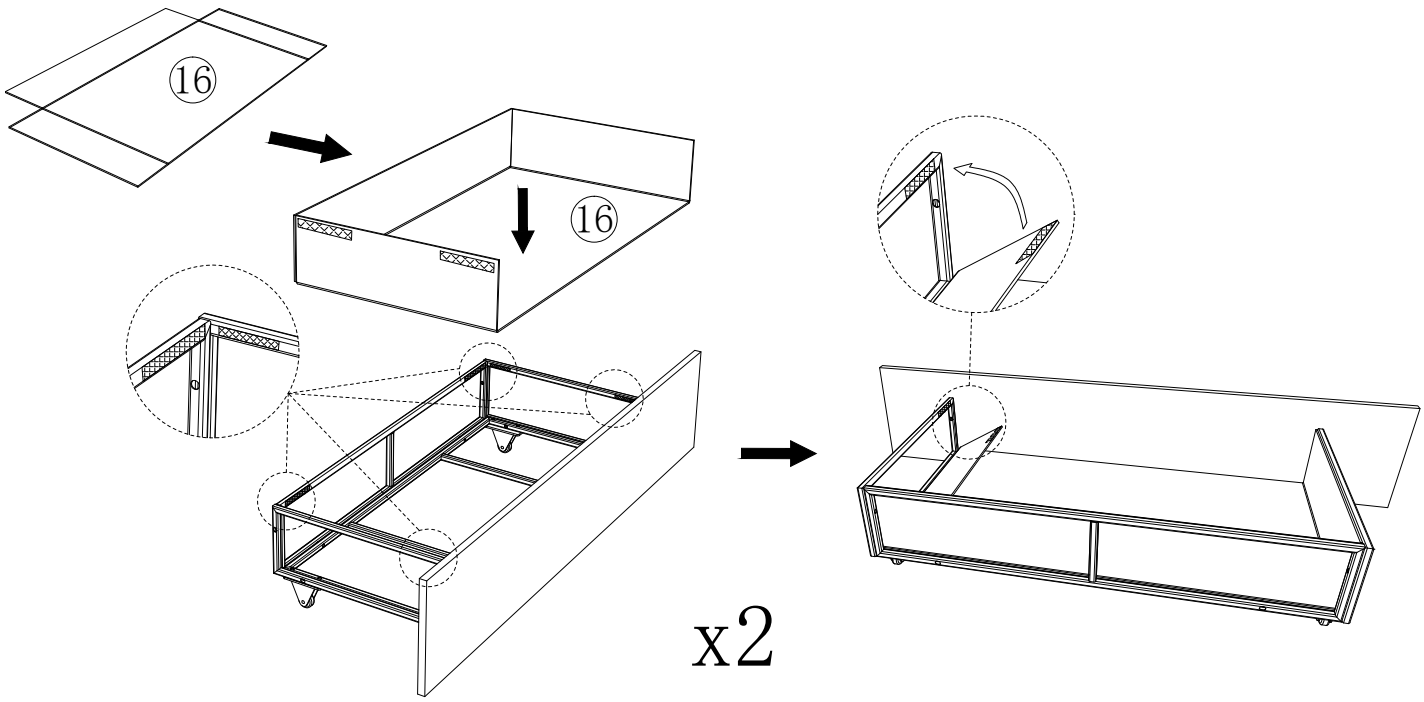

x2

STEP 32

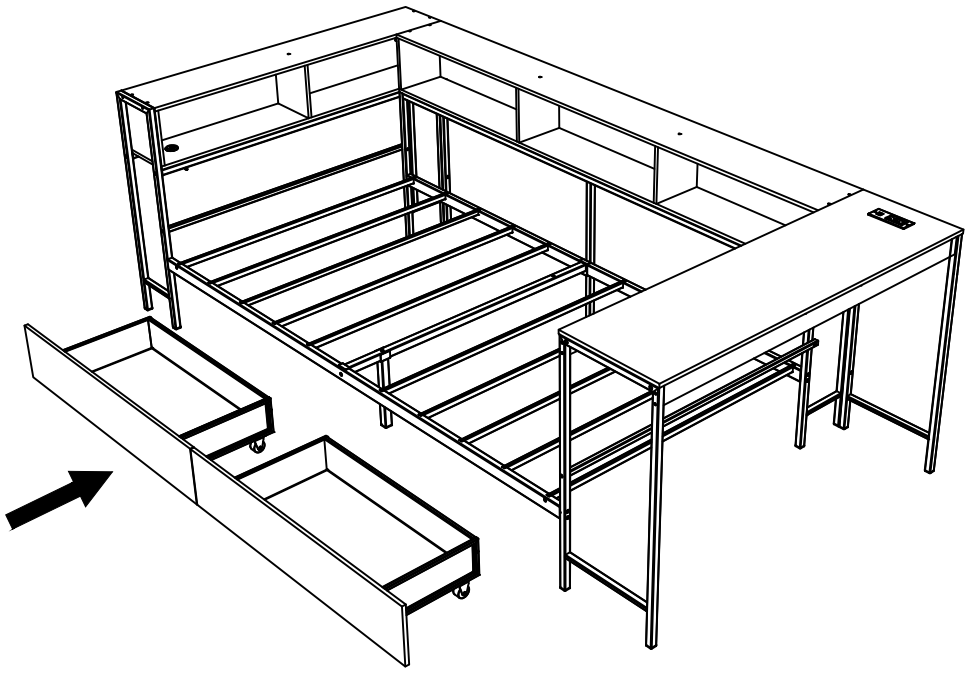

STEP 33

