


ASSEMBLY INSTRUCTIONS


Kitchen Cart

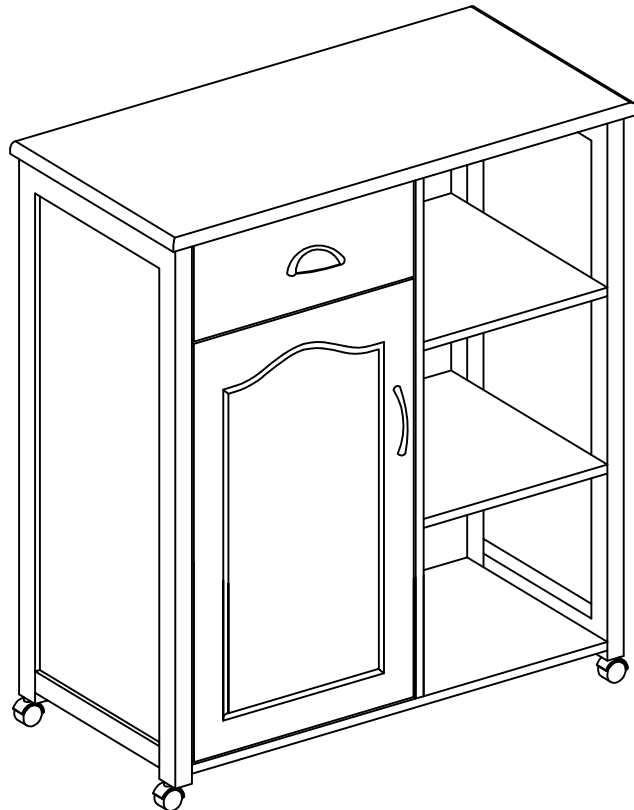


NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not to over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.


Parts list :

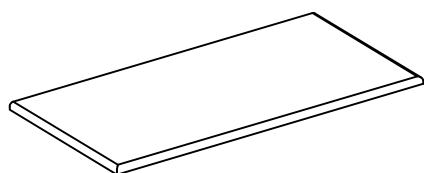


A1 1Pc Top Panel

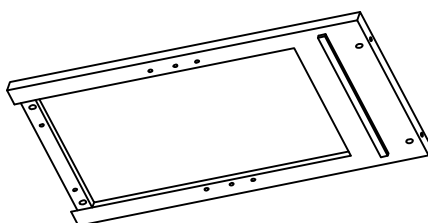


A2 1Pcs Left Side Panel

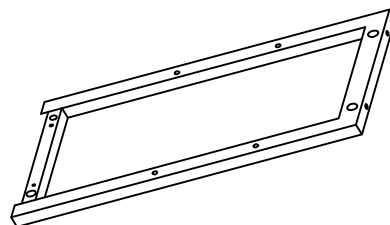


A3 1Pc Right Side Panel

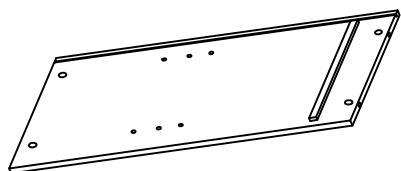


A4 1PC Middle Divider

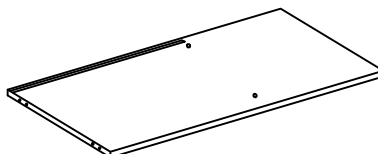


A5 1PC Bottom Panel



A6 1PC Small Divider




A7 1Pc
Drawer Front Panel




A8 2Pcs
Drawer Side Panel




A9 1Pc
Drawer Back Panel




A10 1Pc
Drawer Bottom Panel

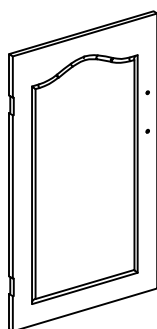


A11 1Pc
Door Panel



A12 1Pc
Adjustable shelf




A13 2Pcs
Shelf

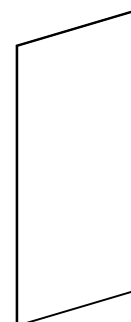

A14 1Pc
Back Panel

Hardware list :



B1 24 Sets
Camlock



B2 12 Pcs
Wood Dowel
Ø 6*25mm



B3 8 Pcs
Screw
Ø8*22mm




B4 1 Set
Handle Of
Drawer
Ø4*10mm



B5 1 Set
Handle Of
Door
Ø4*15mm



B6 4 Pcs
Screw
Ø3*12mm



B7 1 Set
Magnet With
Screw
Ø 3*12mm



B8 4 Pcs
Support




B9 2 Pcs
Wheel



B10 2 Pcs
Wheel With
Lock



B11 1 Set
Stopper



B12 1 Pc
Glue



B13 1 Pc
Wrench


Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.

To use Dowels:


1. Add glue (about $\frac{1}{4}$ full) in the hole(s) of each board to be joined.
2. Insert the Dowel(s) and join boards.
3. Wipe excess glue with a damp paper towel.

To use Cam Locks:

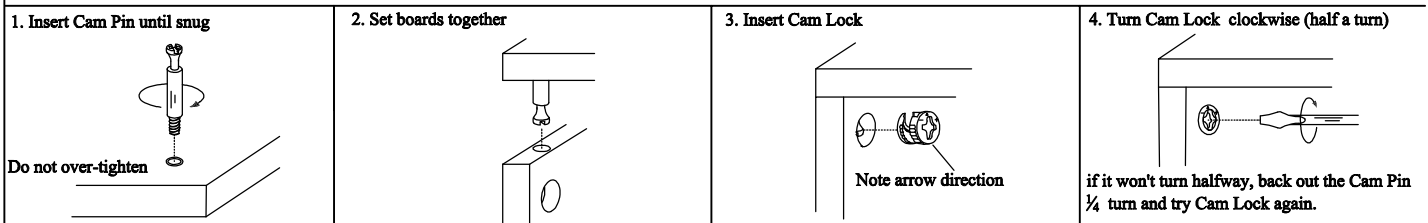


STEP-1


ASSEMBLY INSTRUCTIONS

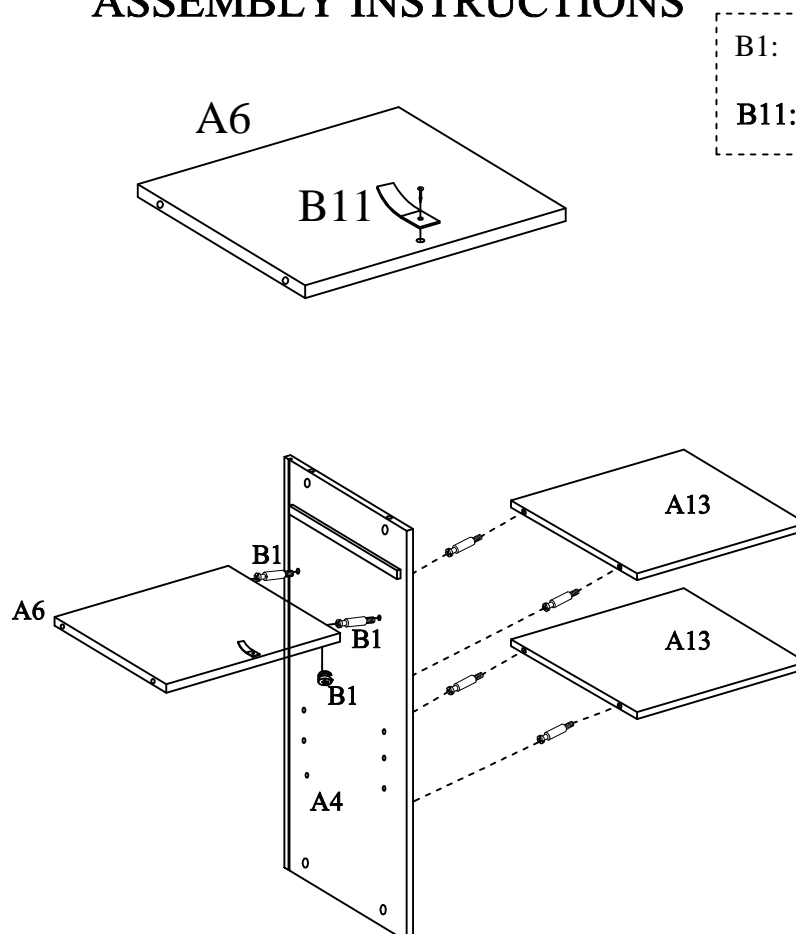


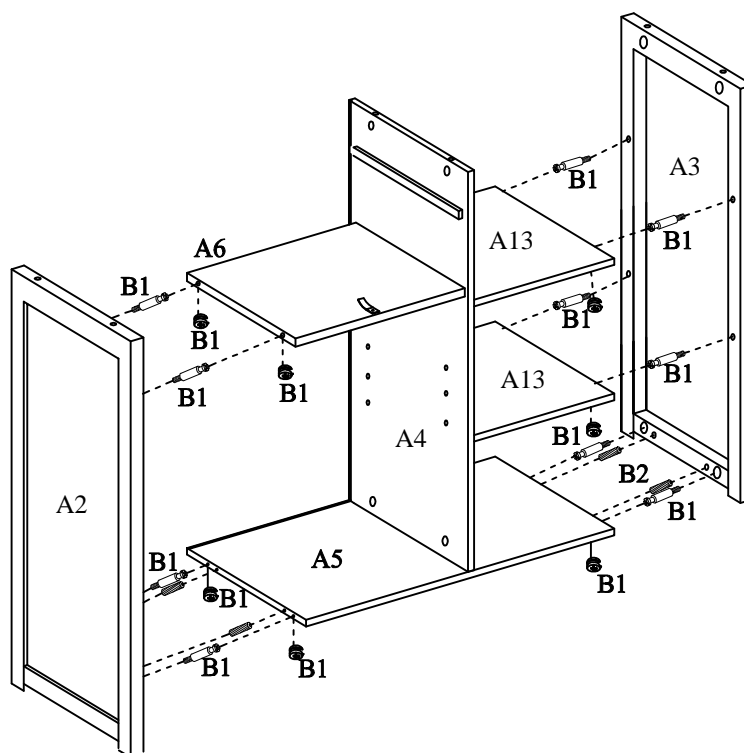
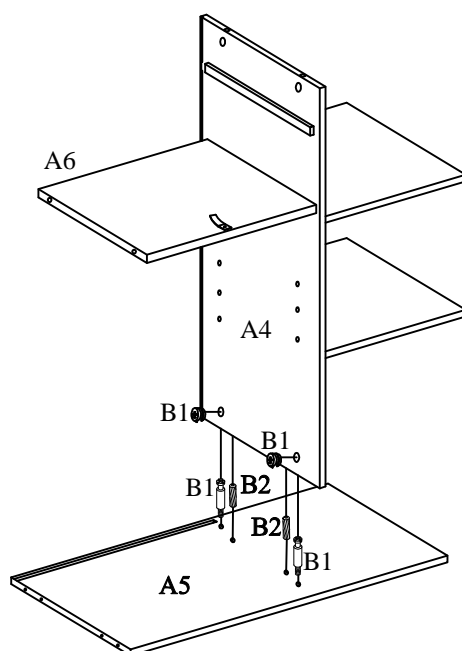
B1:   6 Sets

B11:  1 Set




STEP-2

B1:  12 Sets





B2:  6 Pcs

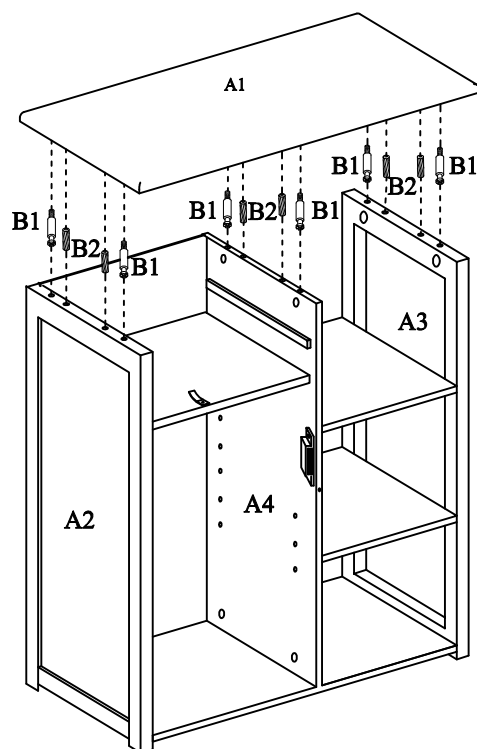
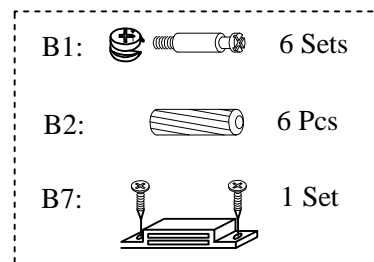
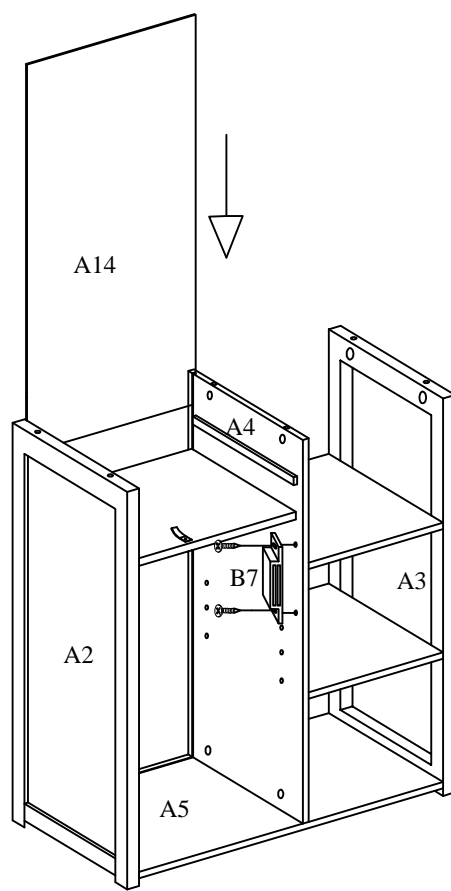


STEP-3








STEP-4

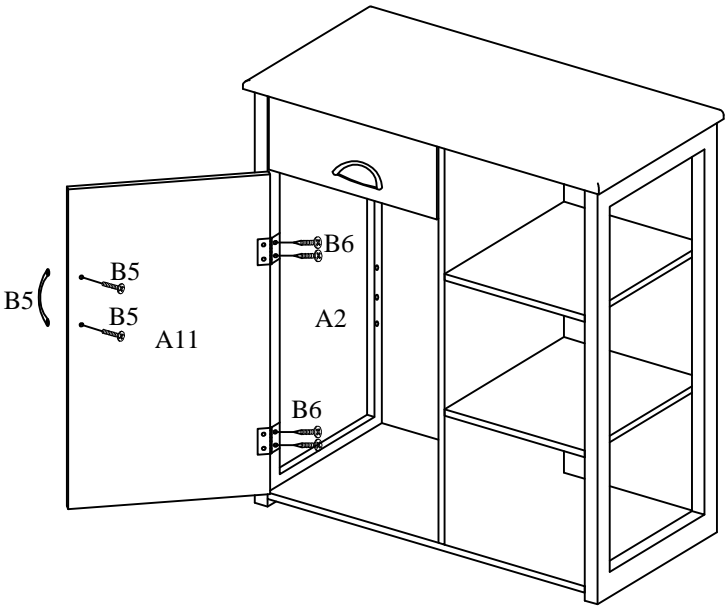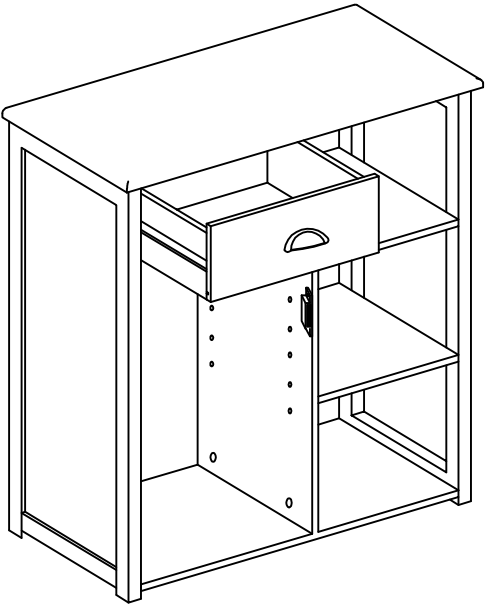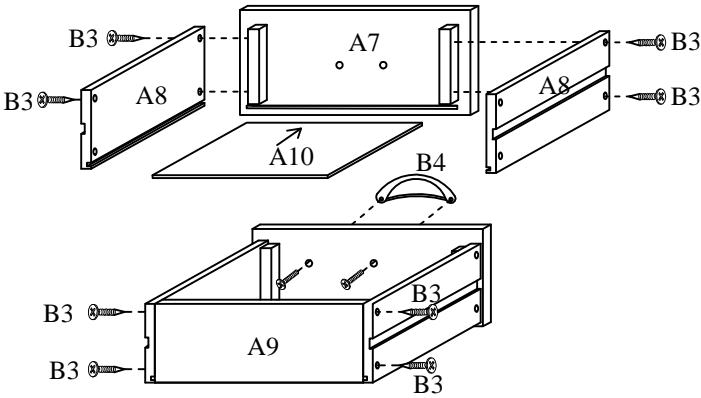B3:		8 Pcs
B4:		1 Set
B5:		1 Set
B6:		4 Pcs

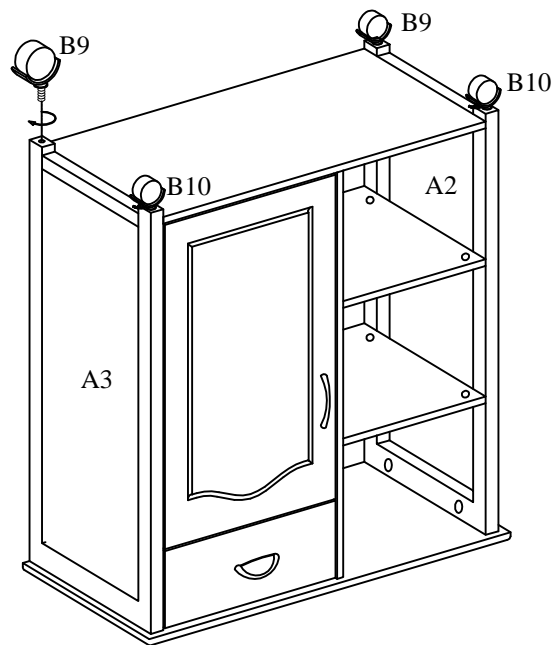

STEP-5



B8:		4 Pcs
B9:		2 Pcs
B10:		2 Pcs
B13:		1 Pc

