CHMC005: 16-Bay USB-C Open Charging Cart Assembly Instructions

PARTS LIST:



 $A \times 1$ Left Cart Frame



 $H \times 1$ Right Panel Gusset



 $B \times 1$ Right Cart Frame



C x 1 Locking Stem Caster



Stem Caster



Ex1 Lower Shelf Panel



Rear Shelf Panel



Left Panel Gusset



Cap Nut

HARDWARE:



Px4



1/4" x 15mm

0 x 11 R x 18



Split Washer Large Frame Screw Small Frame Screw Cable Clip M4 x 8mm





 $I \times 1$ Lower Trav Panel



 $J \times 1$ USB-C Power Strip





K x 1 Tray Front Panel



I x 17 Device Divider



USB-C Charging Cable



 $N \times 1$ Security Bracket

ASSEMBLY TOOLS:






Not Included:




Phillips Head Screwdriver

ASSEMBLY INSTRUCTIONS:


Attach two Locking Stem Casters (C) and two Stem Casters (D) as shown to Left Cart Frame (A) and Right Cart Frame (B) using Cap Nut (O) and Split Washer (P).






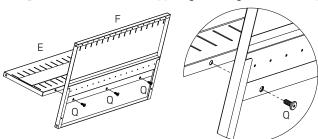



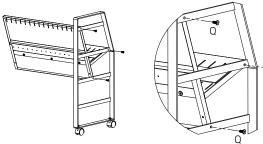



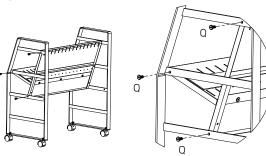








Attach the Lower Tray Panel (I) behind the Shelf Assembly using two Large Frame Screws (Q) and two Small Frame Screws (R).

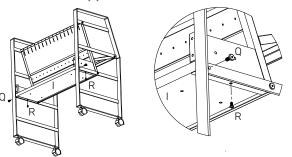





CHMC005: 16-Bay USB-C Open Charging Cart Assembly Instructions

ASSEMBLY INSTRUCTIONS:




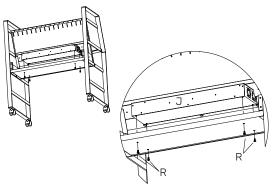

Attach the Tray Front Panel (K) using four Small Frame Screws (R).

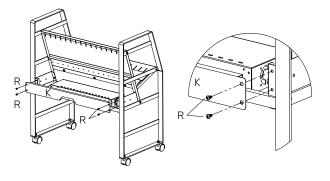


Insert 32 Cable Clips (S) into the holes on the back of the Rear Shelf Panel (F) as shown.

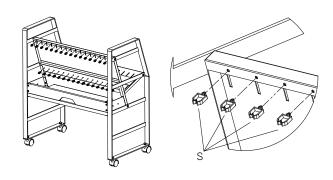

Insert a USB-C Charging Cable (M) into the far left port on the USB-C Power Strip (J). Route the cable through the left set of Cable Clips (S). Repeat the process for the remaining 15 USBC Cables (M).

0

Attach the Security Bracket (N) as shown using four Small Frame Screws (R).

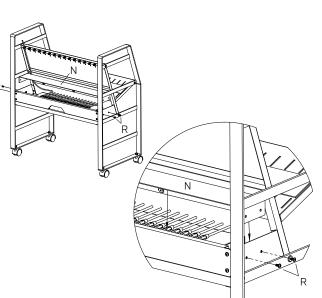

Insert 17 Device Dividers (L) into the slots on the Shelf Assembly as shown.

