


Place the Cam so that the "pointer arrow" faces the edge of the panel. This allows for the Pin (Part B) to be correctly aligned with the opening of the Cam.

Turn the Cam clockwise (normally about ½ turn. The Cam will capture the head of the Pin. As the Cam is turned it will draw the two panels together.

See picture above and figures 7.1, 7.2, 7.3 for reference.

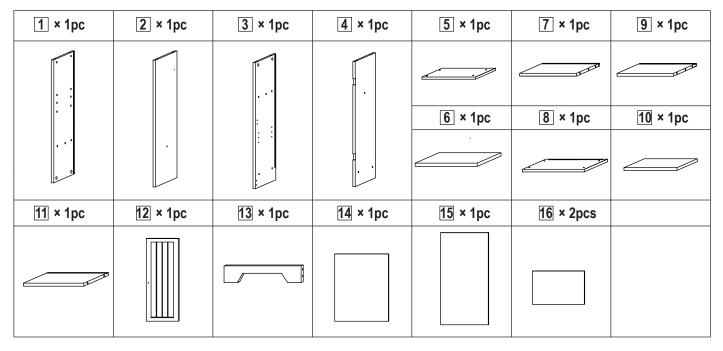

(A) × 4pcs	B × 8pcs	C ×12pcs	D × 12pcs	E × 12pcs	(F) × 1pc	G × 1pc
J J				Ĩ		00
(H) × 6pcs	() × 2pcs	J × 8pcs	(K) × 2pcs	L × 12pcs	(M) × 2pcs	(N) × 2pcs
Φ3x16mm	()			Φ3x12mm	Φ4x35mm	
(0) × 1pc	(P) × 1pc	Q × 4pcs	(R) × 20pcs	(S) × 1pc		
	and the second s	- F				

