

ASSEMBLY INSTRUCTION


QUEEN BED

Page : 1 OF 1


Before you begin, please read Assembly Instruction carefully and recognized the part and hardware. Then follow them step by step.

STEP 1.

Attach the Side Rail to the Headboard & Footboard. Use JCBC Bolt M6 x 35mm & Allen Key to fix.

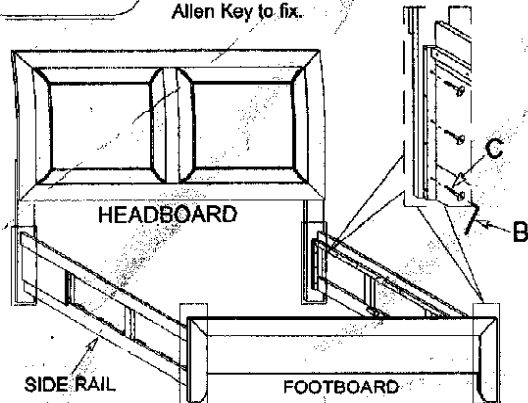

STEP 2.

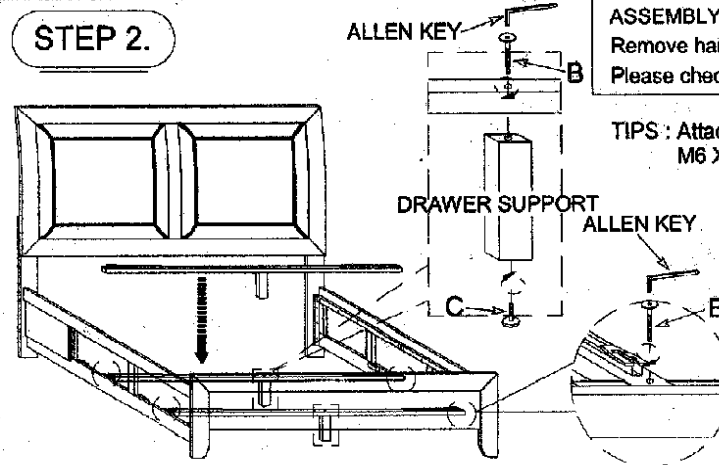




ASSEMBLY TIPS:

Remove hardware from box and sort by size.

Please check to see that all hardware and part are present prior start of assembly.


TIPS : Attach the drawer support and Slat Support to Footboard. Use JCBC Bolt M6 X 35mm & Allen Key to fix.

NO	HARDWARE DESCRIPTION	QTY
A.	Screw M4 x 32mm 	30PCS
B.	Bolt M6 x 35mm 	24PCS
C.	Adjuster Screw M6 x 24mm 	2PCS


Screw Driver Not Provide !!!

STEP 3.

TIPS : Attach the drawer support and slat support to side rail and fasten with Bolt.

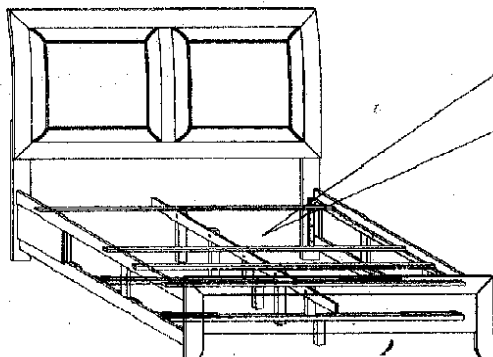

a. TIPS : Rotate the slat support and tighten using with Allen Key.

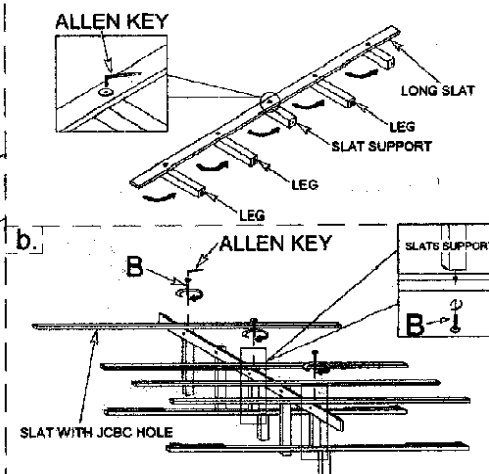

STEP 4.

TIPS : Attach the Bed Slat to the Side Rail. Fasten the Bed Slat by tighten screw through the pre-drilled hole of Bed Slat.

