

2.

Attach the headboard post (P1) to the headboard (P2).

You will need to use hardware:

C = 4pcs

D = 4pcs

E = 20pcs

F = 4pcs



A = 4pcs

D = 4pcs

E = 2pcs

F = 4pcs


Attach the side rail (P3) to the footboard (P4) using hardware:

B = 4pcs

D = 4pcs

E = 2pcs

F = 4pcs

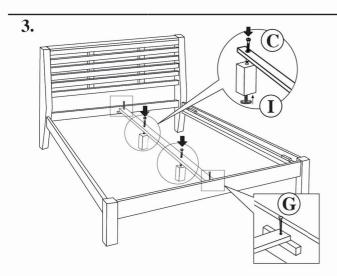

Fix the adjuster (I) to the support leg (P6) using hardware:


I = 2pcs

Attach the support legs (P6) to the centre rail (P5) using hardware:

C = 2pcs

Attach the centre rail (P5) to the headboard (P2) and footboard (P4) using hardware:

G = 2pcs

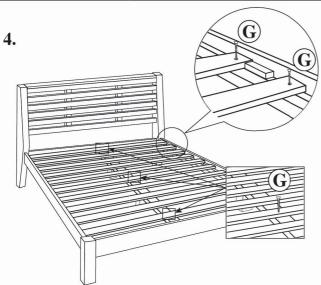

Lay the slats (P7) between the side rail (P3) using hardware:

G = 28pcs(F)

O

G = 30pcs (Q/K)

Attach the slats (P7) to the centre rail (P5) using hardware:

G = 3pcs

WARNING!!

- · Remove hardware from box and sort by size.
- Please check to see that hardware and parts are present prior start of assembly.
- Please follow attached instruction in the same sequence numbered to ensure fast and easy assembly.
- Do not use this bed if any part is broken, torn or missing.
- The assembly of this product requires two people.
- Do not use any power tools as this may damage the frame and will invalidate any claim.

PART LIST

P1 Headboard Post = 2pcs



Headboard = 1pcs



Side Rail = 2pcs



Footboard = 1pcs



Centre Rail = 1pcs



Support leg = 2pcs



Bed Slats (F) = 14pcsBed Slats (Q/K) = 15pcs

HARDWARE LIST

M6 x 100mm JCBC

4pcs

4pcs

6pcs

12pcs

35pcs

B

M6 x 90mm JCBC

M6 x 50mm JCBC



BARREL NUT

12pcs



Ø8 x 35mm WOOD DOWEL 24pcs



WOODEN PLUG

W (F) 33pcs



M4 X 25mm SCREW (F) M4 X 25mm SCREW (Q/K)







ADJUSTER

2pcs

