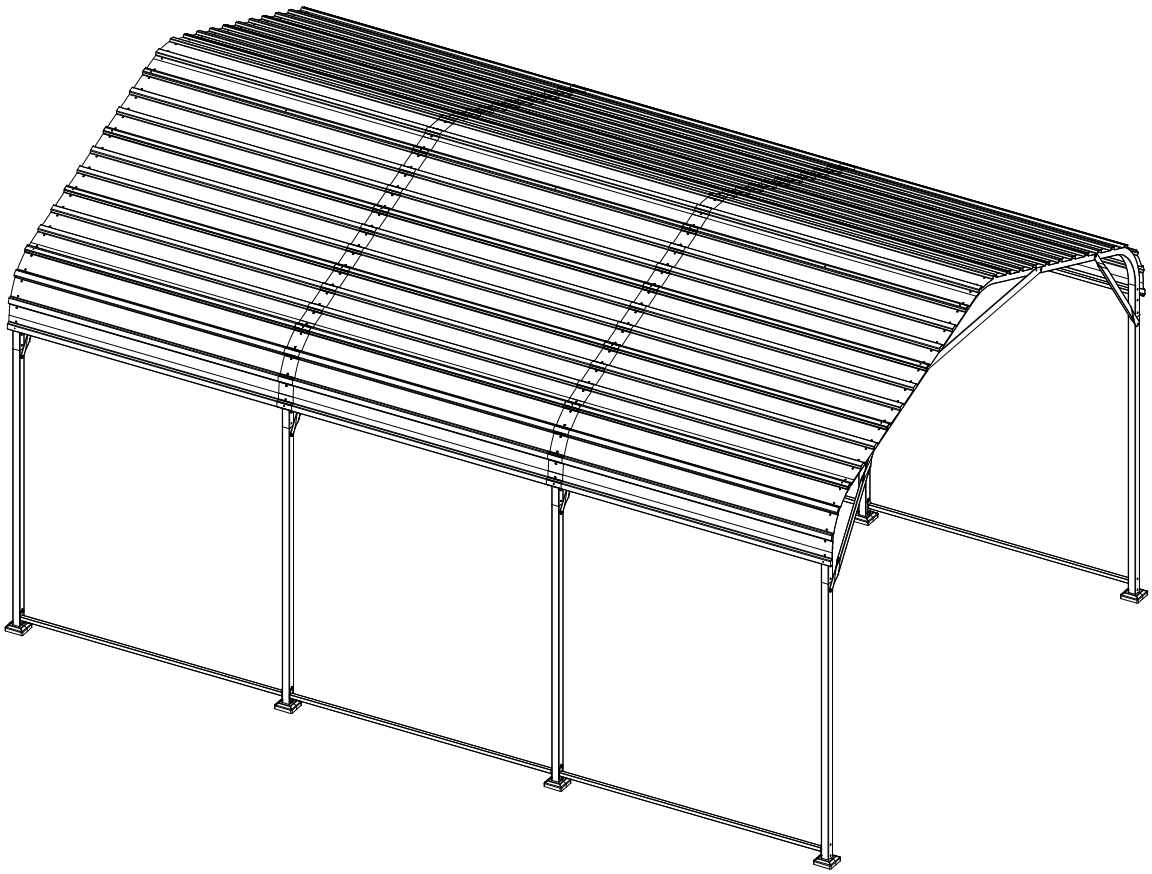
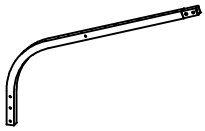






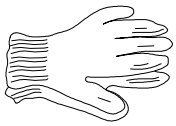



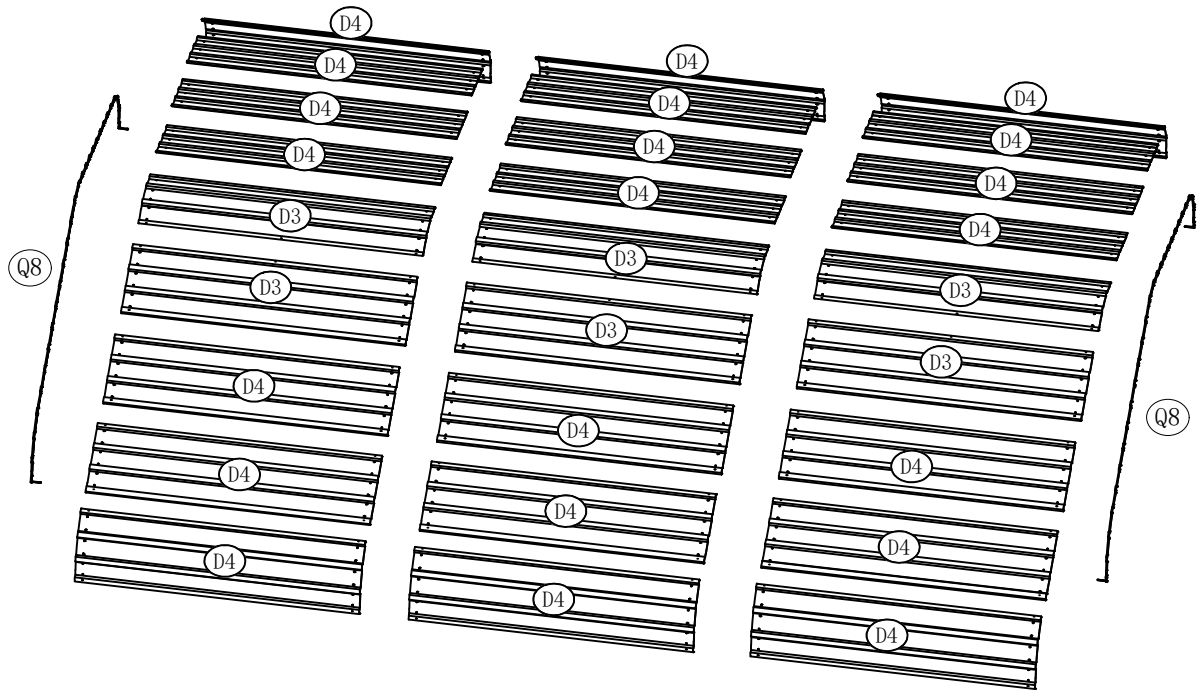
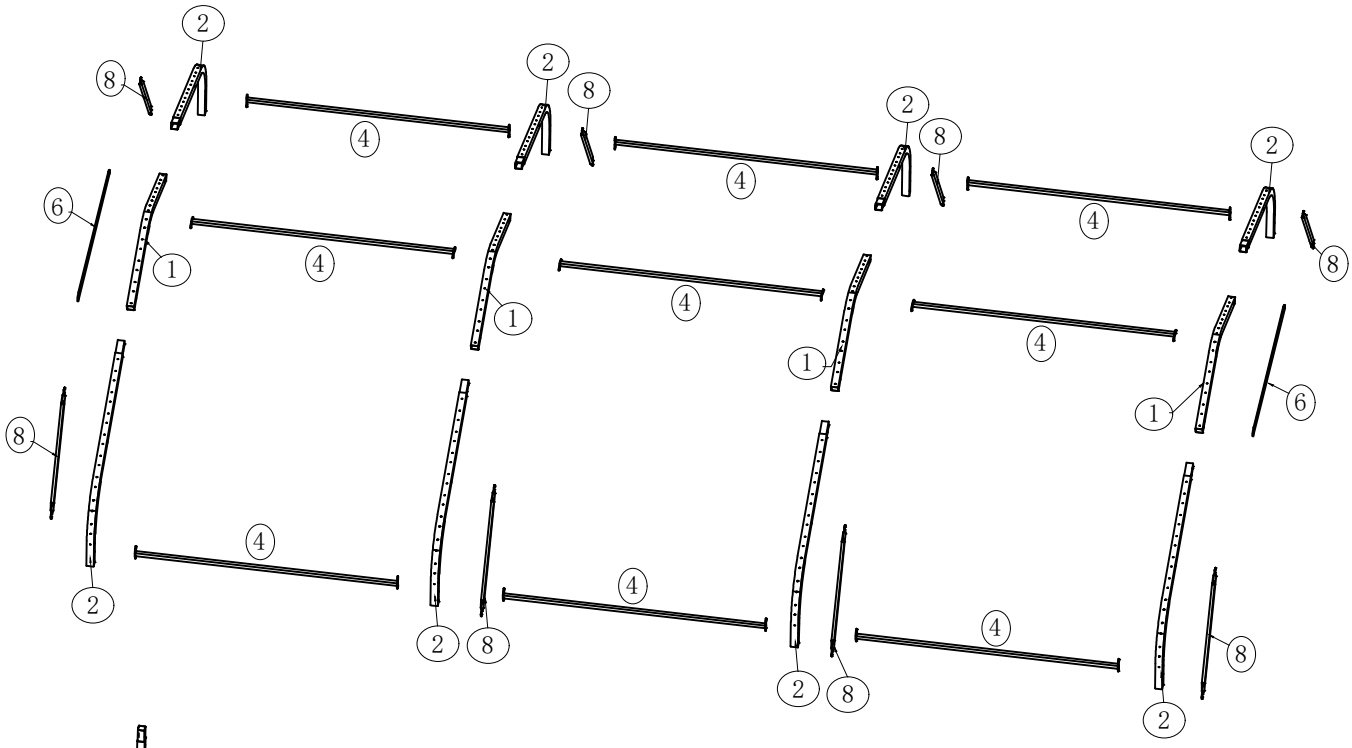
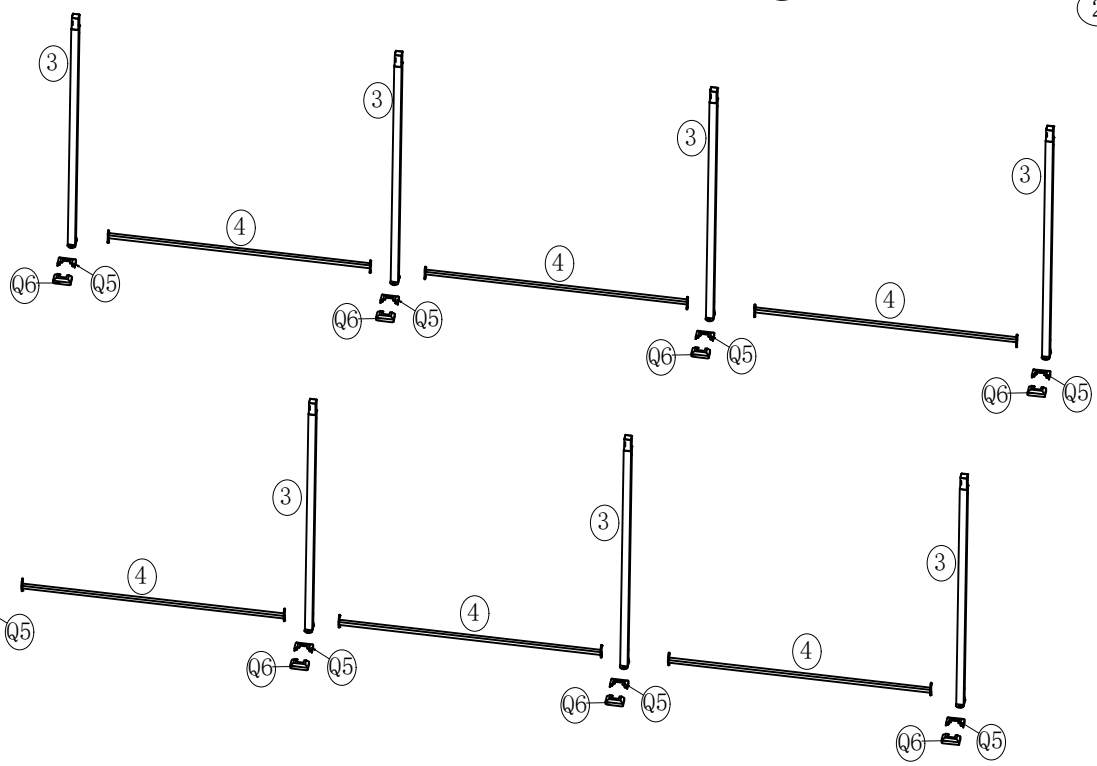


NO.	PART.	Qty.
1		4
2		8
3		8
4		15
6		2
8		8
D3		6
D4		21
Q5		8
Q6		8
Q8		2
Q9		80
Q13		216
Q15		80


NO.	PART.	Qty.
Q17		80
Q18		35
Q19		216
Q20		80
Q21		16
Q32		35
Q22		4
Q23		1
Q24		1
Q25		1
Q26		1
Q27		1
F40		3



D4
D3
Q8


2
8
4
6
1



3
4
Q6
Q5

NO.	PART.	Qty.
1		2
2		4
Q15		8
Q17		8
Q20		8

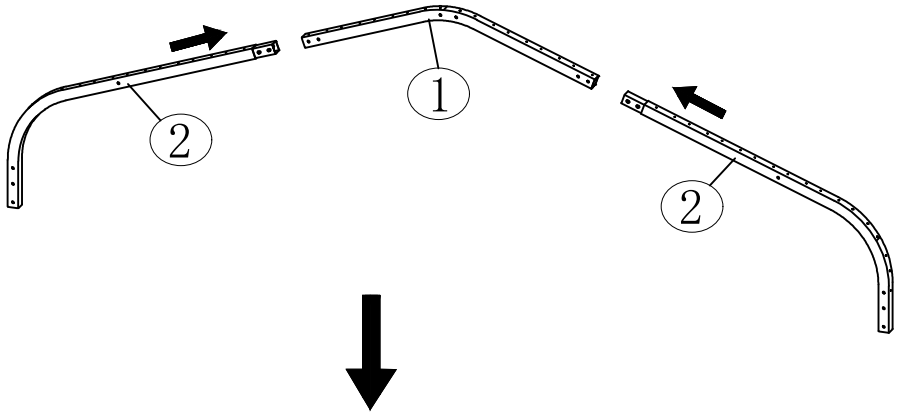

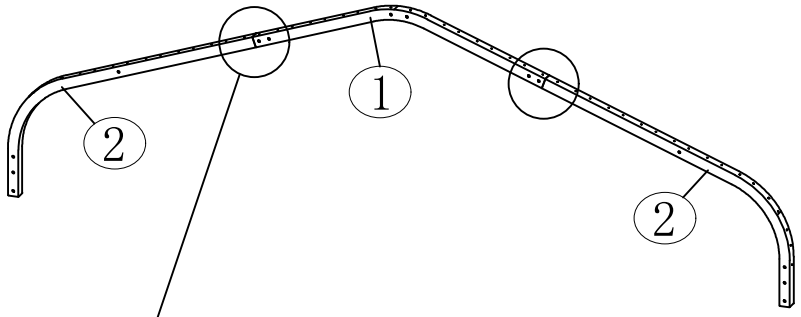


X2

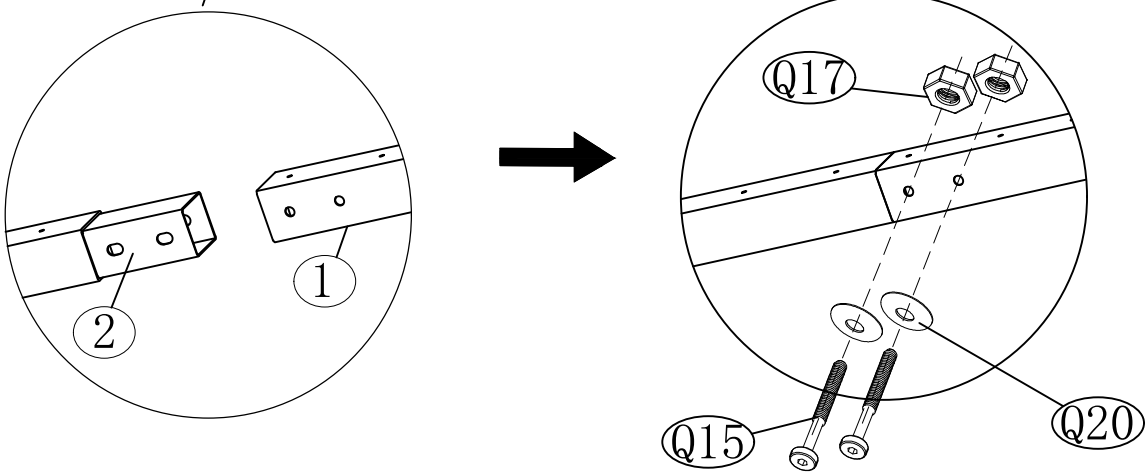


NO.	PART.	Qty.
1		2
2		4
6		2
Q15		8
Q17		8
Q20		8

NO.	PART.	Qty.
4		9
Q15		24
Q17		24
Q20		24

NO.	PART.	Qty.
3		8

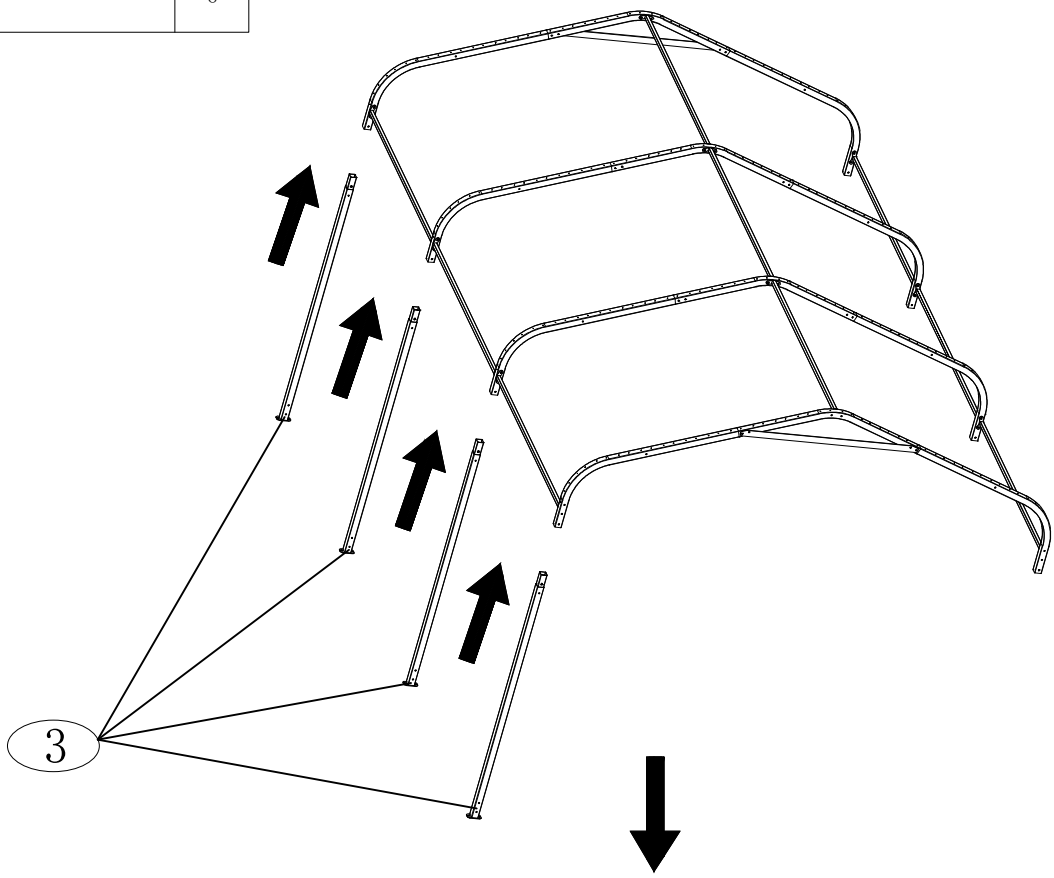


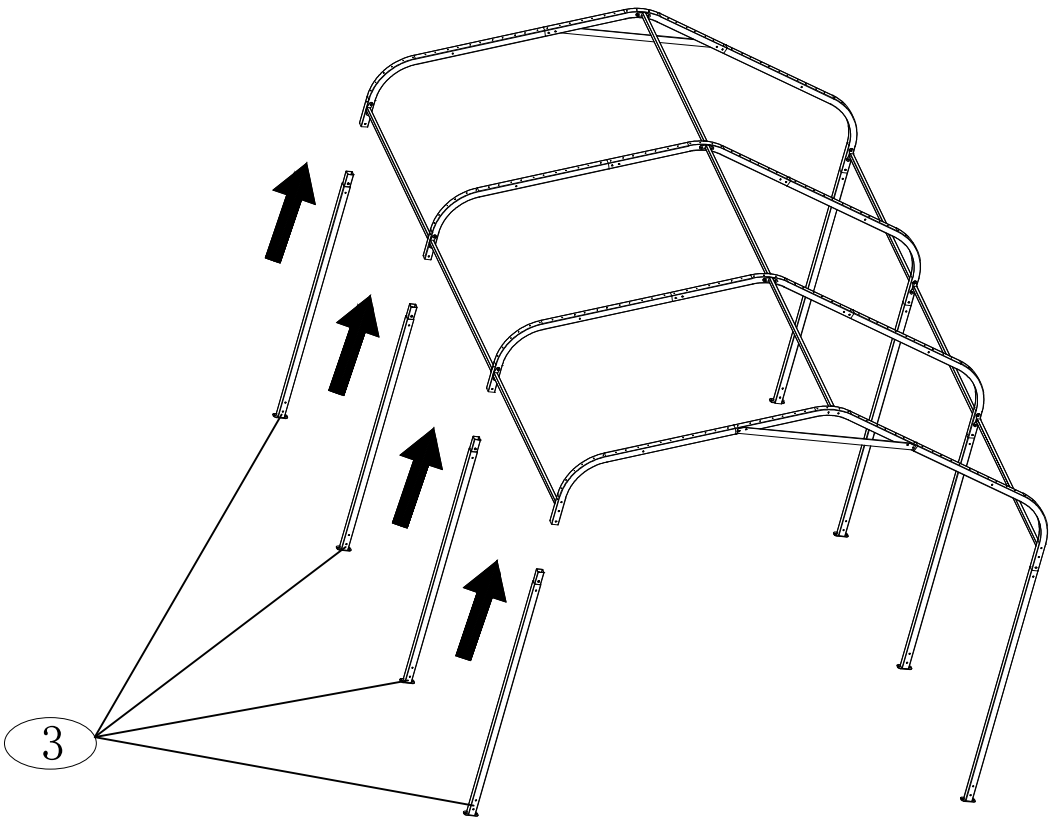


NO.	PART.	Qty.
Q15		8
Q17		8
Q20		8


NO.	PART.	Qty.
8		8
Q15		16
Q17		16
Q20		16

NO.	PART.	Qty.
4		6
Q15		16
Q17		16
Q20		16

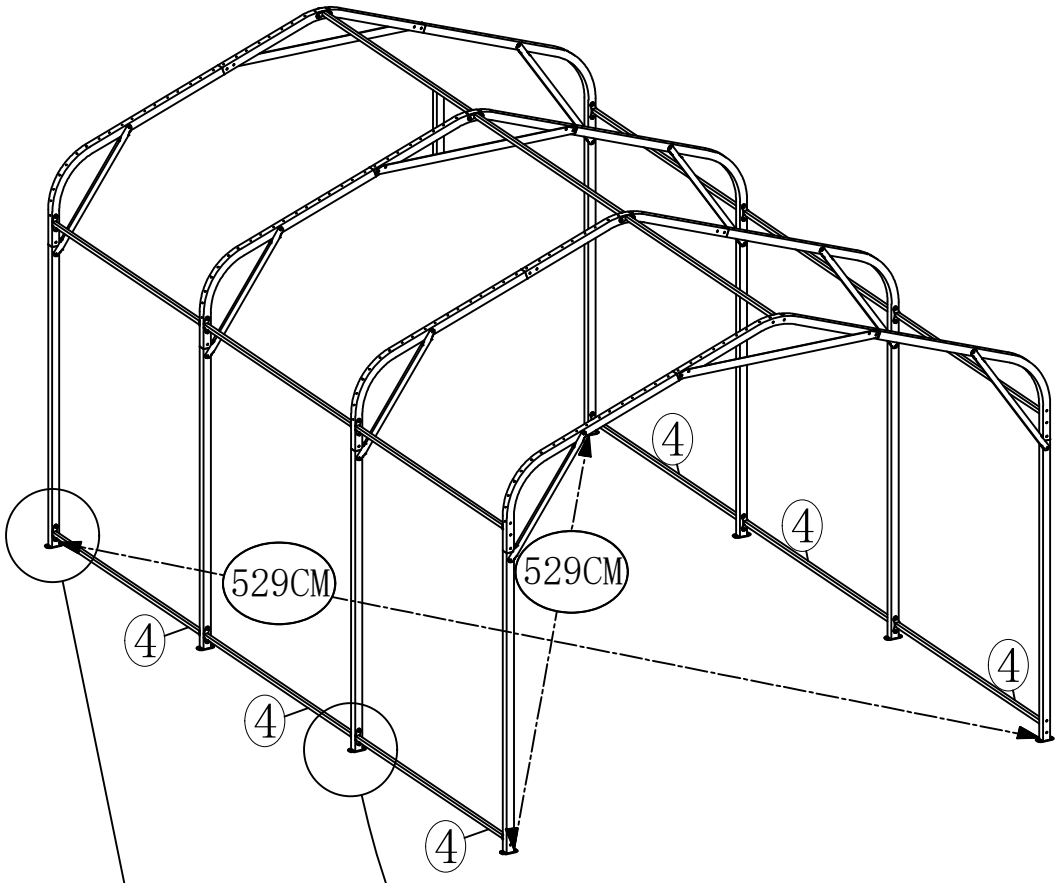

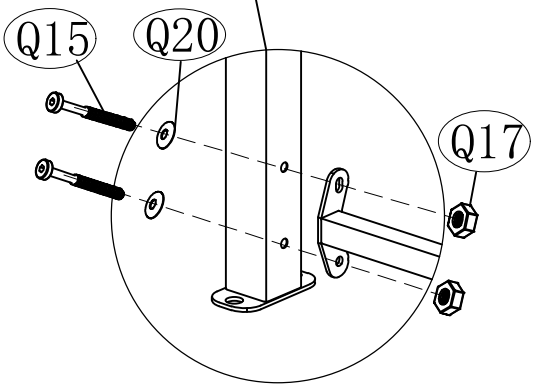



X4

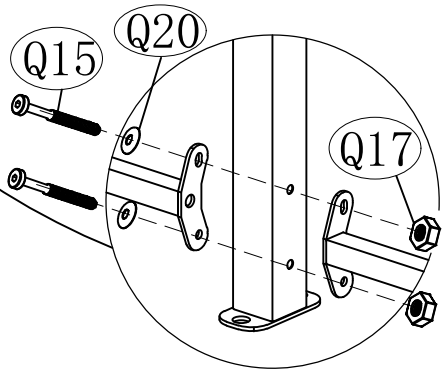


X4


NO.	PART.	Qty.
D3		3
Q13		24
Q19		24
F40		

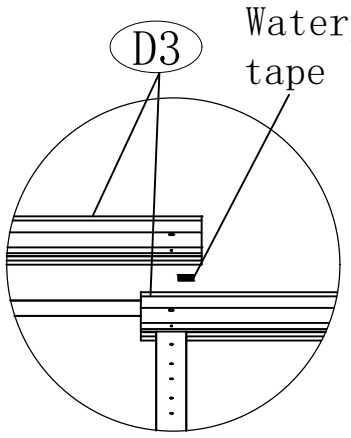

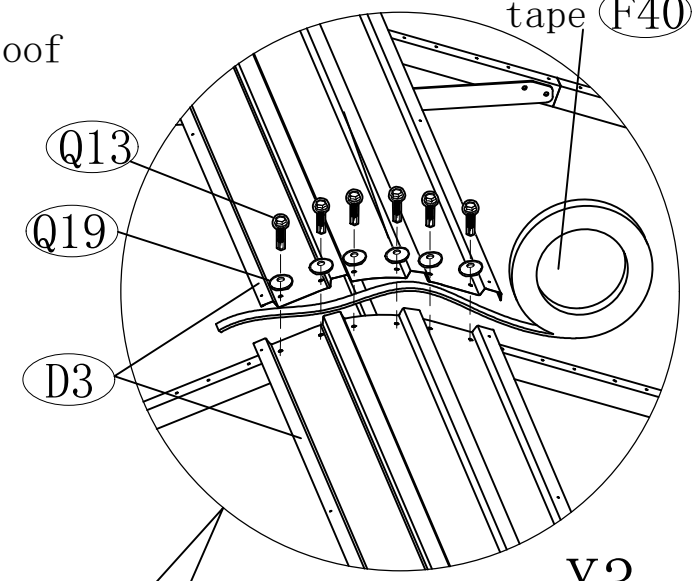


X3

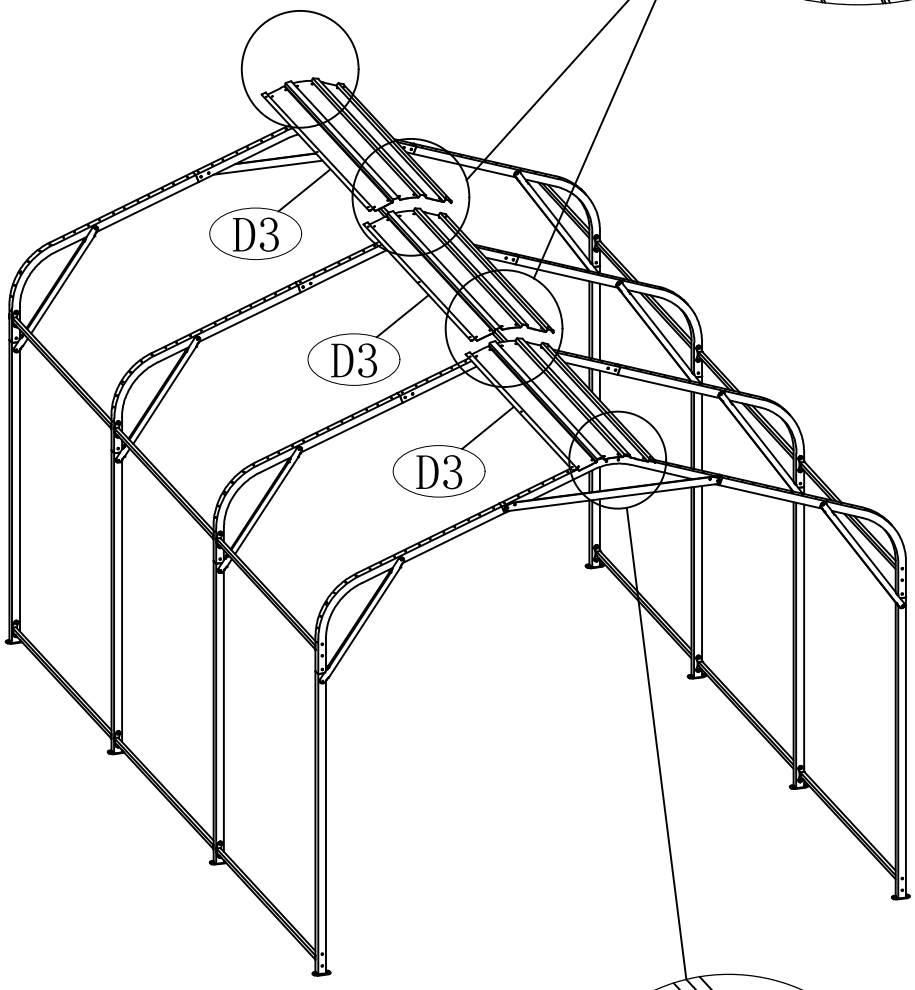

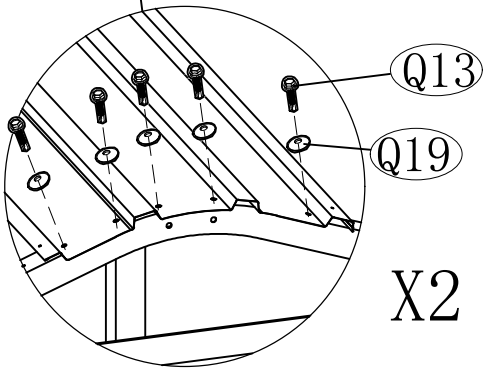


X2

NO.	PART.	Qty.
D3		3
Q13		24
Q32		7
Q18		7
Q19		24
F40		

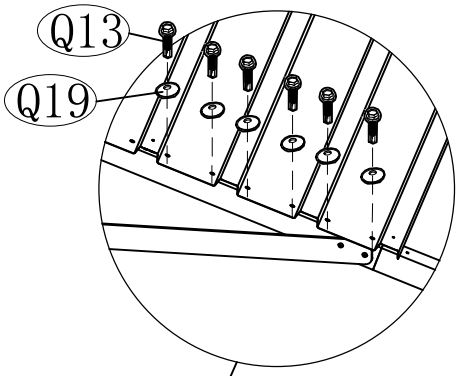


X2

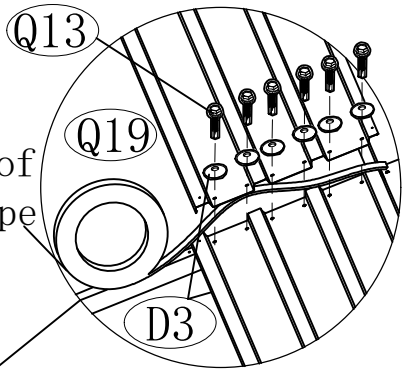


Waterproof F40 tape

X2

Step 2

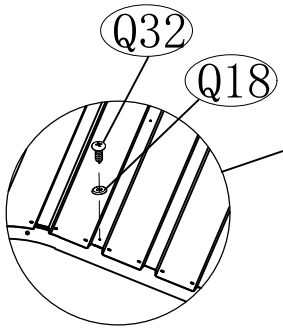


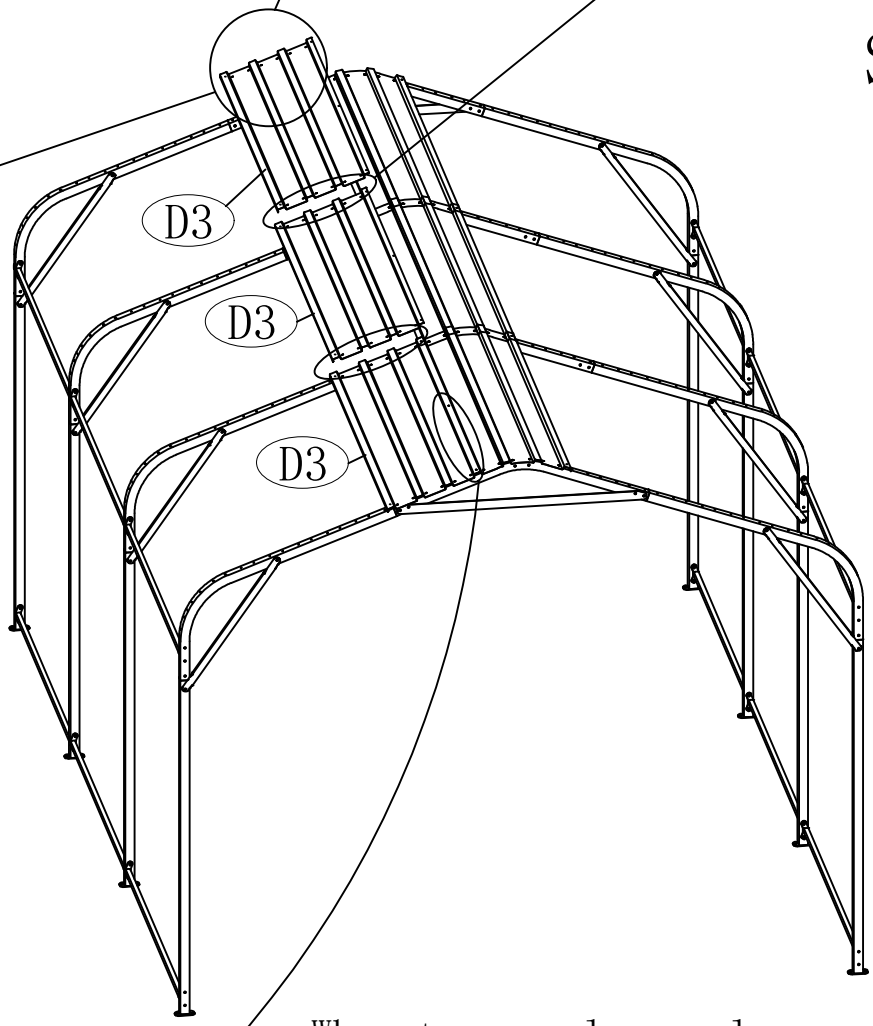


Step 1

When two panels overlap, make sure the upper panel covers the lower panel.


X4

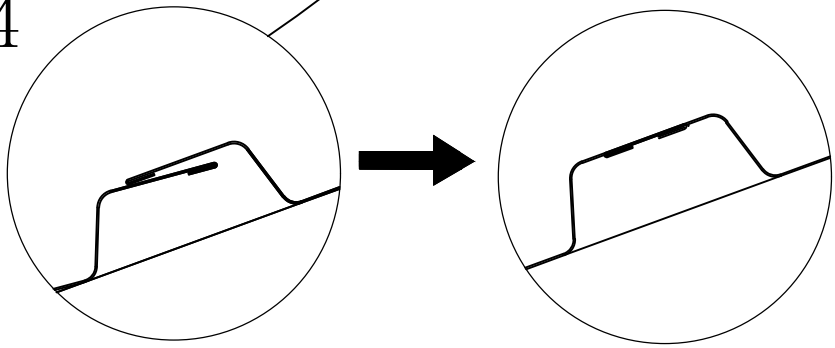

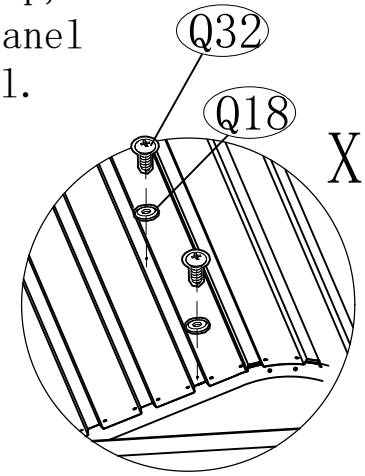


X4

NO.	PART.	Qty.
D4		3
Q13		24
Q32		4
Q18		4
Q19		24
F40		

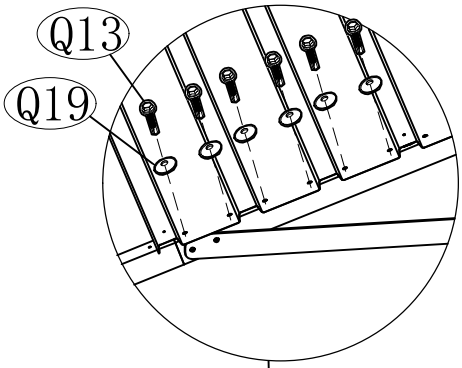


X2

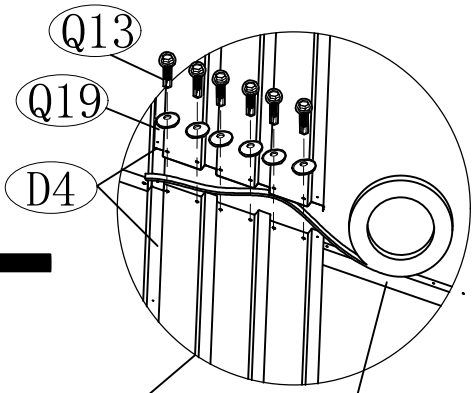


Waterproof tape F40

X2

Step 2

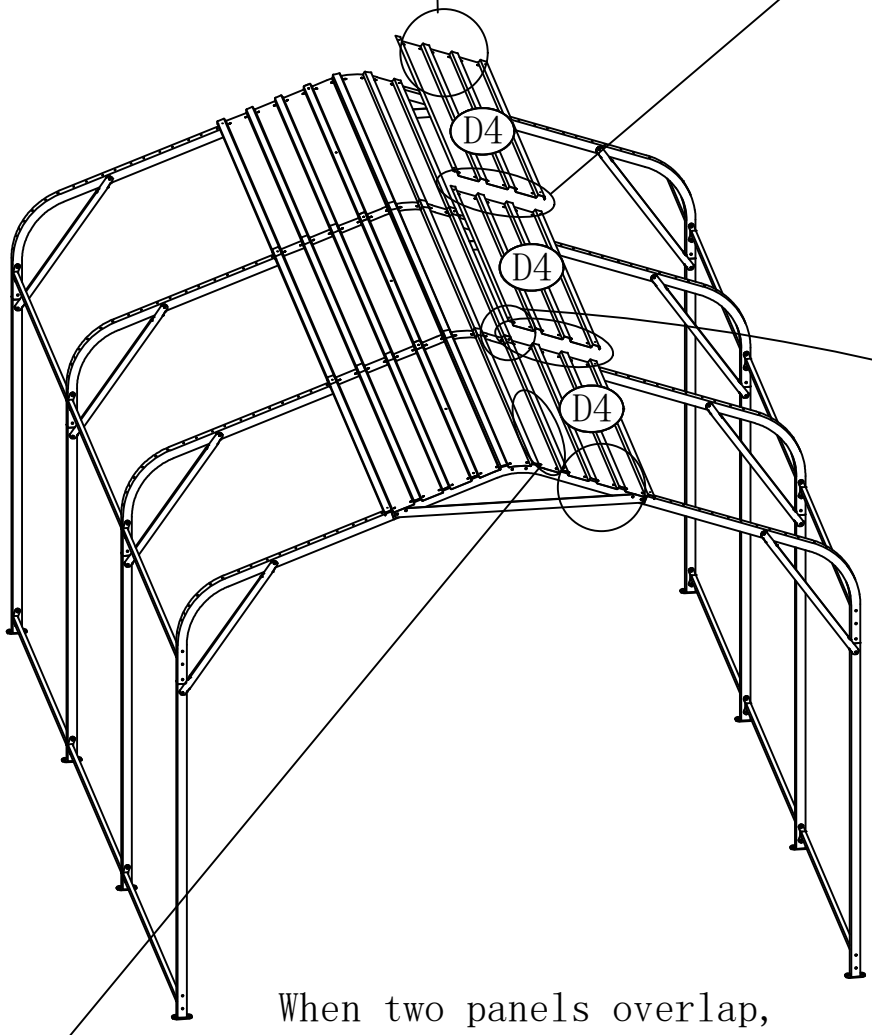

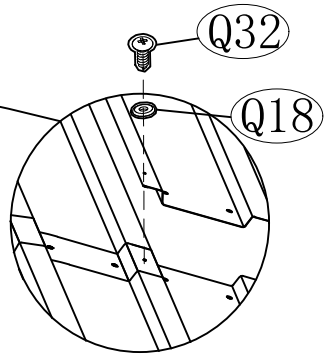


X2


When two panels overlap, make sure the upper panel covers the lower panel.

Step 1


X4

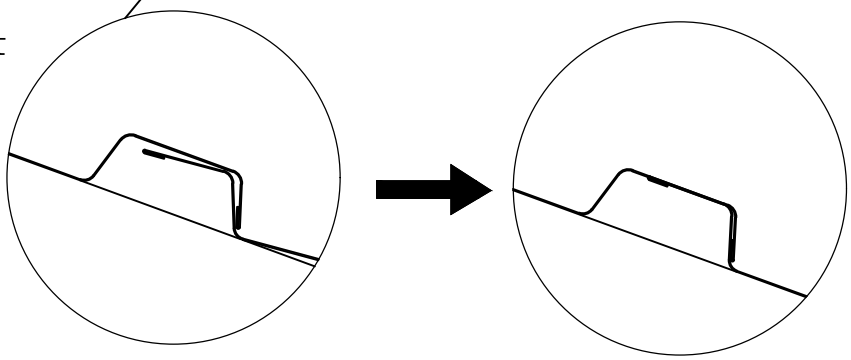


X2

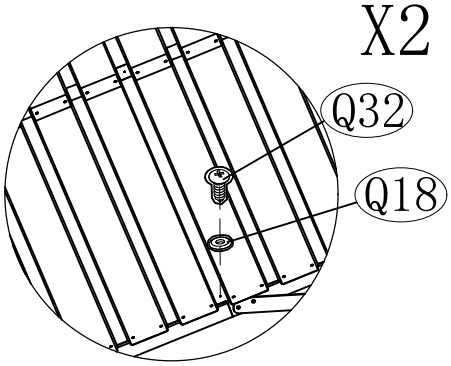

NO.	PART.	Qty.
D4		6
Q13		48
Q32		8
Q18		8
Q19		48
F40		

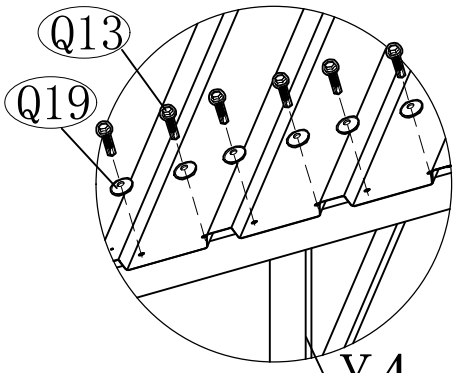


X4

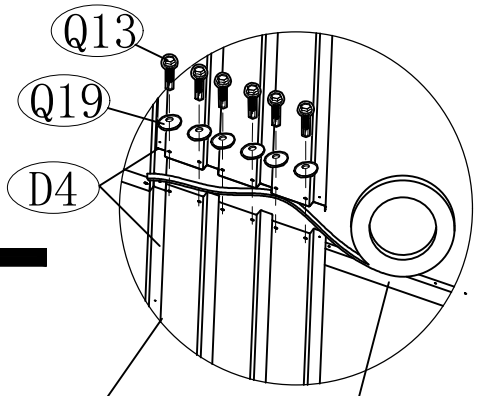


Waterproof tape F40

X4

Step 2

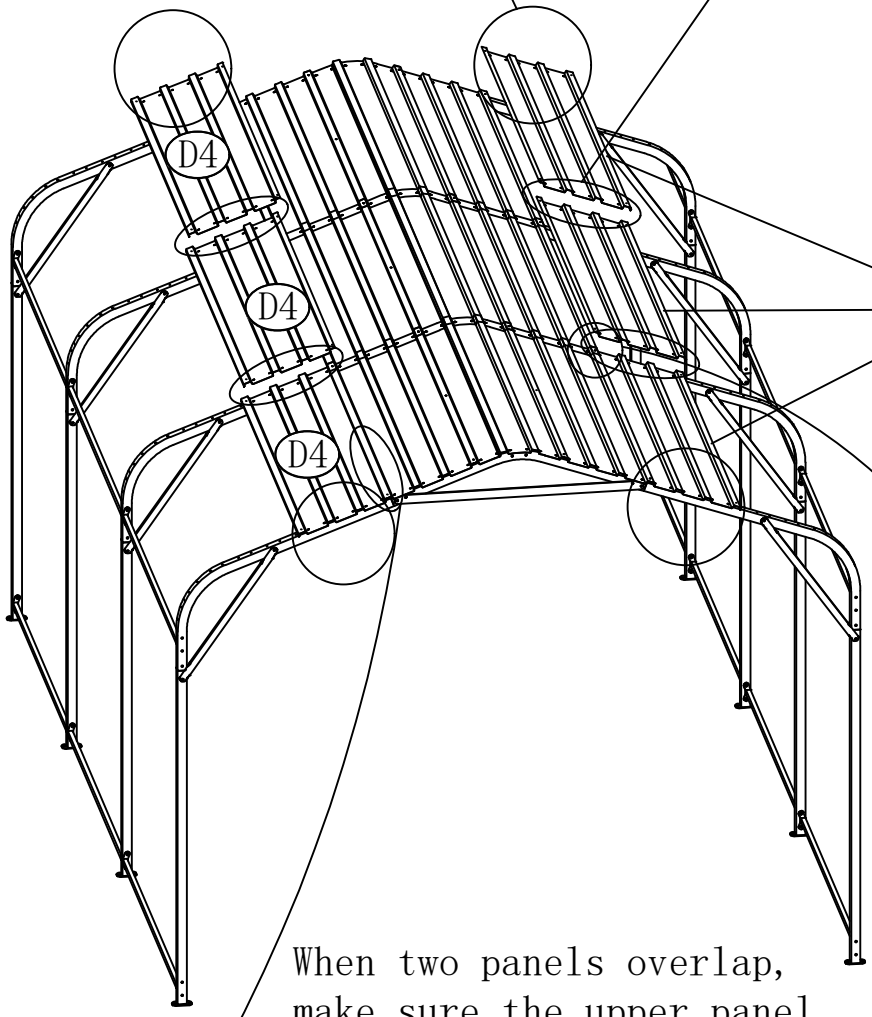

D4

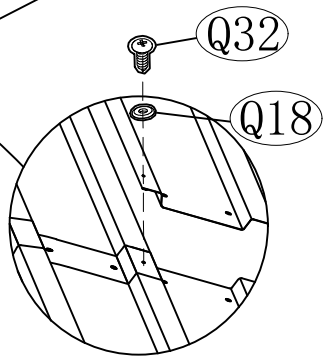


X4


When two panels overlap, make sure the upper panel covers the lower panel.

Step 1


X8

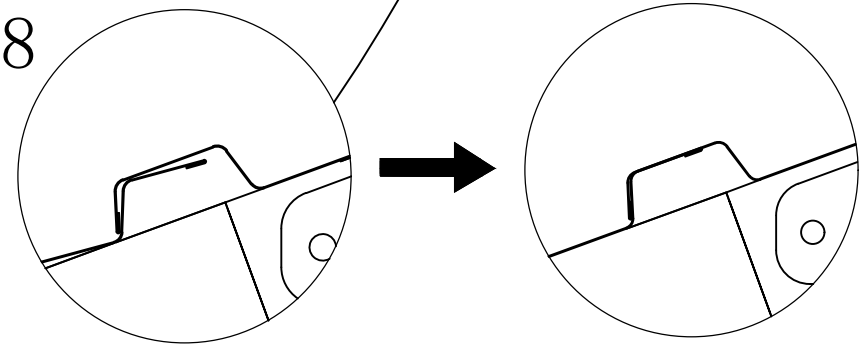


X4

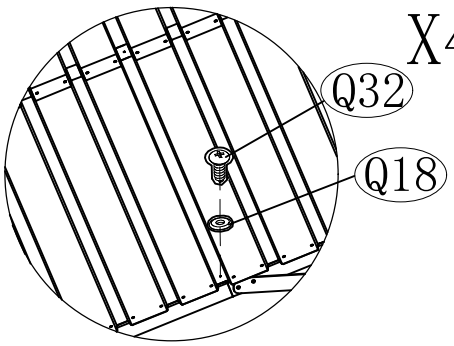


NO.	PART.	Qty.
D4		6
Q13		48
Q32		8
Q18		8
Q19		48
F40		

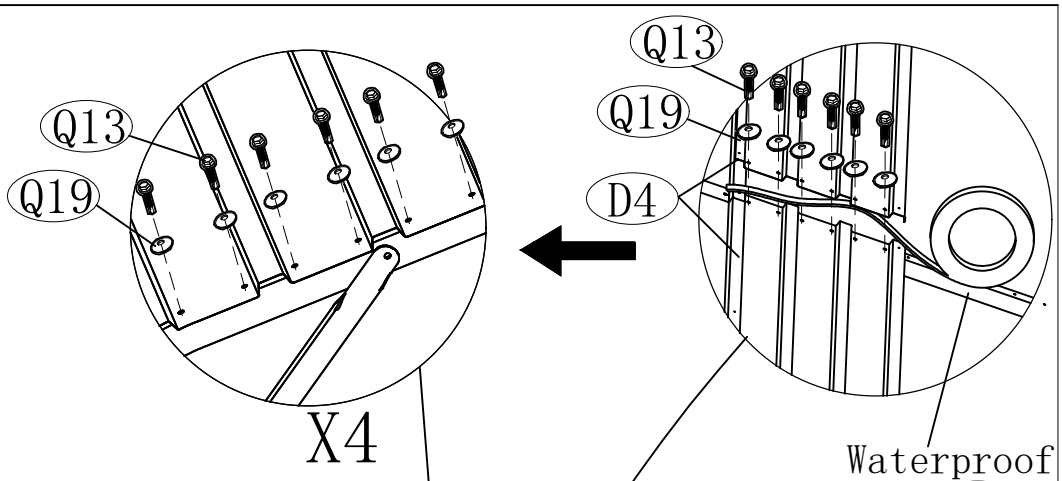


Step 2

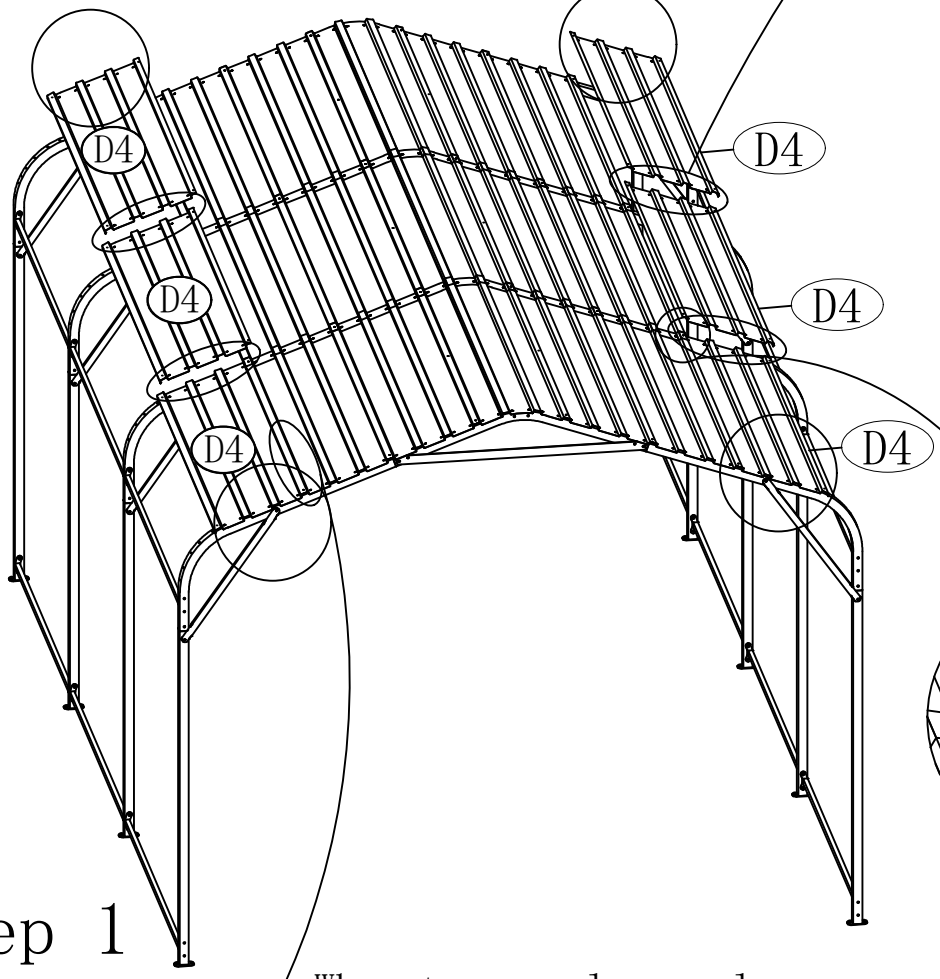



Step 1

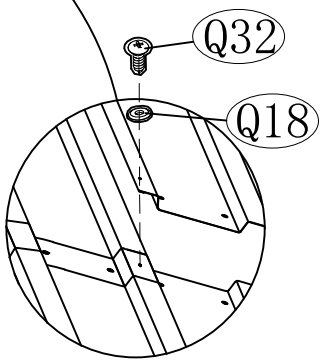


When two panels overlap, make sure the upper panel covers the lower panel.

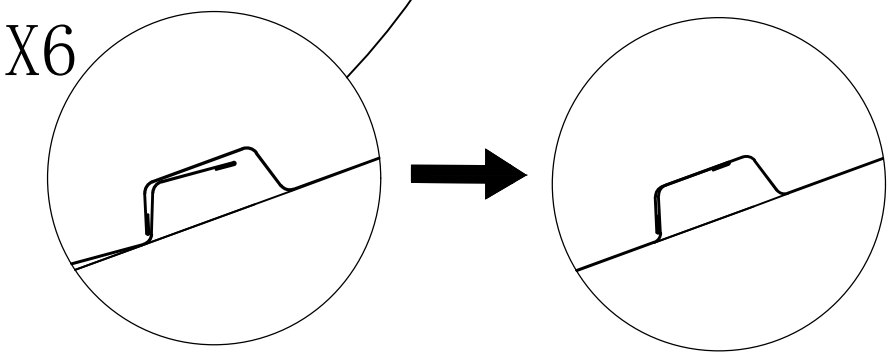


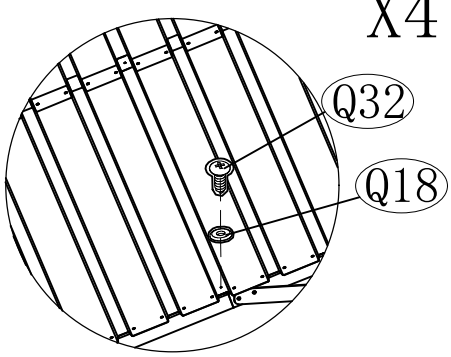

NO.	PART.	Qty.
D4		6
Q13		48
Q32		8
Q18		8
Q19		48
F40		

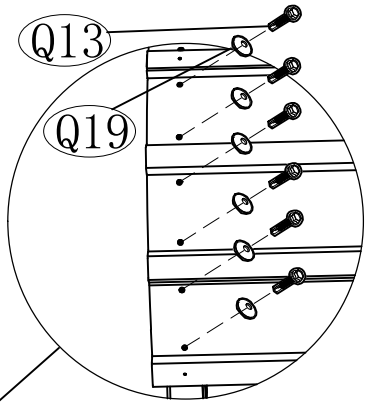


X4

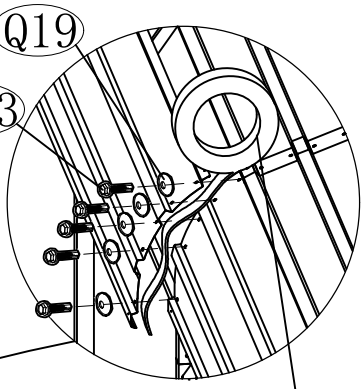


Waterproof tape F40

X4

Step 2

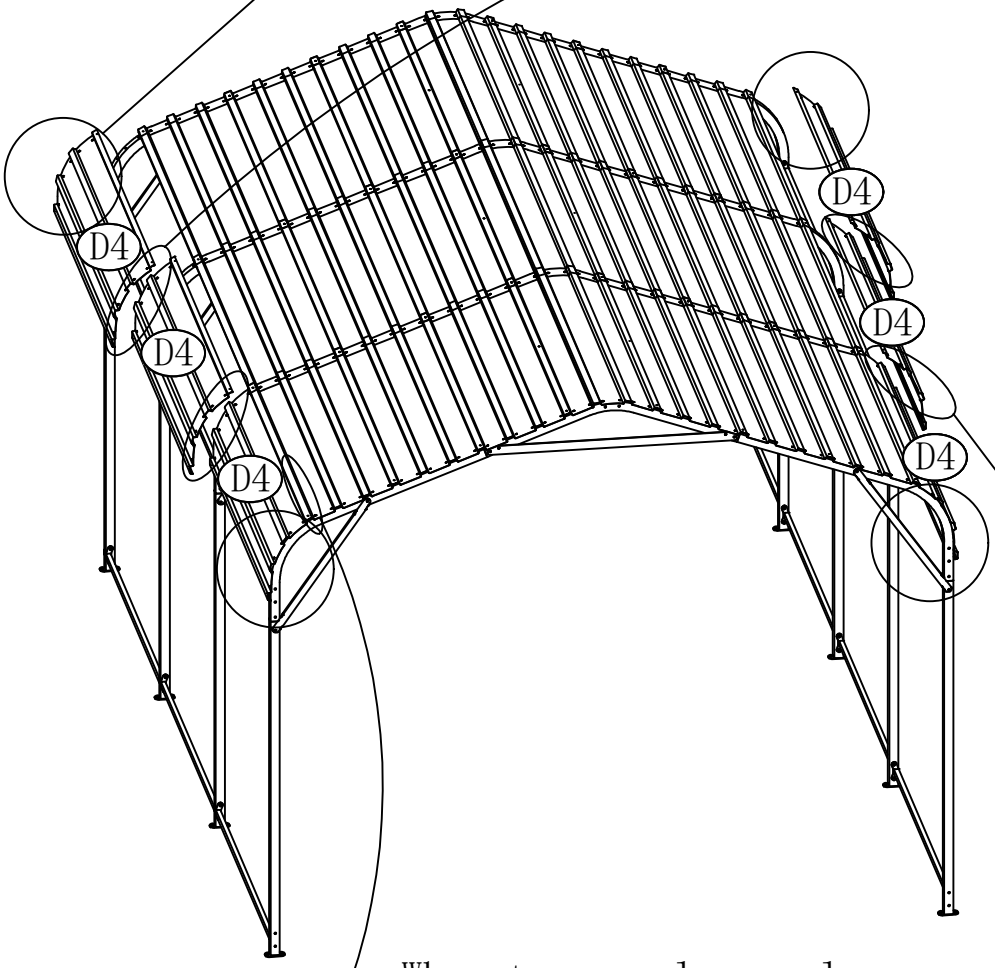

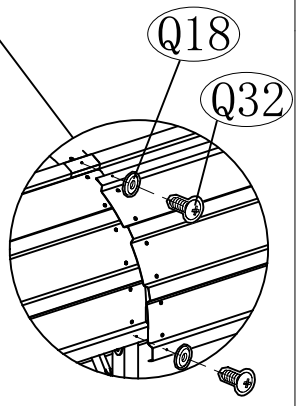


X6


Step 1

When two panels overlap, make sure the upper panel covers the lower panel.


X6

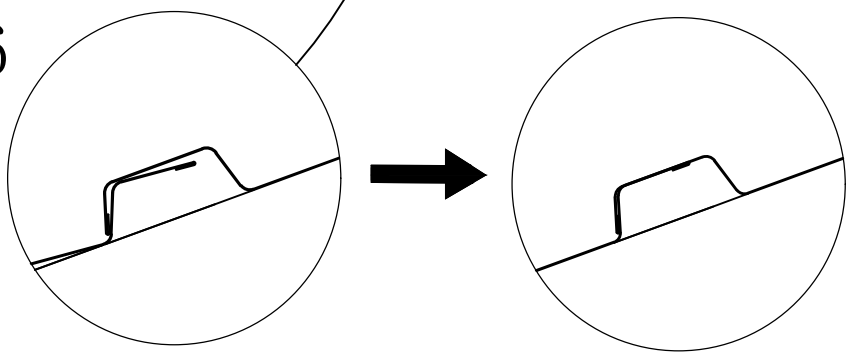

X4

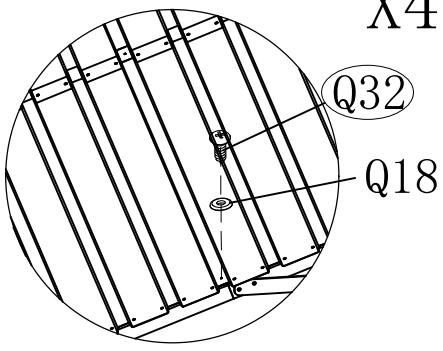

NO.	PART.	Qty.
Q8		2

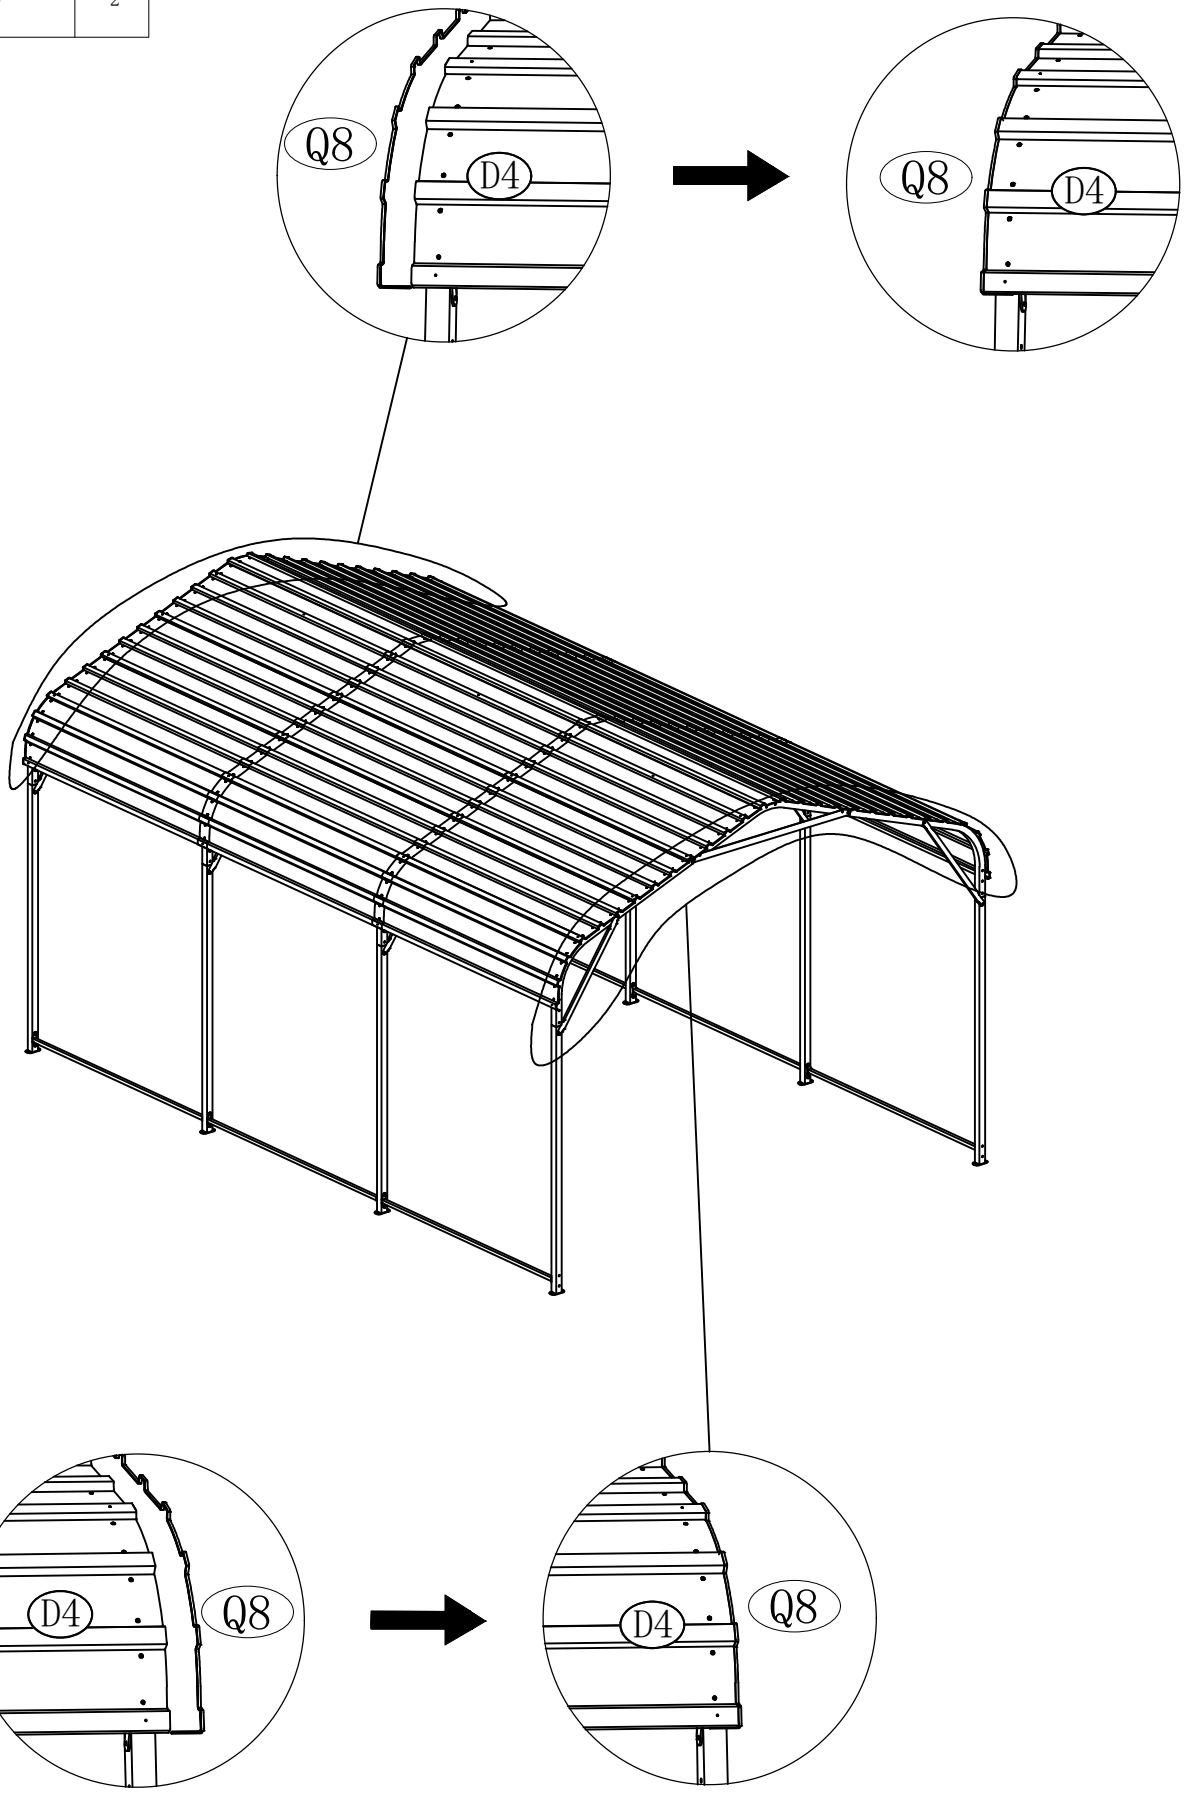

NO.	PART.	Qty.
Q5		8
Q6		8
Q21		16
Q9		80

