





Assembly Instructions


Tools provided:- Allen Key and 6 nut bolts

1. Turn the Sideboard down
2. Place one leg at designated bolt hole A.B and screw nut in to it using allen Key.
3. Similarly screw nut bolt in other legs
4. Turn the table up side and its ready to use.


PARTS: (Included)

S. No	DESCRIPTION	PICTURE	QTY
1	TOP		1
2	LEG		2
3	HEX NUT		6
4	ALLEN KEY		1


(1)

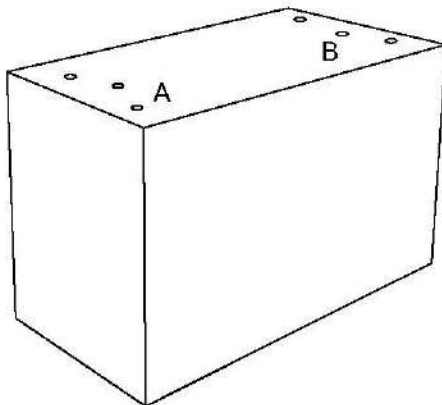

(2)

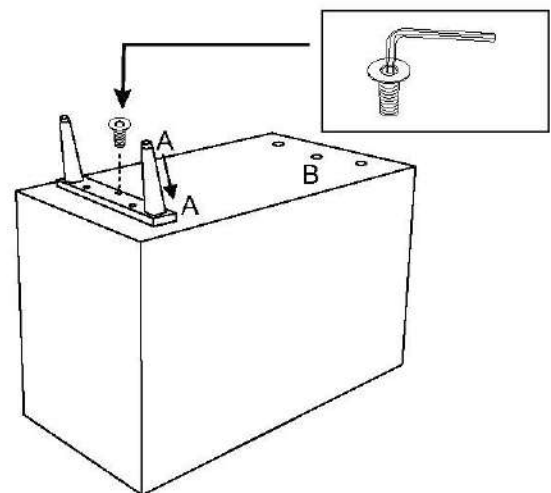

(3)

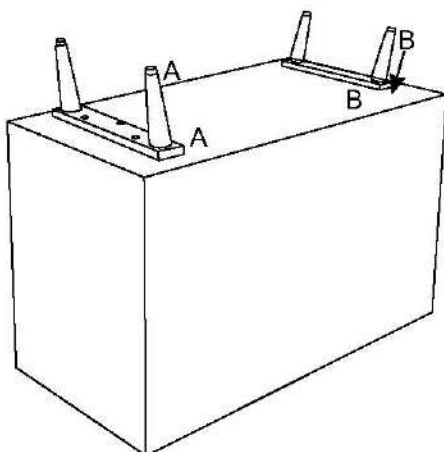

(4)

