

CALIFORNIA KING STORAGE BED

ASSEMBLY INSTRUCTIONS




ASSEMBLY TIPS:

- 1 . Remove hardware from box and sort by size.
- 2 . Please check to see that all hardware and parts are present prior to start of assembly.
- 3 . Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.


**Warning!**

- 1 . Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2 . This product is for home use only and not intended for commercial establishments.


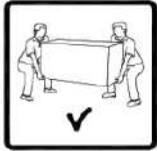


ASSEMBLY TIME	20 MINUTES
----------------------	-------------------






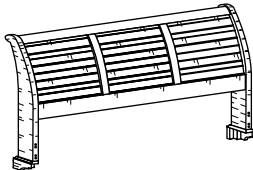



B1 (BOX 1)**PARTS IDENTIFICATION**

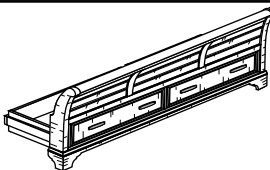	PART NAME	FIGURE	QTY
A	HEADBOARD		1PC

B2 (BOX 2)

	PART NAME	FIGURE	QTY
B	STORAGE FOOTBOARD		1PC
I	FOOTBOARD SUPPORT LEG WITH LEVELER		2PCS

B3 (BOX 3)

	PART NAME	FIGURE	QTY
C	BED RAIL		2PCS
D	ROLL SLAT (6PCS)		2SETS
E	CENTER RAIL		1PC
F	LONG CENTER RAIL SUPPORT WITH LEVELER		4PCS
G	BED SLAT SUPPORT WITH LEVELER		8PCS
H	SHORT CENTER RAIL SUPPORT		1PC
J	CONCEAL PANEL		2PCS
A	(B1) * FROM BOX 1 HEADBOARD		1PC
FB	(B2) * FROM BOX 2 FOOTBOARD COMPLETE		1PC

ASSEMBLY TIPS:














- 1 . Remove hardware from box and sort by size.
- 2 . Please check to see that all hardware and parts are present prior to start of assembly.
- 3 . Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

**Warning!**

- 1 . Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2 . This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION


Z - B3 (BOX 3) - HARDWARE PACK IS LOCATED IN (B3)

	HARDWARE NAME	FIGURE	QTY
1	THREADED BOLT (M6 x 13mm - RBW)		8PCS
2	WOOD DOWEL (Ø 10 x 30mm)		8PCS
3	HALF ROUND NUT (7 x 15mm- BLK)		8PCS
4	SMALL FLAT WASHER (M6 x 13mm - RBW)		8PCS
5	HEX NUT (M6 x 10mm - RBW)		8PCS
6	WRENCH (10 x 85mm - RBW)		1PC
7	LONG FLAT HEAD SCREW (M4 x 30mm - RBW)		24PCS
8	SHORT FLAT HEAD SCREW (M4 x 16mm - RBW)		8PCS
9	LONG BOLT (M6 x 60mm - RBW)		4PCS
10	SHORT BOLT (M6 x 40mm - RBW)		2PCS
11	ALLEN WRENCH (M4 x 58mm- BLK)		1PC
12	BIG FLAT WASHER (M6 x 19mm - RBW)		2PC
13	LOCK WASHER (M6 x 13mm - RBW)		2PCS


**NOTE : PHILLIPS HEAD SCREW DRIVER IS REQUIRED IN THE ASSEMBLY PROCESS;
HOWEVER, MANUFACTURER DOES NOT PROVIDE THIS ITEM.**

(B2) - BOX 2

STEP 1

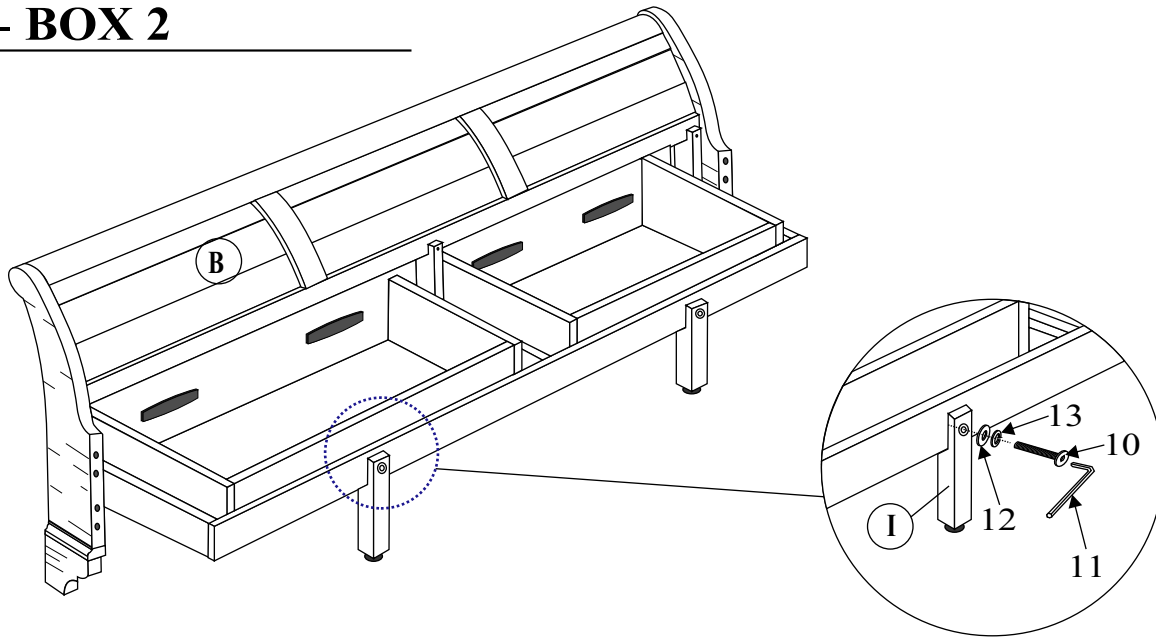


STEP 2

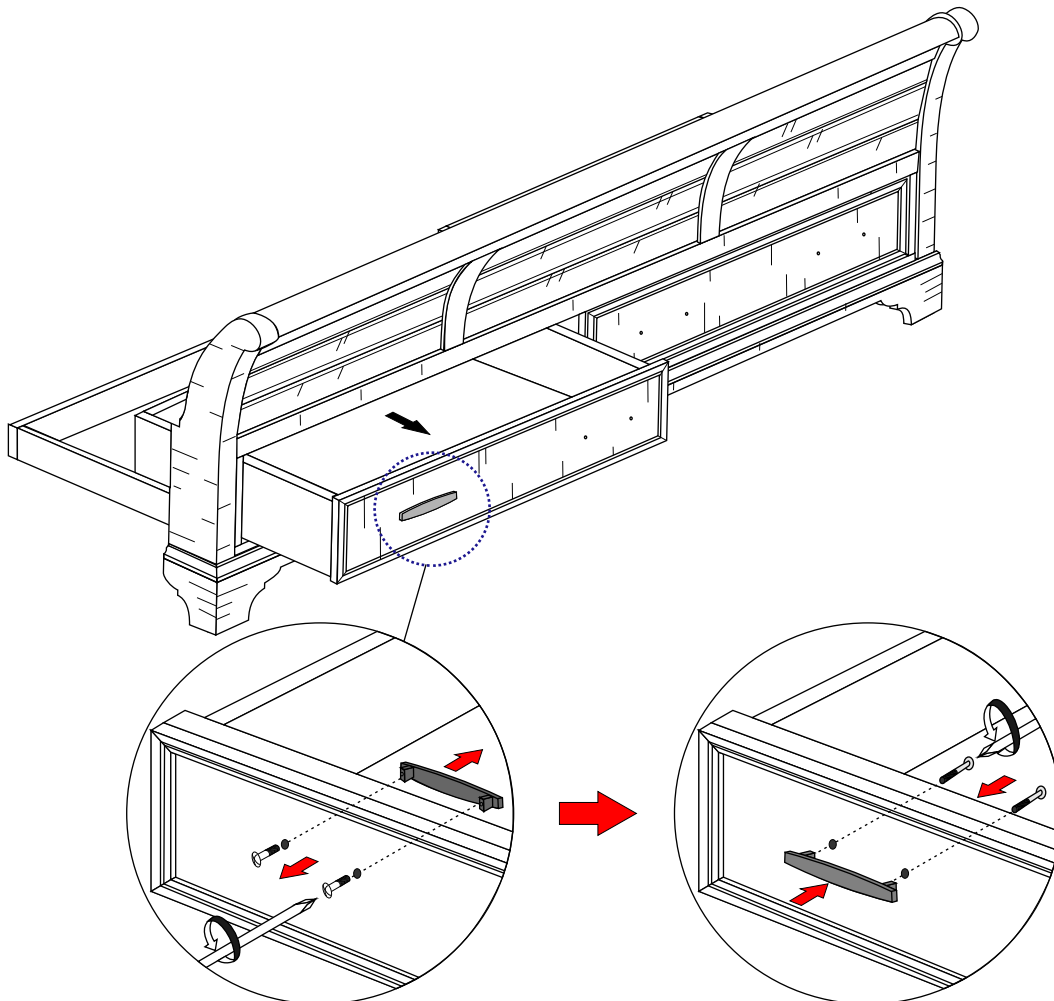


(B1 - B3) - BOX-1 TO BOX 3


STEP 3

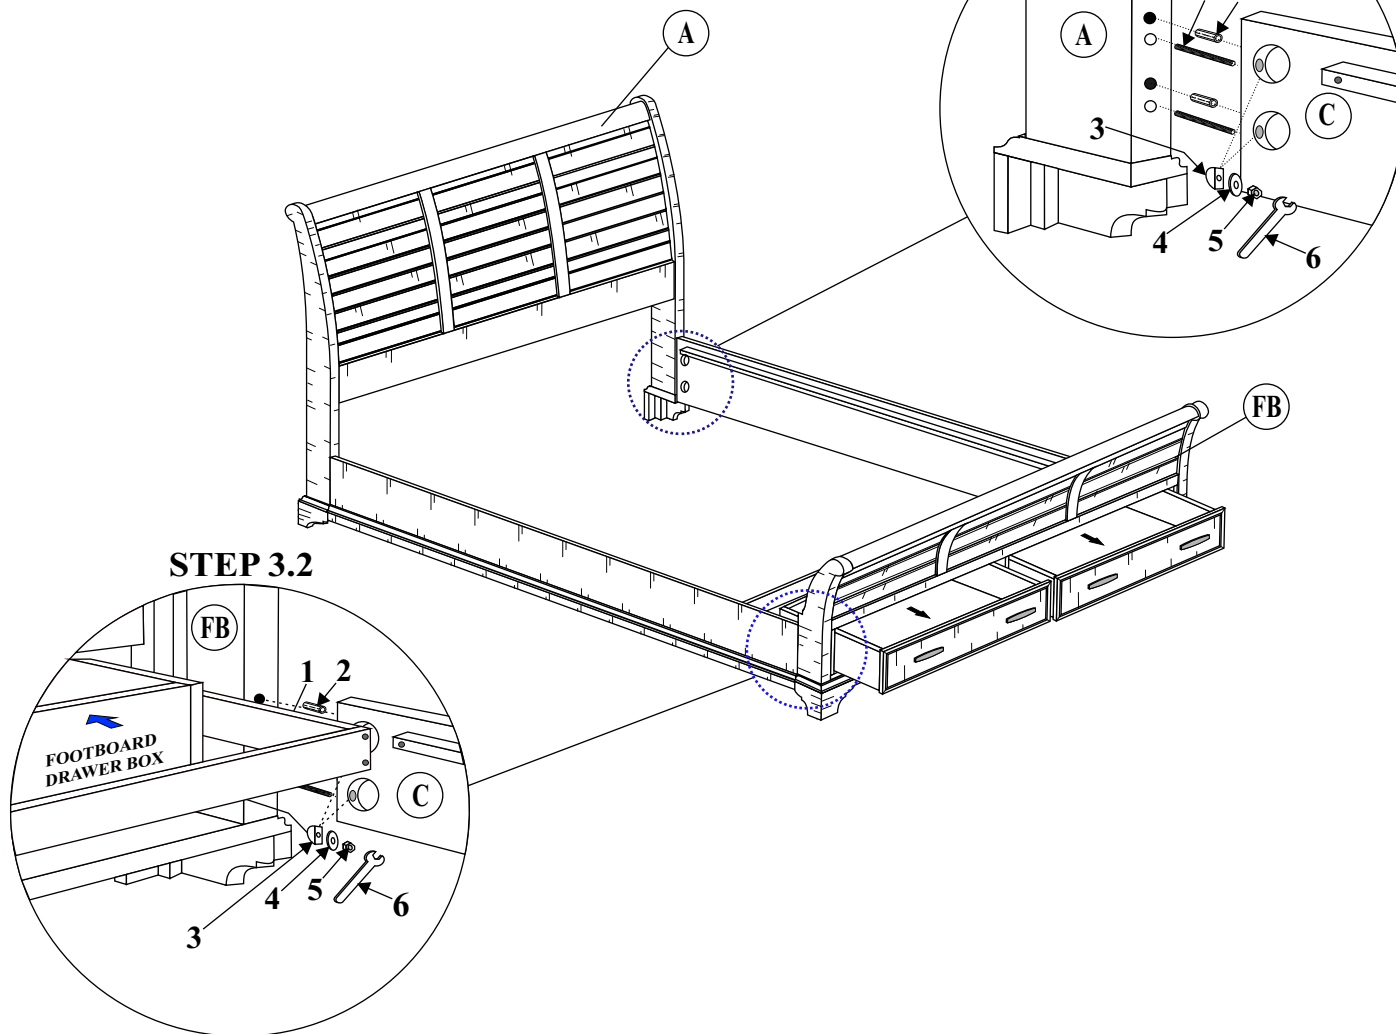


STEP 4

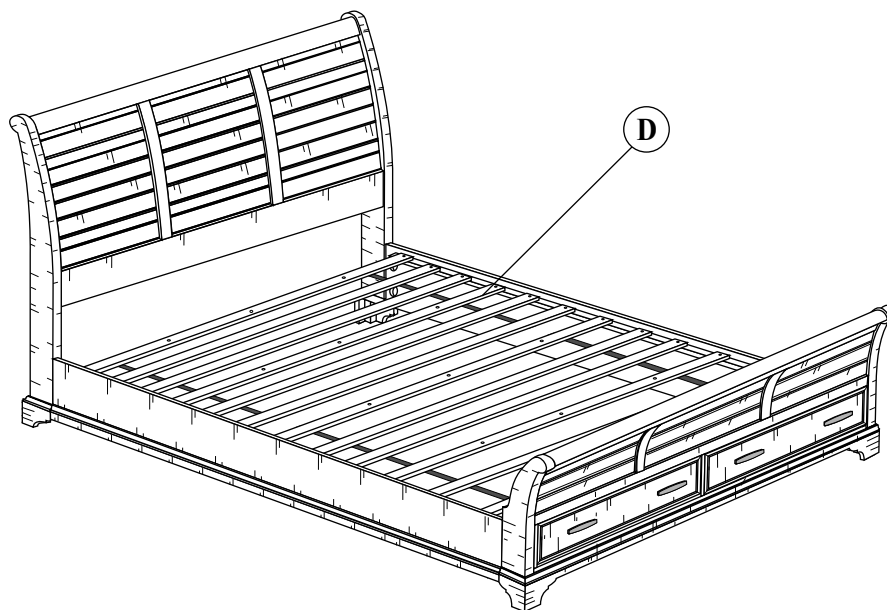


STEP 5

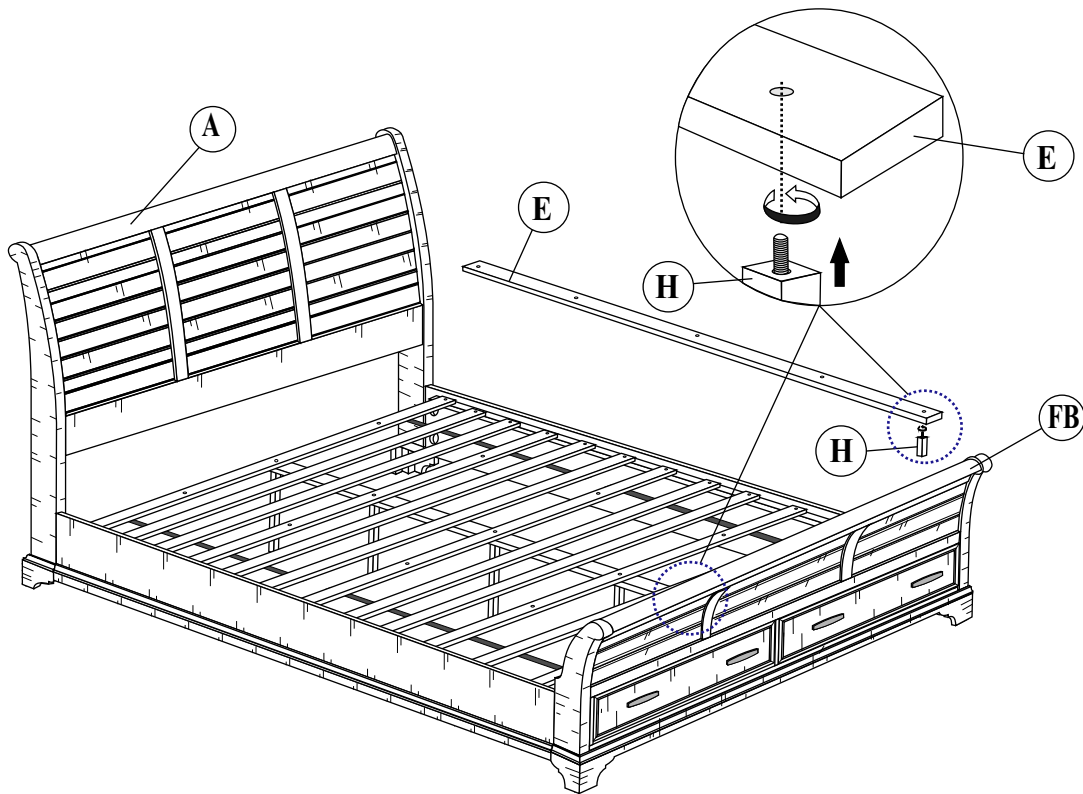


STEP 6

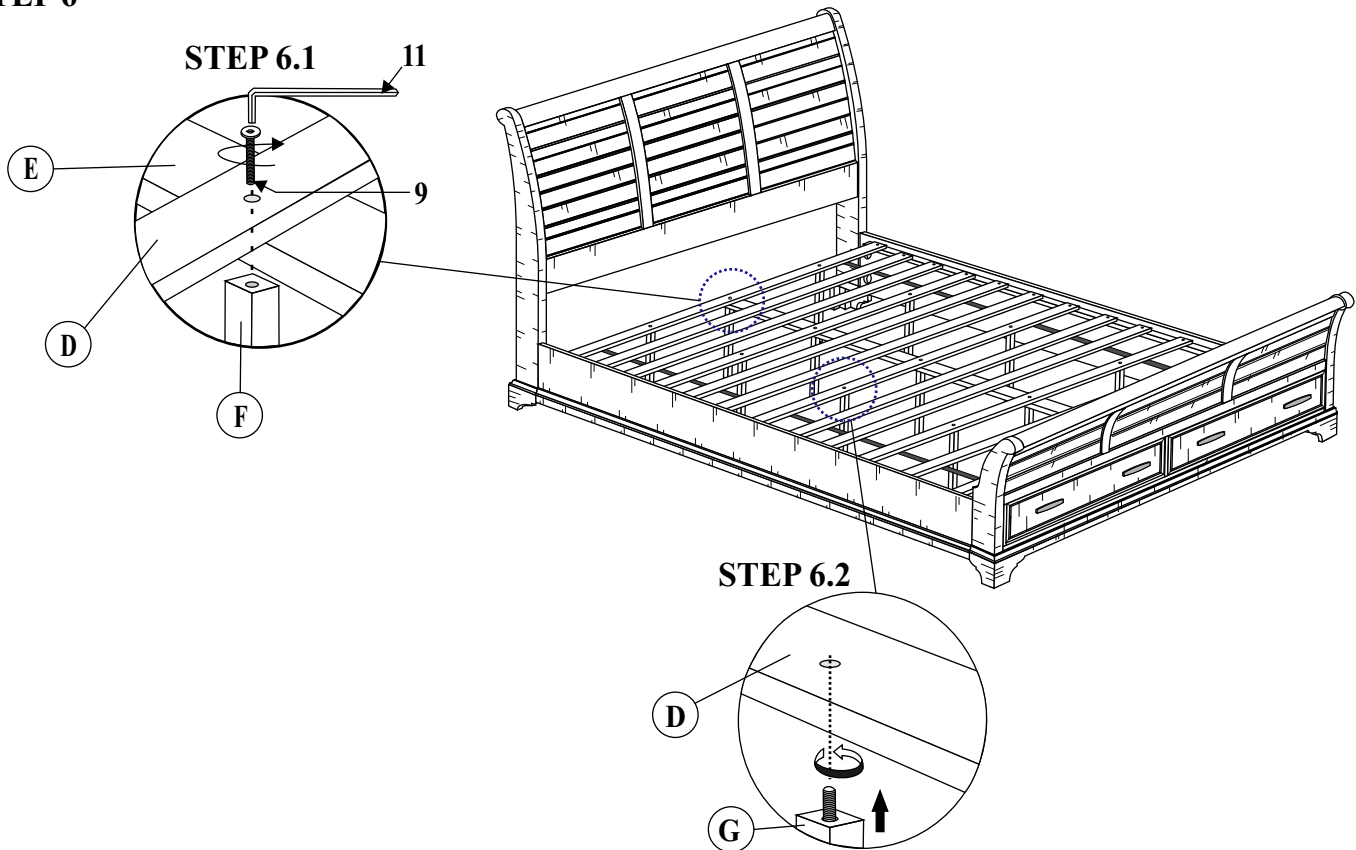

STEP 7

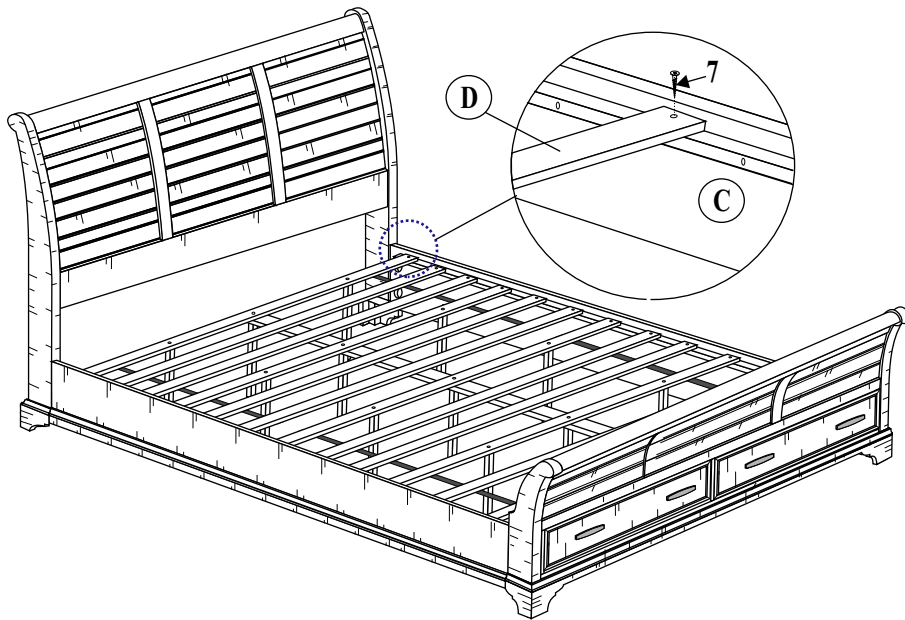

STEP 8

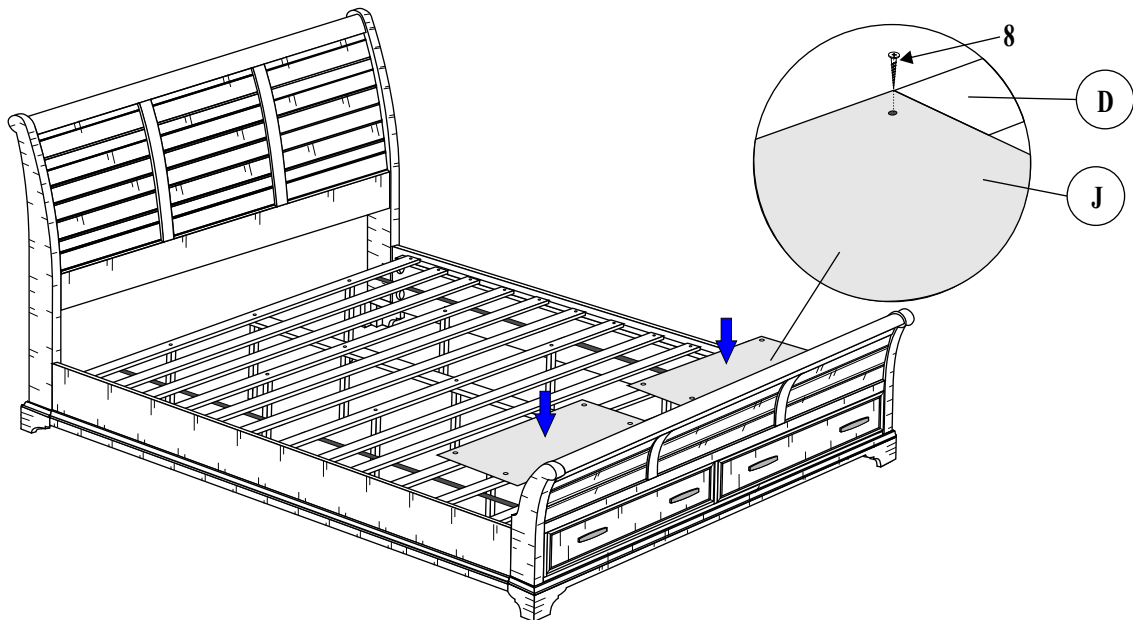

STEP 9 COMPLETE

