



Assembly instructions for m110/m70/m60 stools/wood stools

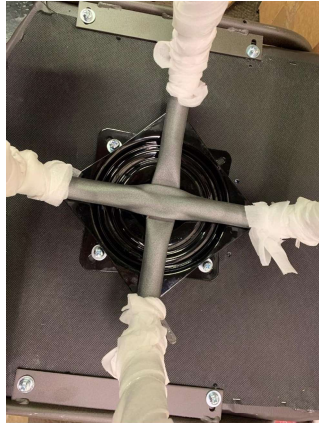

Position base upside down on bucket.

Line up the holes

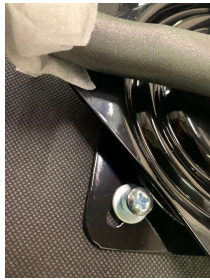

Insert lock washer, washer and bolt as pictured above.

Tighten all bolts.

If swivel mechanism has on top the “Front Top” imprinted on it , position this part toward the front of the chair