

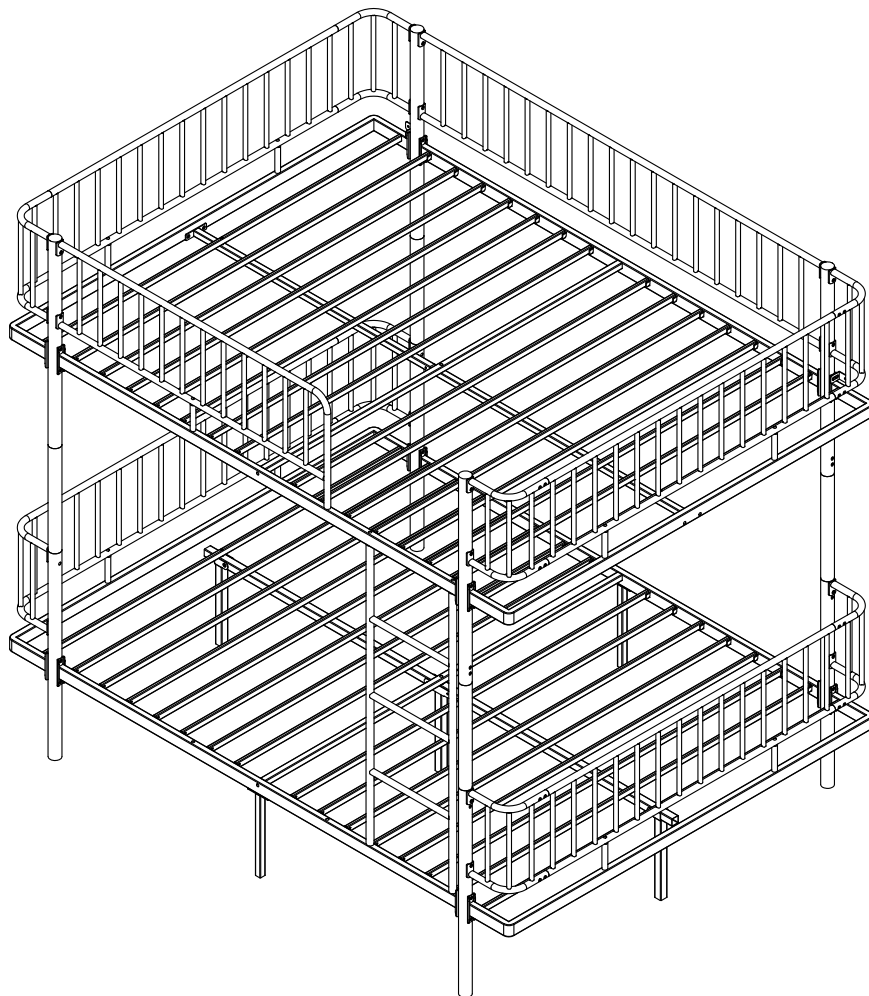
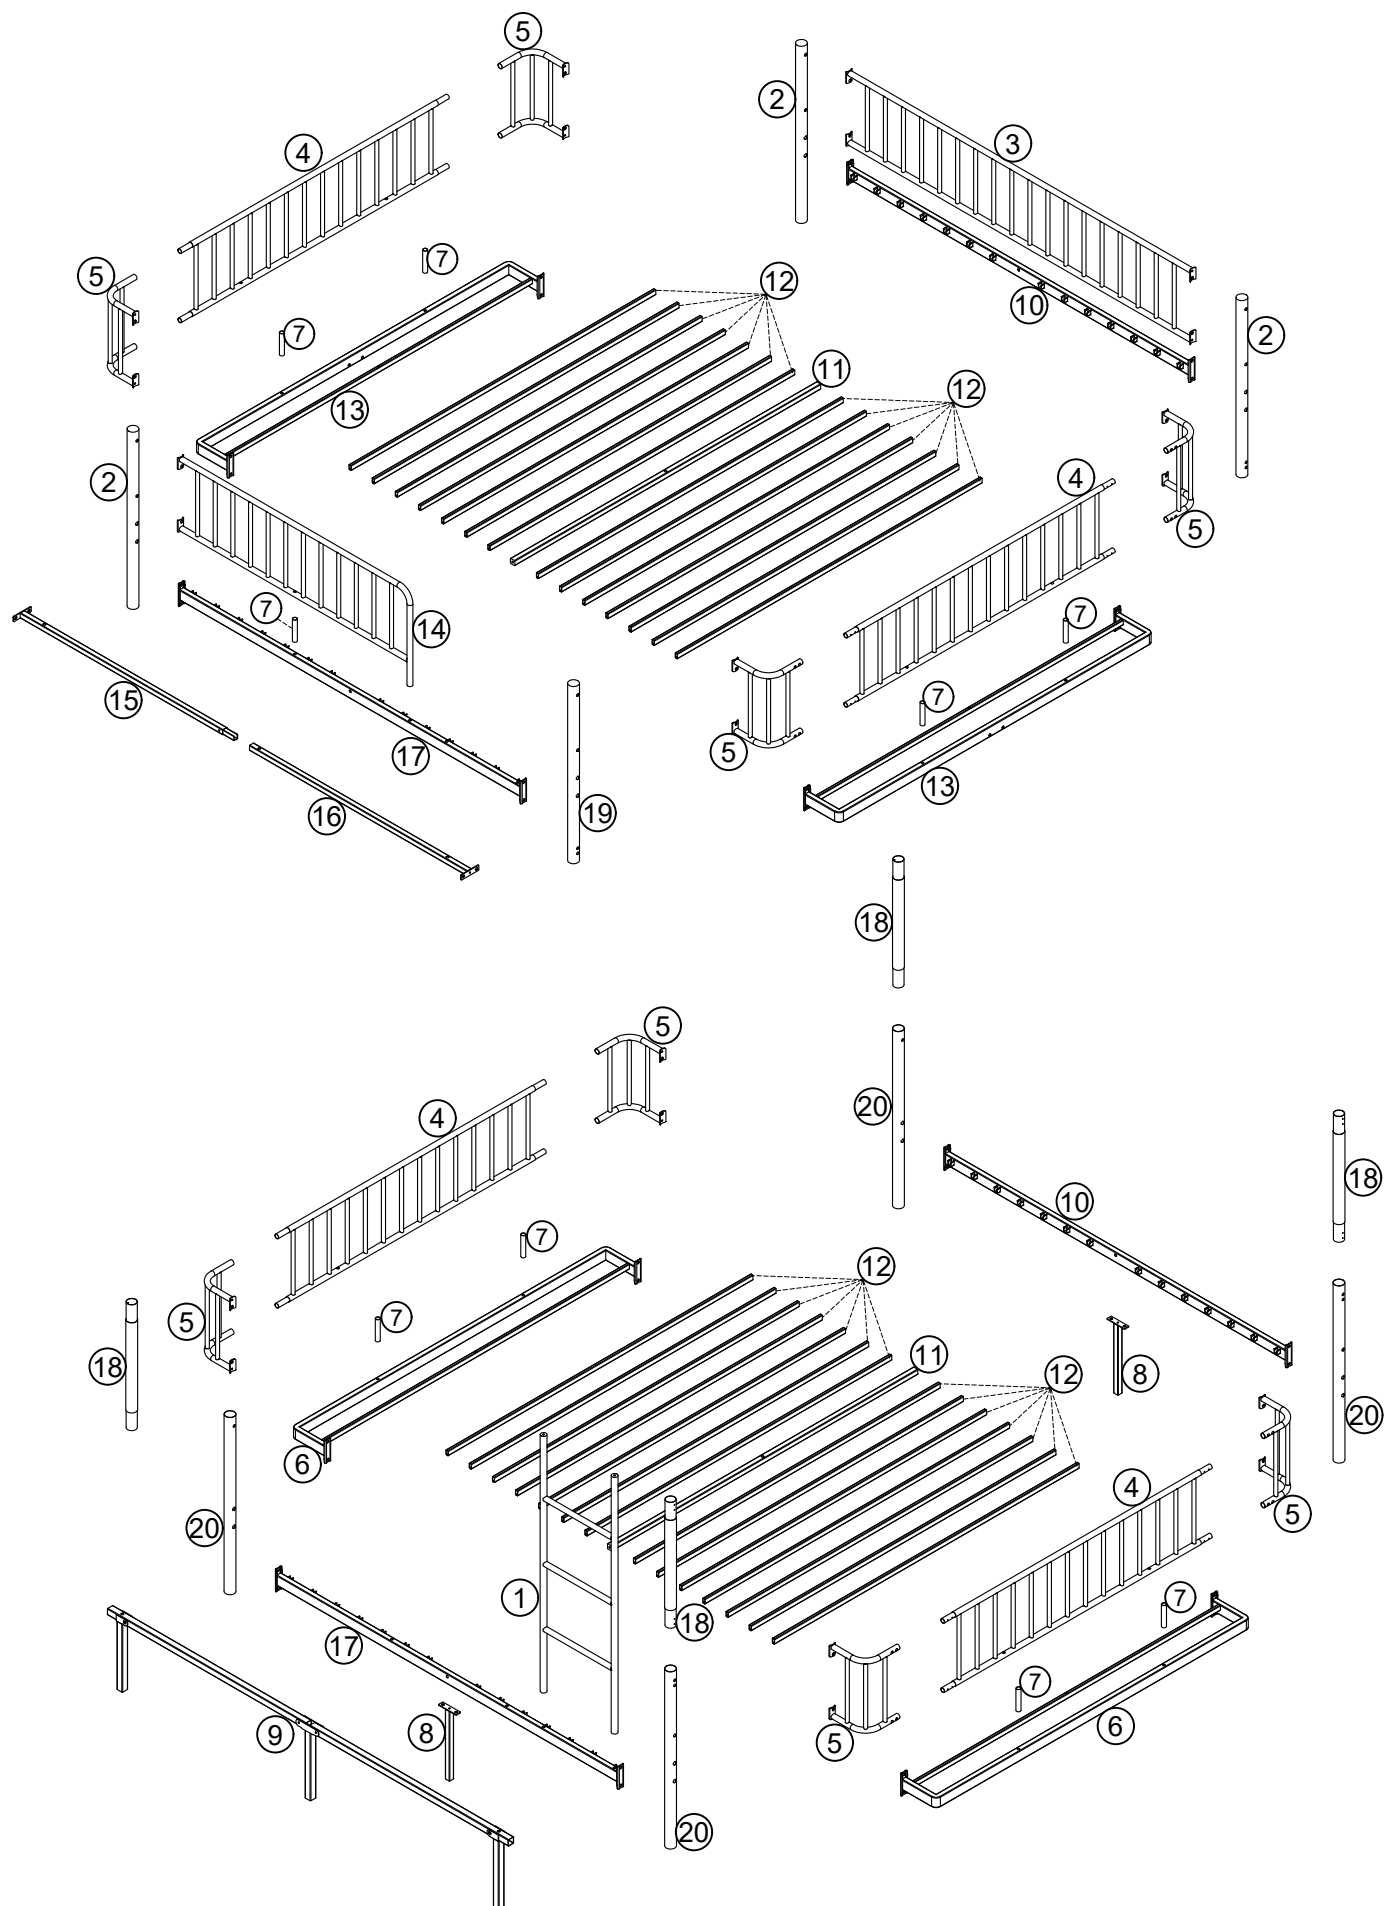
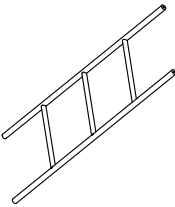
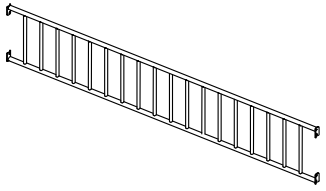
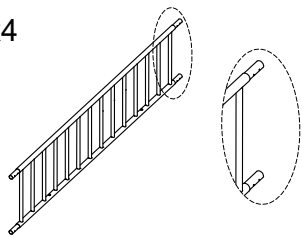
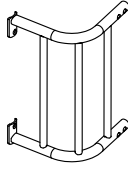
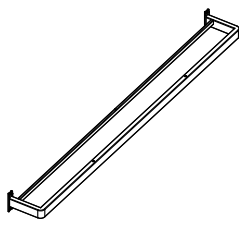

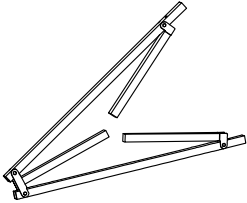
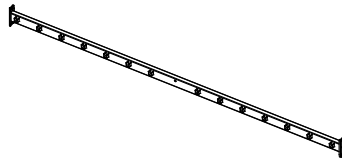
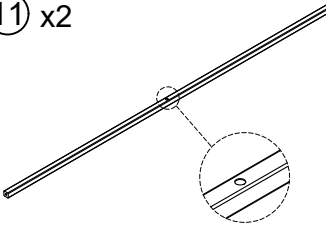
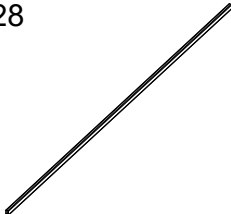
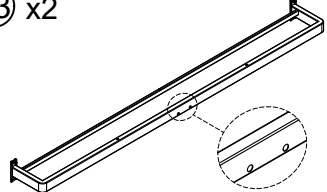
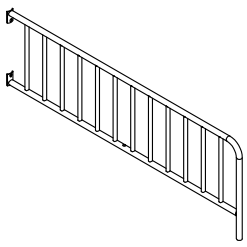
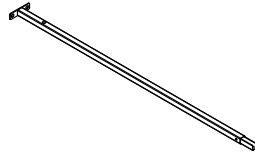


Assembly instruction A







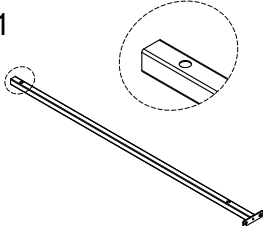


Assembly instruction A

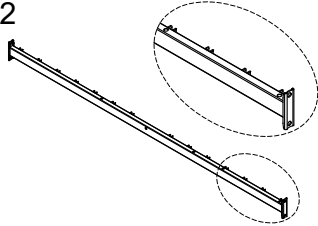


① x1 	② x3 	③ x1 
④ x4 	⑤ x8 	⑥ x2 
⑦ x9 	⑧ x4 	⑨ x1 
⑩ x2 	⑪ x2 	⑫ x28 
⑬ x2 	⑭ x1 	⑮ x1 
⑯ x1 	⑰ x2 	⑱ x4 
⑲ x1 	⑳ x4 	㉑ x1 

Hardware List

A×32 (2+extra)  M8×20mm	B×17(1+extra)  M6×55mm	C×4  M6×40mm
D×15 (1+extra)  M6×32mm	E×26 (1+extra)  M6×15mm	F×49 (4+extra)  M6×10mm
G×8 (1+extra)  M6×15mm	H×2  M4	I×2 
J×2  M8×40mm	K×2  M5×40mm	


1

Step 1

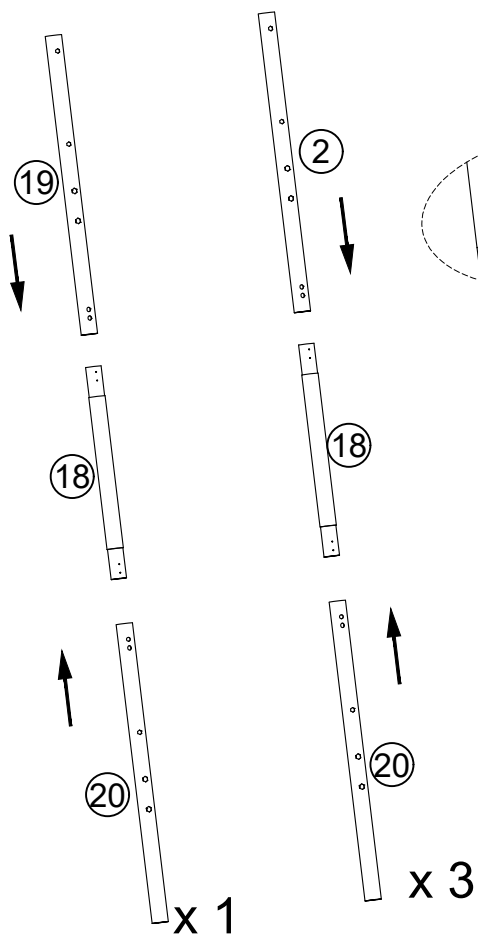


Step 2


F×12pcs
M6×10mm

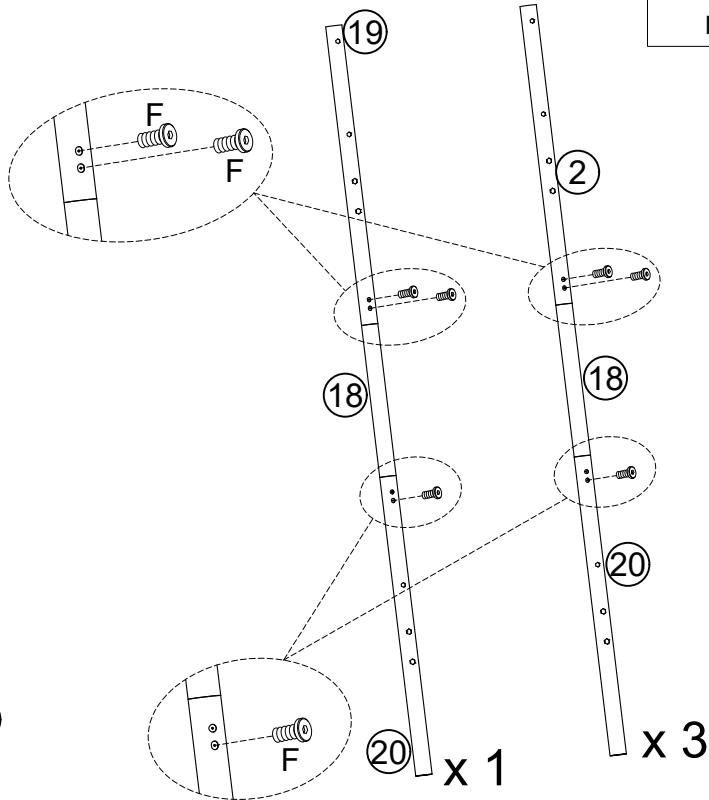

2












Step 1

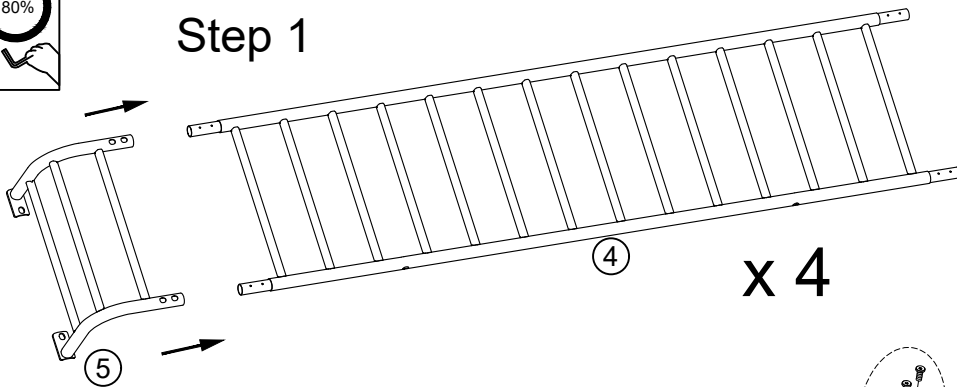


F×32pcs
M6×10mm

Step 2

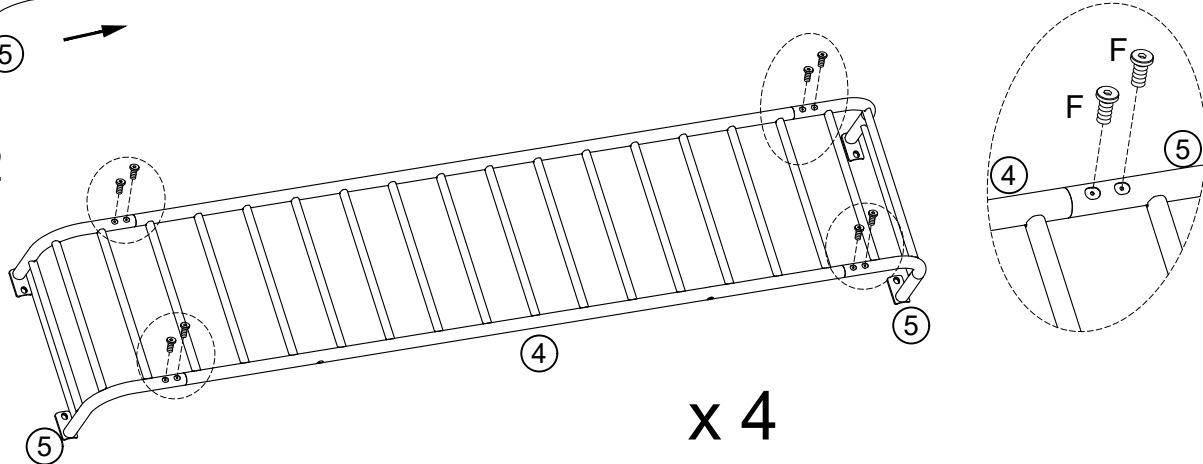


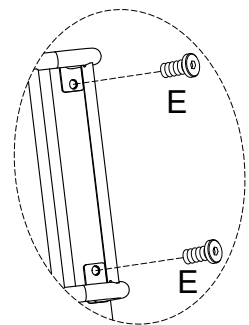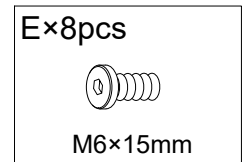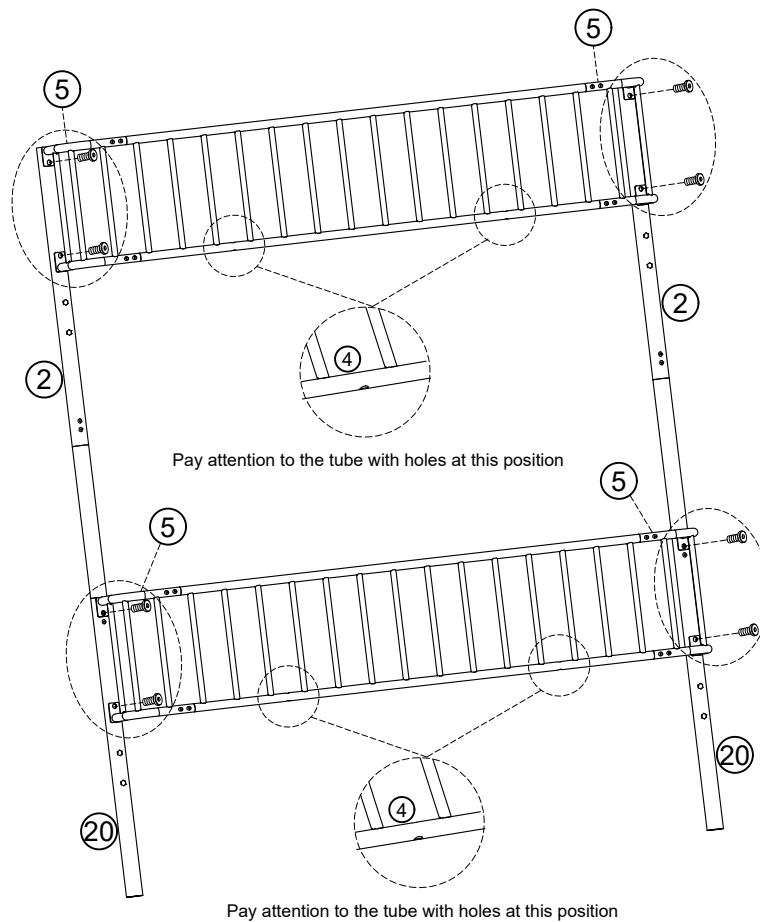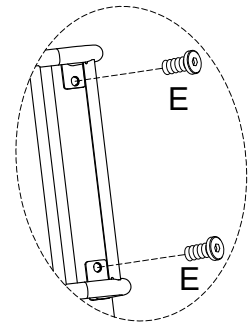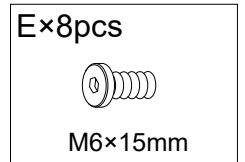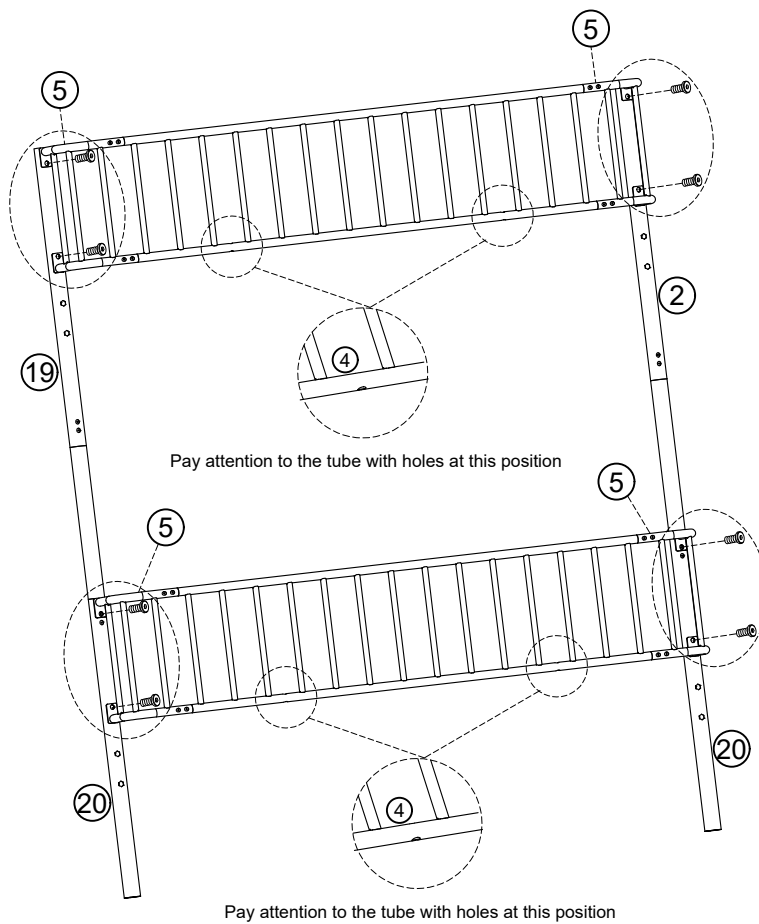

5



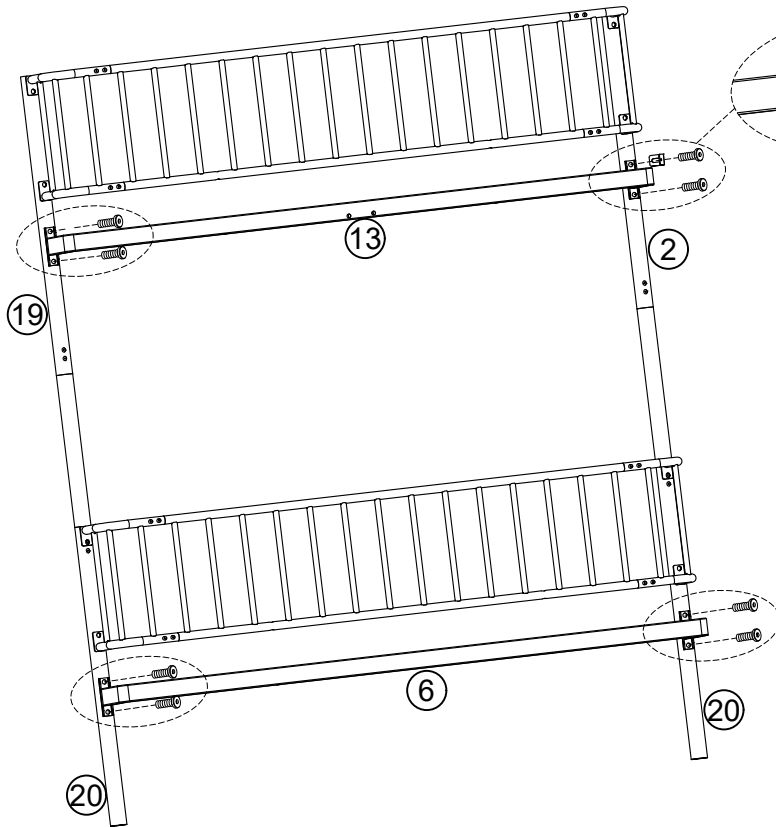


A×8pcs




M8×20mm


I×1pc

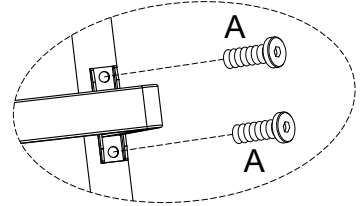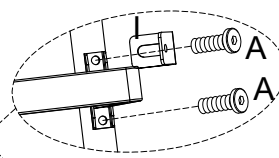

6



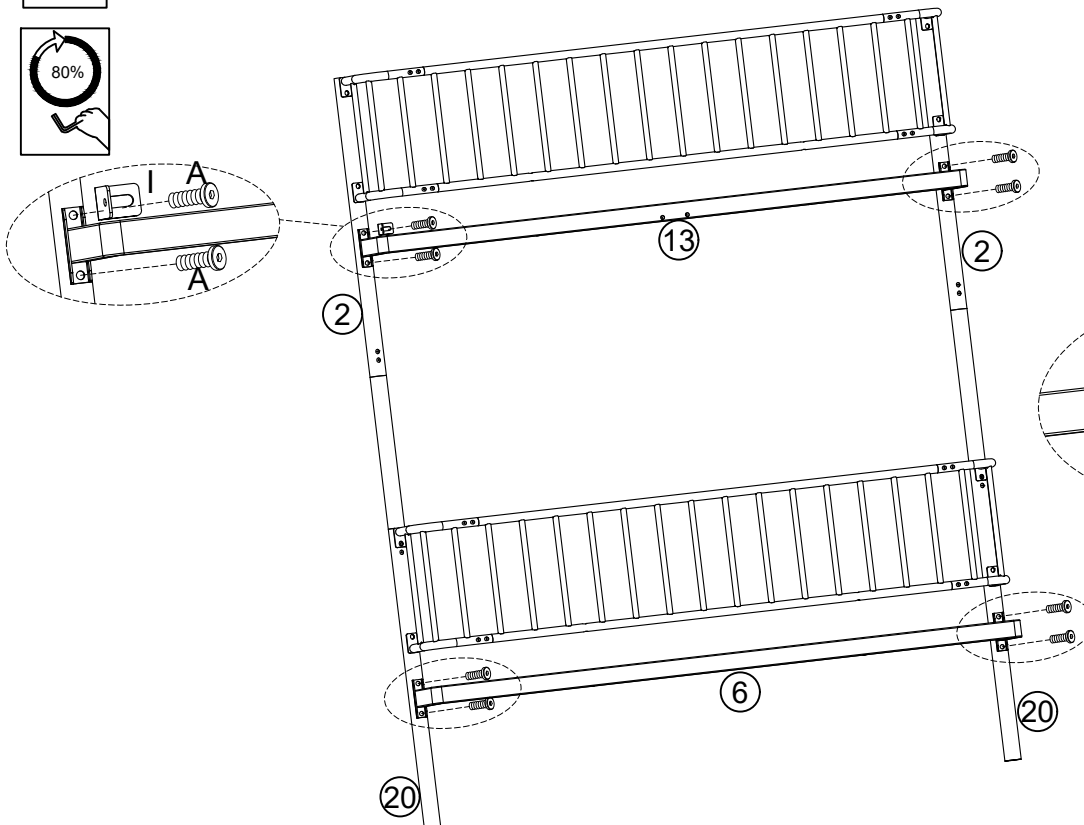


A×8pcs






M8×20mm


I×1pc

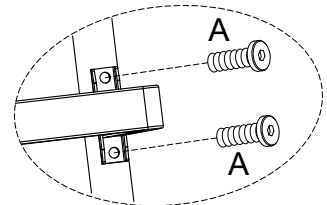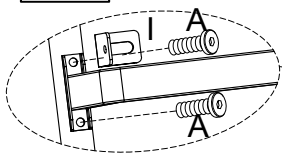


7


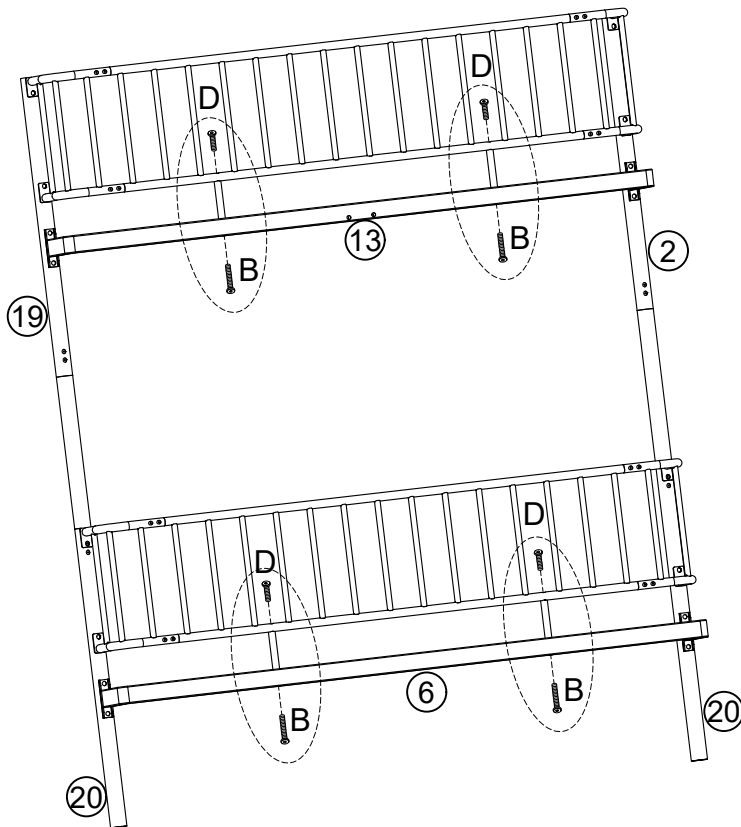



- B×4pcs**
-  M6×55mm
- D×4pcs**
-  M6×32mm

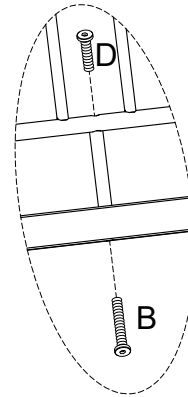

8

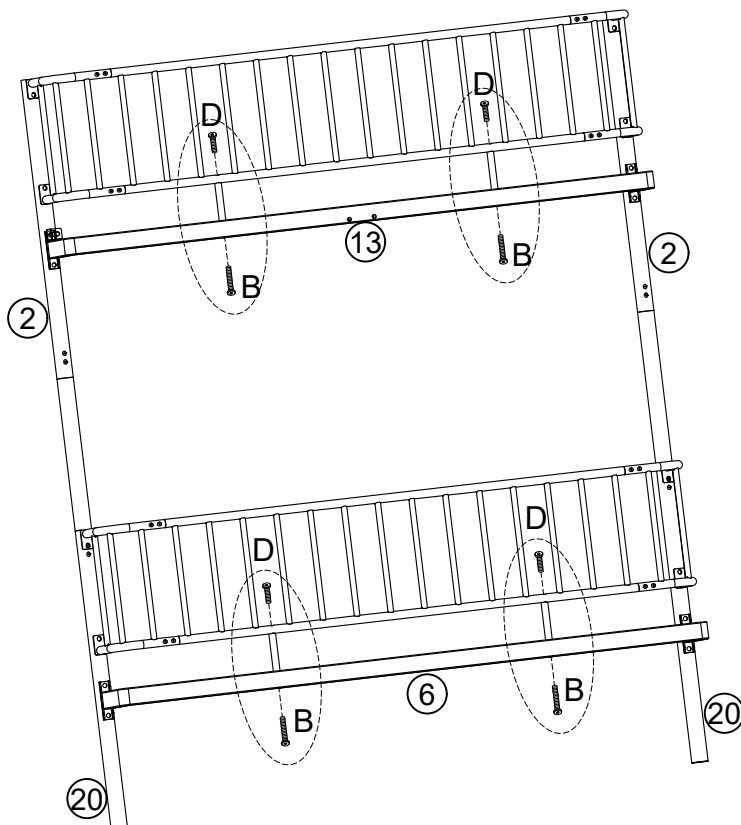

- B×4pcs**
-  M6×55mm
- D×4pcs**
-  M6×32mm

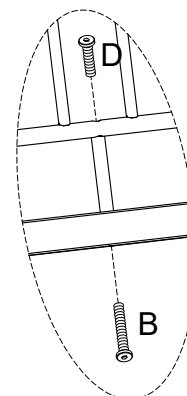


9


F×4pcs



M6×10mm

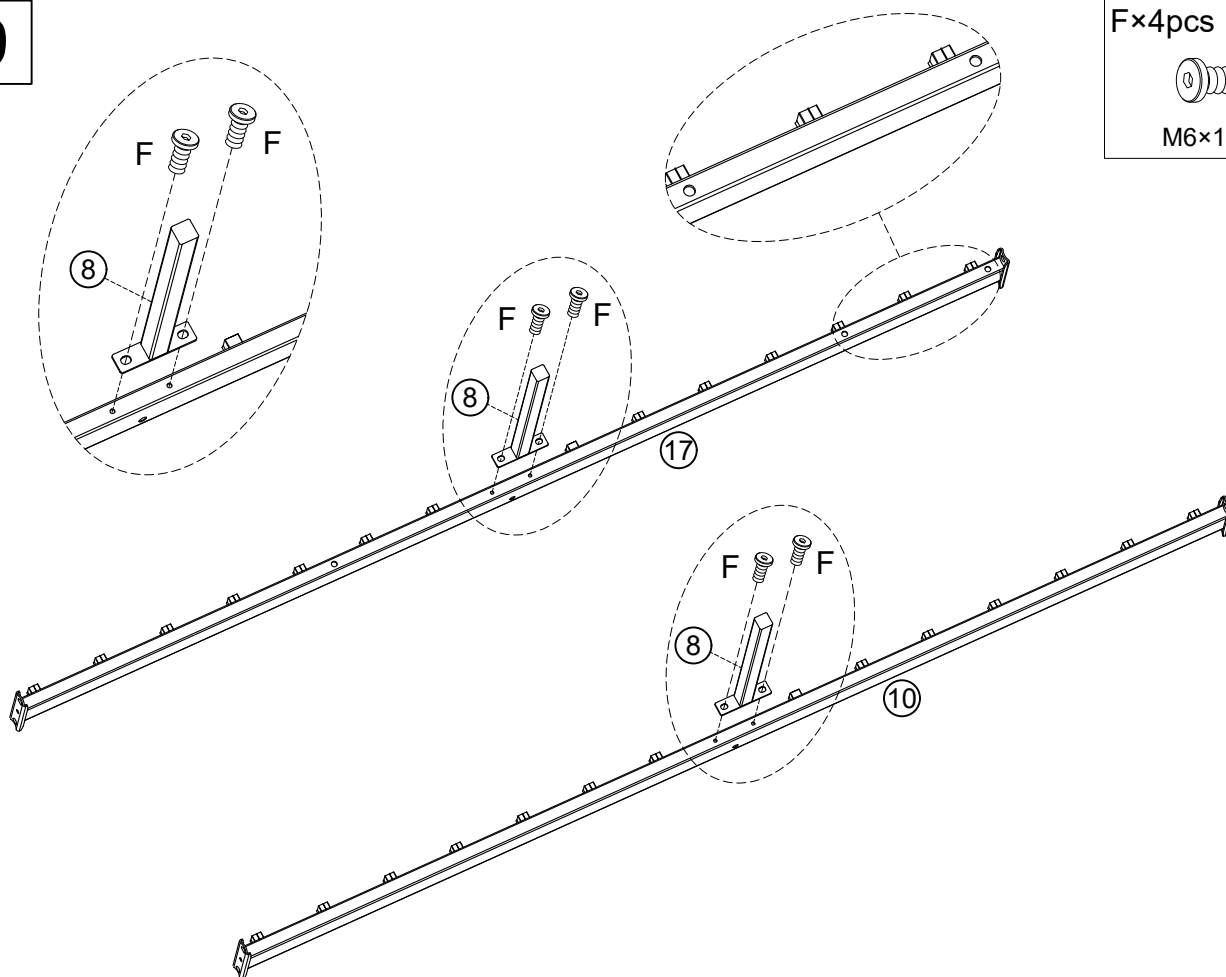


10





A×8pcs



M8×20mm

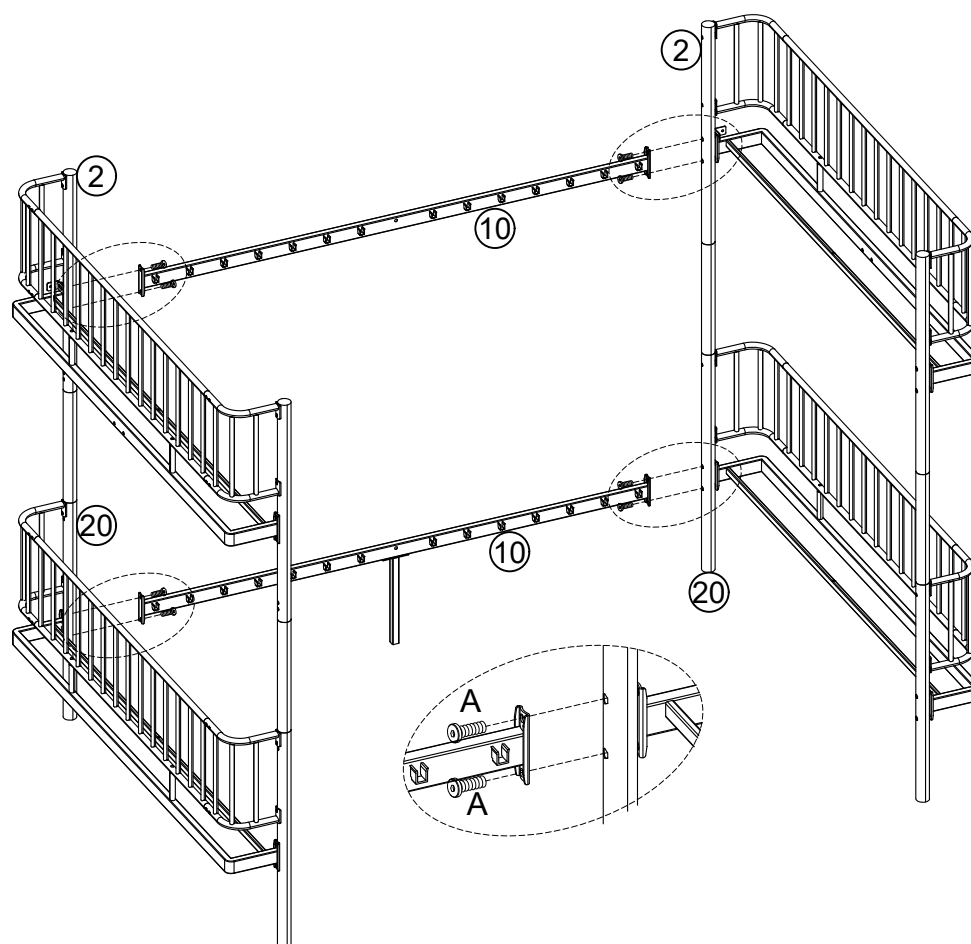


11

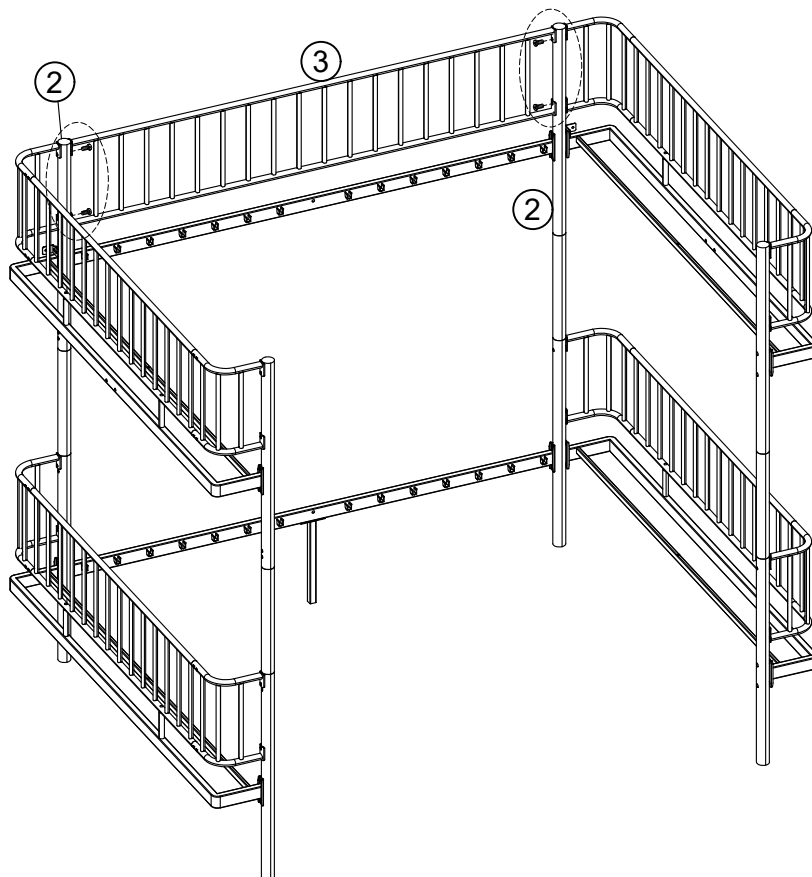



E×4pcs



M6×15mm

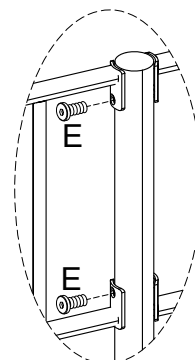


12

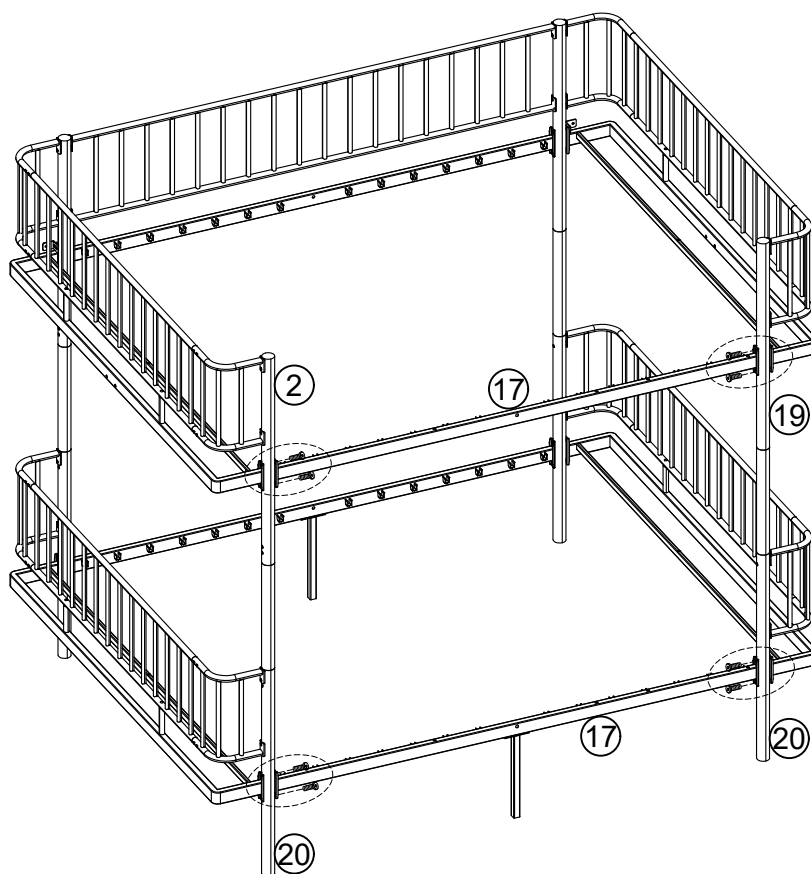


A×8pcs




M8×20mm

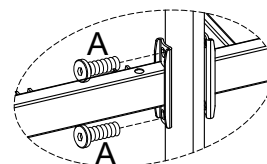

13



B×1pc





M6×55mm

E×2pcs




M6×15mm

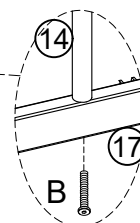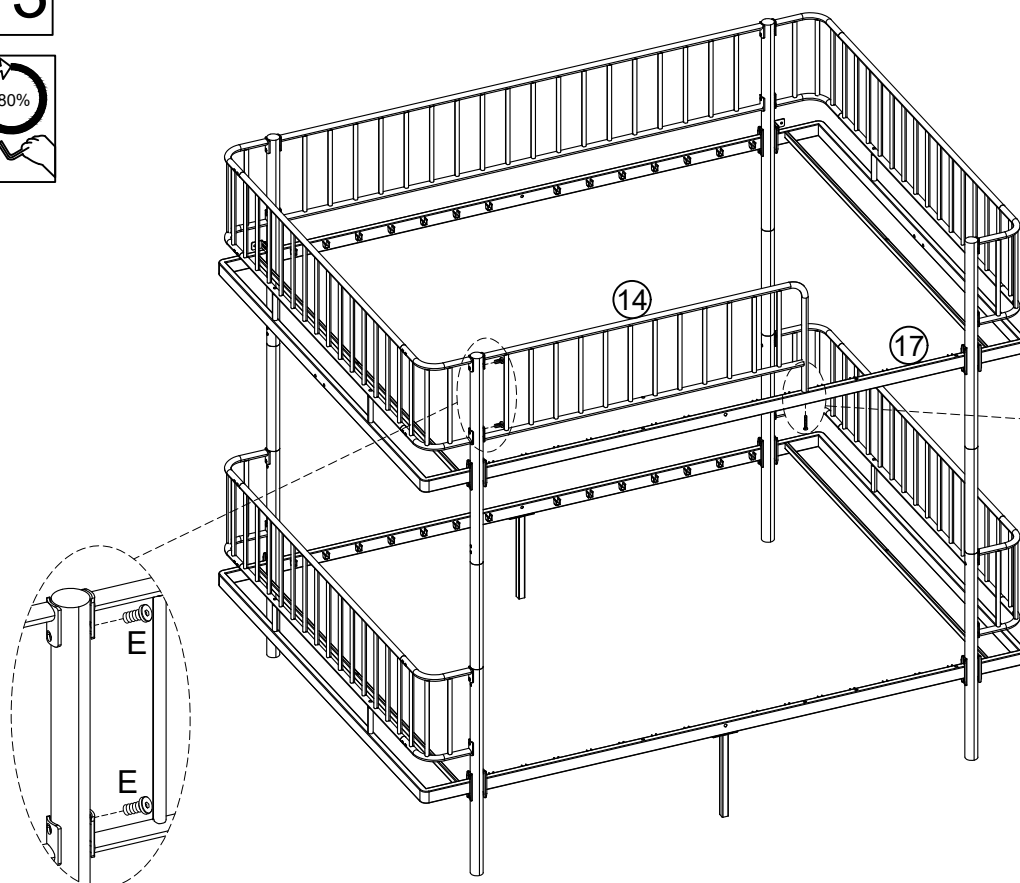

14

B×1pc





M6×55mm

D×1pc



M6×32mm

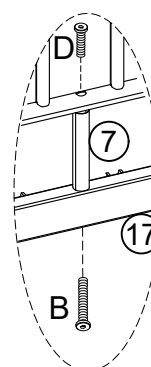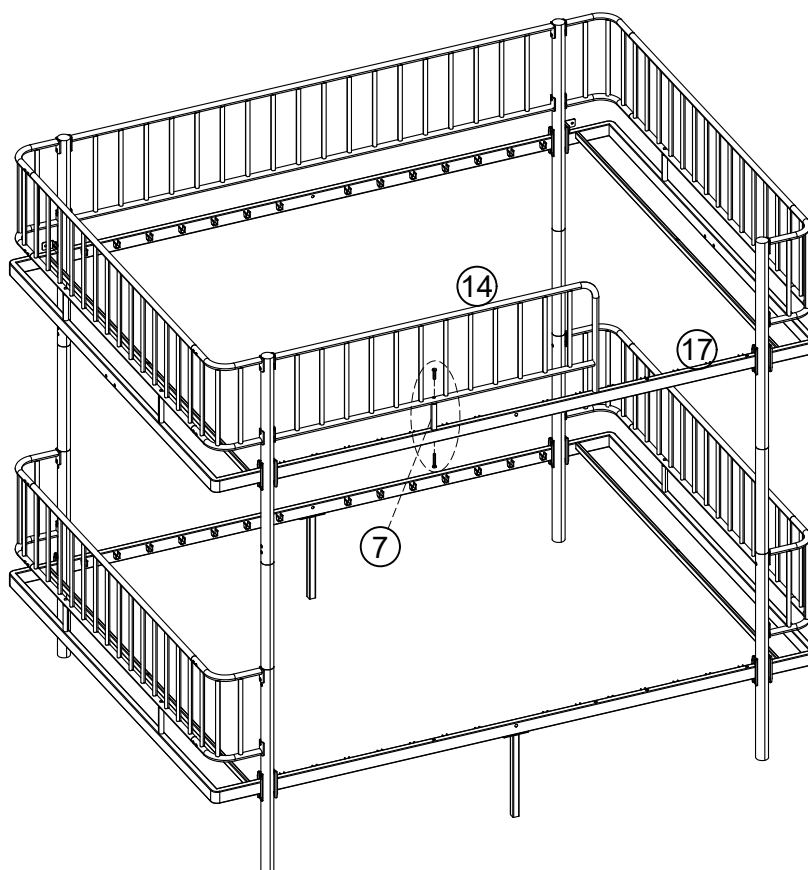


15

C×4pcs



M6×40mm

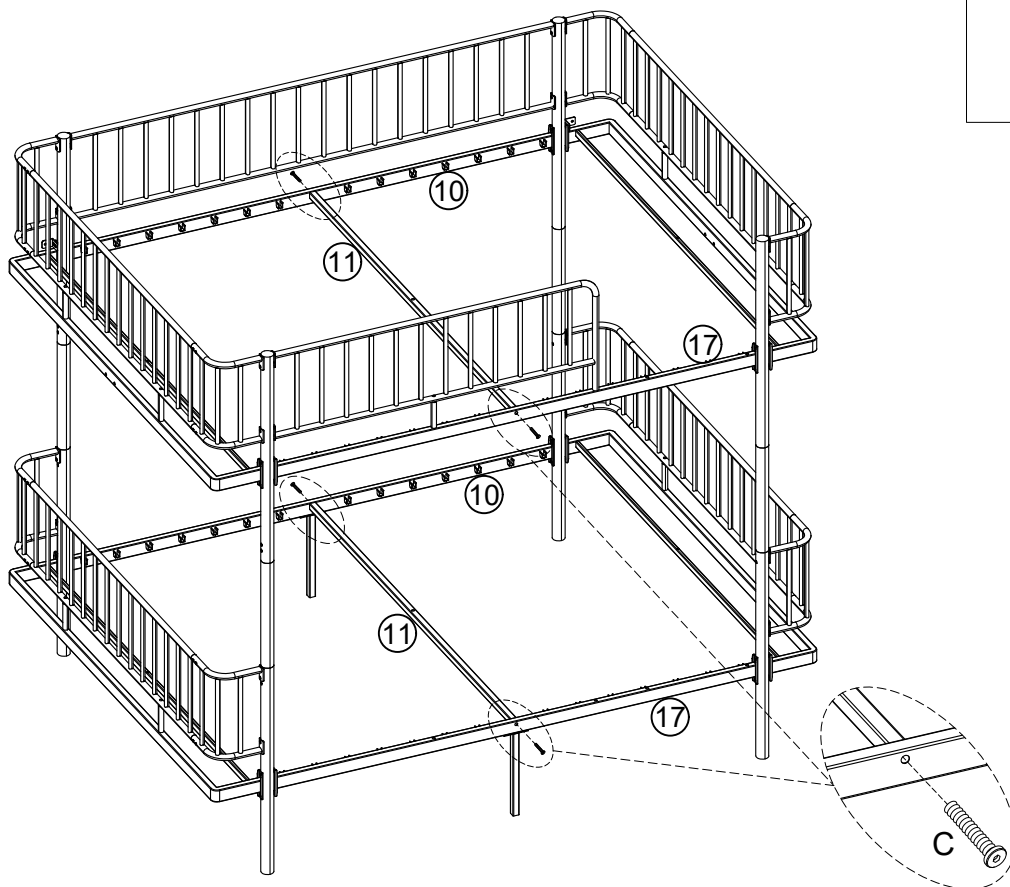


16

F×1pc




M6×10mm


Step 1

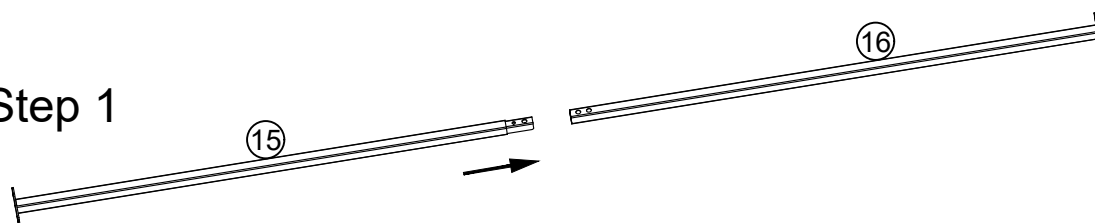

Step 2

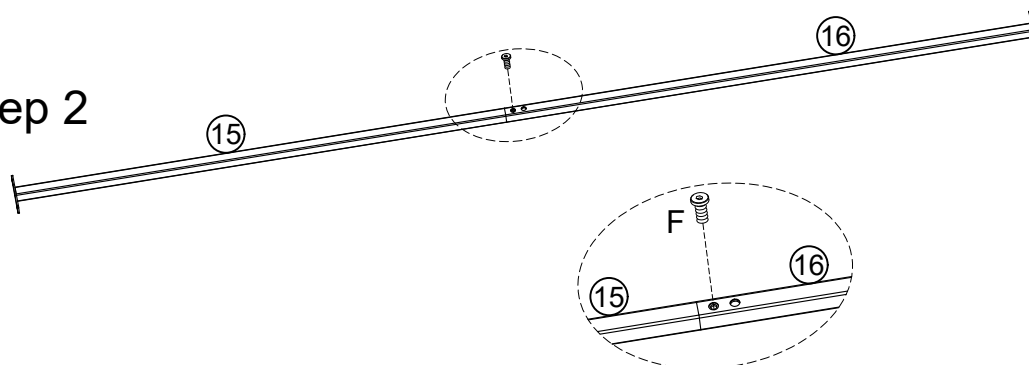

17

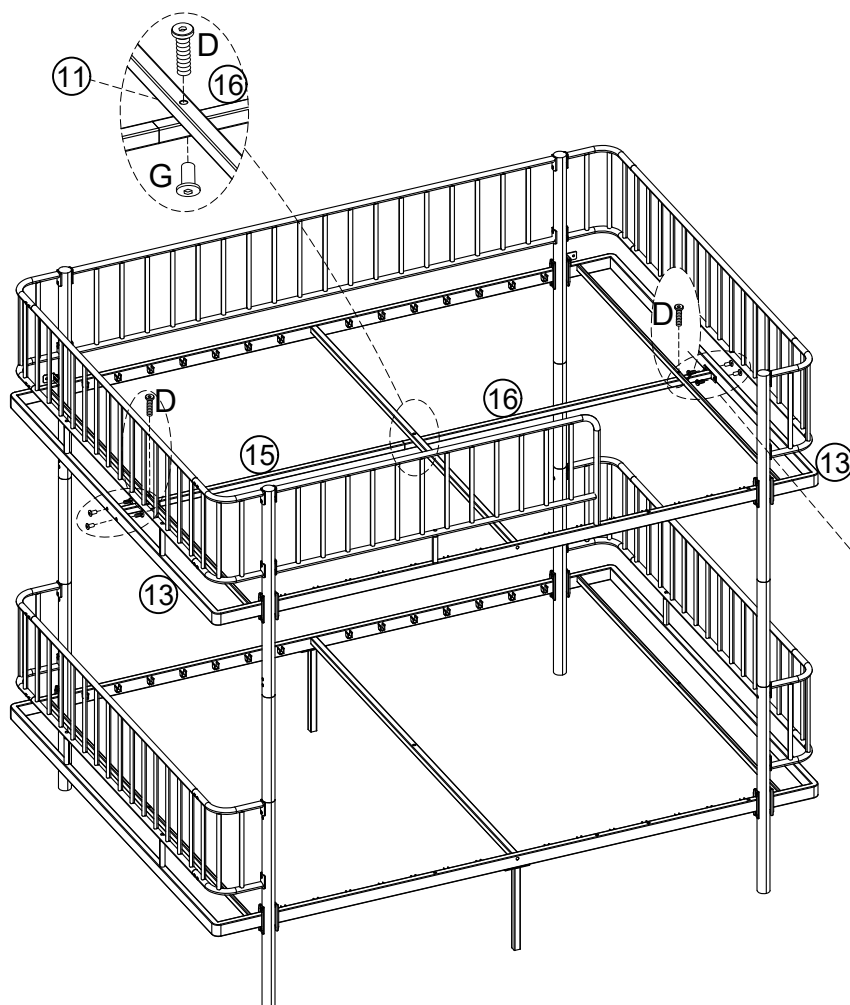

D×3pcs



M6×32mm

E×4pcs




M6×15mm


G×5pcs



M6×15mm

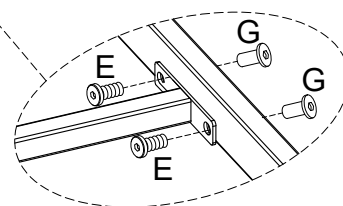

18

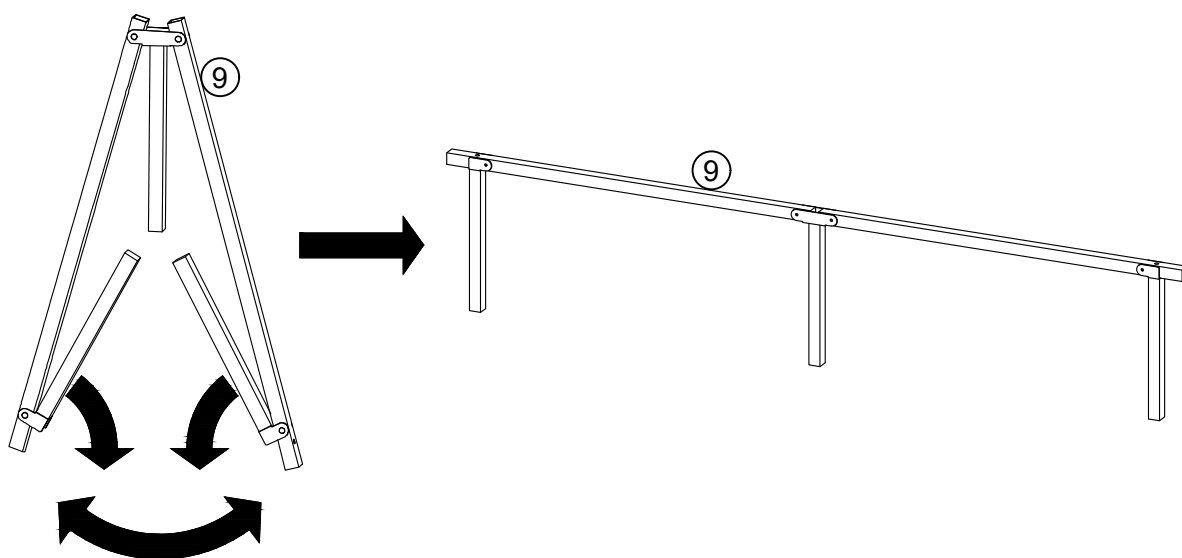


Watch out for pinching your hands

19



B×3pcs



M6×55mm

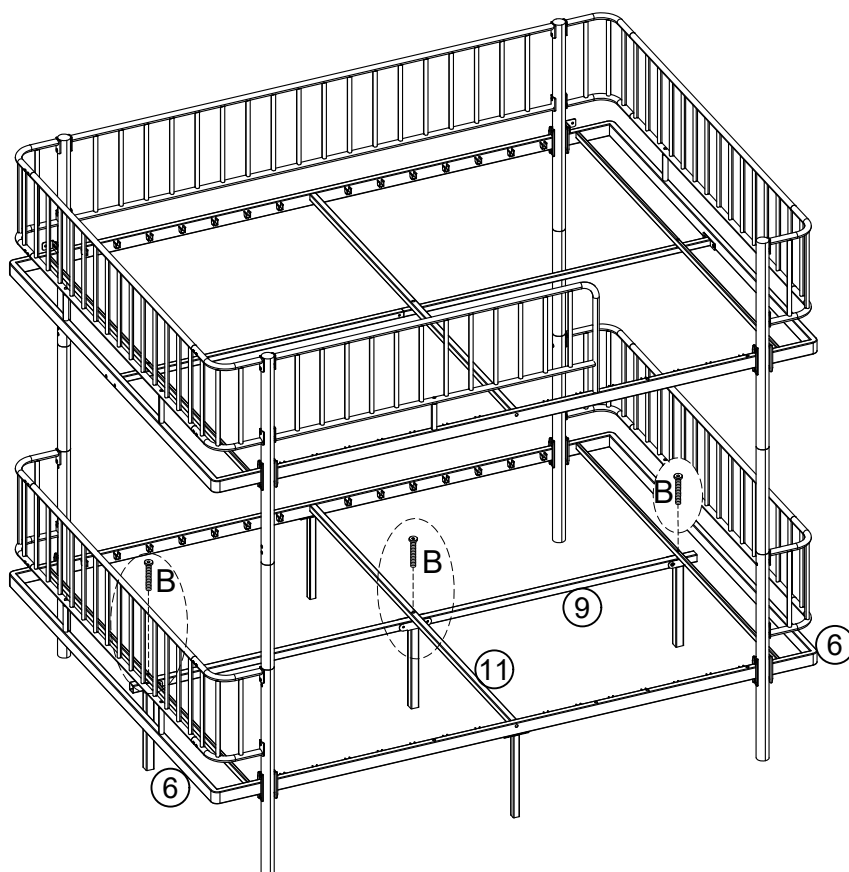


20

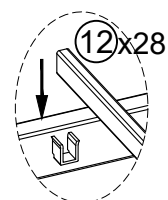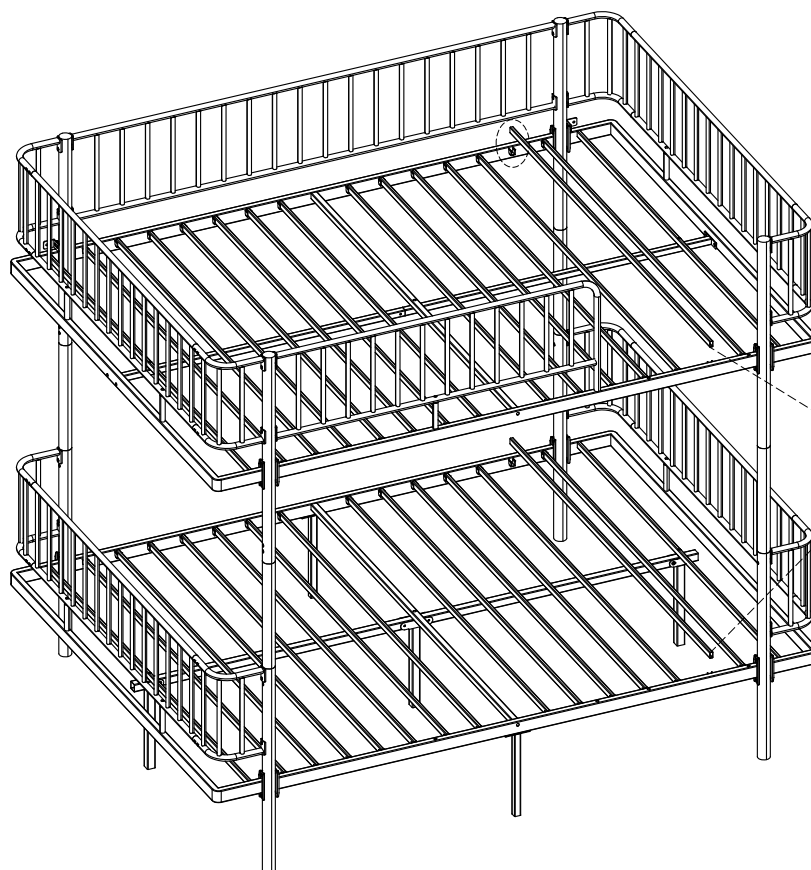


12x28


21

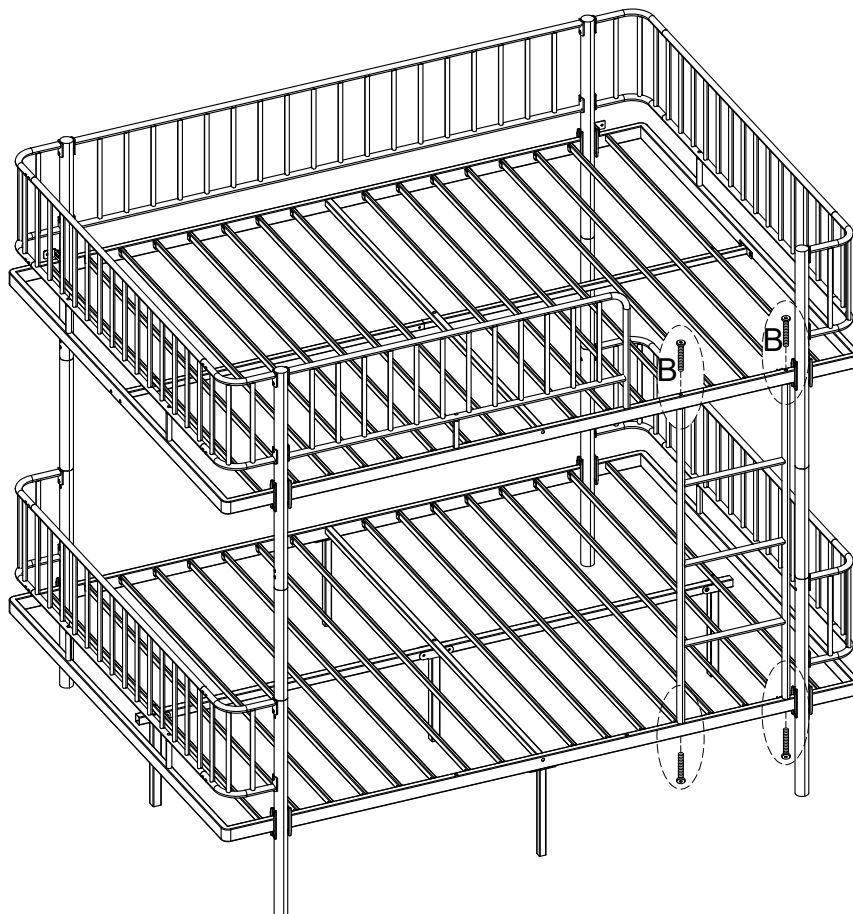

B×4pcs





M6×55mm

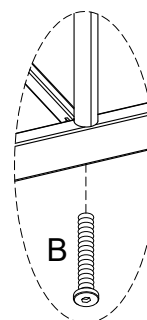

Tighten all screws 100%

22

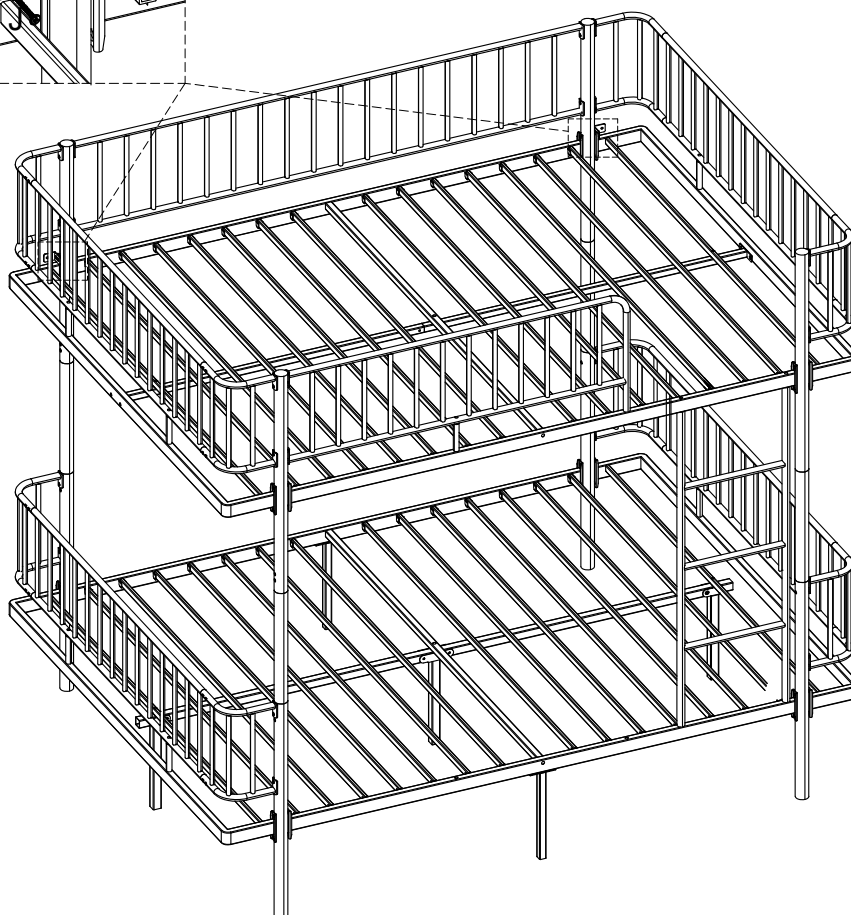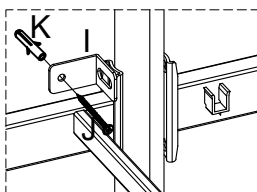

J×2pcs



M8×40mm

K×2pcs



M5×40mm