


ASSEMBLY INSTRUCTIONS


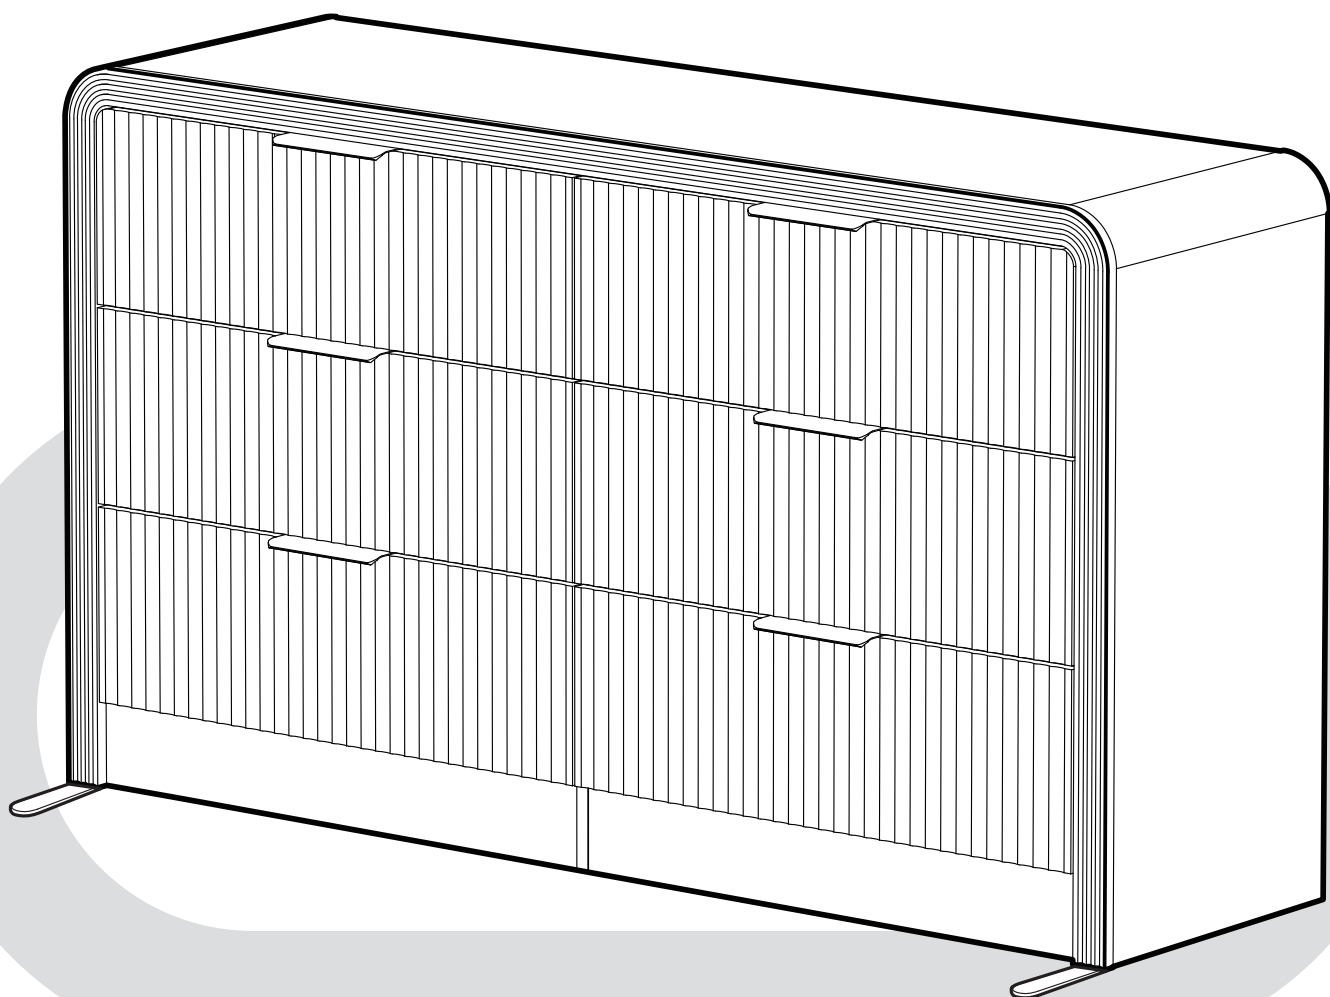






WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:


- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawer.

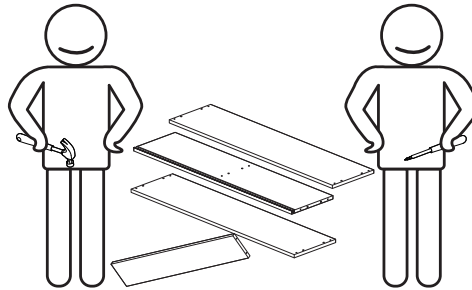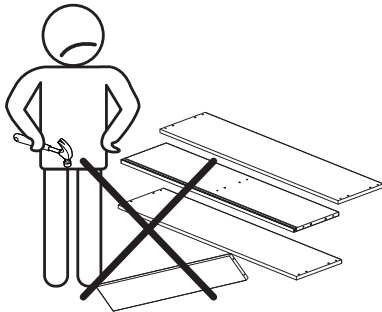

We recommend at least 2 people for the assembly.

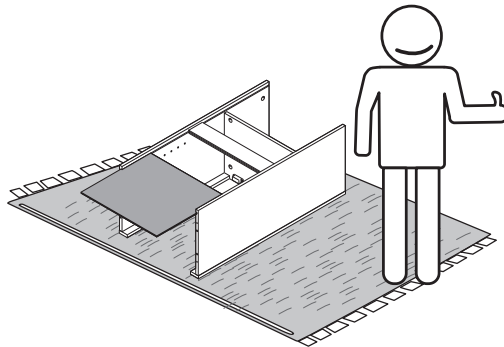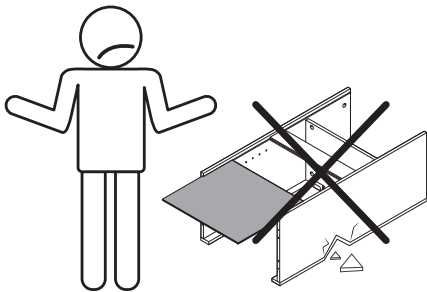


To prevent any damage during assembly, place a mat under the pieces.

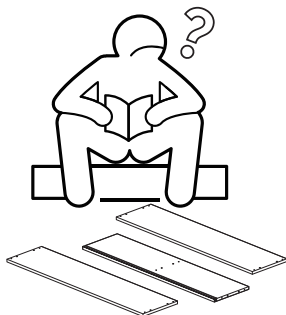


PARTS DIAGRAM




Check if all parts and hardwares are included.

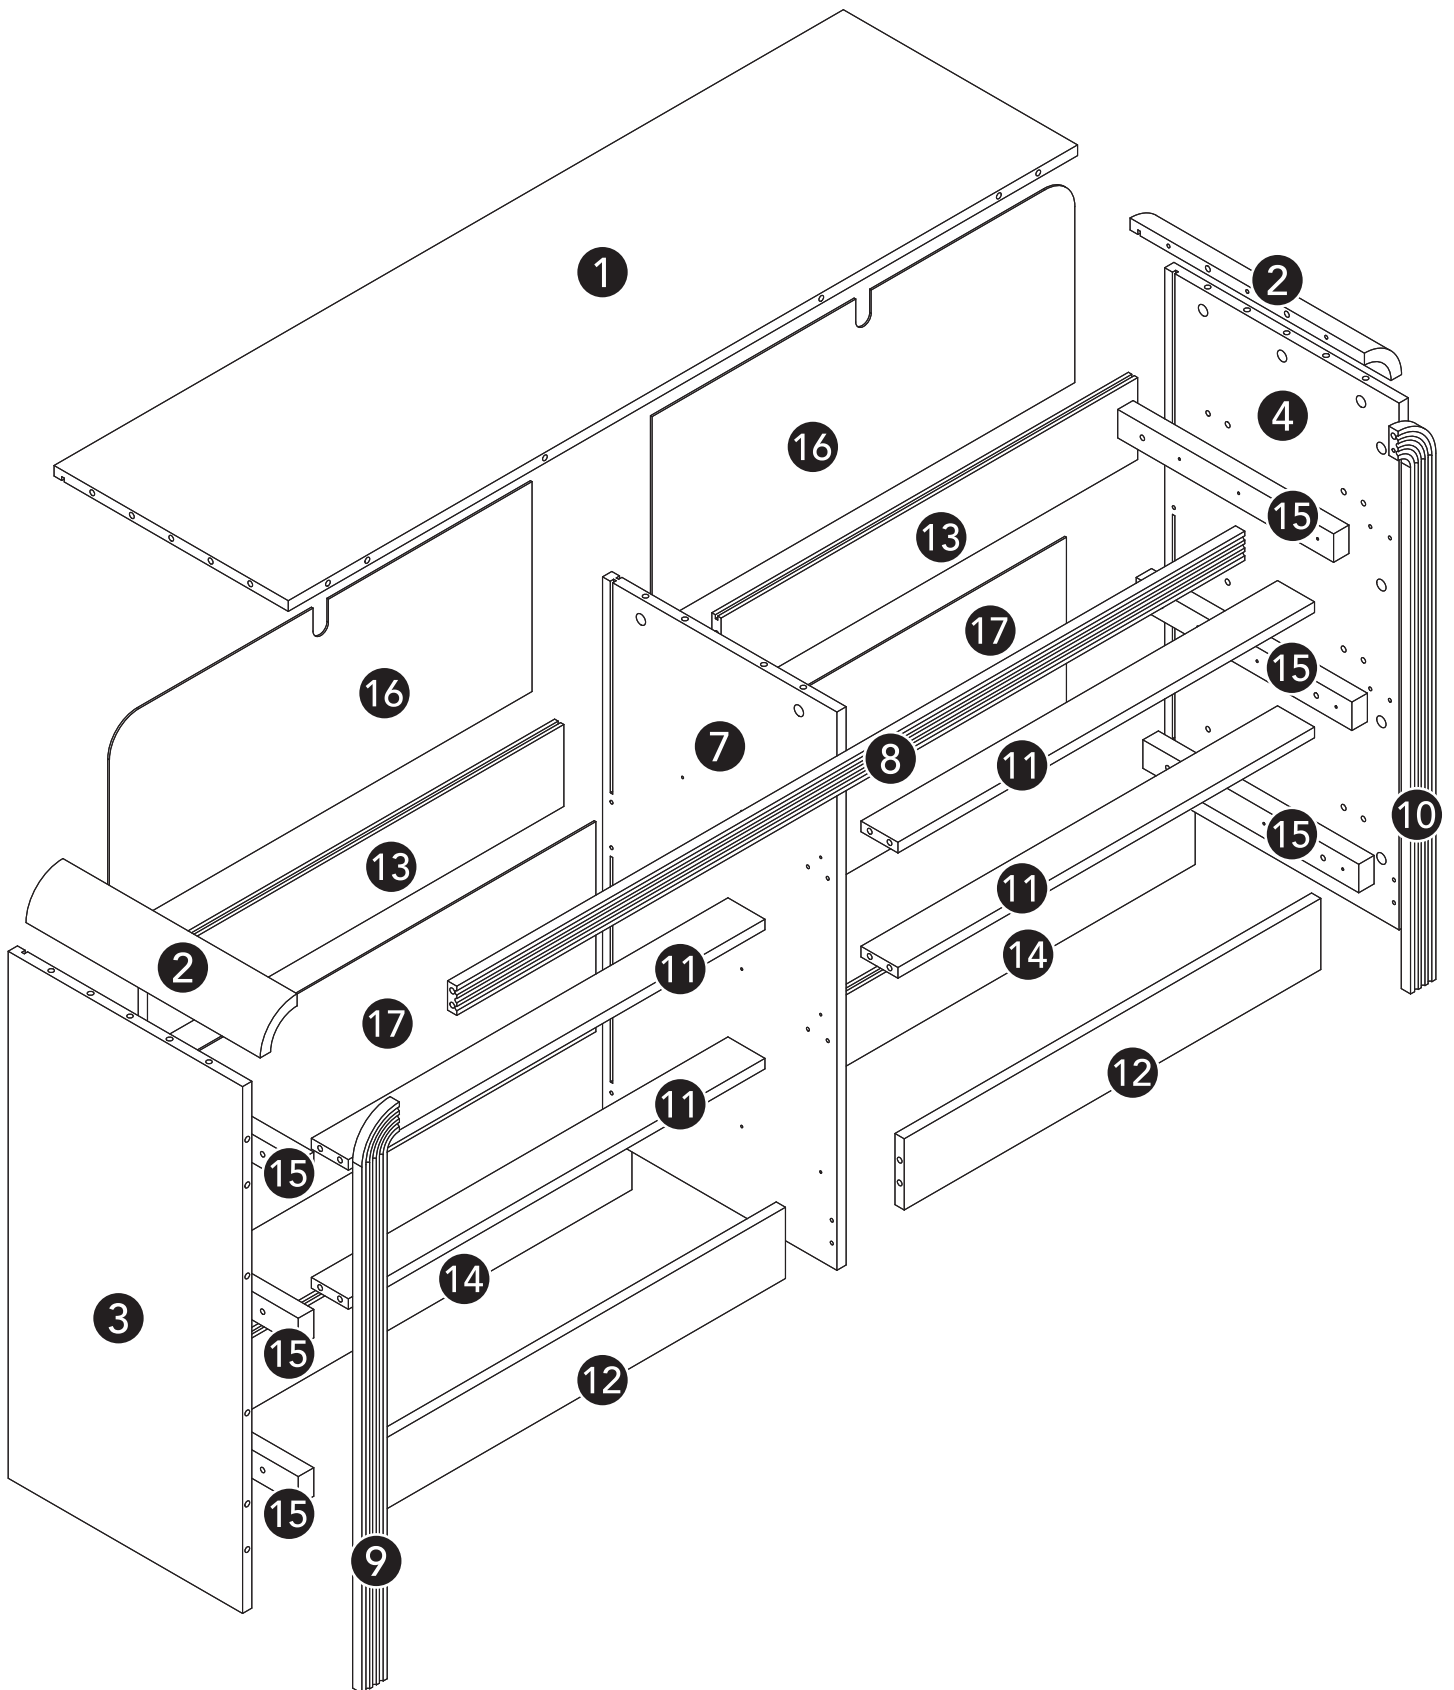

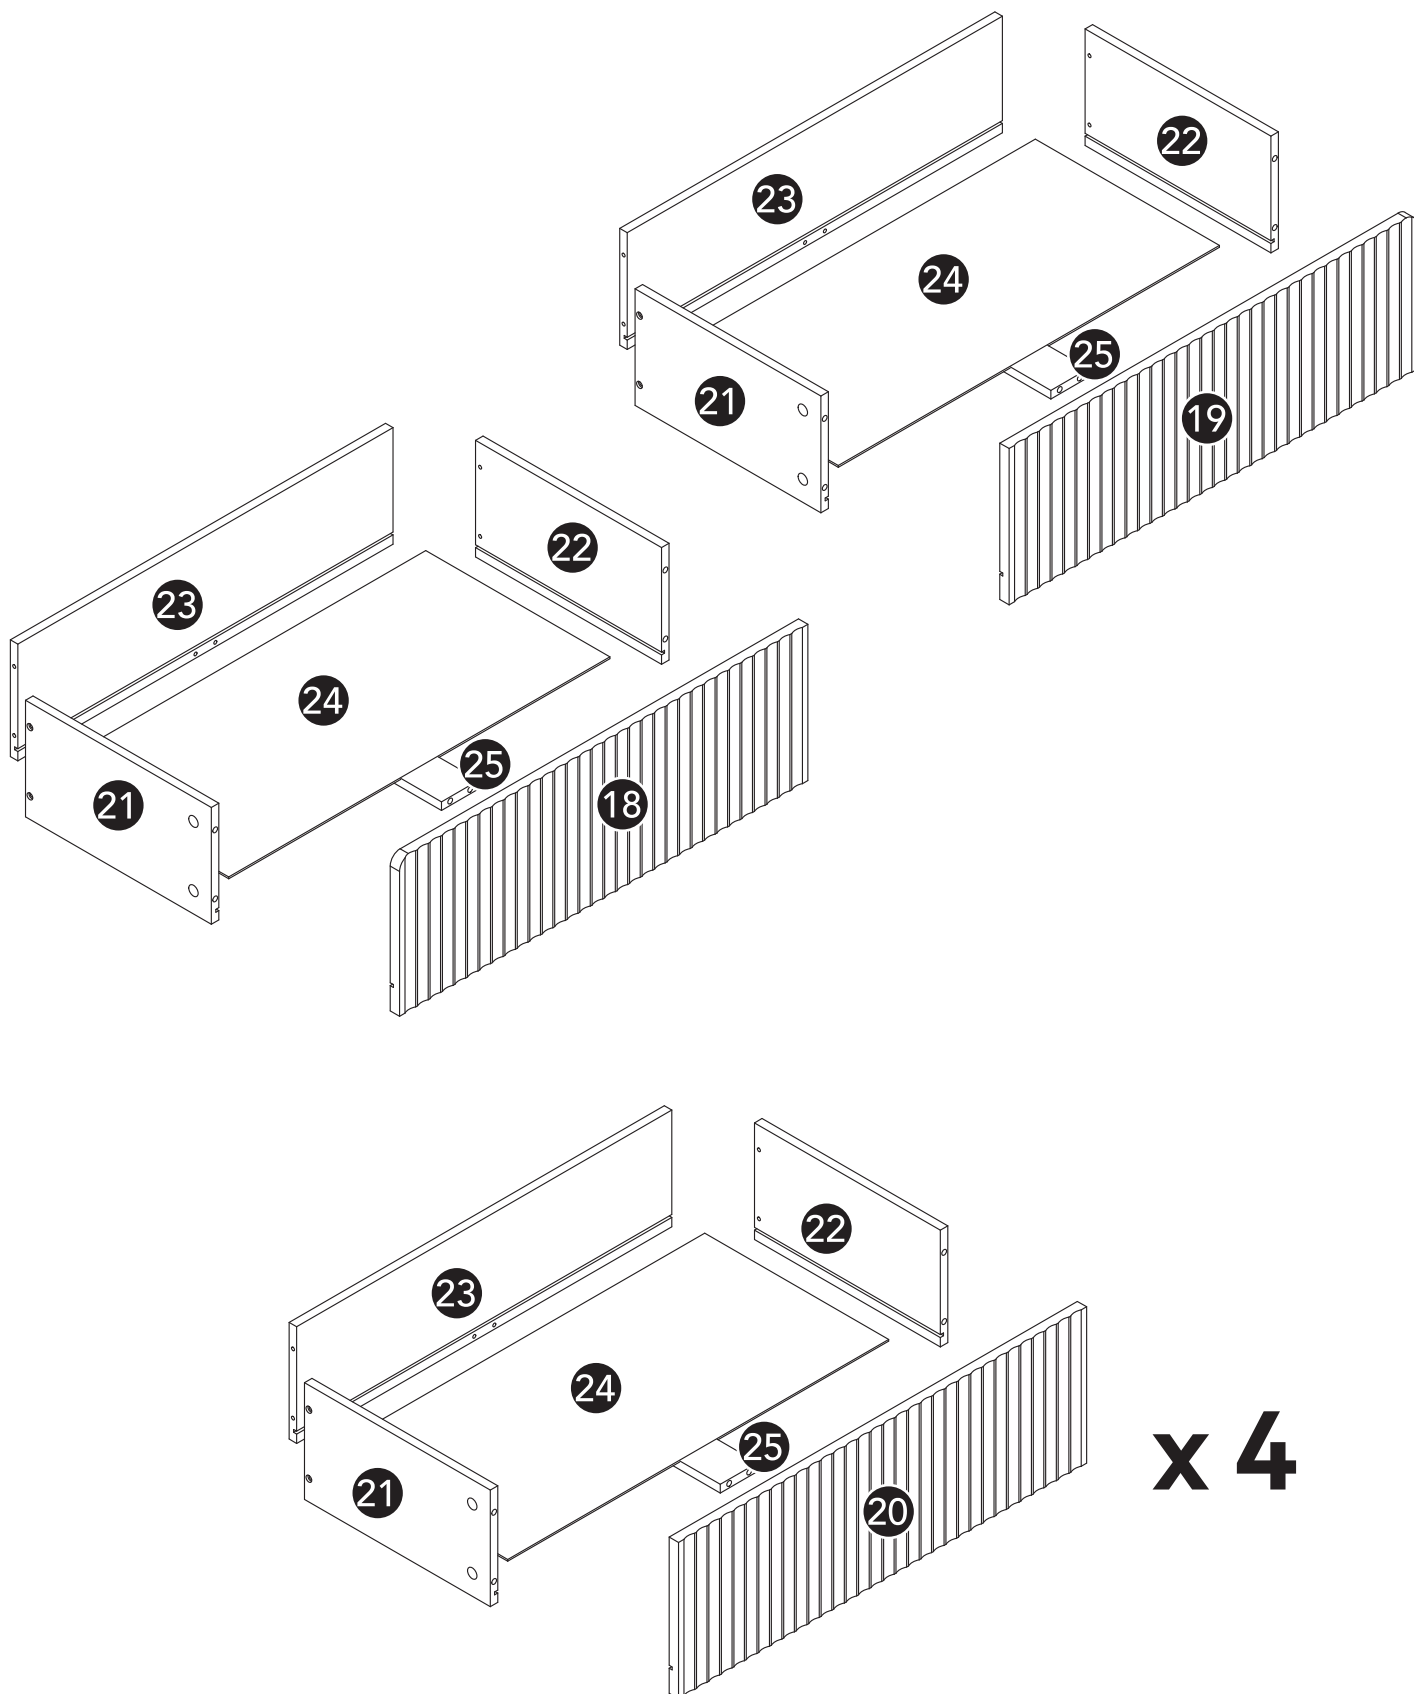

HARDWARES

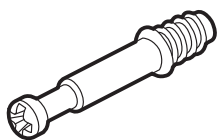


M6x35mm

A x 104




M15x10mm

B x 104

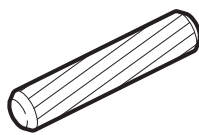

Ø8x30mm

C x 30

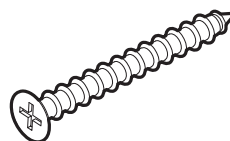


M4x35mm

D x 44



M3x12mm

E x 84

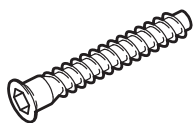


M7x30mm


F x 12



G x 16

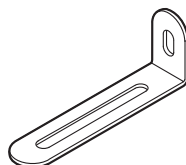


H x 2




M4x12mm

I x 2

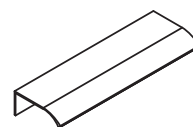

J x 6

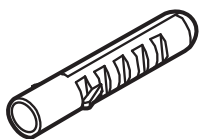


K x 2




Ø20mm

L x 104

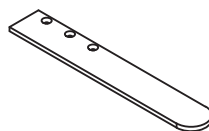


M x 1

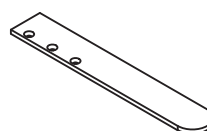

N x 1




O x 1

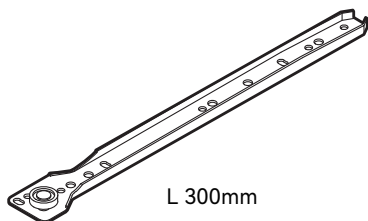


L 300mm

CL x 6

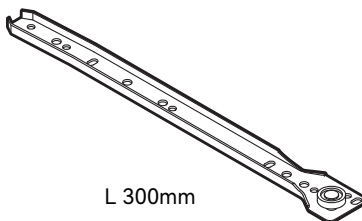


L 300mm

CR x 6

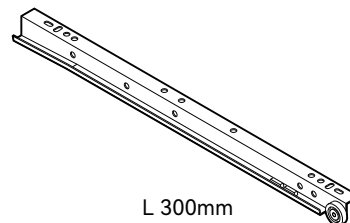


L 300mm

DL x 6

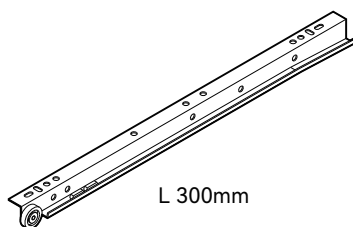


L 300mm

DR x 6

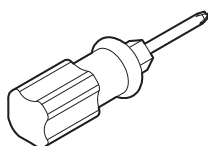

x 1

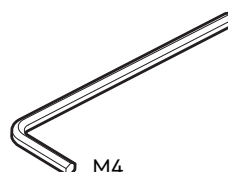


M4

x 1

SPARE PARTS



The spare parts are the additional parts provided in case of missing or damaged ones. Keep the spare parts and tools for future use.

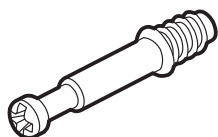


M6x35mm

A x 3




M15x10mm

B x 3

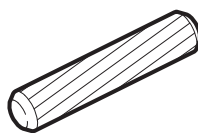

Ø8x30mm

C x 3

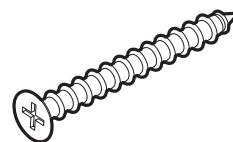


M4x35mm

D x 3



M3x12mm

E x 3

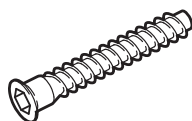

M7x30mm

F x 2



G x 3



Ø20mm



L x 3

CAM LOCK FASTEN SYSTEM




Insert the cam bolt into the hole, then insert the cam lock and tighten.



1

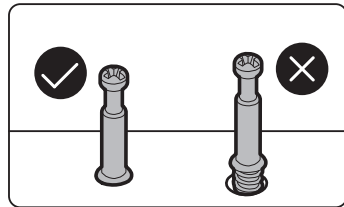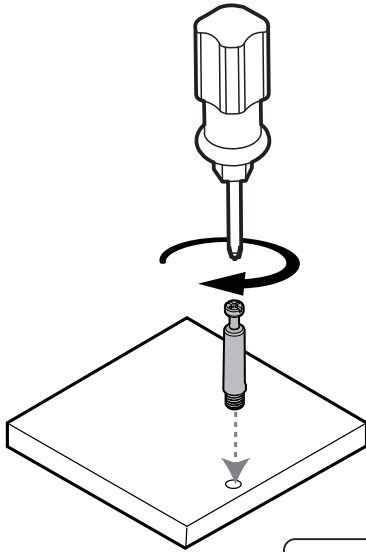

2


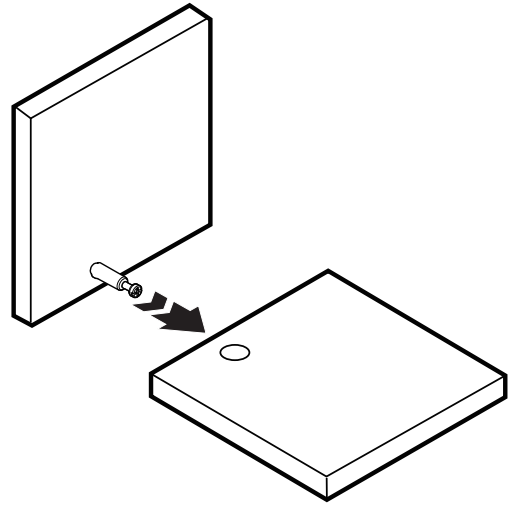


3

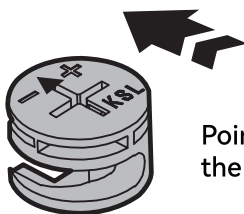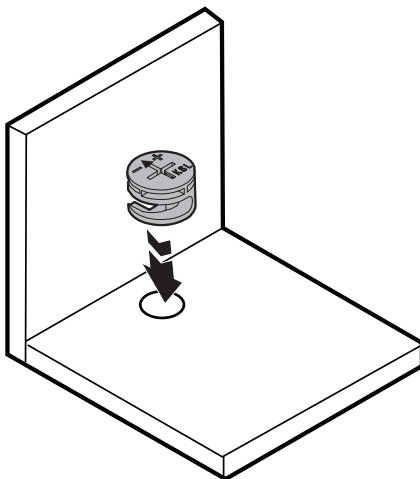


Point the opening towards the edge of the board.

4

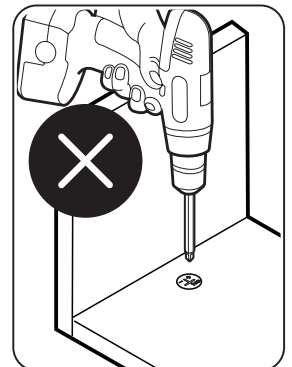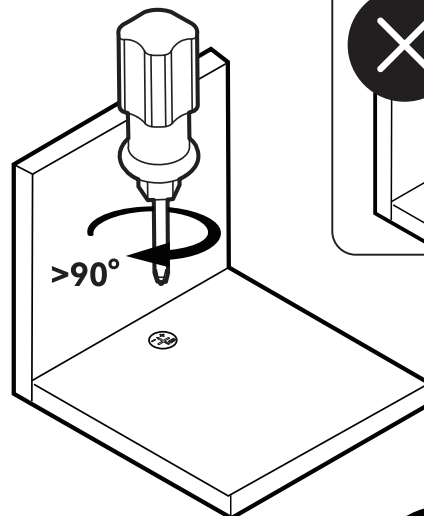




UNLOCK

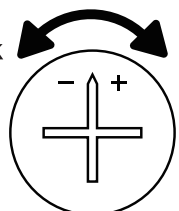




LOCK

ASSEMBLY





1

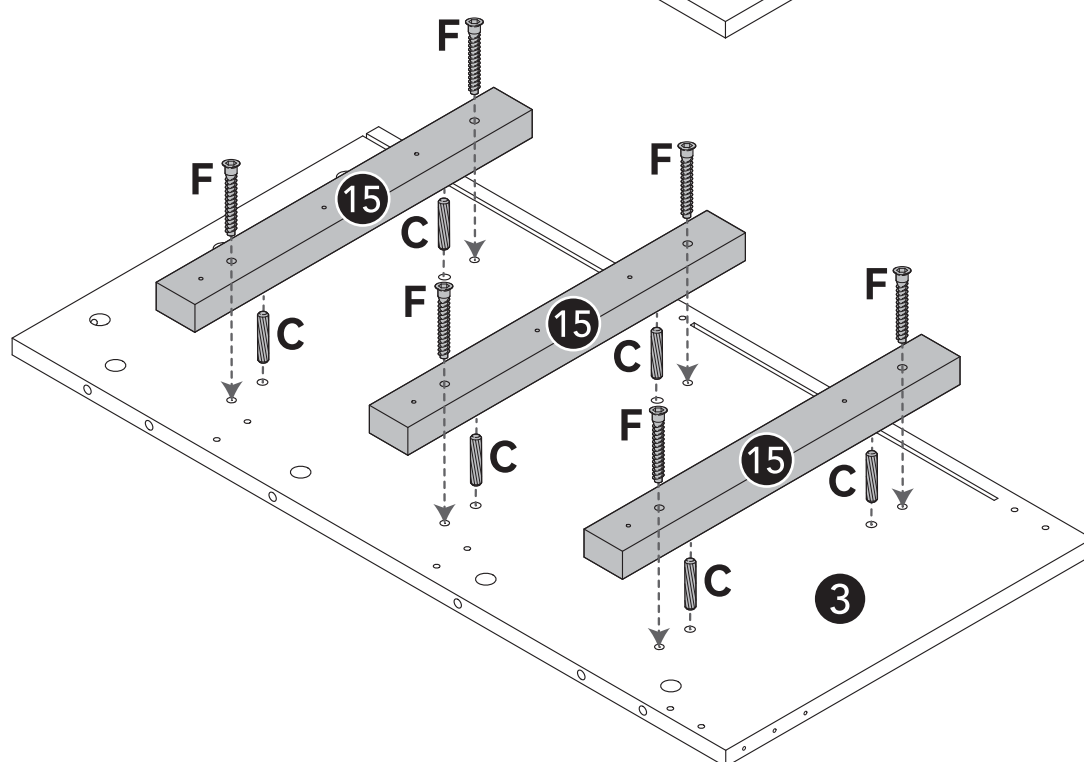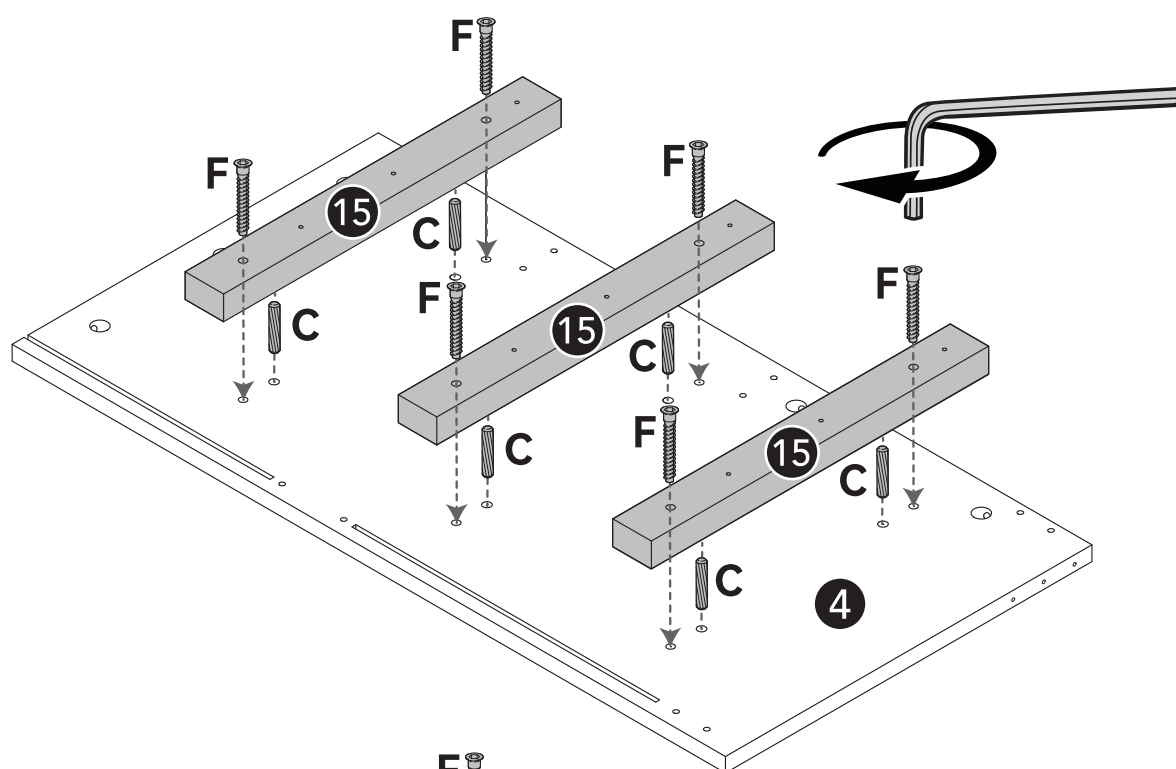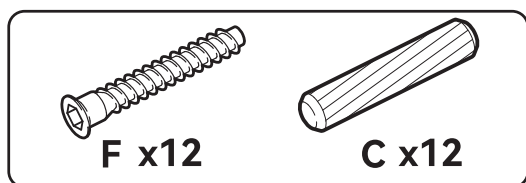






2

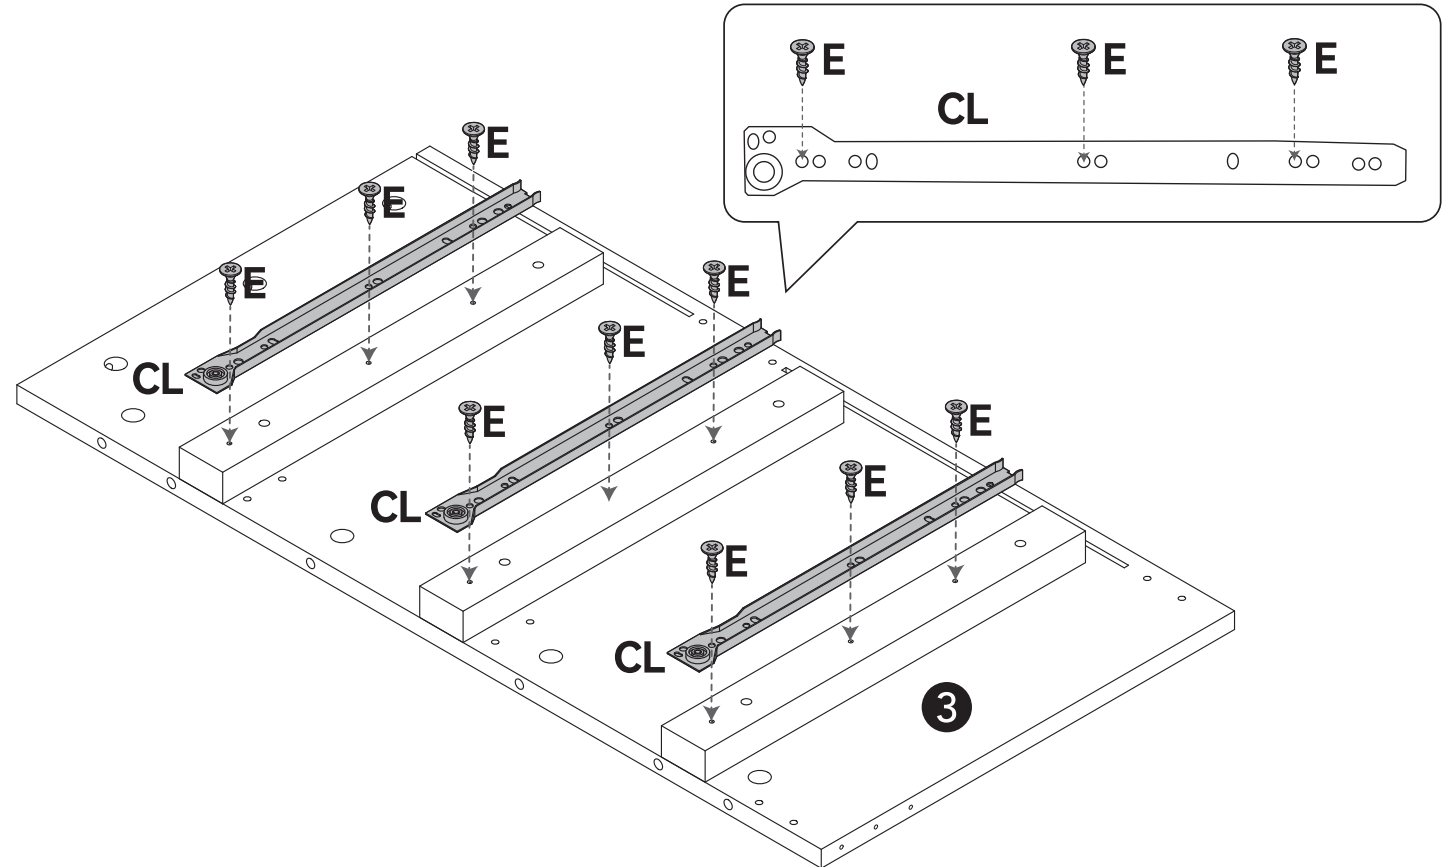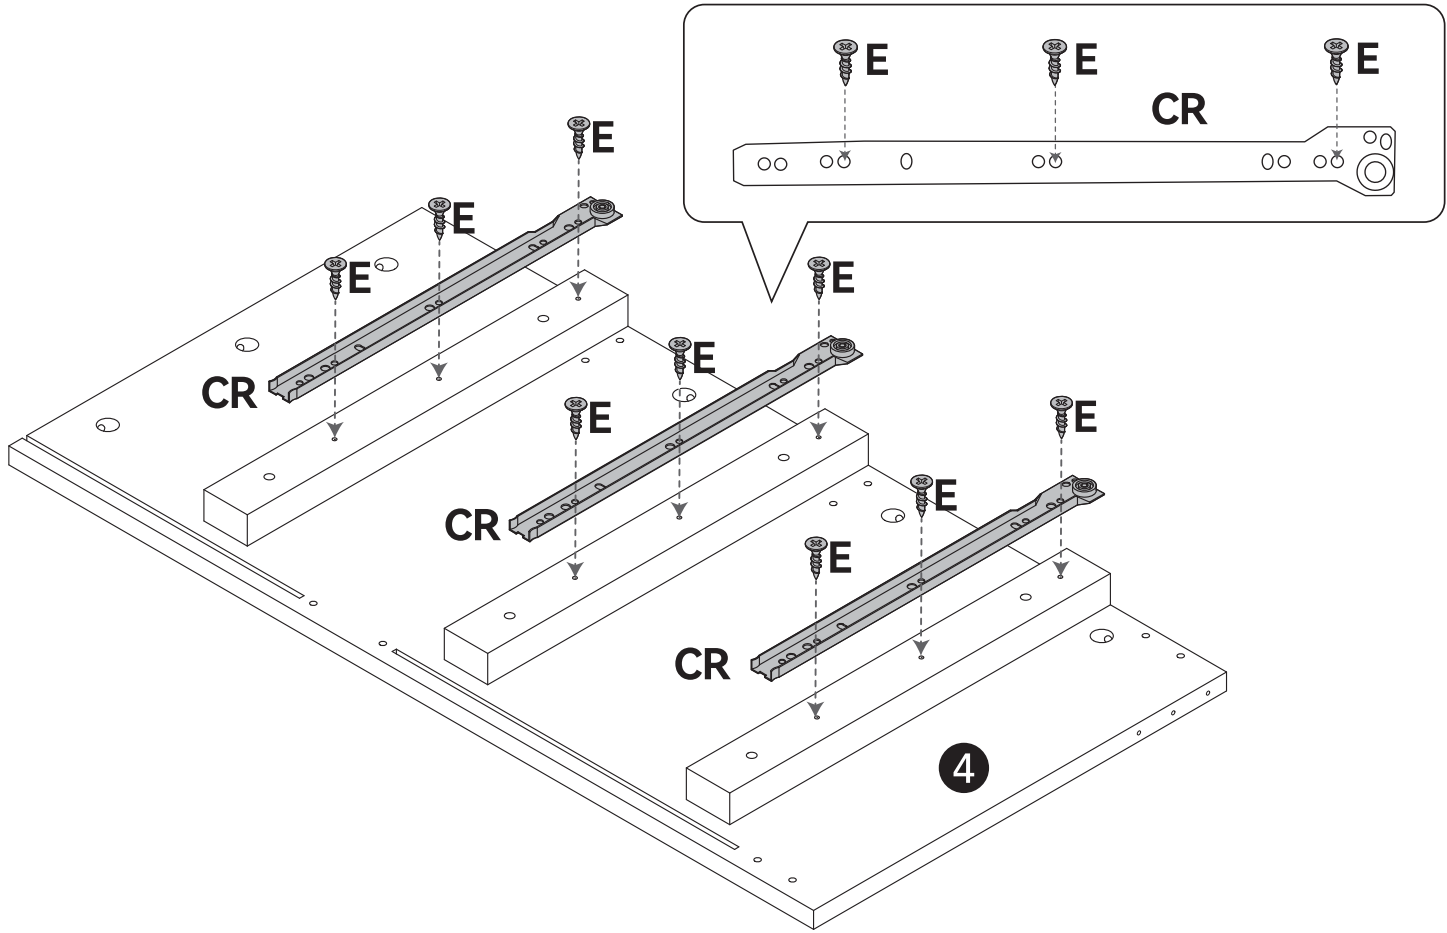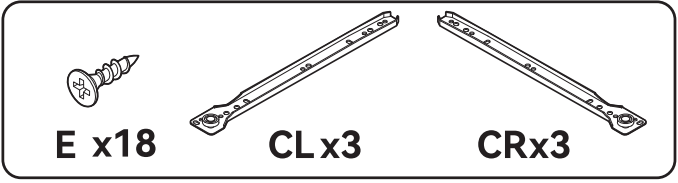





3

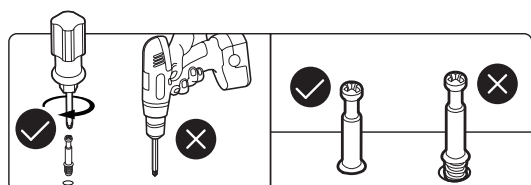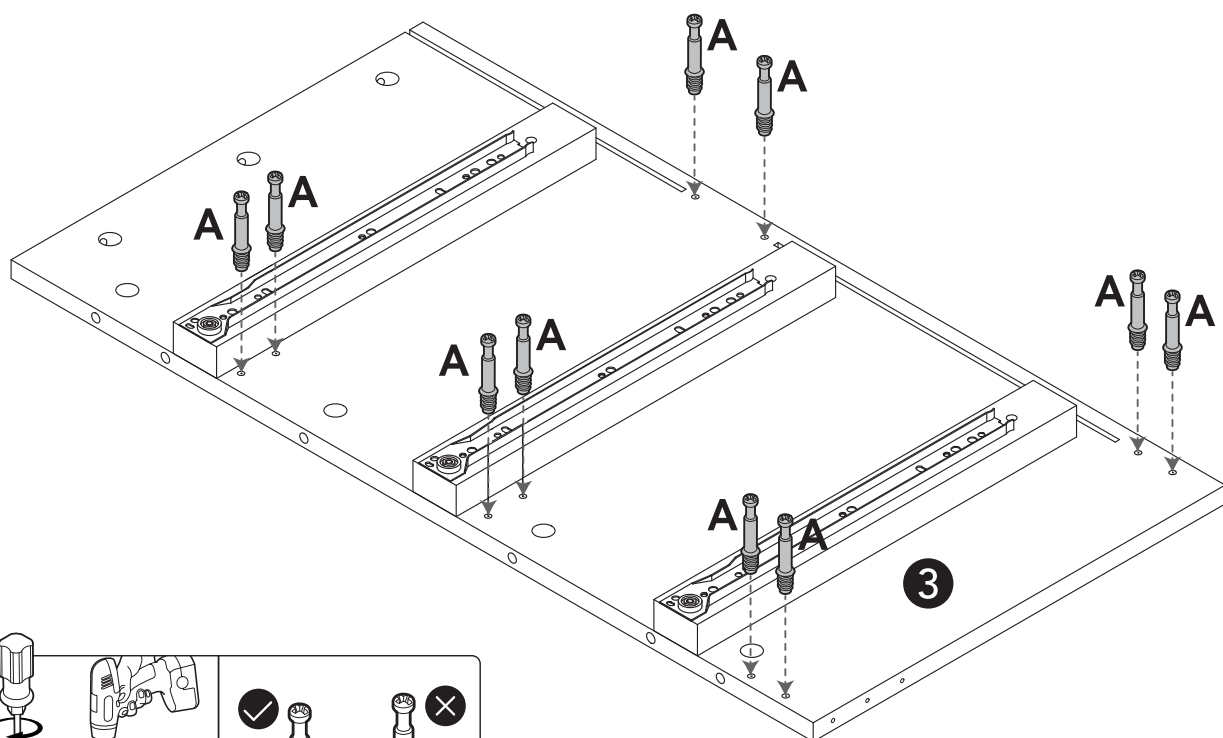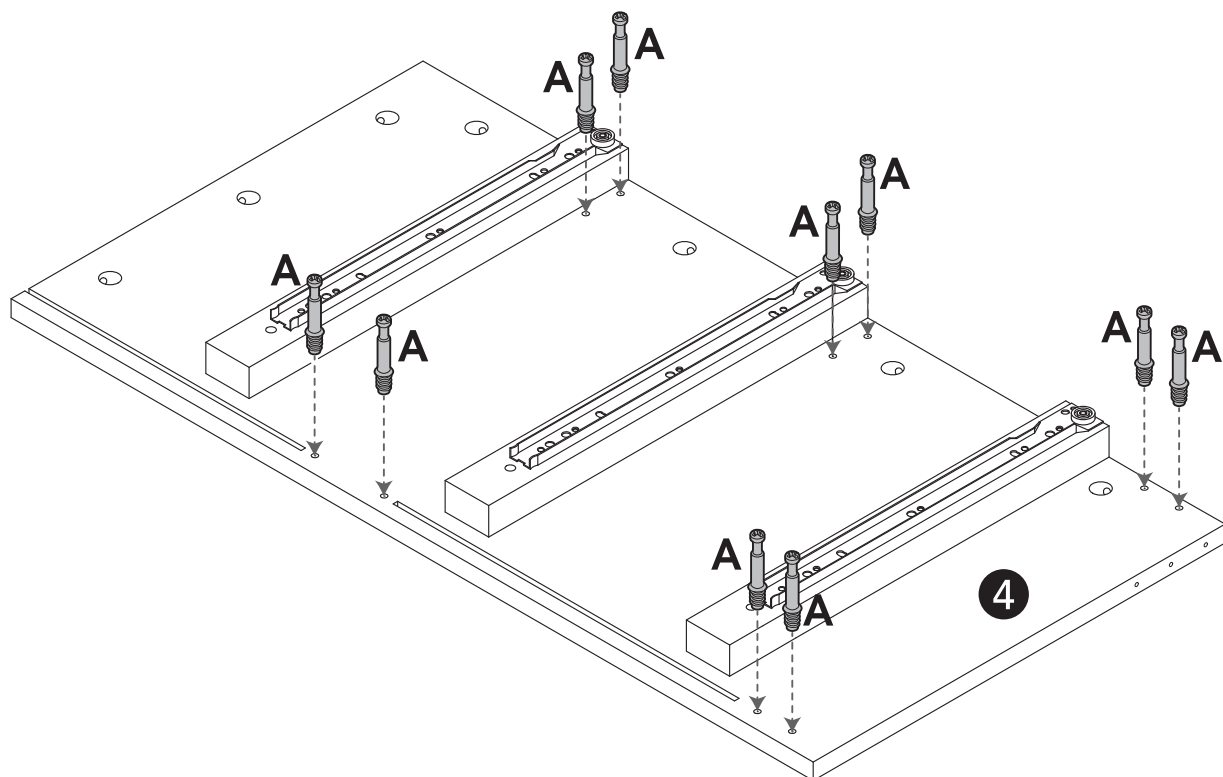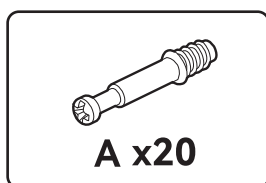



4

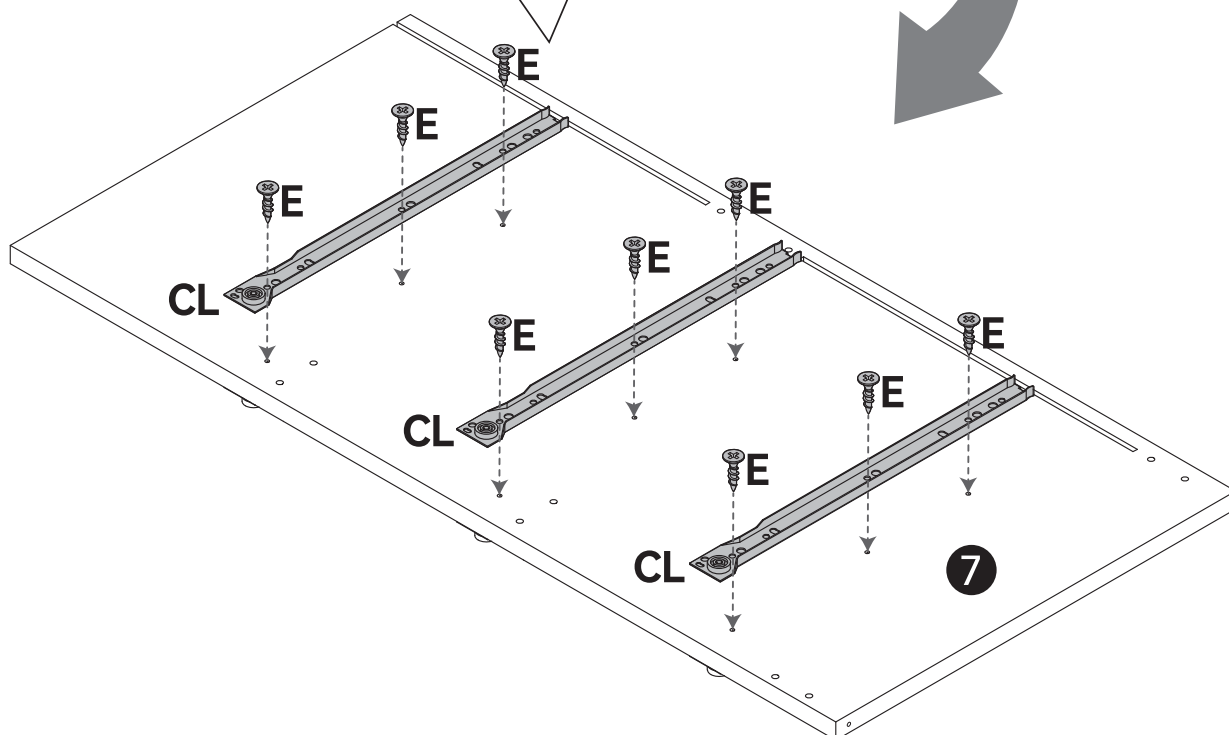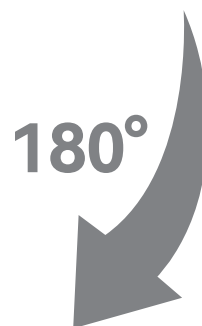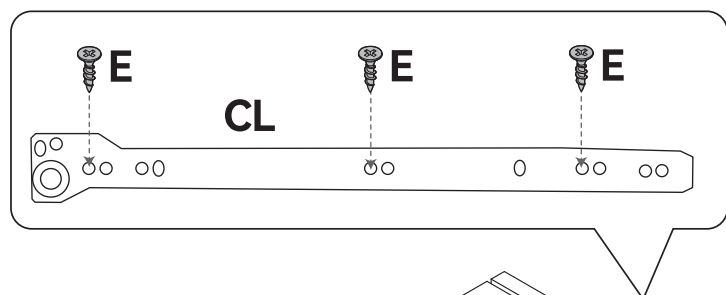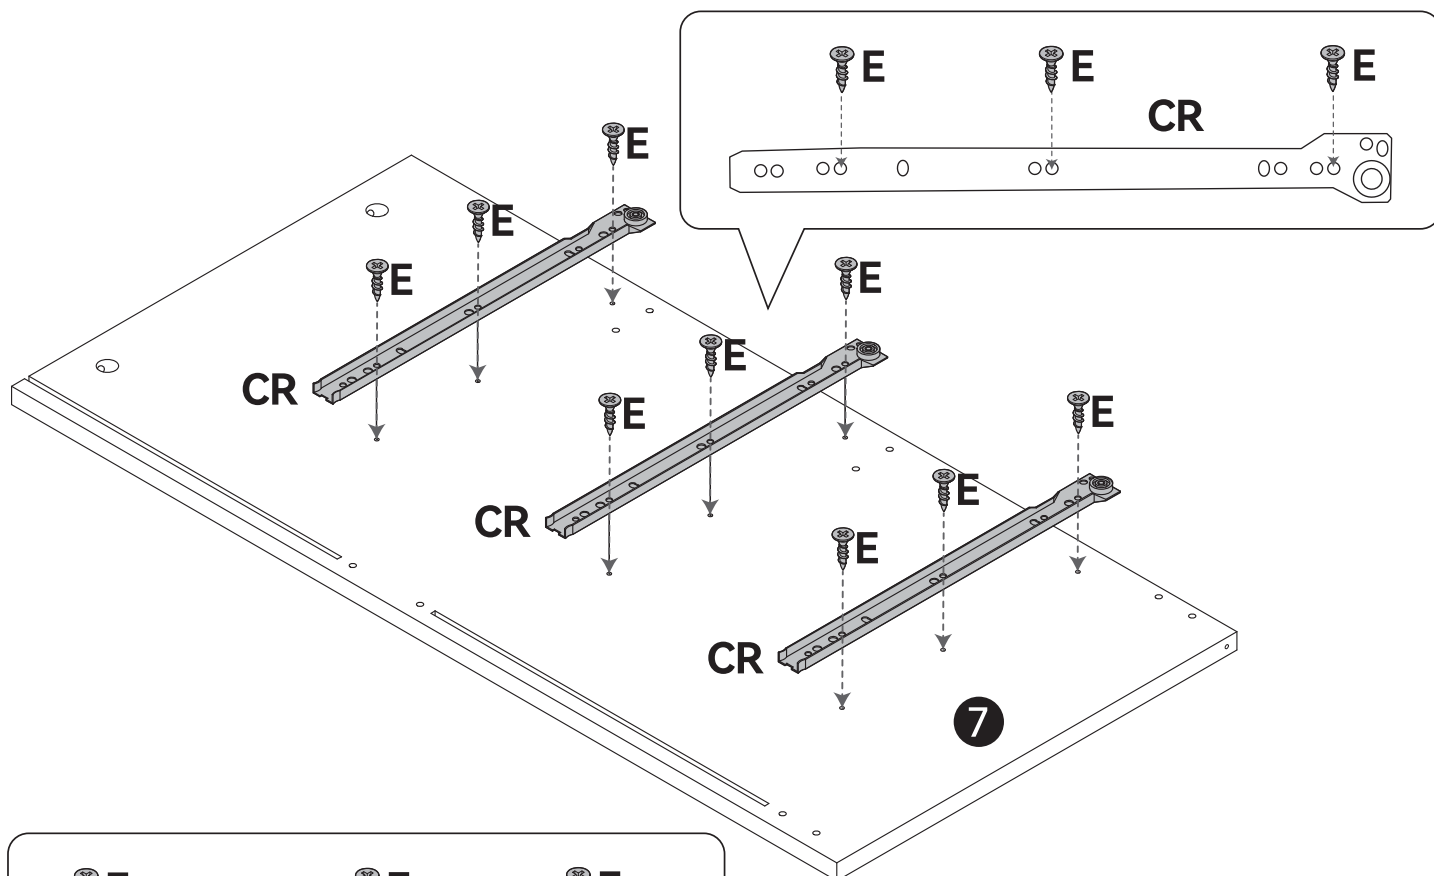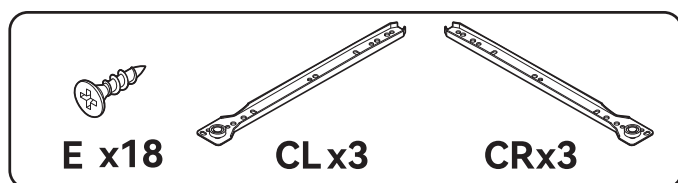


5

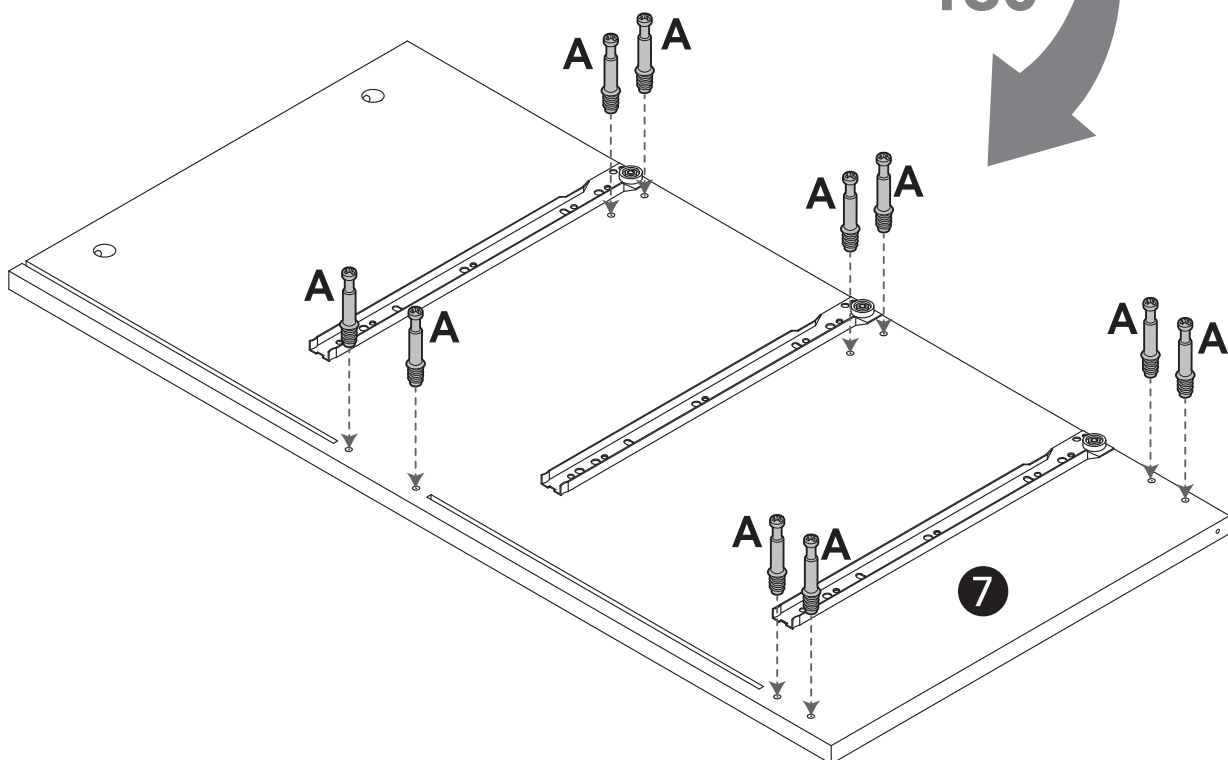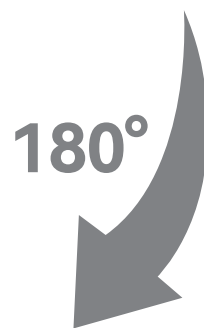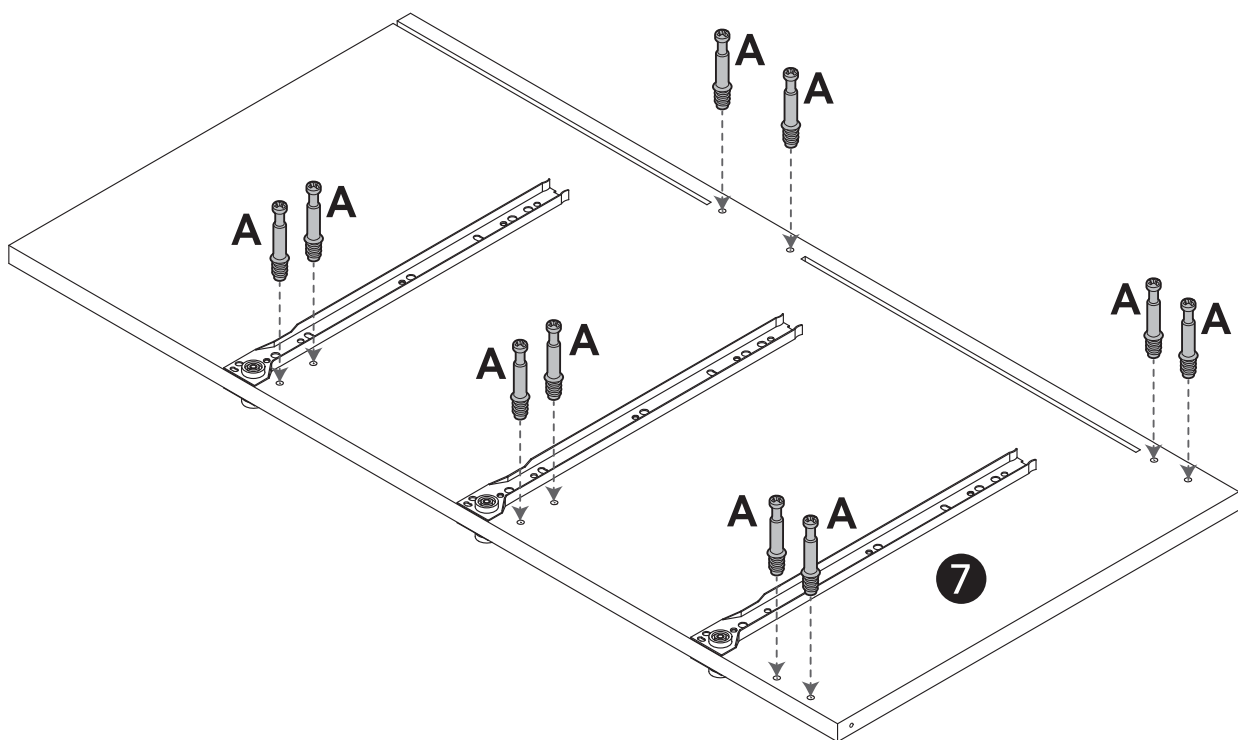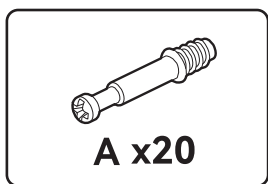



6

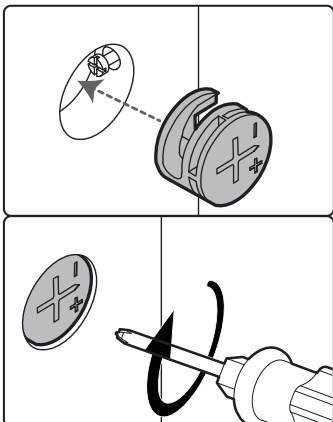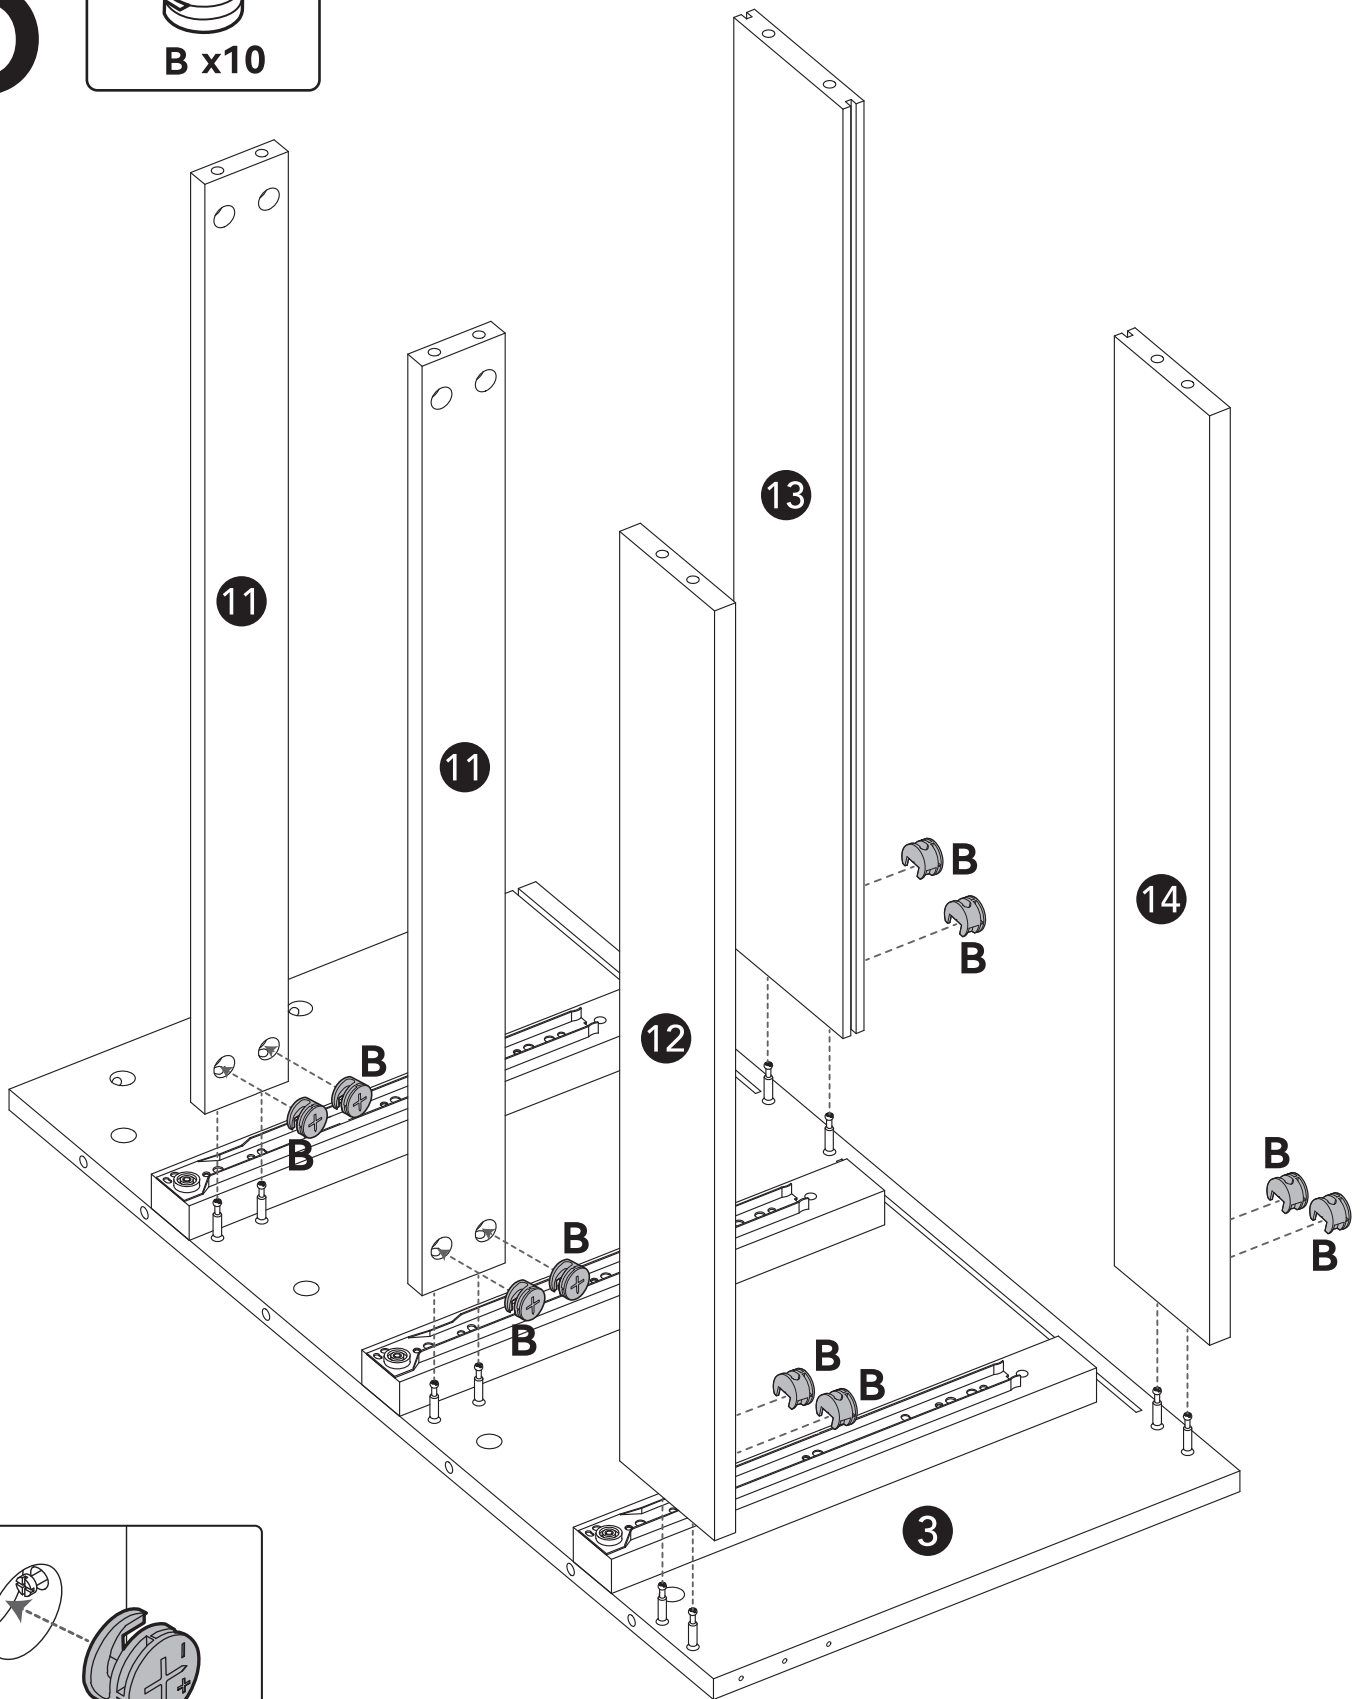



7

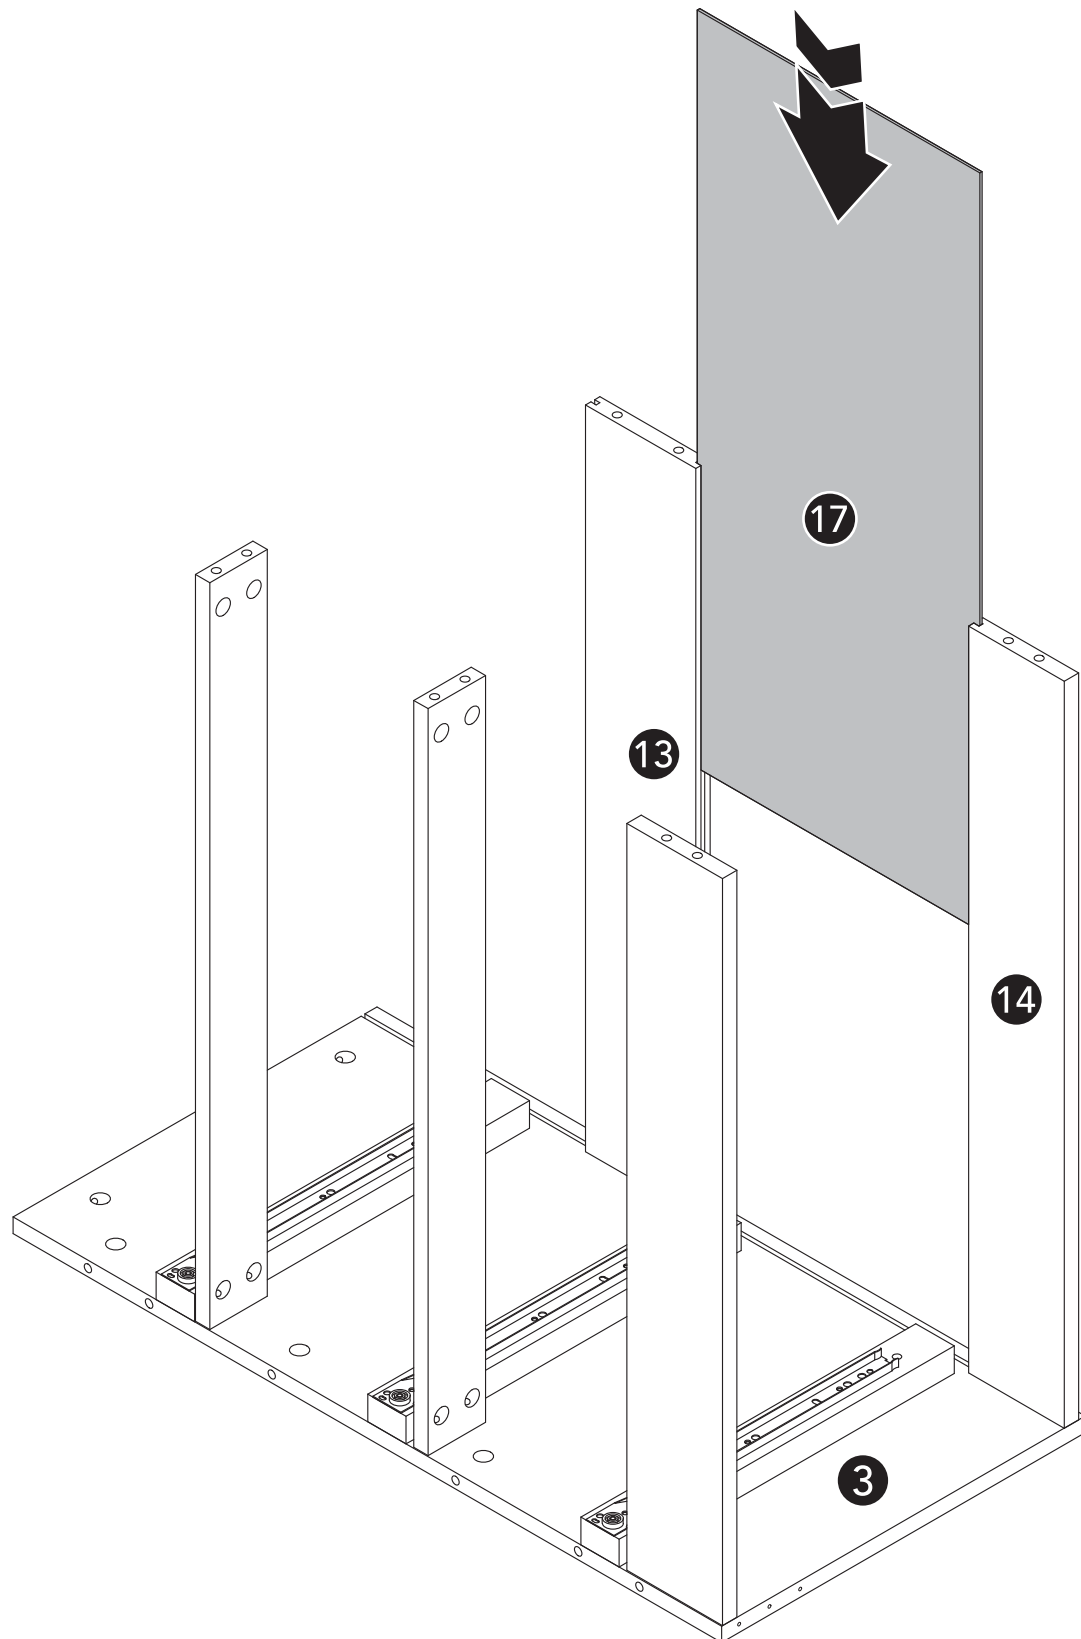


8

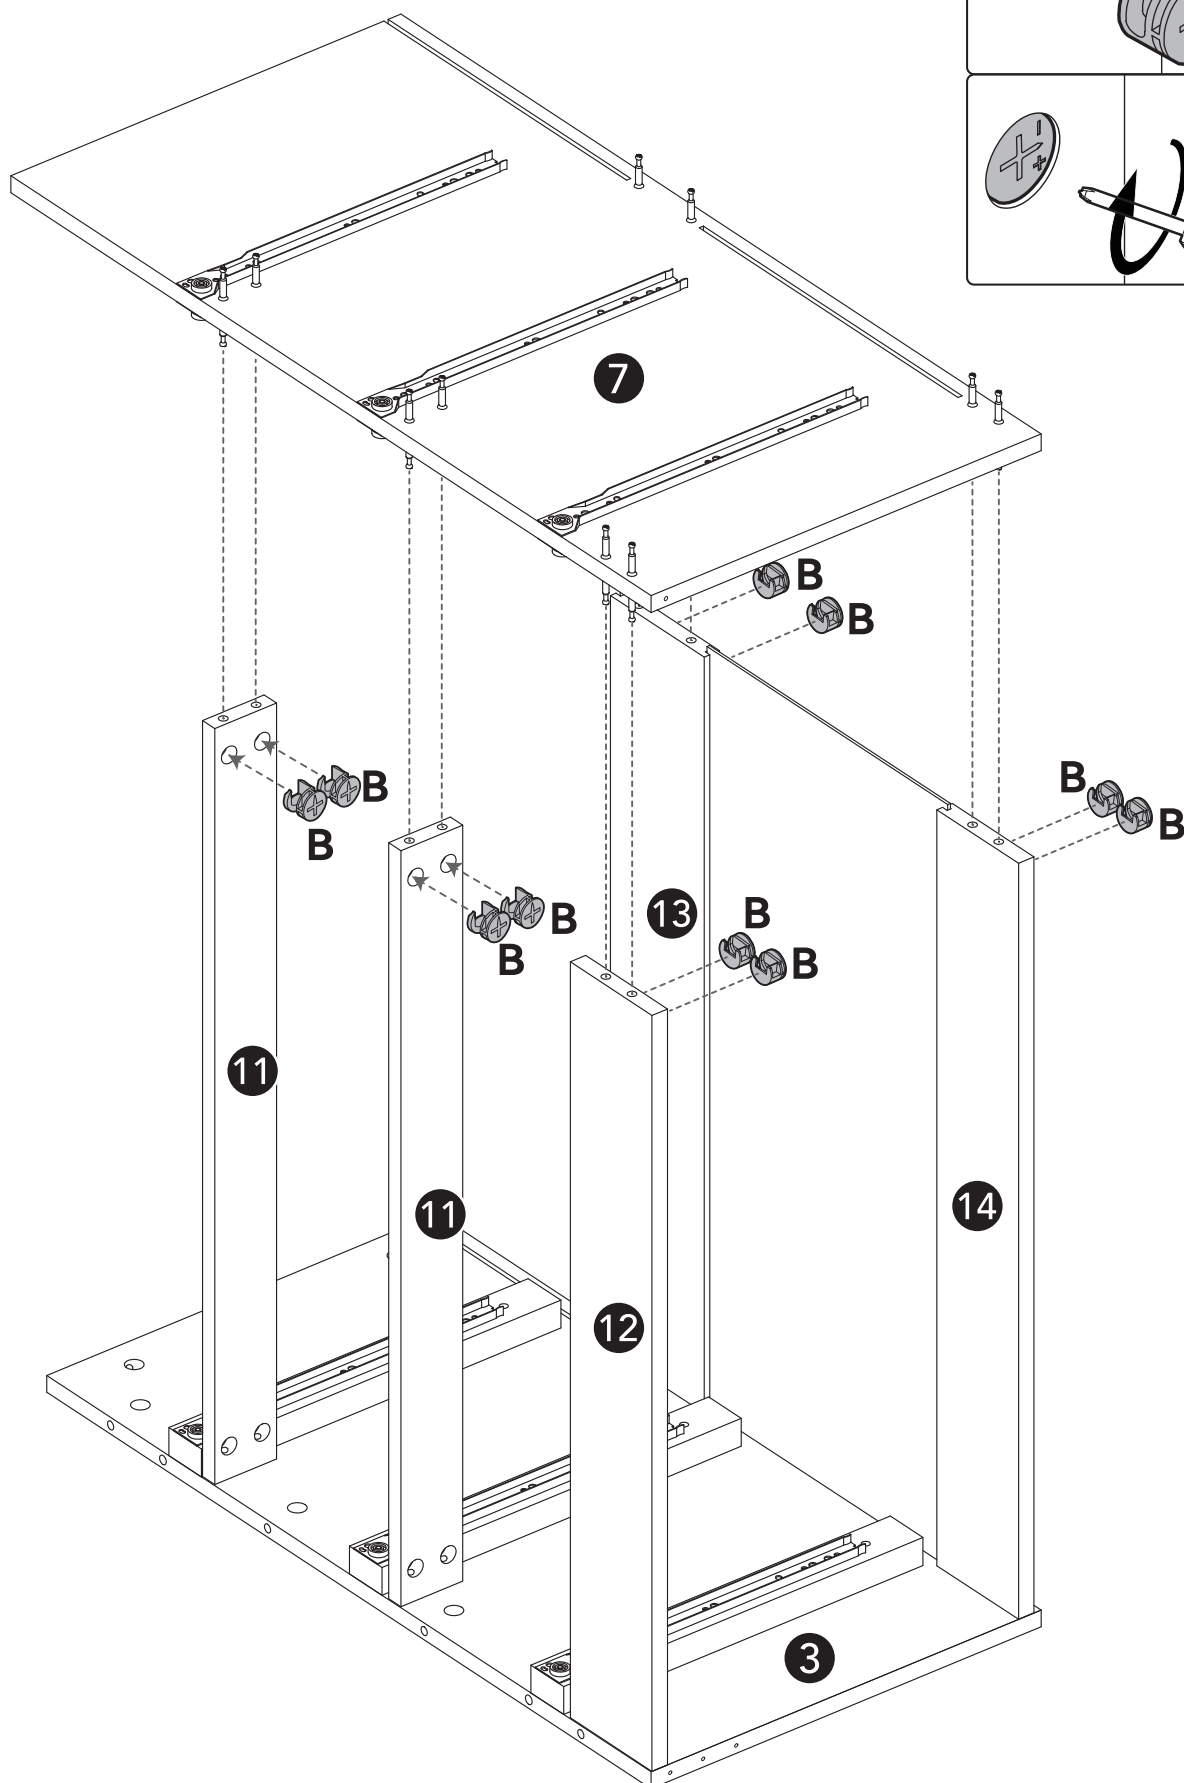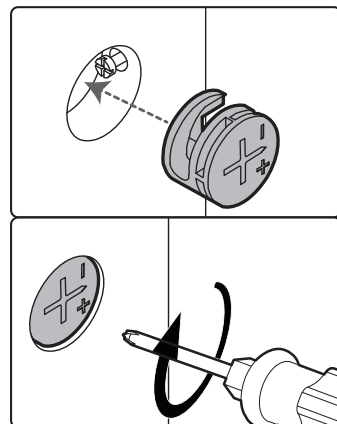



9

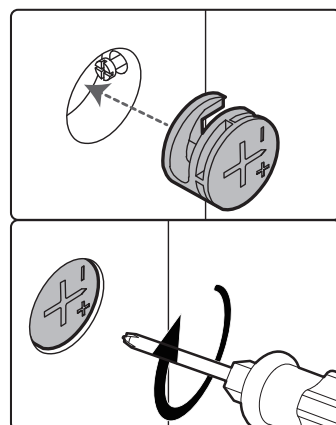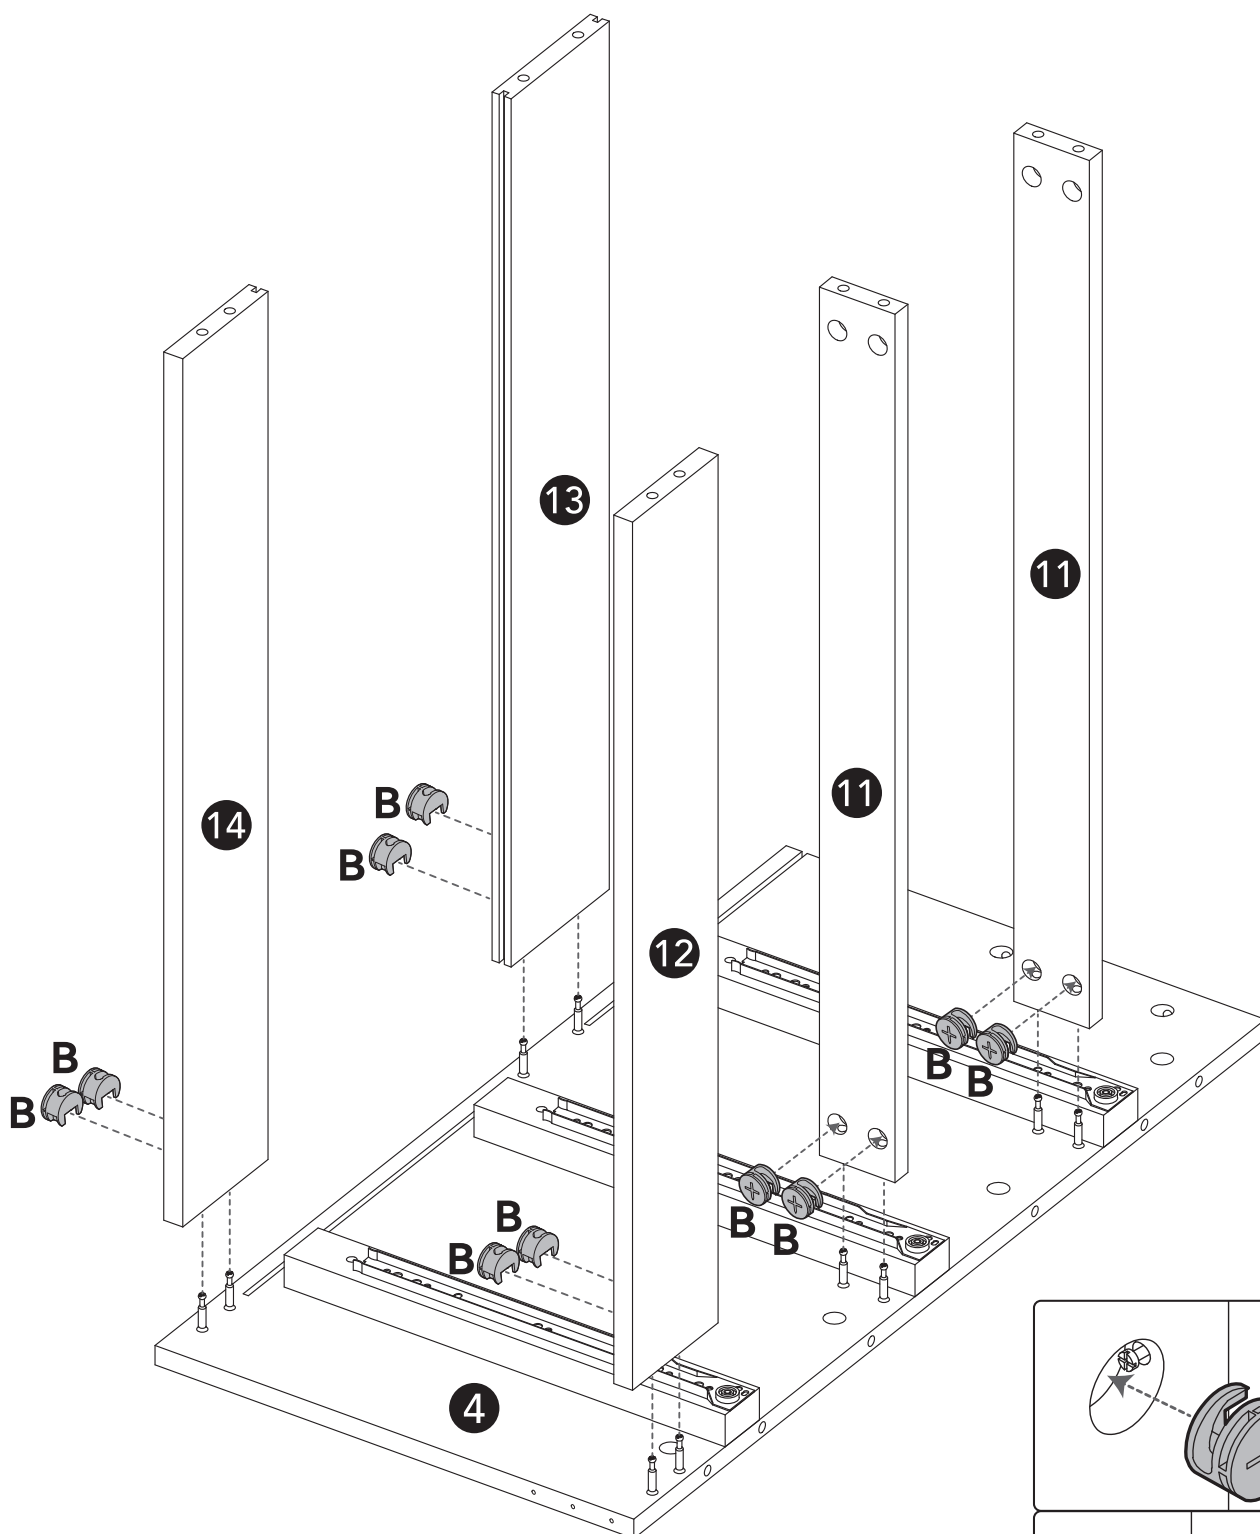



10

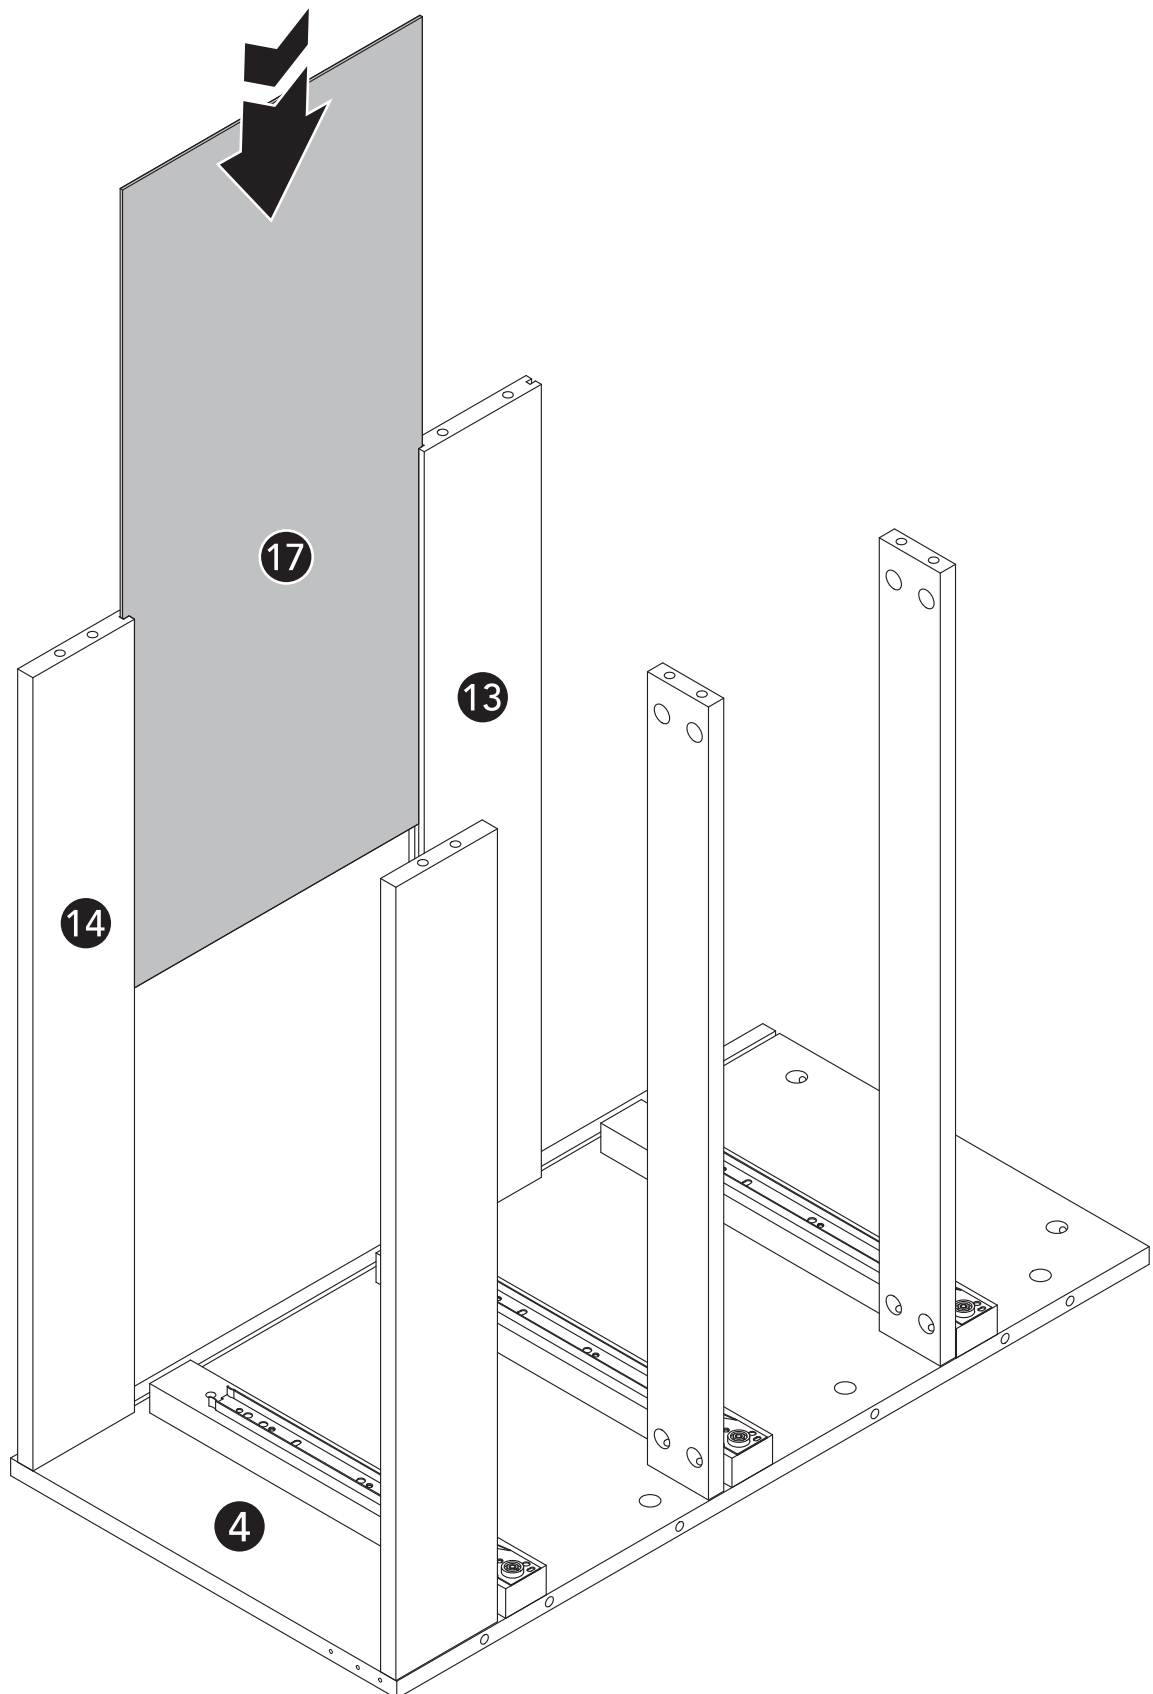



11

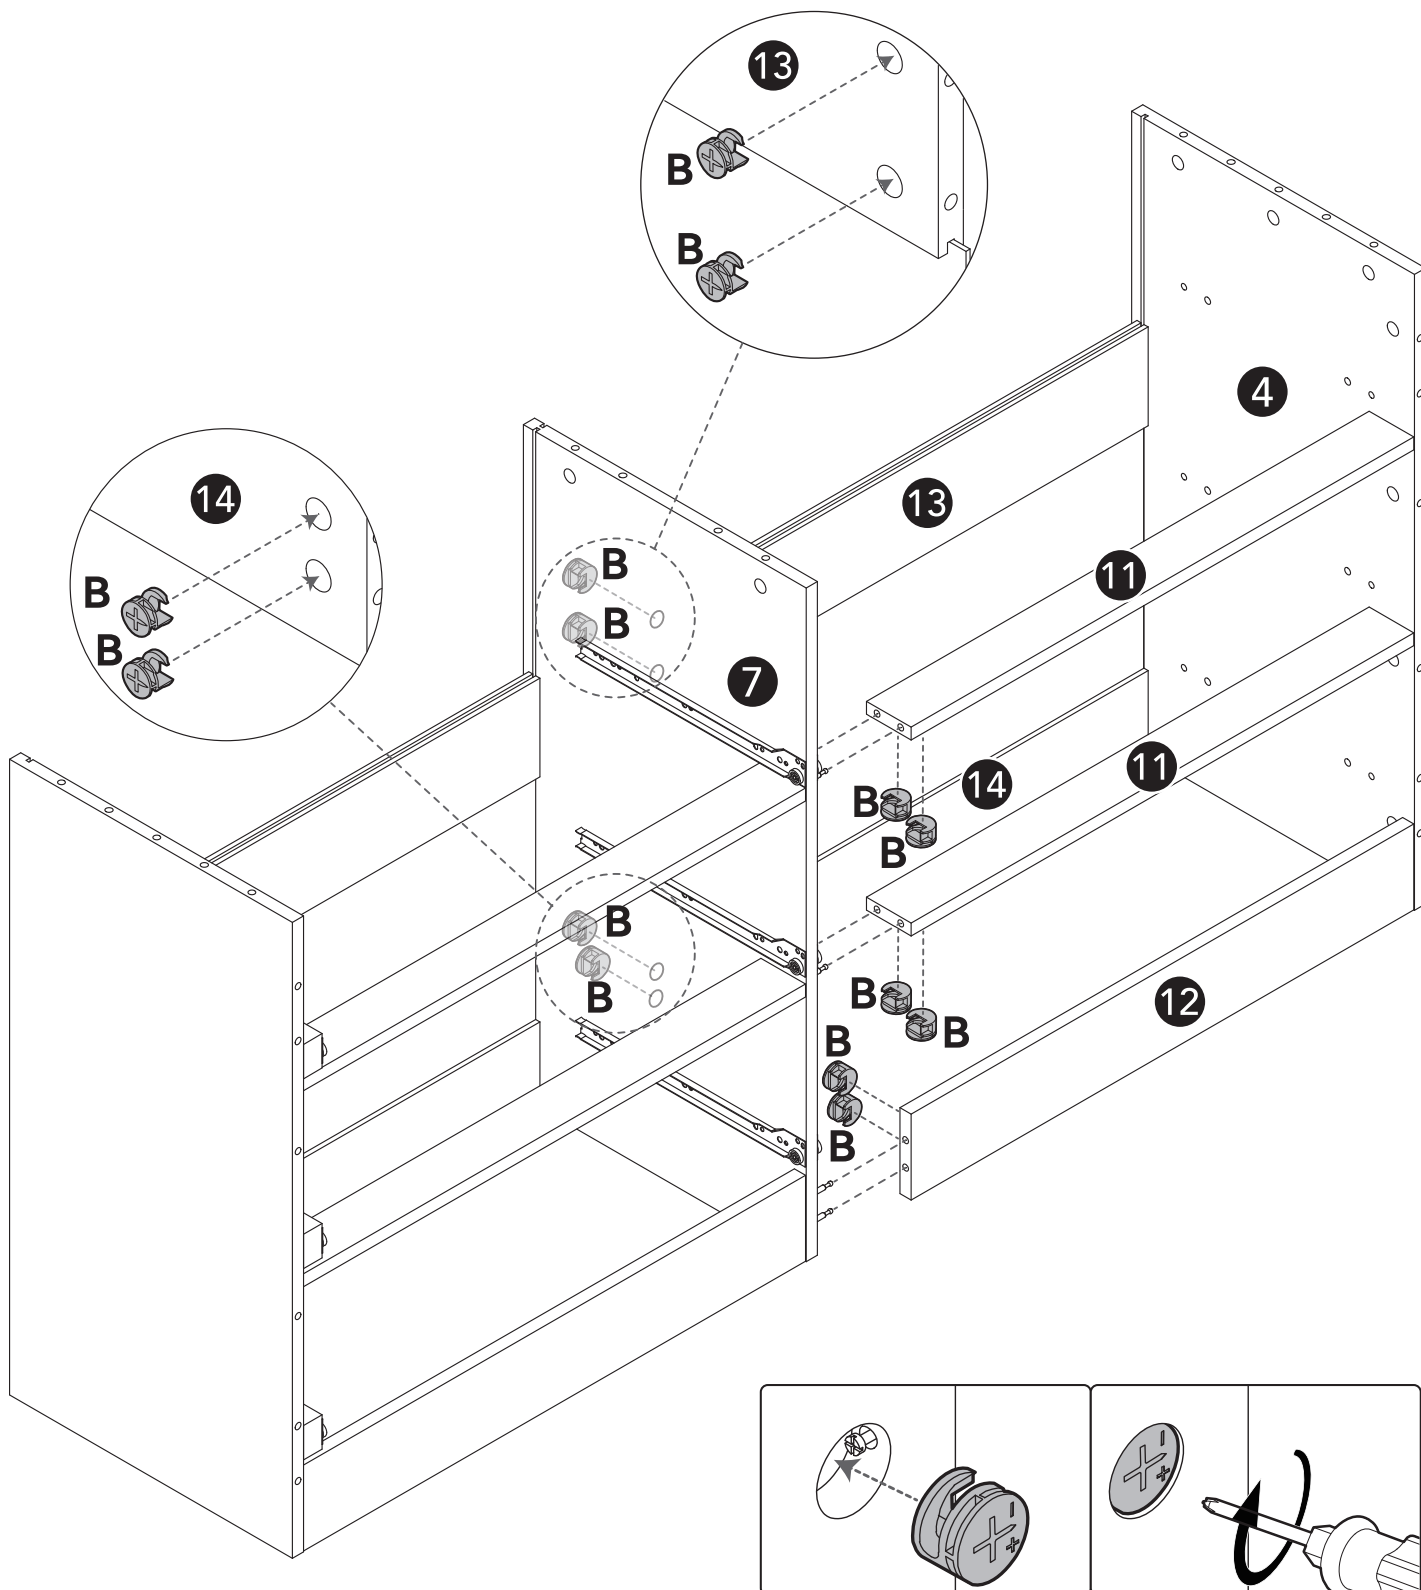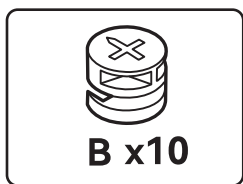



12

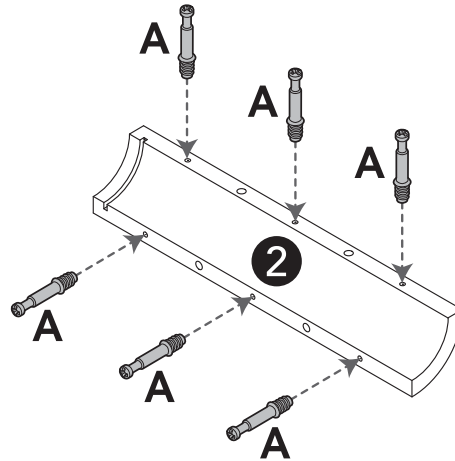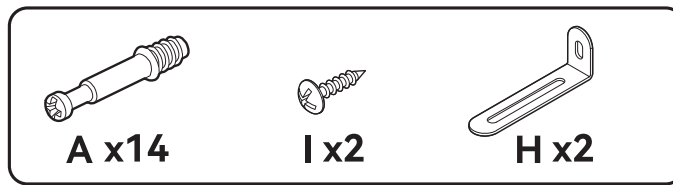


x 2

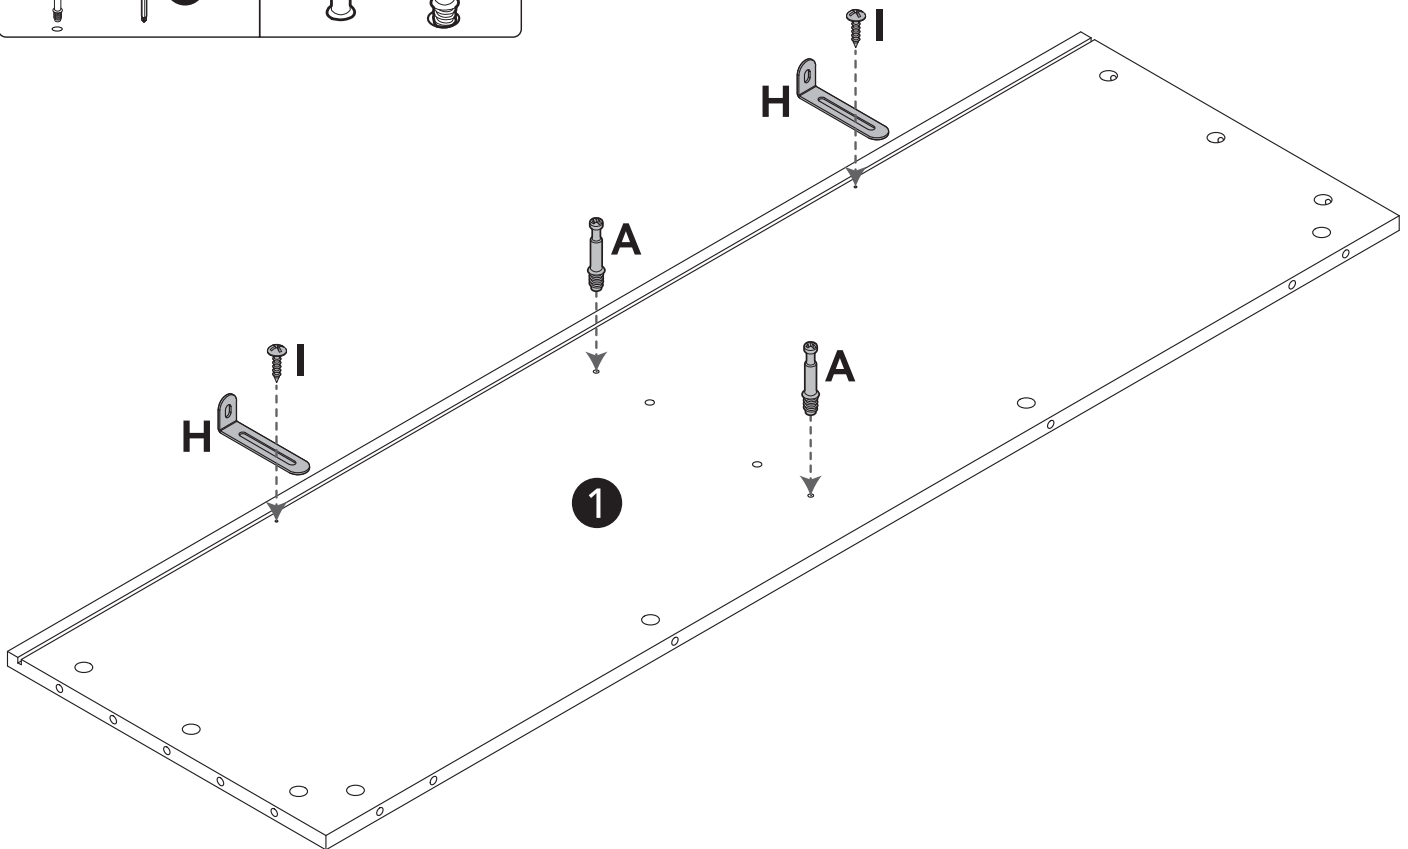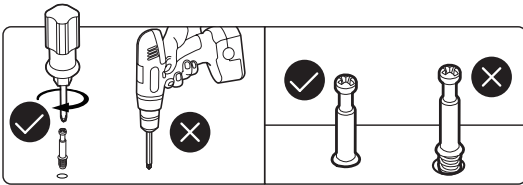




13

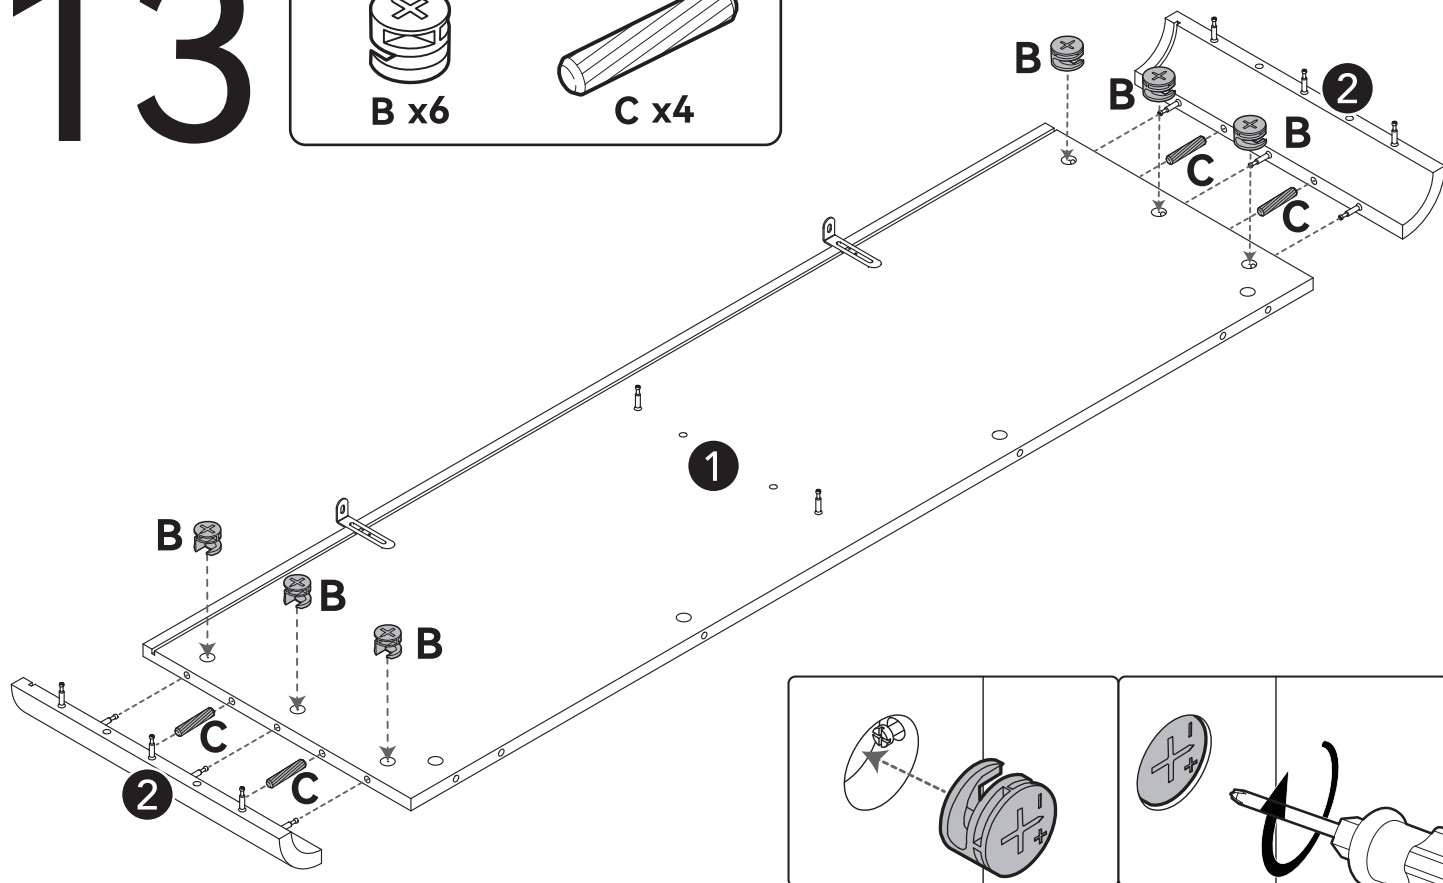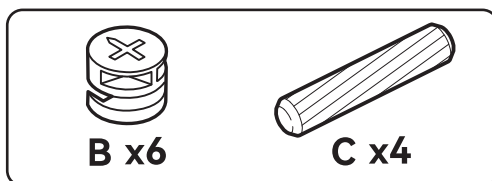




14

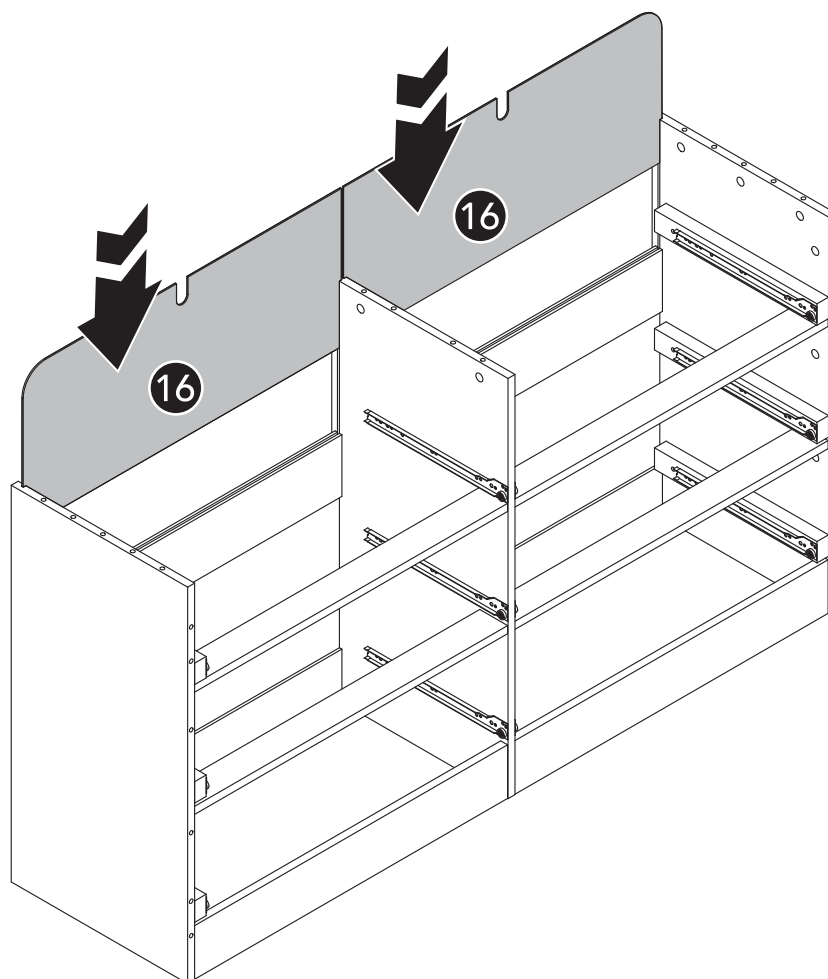




15

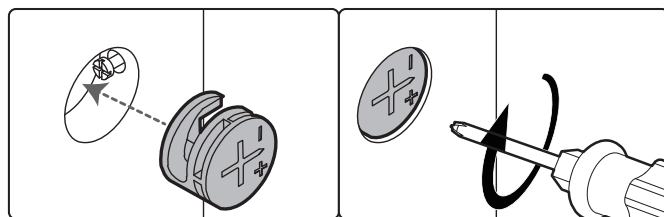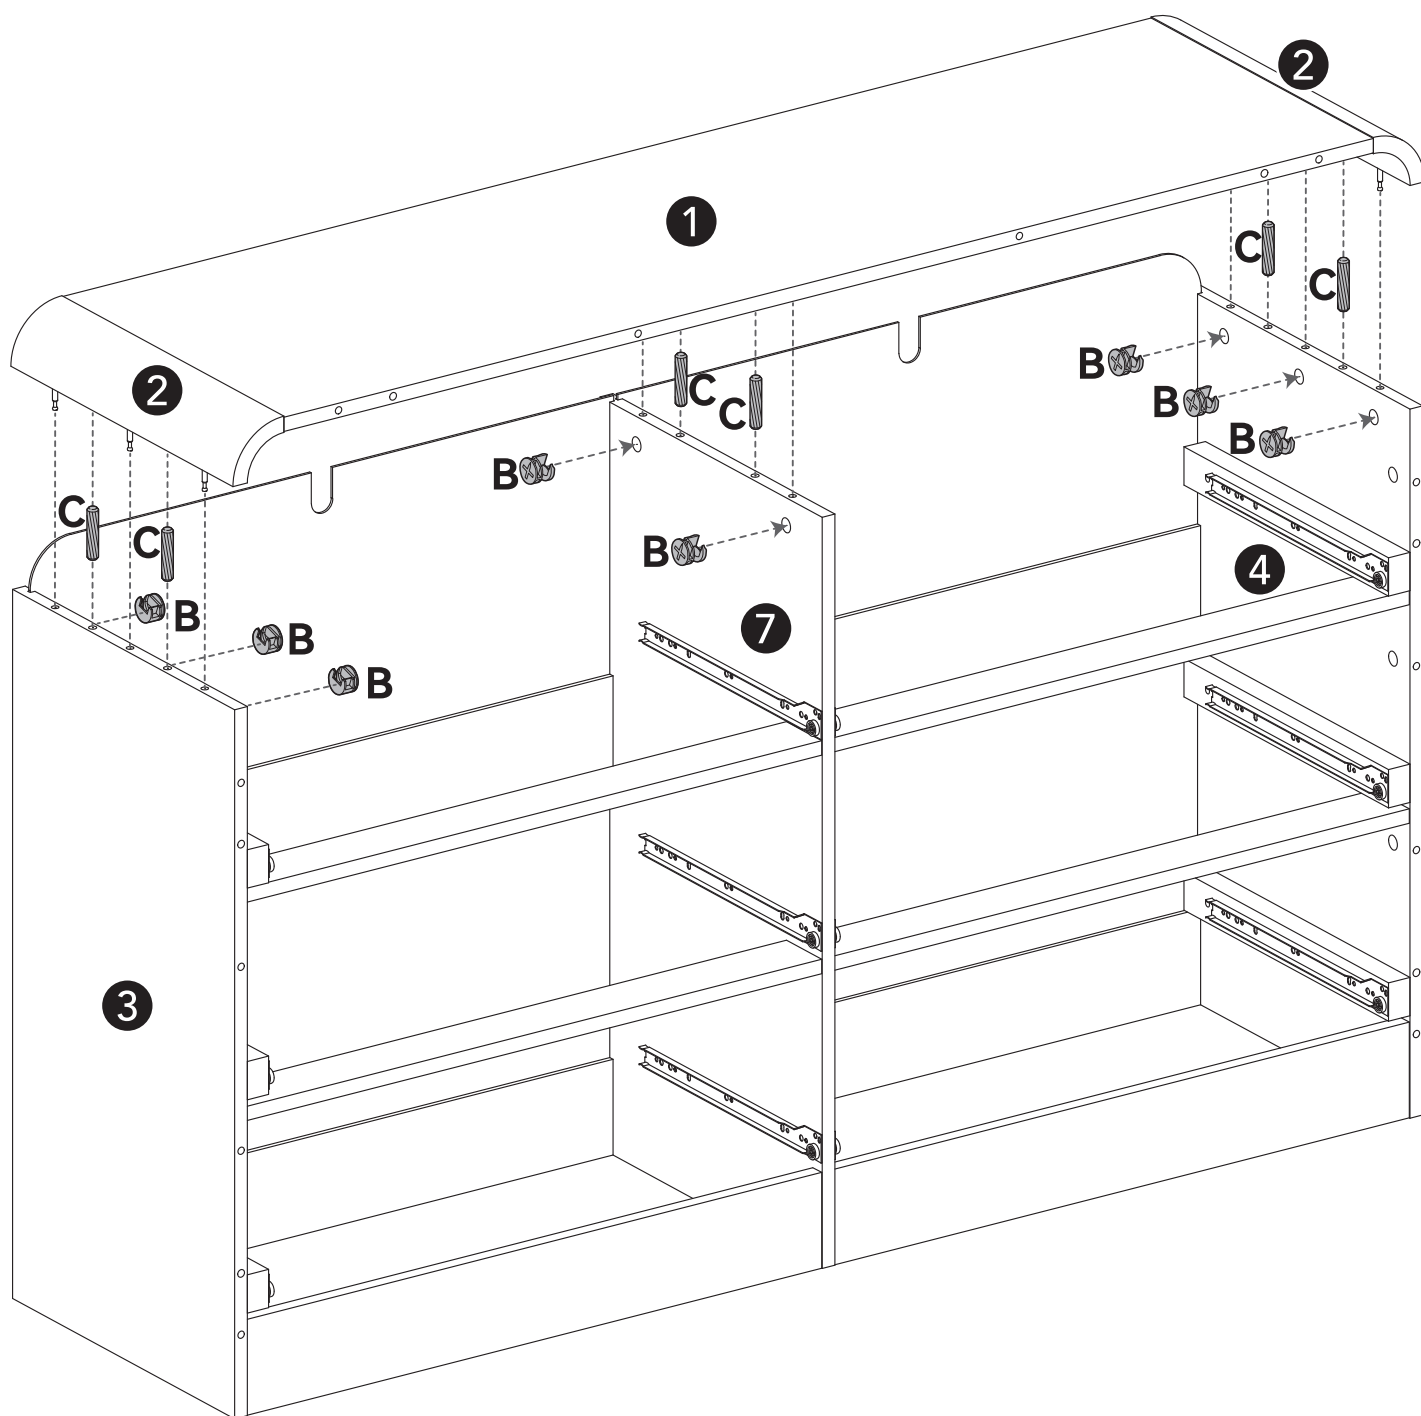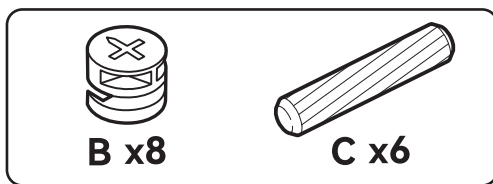

16

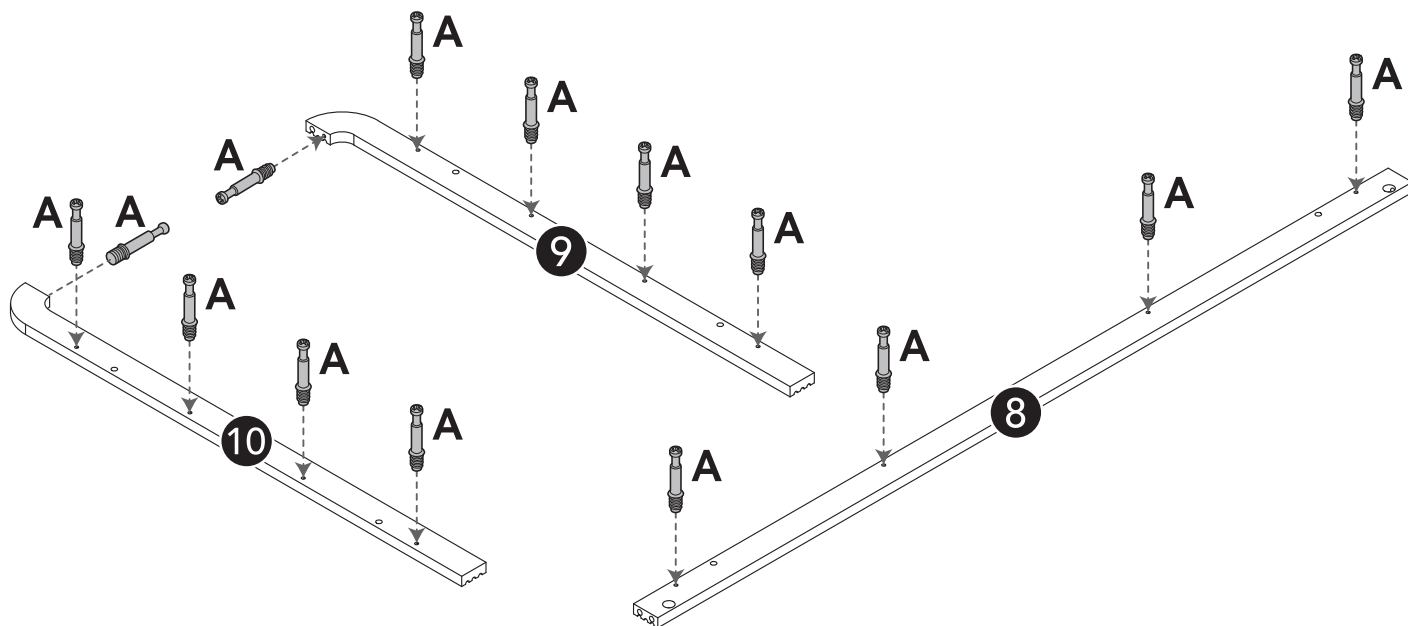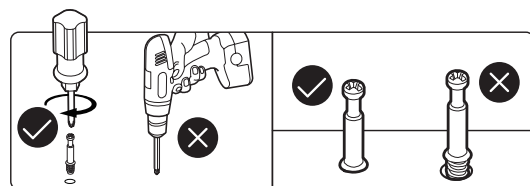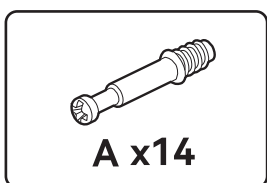

17

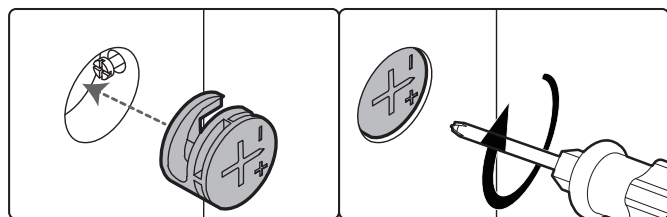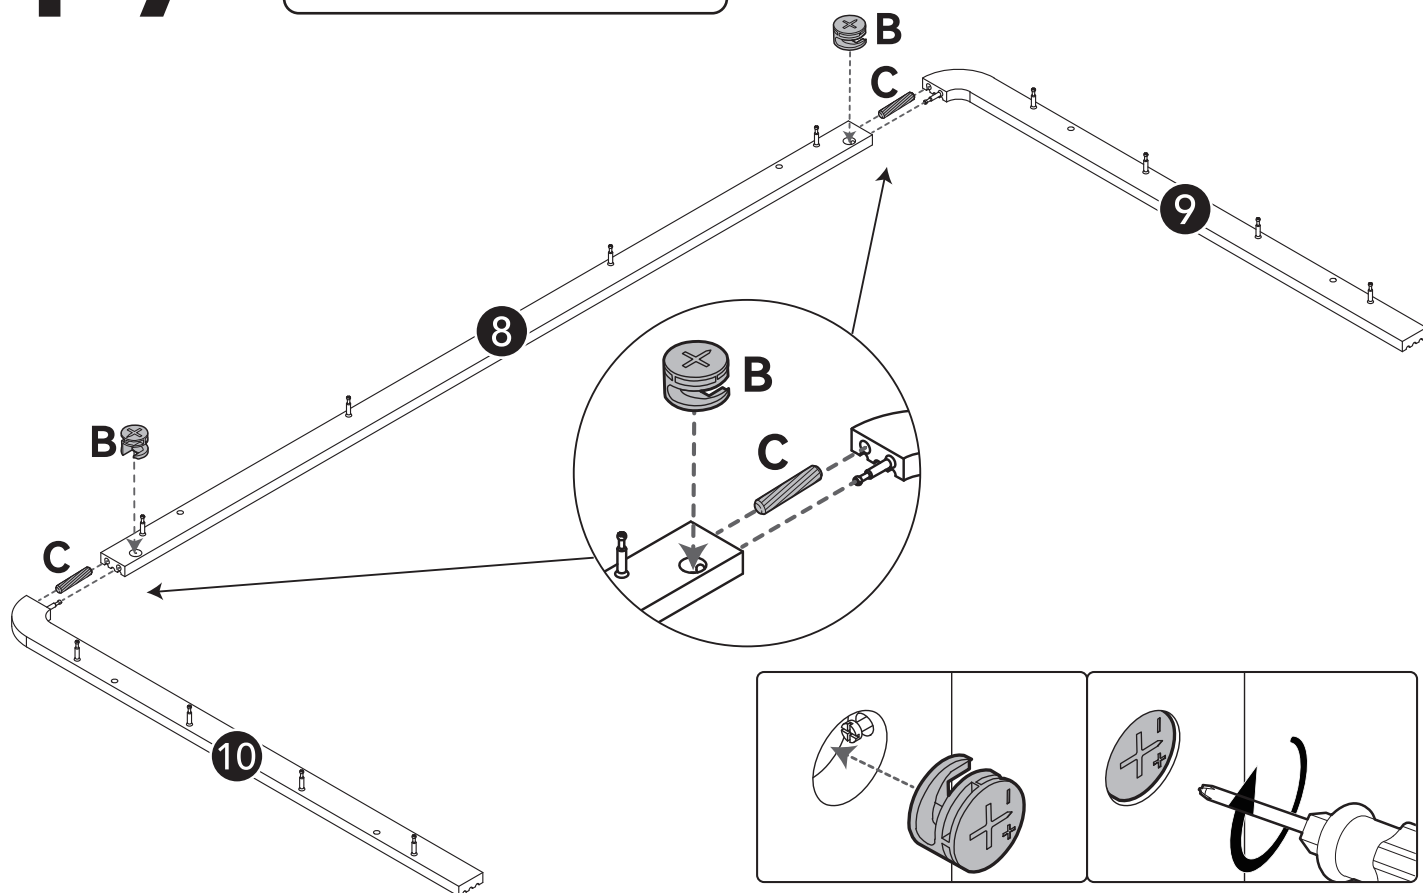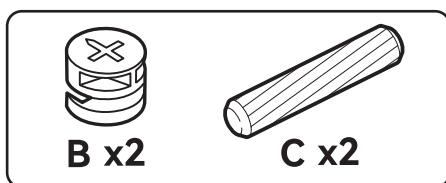


18




B x12




C x6



D x6





M x1




N x1






O x1

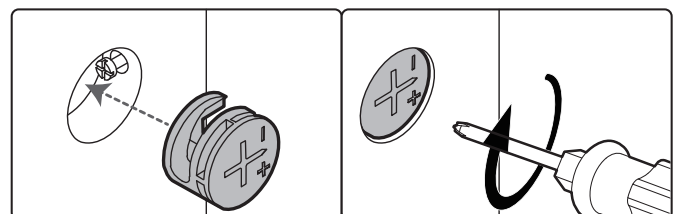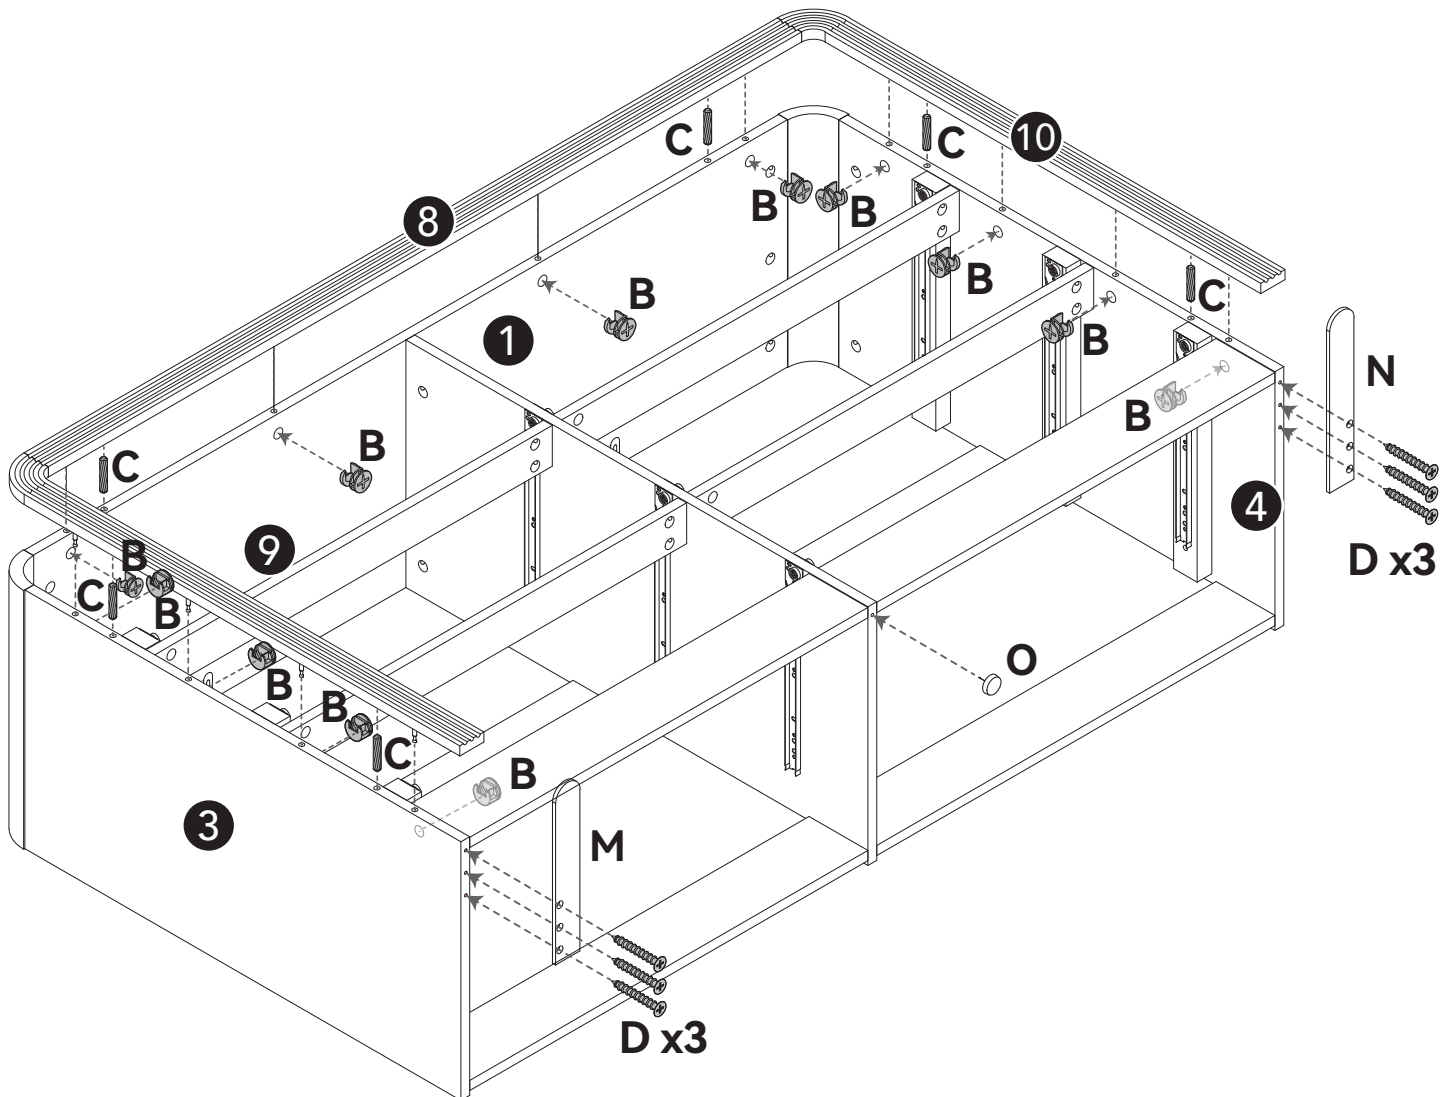



19

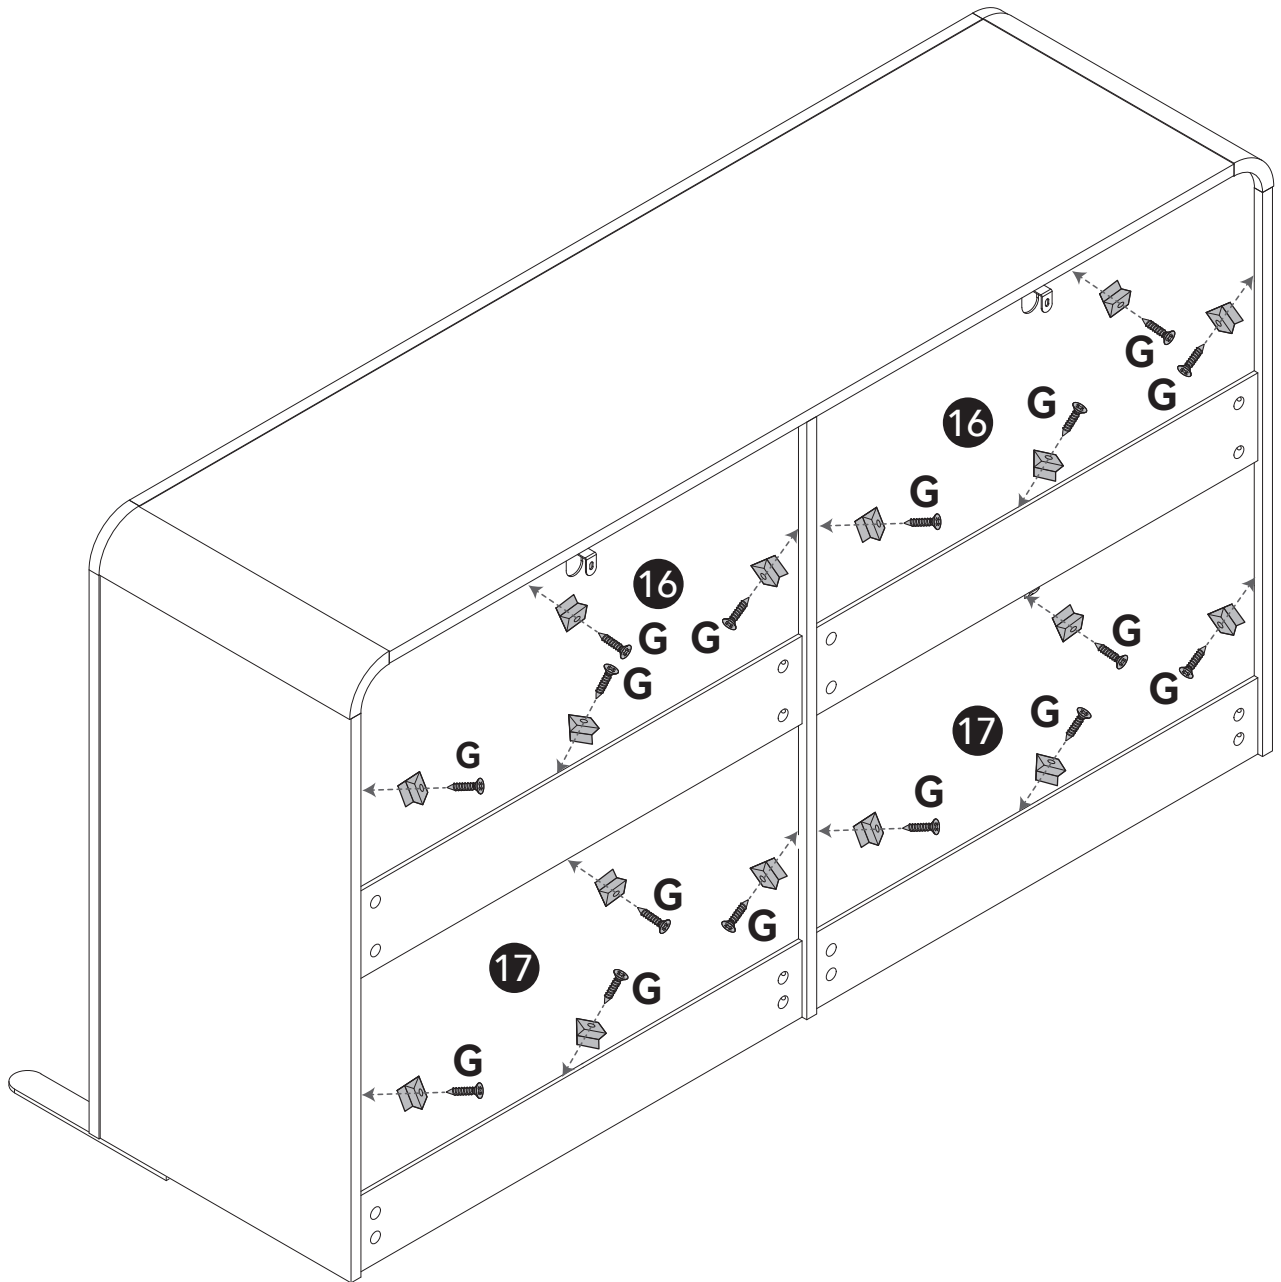


20

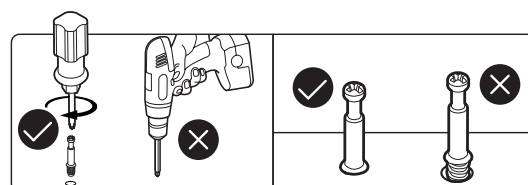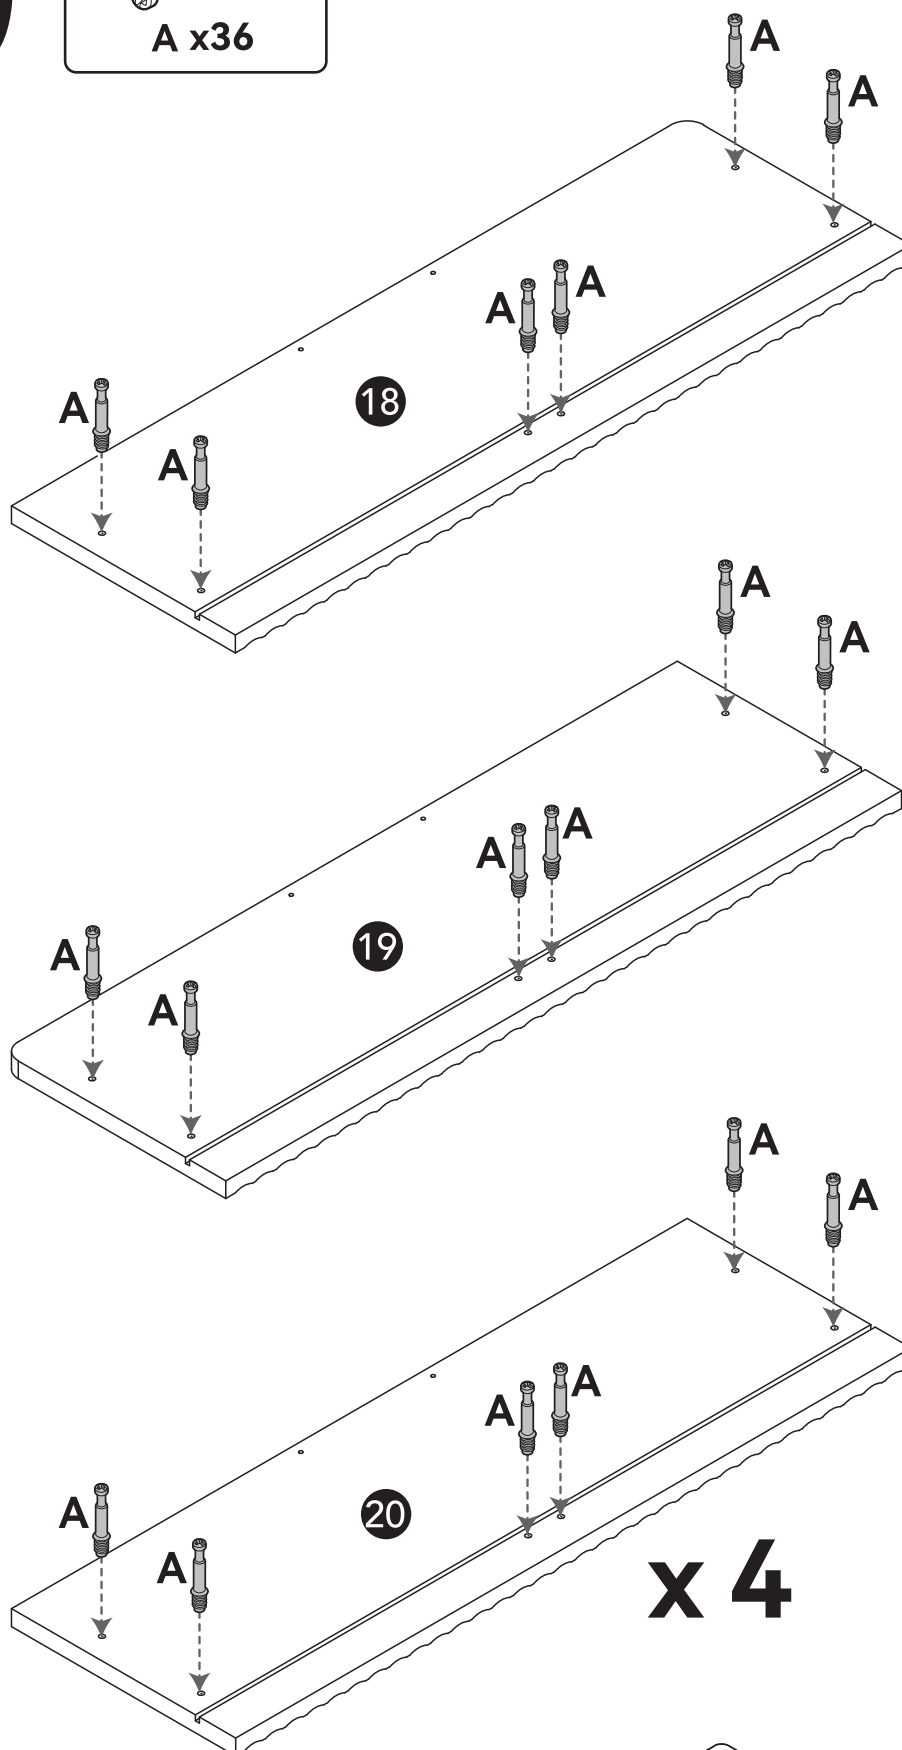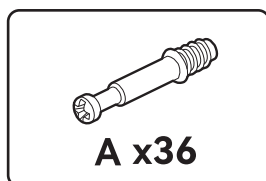





21

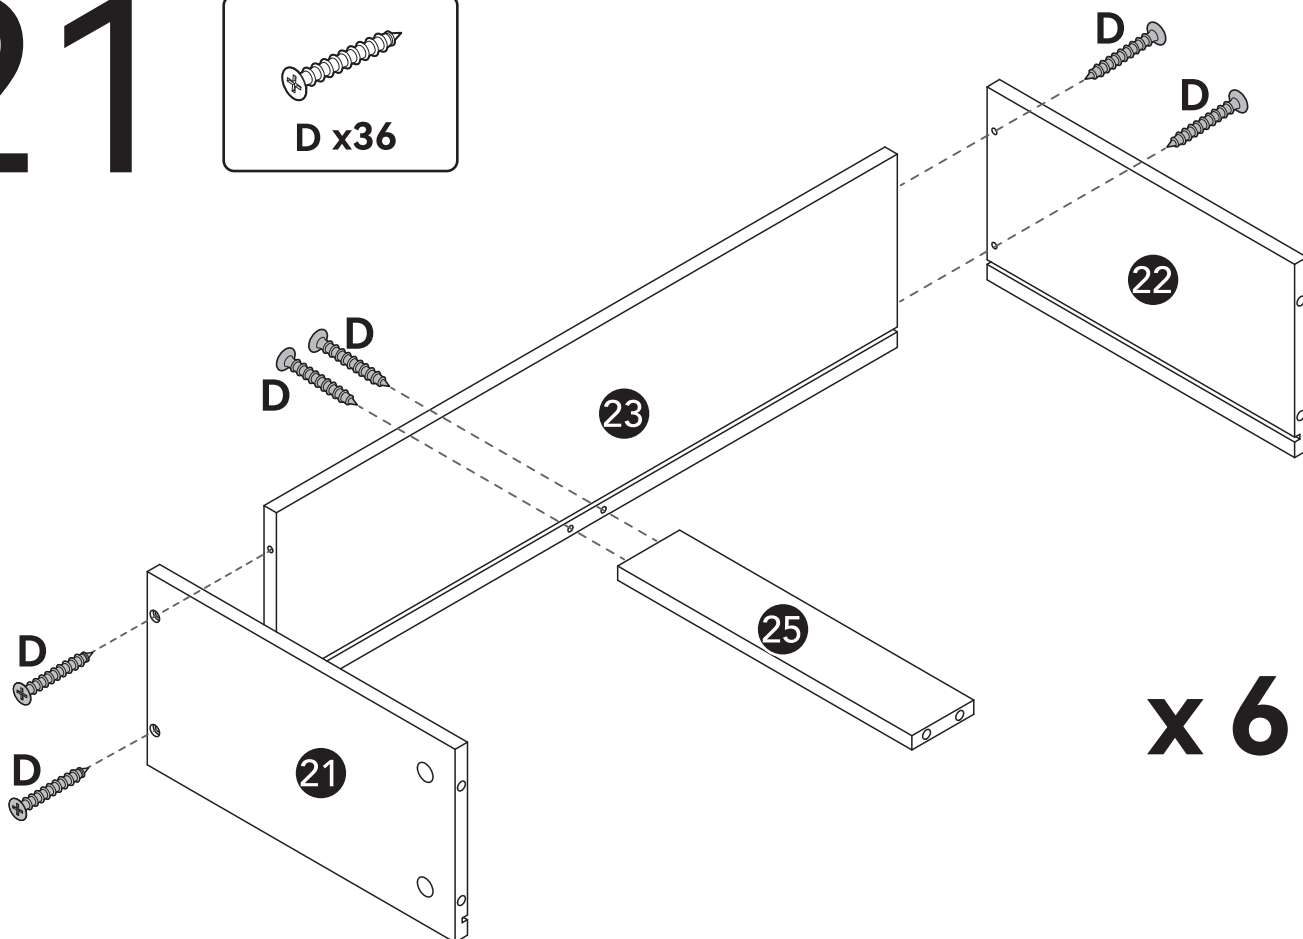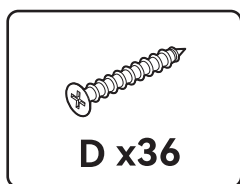


22

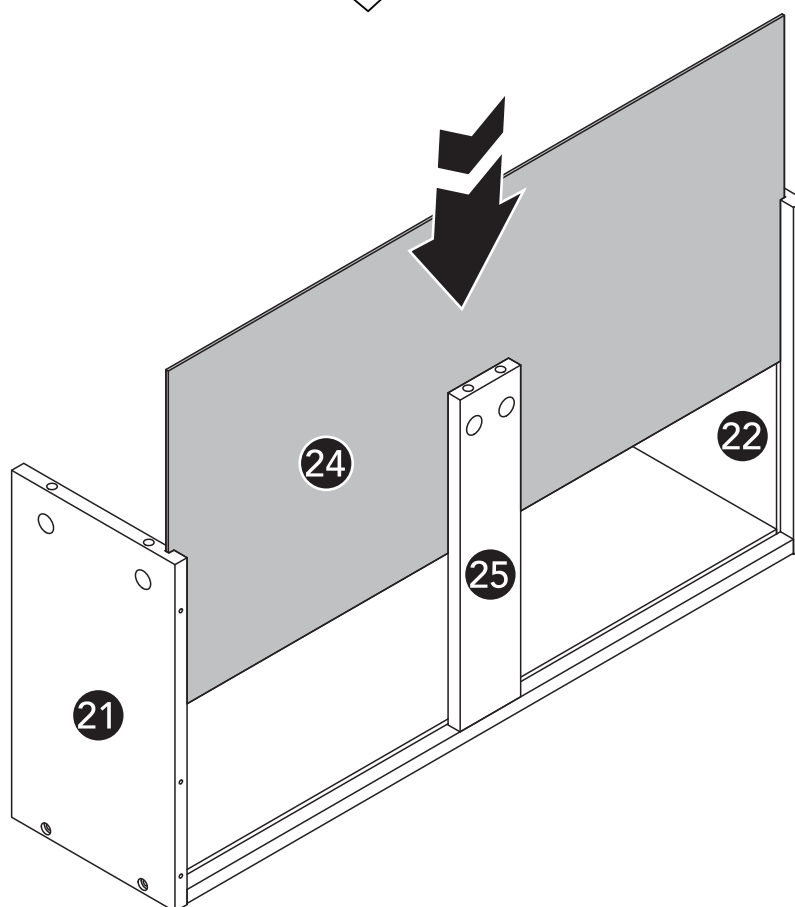






23

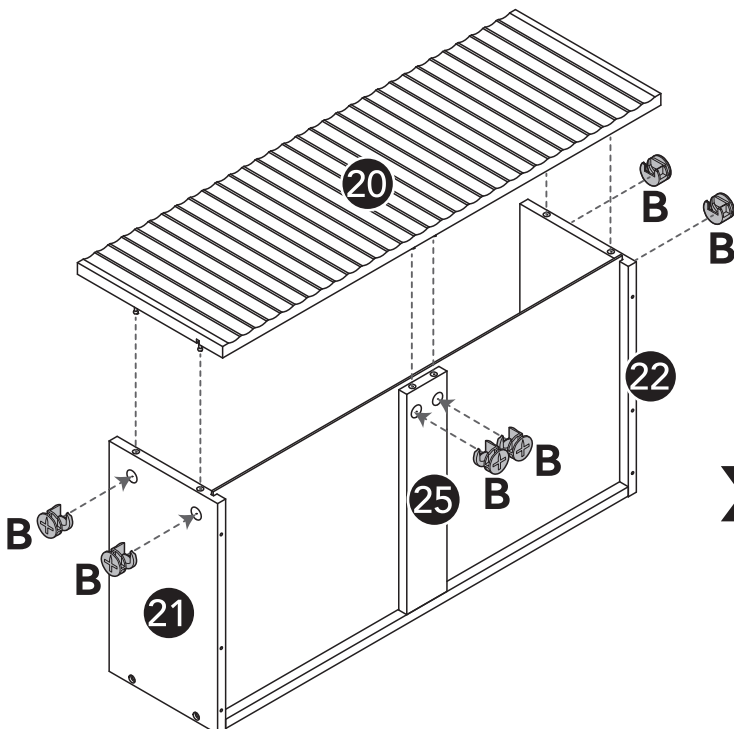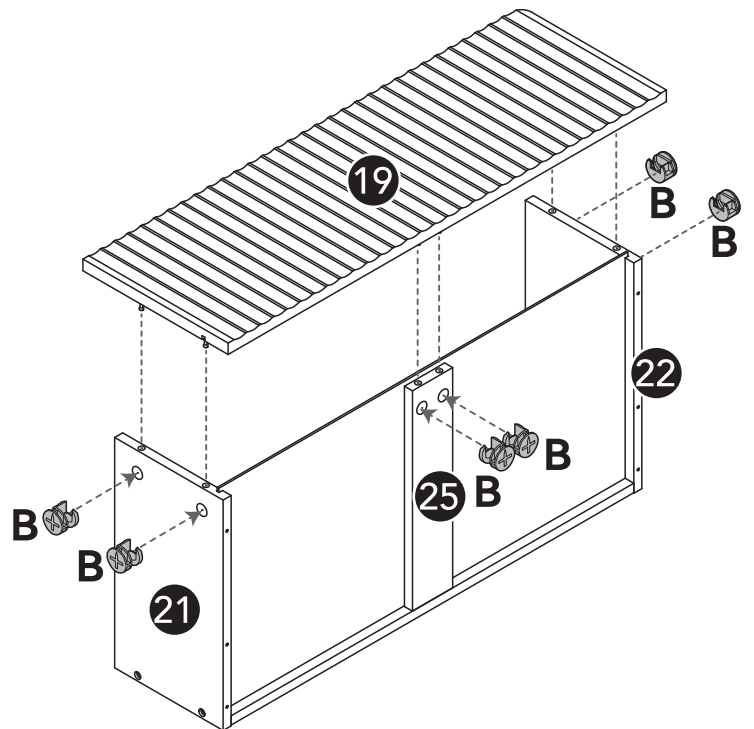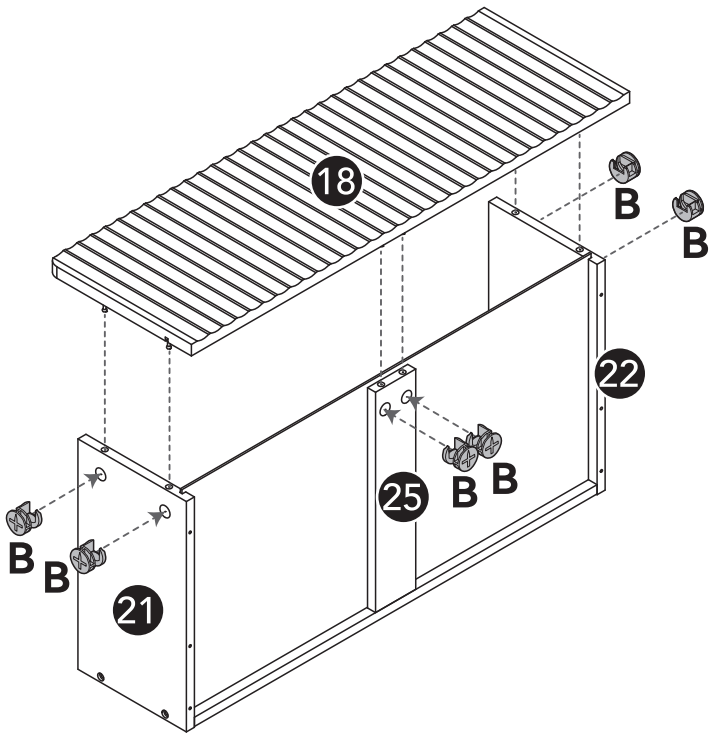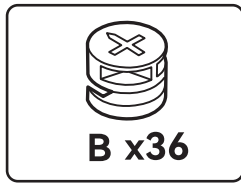

x 4

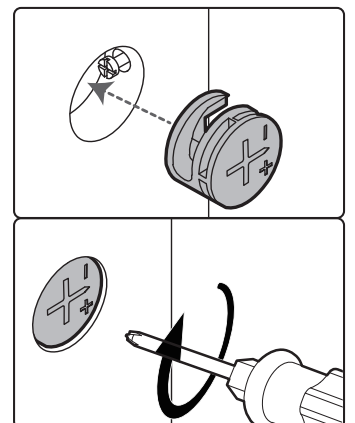


24

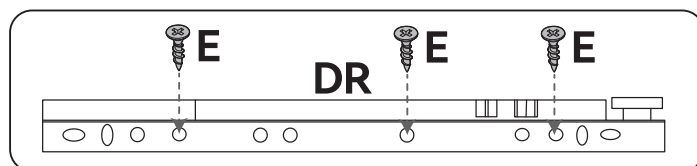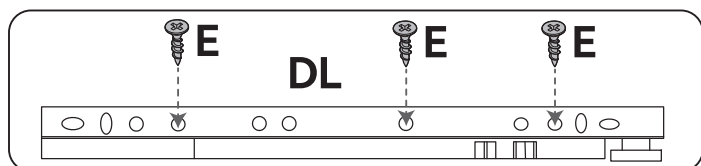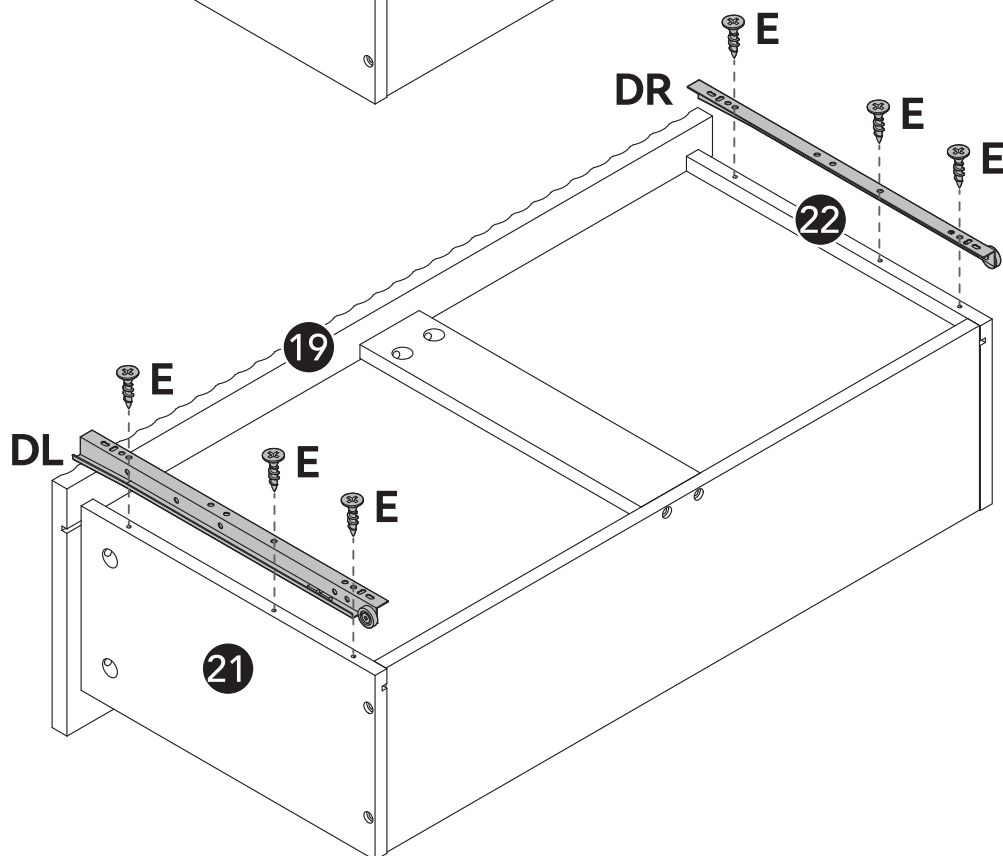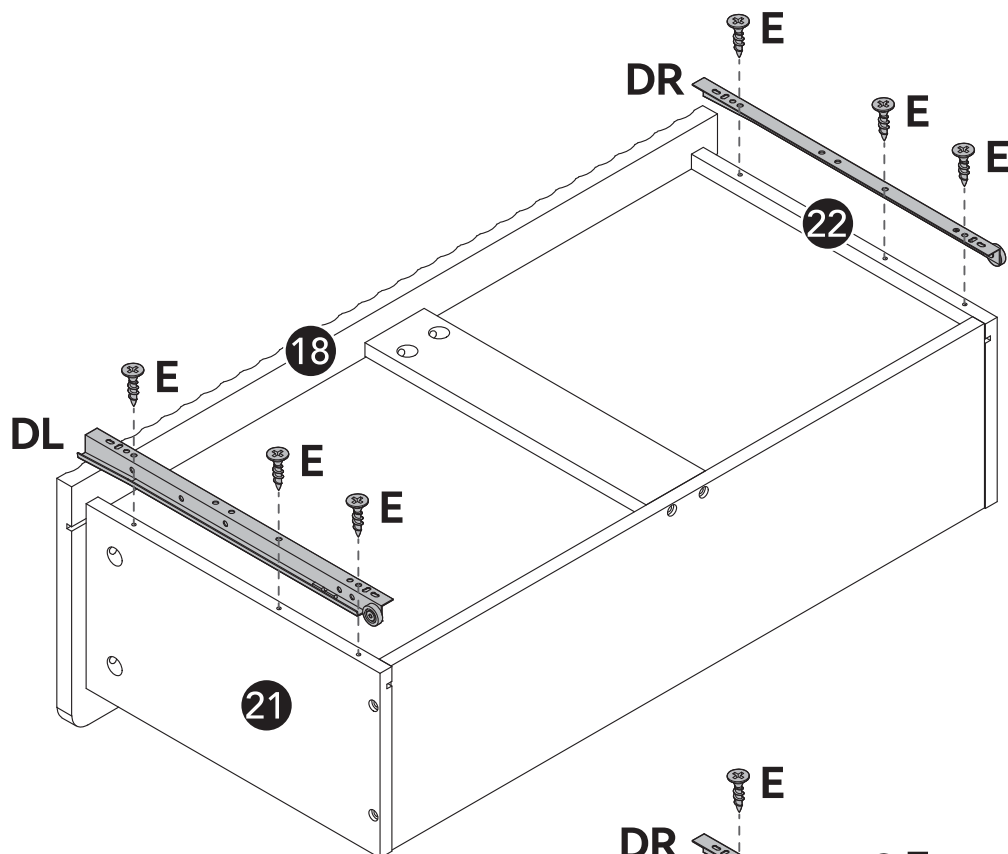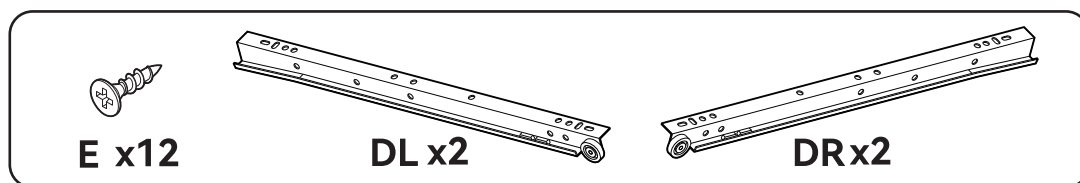

25






E x24

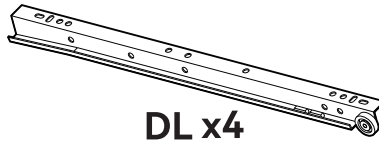



DL x4







DR x4

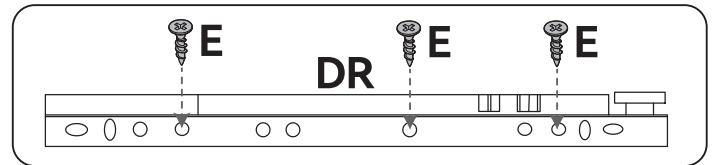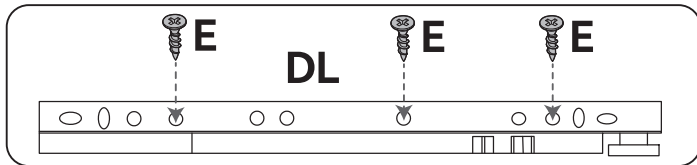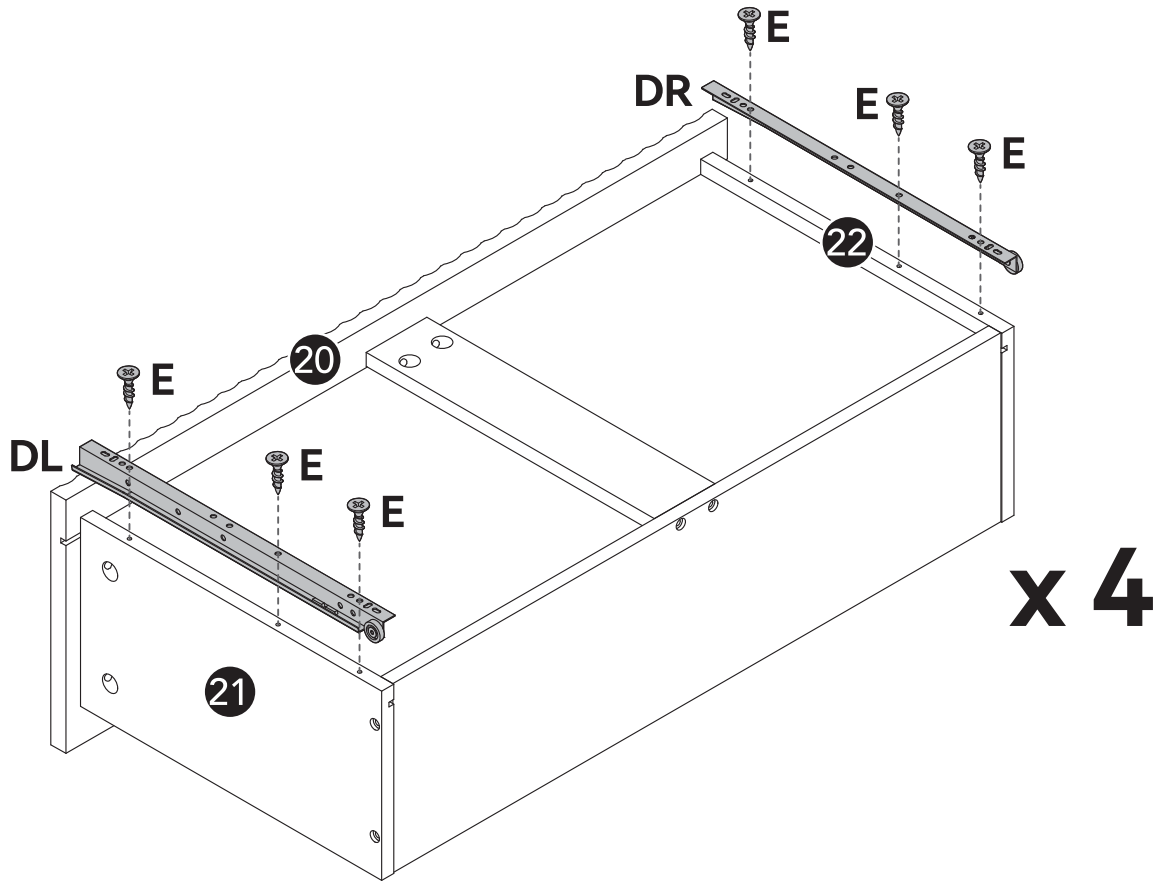

26

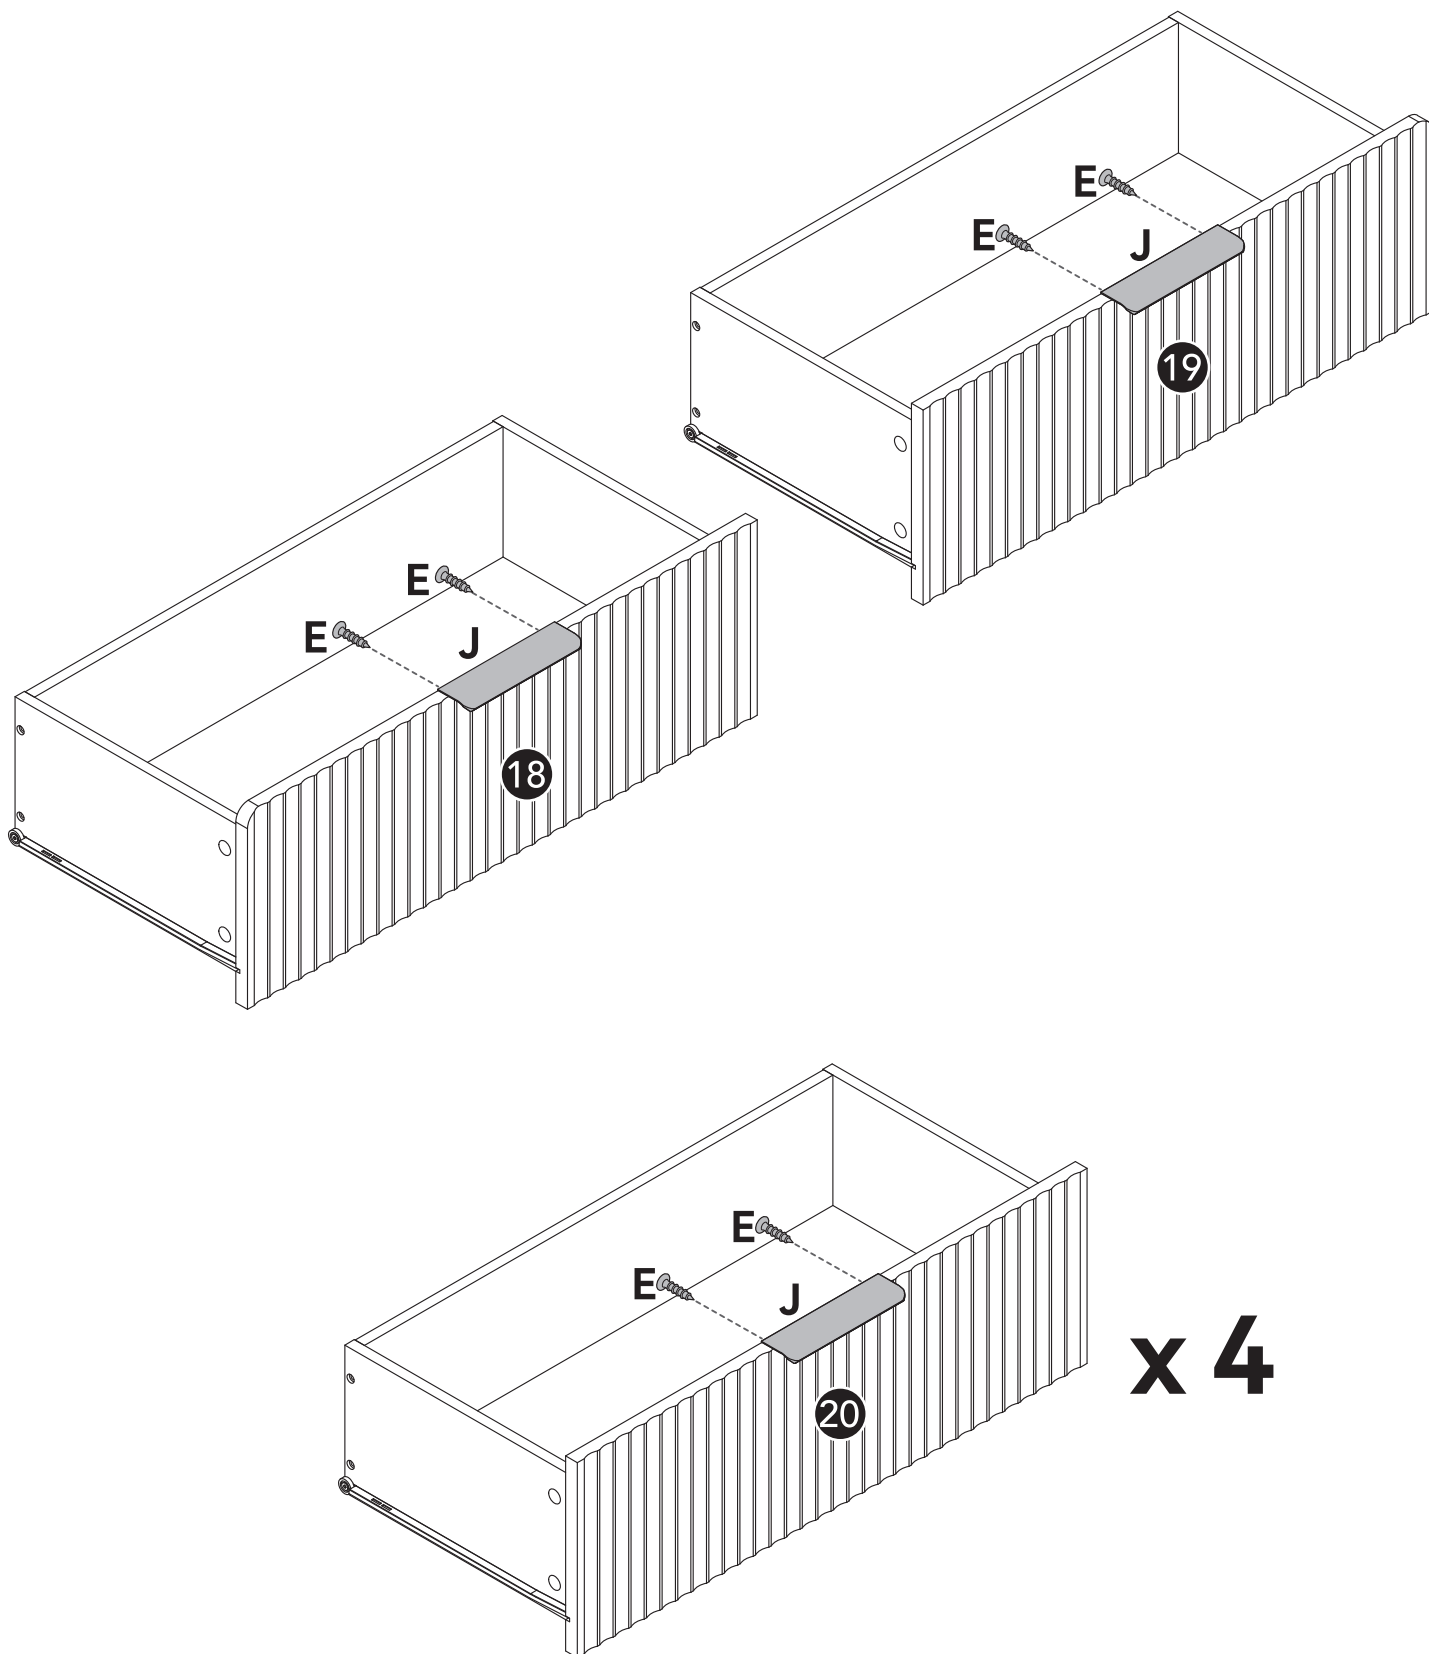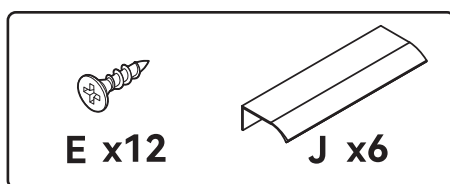


27

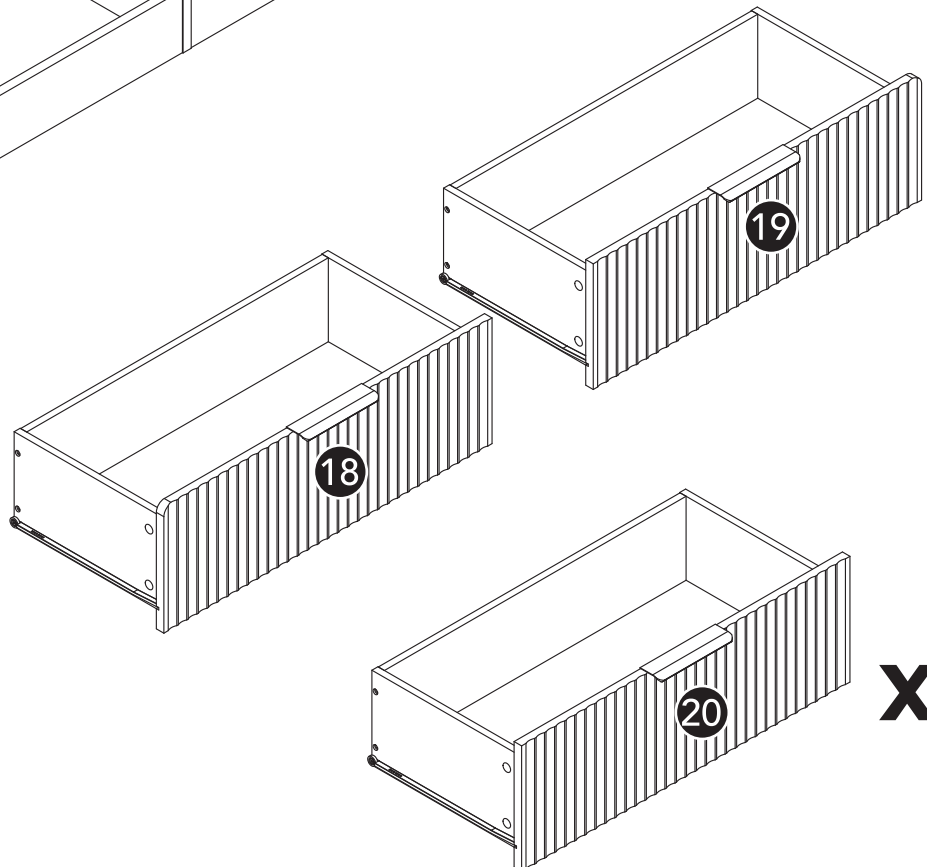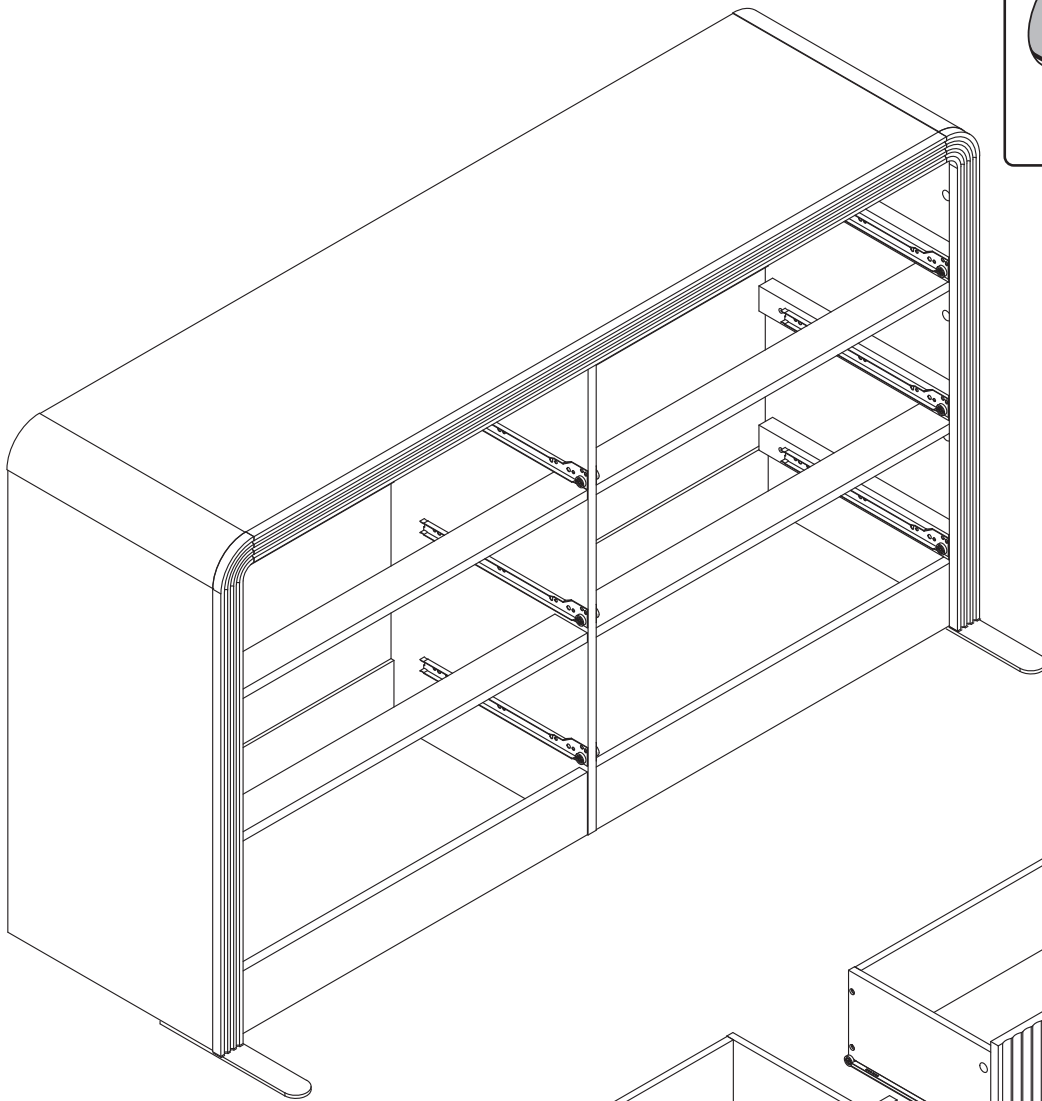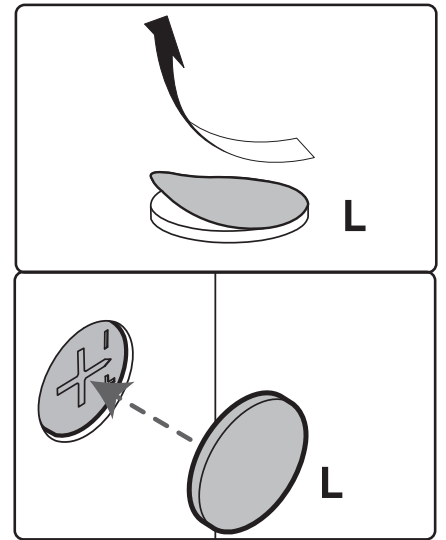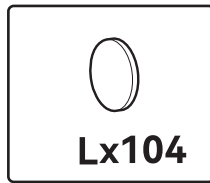


x 4






28



D x2




K x2

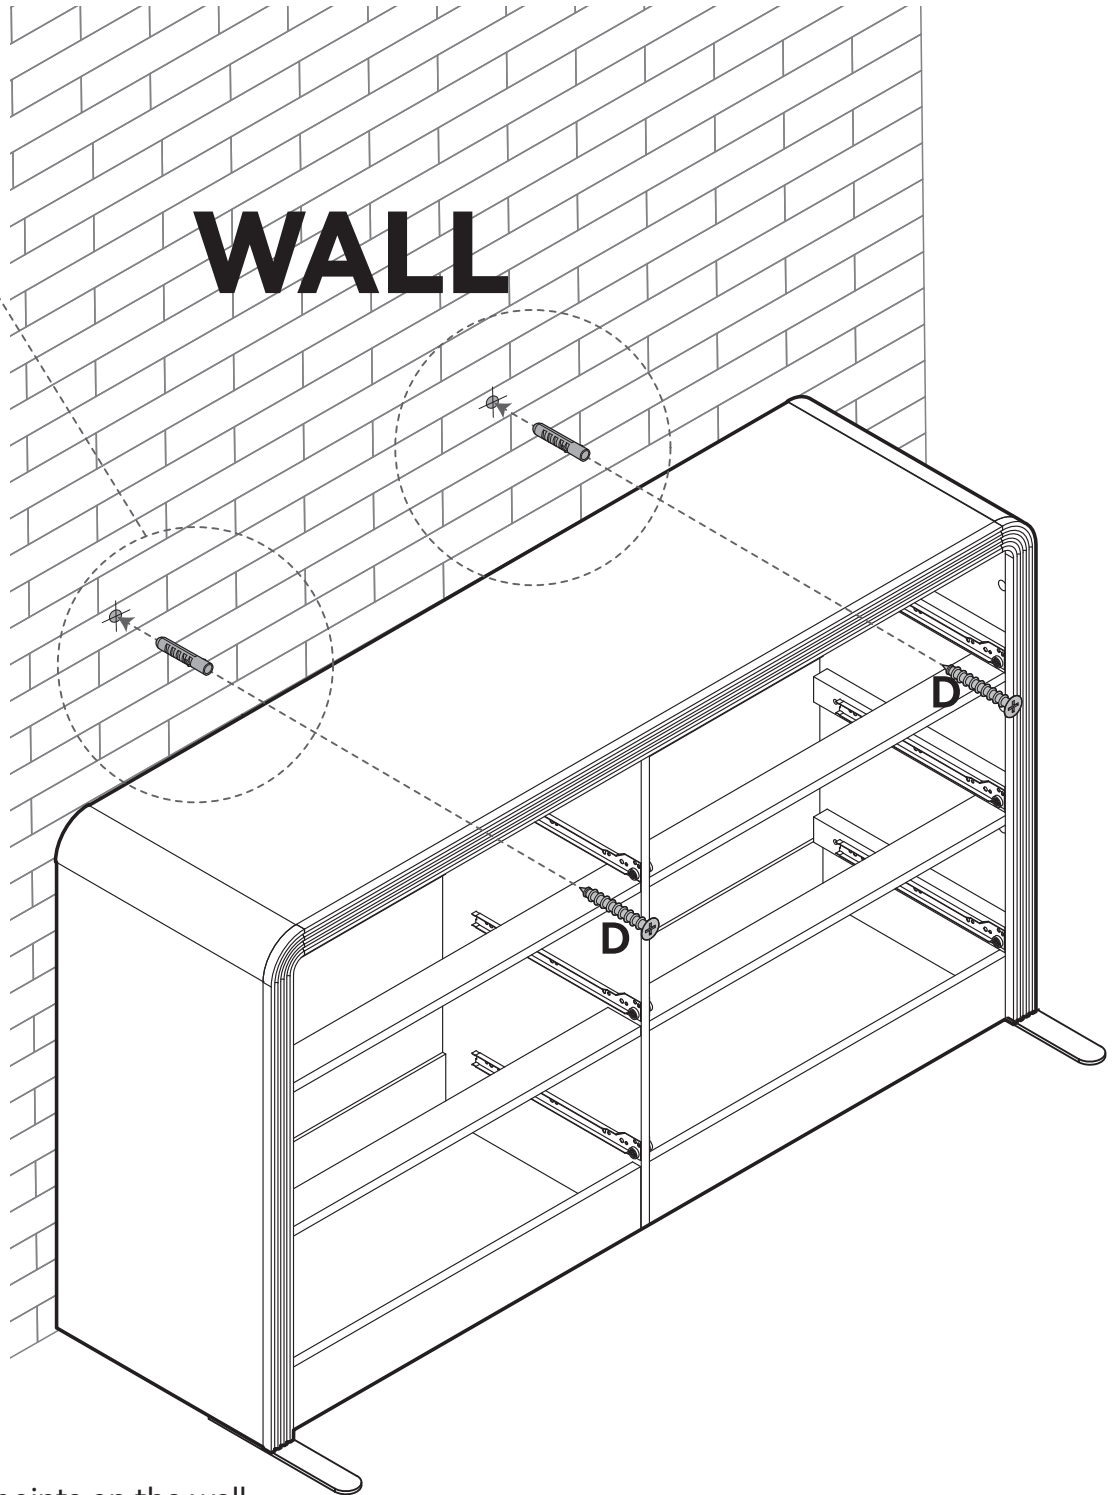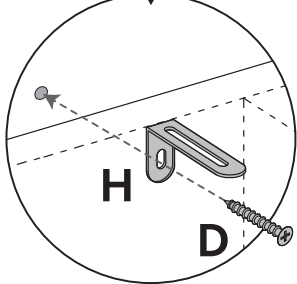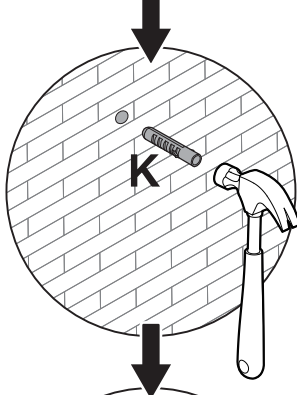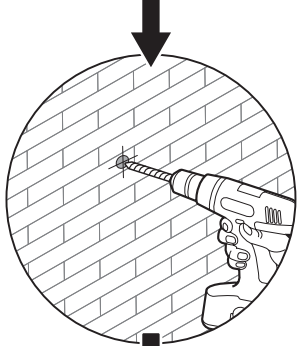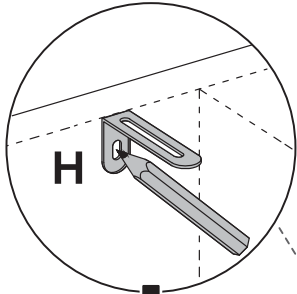

1. Mark the drilling points on the wall.
2. Drill pilot holes using an electric drill.
3. Tap the wall anchors into the holes.
4. Secure the restraint to the wall with screws D.

29

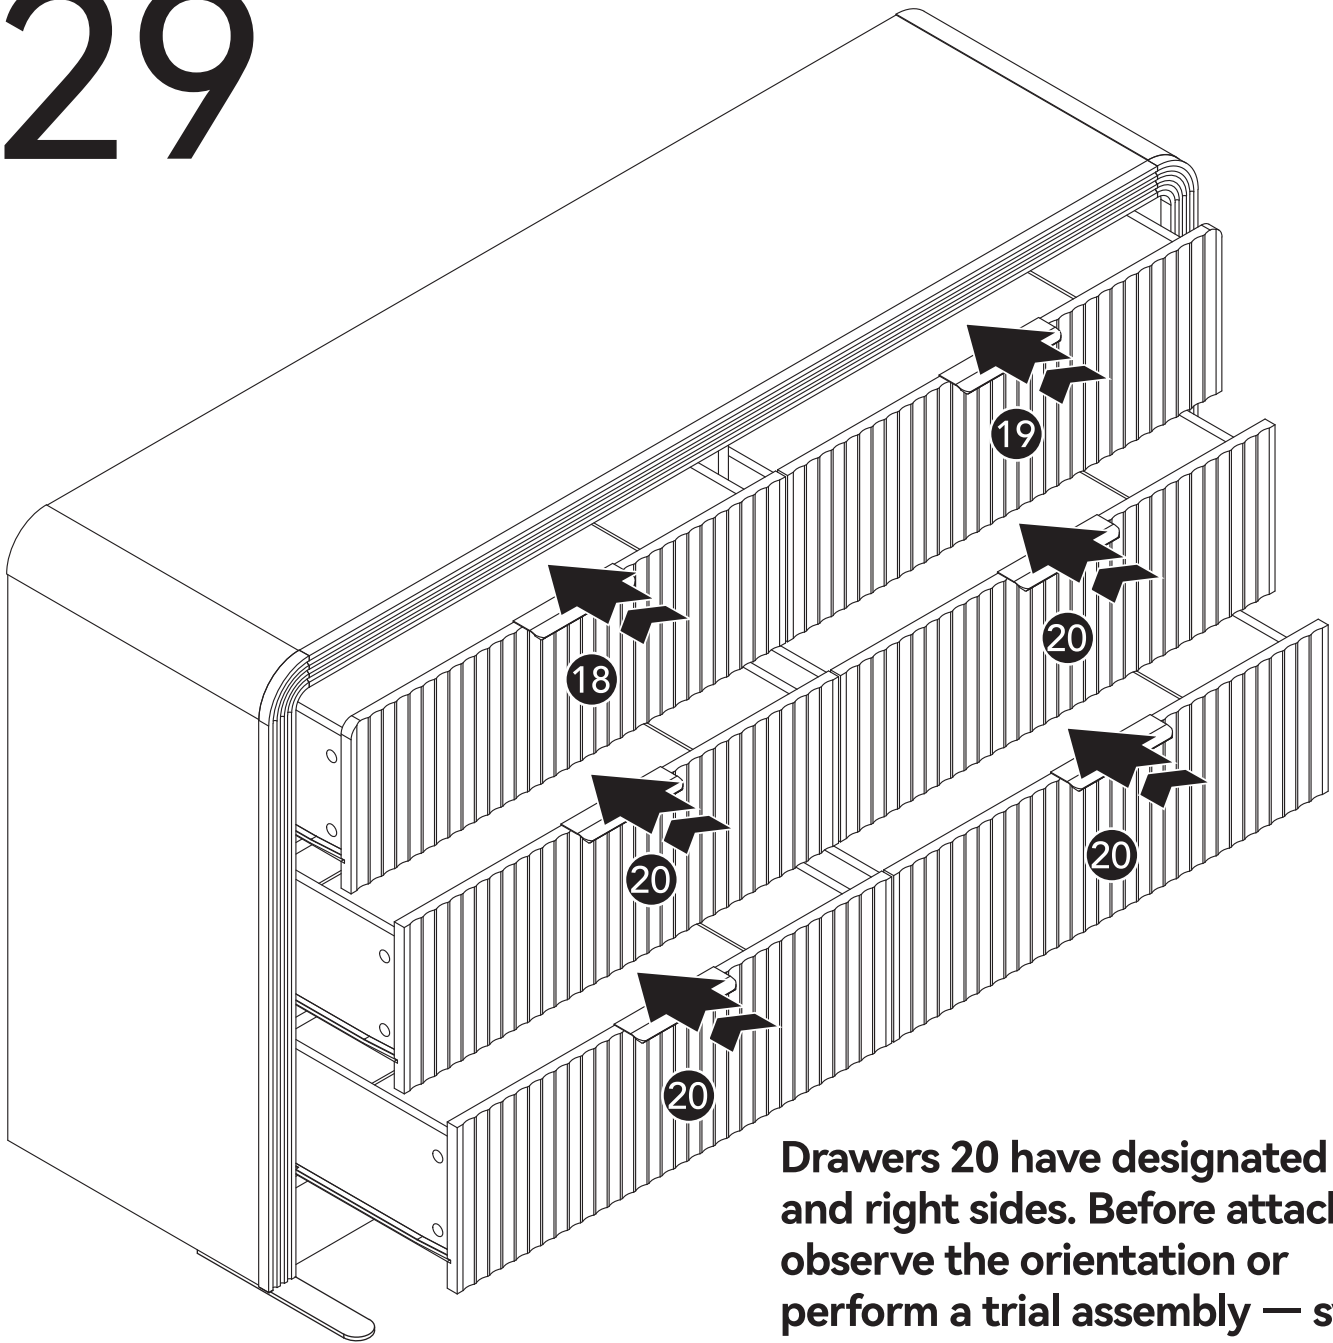

Drawers 20 have designated left and right sides. Before attaching, observe the orientation or perform a trial assembly — swap sides if needed.

