

*Bed shown is a Carlisle Queen
 Instructions are the same
 for all bed lines
 utilizing this style
 hardware


Bed Hardware Instructions

Spectra Wood Inc
 2625 Carolean Ind Dr
 State College, Pa 16801
 814-238-6332


REVISIONS		
	MM/DD/YY	REMARKS
1	--/--/-- ...	
2	--/--/-- ...	
3	--/--/-- ...	
4	--/--/-- ...	
5	--/--/-- ...	

A 001

A

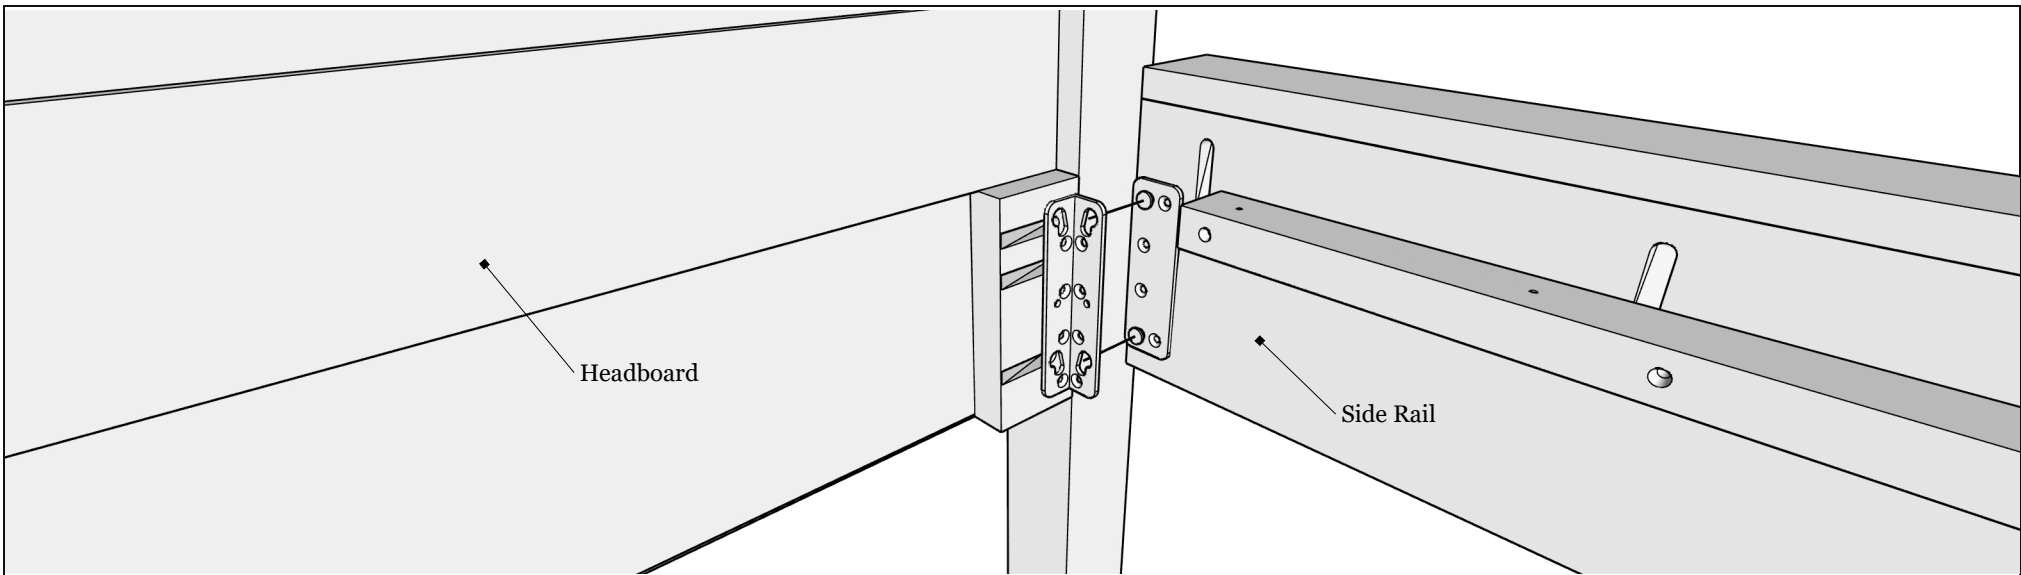

1. Line the studs on the Side Rail hardware with the openings on the Headboard/Footboard hardware
2. Gently press down on the rail until the hardware locks into place
3. Repeat for all 4 corners of bedframe

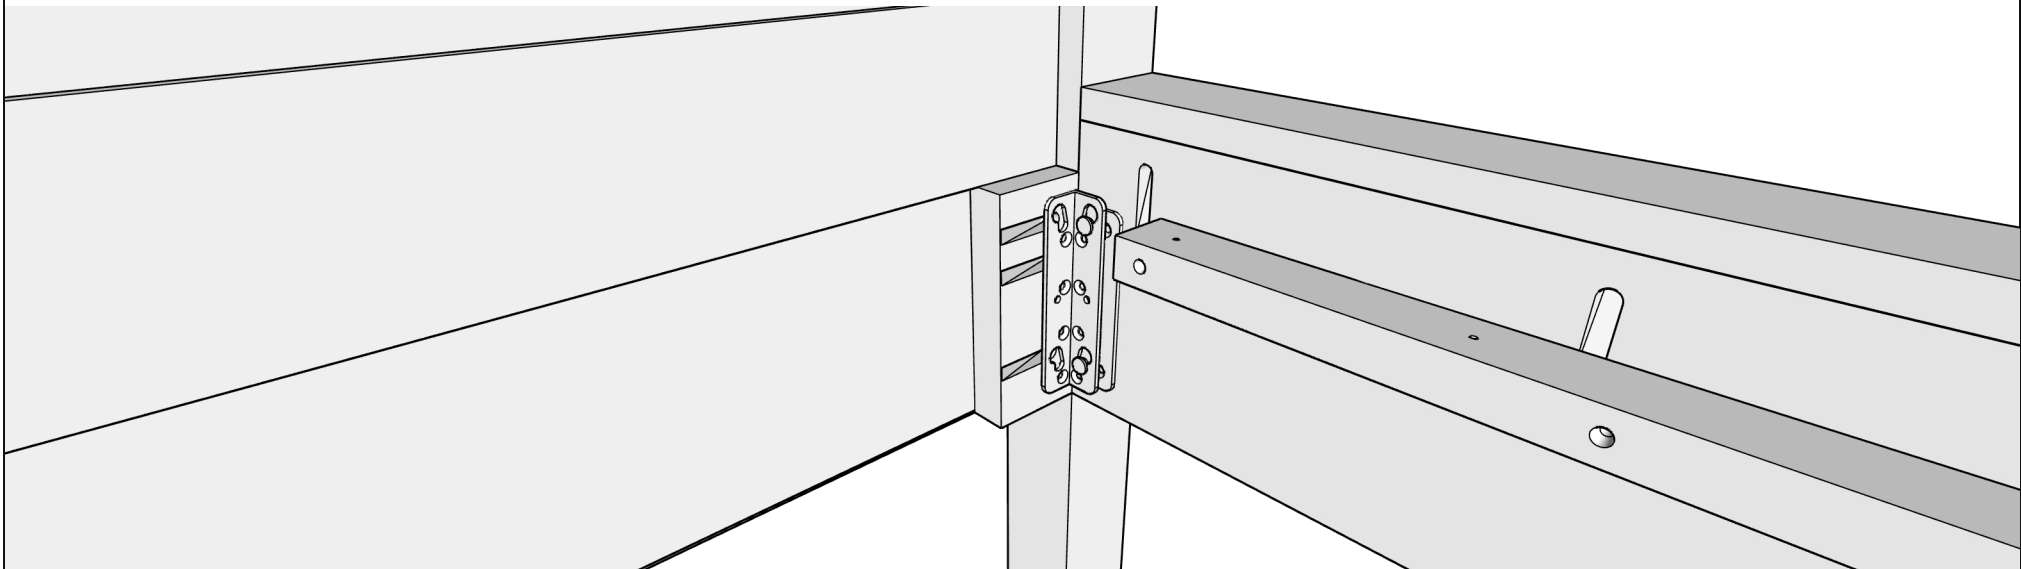

Bed Hardware Instructions

Spectra Wood Inc
 2625 Carolean Ind Dr
 State College, Pa 16801
 814-238-6332

REVISIONS		
	MM/DD/YY	REMARKS
1	--/--/--	...
2	--/--/--	...
3	--/--/--	...
4	--/--/--	...
5	--/--/--	...

A 002