




Convertible Sofa Sleeper

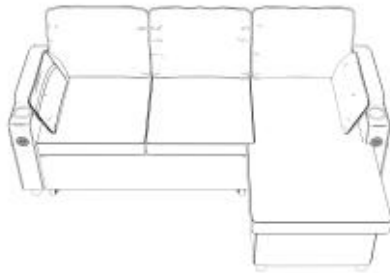


**L shaped sofa
(Right Facing)**

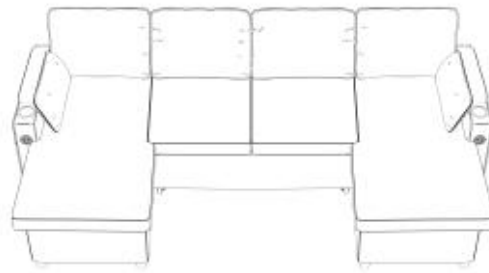

U shaped sofa

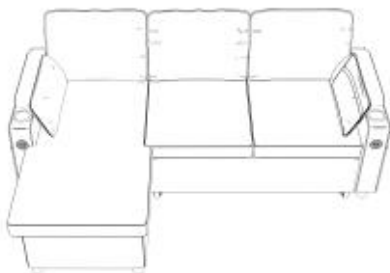

**L shaped sofa
(Left Facing)**

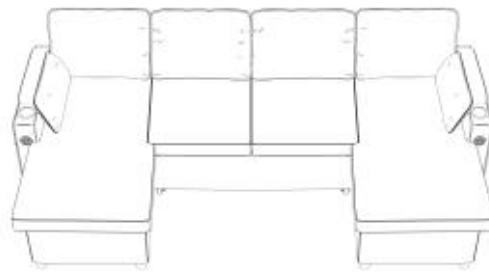

U shaped sofa

PRE-ASSEMBLY INFORMATION



TWO PERSON ASSEMBLY



UP TO 30 MINUTES FOR ASSEMBLY



ONE SEAT WEIGHT LIMITATION: 300LB



VACUUM COMPRESSION

Thank you for choosing our product. To ensure safe and satisfactory use of this product, please carefully read the below instructions before hand.

HOW MANY PACKAGES INCLUDED?

L shaped sofa: 2 Boxes (A/B)

U shaped sofa: 3 Boxes (A/B/C)

ASSEMBLY REQUIREMENT

2 PERSON ASSEMBLY | 20-30 MINUTES ASSEMBLY TIME (APPROXIMATE)









ASSEMBLY PREPARATION

1. Remove all packaging materials, hardware and parts from the carton.
2. Refer to Parts List and ensure they are complete before you start assembling.
3. Place all components on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.
















Catalogue

Part List.	3
Sofa Legs Assembly.	4
Install the Swift-loks on sofa chaise.	5
Connect Sofa Base& Armrest.	6
Connect Backrest Frame and Cover it.	7
Insert Backrest Into Armrest.	8
Footrest Assembly.	9
How to replace USB.	12











Box A Parts List

B Chaise  1pc	C Armrest(C)  1pc	F Chaise Cushion  1pc	G Backrest Pillow  3pcs
H Throw Pillow  2pcs	I Iron Frame(I)  1pc	J Iron Frame(J)  1pc	M Liner  1pc





Box B Parts List


A Sofa Base  1pc	D Armrest(D)  1pc	E Seat Cushion  2pcs	K Backrest Cover (K)  1pc	L Footrest  1pc
N Swyft-loks (N)  2pcs big	O Swyft-loks(O)  2pcs small	P Leg and Plastic Washer  8pcs	Q Plastic Plug  2pcs	R Screw M6*40mm  4pcs M6*40mm
S Screw M6*20mm  16pcs M6*20mm	T Metal Washer  4pcs	U Allen Key  1pc	V Wheel  4pcs	W Power  2pcs

Box C Parts List




B Chaise  1pc	F Chaise Cushion  1pc	G Backrest Pillow  1pc	N Swyft-loks (N)  2pcs big	O Swyft-loks(O)  2pcs small
P Leg and Plastic Washer  4pcs	R Screw M6*40mm  2pcs M6*40mm	S Screw M6*20mm  8pcs M6*20mm	T Metal Washer  2pcs	XY Iron Frame with Backrest Cover  1pc

Step1

B		2
C		1
D		1
P		12

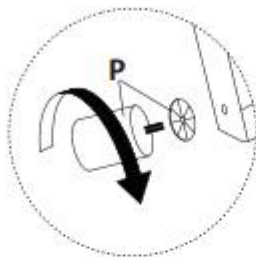

Installation of sofa legs with plastic washers

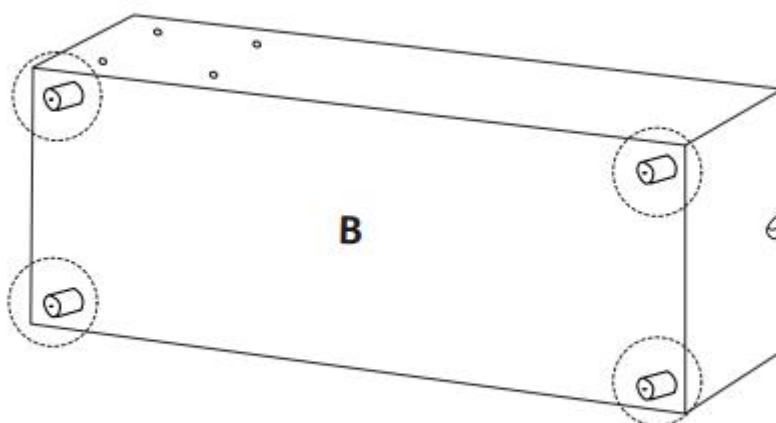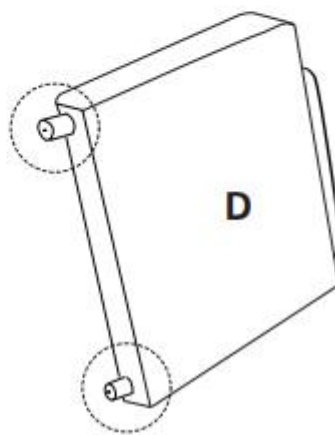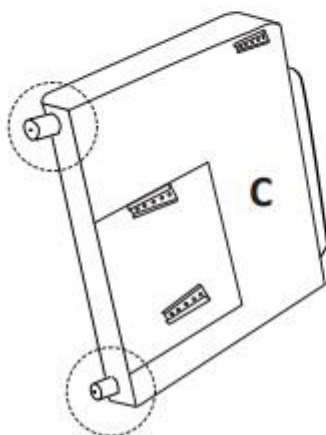


Step2

Please decide the direction of the sofa chaise before your start installtion


Check the instructions carefully and install the Swyft-loks in the direction you want the recliner to go, which determines whether the chaise is on the left or the right.

L shape	B		1	N		2	O		2	S		8	U		1
----------------	---	--	---	---	--	---	---	--	---	---	--	---	---	--	---

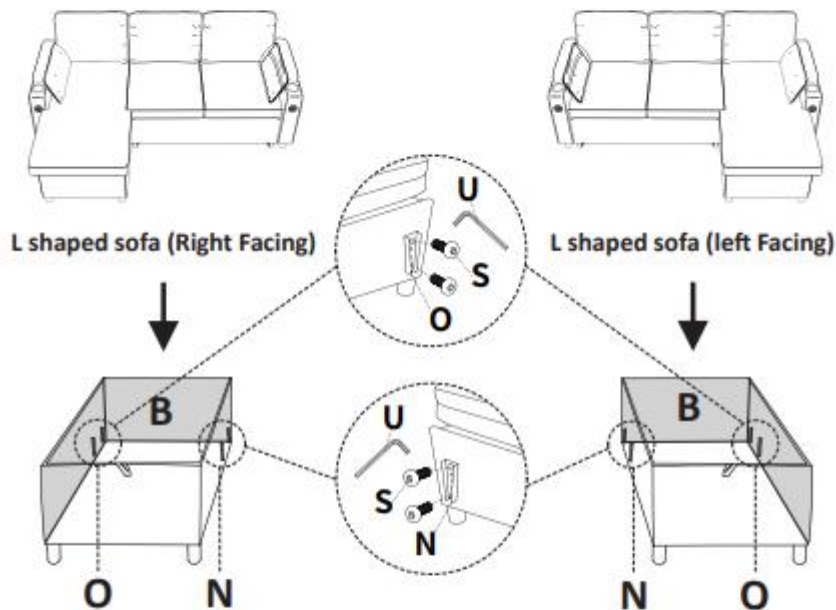

If you buy a U shape sofa, Note that the Swyft-loks on the two chaises must be installed opposite each other as shown.

U shape	B		2	N		4	O		4	S		16	U		1
----------------	---	--	---	---	--	---	---	--	---	---	--	----	---	--	---

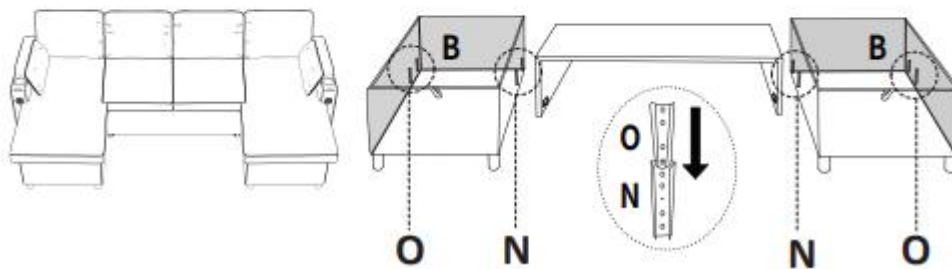


Step3 Connect Sofa Base& Armrest





Please kindly note that the small round metal insert part O is inserted into the large square metal insert part N.


L shape	A		1	B		1	C		1	D		1
----------------	---	--	---	---	--	---	---	--	---	---	--	---

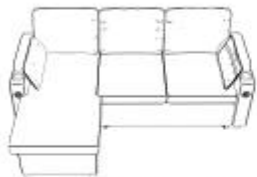


L shaped sofa (Left Facing)

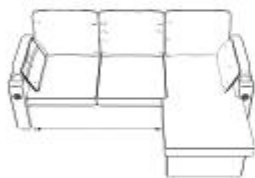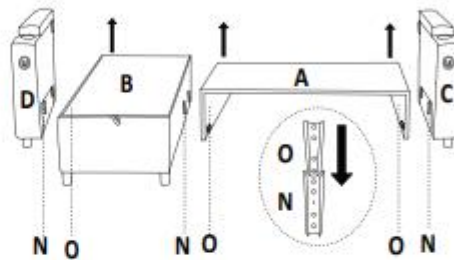


L shaped sofa (Right Facing)

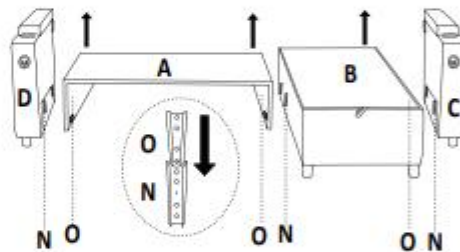

U shape	A		1	B		2	C		1	D		1
----------------	---	--	---	---	--	---	---	--	---	---	--	---

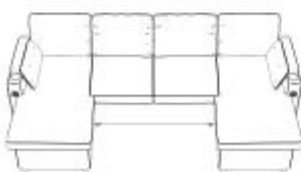

U shaped sofa

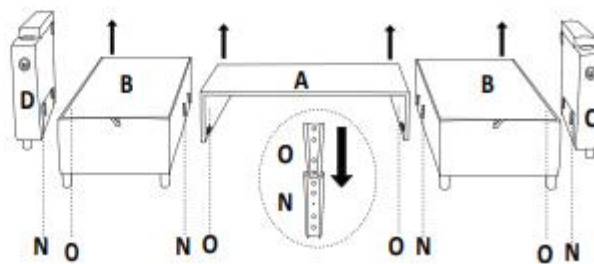

Step4


Fasten part I & J fittings with the screws R.

Please do NOT tighten any of the 4 screws until they are all aligned.

Then place cover K on frames I and J.

L Shaped Sofa & U Shaped Sofa

L shape	I		1	J		1	R		4	T		4	U		1
	K		1												

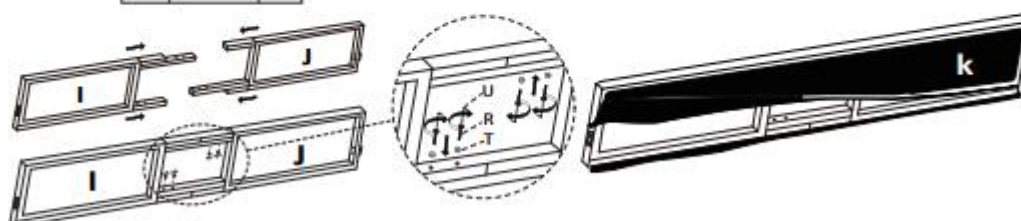


U Shaped Sofa ONLY

U shape	R		2	T		2	U		1	XY		1
---------	---	--	---	---	--	---	---	--	---	----	--	---

Remove Swyft-loks on the left side of part I.



Open the zipper of XY

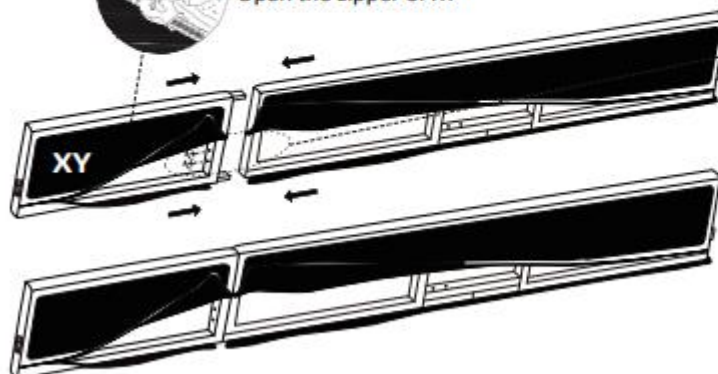

Fasten part XY and part I fittings with the screws R and then zipper part XY up.


Pay attention to the direction of insertion of the screws, it is necessary to insert part I fittings from part XY.

Step5

L Shaped & U Shaped Sofa Insert the backrest into the sofa

L shape

U shape

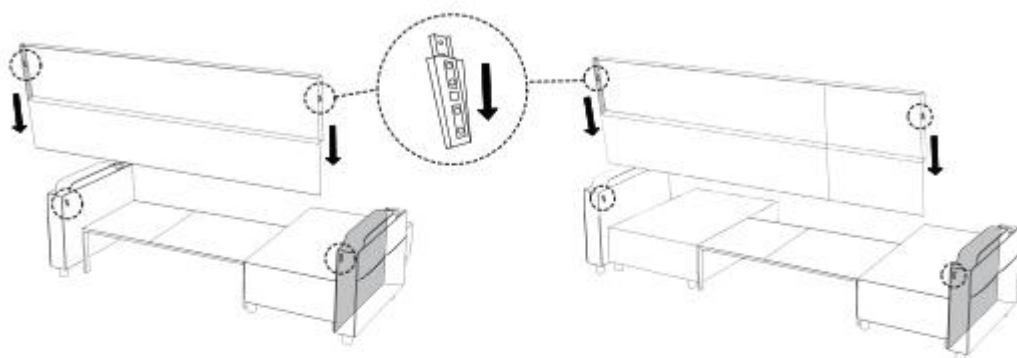

When inserting the iron frame I and j into the sofa, it is oriented so that where the metal clasps are located on both sides, the distance below is shorter than the distance above.

L Shaped & U Shaped Sofa Insert Plastic PART Q into backrest Side

L shape

Q




2

U shape

Q




2

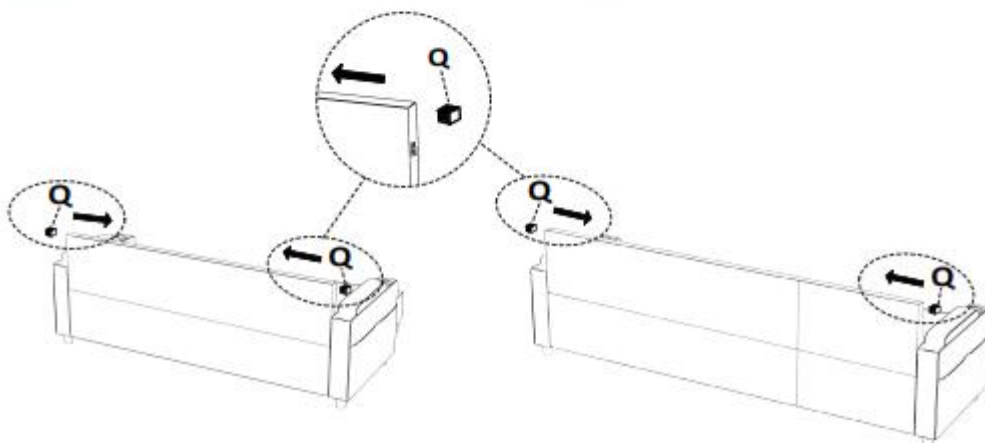


Step6 Put the screws S into the holes one by one. Please do not lock any one of the 2 screws before they are all aligned. After aligning them all and then tighten them with Allen Key (part U).

L		1
S		8
U		1
V		4

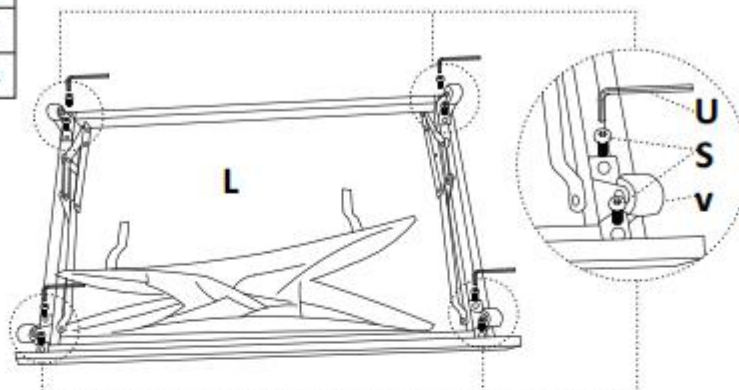


Step7 Wrapping the Velcro around the iron frame to secure the storage basket.

L		1
M		1

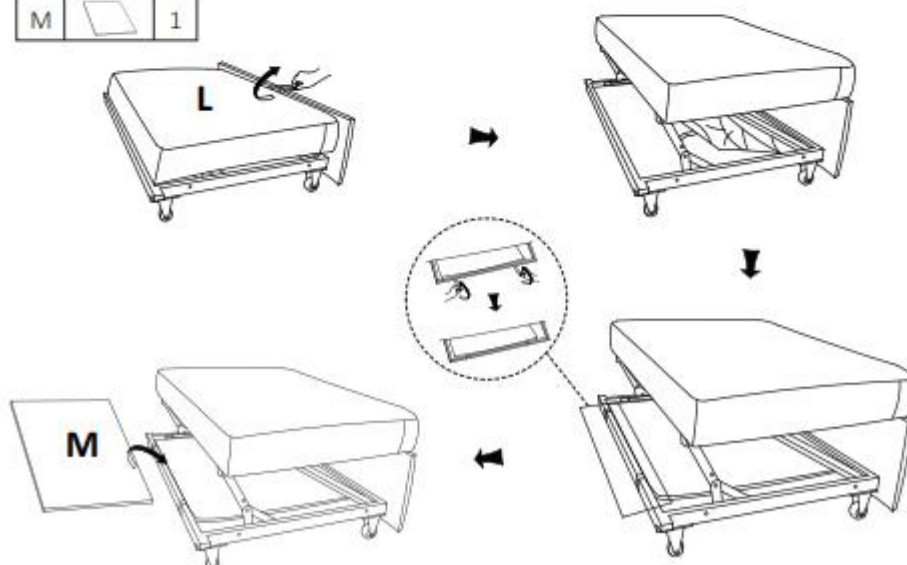


Step8 Please lift up the footrest L so that the wheels are above the iron frame before sliding into the sofa.

L shape L 1


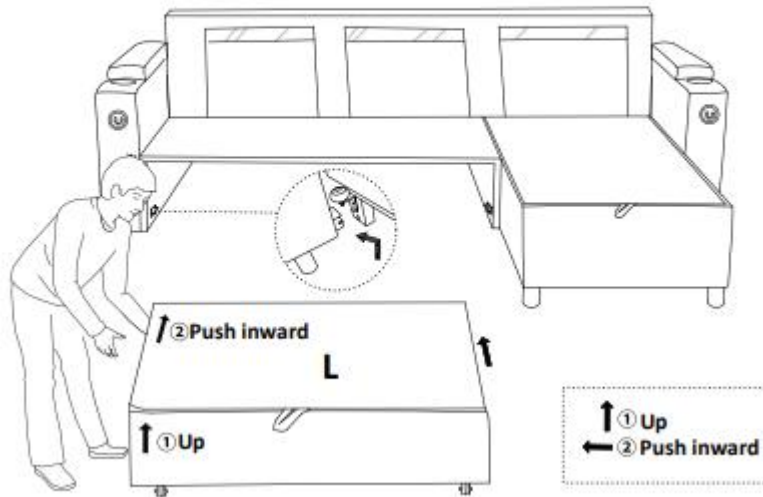


U shape L 1

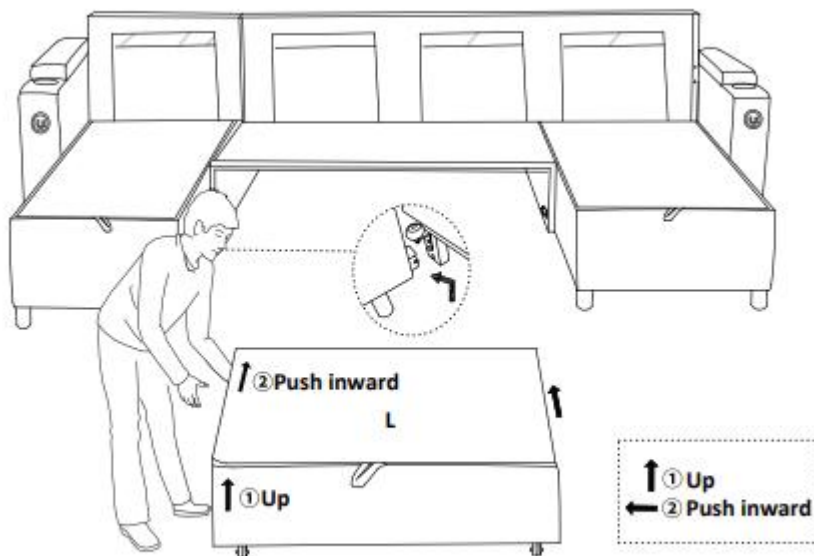


Step9


L shape E  2 F  1 G  3 H  2

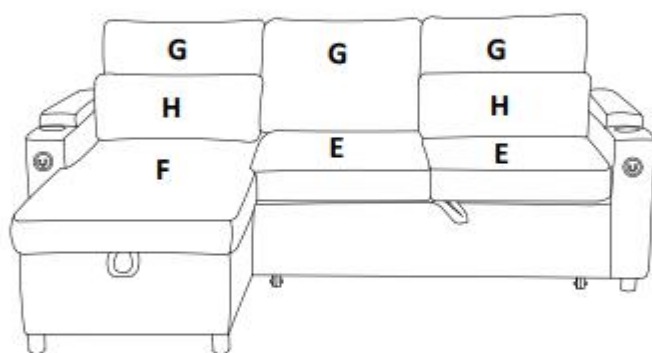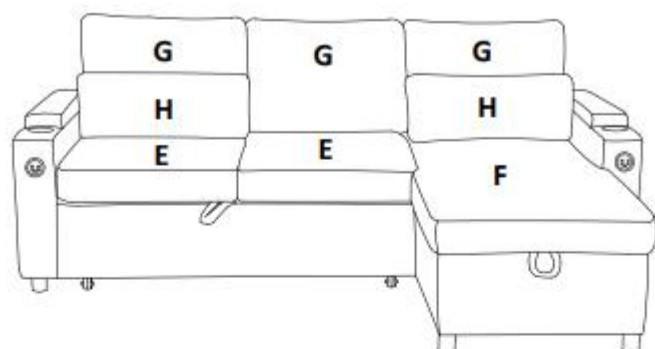



U shape E  2 F  2 G  4 H  2

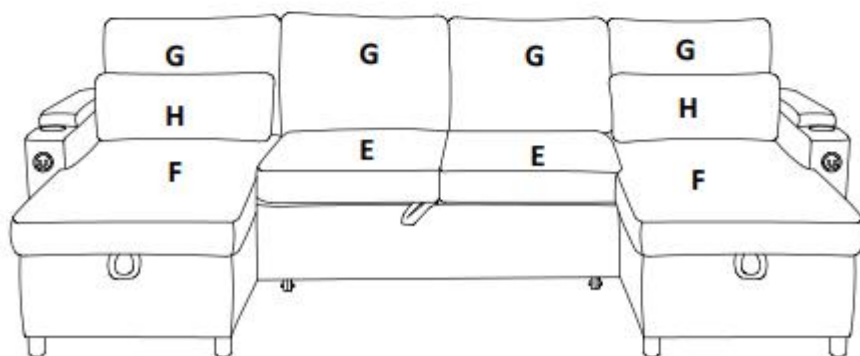



How To Replace USB?

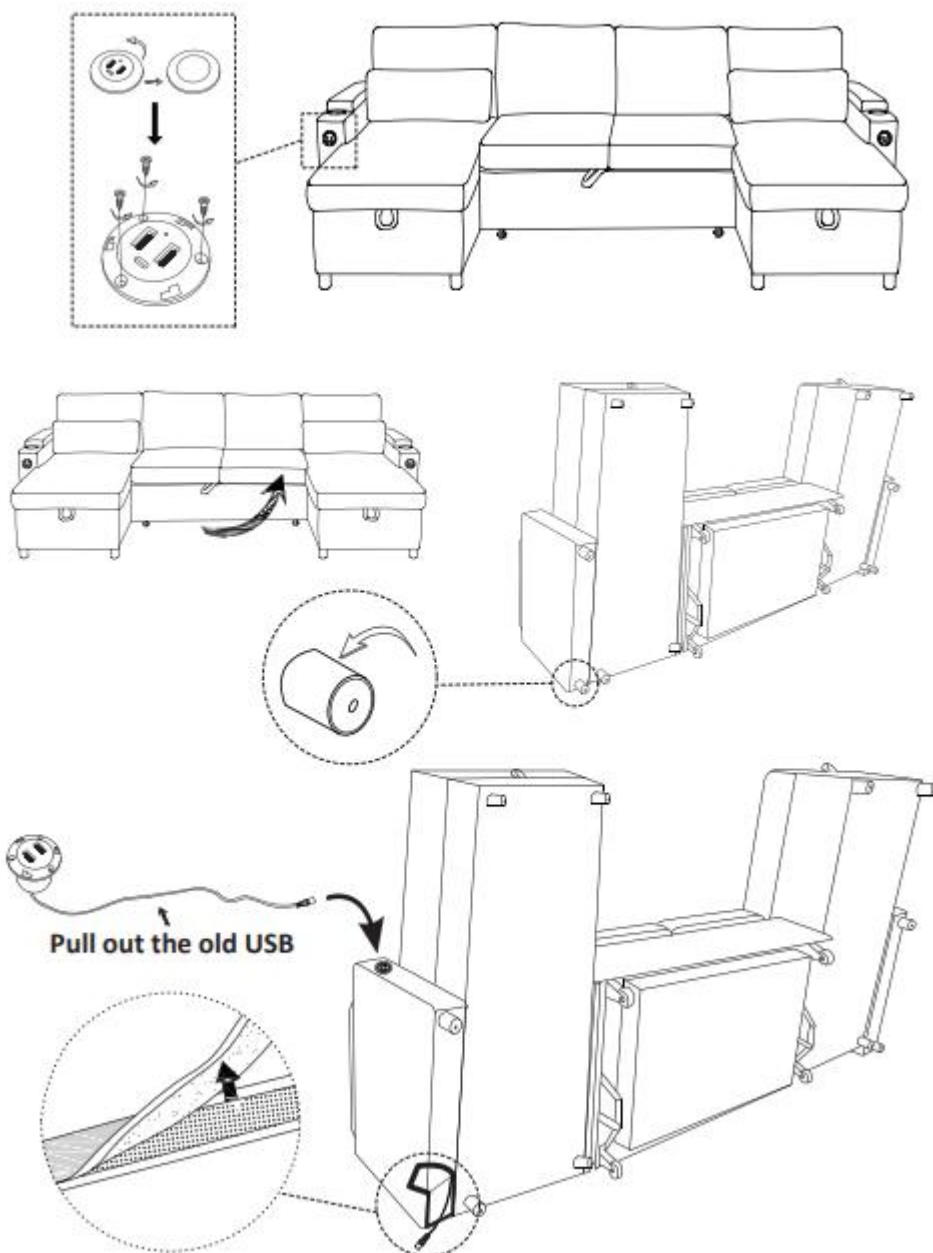

Pull in the new USB and tighten the screws.

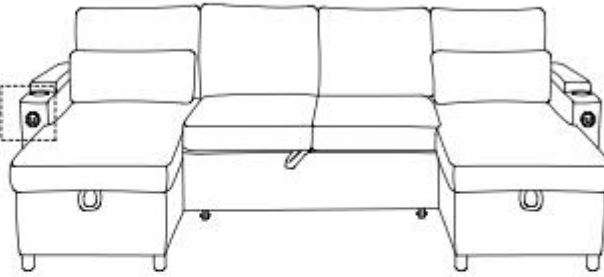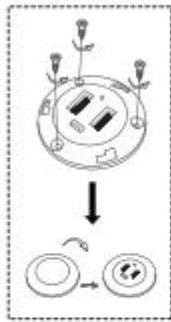


Find the USB cable and pull it out.

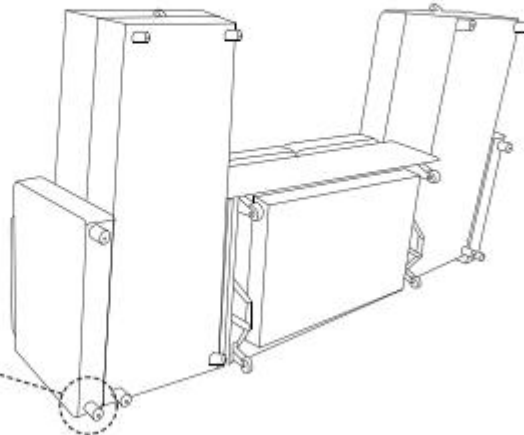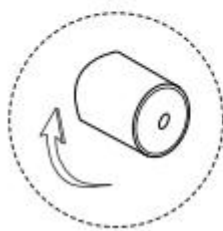

Your cushions come vacuum packed and sealed for shipping. To restore the cushion's original shape, follow the steps below.

After packing up, place them somewhere dry and ventilated. After about 72 hours it can be restored to its best-use condition.

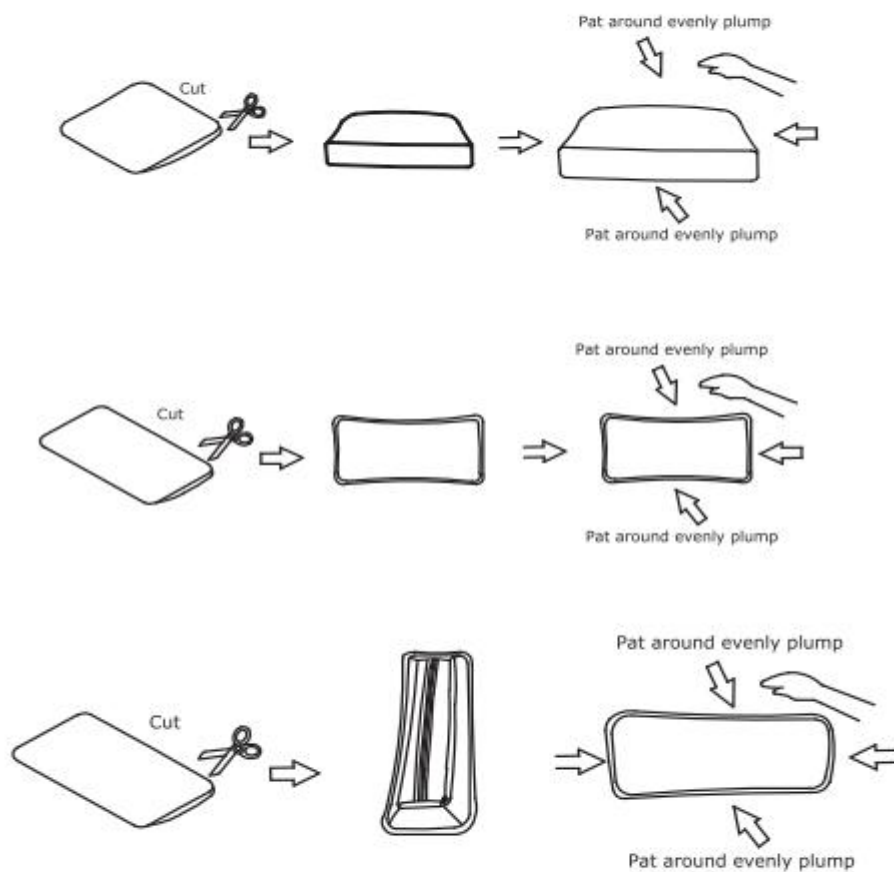

Uneven Fabric is a normal phenomenon that the first time you open it, the fabric is uneven. Because the fabric is easy to crease after long time transport in vacuum compression. You can use an iron to smooth it out, have a try!