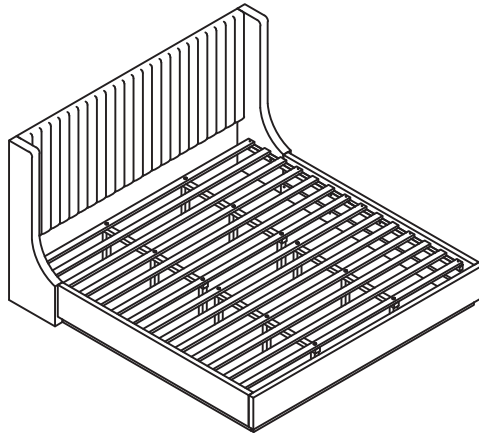


USER'S MANUAL

UPHOLSTERED WOOD BASE BED - KING SIZE



Guide of Manual

- ★ Thanks for your choice. **We will do our best to provide customer service for everyone.**
- ★ Please check to make sure all parts are included as stated when you unpack. If there are parts missing or wrong, please contact us, **we will expeditiously provide reissue accessories, compensation or other services.**
- ★ Instruction should be read carefully. But the manual may not cover every detail of all possible situations and steps. **Please contact us if further information and help are needed. We will respond in a timely manner.**
- ★ Please be patient that the other items are on the way if you buy more than one product.

Warning

- It's kindly advised to assemble this product on a carpeted floor to protect it from being scratched.
- Small parts are included. Please keep the product away from children while assembling. Do not let children play or jump on the product. Do not stand on the item or use as a step ladder.
- Please pay attention to the sharp corners during assembly. We recommend the use of gloves to prevent the undesired injury.
- Prior to use, please check to see if there's any loosening screw or part. Make sure that each screw and part is correctly installed and securely fastened.
- Usually it's unnecessary to use electric drill. Please at a low gear if you need.

Care and Maintenance

- Use a soft, clean cloth that will not scratch the surface when dusting.
- There's no need to use furniture polish. If you need, test it first in an inconspicuous area. Using solvents of any kind on your furniture may damage the finish. Never use water to clean your furniture as it may cause damage to the finish.
- Liquid spills should be removed immediately. Gently blot the spill with a soft clean cloth to avoid rubbing.

Further Advice About The Furniture Care

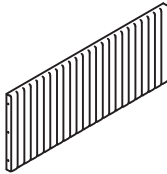


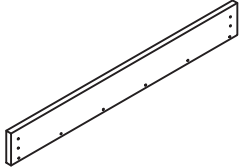
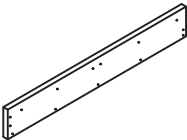
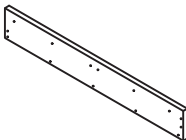



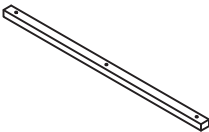


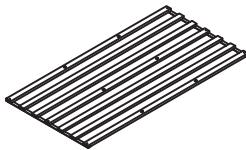

- It is best to keep your furniture in a climate-controlled environment.
- We recommend to keep furniture from sunlight exposure to avoid possible surface damage.
- Following these important and helpful tips will help retain your furniture's performance even when it ages.
- Periodically (every 90 days) make sure the screws are fully tightened.

**⚠ MAX WEIGHT CAPACITY: 1300LBS
DO NOT STAND ON THE ITEM**



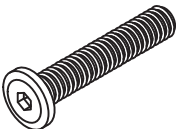









Part List & Assembly Instruction

1. Make sure all part are in the package.
2. "+" in below list indicates that additional pieces are replacement parts.
3. Do not fully tighten anything until all screws, nuts, washers and bolts are in place.

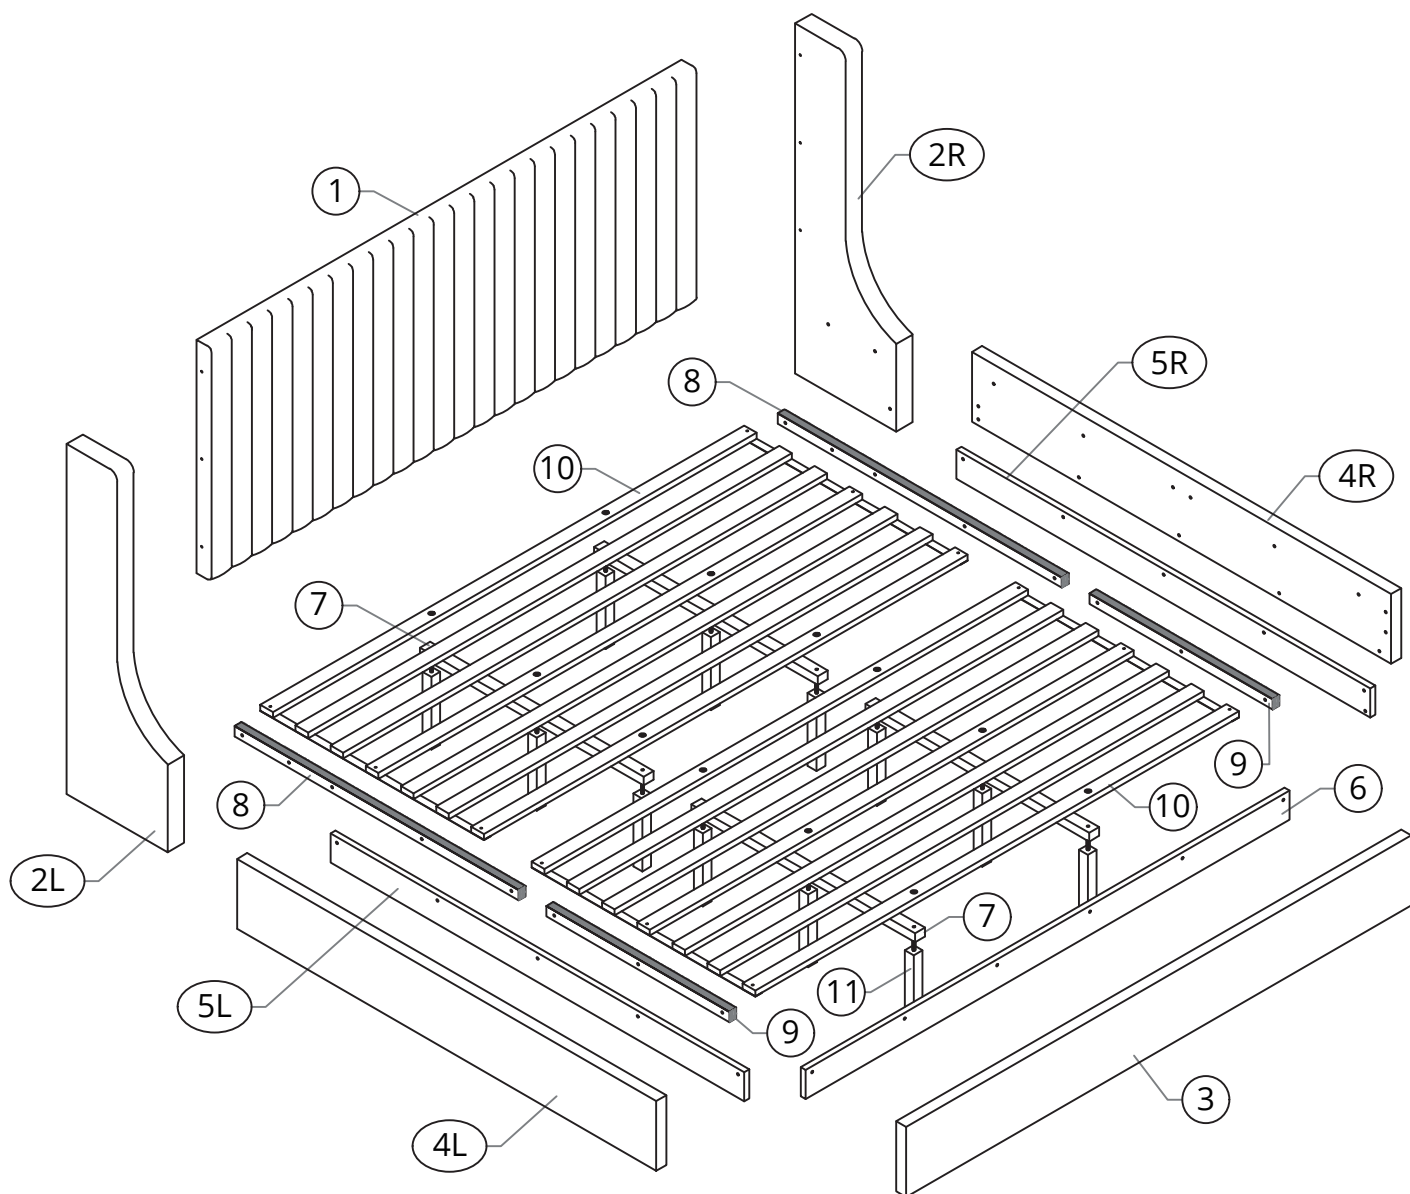
Part List

<div>① x 1PC</div> <div>Headboard</div> <div></div>	<div>②L x 1PC</div> <div>Left Headboard Leg</div> <div></div>	<div>②R x 1PC</div> <div>Right Headboard Leg</div> <div></div>	<div>③ x 1PC</div> <div>Footboard</div> <div></div>	
<div>④L x 1PC</div> <div>Side Rail-Left</div> <div></div>	<div>④R x 1PC</div> <div>Side Rail-Right</div> <div></div>	<div>⑤L x 1PC</div> <div>Bottom Rail Of The Left Side Rail</div> <div></div>	<div>⑤R x 1PC</div> <div>Bottom Rail Of The Right Side Rail</div> <div></div>	<div>⑥ x 1PC</div> <div>Bottom Rail Of The Footboard</div> <div></div>
<div>⑦ x 4PCS</div> <div>Slats Support Bar</div> <div></div>	<div>⑧ x 2PCS</div> <div>Support Rail-Long</div> <div></div>	<div>⑨ x 2PCS</div> <div>Support Rail-Short</div> <div></div>	<div>⑩ x 2 SET</div> <div>Slats</div> <div></div>	<div>⑪ x 12PCS</div> <div>Slat Supporting Legs</div> <div></div>





Hardware List (Cross-head Screwdriver, Not included but required).

①A x 12+2PCS Screw : 5/16" x 1 inch" 	①B x 4+1PC Screw : 1/4" x 5/8 inch" 	①C x 38+3PCS Screw : 1/4" x 1.3/4 inch" 	①D x 12+2PCS Flat Washer : 5/16" 	①E x 12+2PCS Spring Lock Washers : 5/16" 	①F x 42+4PCS Flat Washer : 1/4" 
①G x 42+4PCS Spring Lock Washers : 1/4" 	①H x 2PCS Metal Bracket 	①I x 2PCS Metal Bracket 	①J x 2PCS Metal Bracket 	①K x 12+2PCS Cross Screw : 4 x 1 inch" 	①L x 1PC Allen Wrench : L5" 

DESCRIPTION



Step1: Open the back cover of the headboard. Install the leg (2L) to the Headboard (1) by using the screws (C), spring lock washers (G), flat washers (F) and tighten it with allen wrench(L). Repeat the above procedure with the other leg (2R) to attach it to the headboard (1). Attach the cover with velcro after complete installation. See figure 01.

C		x 6
F		x 6
G		x 6
L		x 1





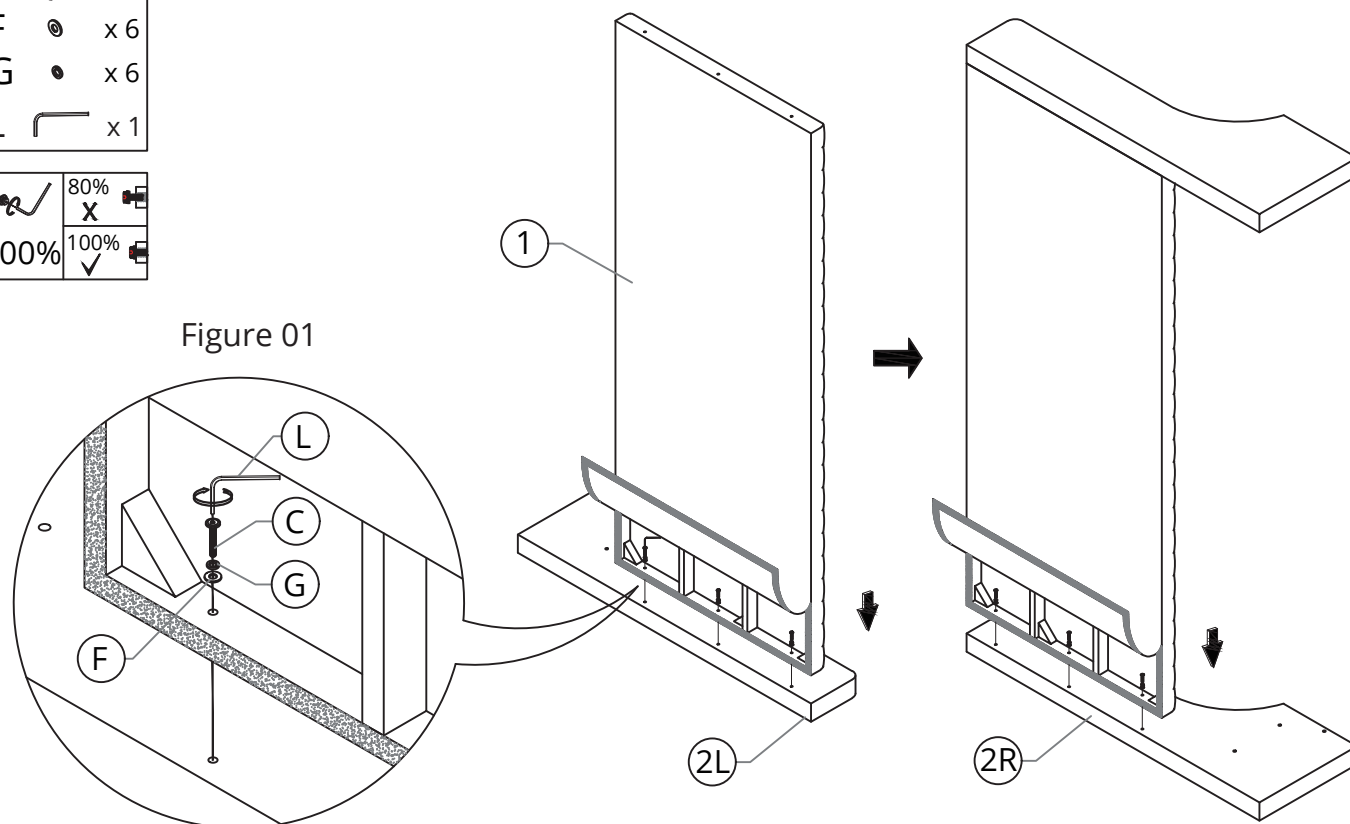








	80%	
	100%	

Figure 01



Step2: Install the bottom rail (6) to the footboard (3) by using the screws (C), spring lock washers (G), flat washers (F) and tighten it with allen wrench (L). See Figure 02.

C		x 6
F		x 6
G		x 6
L		x 1

	80%	
	100%	

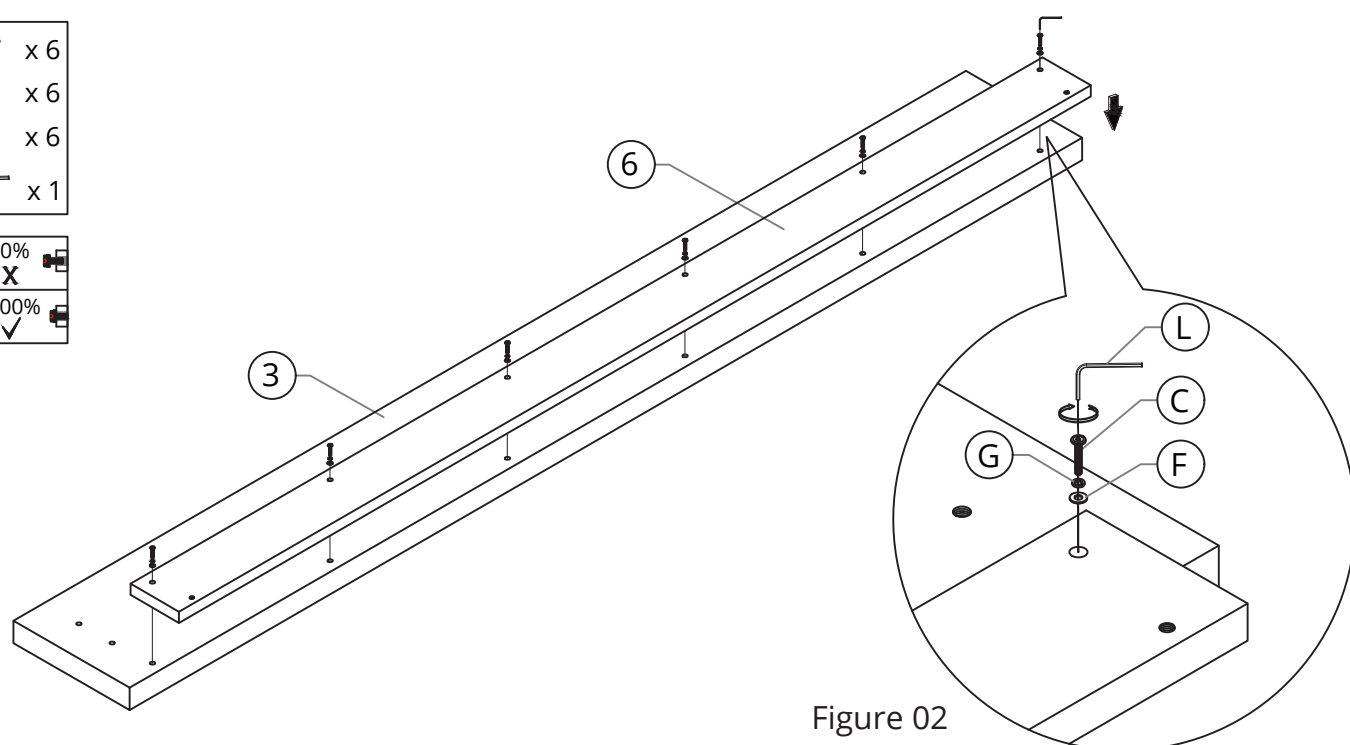




Figure 02

Step3: Install the bottom rail of the side rail (5L/5R) and support rail-long/short (8/9) to the side rail-left/right (4L/4R) by using the screws (C), spring lock washers (G), flat washers (F) and tighten it with allen wrench (L). See Figure 03A/B.


- C




x 22
- F




x 22
- G



x 22
- L



x 1
- 

80%

X

100%

100%

✓

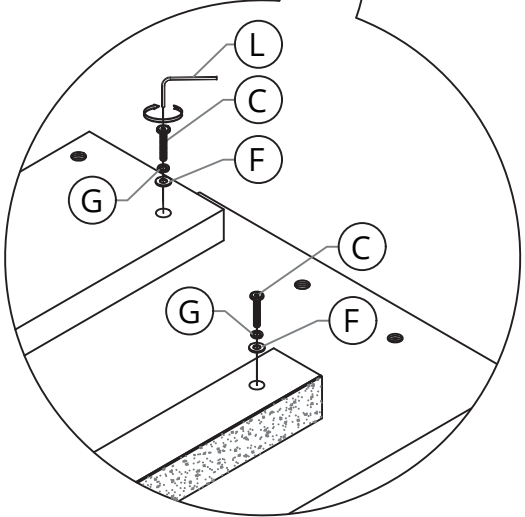
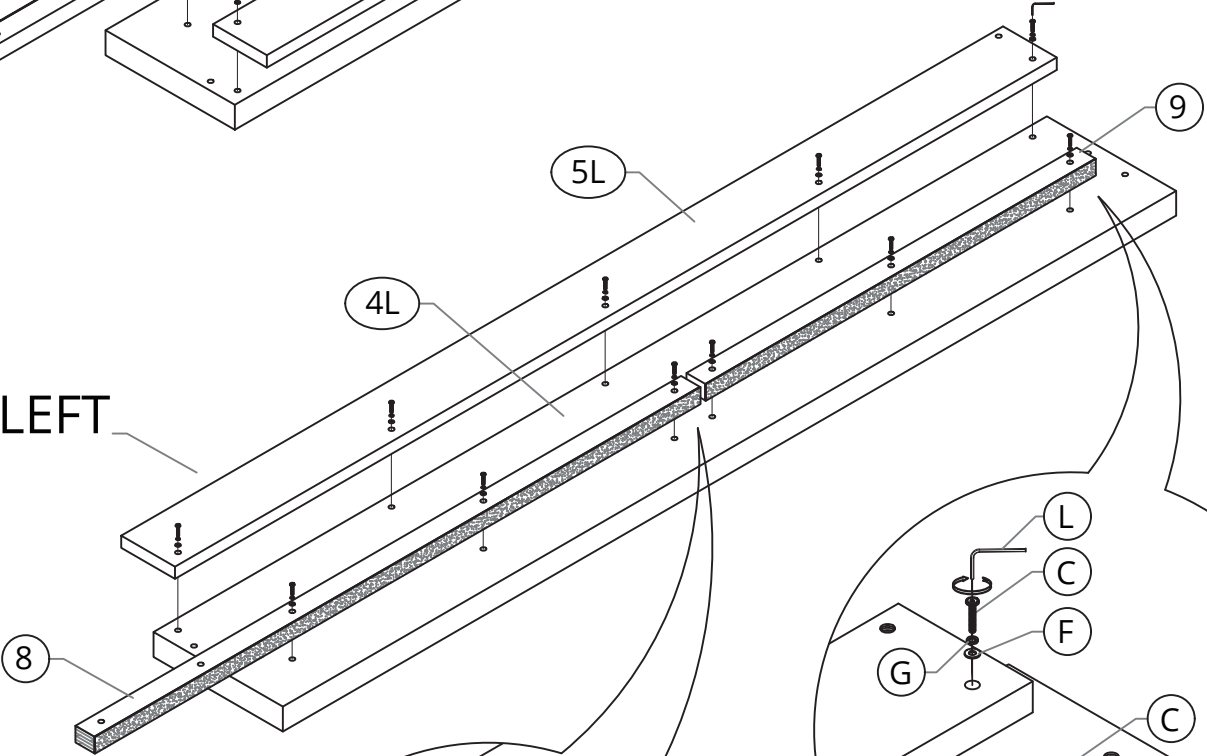
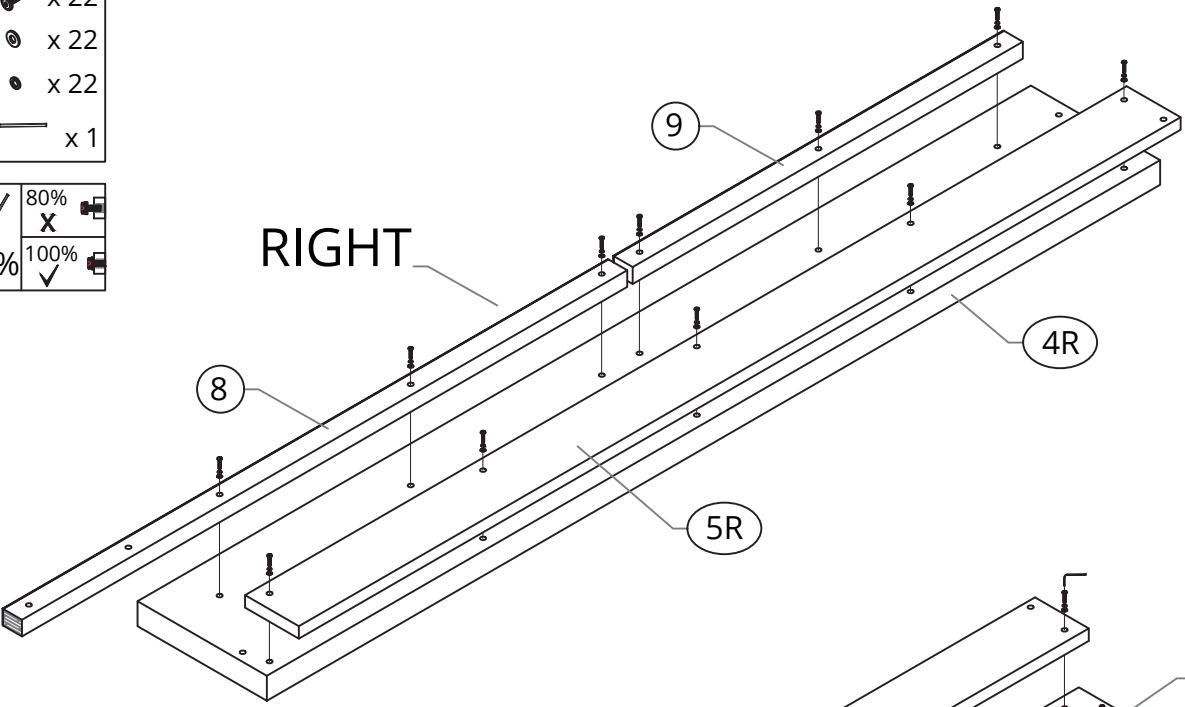


Figure 03A

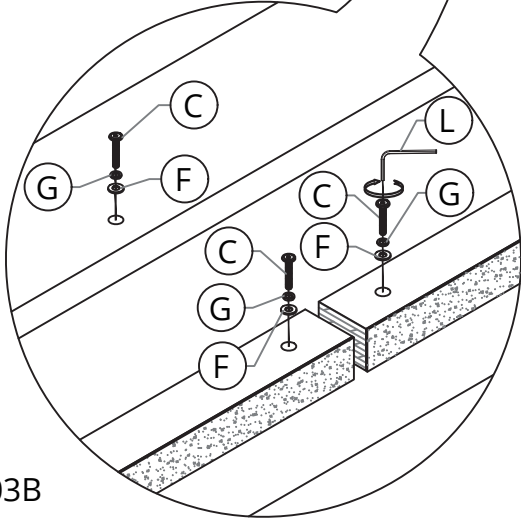














Figure 03B

Step4: Install the metal bracket (H/I/J) to the side rail by using the screws (A/B) with spring lock washers (E/G), flat washers (D/F) and tighten it with allen wrench (L). See Figure 04A/B.

A		x 6
D		x 6
E		x 6
B		x 2
F		x 2
G		x 2
H		x 2
I		x 2
J		x 2
L		x 1

 80%
  100%

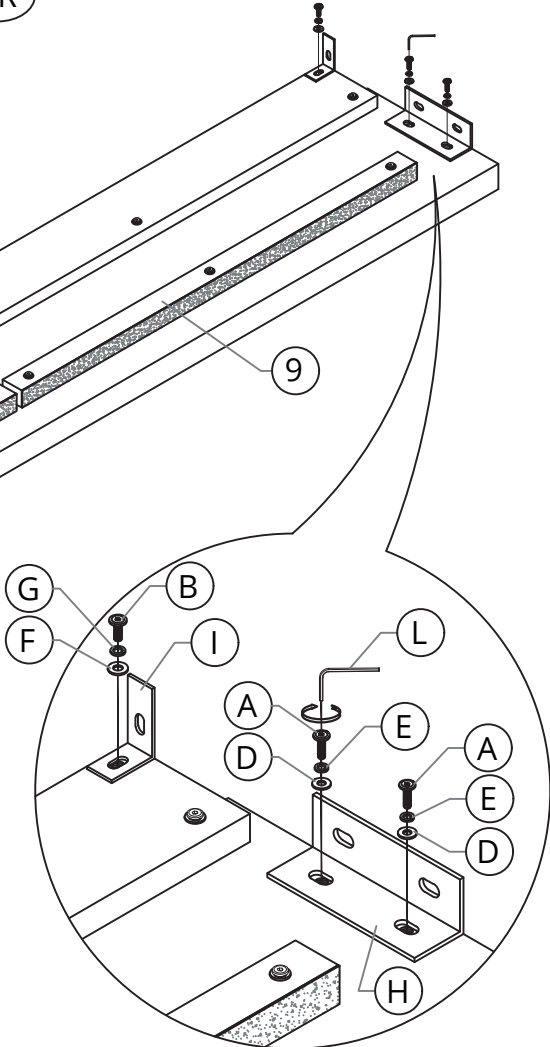
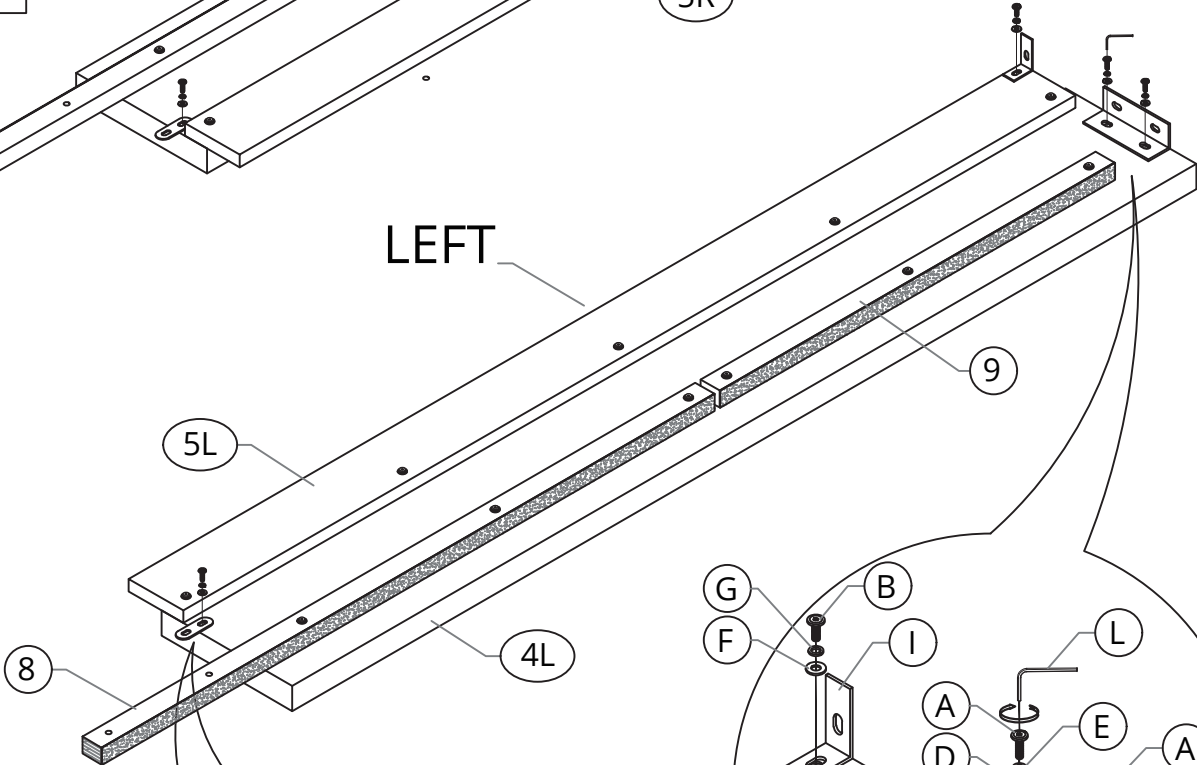
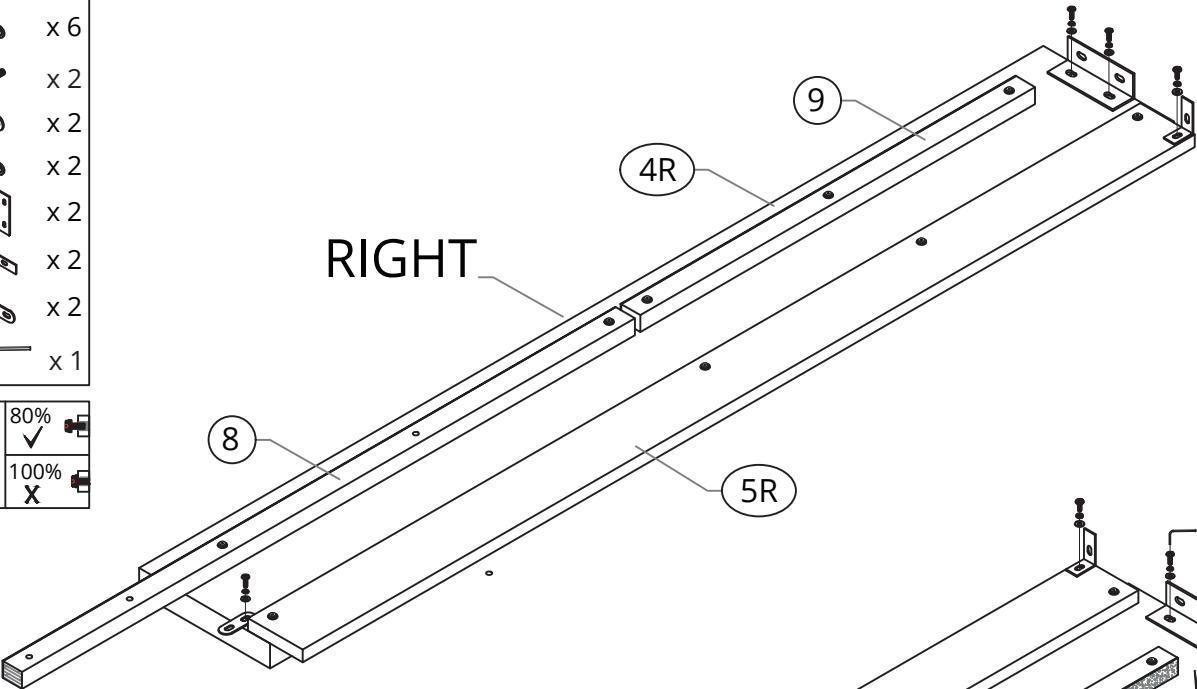


Figure 04A

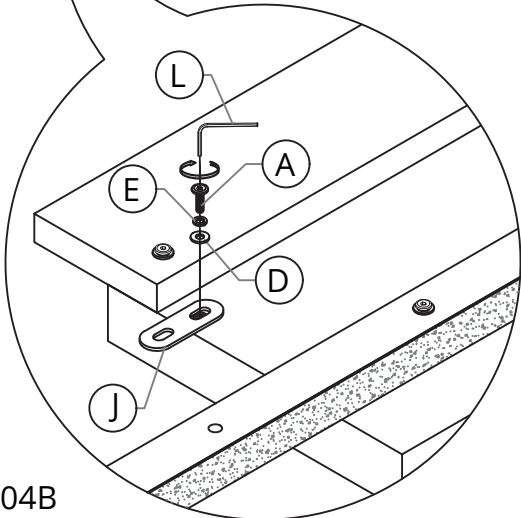













Figure 04B

Step5: Install the side rail to the headboard and footboard by using the screws(A/B/C) with spring lock washers (E/G), flat washers (D/F) and tighten it with allen wrench (L). See Figure 05A/B.

Re-tighten all bolts for a snug fit after assembly, please DO NOT OVER-TIGHTEN.

A		x 6
D		x 6
E		x 6
B		x 2
C		x 4
F		x 6
G		x 6
L		x 1

	80%	
100%		

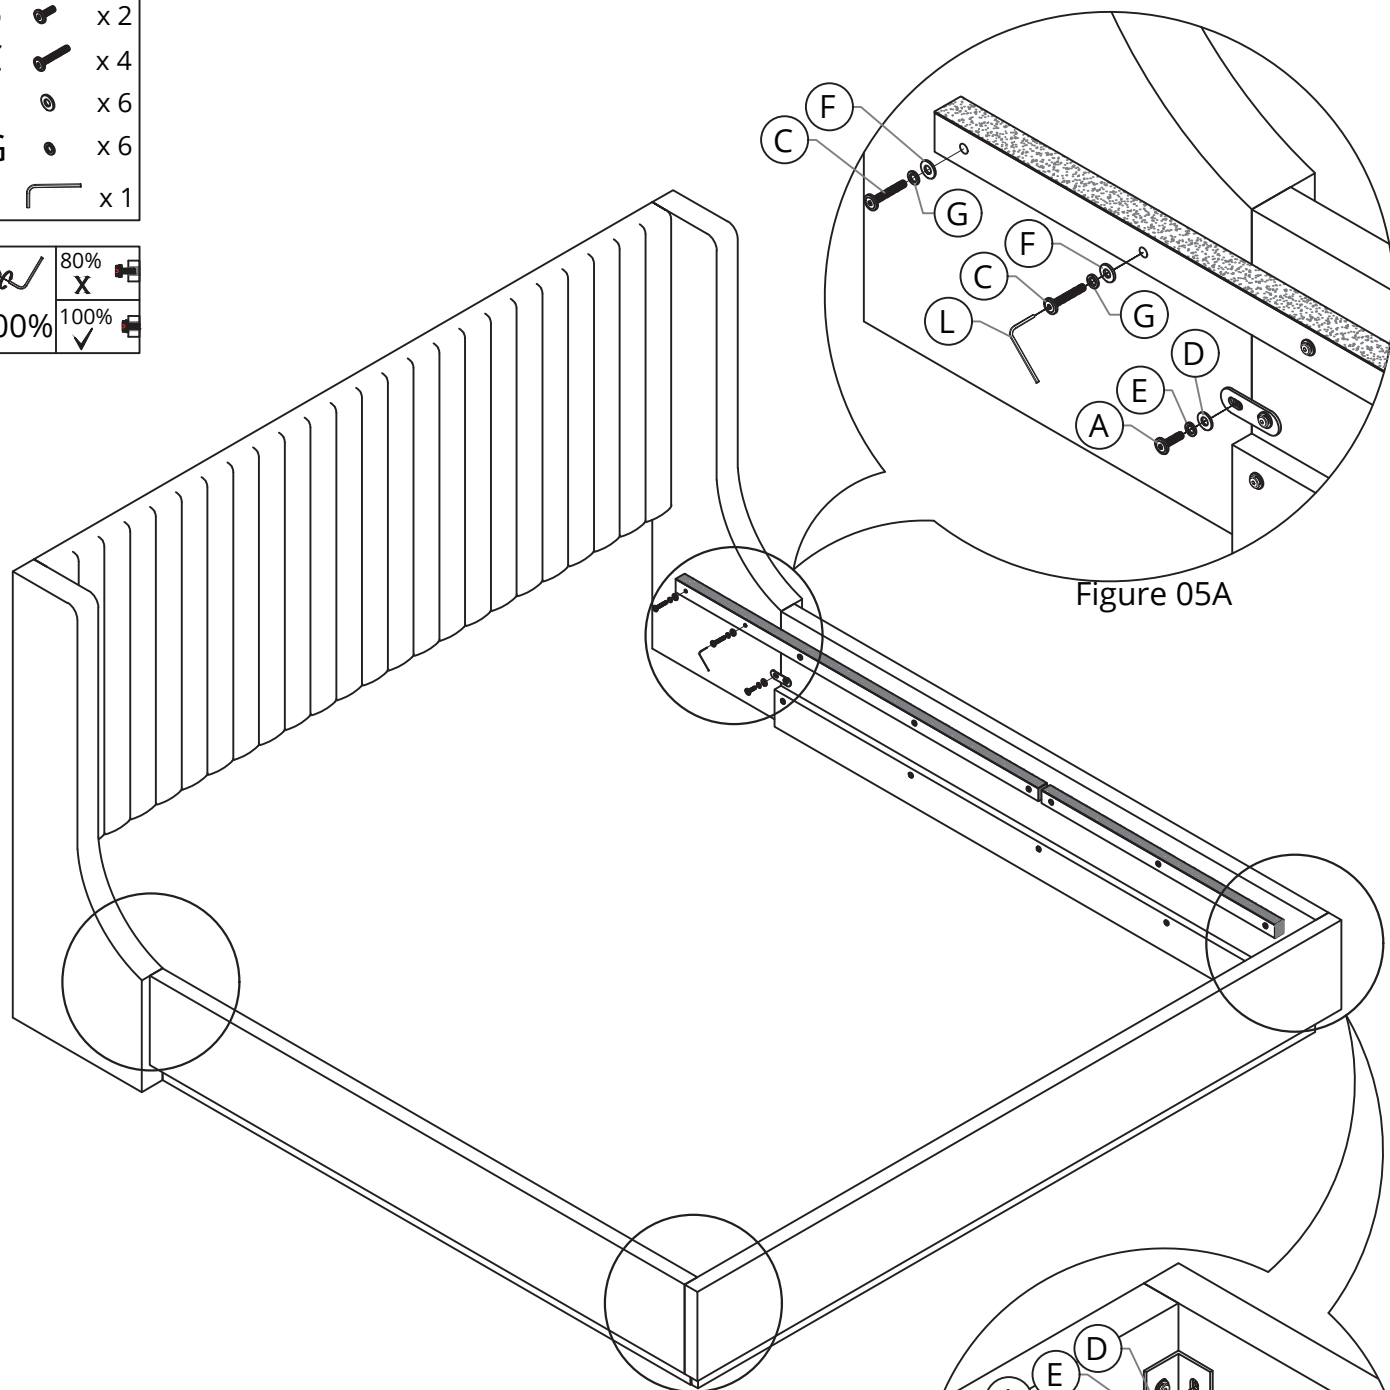
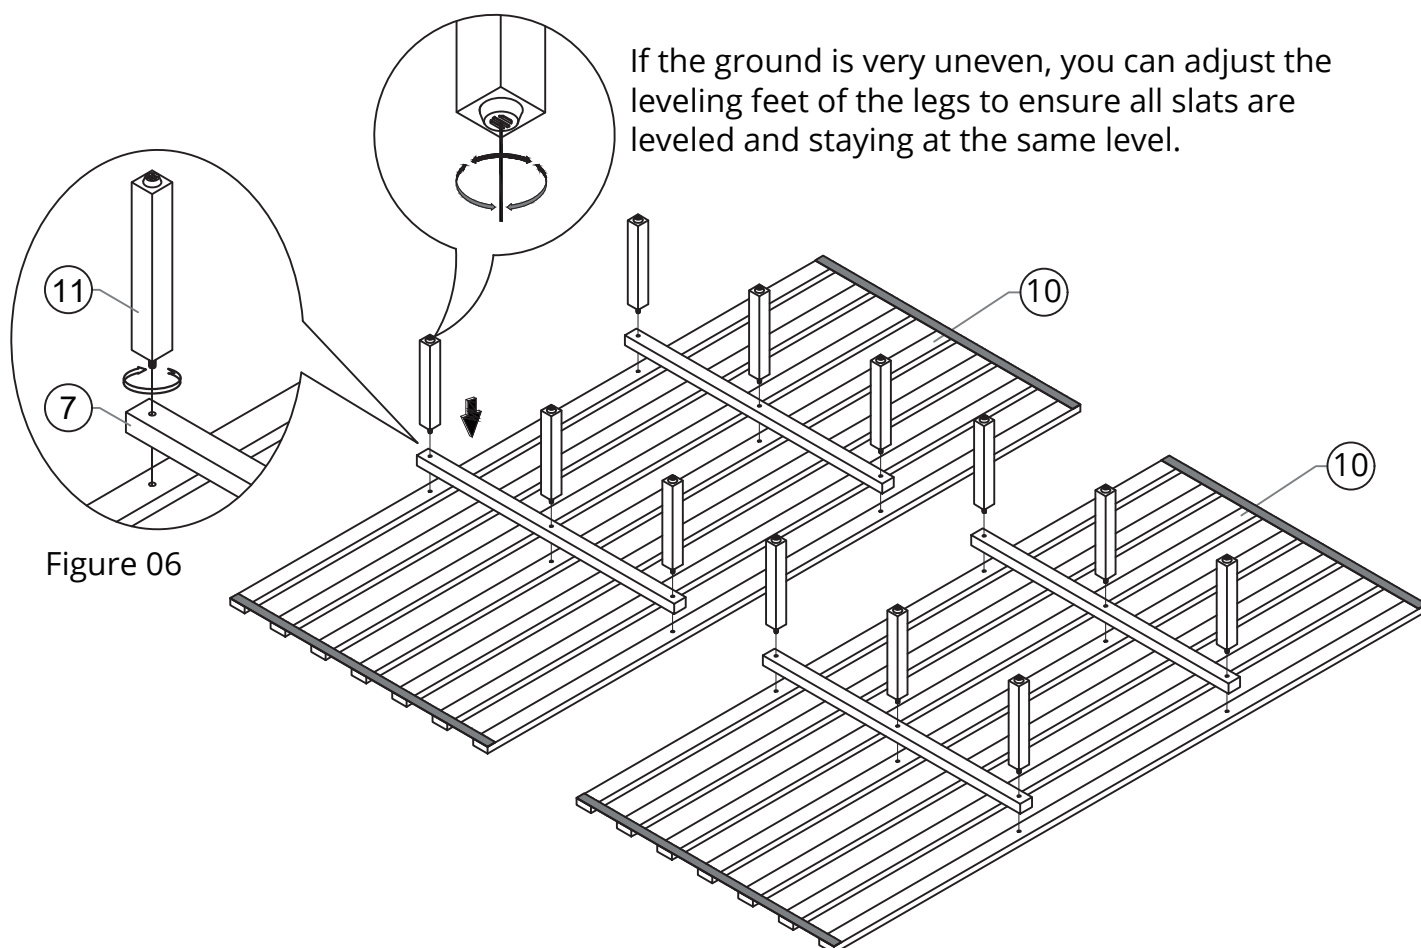


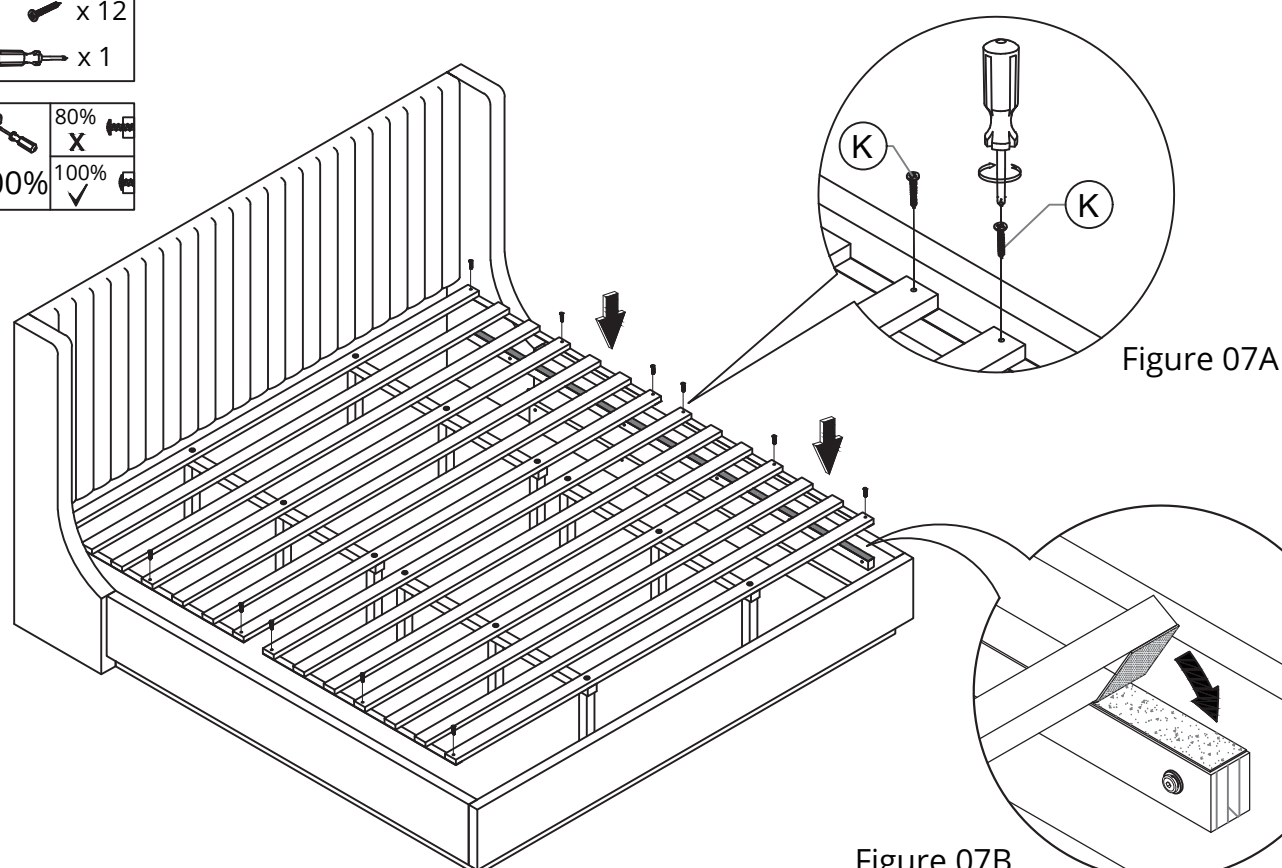
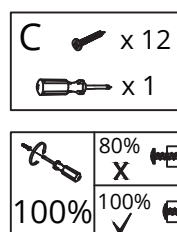
Figure 05A

Figure 05B

Step6: Install the slats support bar (7) to the slats (10) by tightening the slat supporting legs (11). See Figure 06.



Step7: Attach the bed slats to the bed frame with Velcro and cross screws (K). See Figure 07A/B.



FINISHED

