

## Care & Maintenance



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Not for commercial use. For residential use only.



- Stains may be removed with mild soap solution and damp cloth.




- Children should not climb or jump on the furniture.




- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

# ASSEMBLY INSTRUCTIONS

FULL BED  
SKU CODE: 67062.00-F

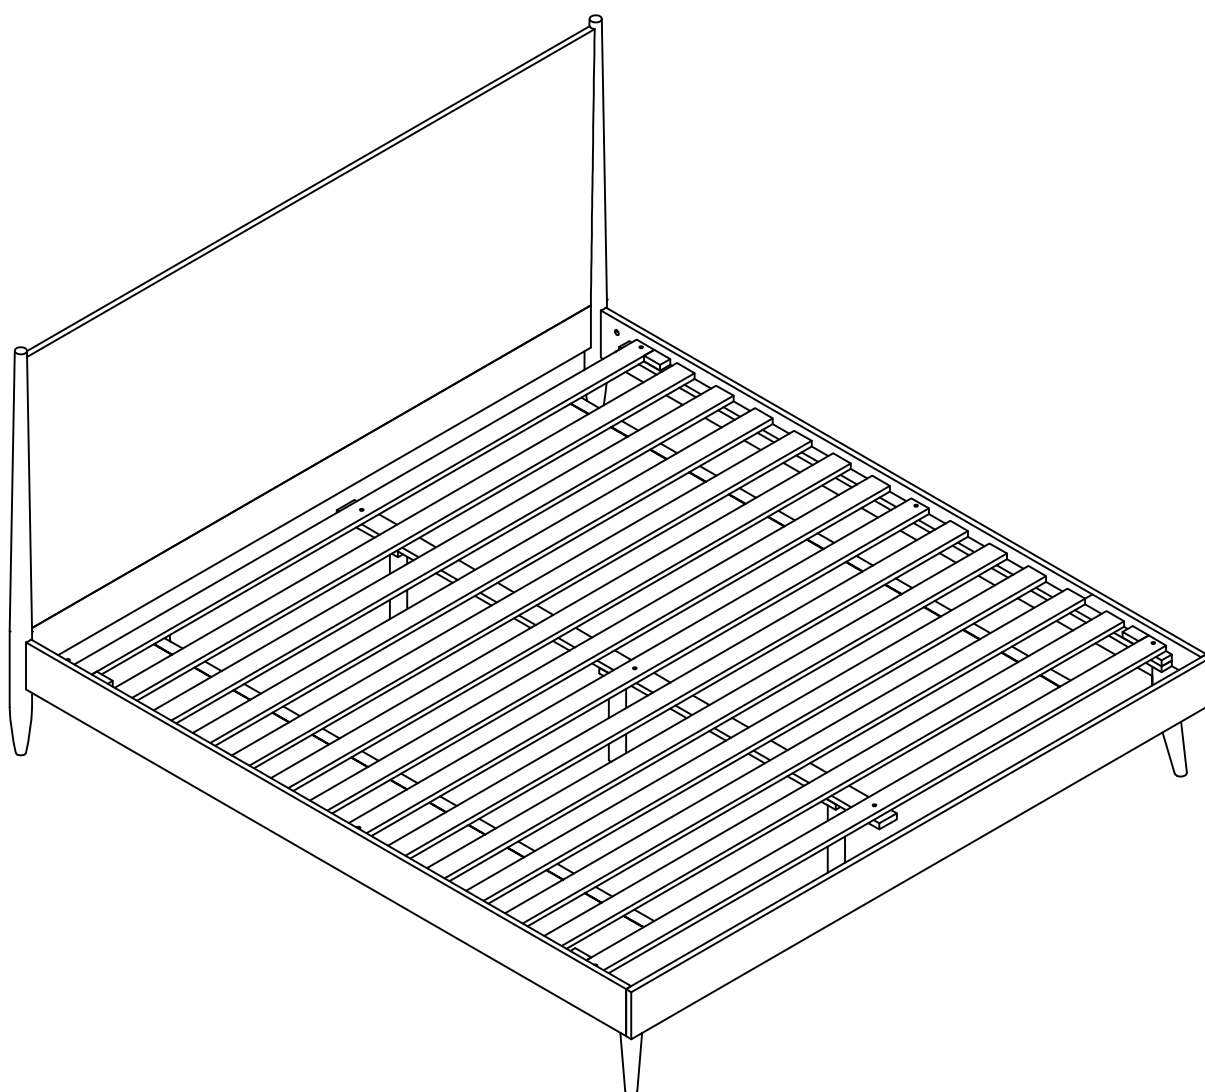


## Detail View

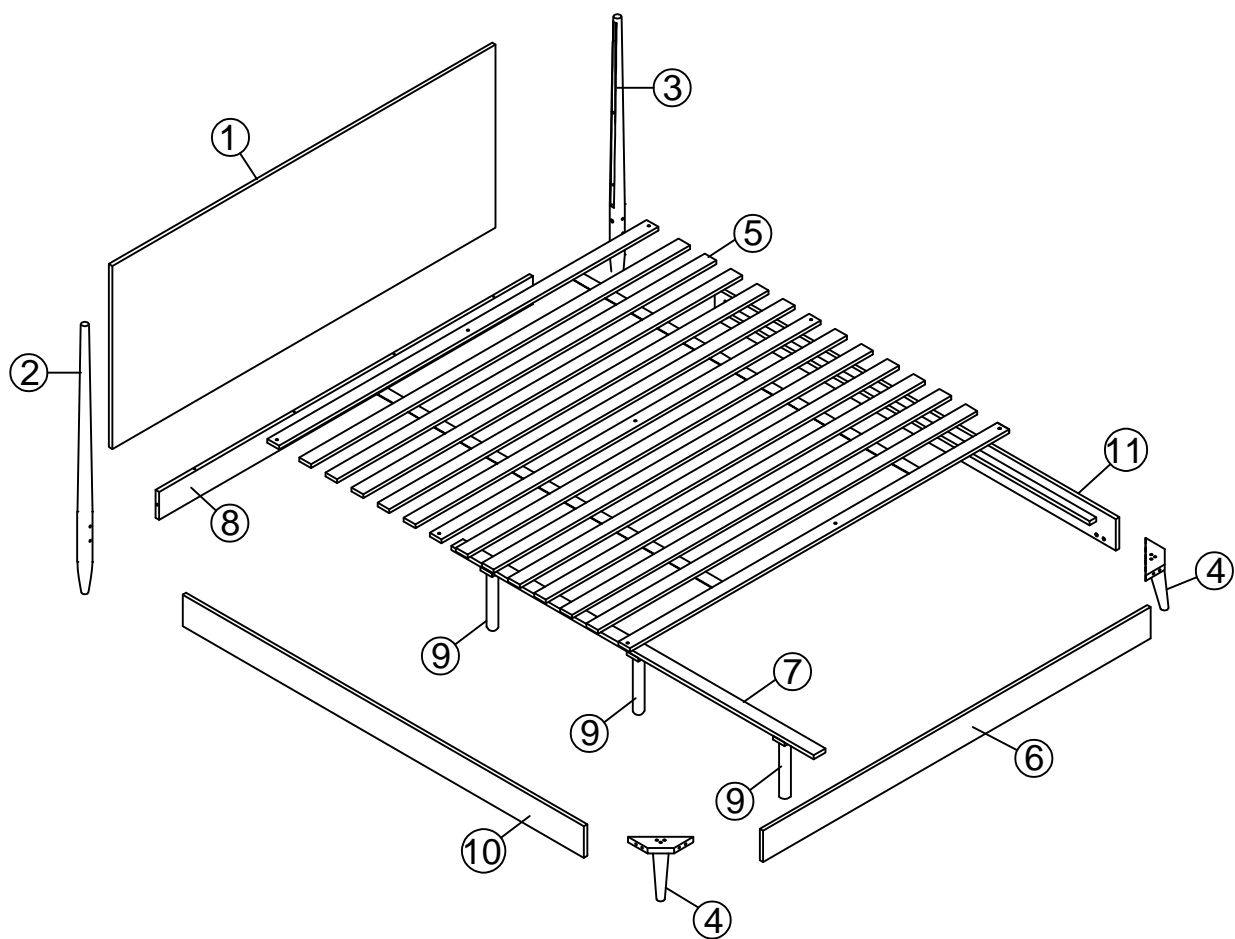

## Part List


**67062.00-F-H**

① x 1 PC

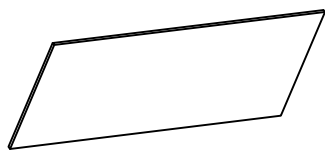


**Frame Headboard**

② x 1 PC




**Left Headboard Leg**

③ x 1 PC




**Right Headboard Leg**

④ x 2 PCS

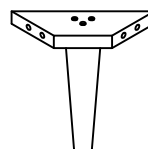

**Footboard Legs**


⑤ x 1 PC

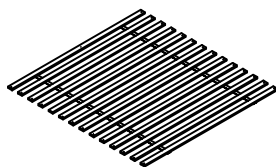

**Slat**


**67062.00-F-P + Hardware inside**

⑥ x 1 PC

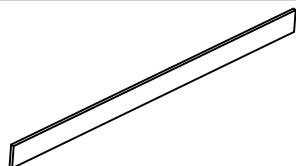


**Panel Footboard**

⑦ x 1 PC



**Center support bar**

⑧ x 1 PC

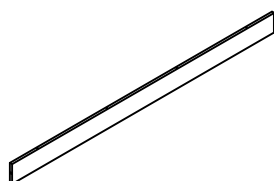

**Support Headboard**

⑨ x 3 PCS




**Support Leg**

⑩ x 1 PC



















**Left SideRail**

⑪ x 1 PC




**Right SideRail**


## Hardware List

<b>Ⓐ x 4PCS</b>  <b>Ø1/4"x100mm</b>	<b>Ⓑ x 4PCS</b>  <b>Ø1/4"x75mm</b>	<b>Ⓒ x 2PCS</b>  <b>Ø5/16"x60mm</b>
<b>Bolts</b>	<b>Bolts</b>	<b>Bolts</b>
<b>Ⓓ x 8PCS</b>  <b>Ø1/4"x50mm</b>	<b>Ⓔ x 6PCS</b>  <b>Ø1/4"x30mm</b>	<b>Ⓕ x 4PCS</b>  <b>Ø5/16"x15mm</b>
<b>Bolts</b>	<b>Bolts</b>	<b>Bolts</b>
<b>Ⓖ x 24PCS</b>  <b>Ø5/16"x13mm</b>	<b>Ⓗ x 22PCS</b>  <b>Ø5/16"x19mm</b>	<b>Ⓘ x 1PC</b>  <b>100*30*4mm</b>
<b>Spring Washer</b>	<b>Flat Washer</b>	<b>Allen key</b>
<b>Ⓚ x 5PCS</b>  <b>Ø10x30mm</b>	<b>Ⓛ x 4PCS</b>  <b>1/4"*15 (9.5mm)</b>	<b>Ⓜ x 10PCS</b>  <b>Ø4x15mm</b>
<b>Wood dowel</b>	<b>Horizontal-Hole bolts</b>	<b>Wood screws</b>
<b>Ⓝ x 2PCS</b>  <b>Ø5/16"</b>	<b>Ⓞ x 9PCS</b>  <b>Ø4x30mm</b>	<b>Ⓟ x 1PCS</b> 
<b>Curved washers</b>	<b>Wood screws</b>	<b>Left - L - Hooks</b>
<b>Ⓠ x 1PCS</b> 		
<b>Right - L - Hooks</b>		

### ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED)

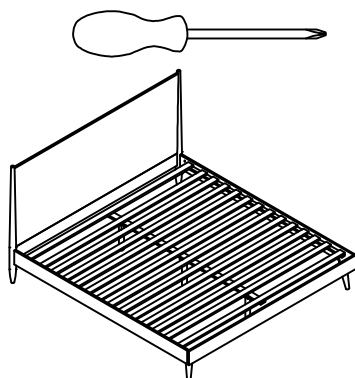


## STEP: 1

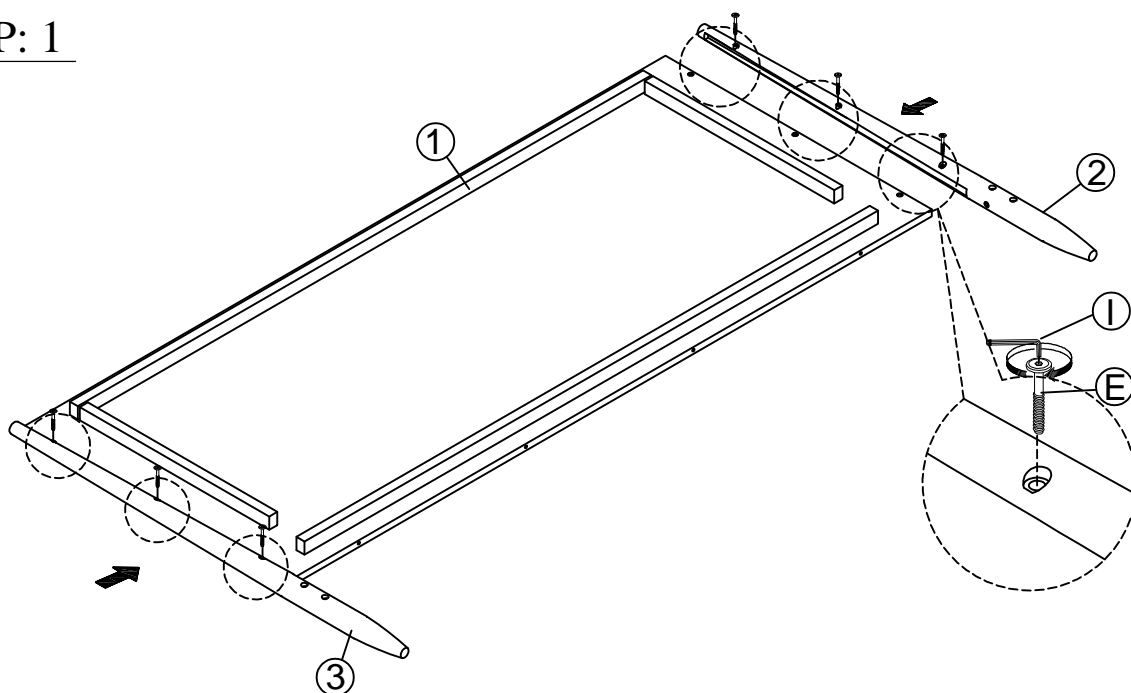


Assemble the frame headboard (1) to the left headboard leg (2), and right headboard leg (3), using Bolts (E), Allen Key (I). Please do not tighten the bolts at this step.

## STEP: 2

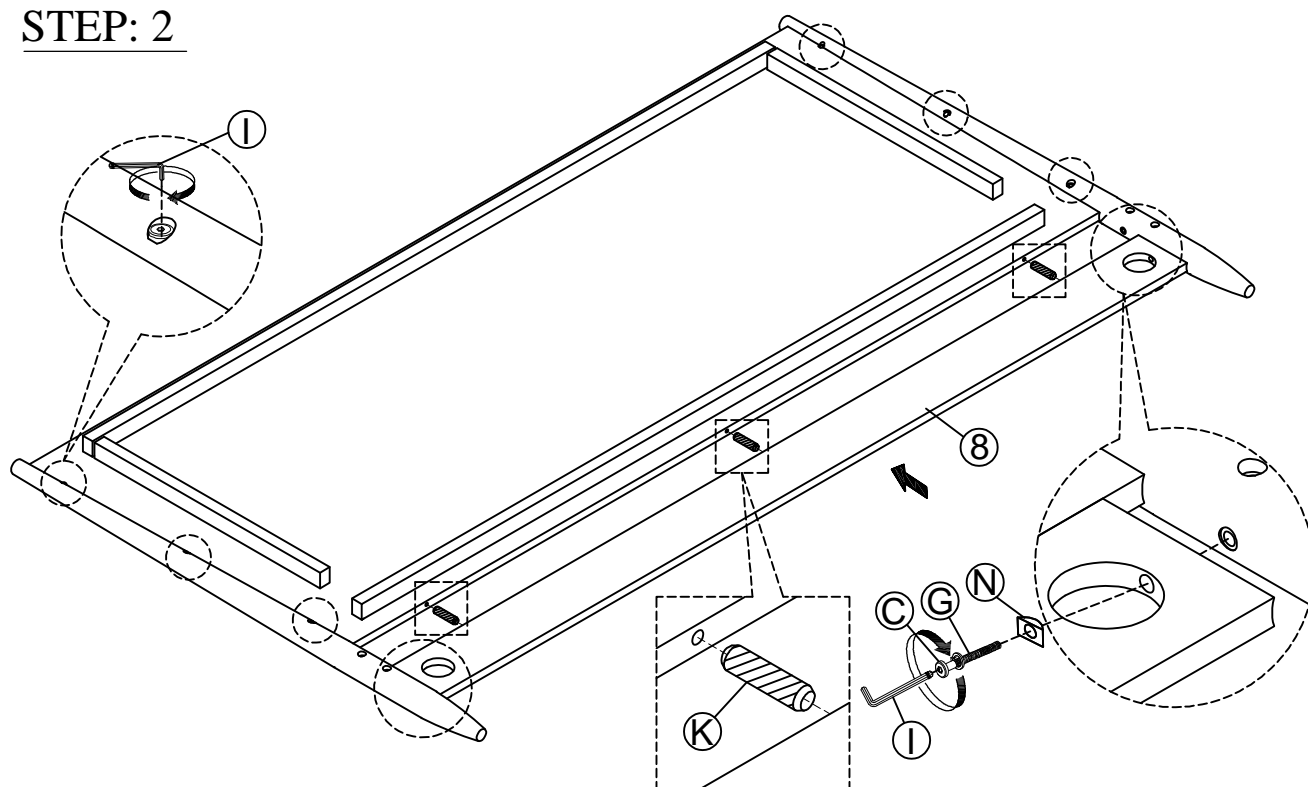


Assemble the support headboard (8) to the left headboard leg (2), and right headboard leg (3), using the wooden dowel (K), bolt (C), Spring Washer (G), Curved washers (N), Allen Key (I). Align and tighten all bolts at this step.

### STEP: 3

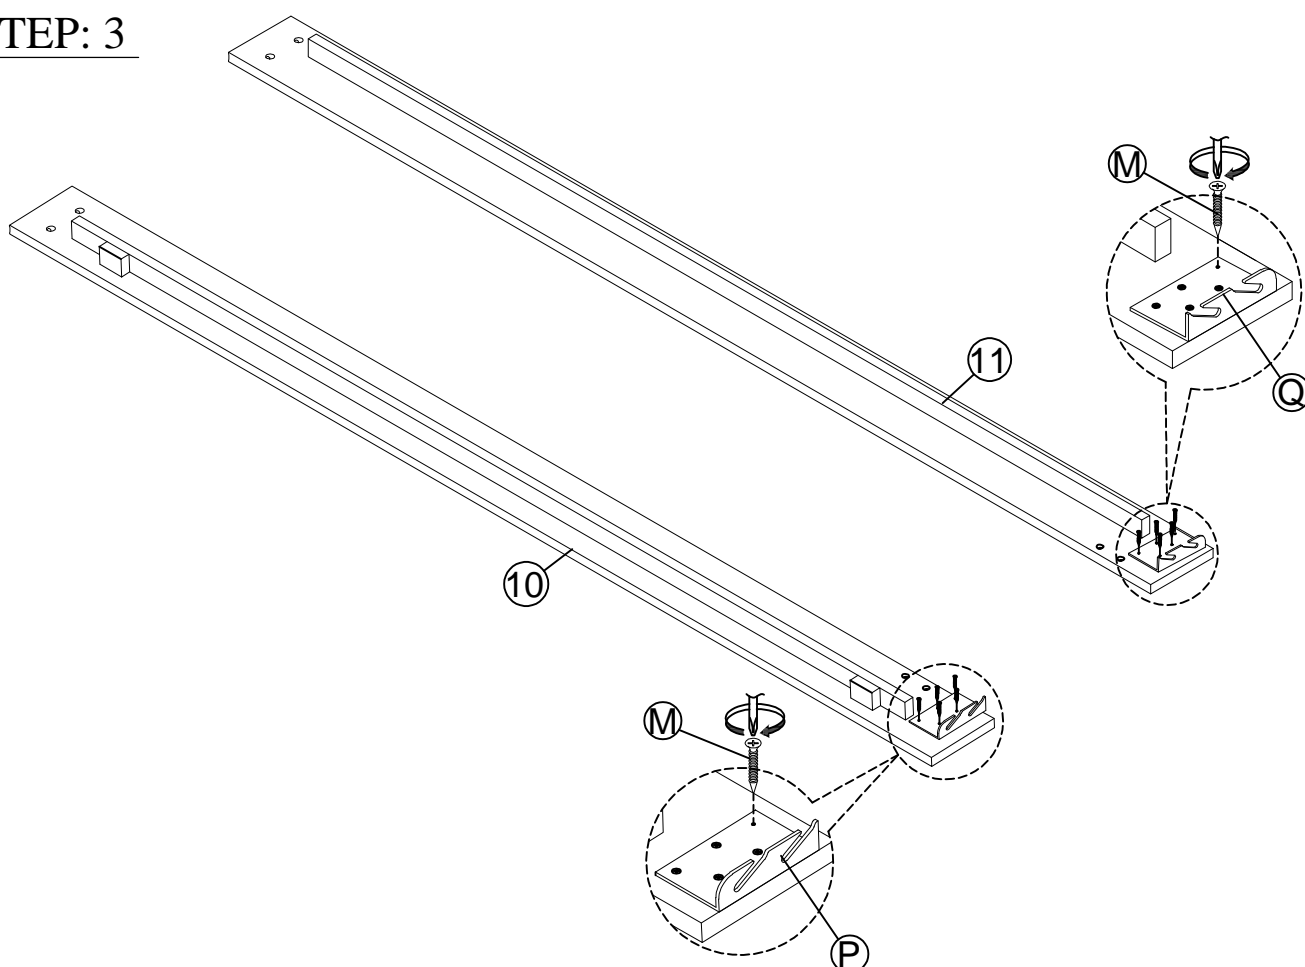


Assemble the Left - L - Hooks (P), onto the left siderail (10), with the Wood screws (M). Be careful not to tighten too hard. Repeat the same procedure for the Right - L - Hooks (Q) and the right siderail (11)

### STEP: 4

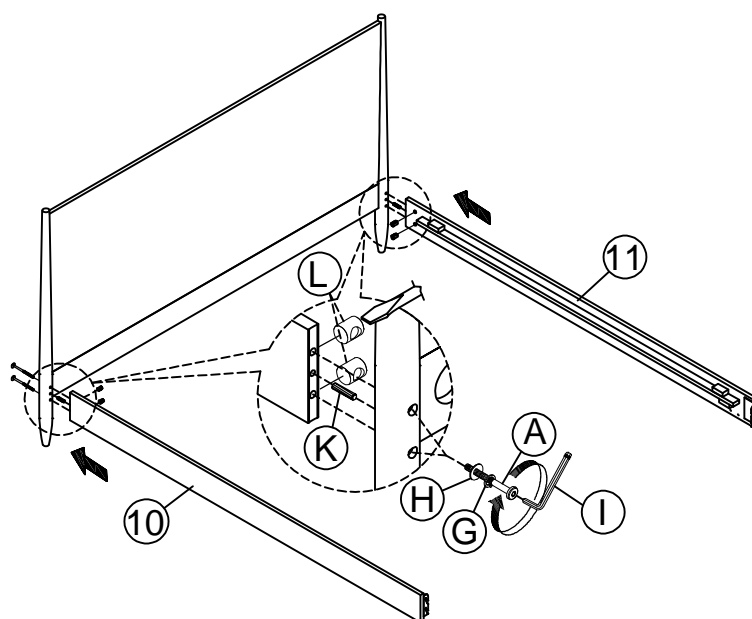

Assemble the left siderail (10), and the right siderail (11) to the headboard (1) in step (2), using the wooden dowel (K), bolt (A), Spring Washer (G), flat washer (H), and horizontal-h bolts (L), Allen Key (I). Tighten the bolts in this step.

## STEP: 5

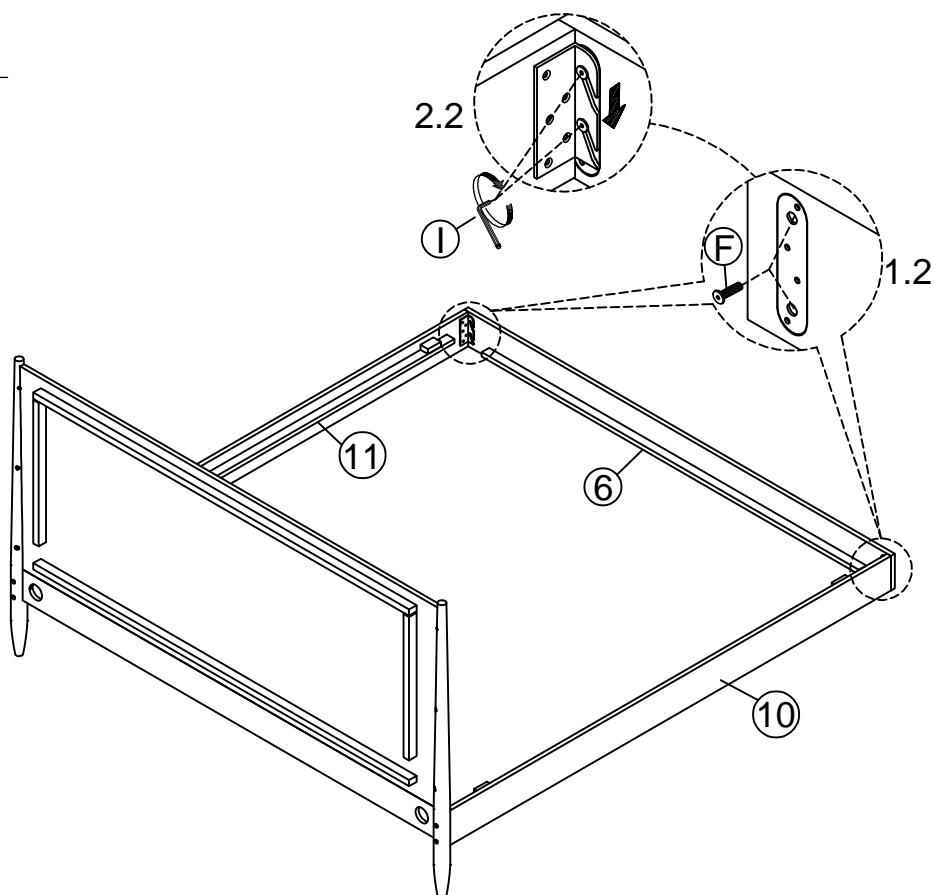


1.2 Assemble the bolt (F) in to panel footboard (6).Please do not tighten the bolts at this step.

2.2 Assemble panel footboard (6) onto the left siderail (10) and the right siderail (11).

Use allen Key (I).Tighten the bolts in this step.


## STEP: 6

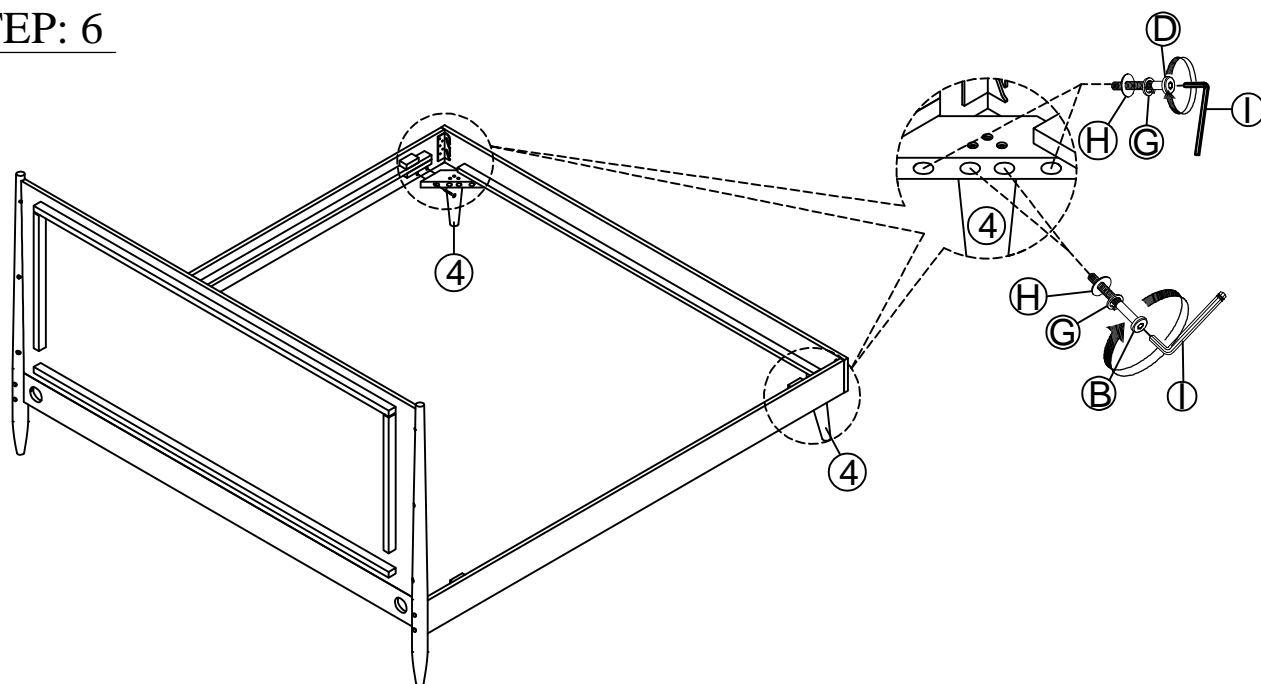

Assemble the Footboard Legs (4) to the panel footboard (6) and left siderail (10) and the right siderail (11) in step (5) ,using the bolt (D) and (B), Spring Washer (G), flat washer (H), Allen Key (I). Align and tighten all bolts at this step.




## STEP: 7

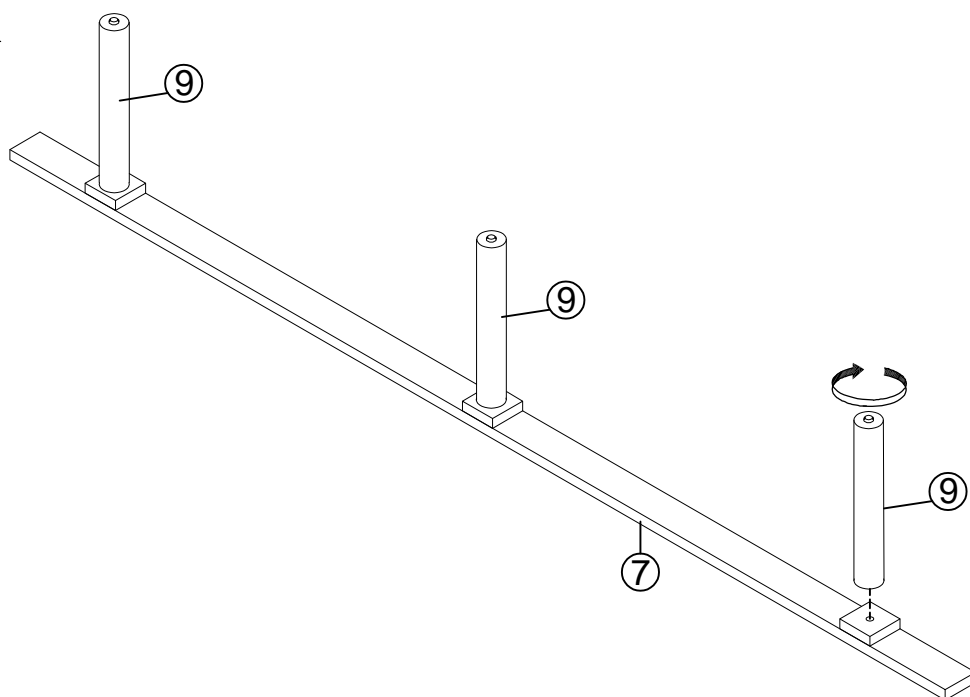

Assemble the support leg (9) into the Center support bar (7)

## STEP: 8

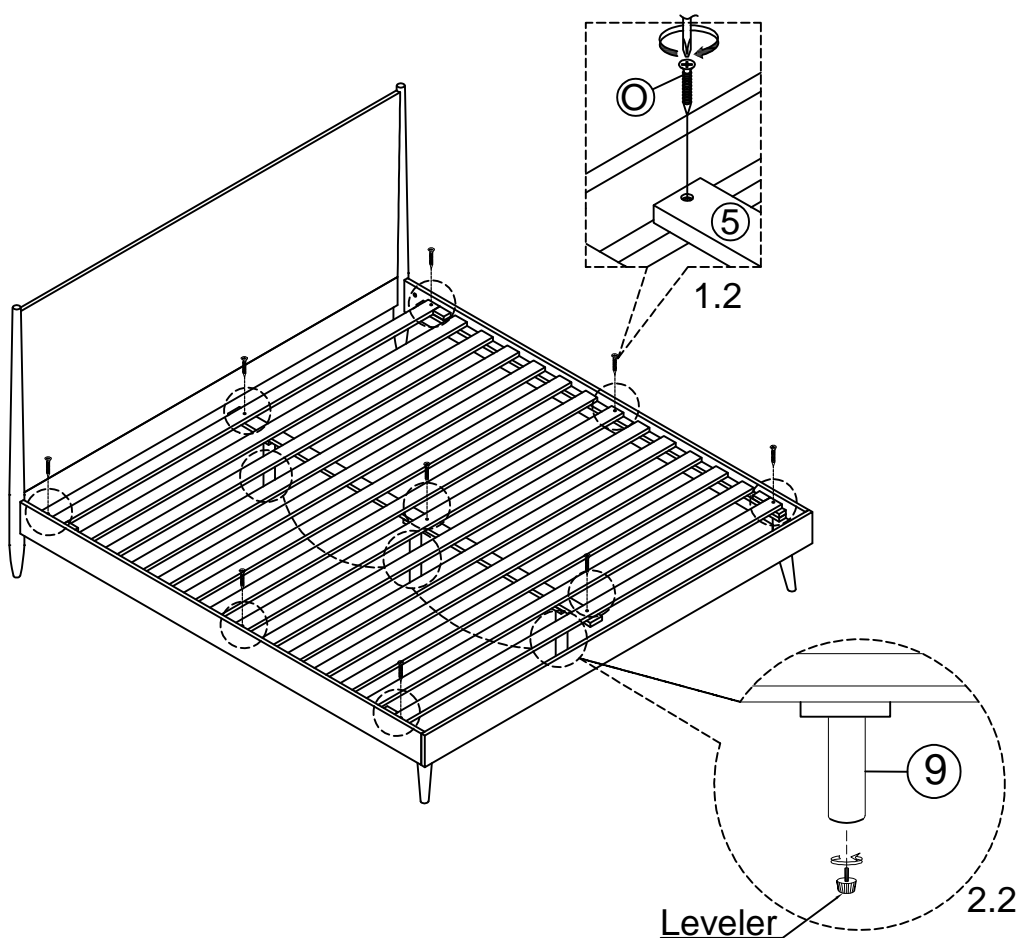

1.2 Place the center support bar in the middle then install the slat (5) to the left siderail (10) and the right siderail (11) and to the center support bar (7) in step (7) Wood screws (O).

Note: do not tighten too hard.

2.2 Adjust the leveler high and low to balance

FINAL

