


Storage Shed 8x10FT

ASSEMBLY INSTRUCTIONS

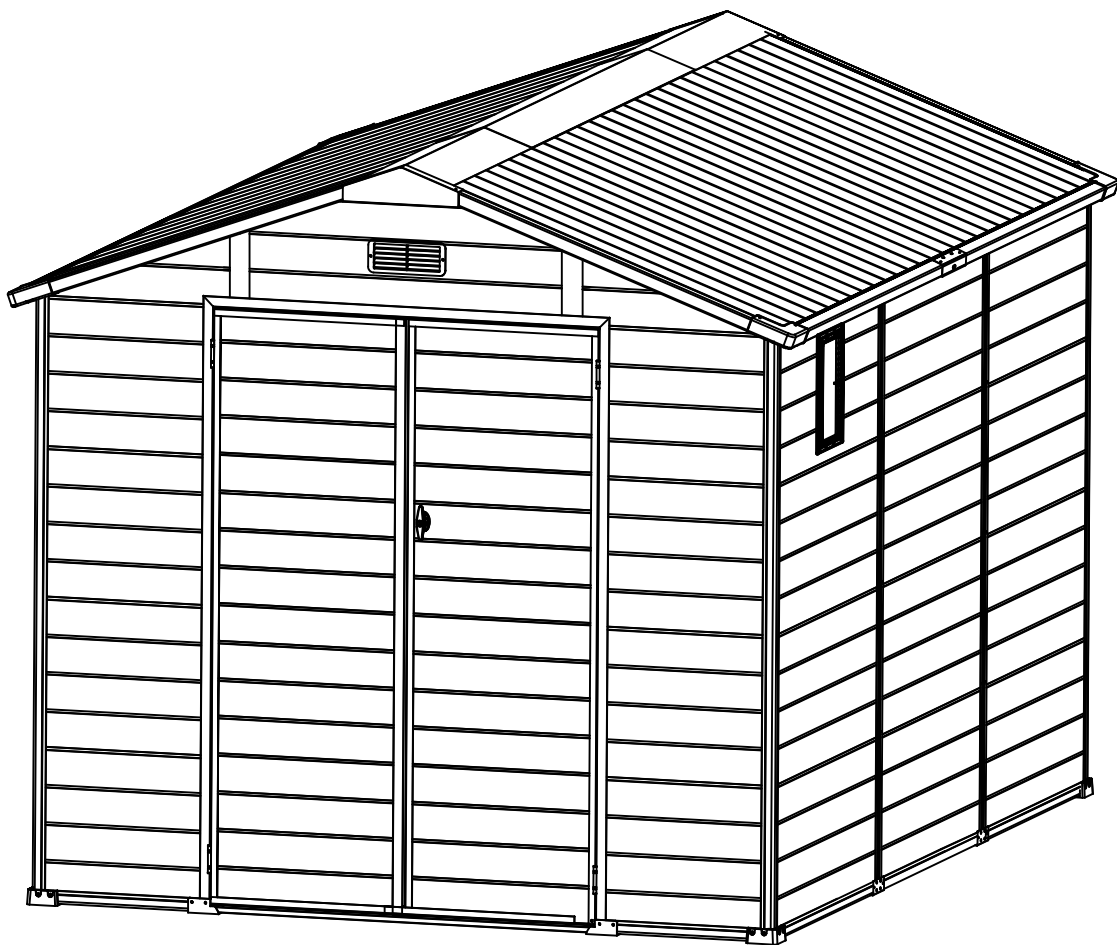

Important Reminder: Please Keep for Future Reference – Read Carefully

1. Pre-Installation Notes

Contact the local government authorities in advance to confirm whether building approval is required.

2. Manual Overview

This manual contains assembly instructions. Before starting the operation, please carefully read all the instructions and follow the steps in sequence to ensure the correct assembly effect.

3. Time and Personnel Requirements

It takes approximately 3-4 hours and requires the collaboration of multiple people to assemble this product.

4. Tools and Safety Precautions

Prepare the required tools. Wear gloves correctly, use tools properly, and pay attention to safety.

5. Weather and Site Precautions

Ensure the installation date you choose has dry weather and low wind. Do not attempt to assemble this product outdoors in strong winds, as this will increase the risk of panel damage or personal injury. Avoid muddy ground. Assemble with the collaboration of two or more people whenever possible.

6. Advance Planning: Site Selection

The installation site should be as far away from tall trees as possible. Leaves need regular cleaning, and broken branches may pose potential safety hazards.

7. Important Reminders

Prepare appropriate tools and safety protective equipment. It is recommended to lay out all parts first, check for completeness before starting assembly. If there is a risk of scratches, lay cloth or plastic film on the ground. Tighten all fasteners carefully to ensure no omissions. Check if the frame is square and vertical.

8. Detailed Assembly Steps


Place the panel with the flat side facing up, tap it gently with a hammer to make the panel fit tightly and be fully installed in place (this prevents water leakage), and then fix it with screws. It is recommended that three or more people operate this step to ensure the smooth progress of assembly. Note: All panels have a front and a back, and are equipped with card slots. Align the panels during installation and push them in firmly; if they cannot be pushed in, stand the panels upright and adopt the sliding installation method. Important Reminder: Before installing the screws, confirm that the diagonal distance "X" of the door remains consistent.

Site Preparation


Level the ground



Recommendation: Construct a wooden or concrete base as the foundation.

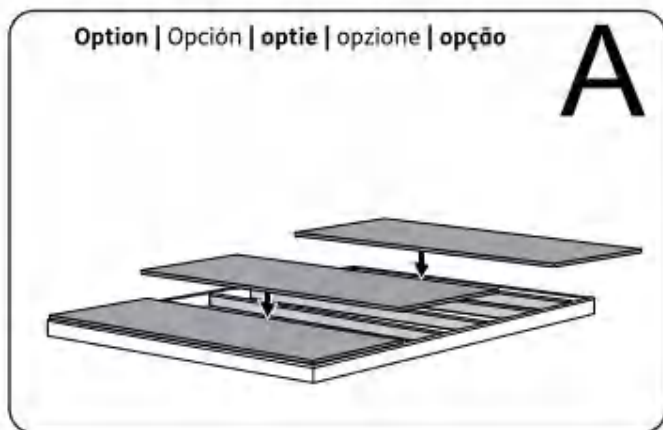

The maximum overall dimensions of the product are:2310mmx3040mmx2150mm

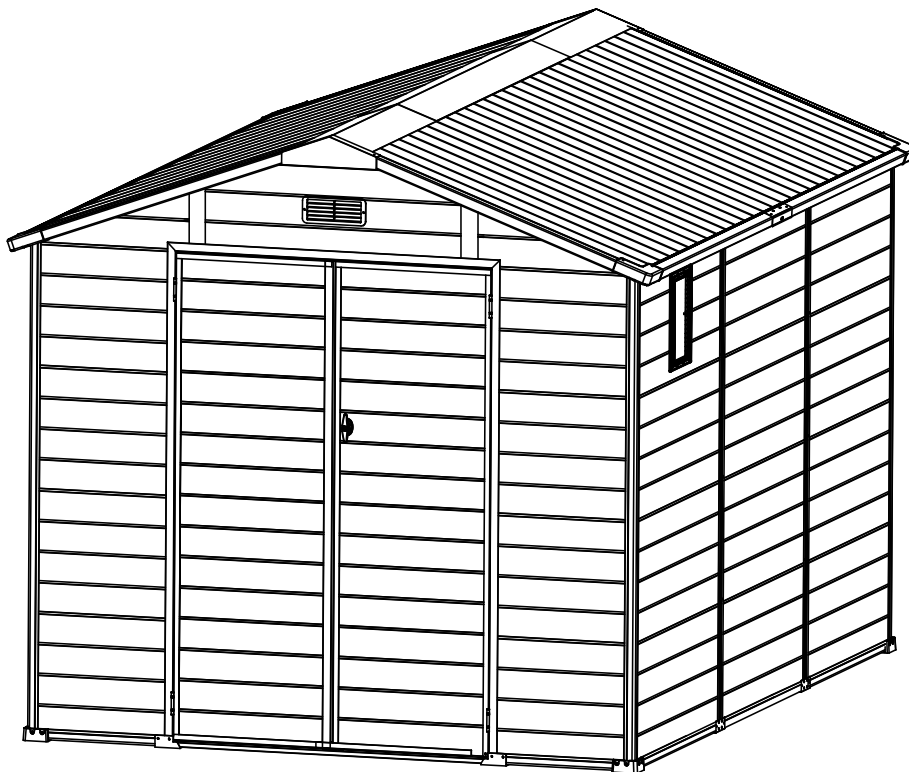

Before starting assembly:

Please read the maintenance and safety guidelines at the end of this manual.

Before starting or scheduling assembly, check to ensure no parts are missing or damaged.

Remove all parts from the packaging and lay them flat on a clean work surface. Review all assembly instructions.

Assemble all parts in accordance with the instructions in this manual.

Do not skip any steps.

Required tools
















Plastic squeegee





Using a squeegee will help insert the board into the profile more easily.

parts list


Part	No	Qty		Part	No	Qty		Part	No	Qty	
	W1	20			J1	7			SA	4	
	W2	1			JW1	5			SDL	1	
	W3	1			JW2	1			SDR	1	
	W4	22			J4	1			GC	2	
	W5	2			J5	4			SB	4	
	W6	2			J6	3			PC1	3	
	W7	6			J7	4			GF	3	
	W8	1			J8	4			CX	2	
	W9	1			J9	6			MS2	1	
	W10	5			J11	2			JL1	4	
	W11	2			J13	2			T1	398	
	W12	1			J14	2			T3	106	
	W13	1			J15-6	2			T5	42	

	W14	1			J15-10	2			T6	16	
	W15	1			J16	1			T7	2	
	W16	14			J17	1			M4-1	12	
	A1	2			J18L	1			M4-2	2	
	A2	2			J18R	1			SF	1	
	A3	4			J19	2			ZC1	5	
	A4	4			MSP	1			ZC2	4	
	A5	2			CXP	1			/	/	
	H1	2			L1	1			/	/	
	H2	2			L2	1			/	/	
	G1	4			L3	1			/	/	
	G2	4			L4	1			/	/	
	/	/			/	/			/	/	

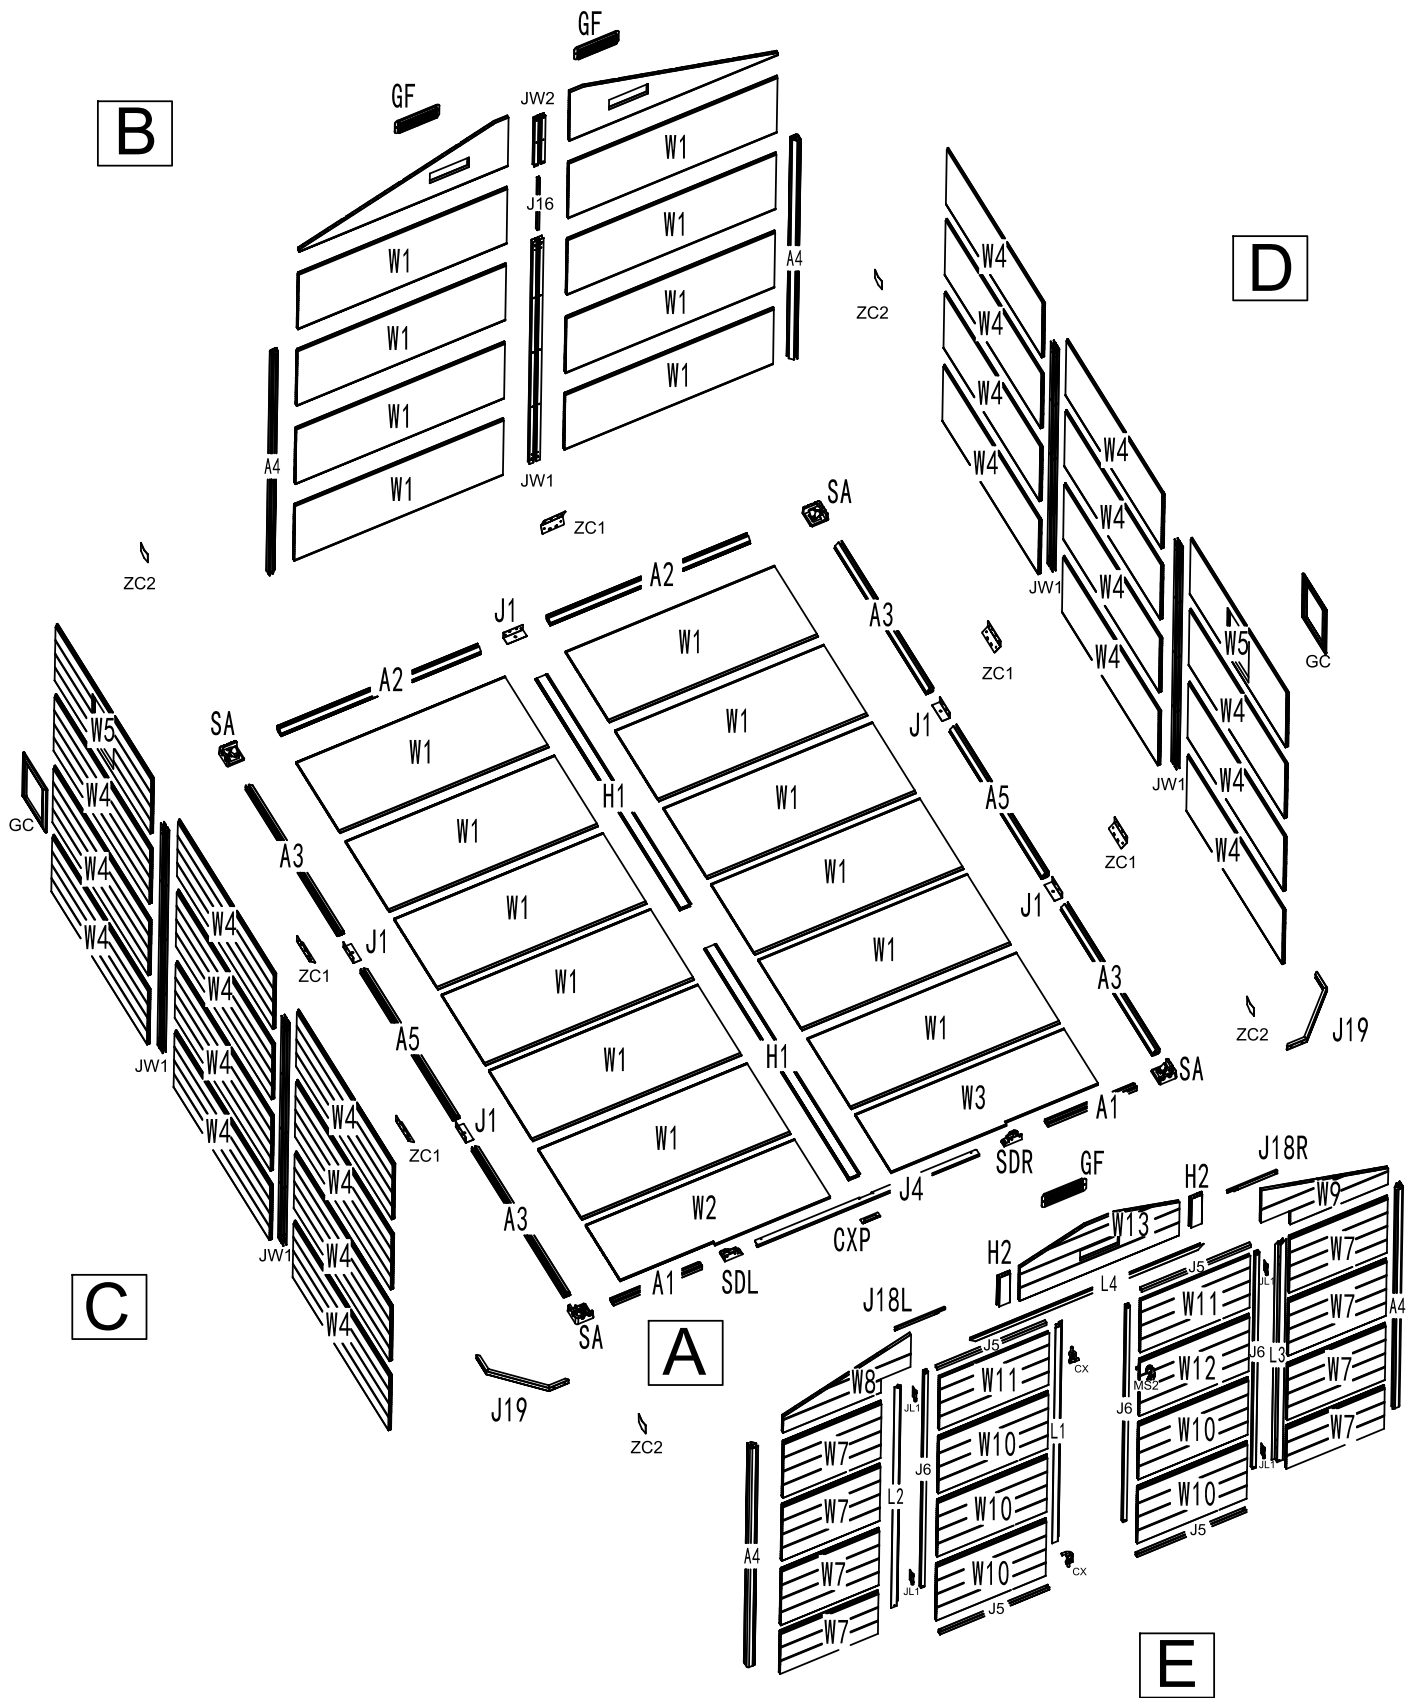


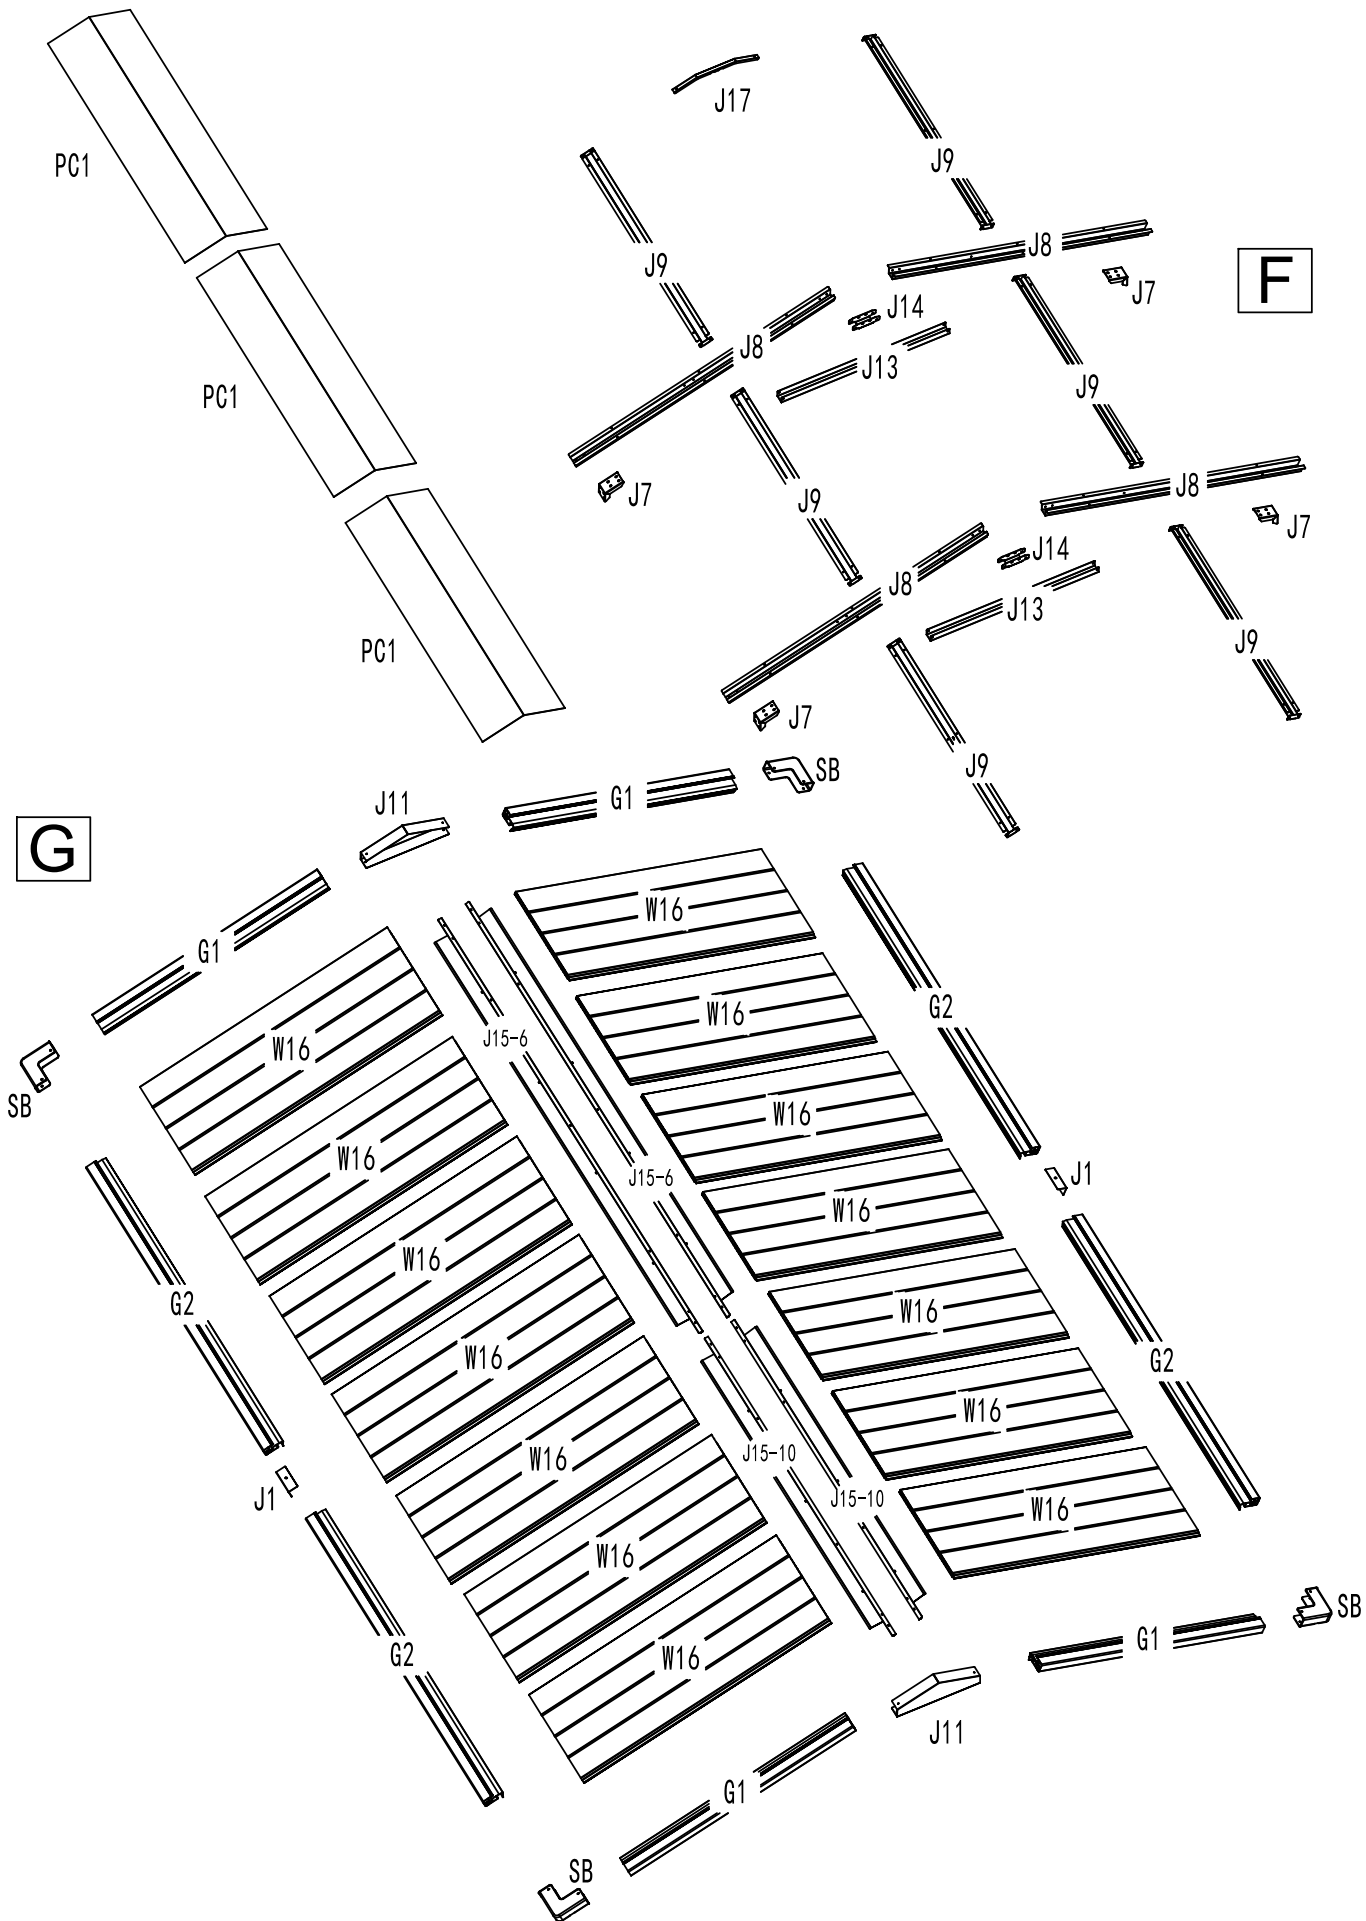


12PCS W1	1PCS W2	1PCS W3	2PCS A1	2PCS A2	4PCS A3
2PCS A5	4PCS SA	1PCS SDL	1PCS SDR	1PCS J4	2PCS H1

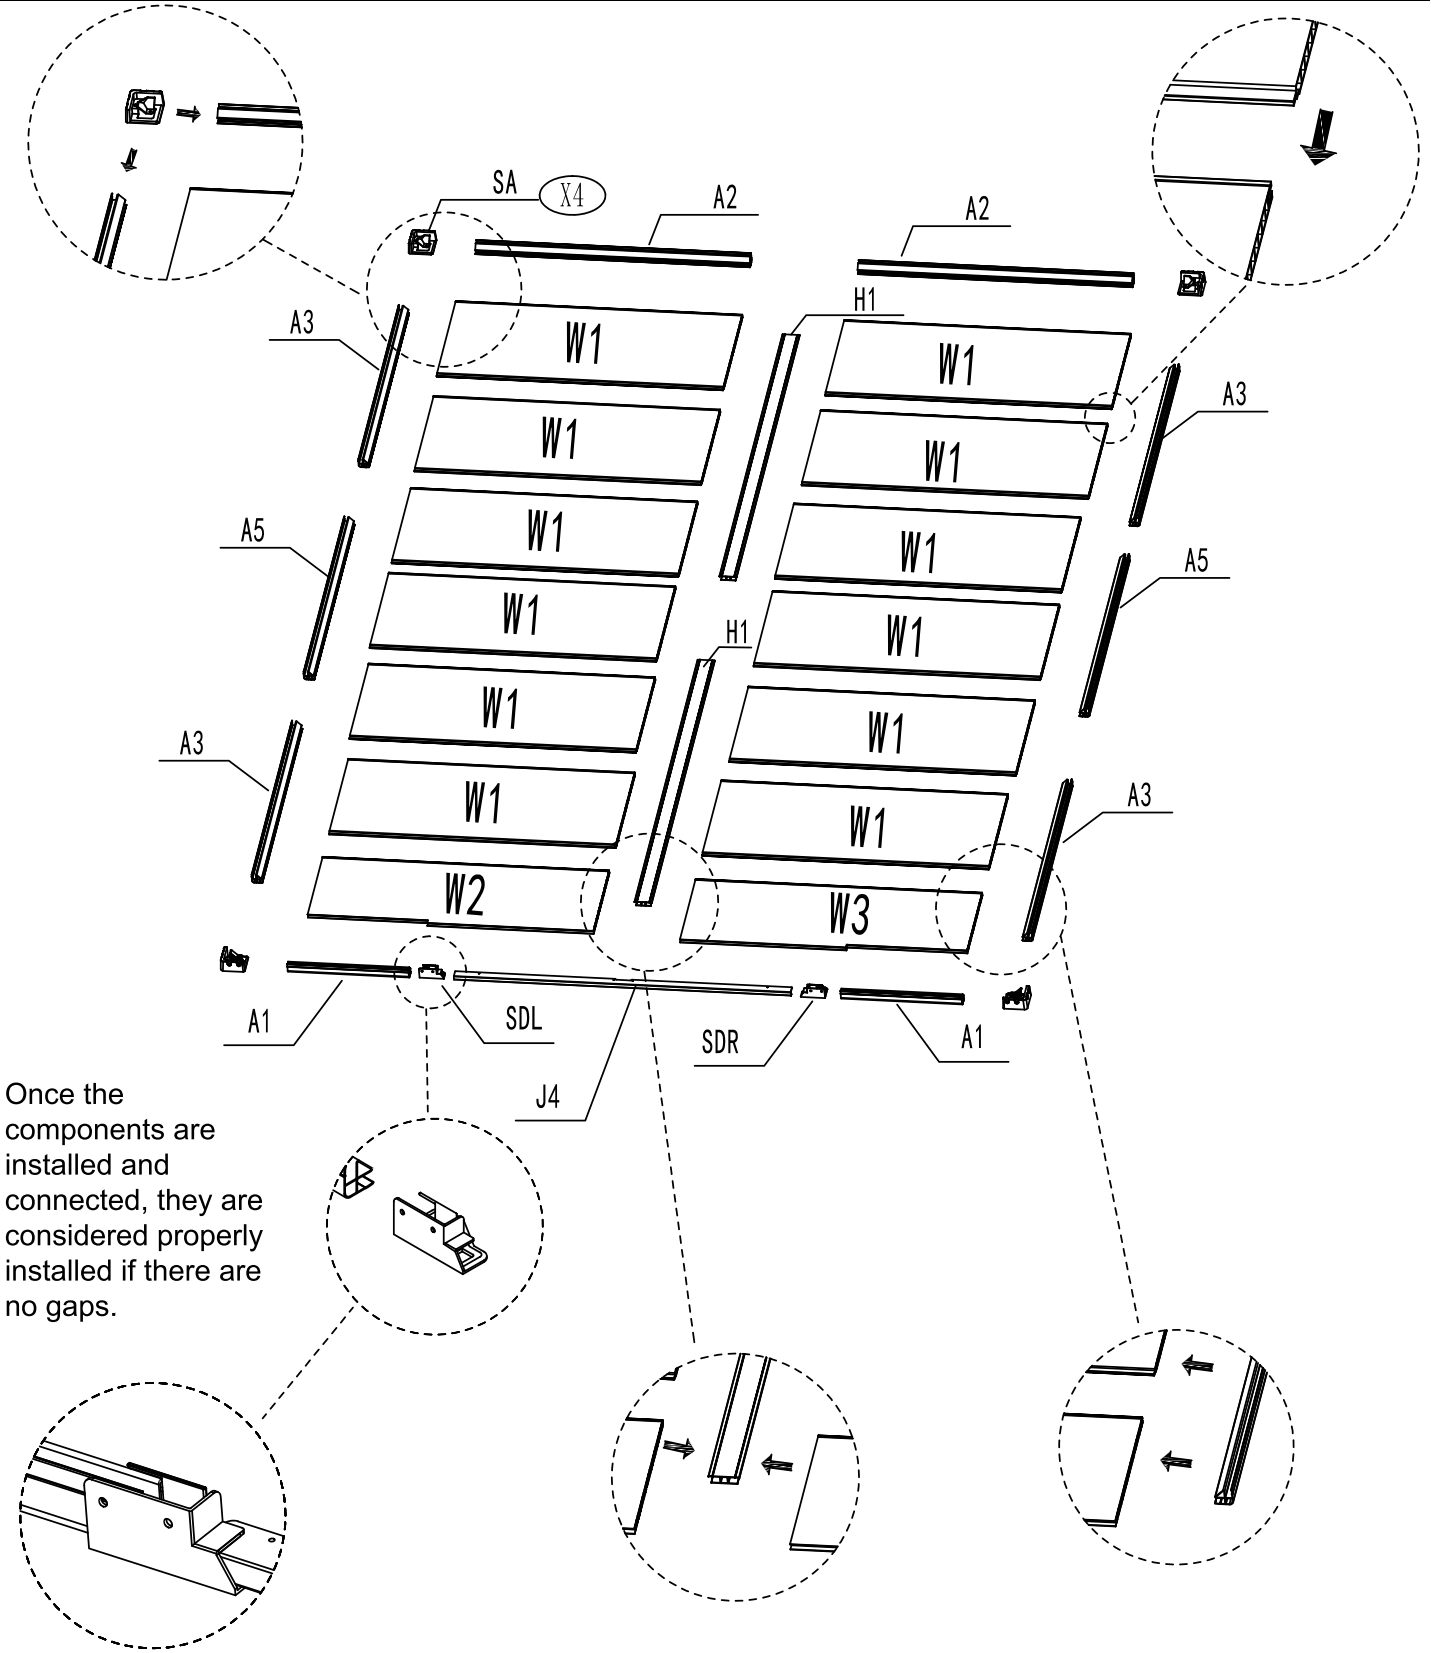


Once the components are installed and connected, they are considered properly installed if there are no gaps.

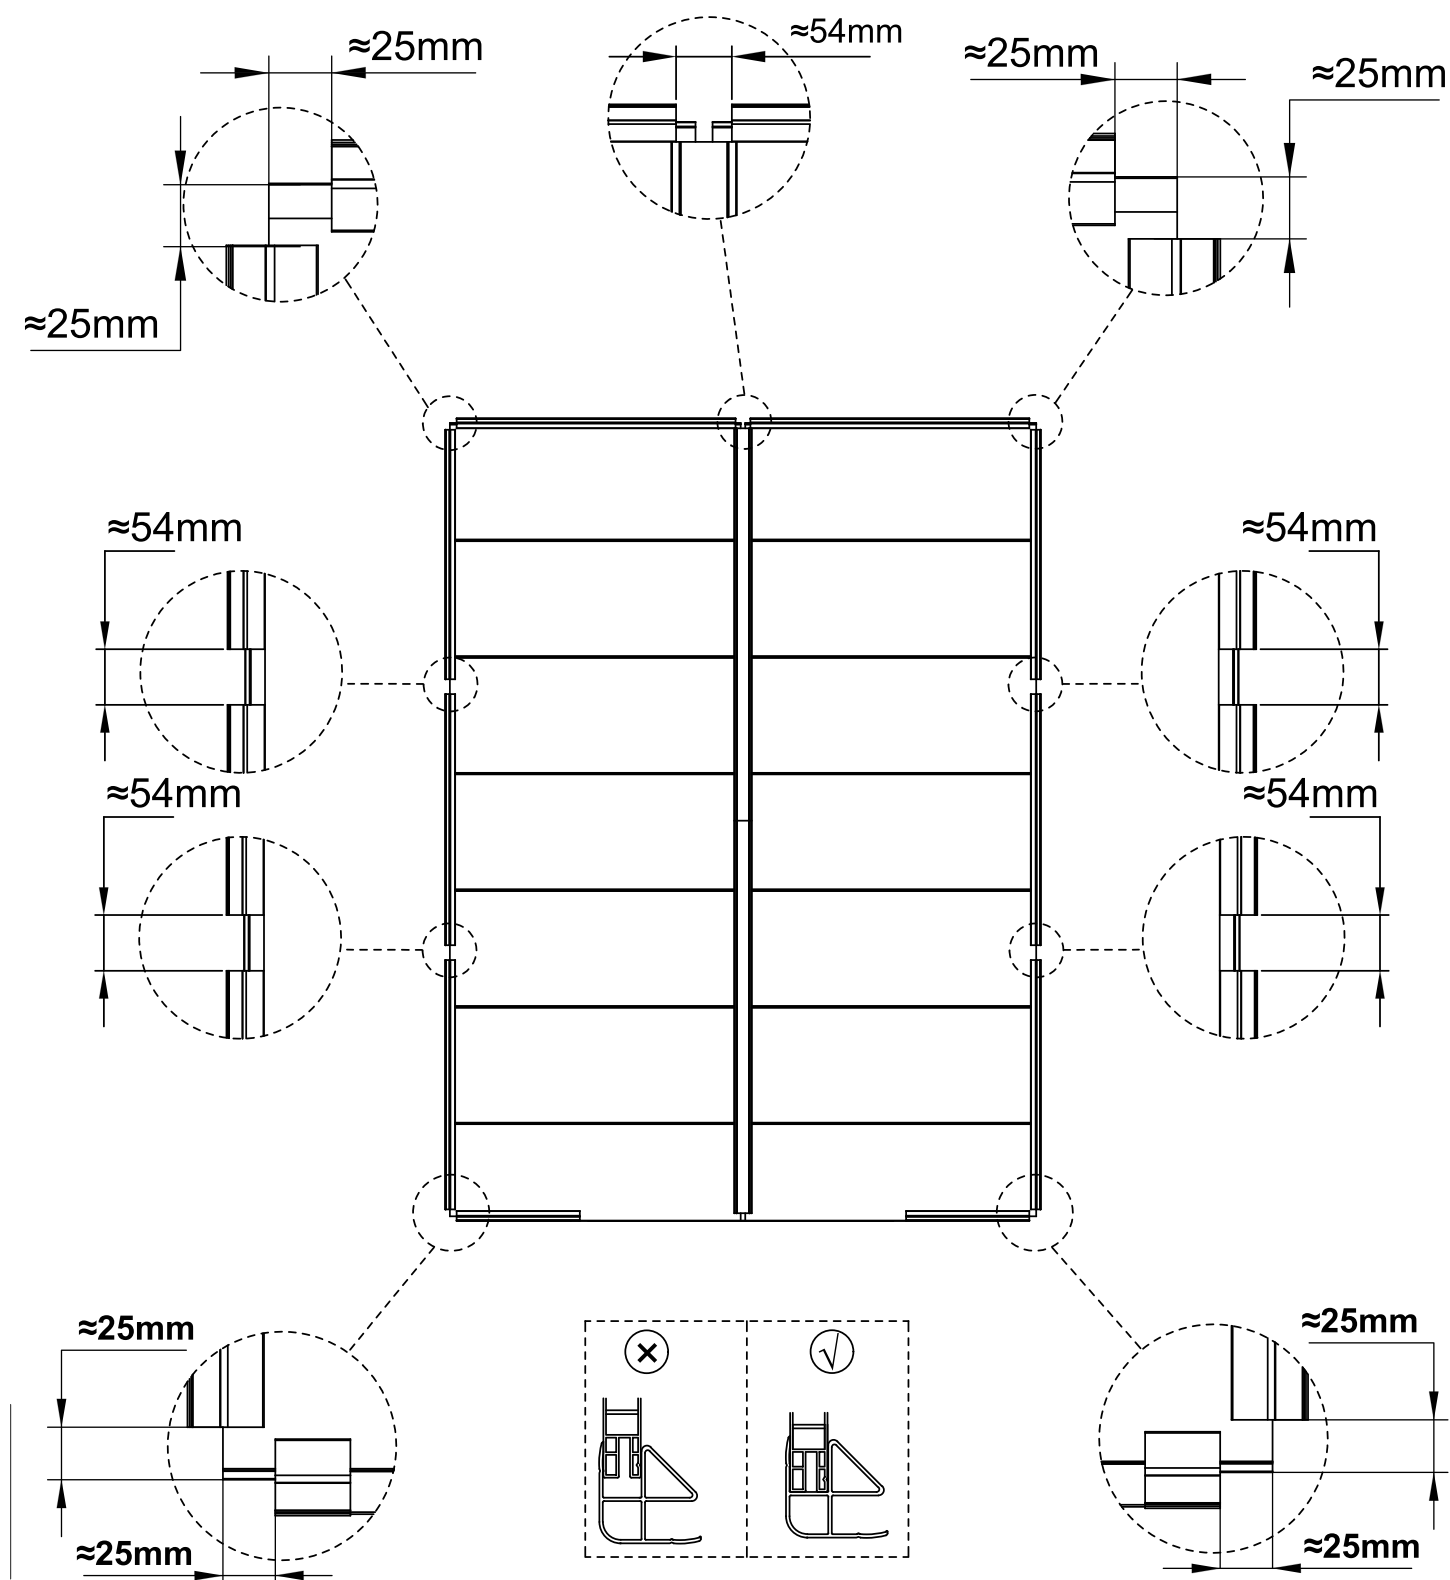

Leave the distance from the components to the edge as shown in the diagram to facilitate subsequent installation.







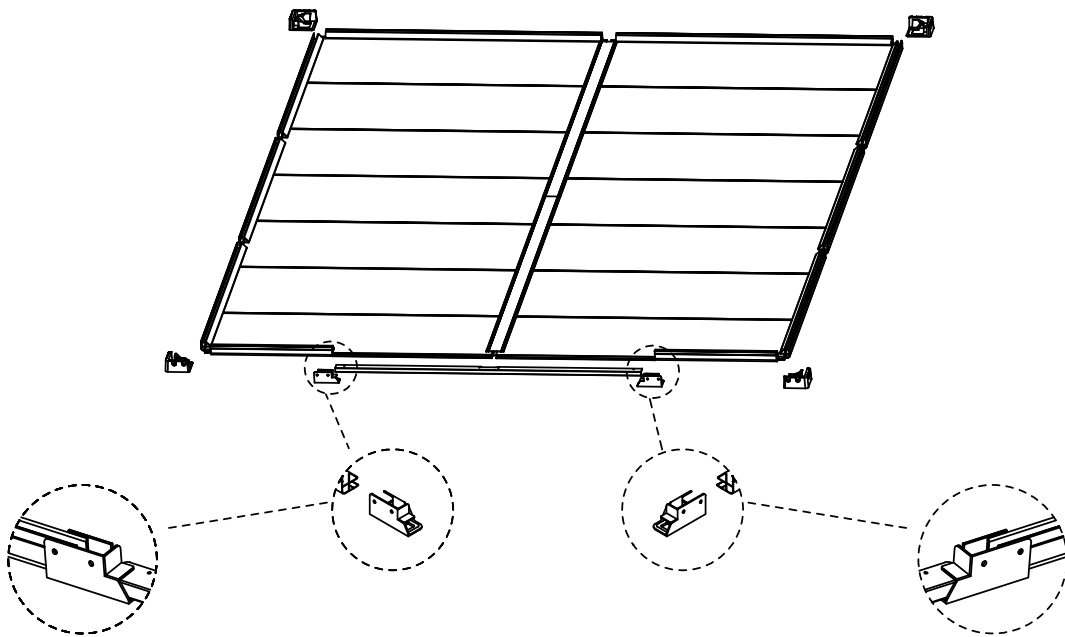


Once the components are installed and connected, they are considered properly installed if there are no gaps.

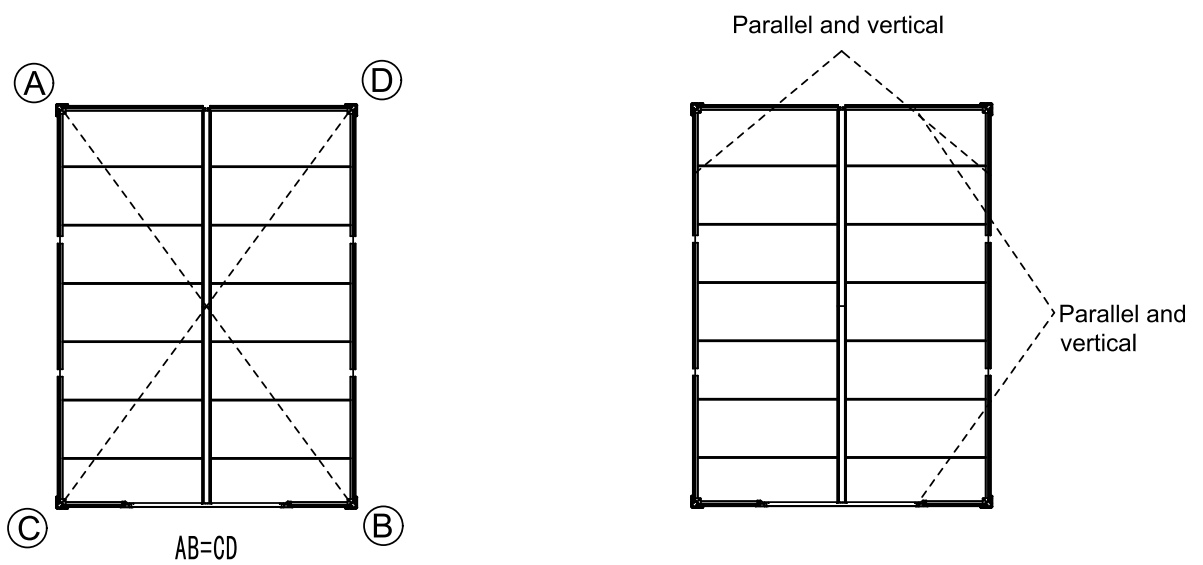


30PCS		24PCS	
T1		T3	


Screws should be placed according to the diagram. Drill and tighten the screws in the designated grooves or pre-drilled holes on the parts. For areas without holes, distribute the screws evenly.

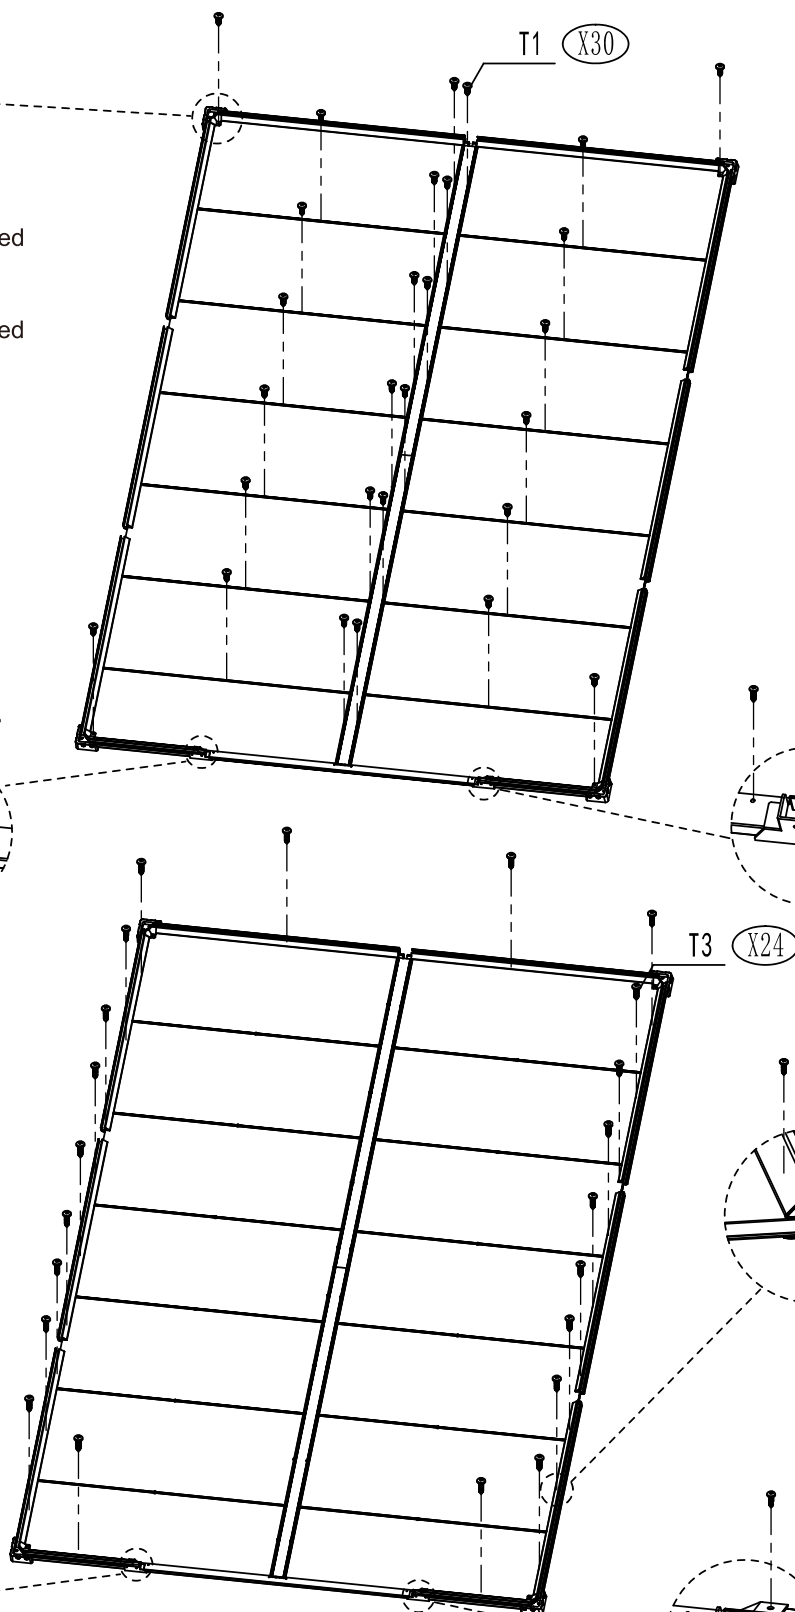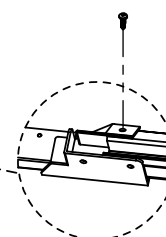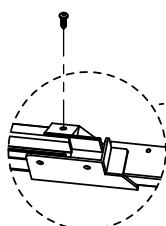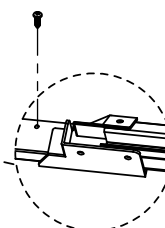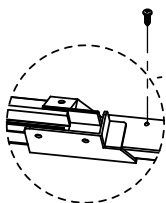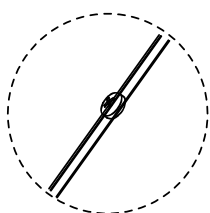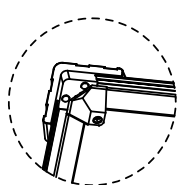




The screw is installed at the center of the inclined plane.

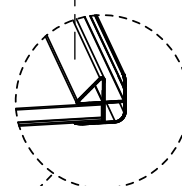

12PCS 	2PCS 	2PCS 	1PCS 	1PCS 	1PCS 
M4-1	GC	W5	JW2	J16	JW1
4PCS 					
T1					

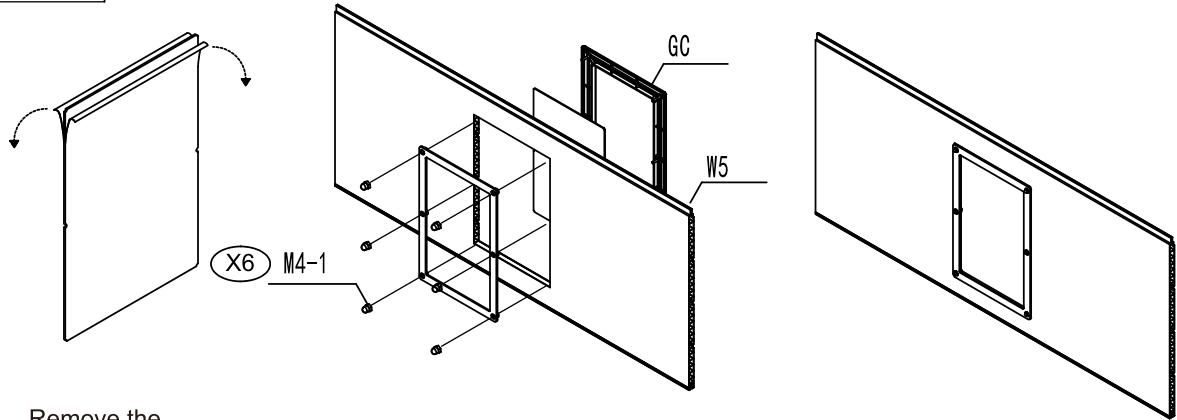


Remove the protective film before installing the window, and install it according to the diagram.

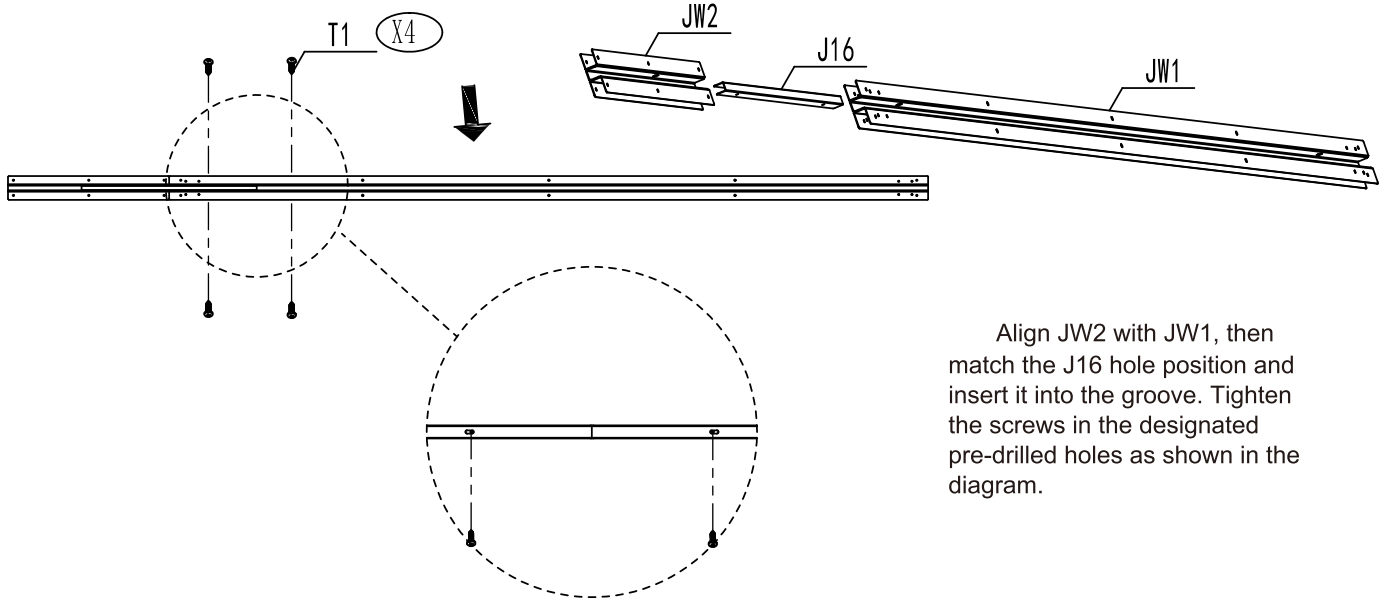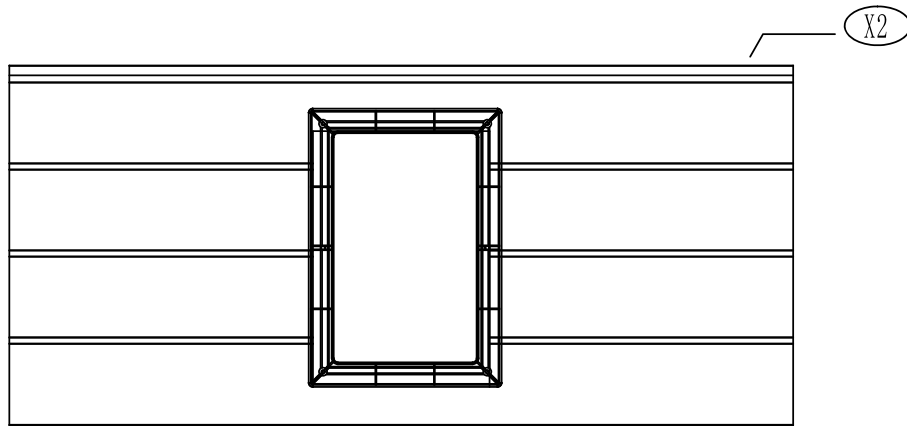

Align JW2 with JW1, then match the J16 hole position and insert it into the groove. Tighten the screws in the designated pre-drilled holes as shown in the diagram.



6PCS		2PCS		2PCS		5PCS		4PCS		12PCS	
W4		W1		W6		JW1		A4		T1	


Insert the sheet materials and profiles in a circular sequence as shown in the diagram to prevent the posts from collapsing and facilitate subsequent installation.

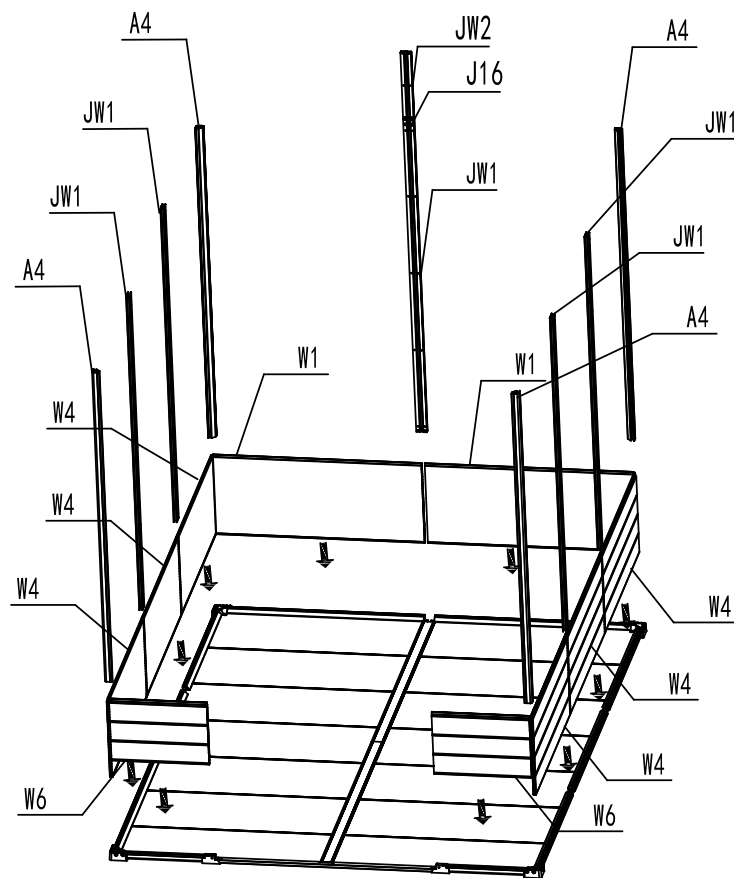


When inserting the plastic panel, ensure it is pushed in completely with no gaps left. Align the wood grain pattern correctly so that it faces outward. Position the male end at the top and the female end at the bottom.


The notches shall be installed uniformly facing inward.

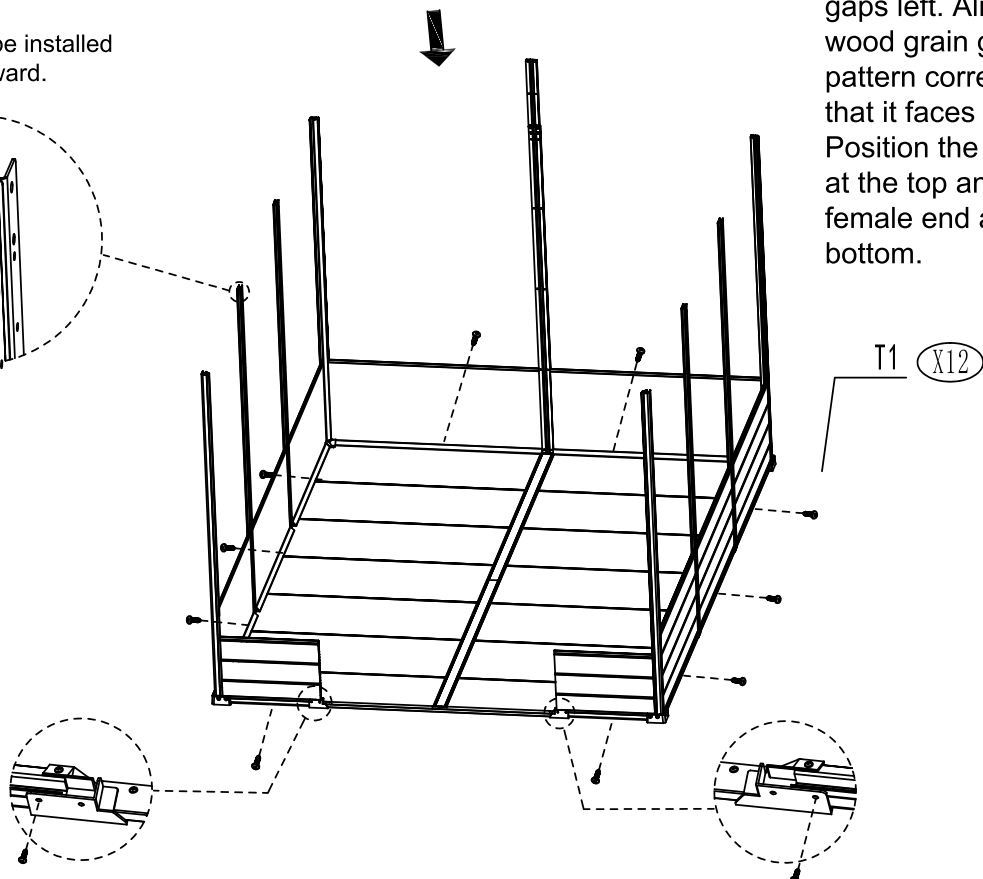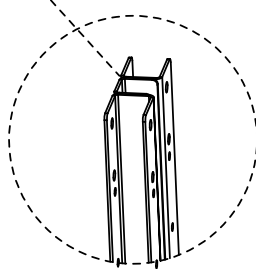

16PCS		5PCS		20PCS				
T3		J1		T1				

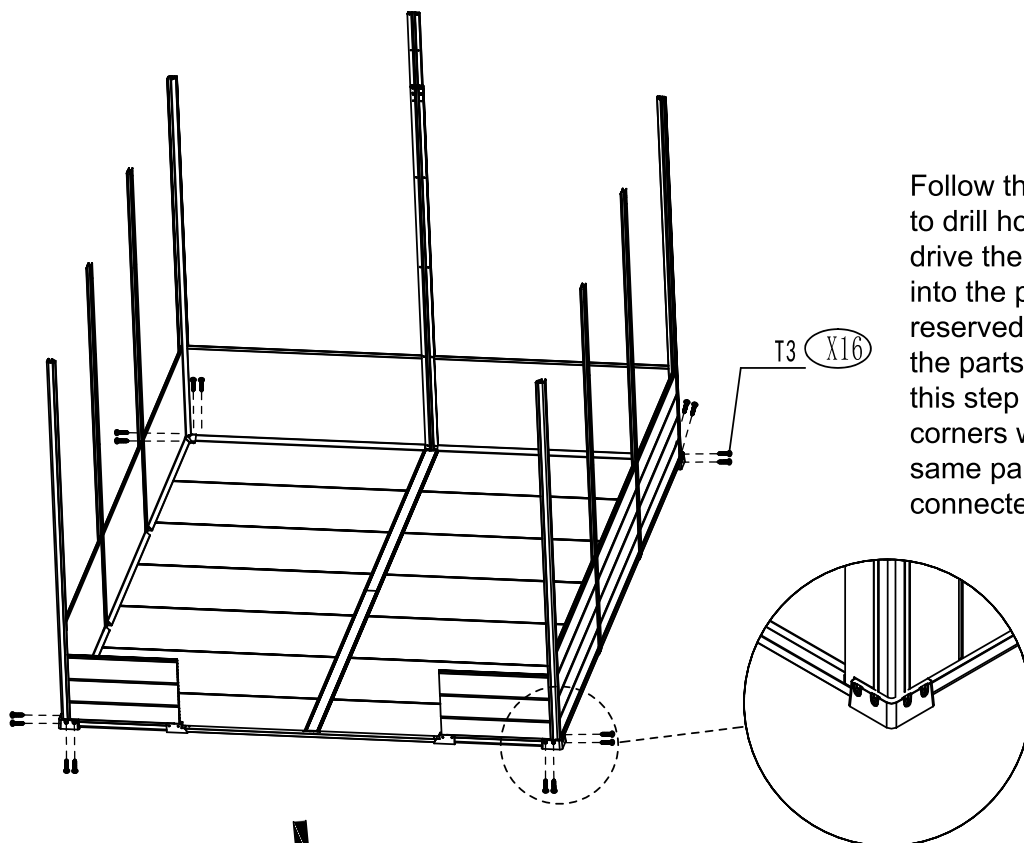


Follow the diagram to drill holes, and drive the screws into the pre-preserved holes on the parts. Repeat this step at all four corners where the same parts are connected.

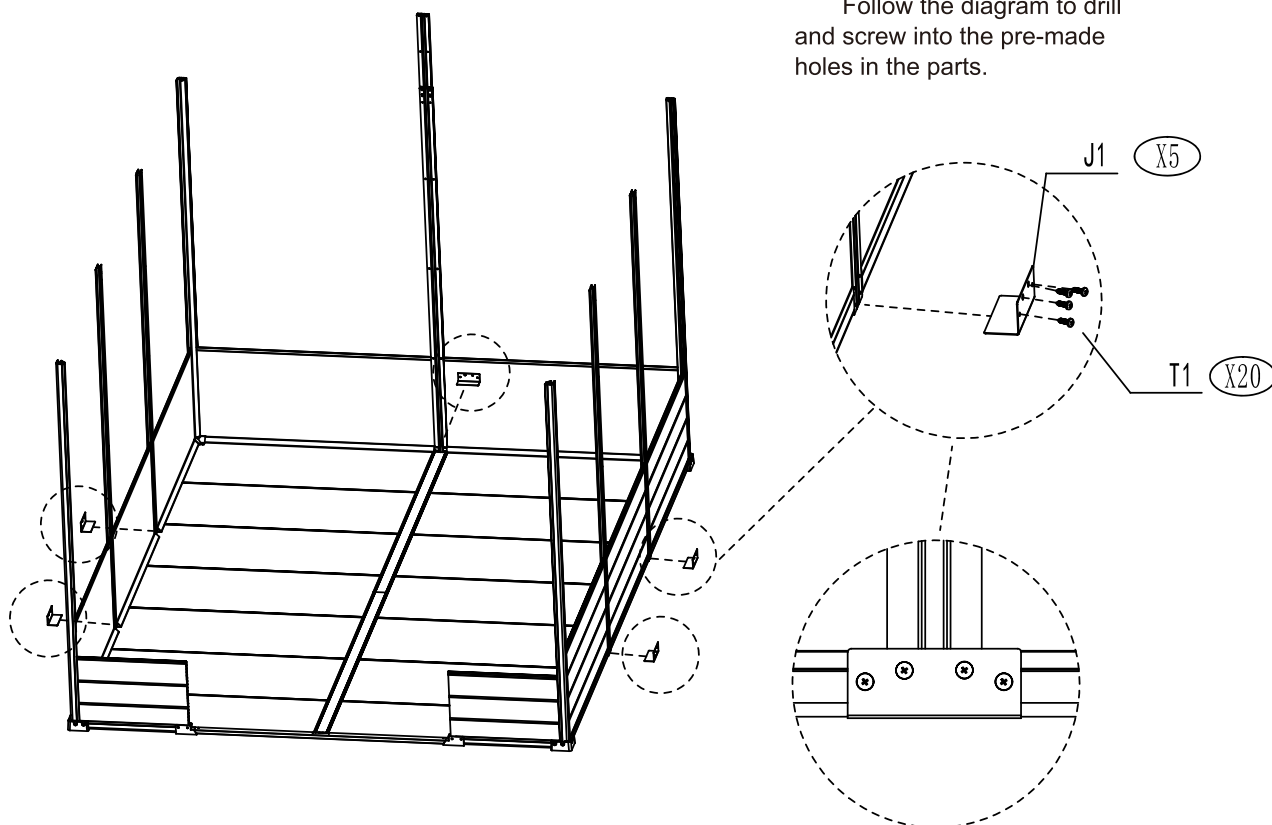



Follow the diagram to drill and screw into the pre-made holes in the parts.

6PCS		2PCS		2PCS		10PCS			
W4		W1		W7		T1			

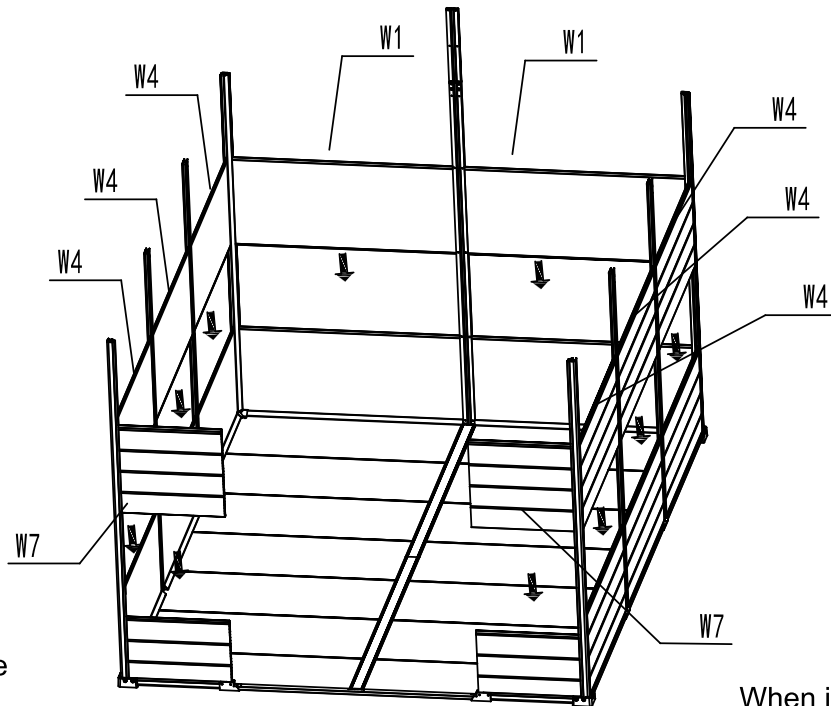


Insert the sheet materials in sequence as shown in the diagram.

When inserting the plastic panel, ensure it is pushed in completely with no gaps left. Align the wood grain grain pattern correctly so that it faces outward. Position the male end at the top and the female end at the bottom.

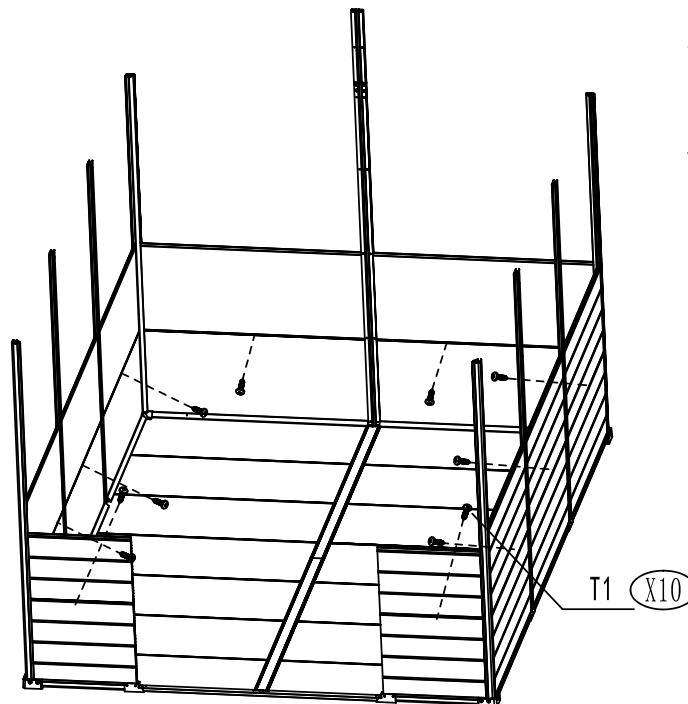
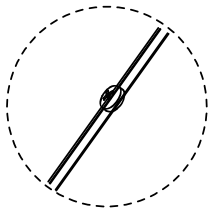


6PCS		2PCS		2PCS		10PCS			
W4		W1		W7		T1			

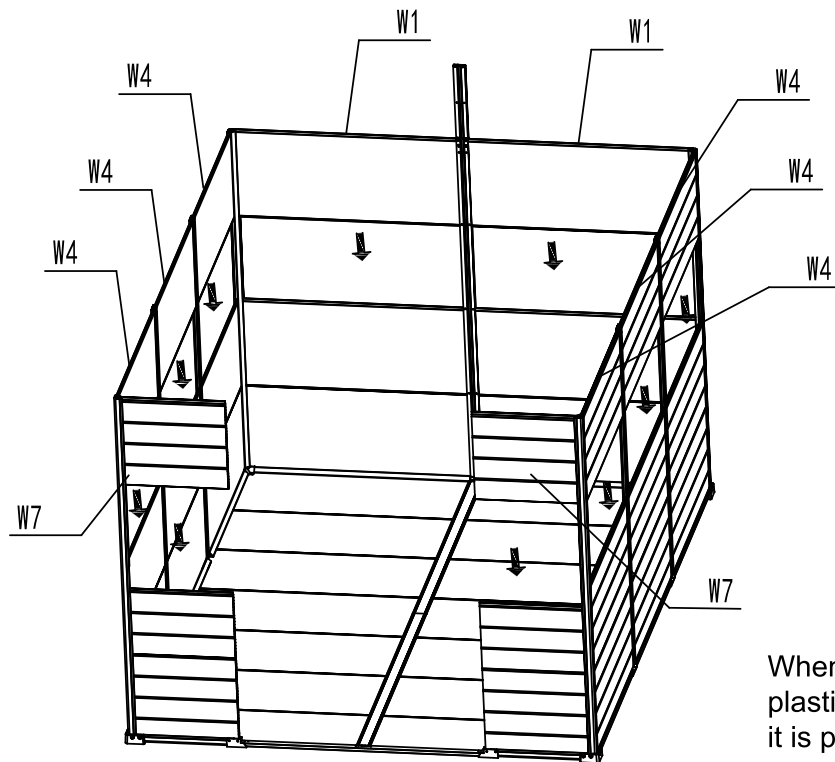


Insert the sheet materials in sequence as shown in the diagram.

When inserting the plastic panel, ensure it is pushed in completely with no gaps left. Align the wood grain pattern correctly so that it faces outward. Position the male end at the top and the female end at the bottom.

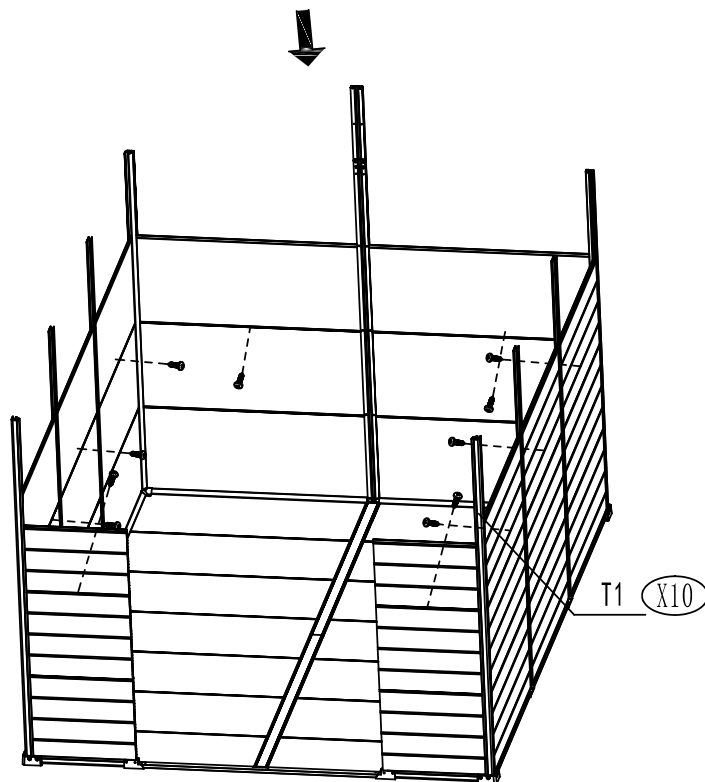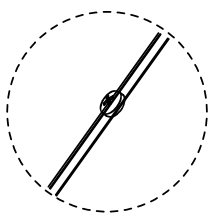

4PCS		2PCS		2PCS		2PCS		40PCS		
W4		W1		W7		W5		T1		


When inserting the plastic panel, ensure it is pushed in completely with no gaps left. Align the wood grain pattern correctly so that it faces outward. Position the male end at the top and the female end at the bottom.

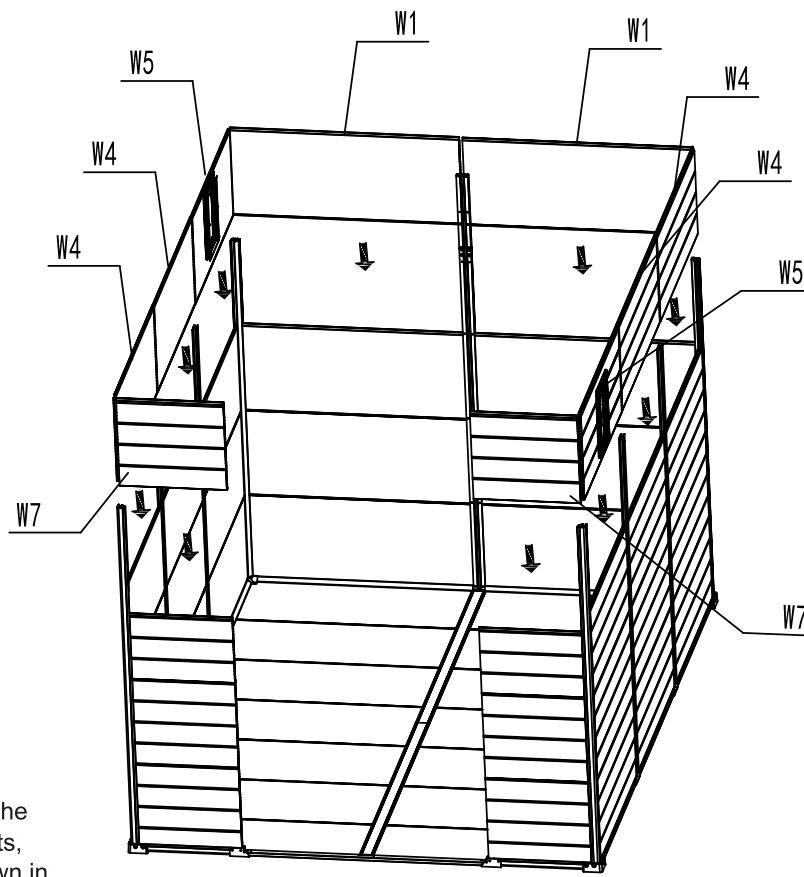


Insert the sheet materials in sequence as shown in the diagram.

Install the screws into the pre-drilled holes on the parts, following the locations shown in the diagram.


There are six screws for each

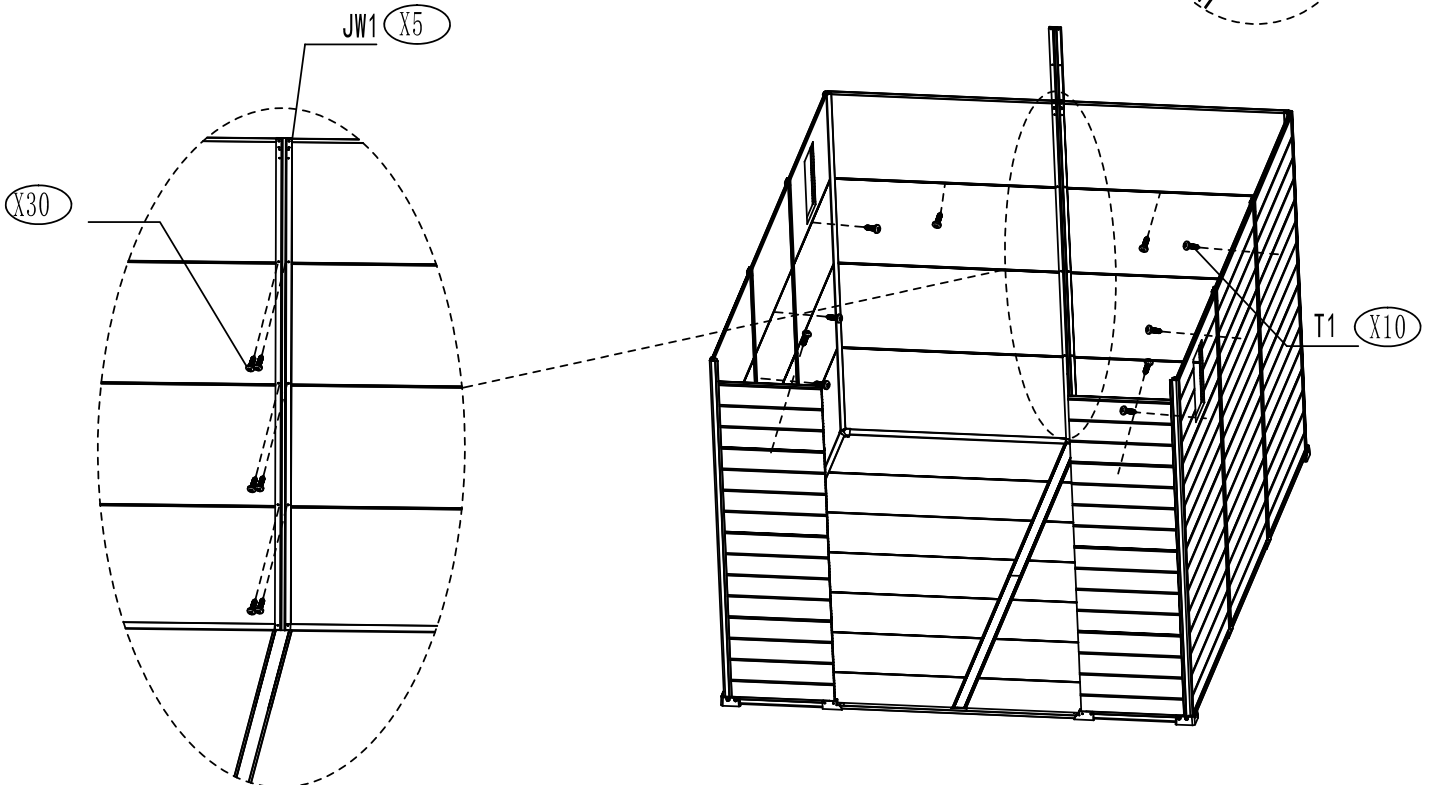



24PCS						
T1						

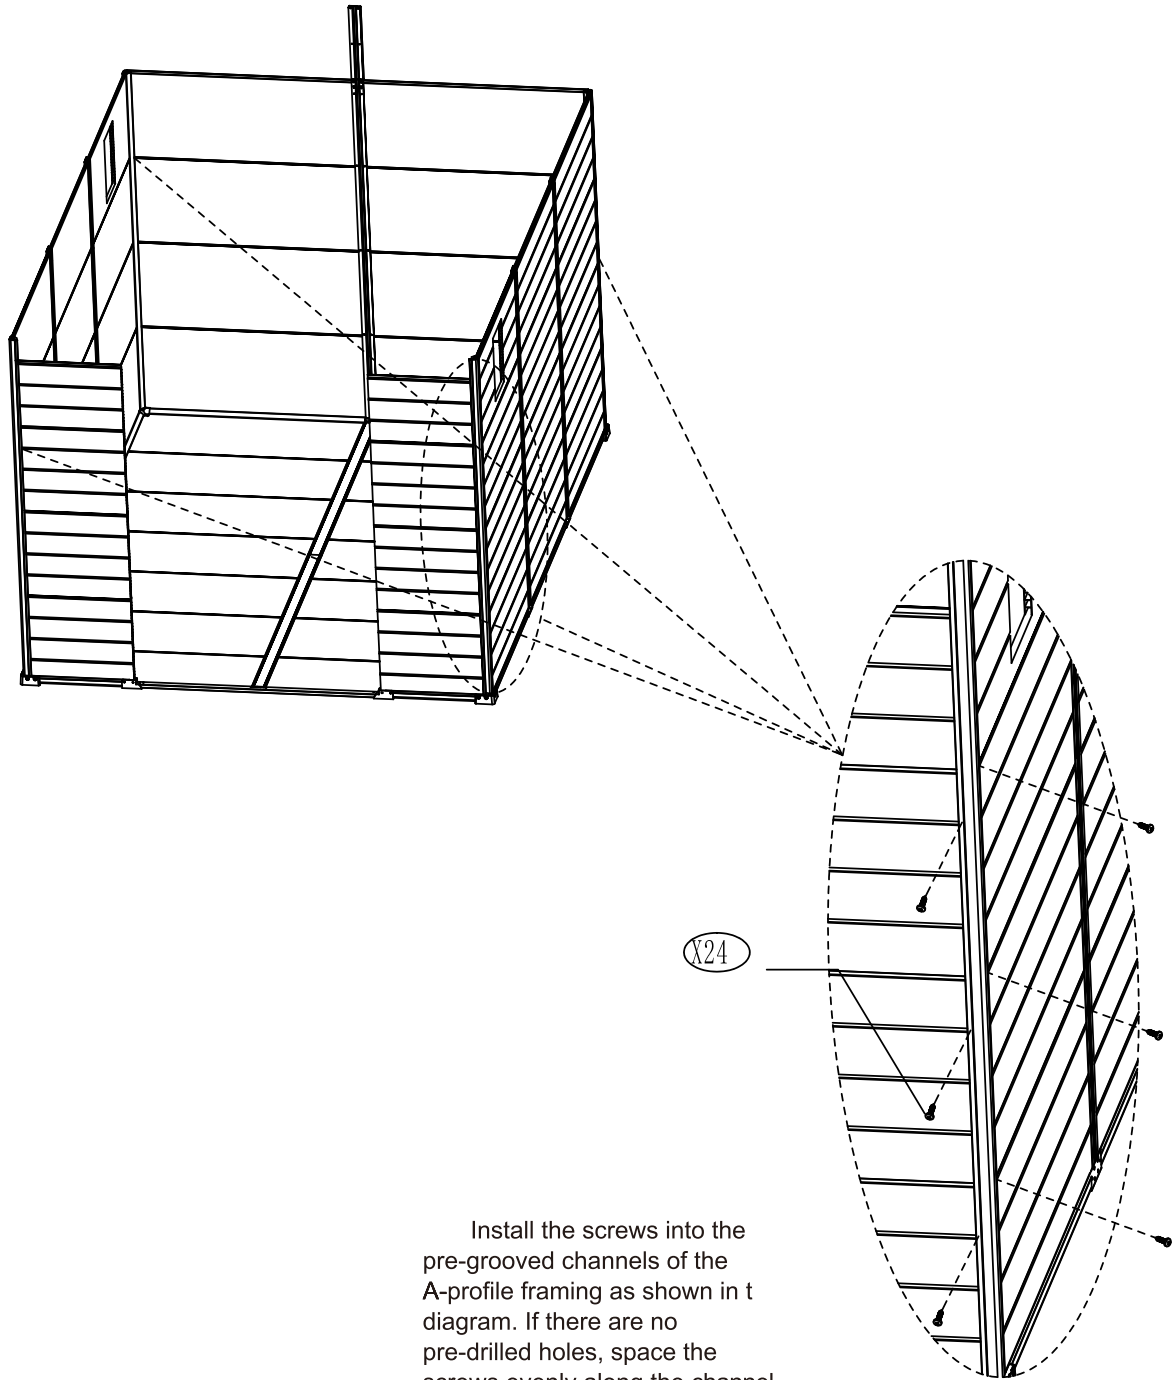


1PCS		1PCS		2PCS				
L2		L3		T5				

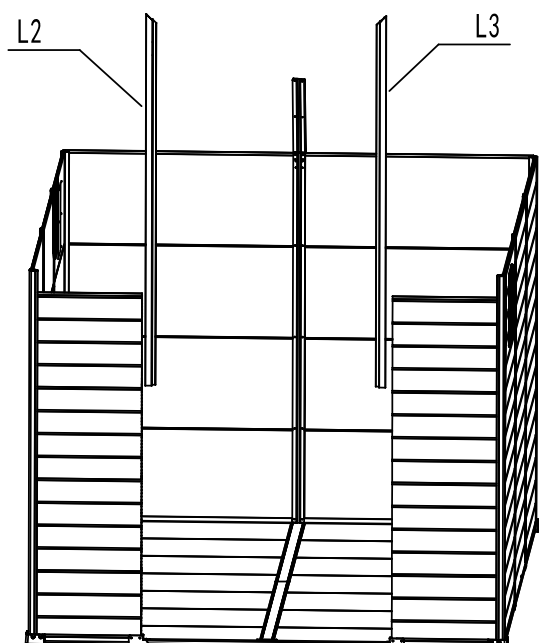


Insert the door frame as shown in the diagram, making sure it is pushed in fully and securely seated.

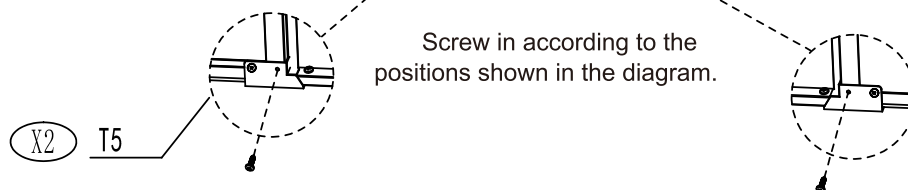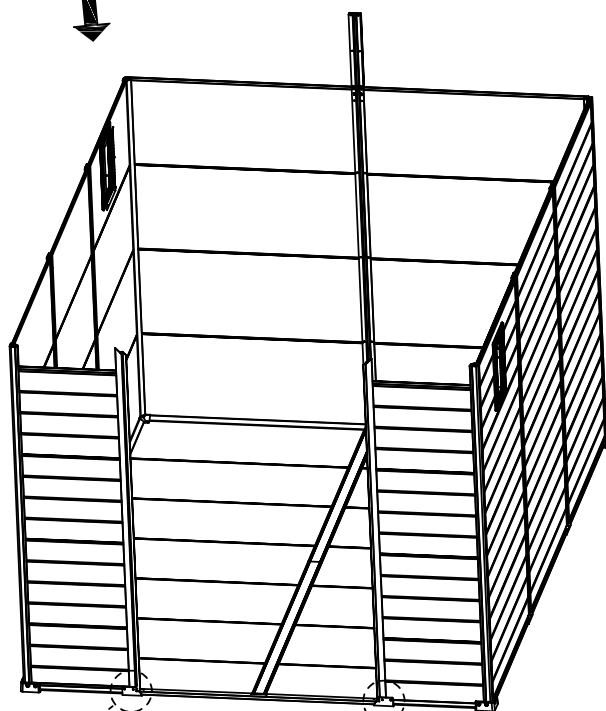


1PCS W8	1PCS W9	1PCS W14	1PCS W15	16PCS T1	
------------	------------	-------------	-------------	-------------	--

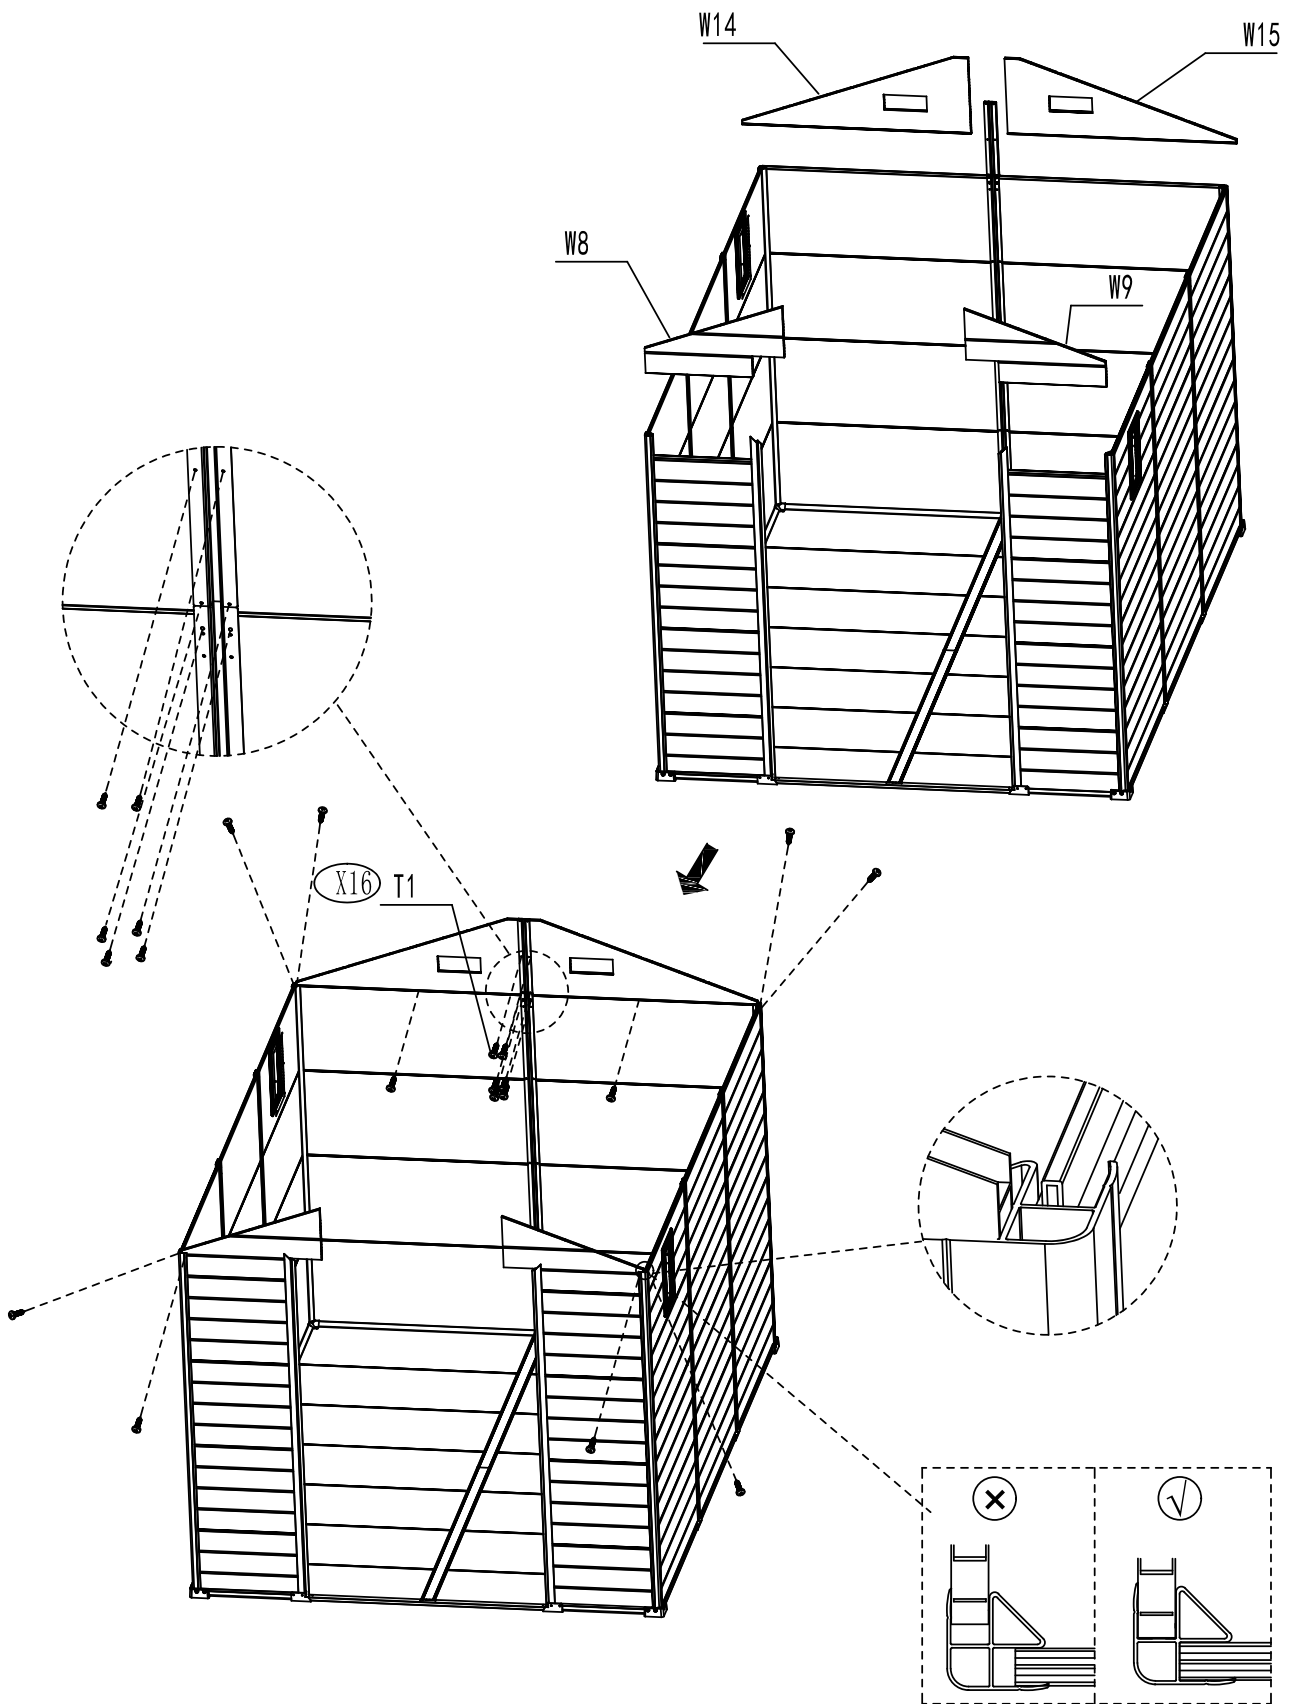



1PCS 	1PCS 	1PCS 	12PCS 		
L4	J18L	J18R	T5		

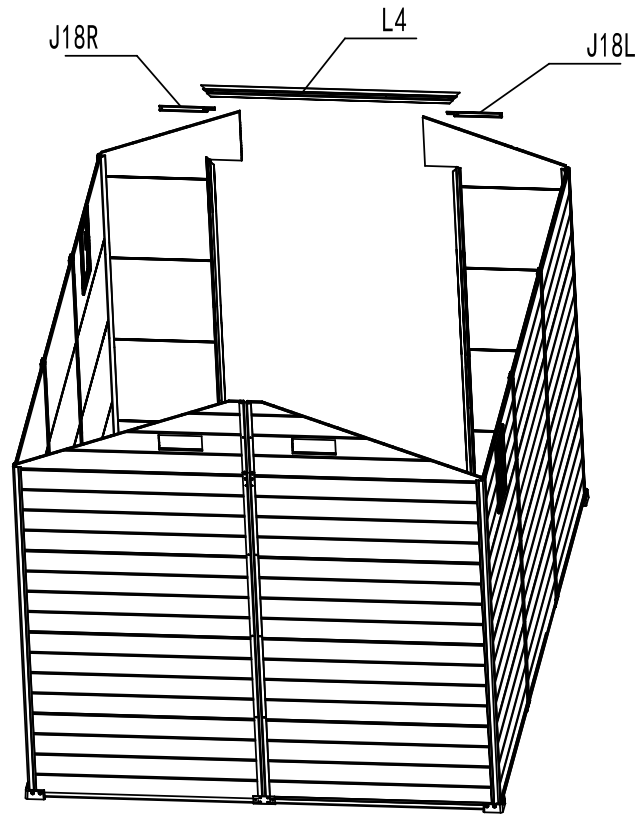



Install the screws in the locations shown in the diagram.

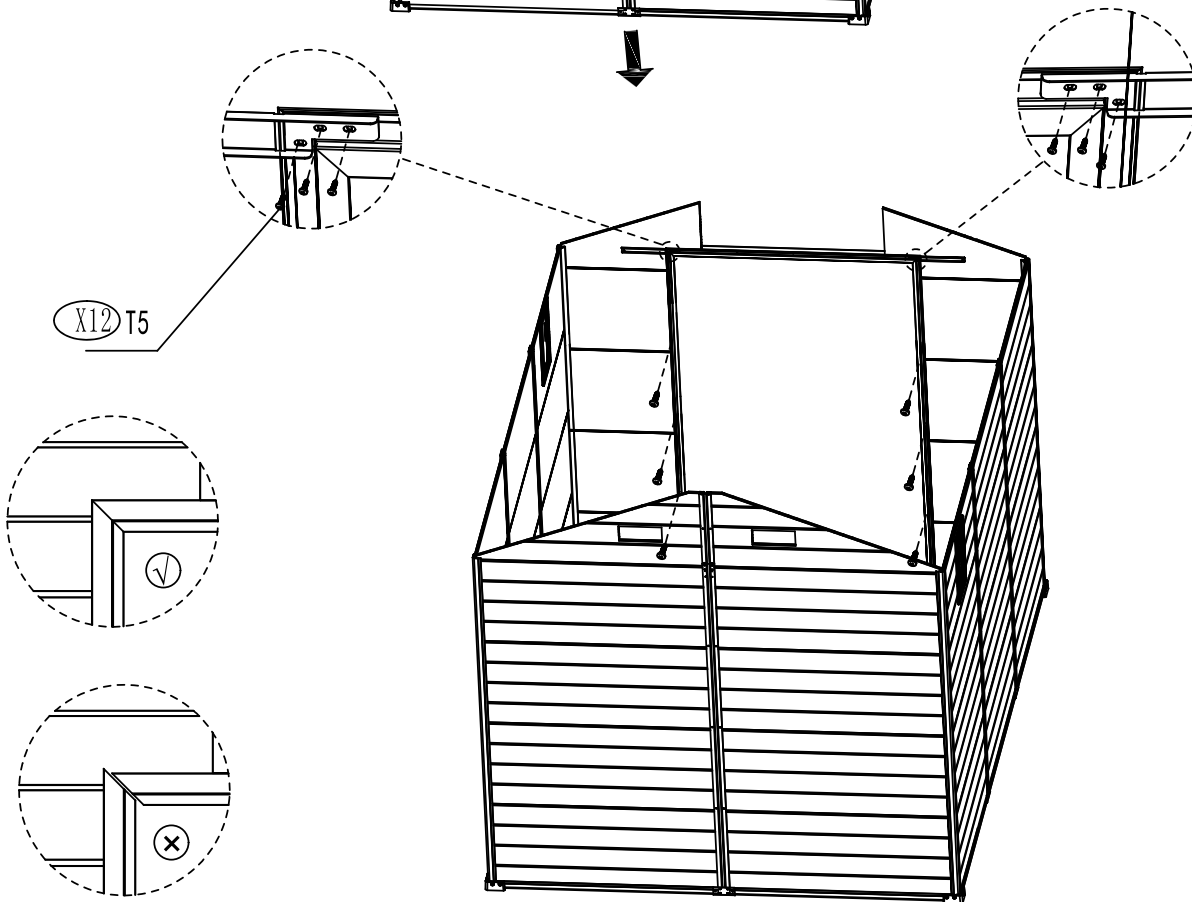




1PCS		2PCS		10PCS		2PCS			
W13		H2		T1		T5			

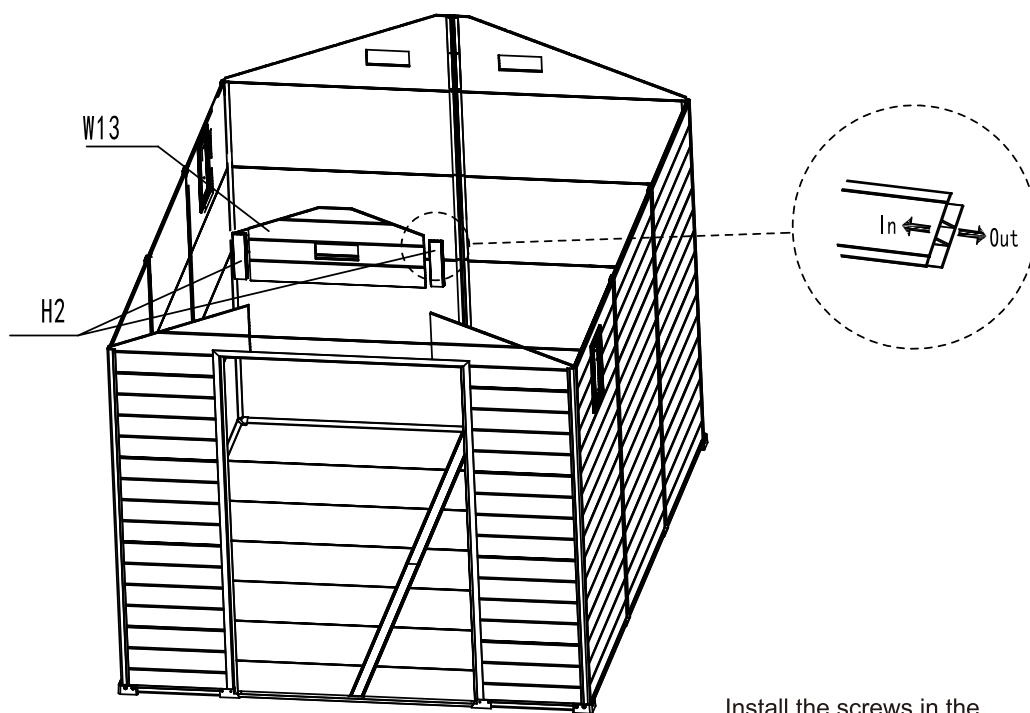



Install the screws in the locations shown in the diagram.

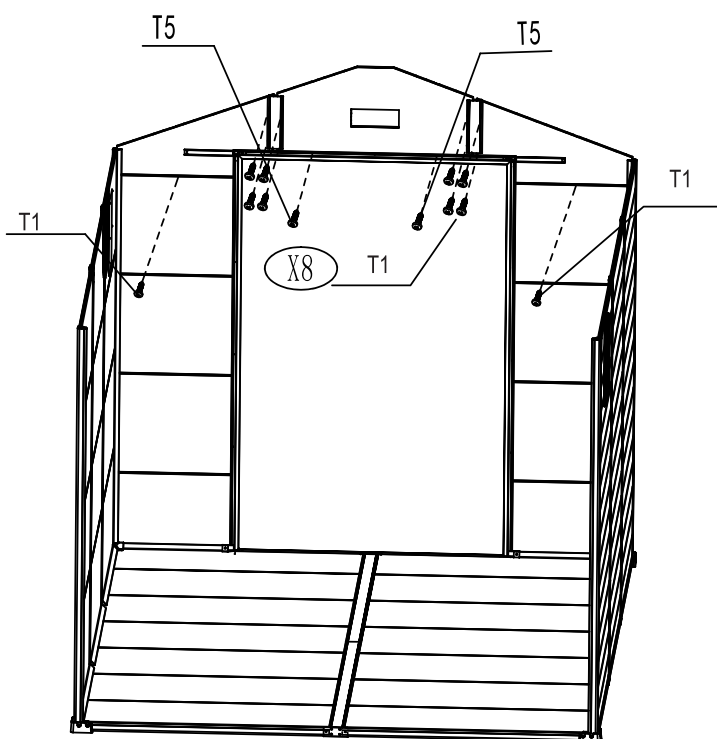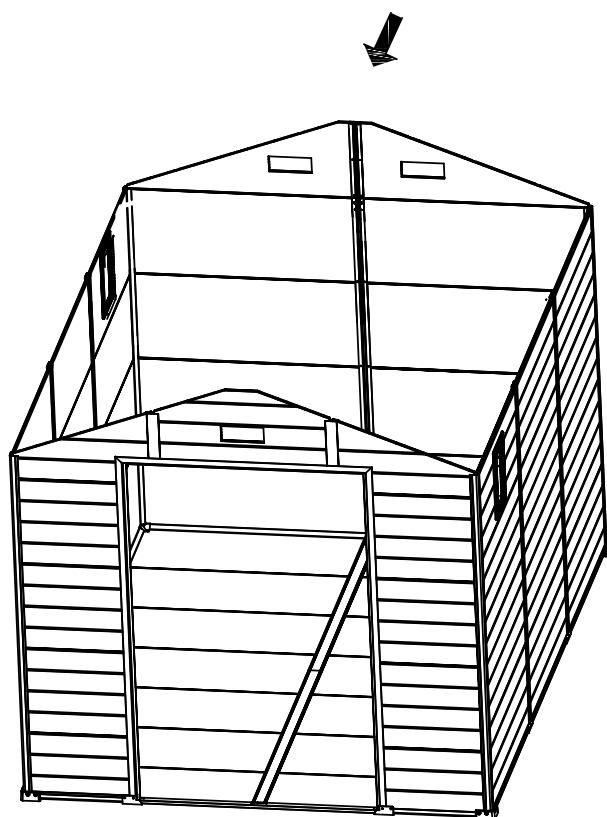

40PCS		4PCS		4PCS		2PCS		2PCS		
T1		J7		J8		J14		J13		

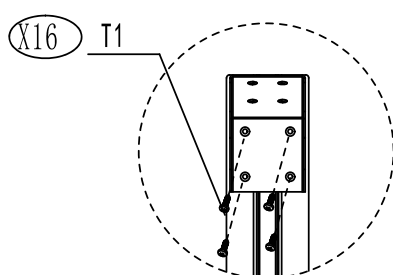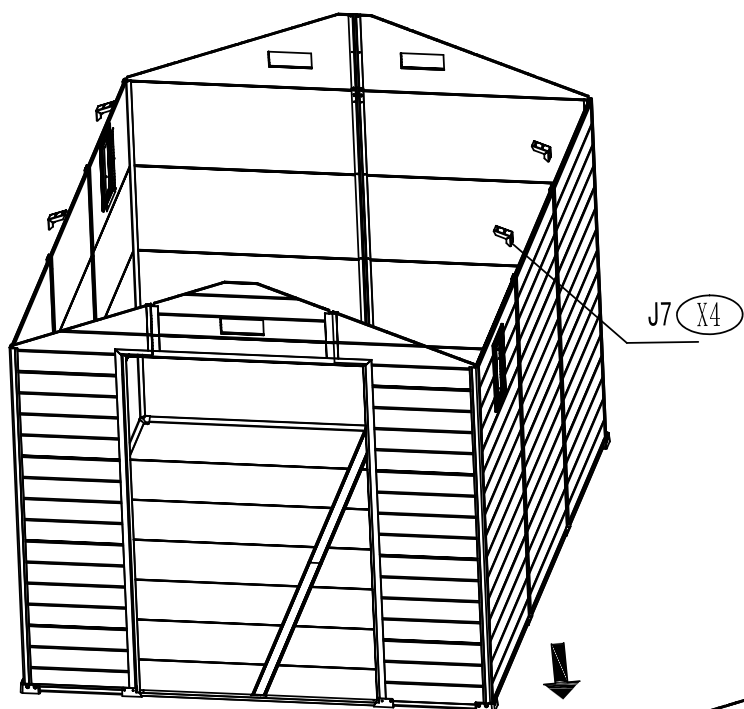

Install the screws in the locations shown in the diagram.

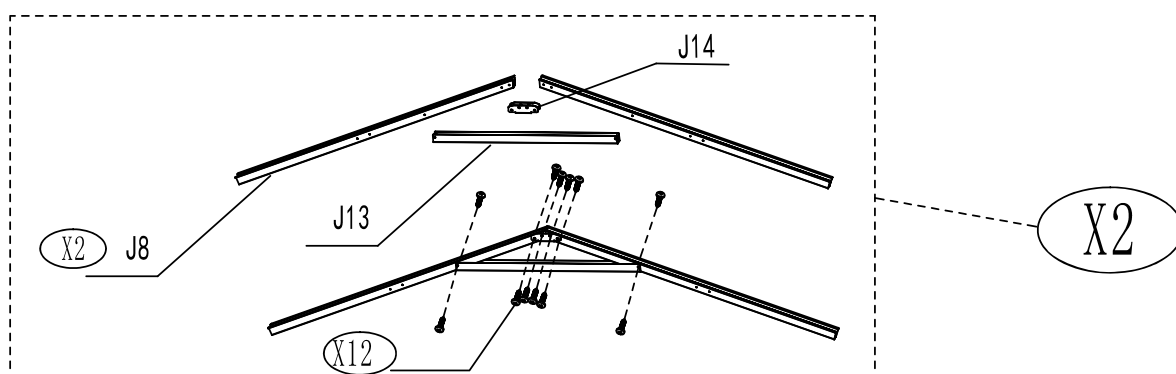
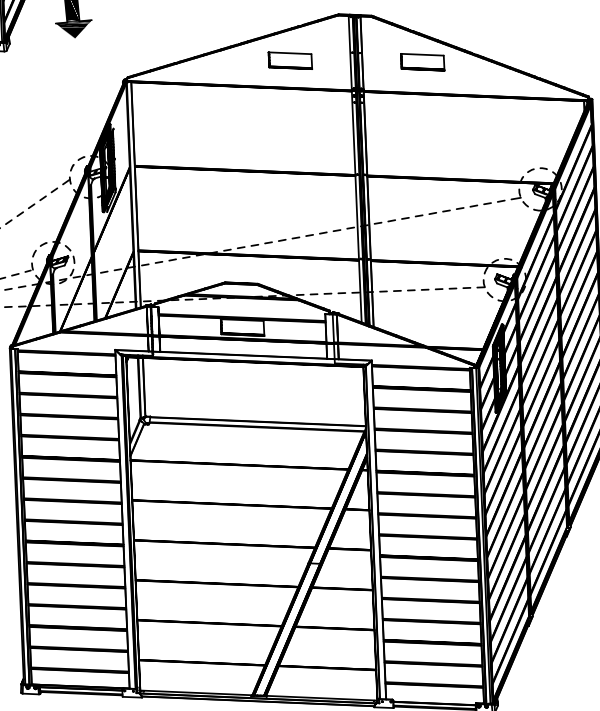


16PCS




T1

Install the screws in the locations shown in the diagram.

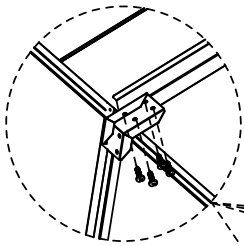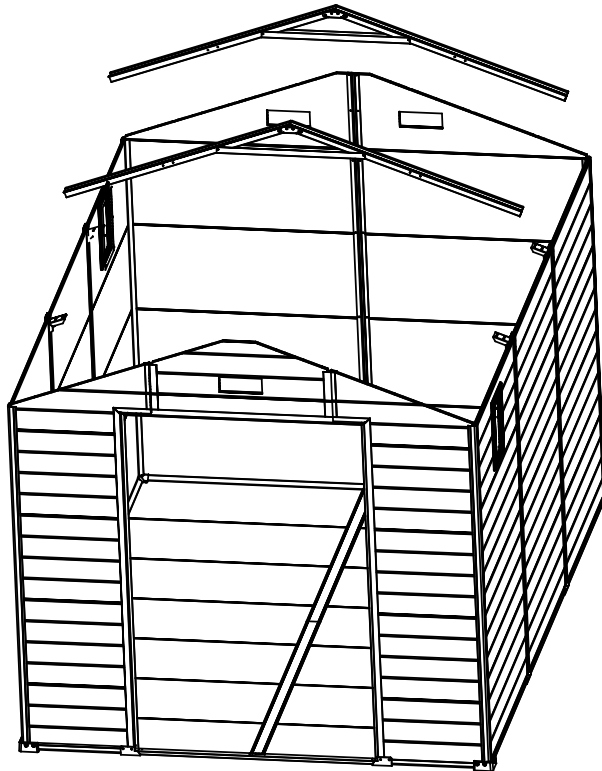


X16


T1

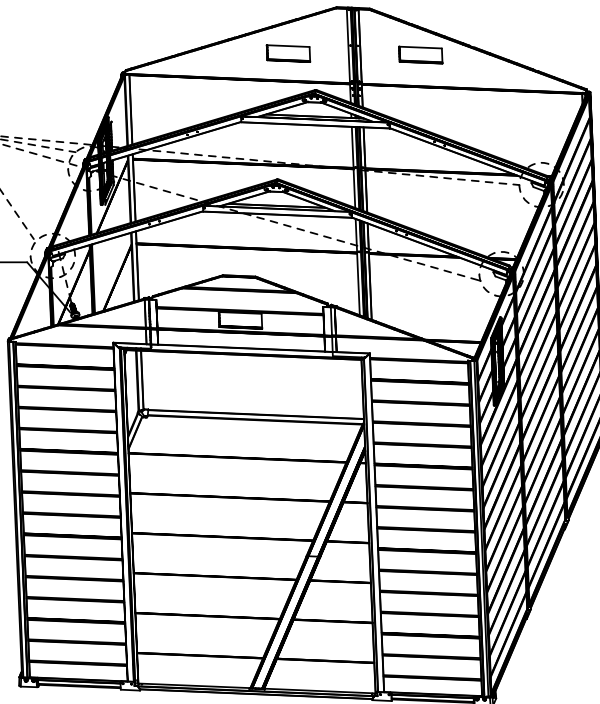

14PCS		4PCS		4PCS				
W16		G1		G2				

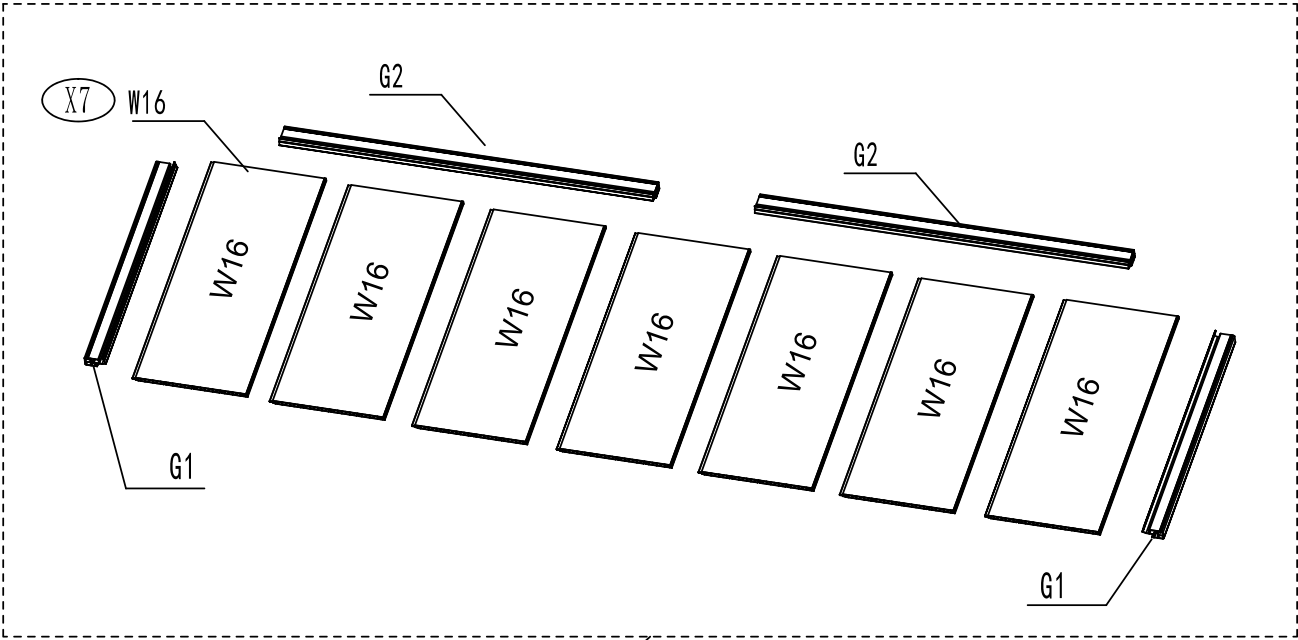




X2

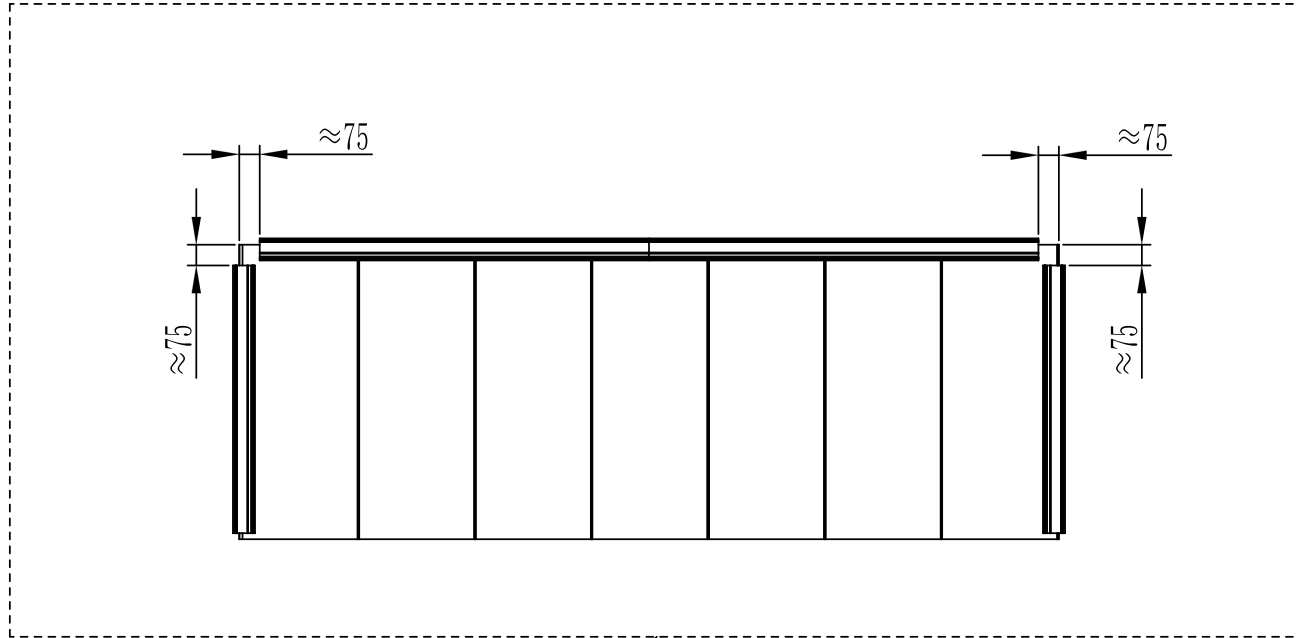


X2

2PCS 	2PCS 	48PCS 			
J15-6	J15-10	T1			

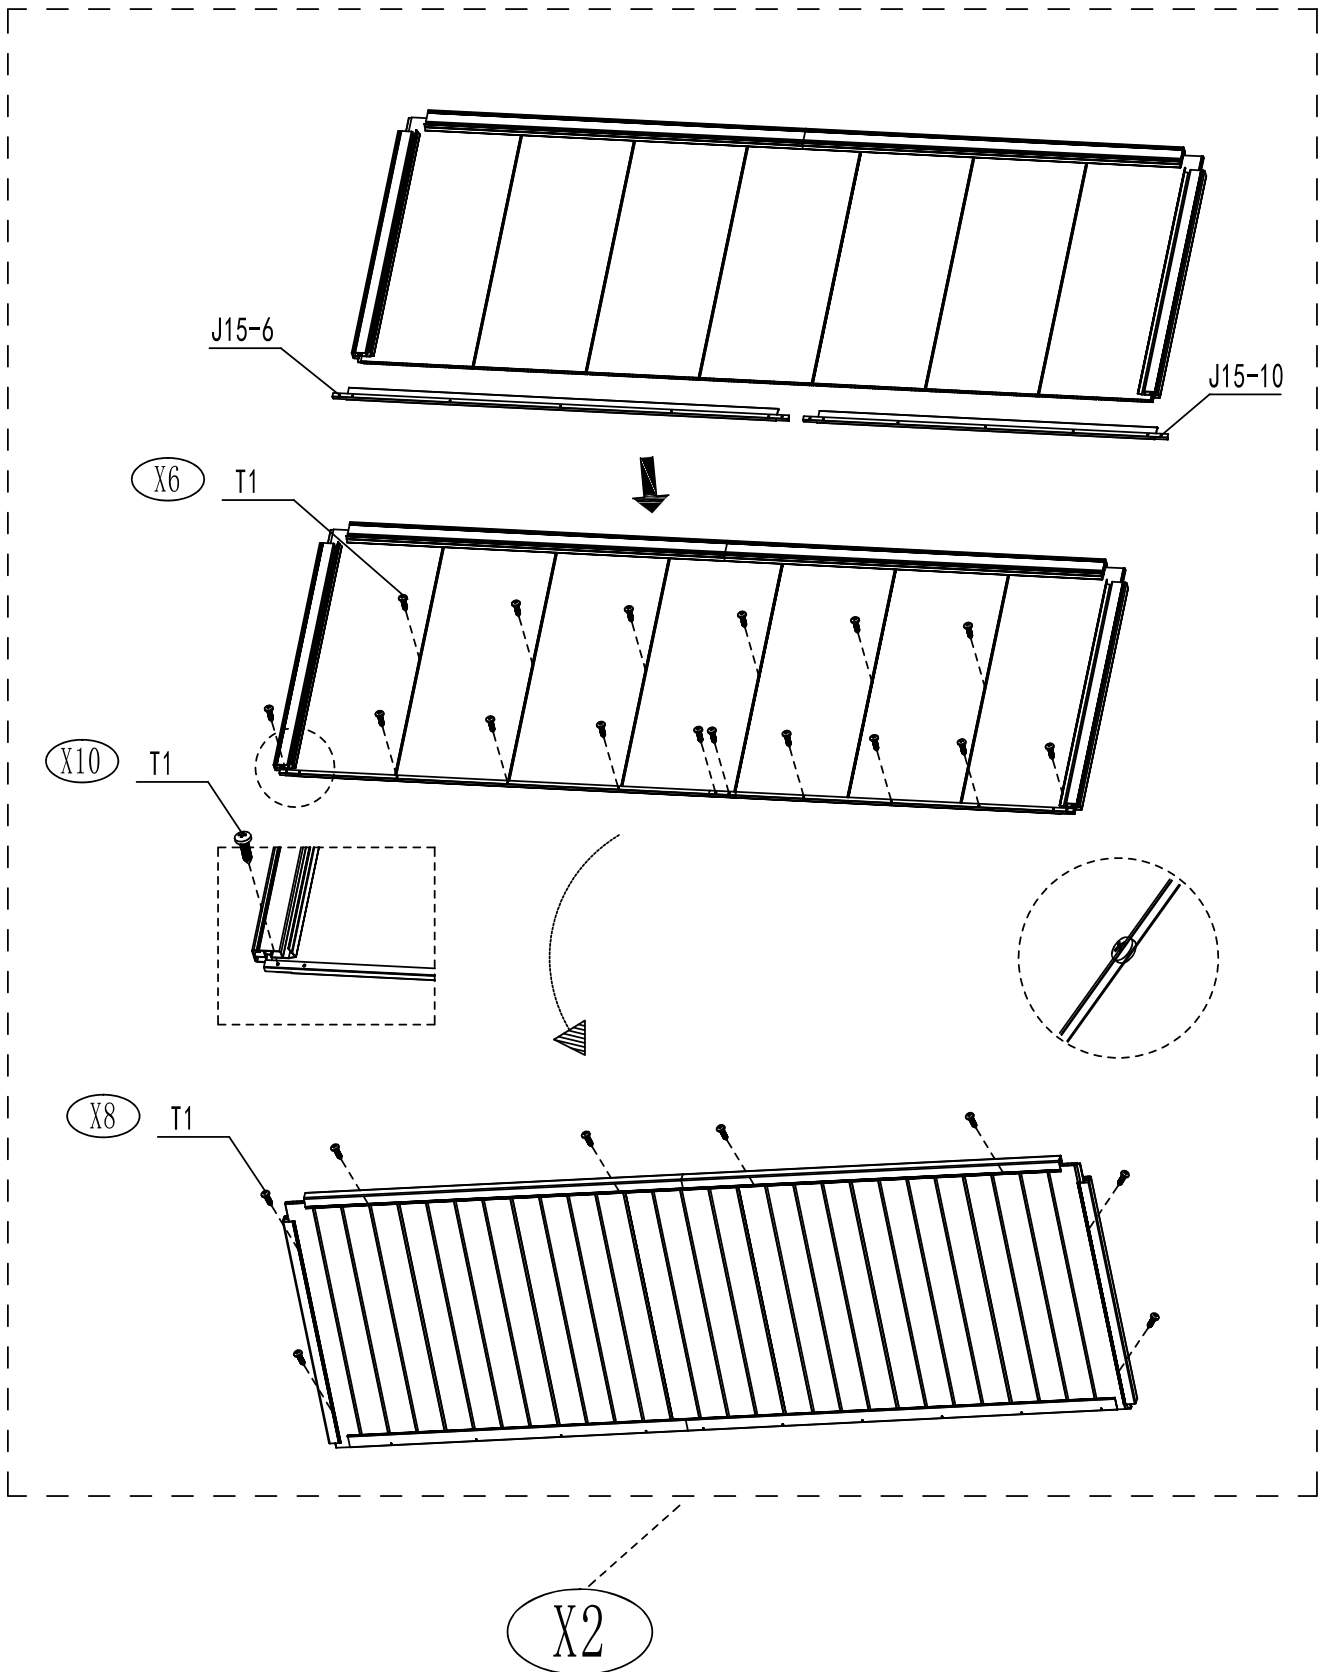


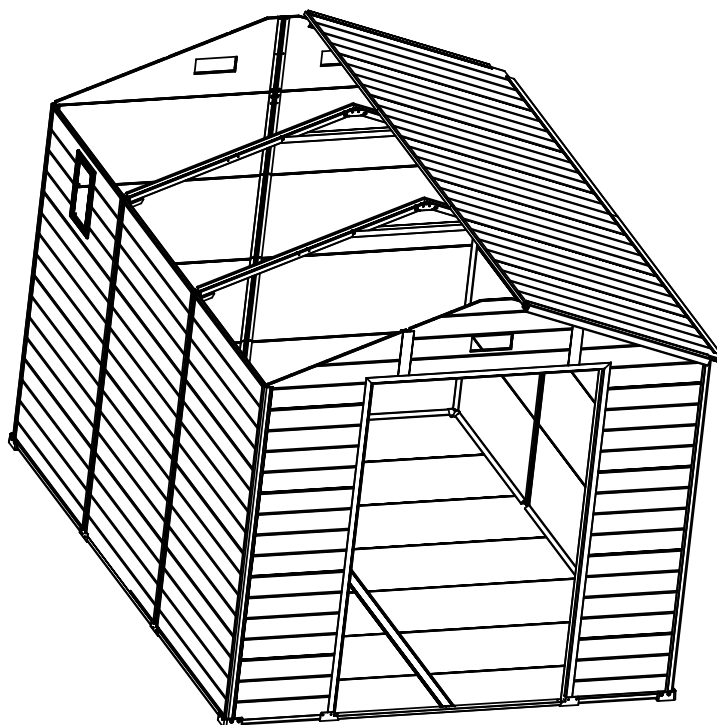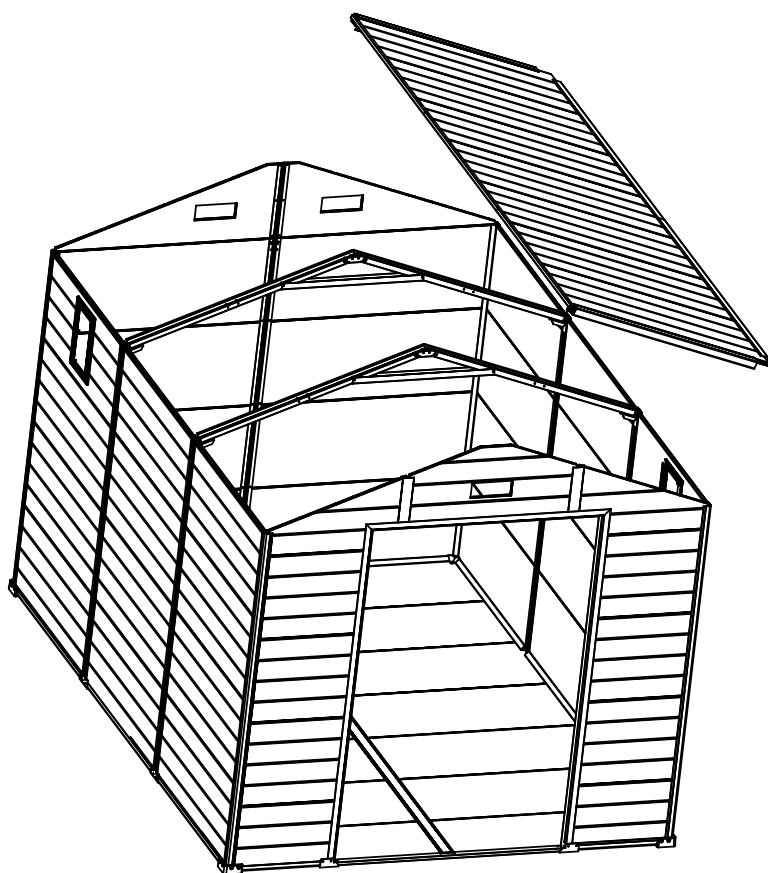


1PCS						
SF						


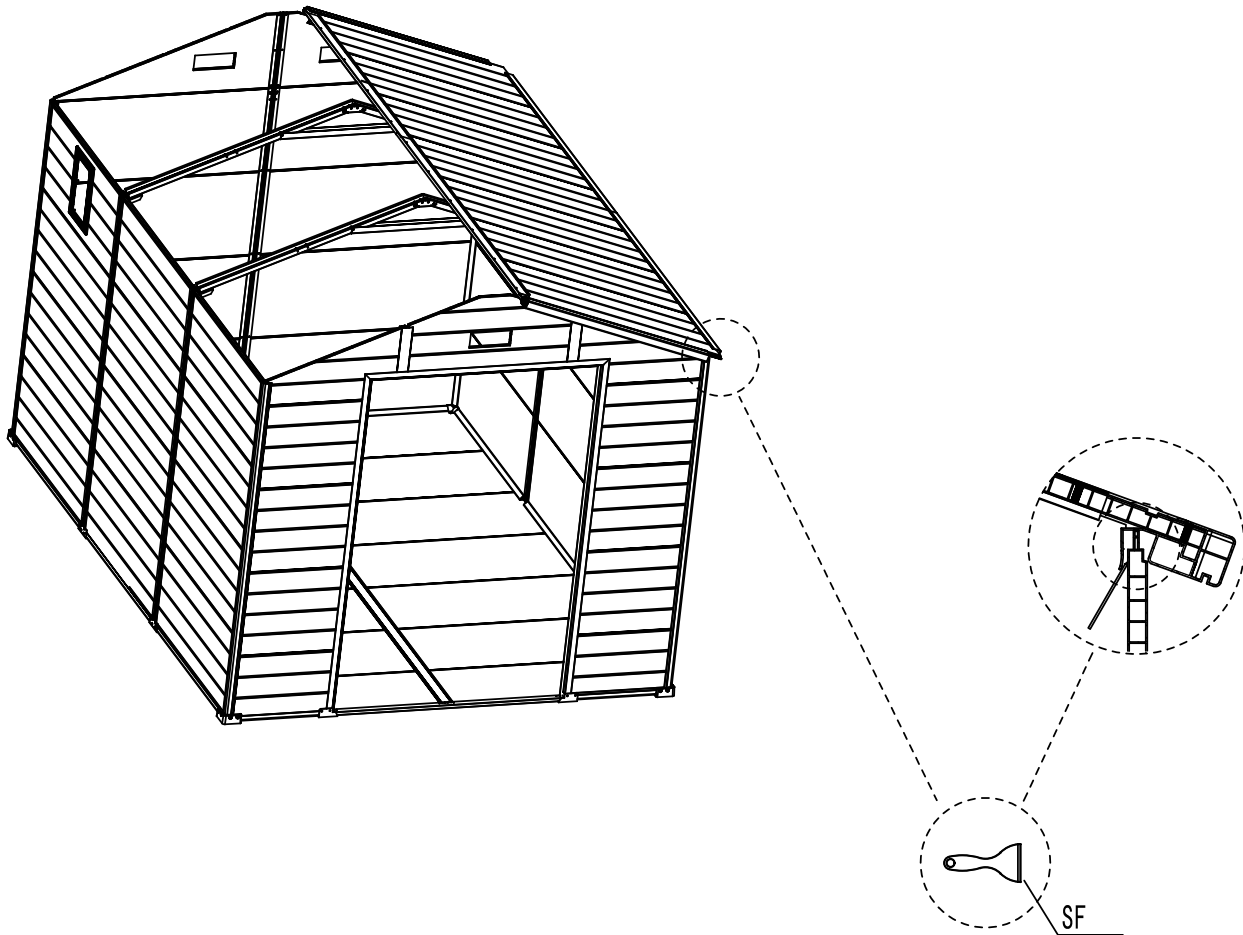


Use the SF (tool/component) to ensure all panels are fully inserted into the G-profile and are completely seated.


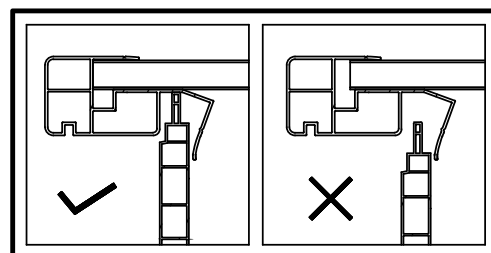


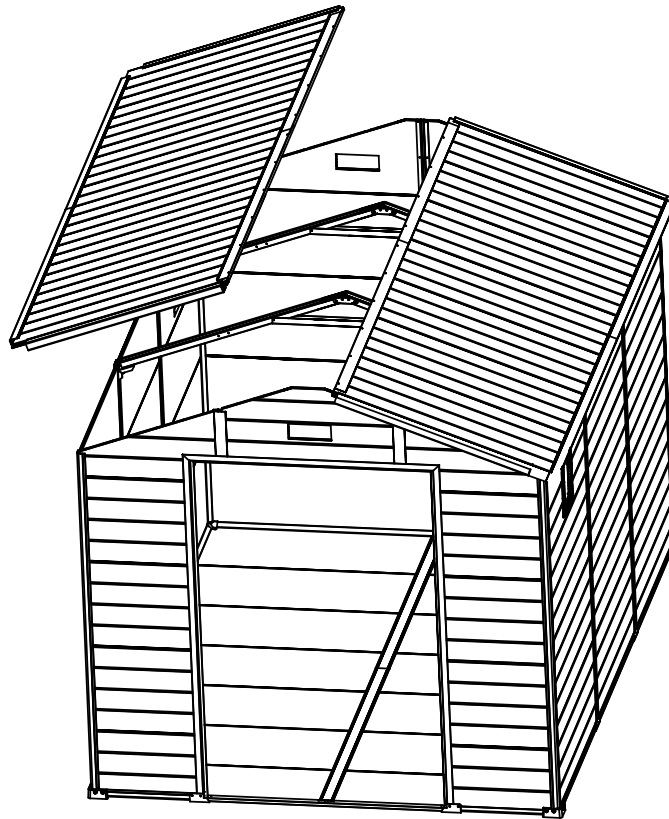


Use the SF (tool/component) to ensure all panels are fully inserted into the G-profile and are completely seated.

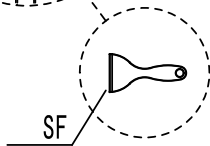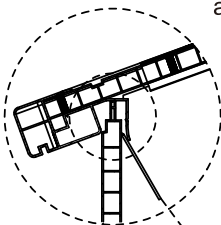

SF

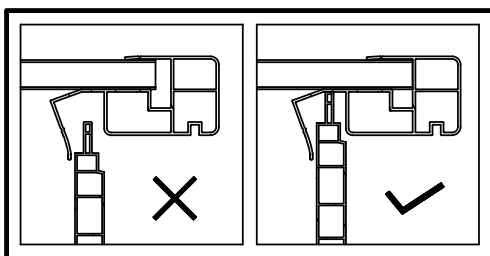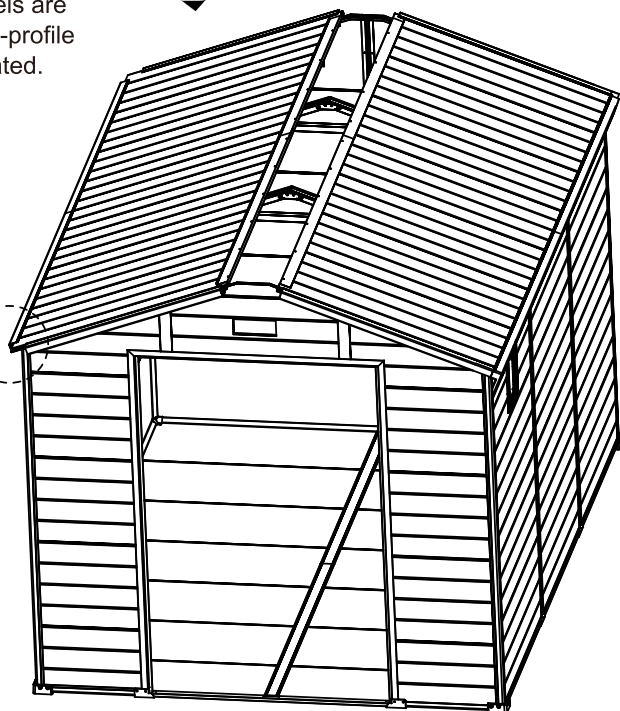


16PCS						
T3						


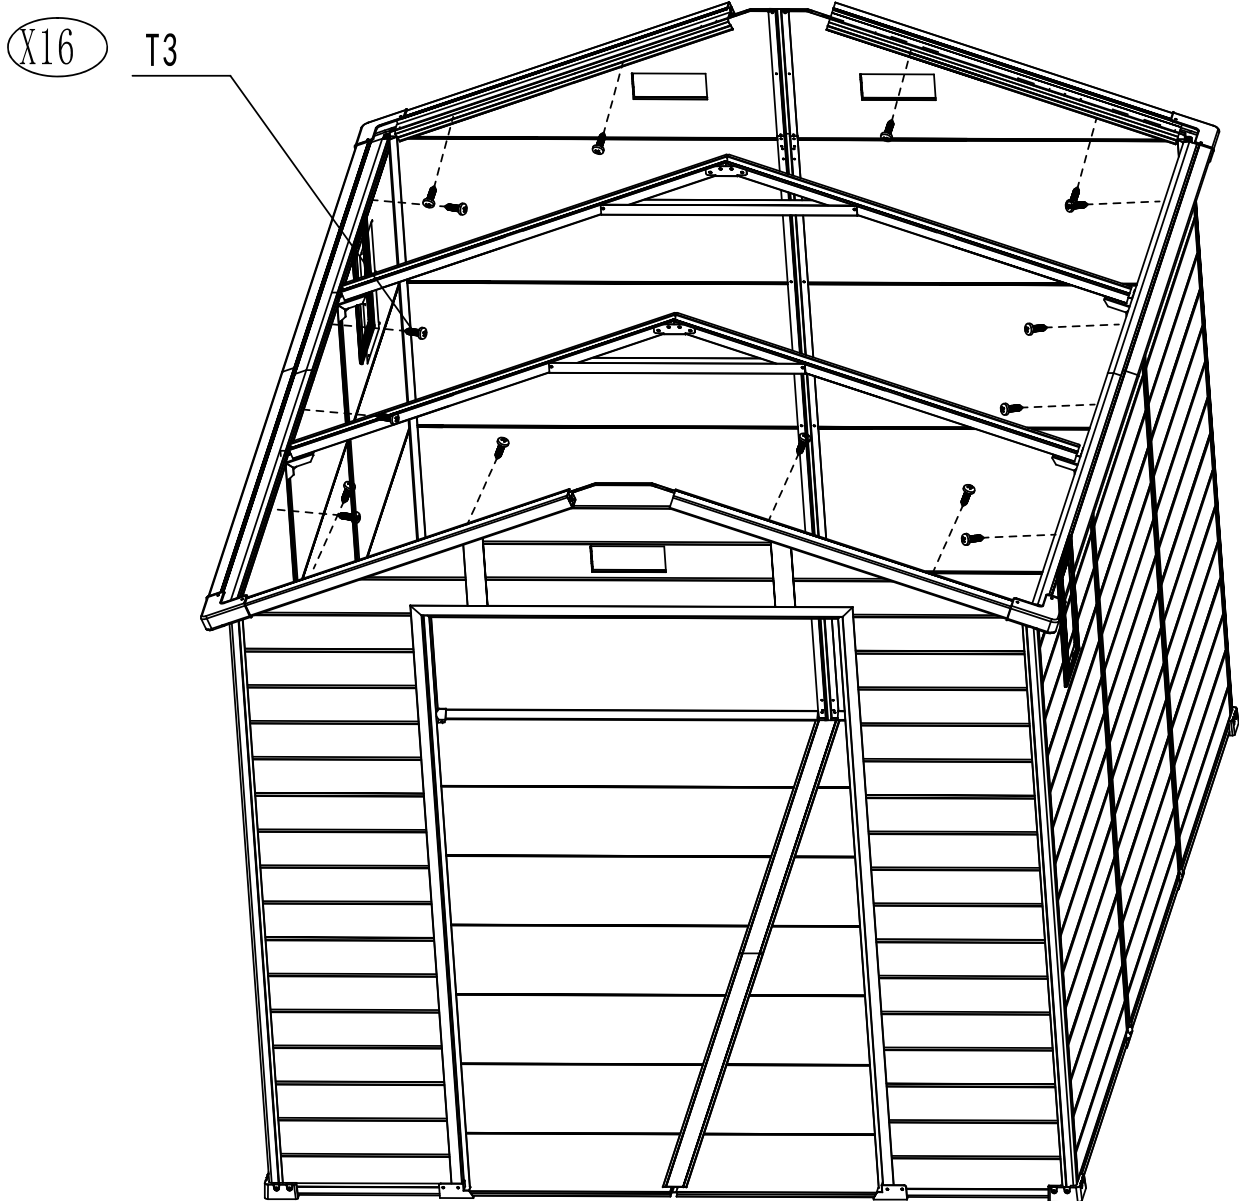


Install the T3 screws through the pre-grooved channel of the G-profile at an upward angle to connect the panel to the profile.



2PCS		16PCS					
J19		T1					

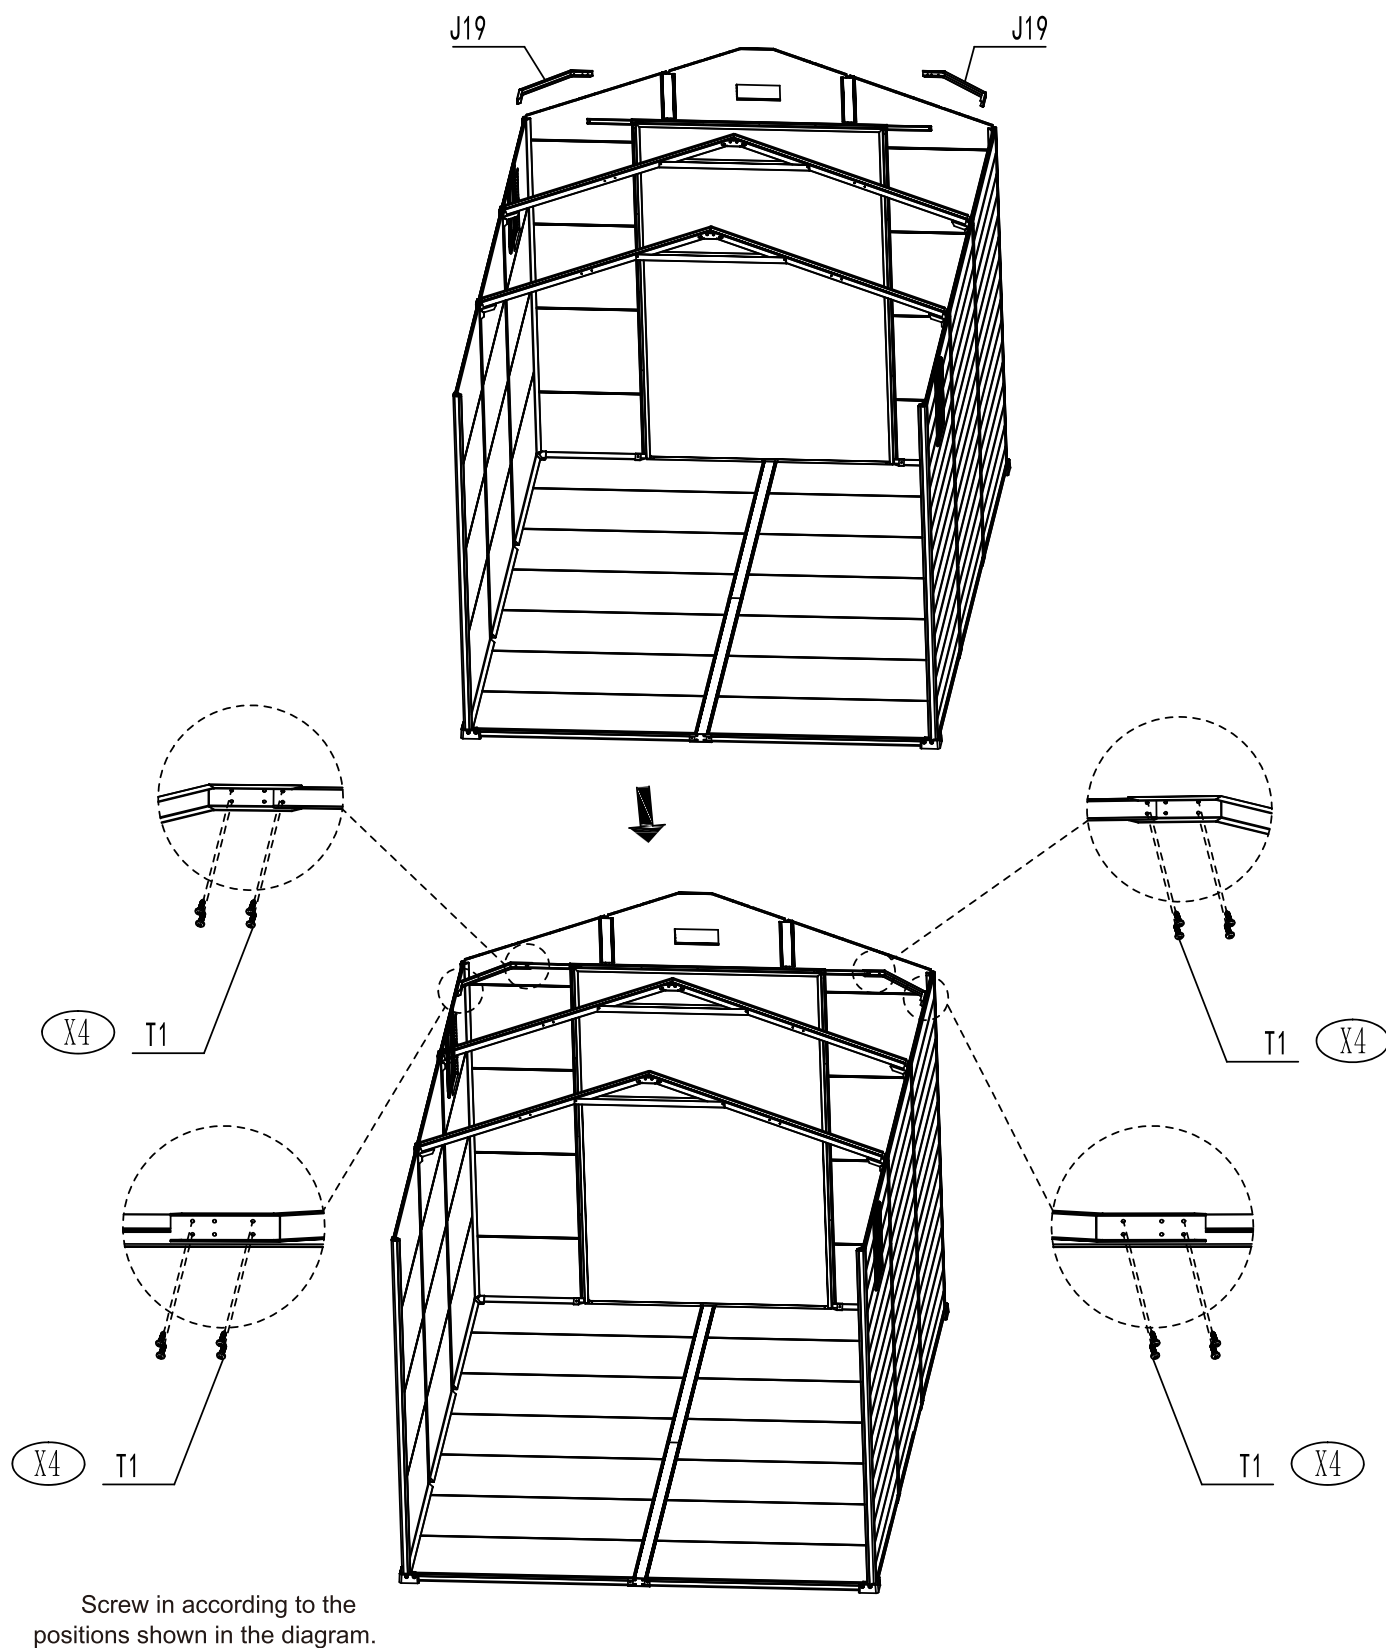


2PCS		8PCS					
J9		T1					

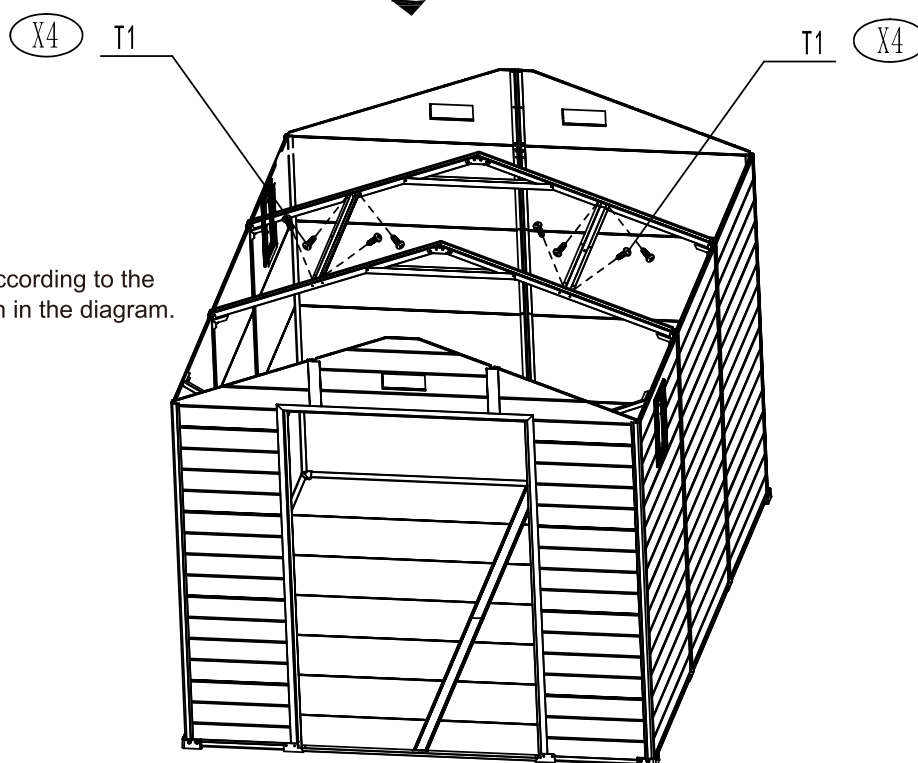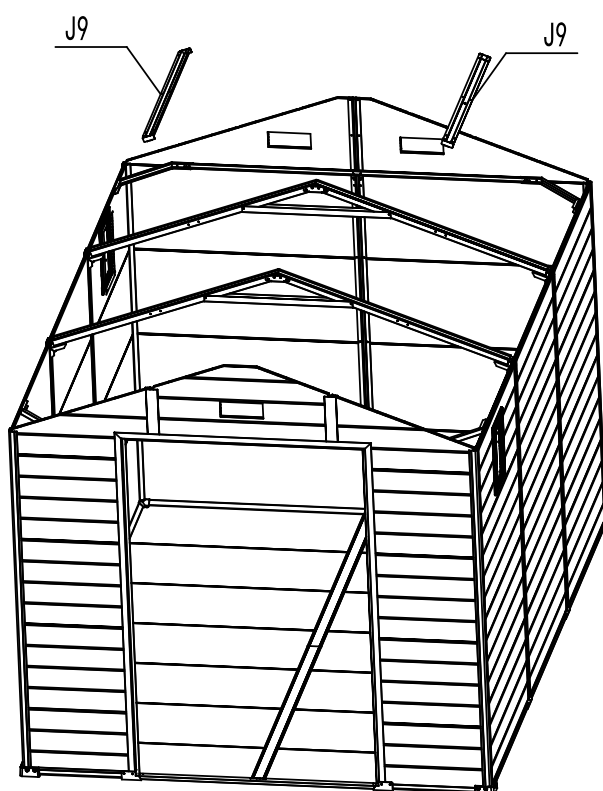


4PCS		8PCS		8PCS				
J9		T1		T3				


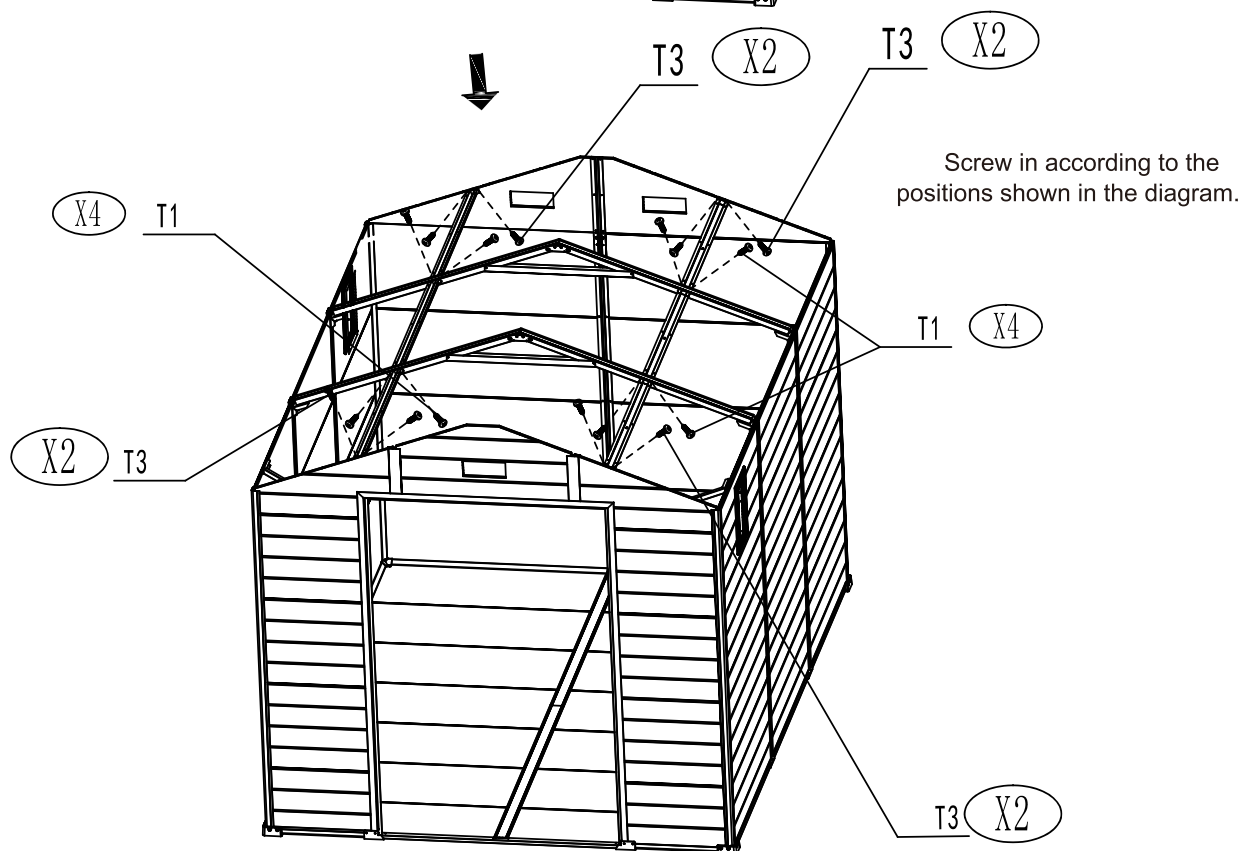
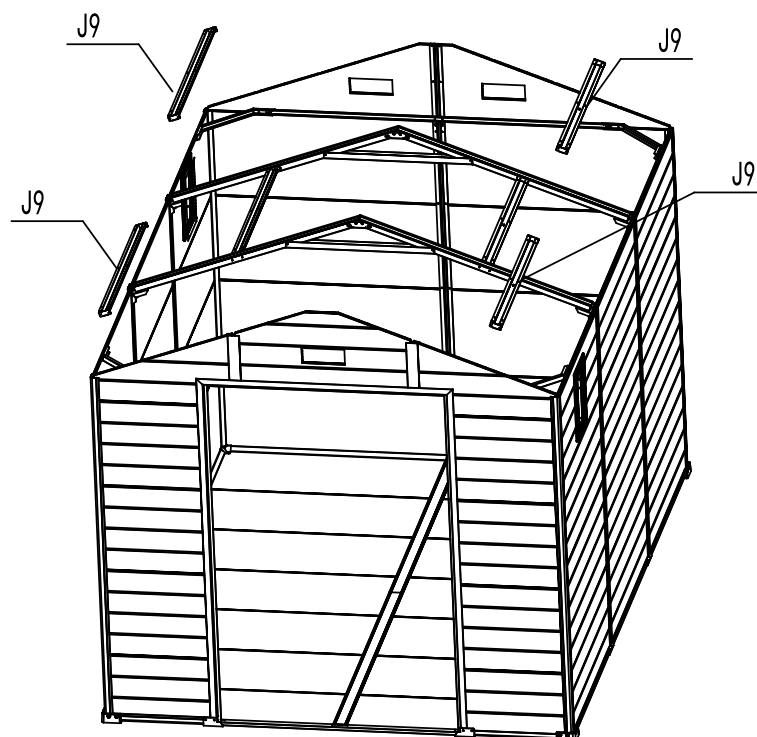


60PCS						
T1						

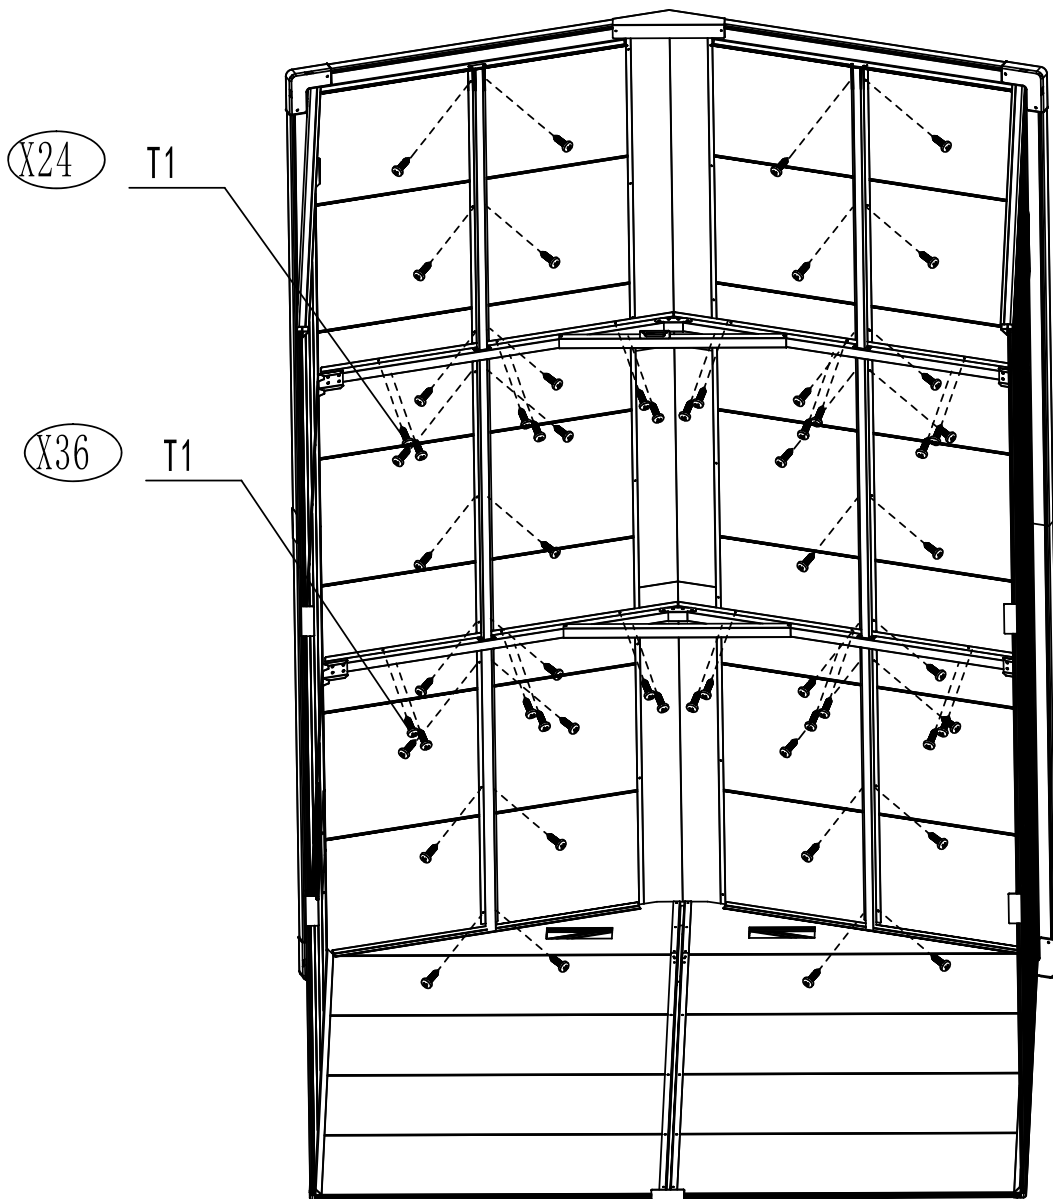



Screw in according to the positions shown in the diagram.

1PCS		4PCS					
J17		T1					

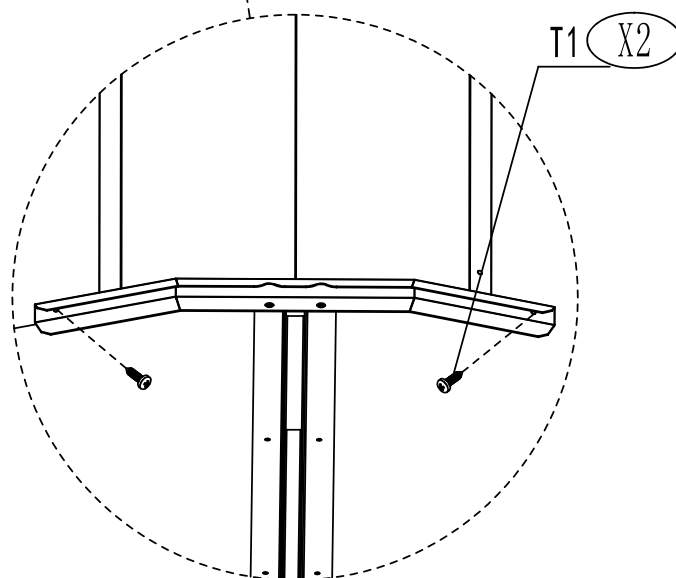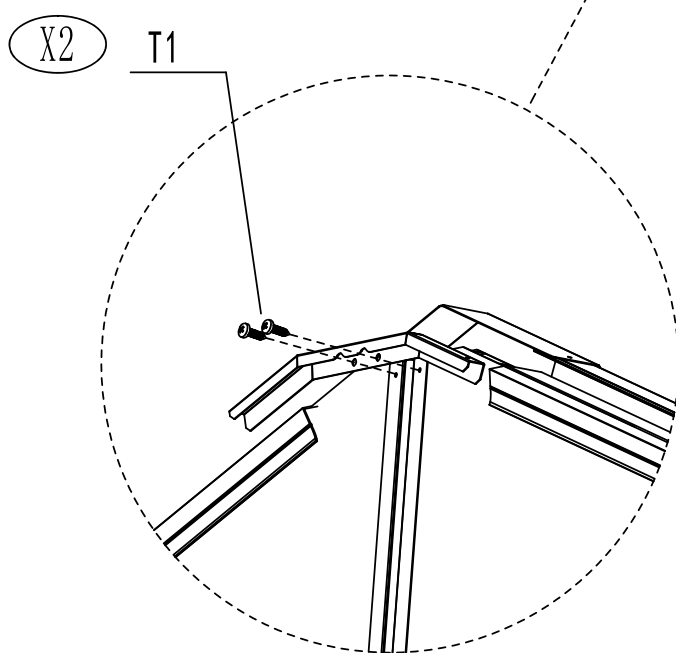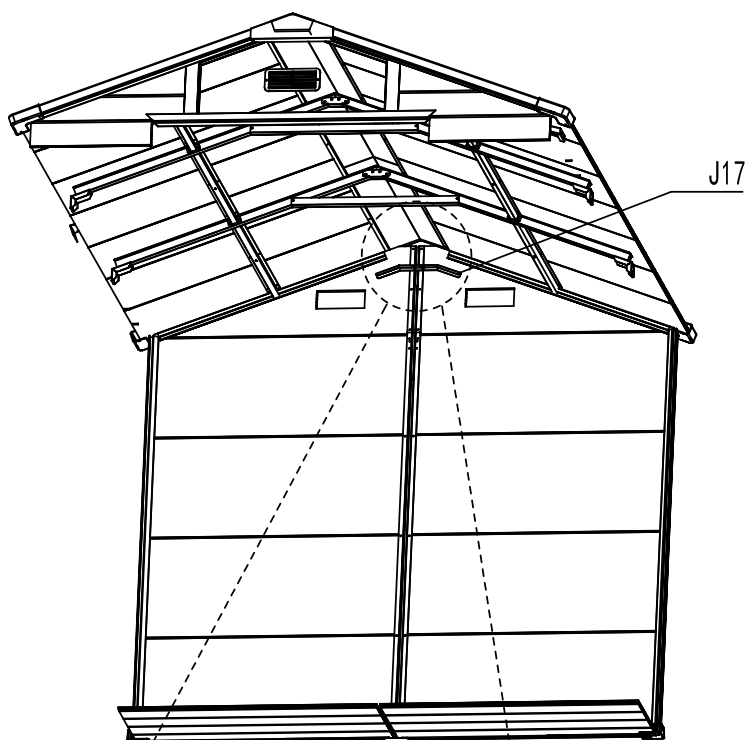


Screw in according to the positions shown in the diagram.


4PCS		4PCS		2PCS		16PCS			
SB		T1		J1		T3			

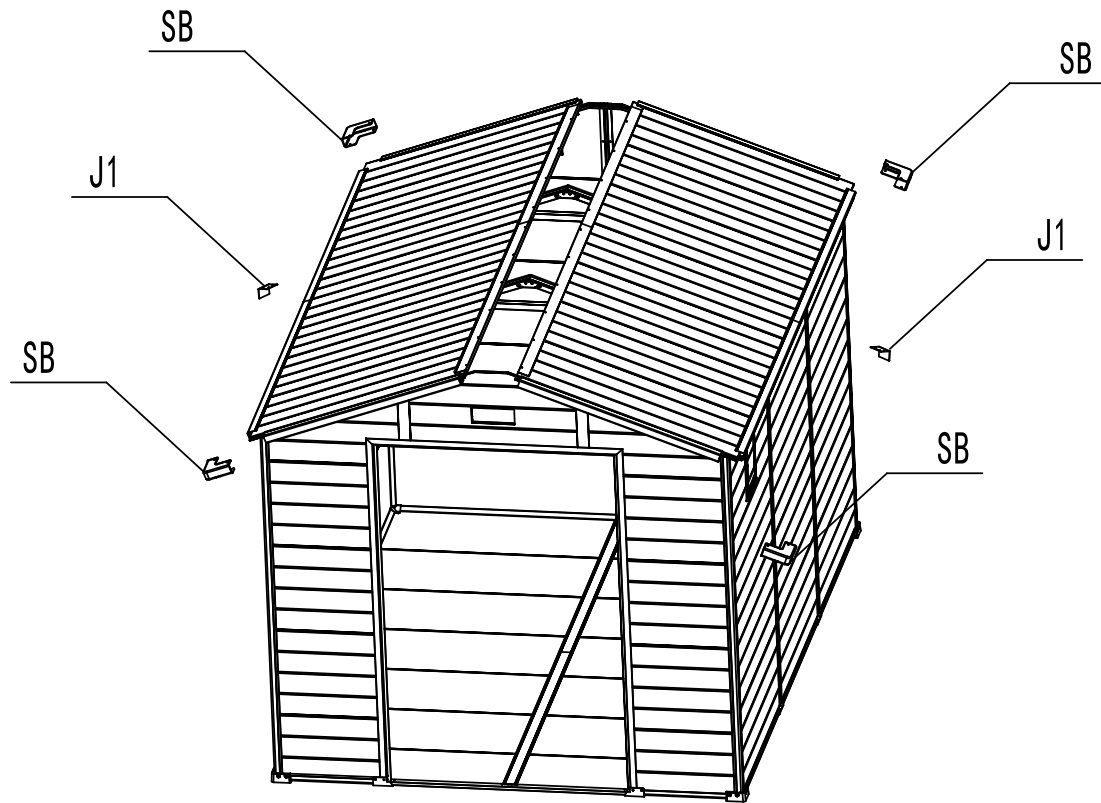



Screw in according to the positions shown in the diagram.

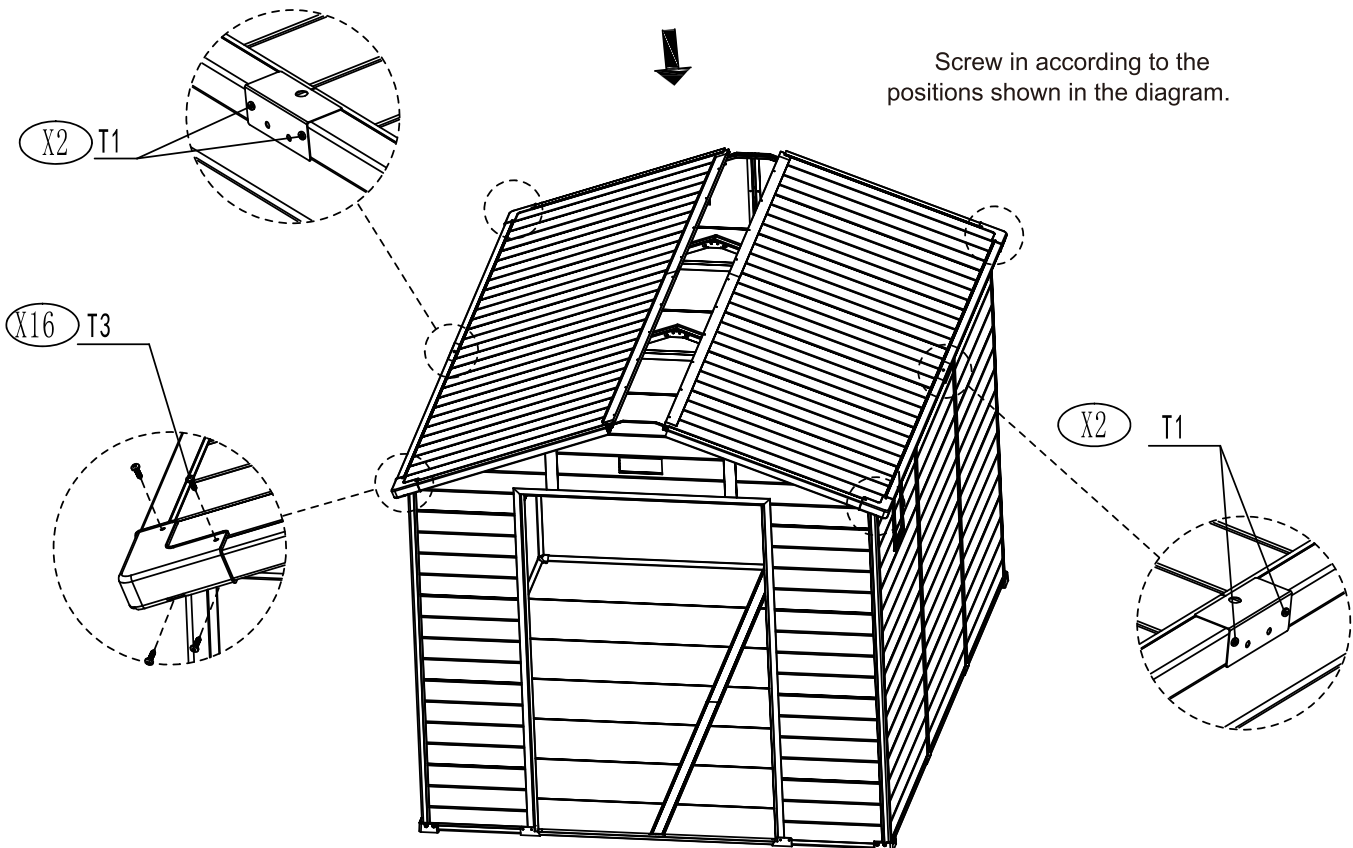


2PCS					
PC1					

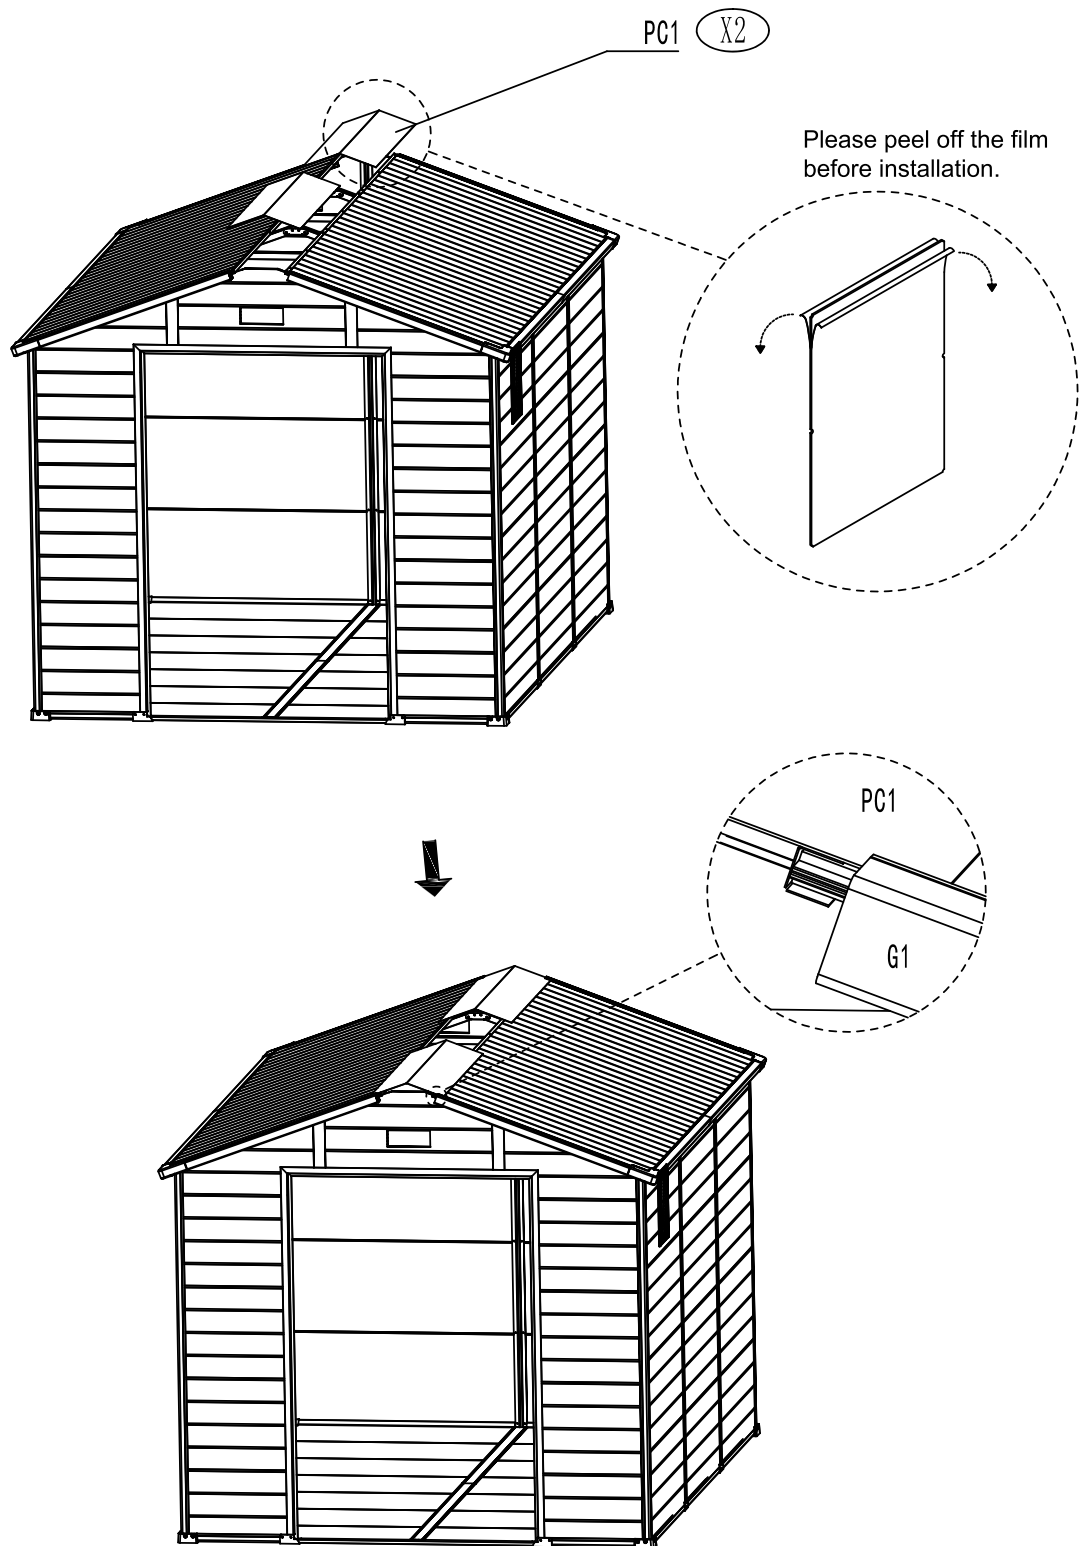

1PCS					
PC1					

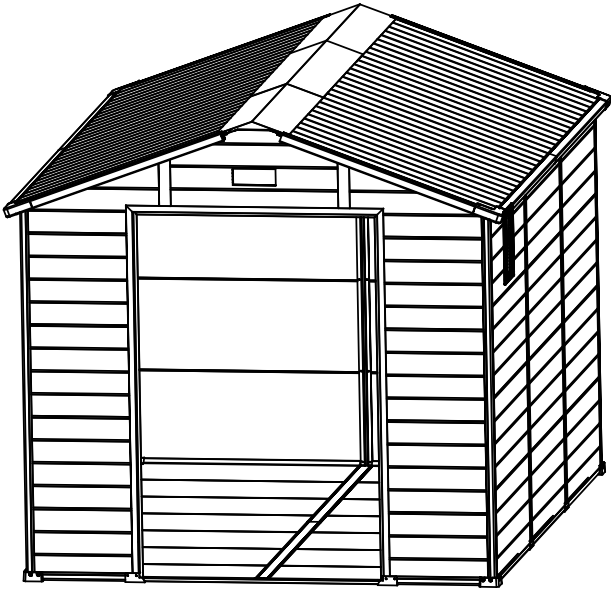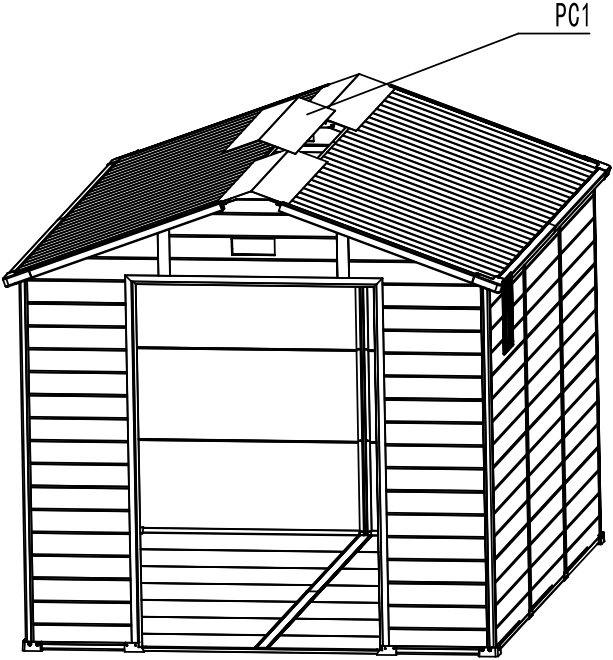


20PCS						
T1						

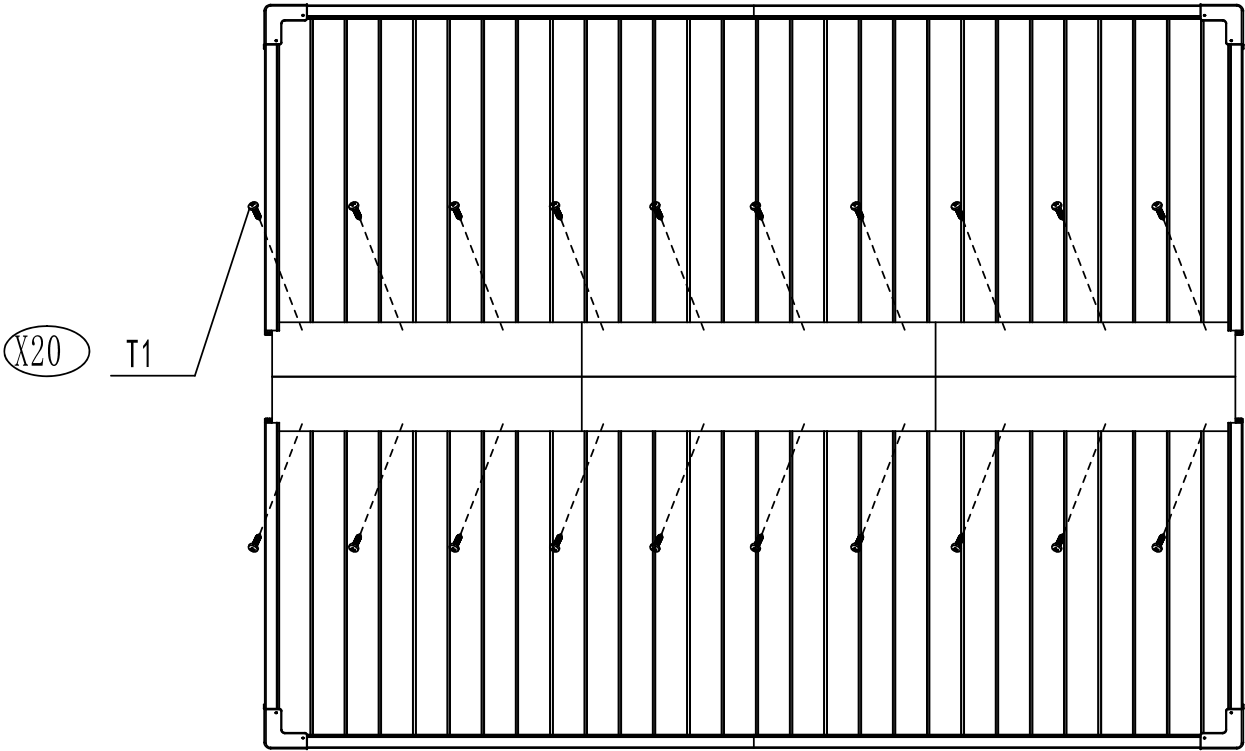


Safely get onto the roof using a ladder. Drill through the skylight panel where the holes are marked and secure it firmly.

1PCS		2PCS					
CXP		T1					

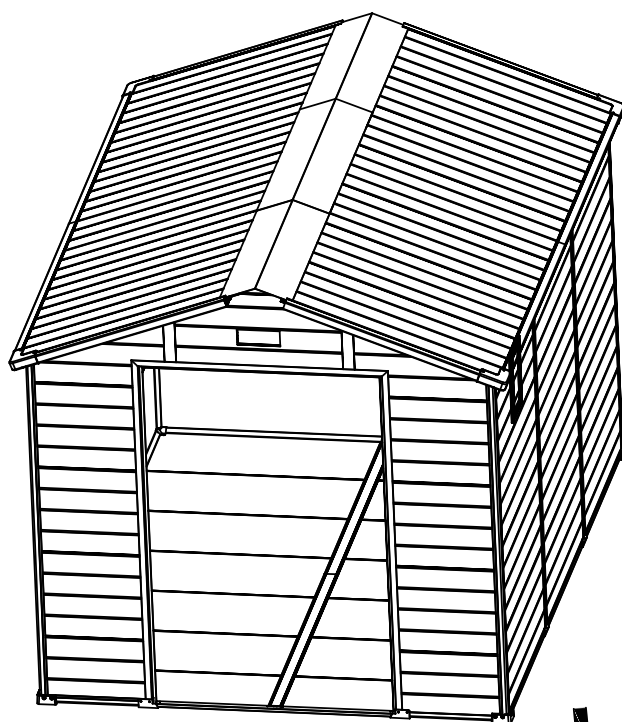


CXP

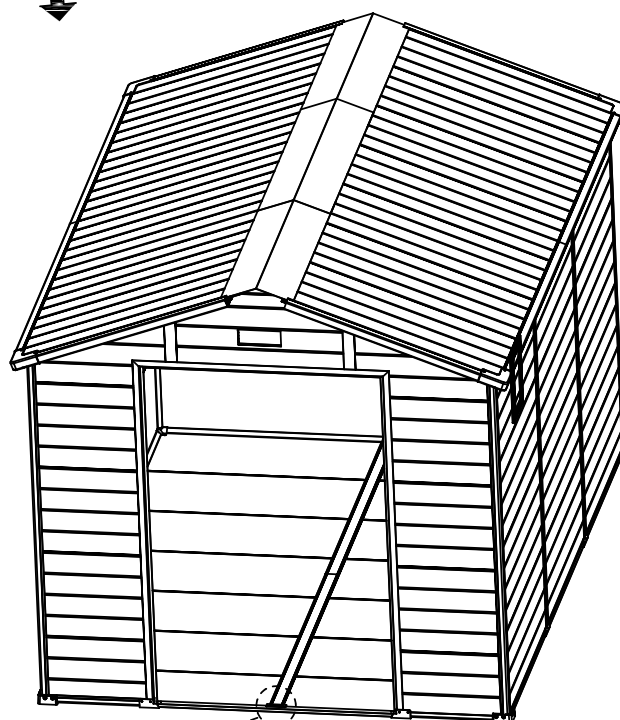


X2


T1

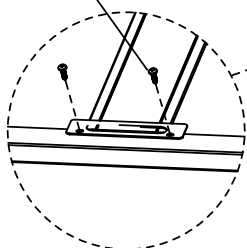






Screw in according to the positions shown in the diagram.


3PCS		6PCS					
GF		T1					

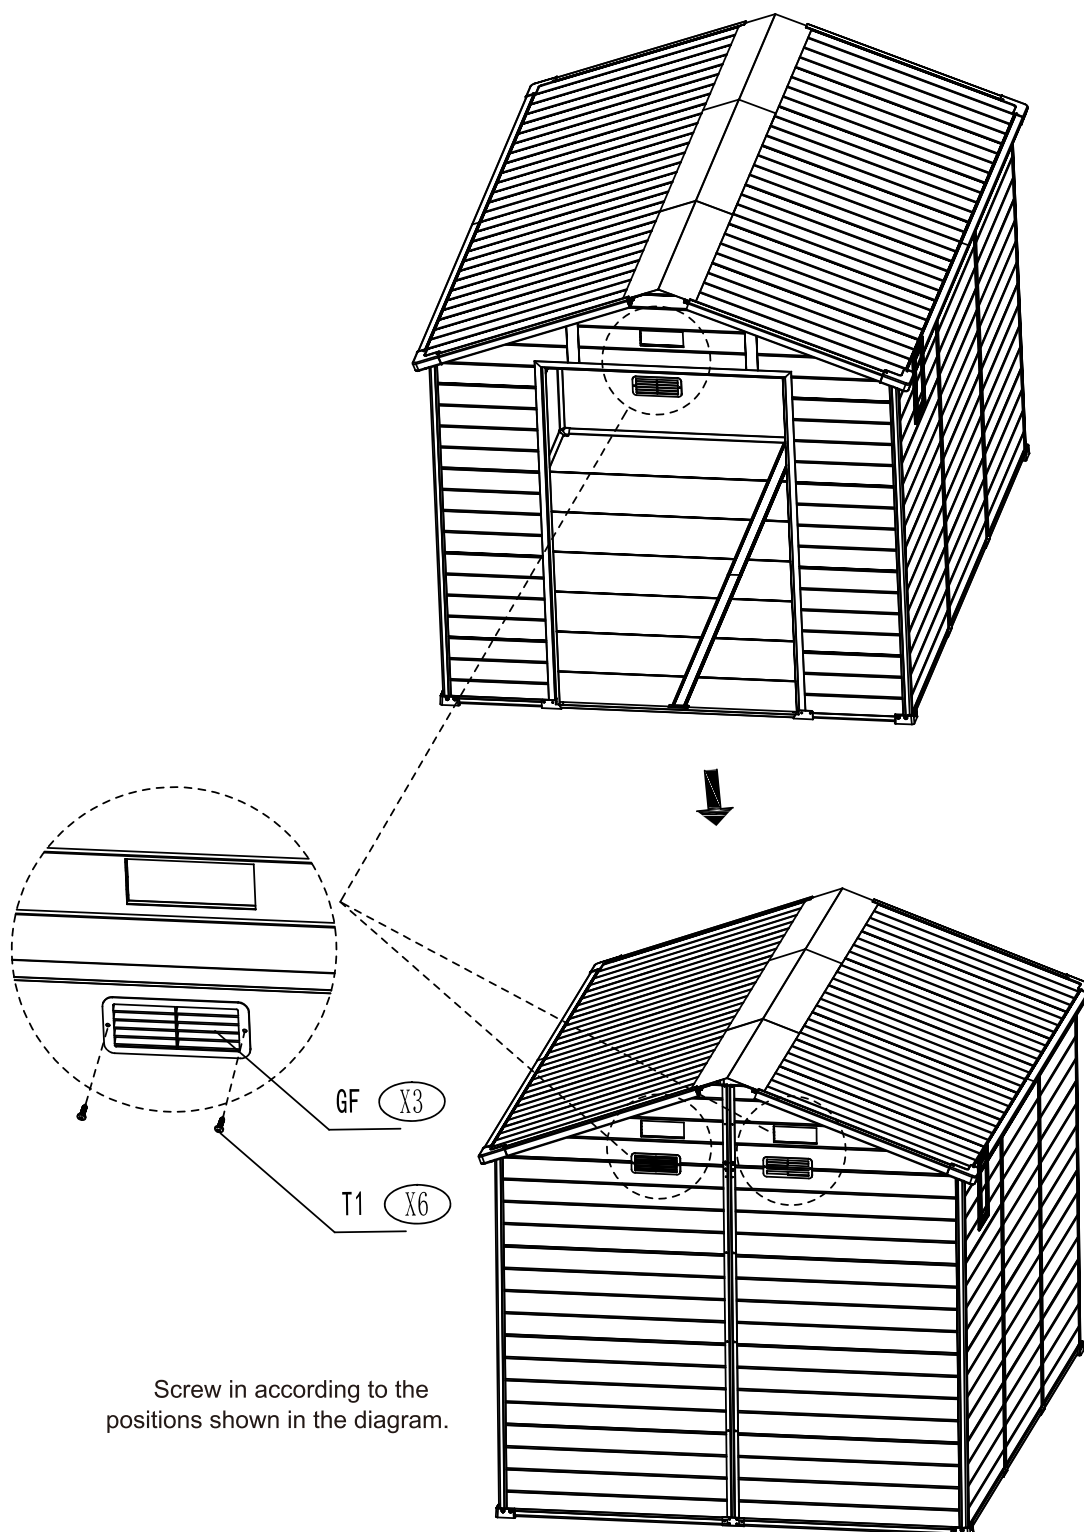


2PCS		8PCS					
J11		T3					


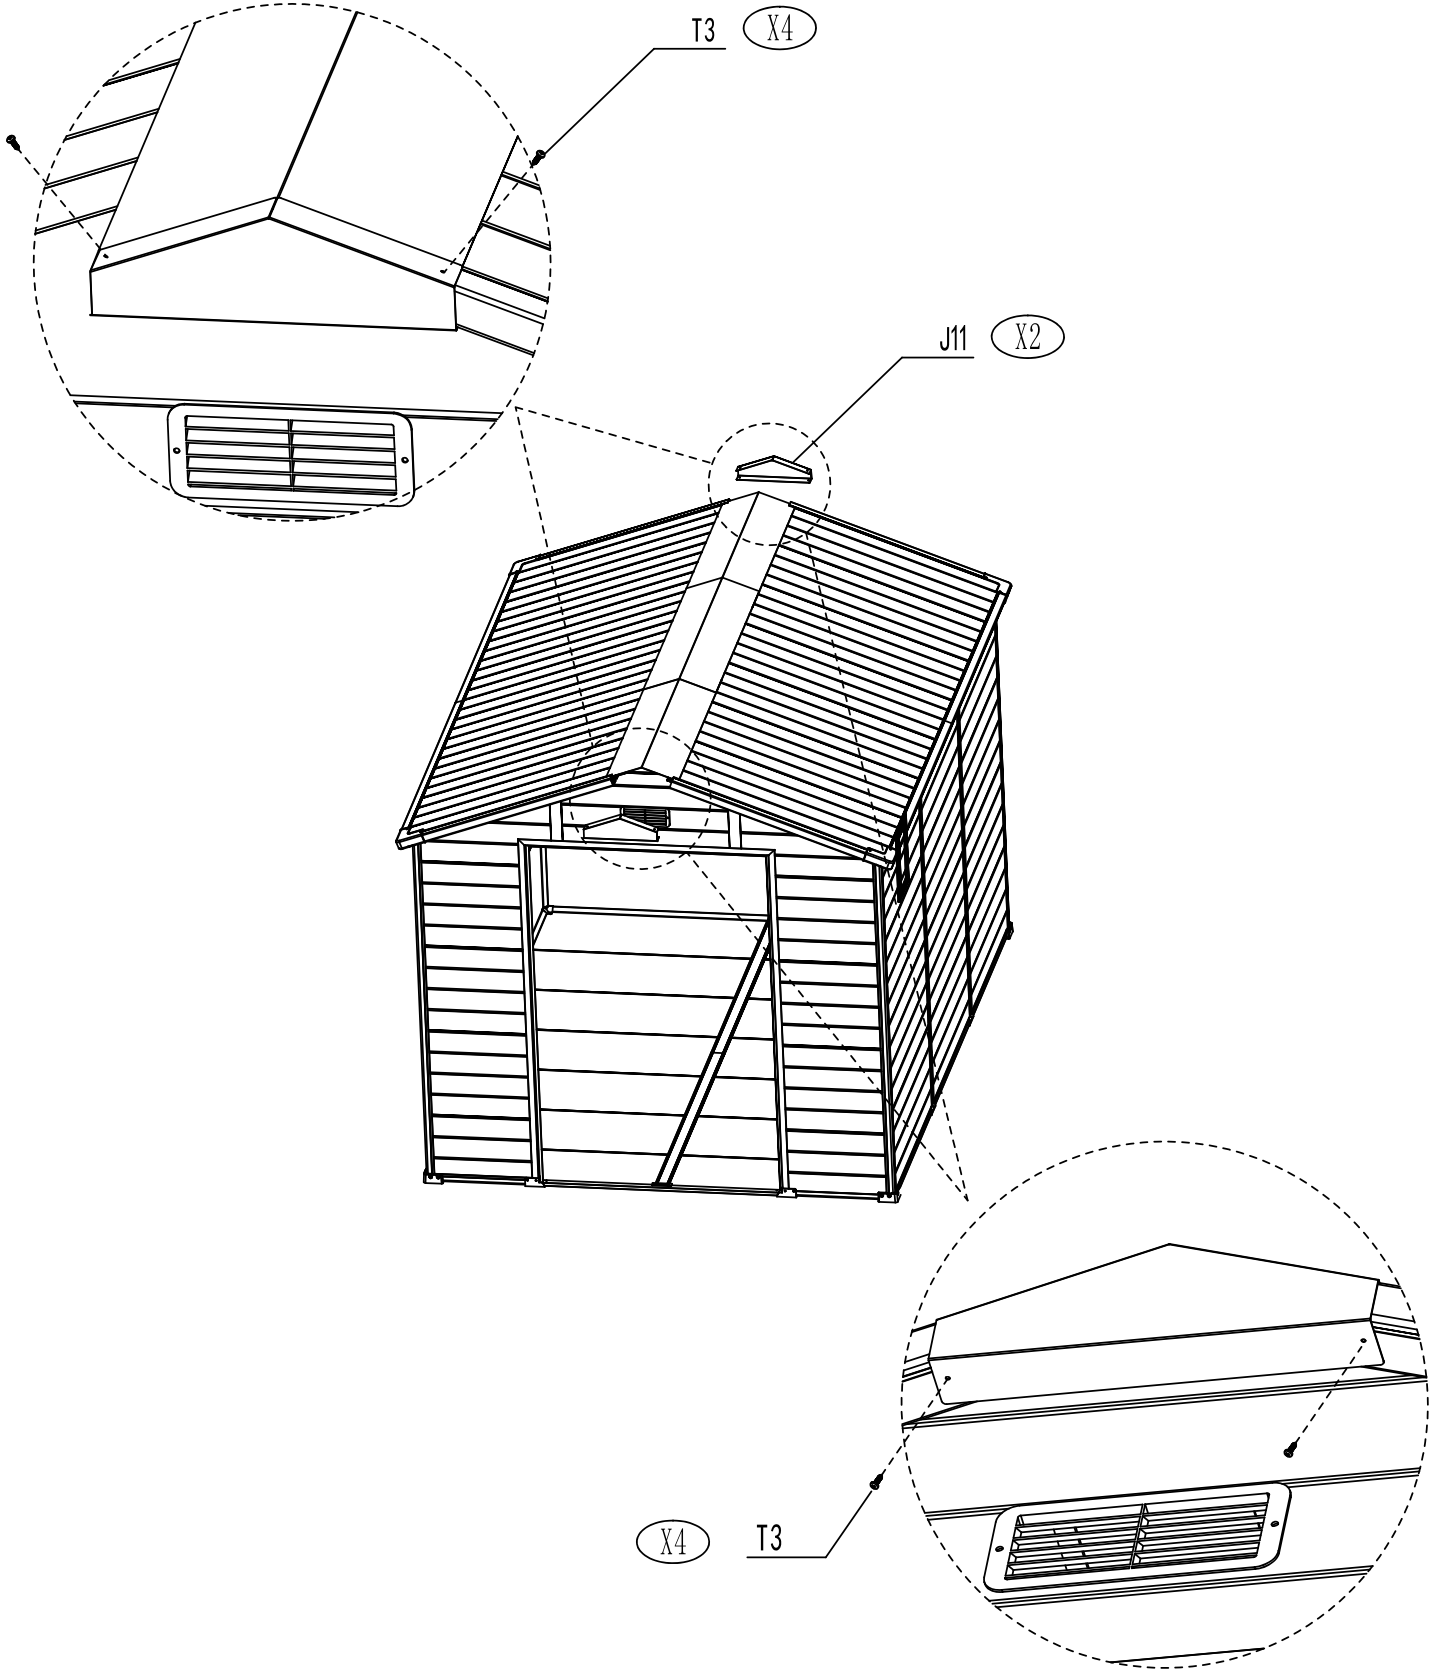




1PCS		2PCS		1PCS		2PCS		16PCS		
L1		J5		J6		CX		T5		

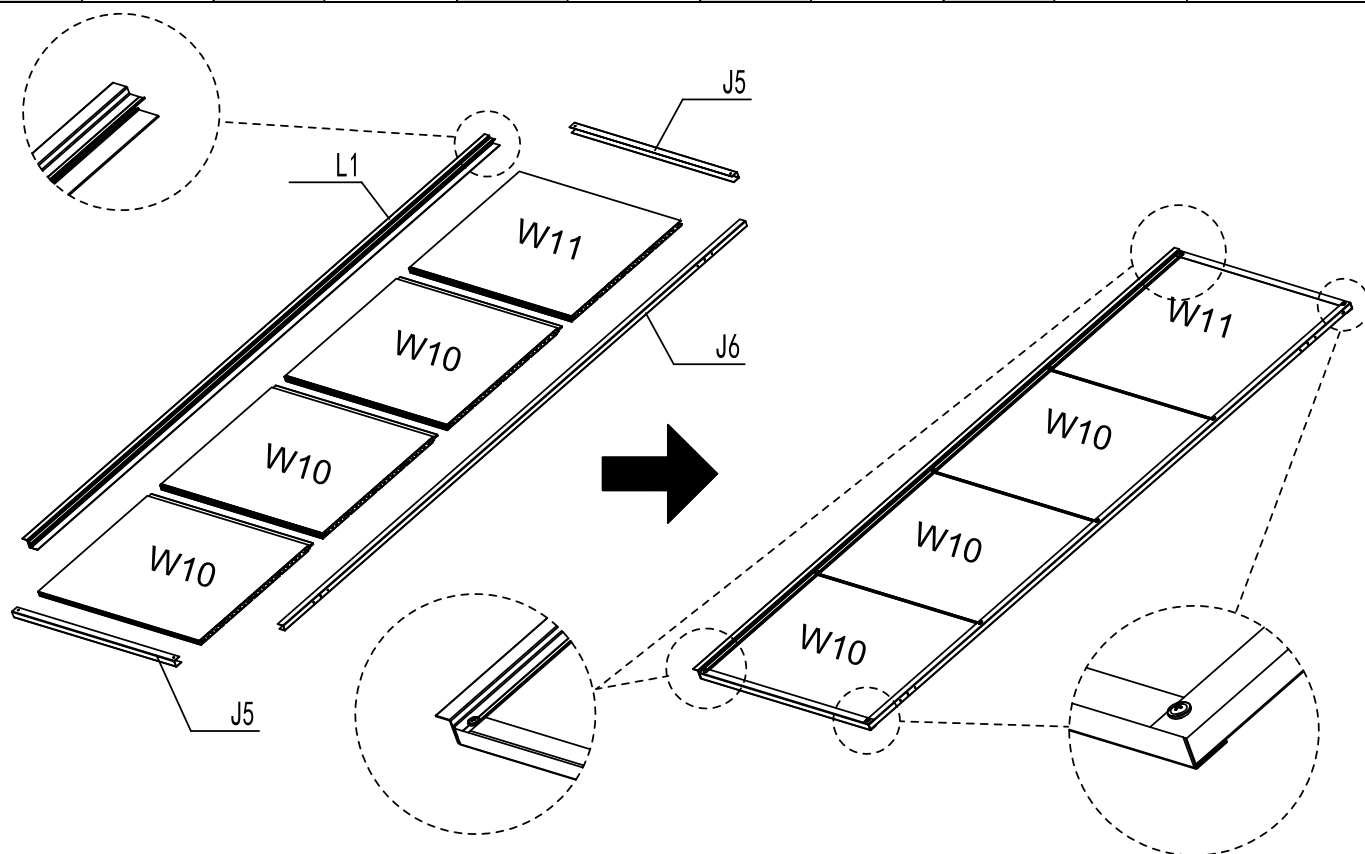




Note: When installing the left and right door panels, ensure that W11 is on top and L1 is on the left side of the right door panel.

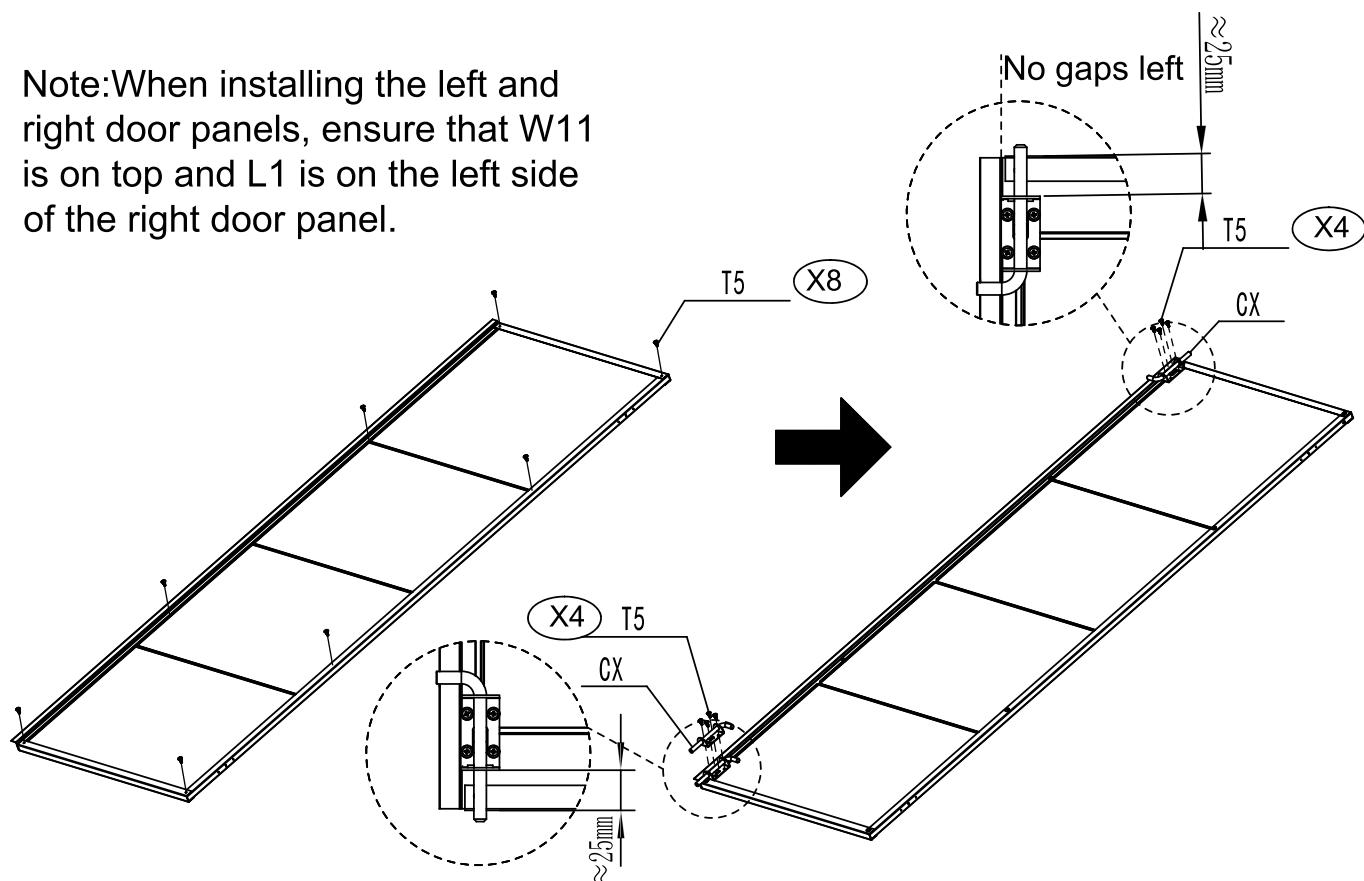


2PCS 	2PCS 	8PCS 			
J5	J6	T5			

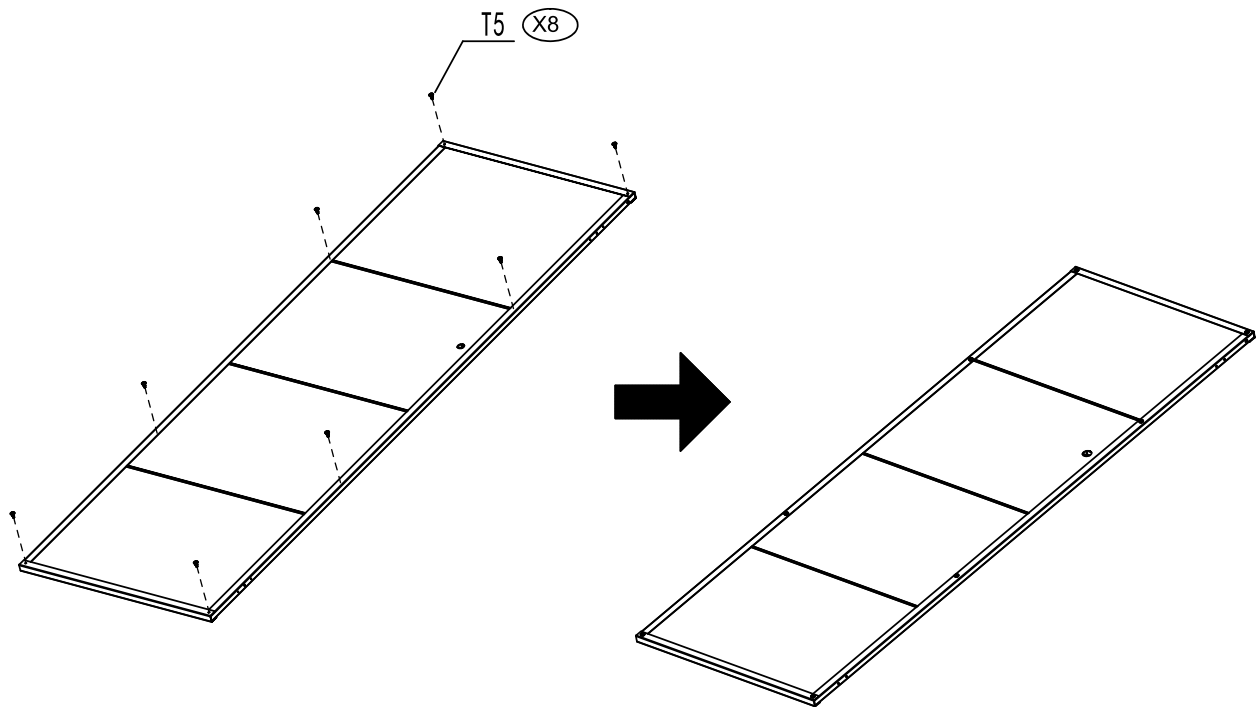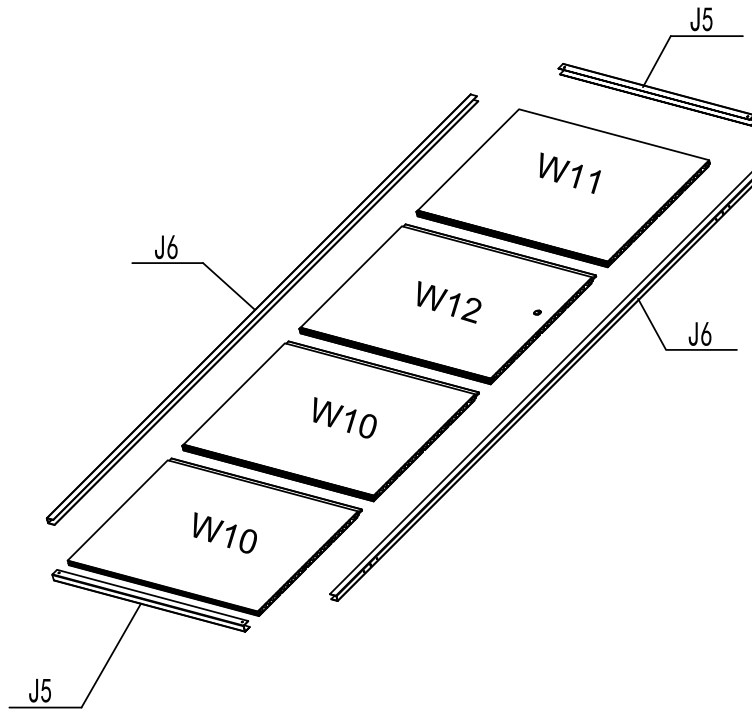


1PCS		2PCS		1PCS		2PCS			
MS2		T7		MSP		M4-2			

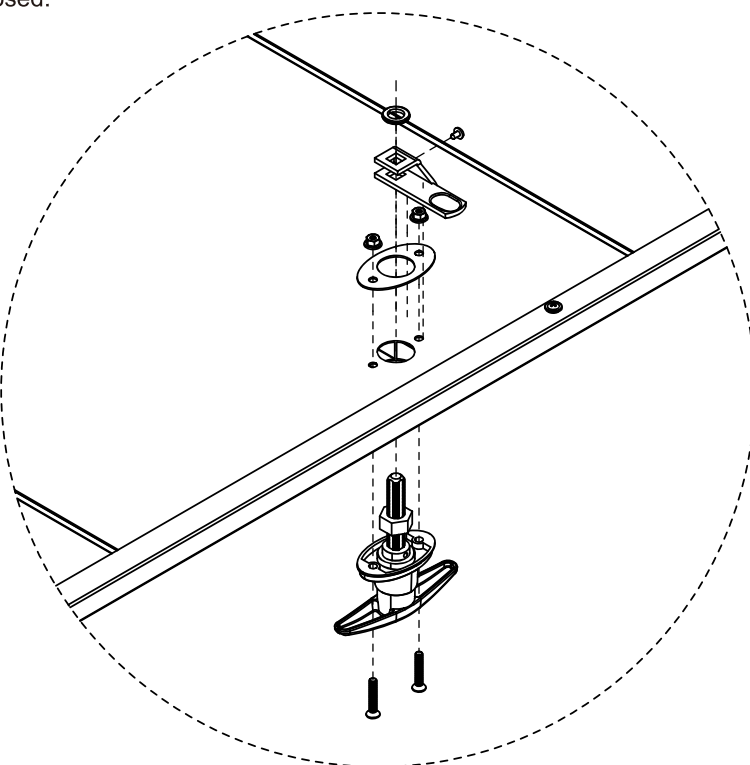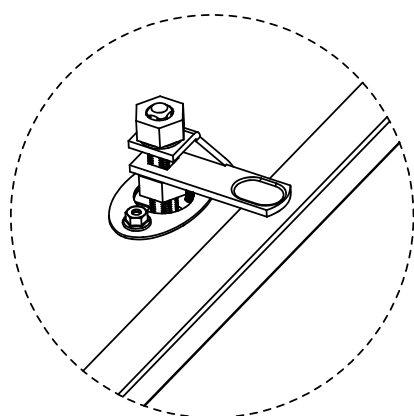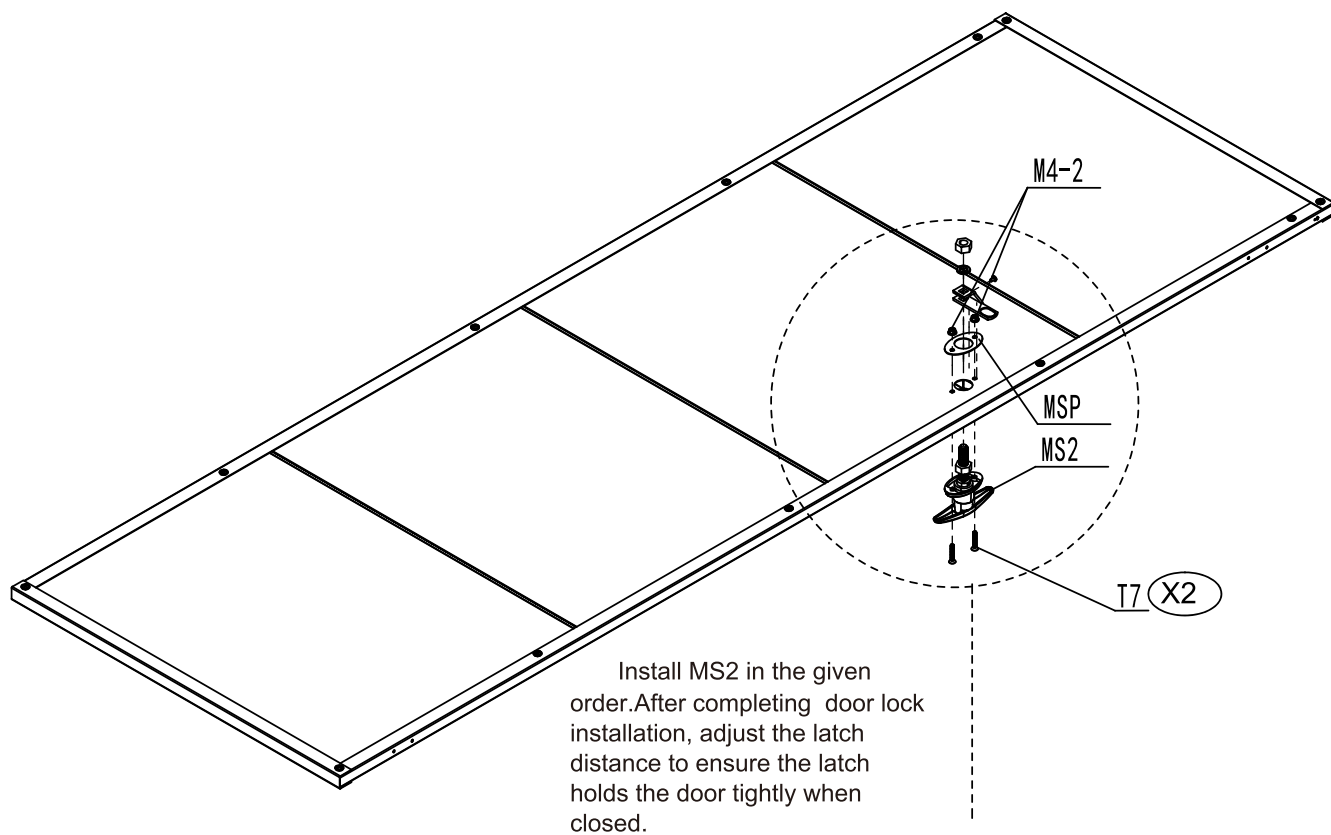

2PCS		4PCS					
JL1		T6					

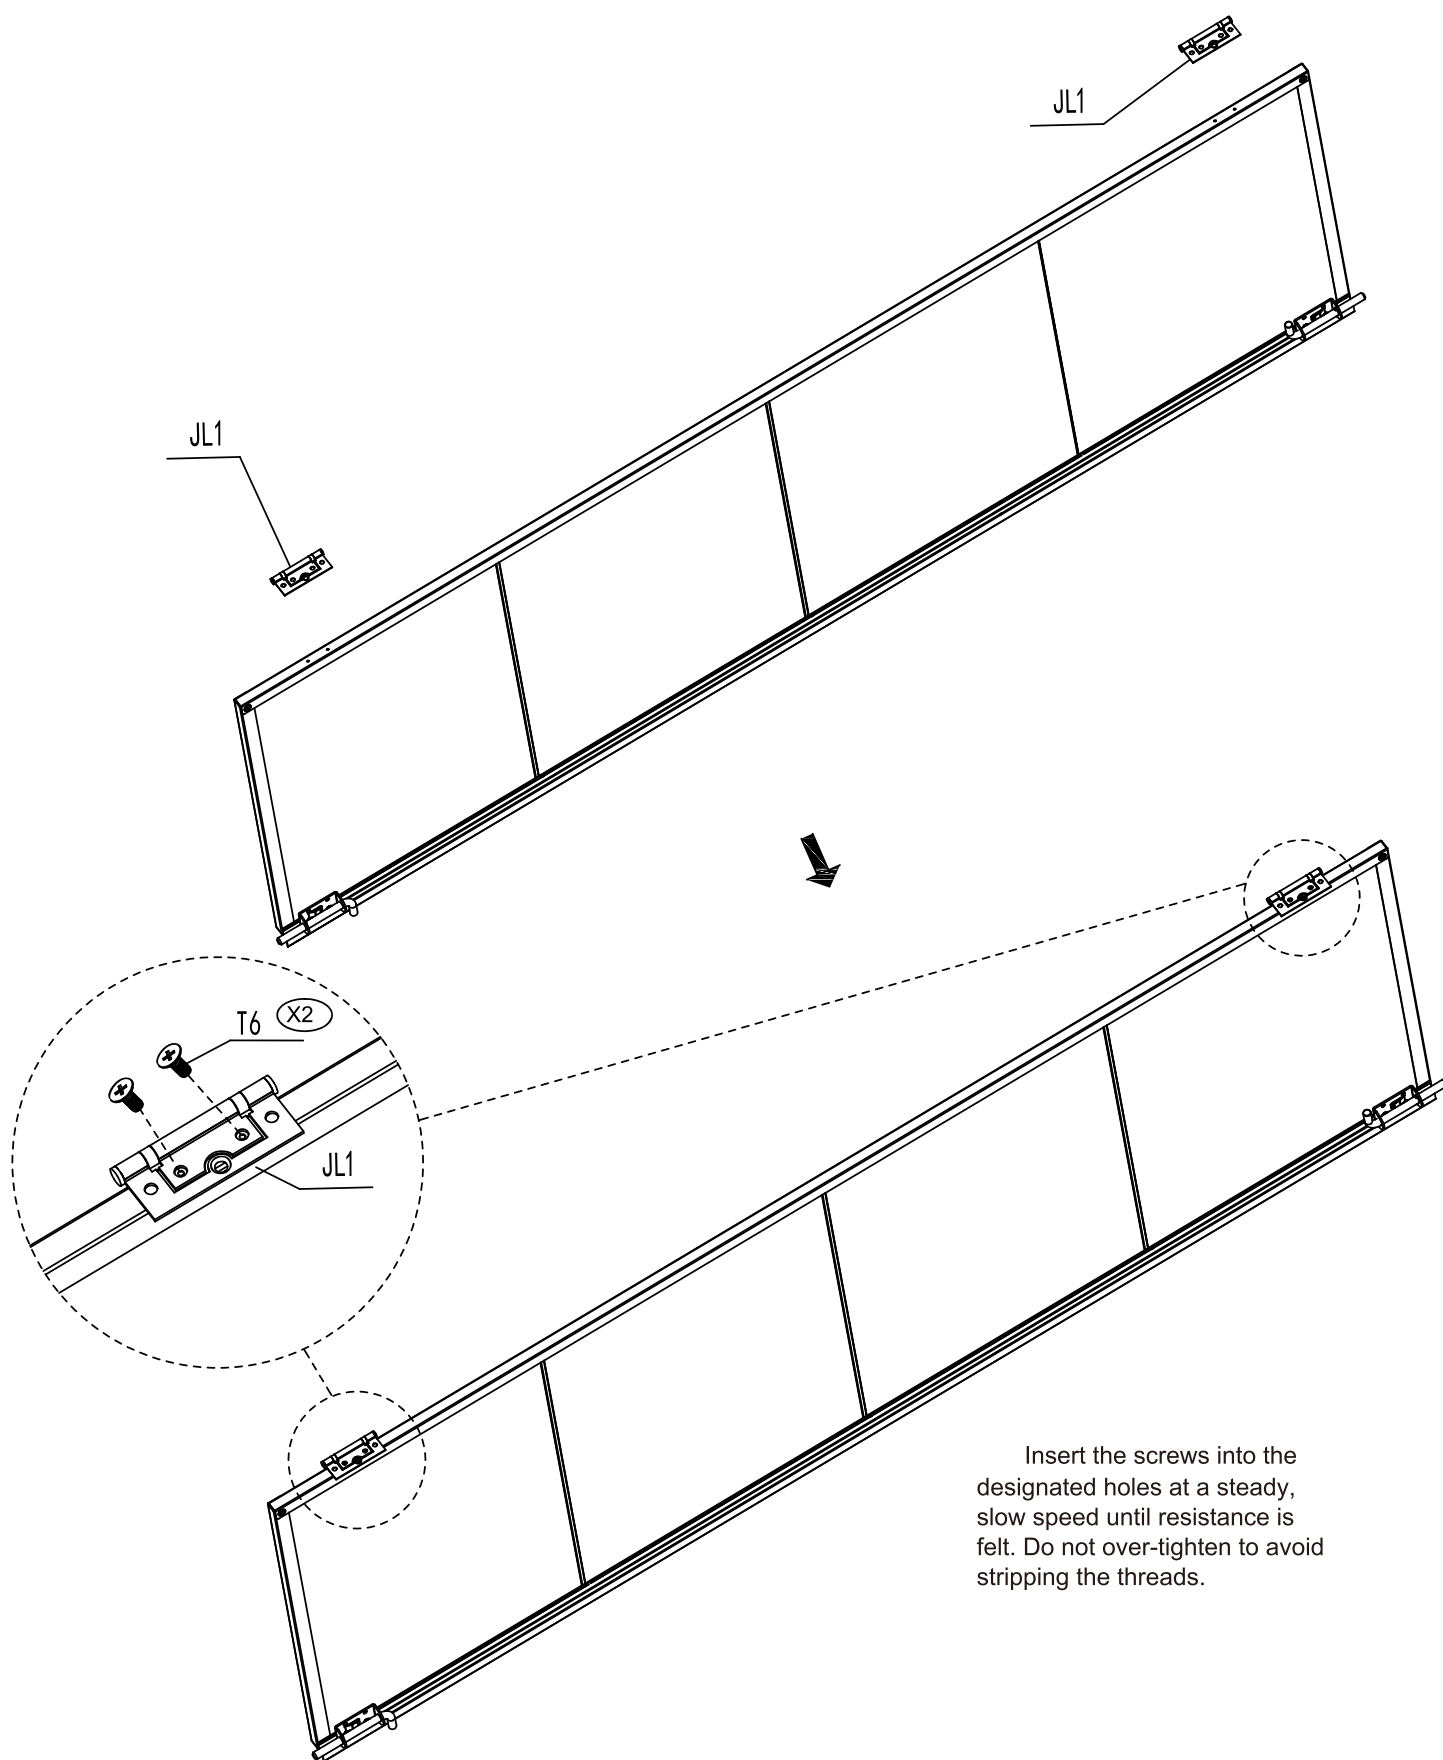


2PCS		4PCS					
JL1		T6					

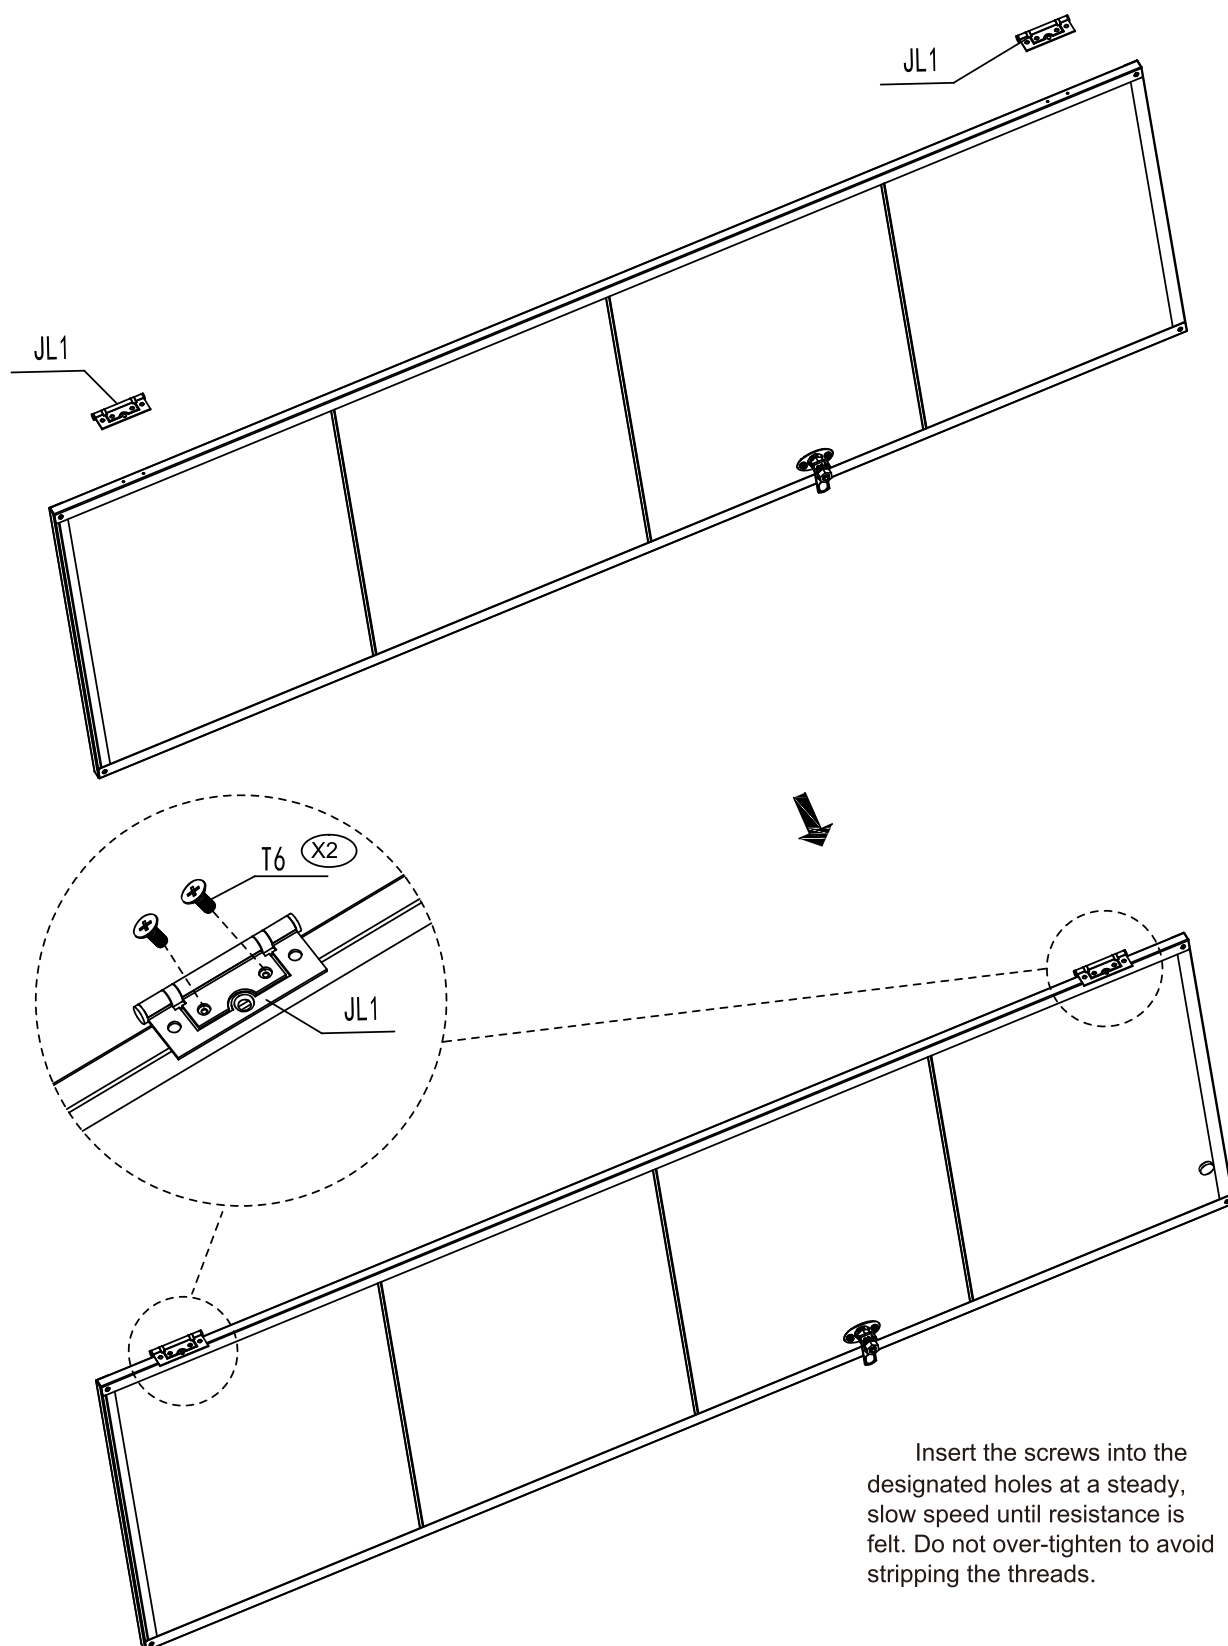


4PCS



T6

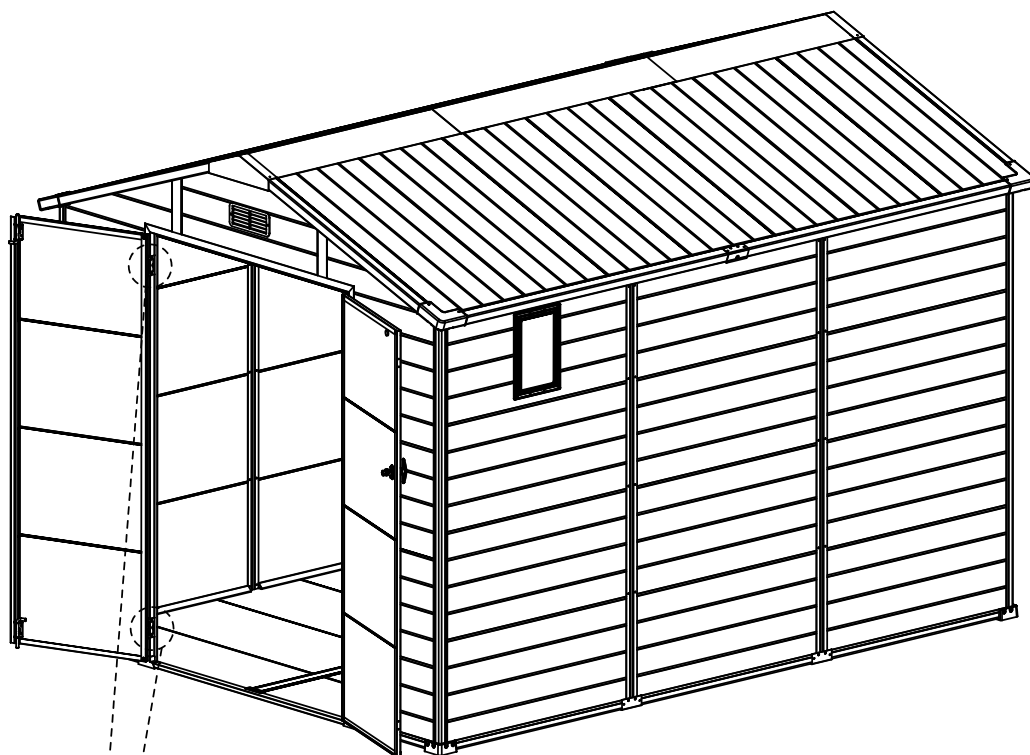


Insert the screws into the designated holes at a steady, slow speed until resistance is felt. Do not over-tighten to avoid stripping the threads.

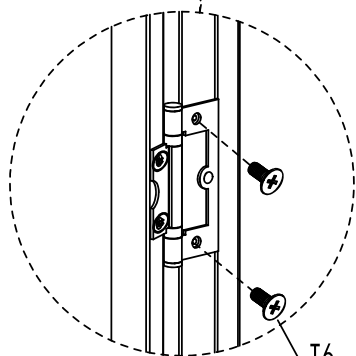

T6


X2

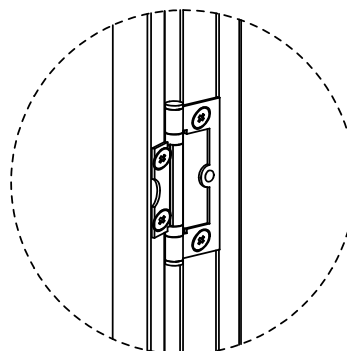


4PCS



T6

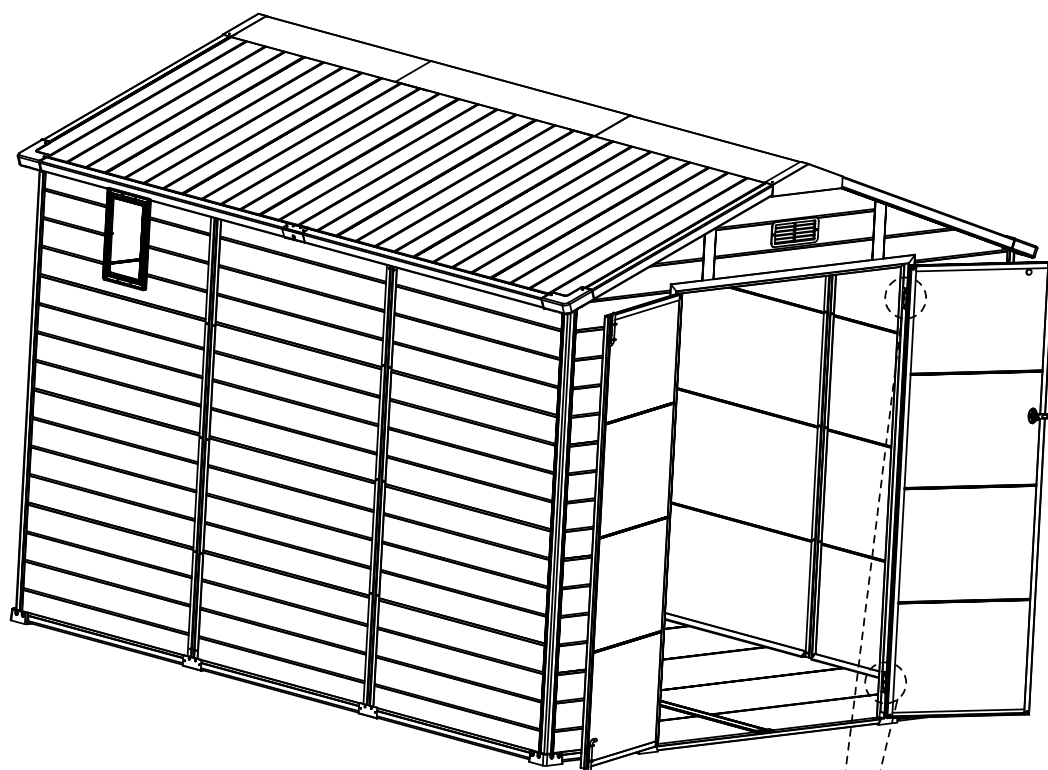

Insert the screws into the designated holes at a steady, slow speed until resistance is felt. Do not over-tighten to avoid stripping the threads.

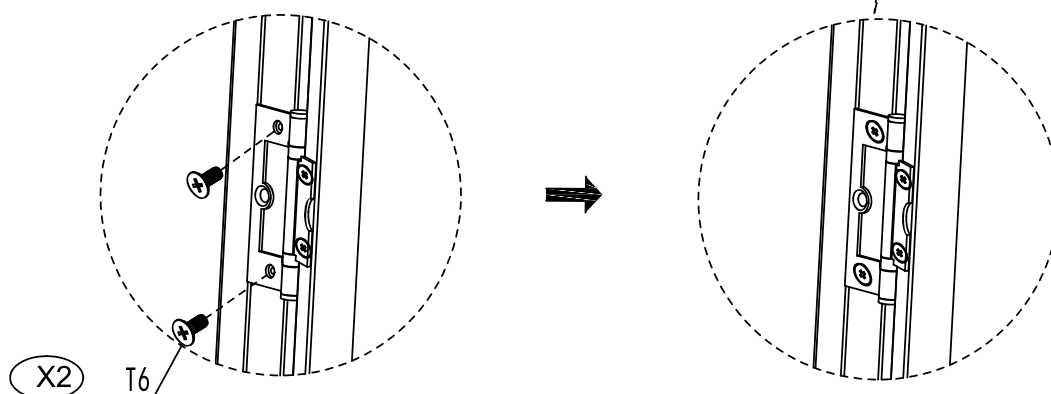

5PCS		4PCS		10PCS		18PCS			
ZC1		ZC2		T1		T3			

