


Shower Door Installation Instructions

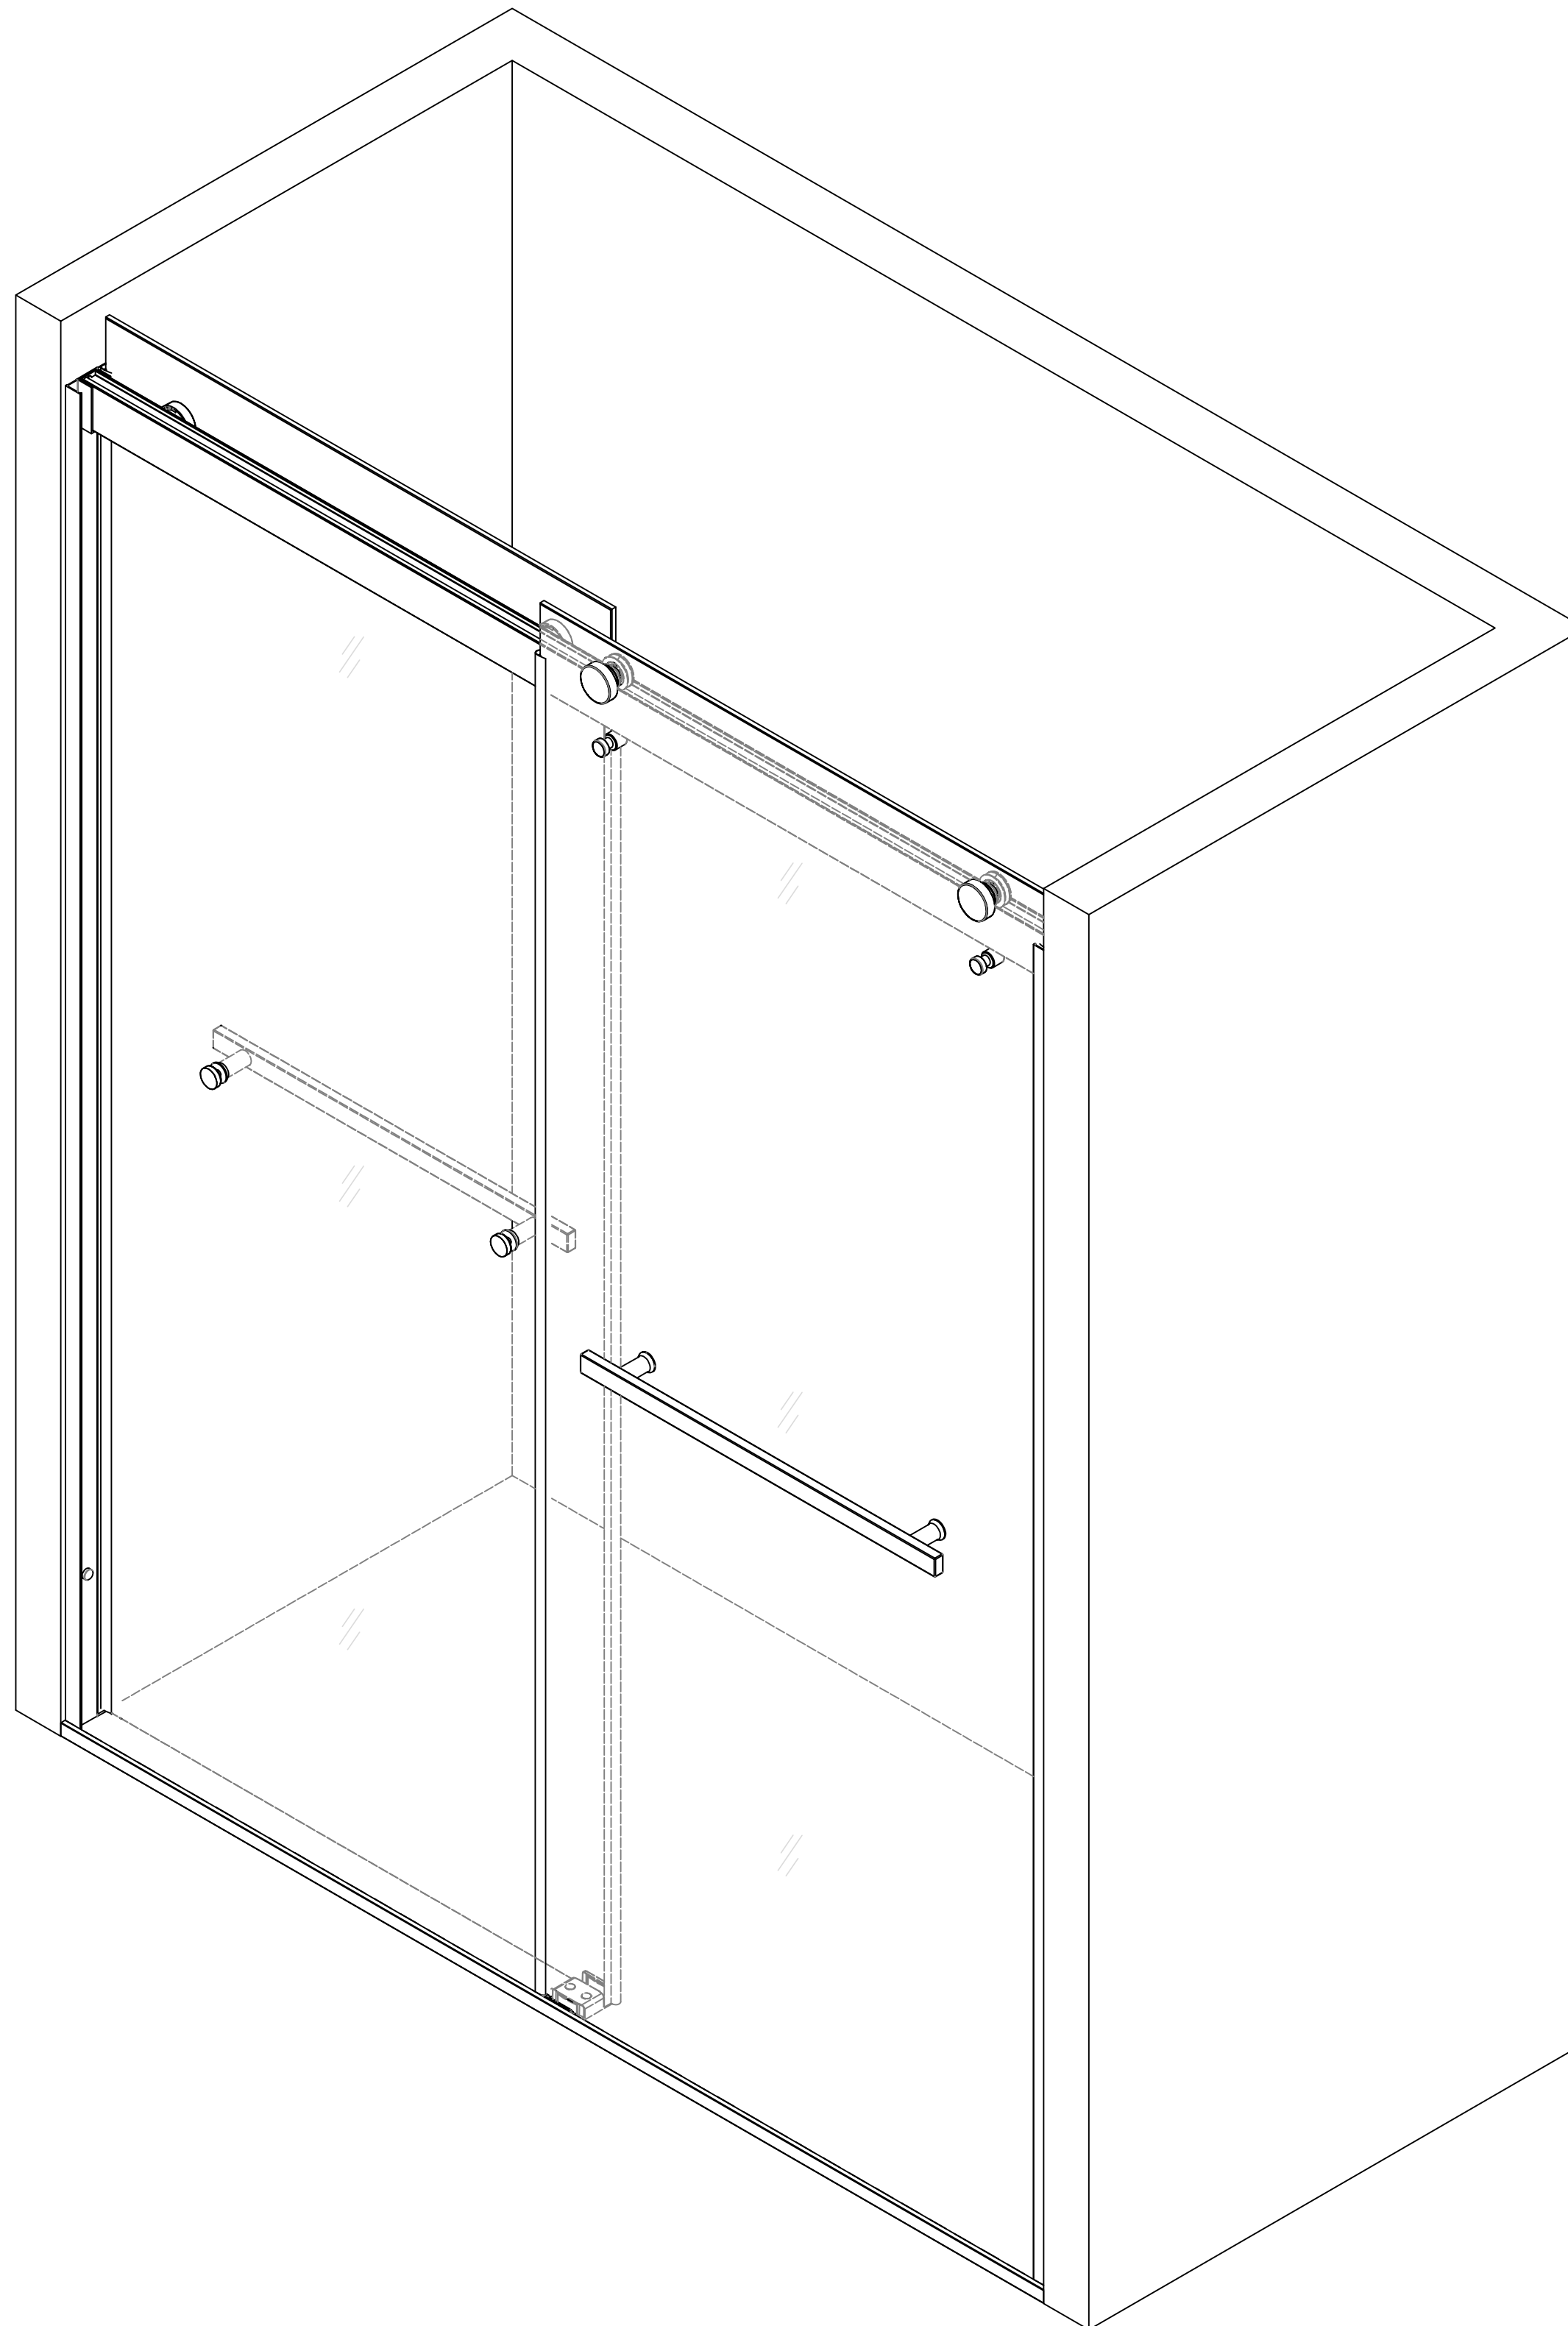


**Please Do Not Return the Product to the Store.
Contact us with any questions.**


Model Specific Preparation





REQUIRED:

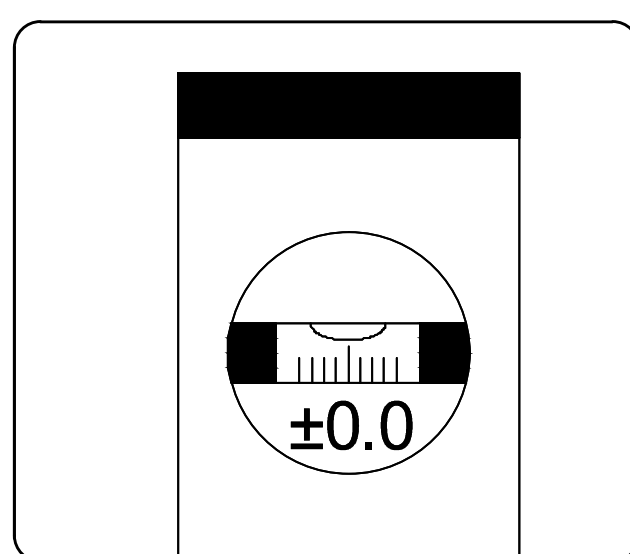


1/4" (6mm)
Out-of-Plumb
Adjustment within
the Wall Profile;
Verify threshold and
walls with a level.

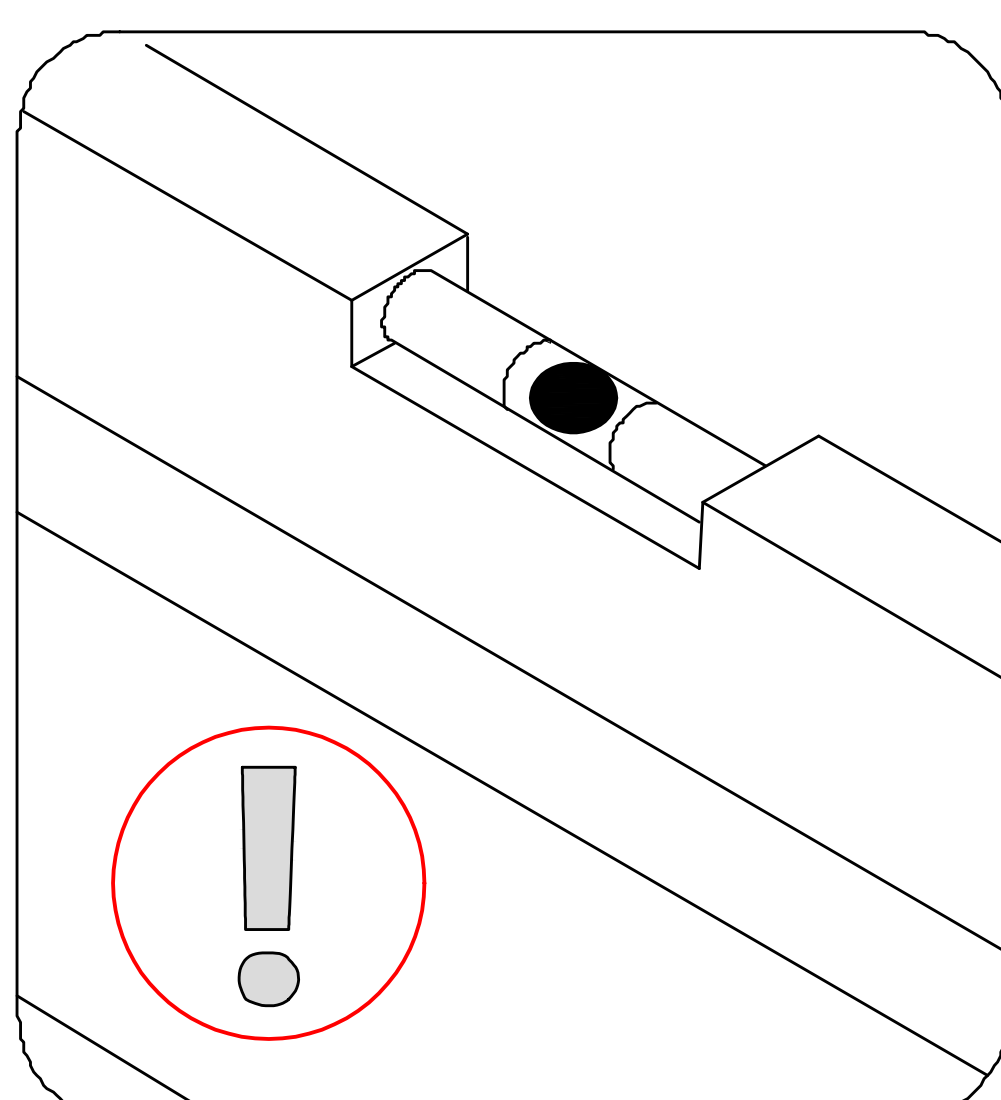

Threshold must be level

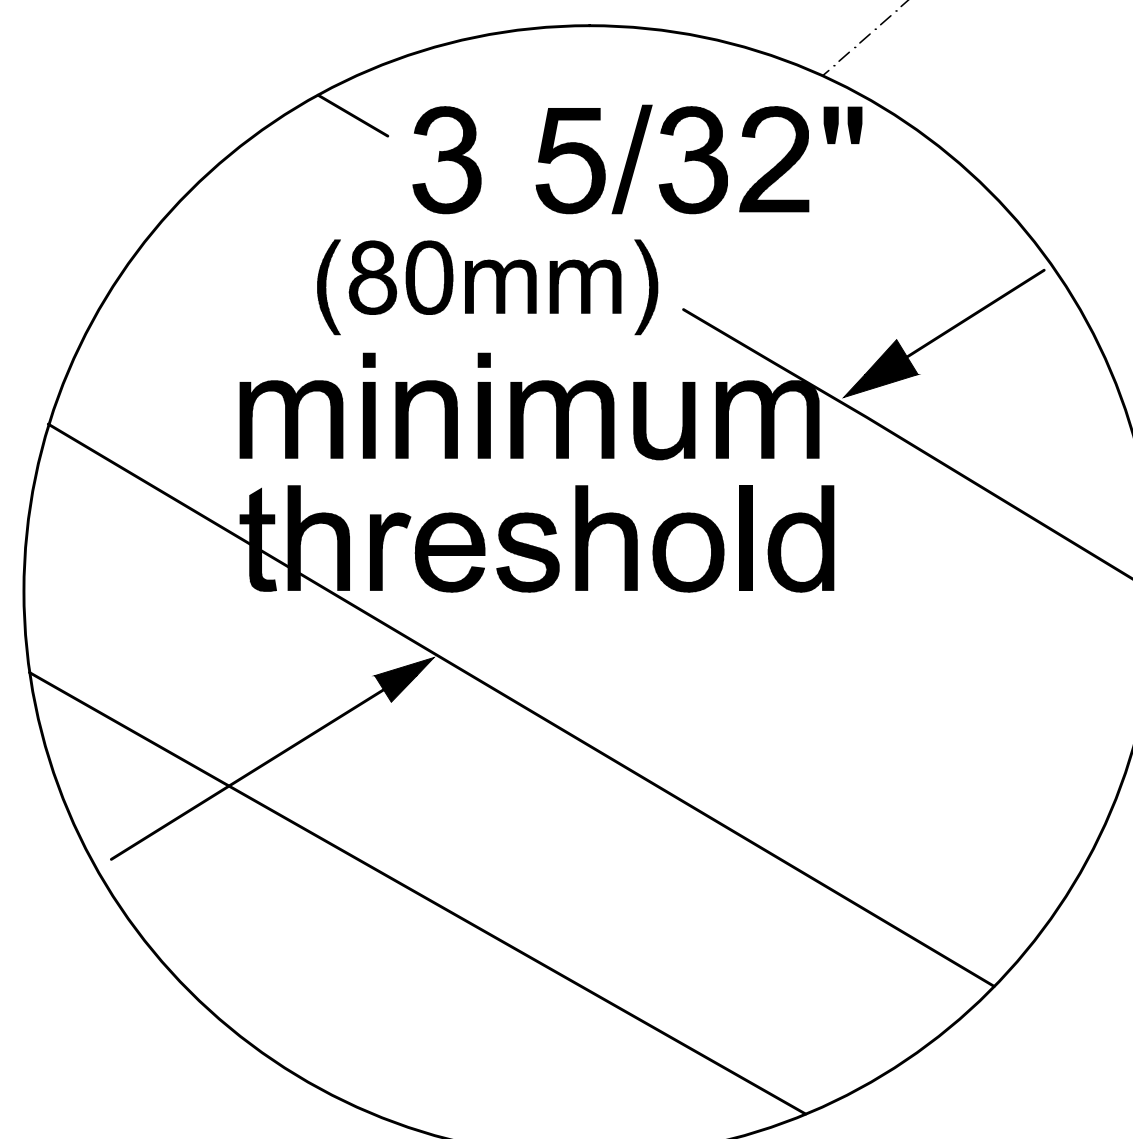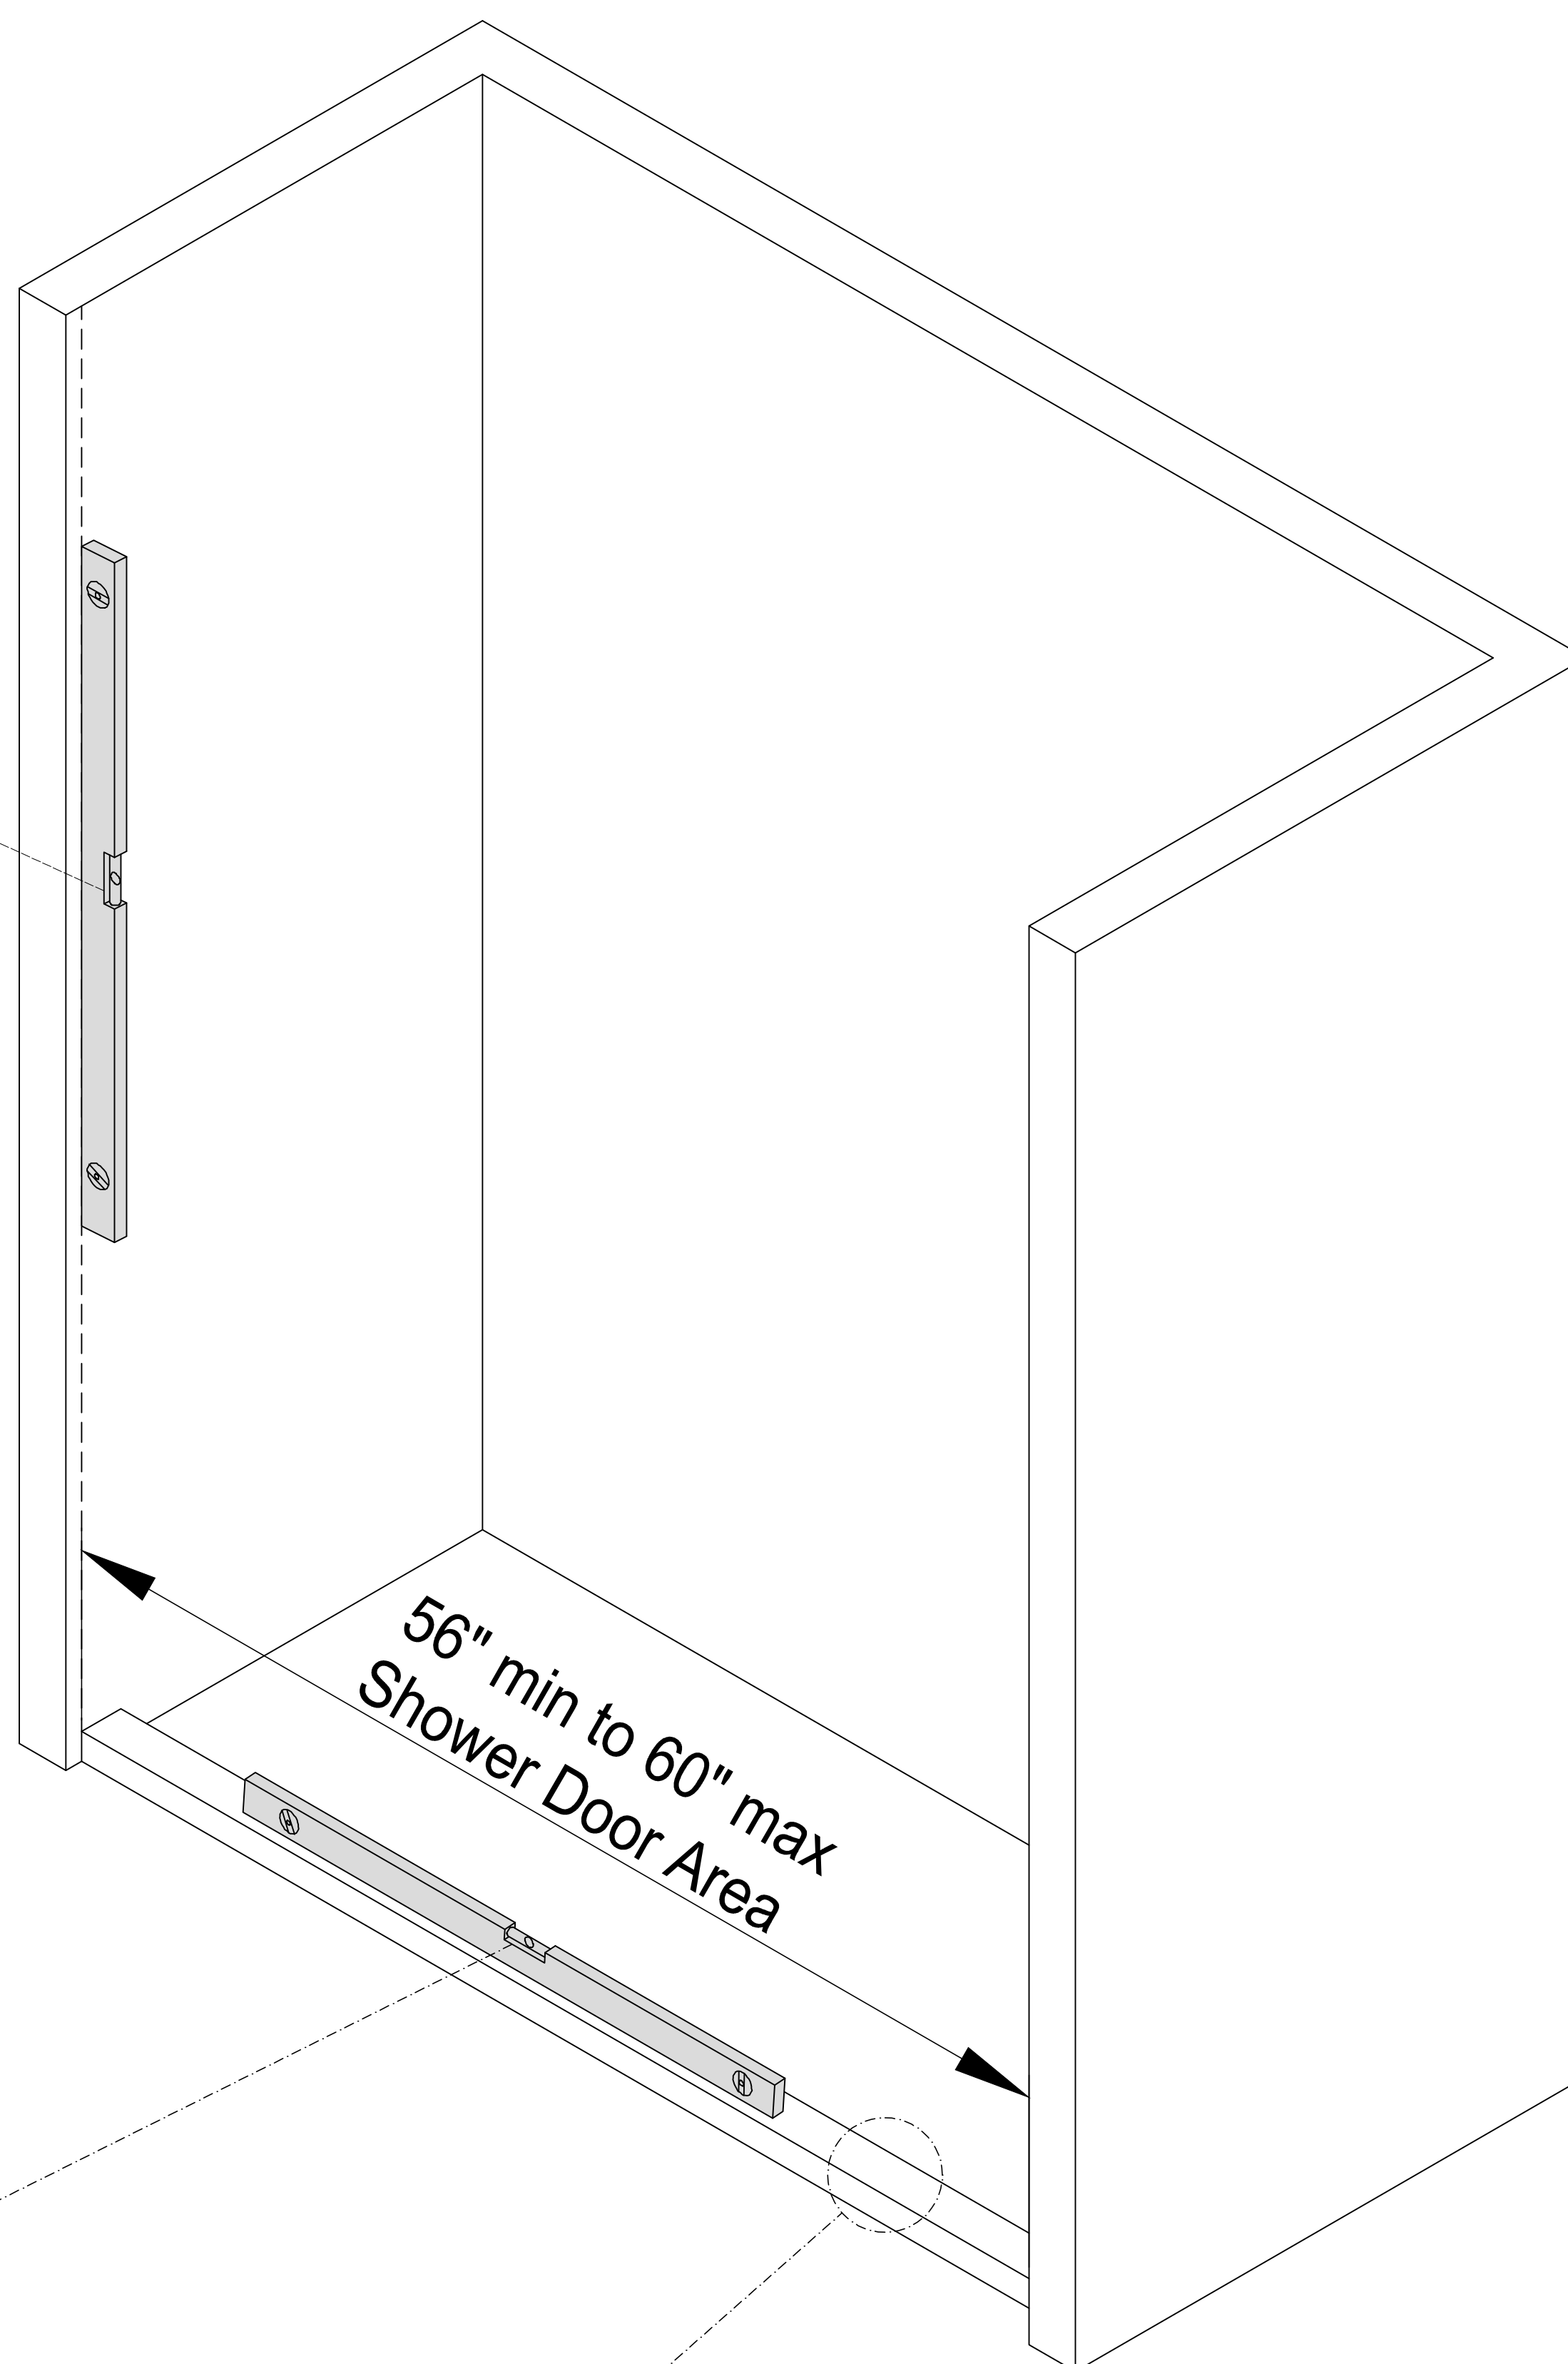


3 5/32"
(80mm)
minimum
threshold

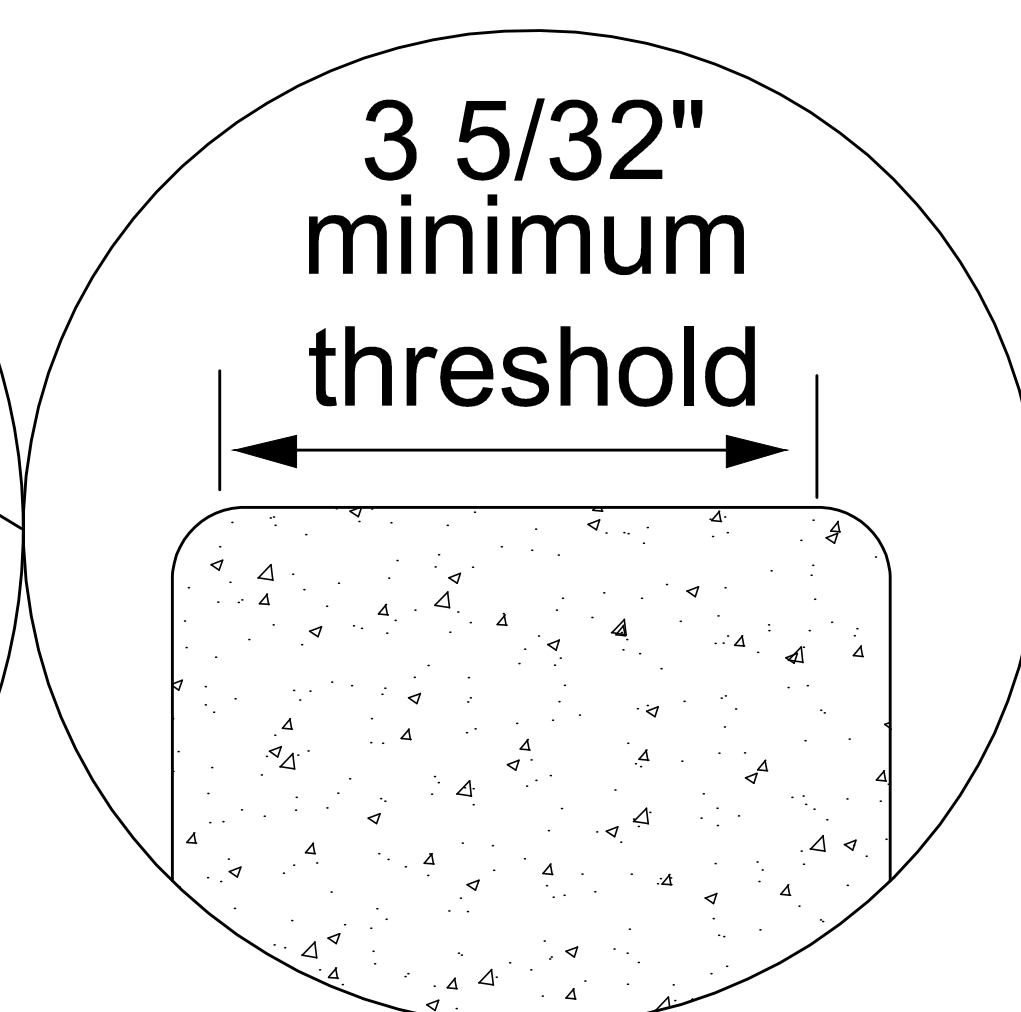

3 5/32"
minimum
threshold

PACKAGE CONTENT

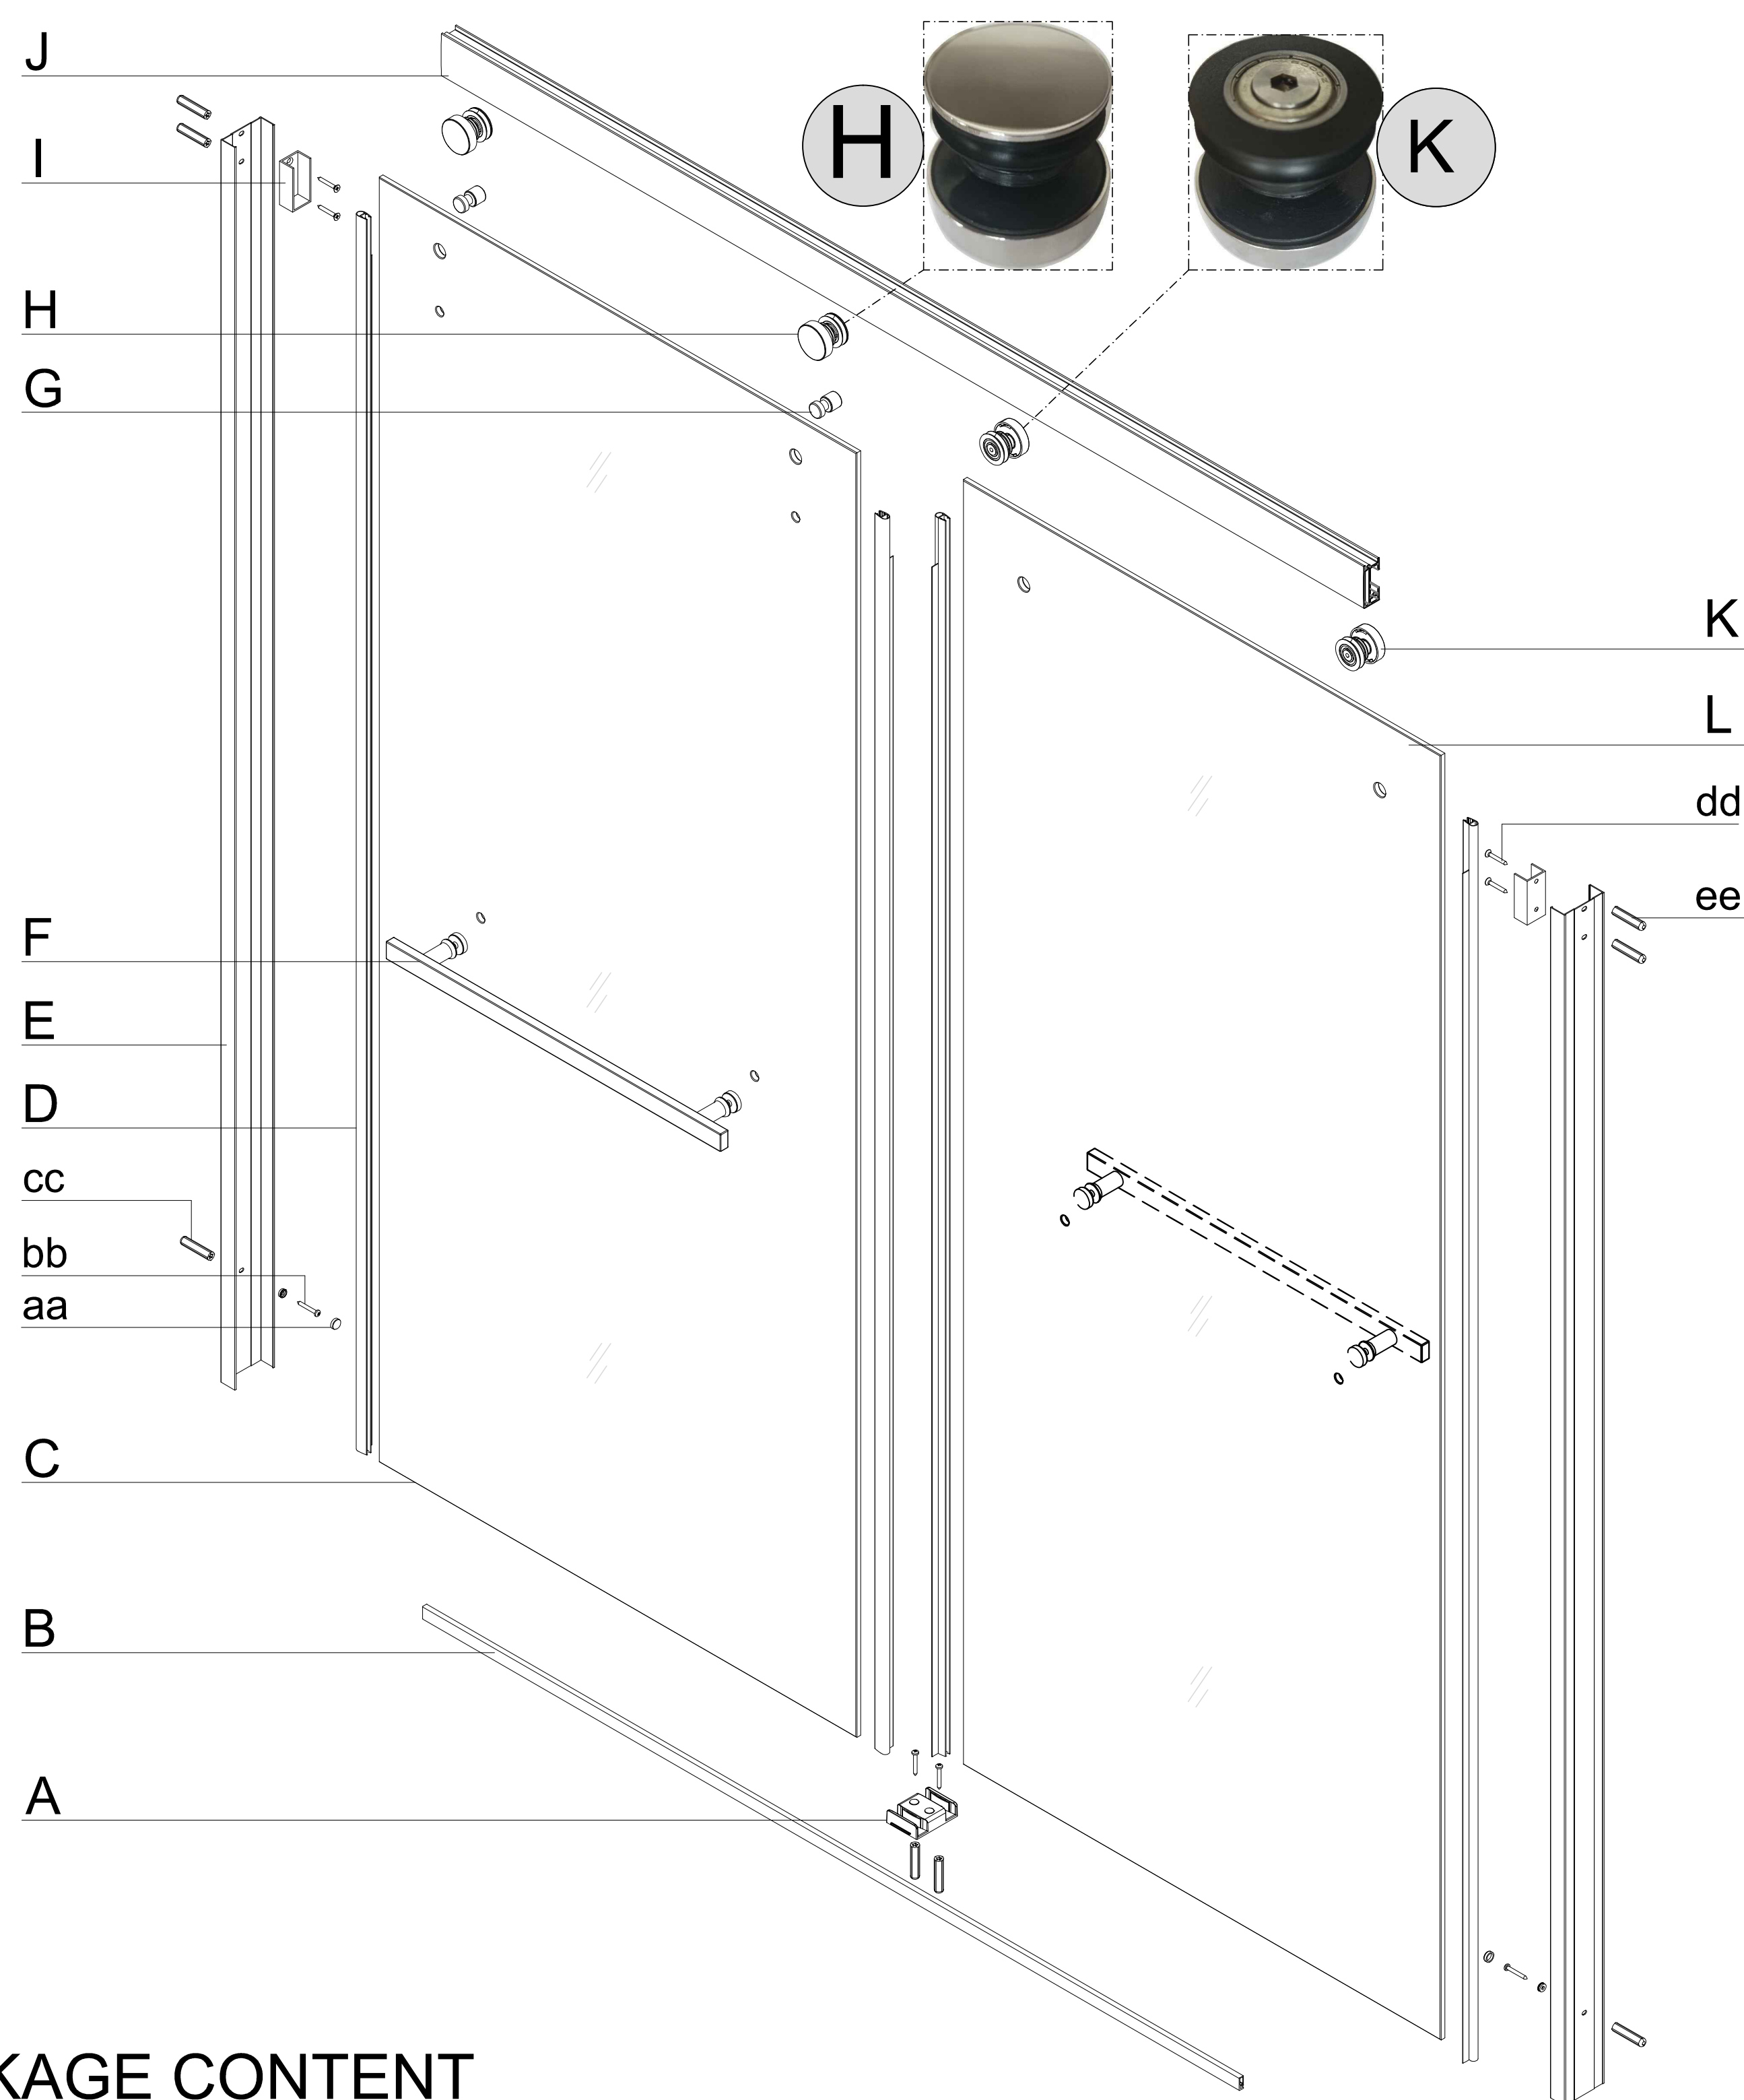

PACKAGE CONTENT


PART#	DESCRIPTION	QTY	PART#	DESCRIPTION	QTY
A	Bottom guide	1	G	Anti-Jump Assembly	2
B	Bottom Rail	1	H	Outside Roller	2
C	Outside Door panel	1	I	Wall Bracket Assembly	2
D	F shape seal	4	J	Upper Guide Rail	1
E	Wall Jamb	2	K	Inside Roller	2
F	Handle	2	L	Inside Door panel	1

NOTE


Inspect all parts for missing prior to installation!
Contact us for any part missing.

PACKAGE CONTENT


A
x1

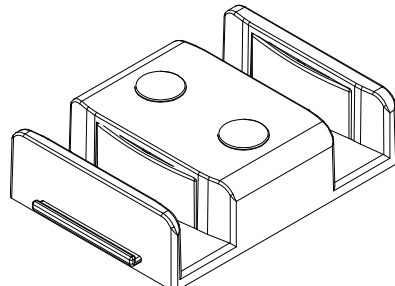


B
x1

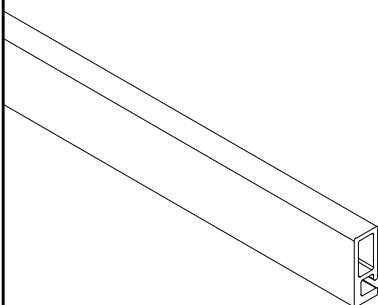


C
x1

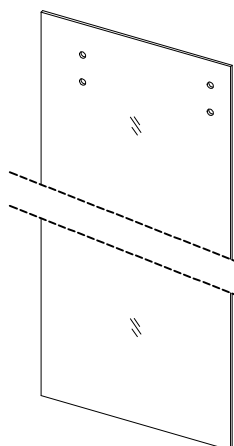


D
x4

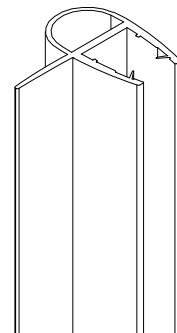


E
x2

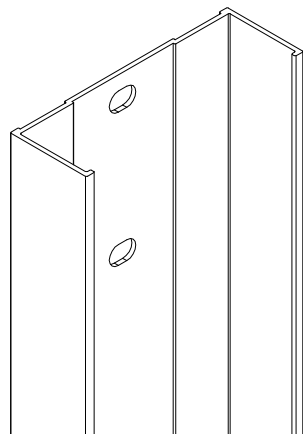


F
x2

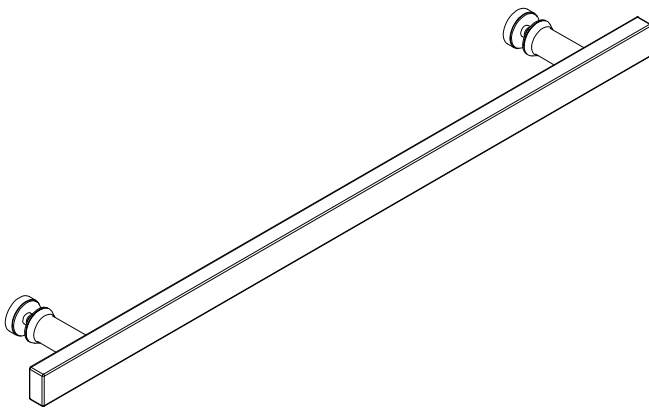


G
x2

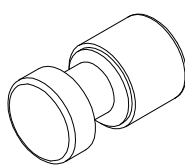


H
x2

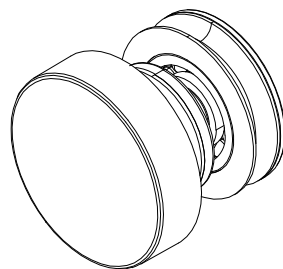


I
x2

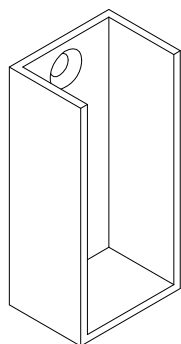


J
x1

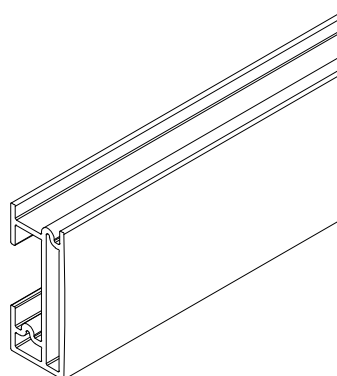

K
x2

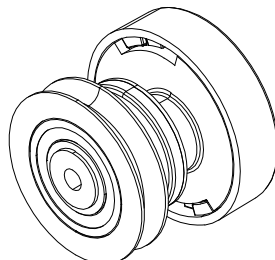


L
x1

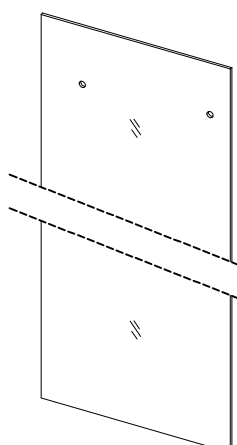


HARDWARE CONTENT

aa

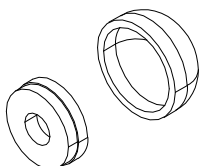


Screw cover
3 pcs

bb

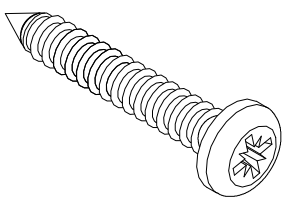


Screw
ST4*30
5 pcs

cc

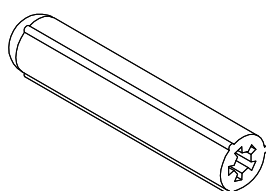


Wall anchor
Ø6x38mm
5 pcs

dd

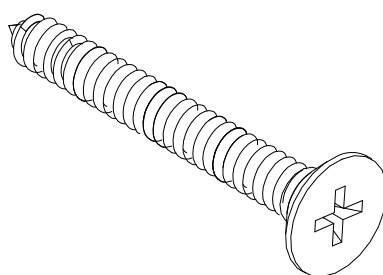

Screw
ST5*45
4 pcs

ee

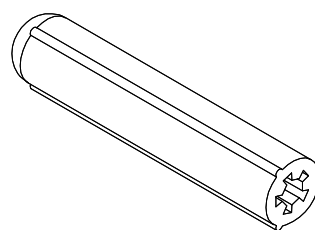

Wall anchor
Ø8x38mm
4 pcs




Additional spare parts are included.

NOTE

Inspect all parts for missing prior to installation!
Contact us for any part missing.


TOOLS REQUIRED

Drill Bits

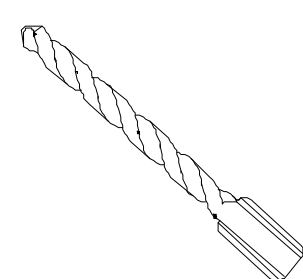


Ø1/4" & Ø5/16" (6&8mm) dia.
HSS


Screw Driver

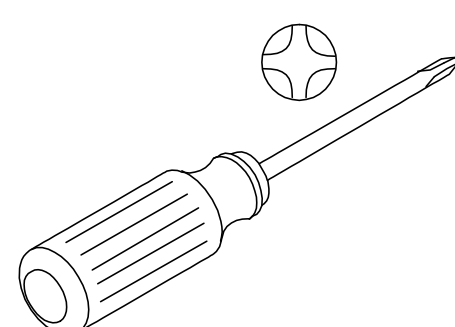


Drill

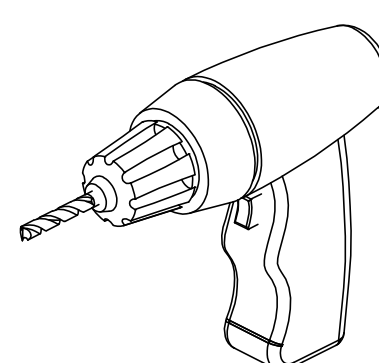



Level

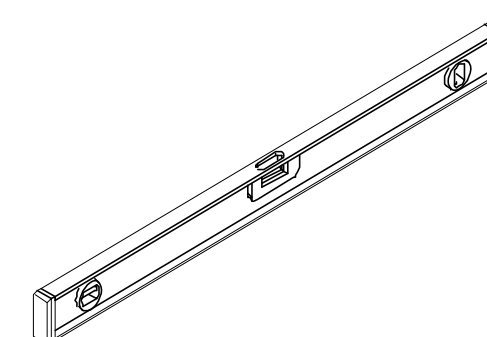


Silicone

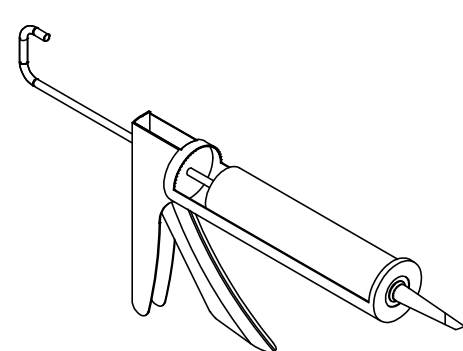


Measuring Tape

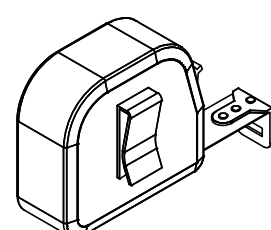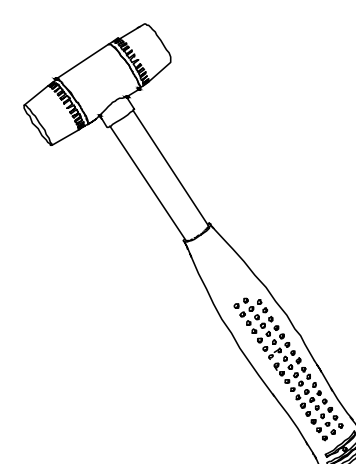Soft Head
Hammer


Pencil

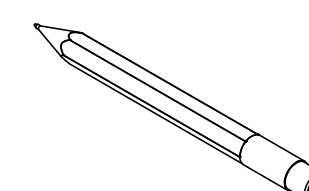


Knife

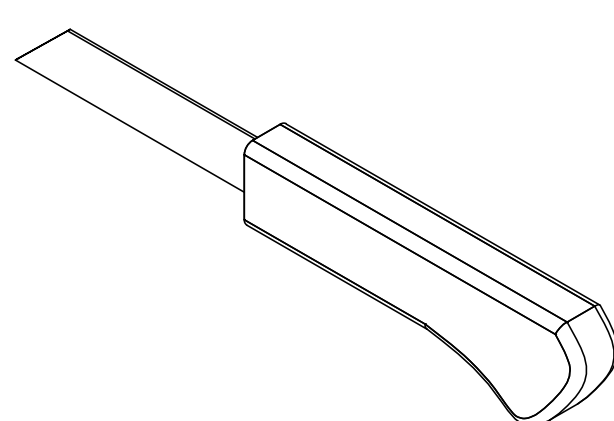


Sealant

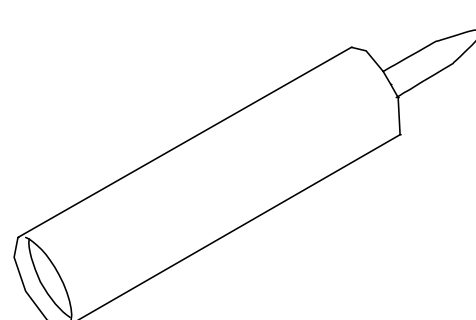MASONRY DRILL
BIT FOR TILE
Ø6mm



Safety Glasses

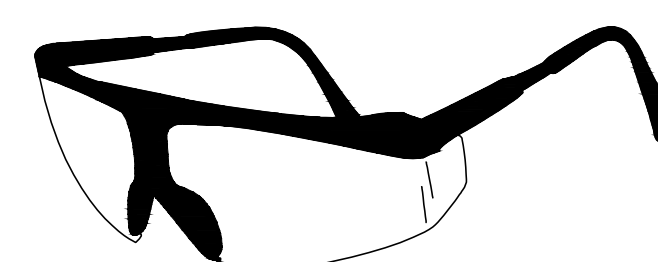


Glove

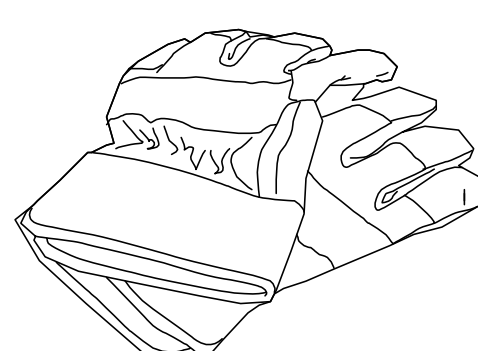


Carpenter's Squarer

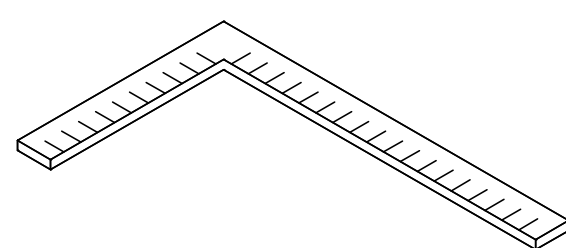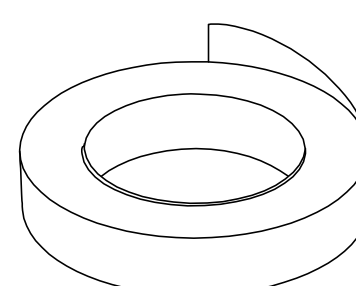Masking or painter's
tape

Hack Saw

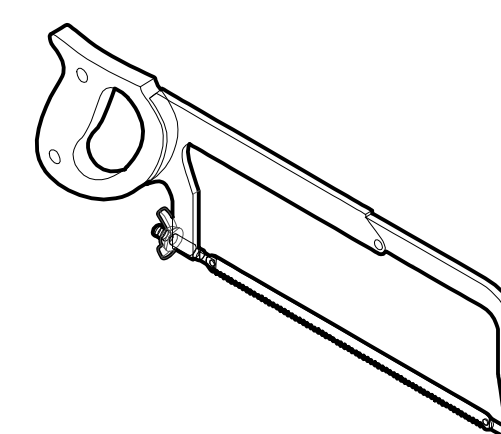

Metal File

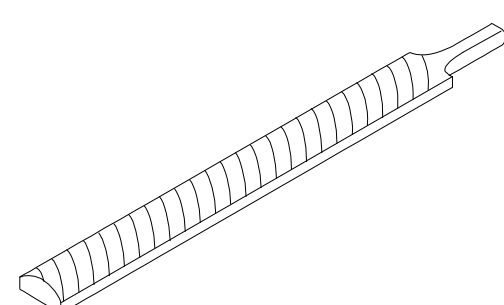

SAFETY INFORMATION


CAUTION

Please carefully read the following important safety information before handling or installing this shower. There is a risk of serious injury while handling this product.

To minimize these risks, please note:

- Always wear safety glasses and gloves while handling.
- Always follow the installation instructions.
- Inspect glass for damage before installation.
- Extreme caution should be taken while handling the glass during installation as the tempered glass may shatter if in contact with a hard surface.
- Do not cut or modify the tempered glass as it will shatter if cut.
- Carefully remove product from packaging and keep packaging until installation is complete.
- Inspect all parts for damage or missing; if there is damage or part missing to the unit prior to installation, please contact customer service at the number provided in this guide.
- Cover the drain with tape to prevent the loss of small parts.
- The shower base and finished walls should be installed before beginning the shower door installation.
- During the installation, protect the shower floor with a drop cloth to avoid damage.
- This product should be installed by two people who are familiar with construction requirements. Professional installation is recommended!
- Keep this installation manual for future reference.

NOTE: Two people should perform this installaton.

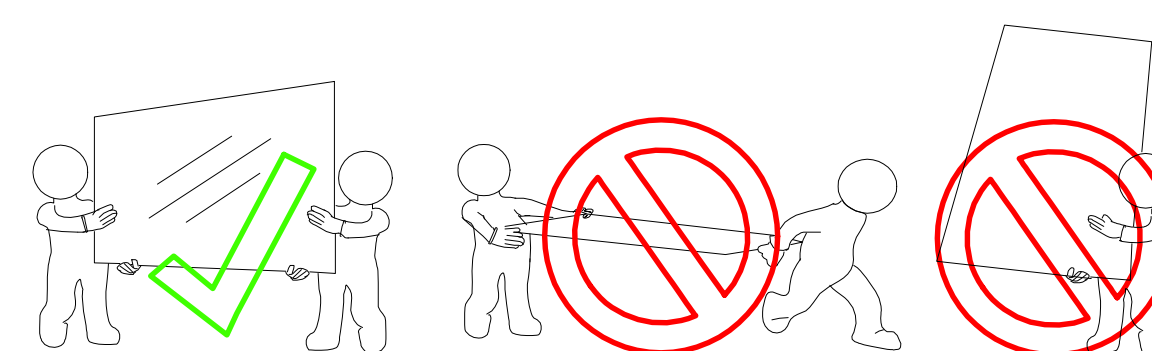

1

Measure the finished opening width.

NOTE

1. Measure the finished opening width at the bottom and at the model height.
- Use these dimensions as "W1" (top) and "W2" (bottom) in step #2.
2. Also check the threshold for level and the walls for plumb. (Fig 1)

This model will only accommodate up to 1/4" (6mm) for out-of-plumb condition.

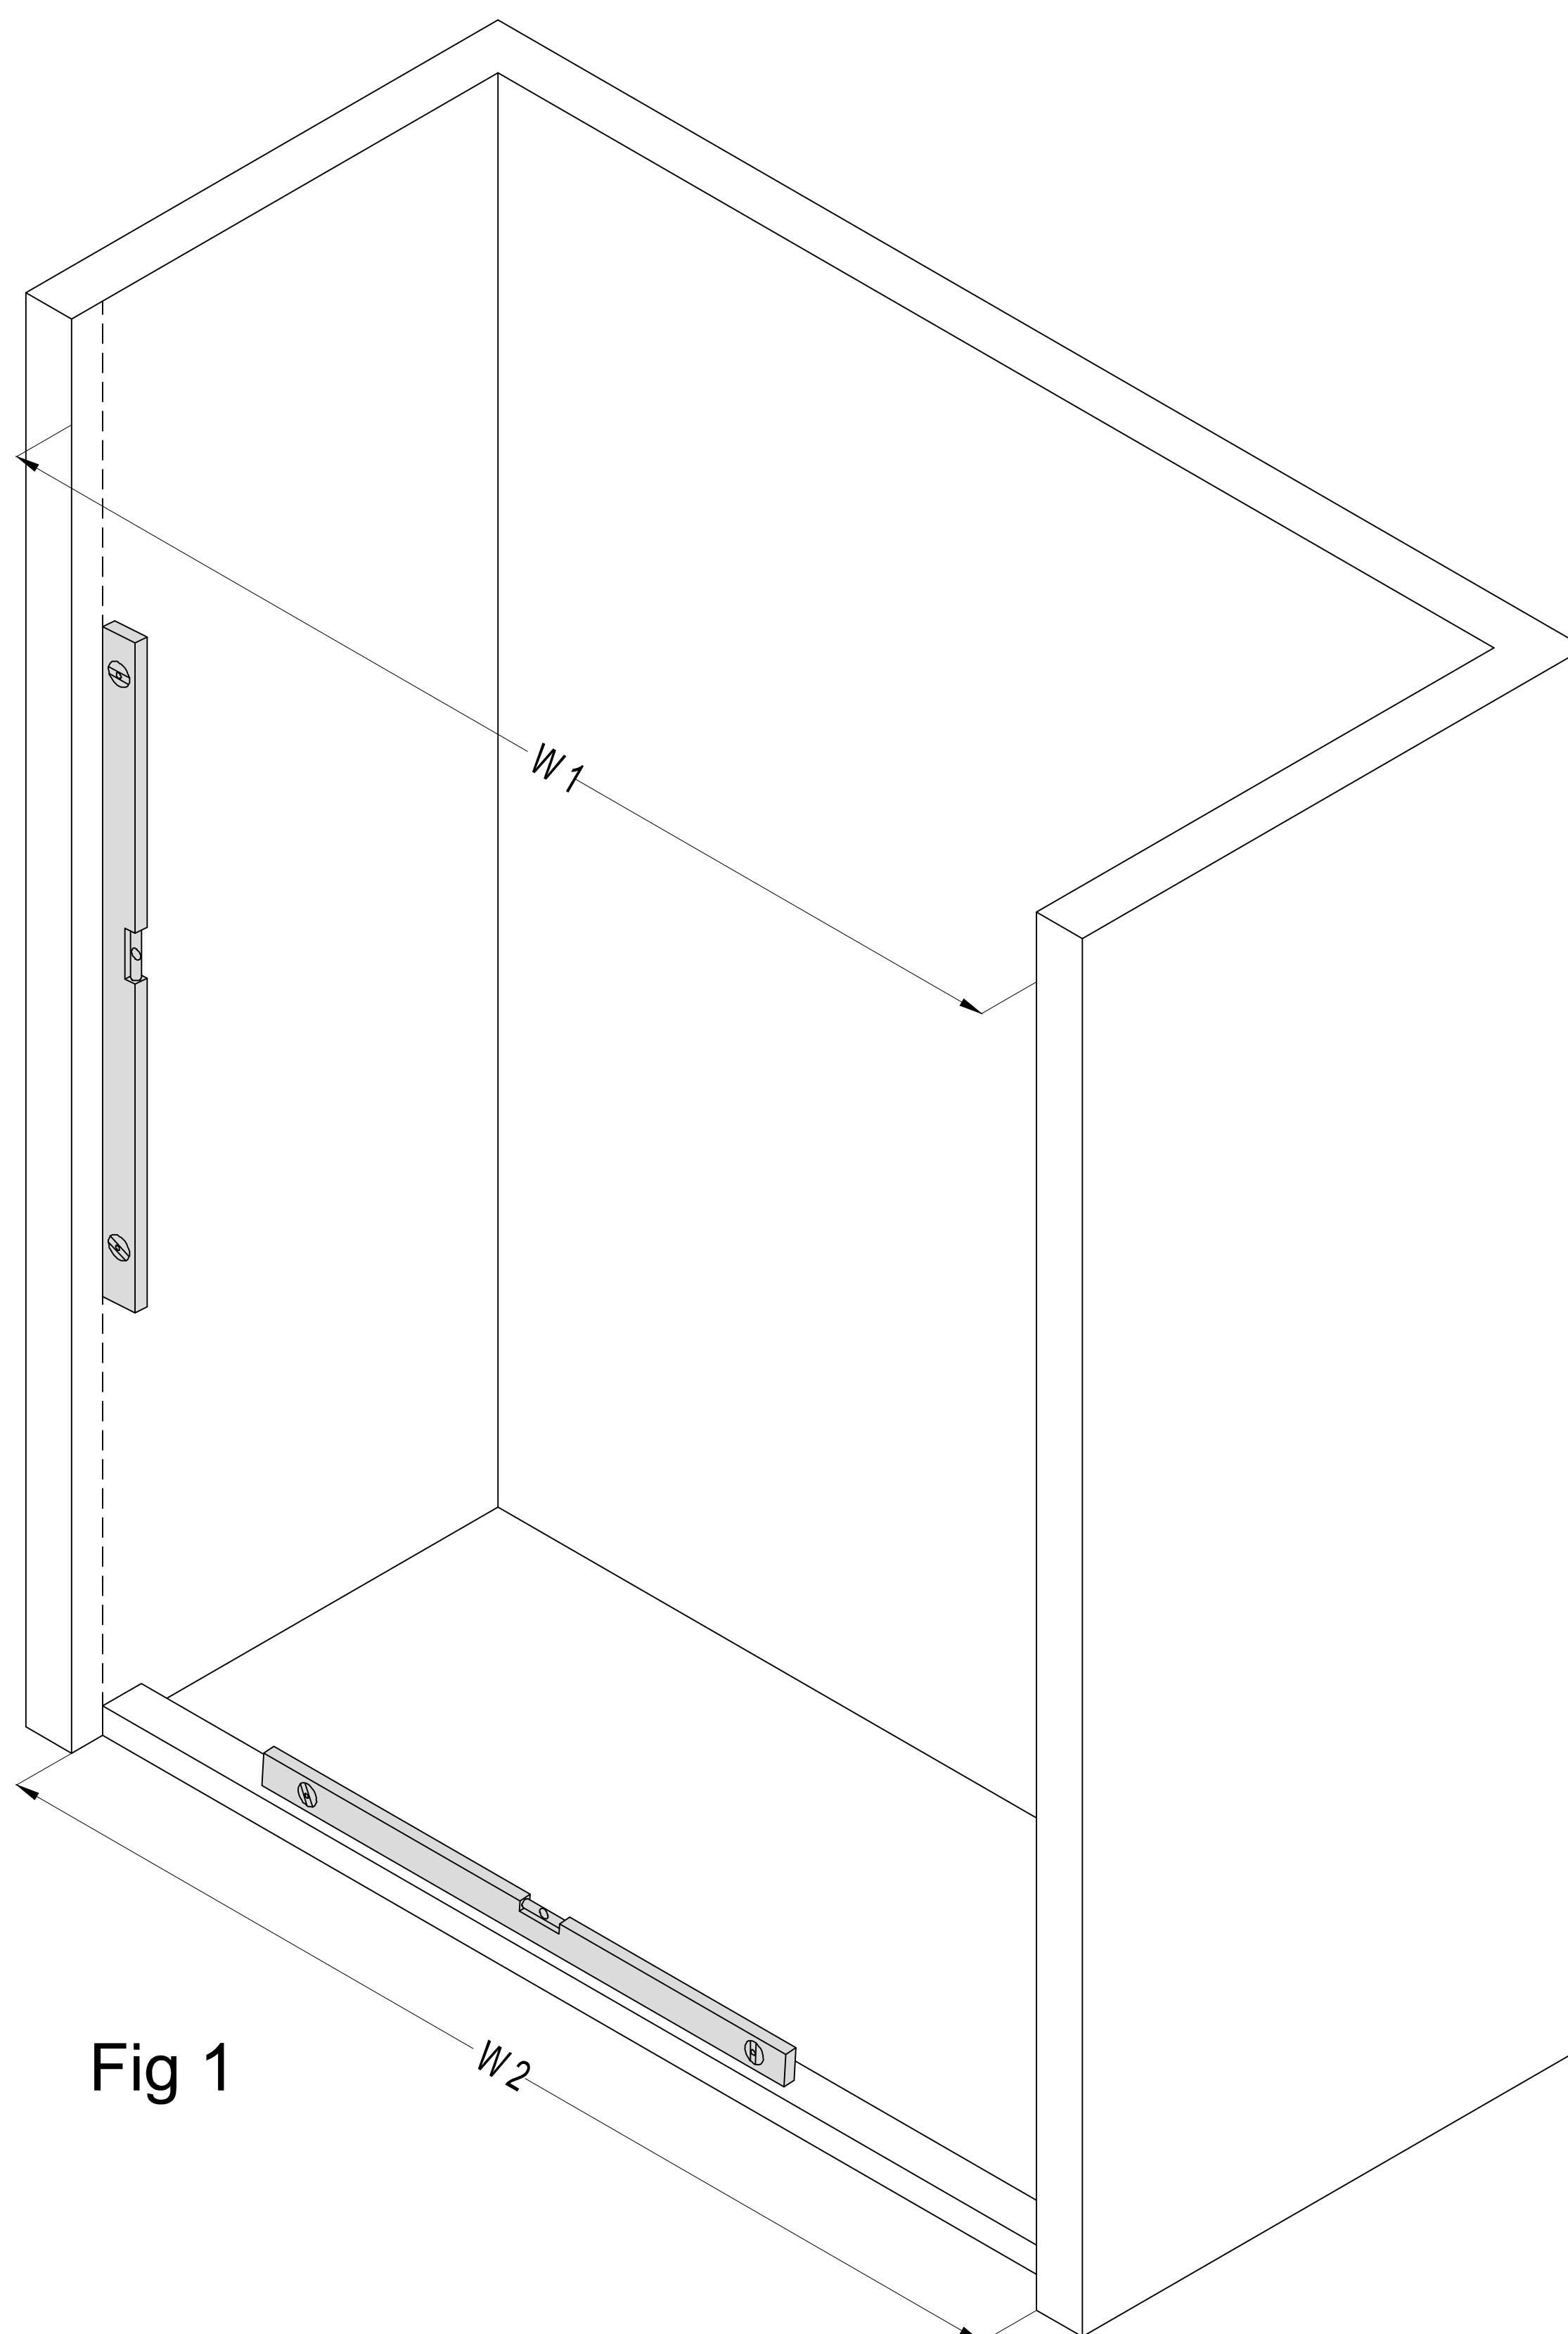


Fig 1




Finished opening top (W1)

Finished opening bottom (W2)

2

Cut the **Upper Guide Rail (J)** and the **Bottom Rail (B)** to fit your finished opening using either a miter saw or a hacksaw

Cut the Upper Guide Rail (J) to: "W1" (top) dimension - $13/32$ "

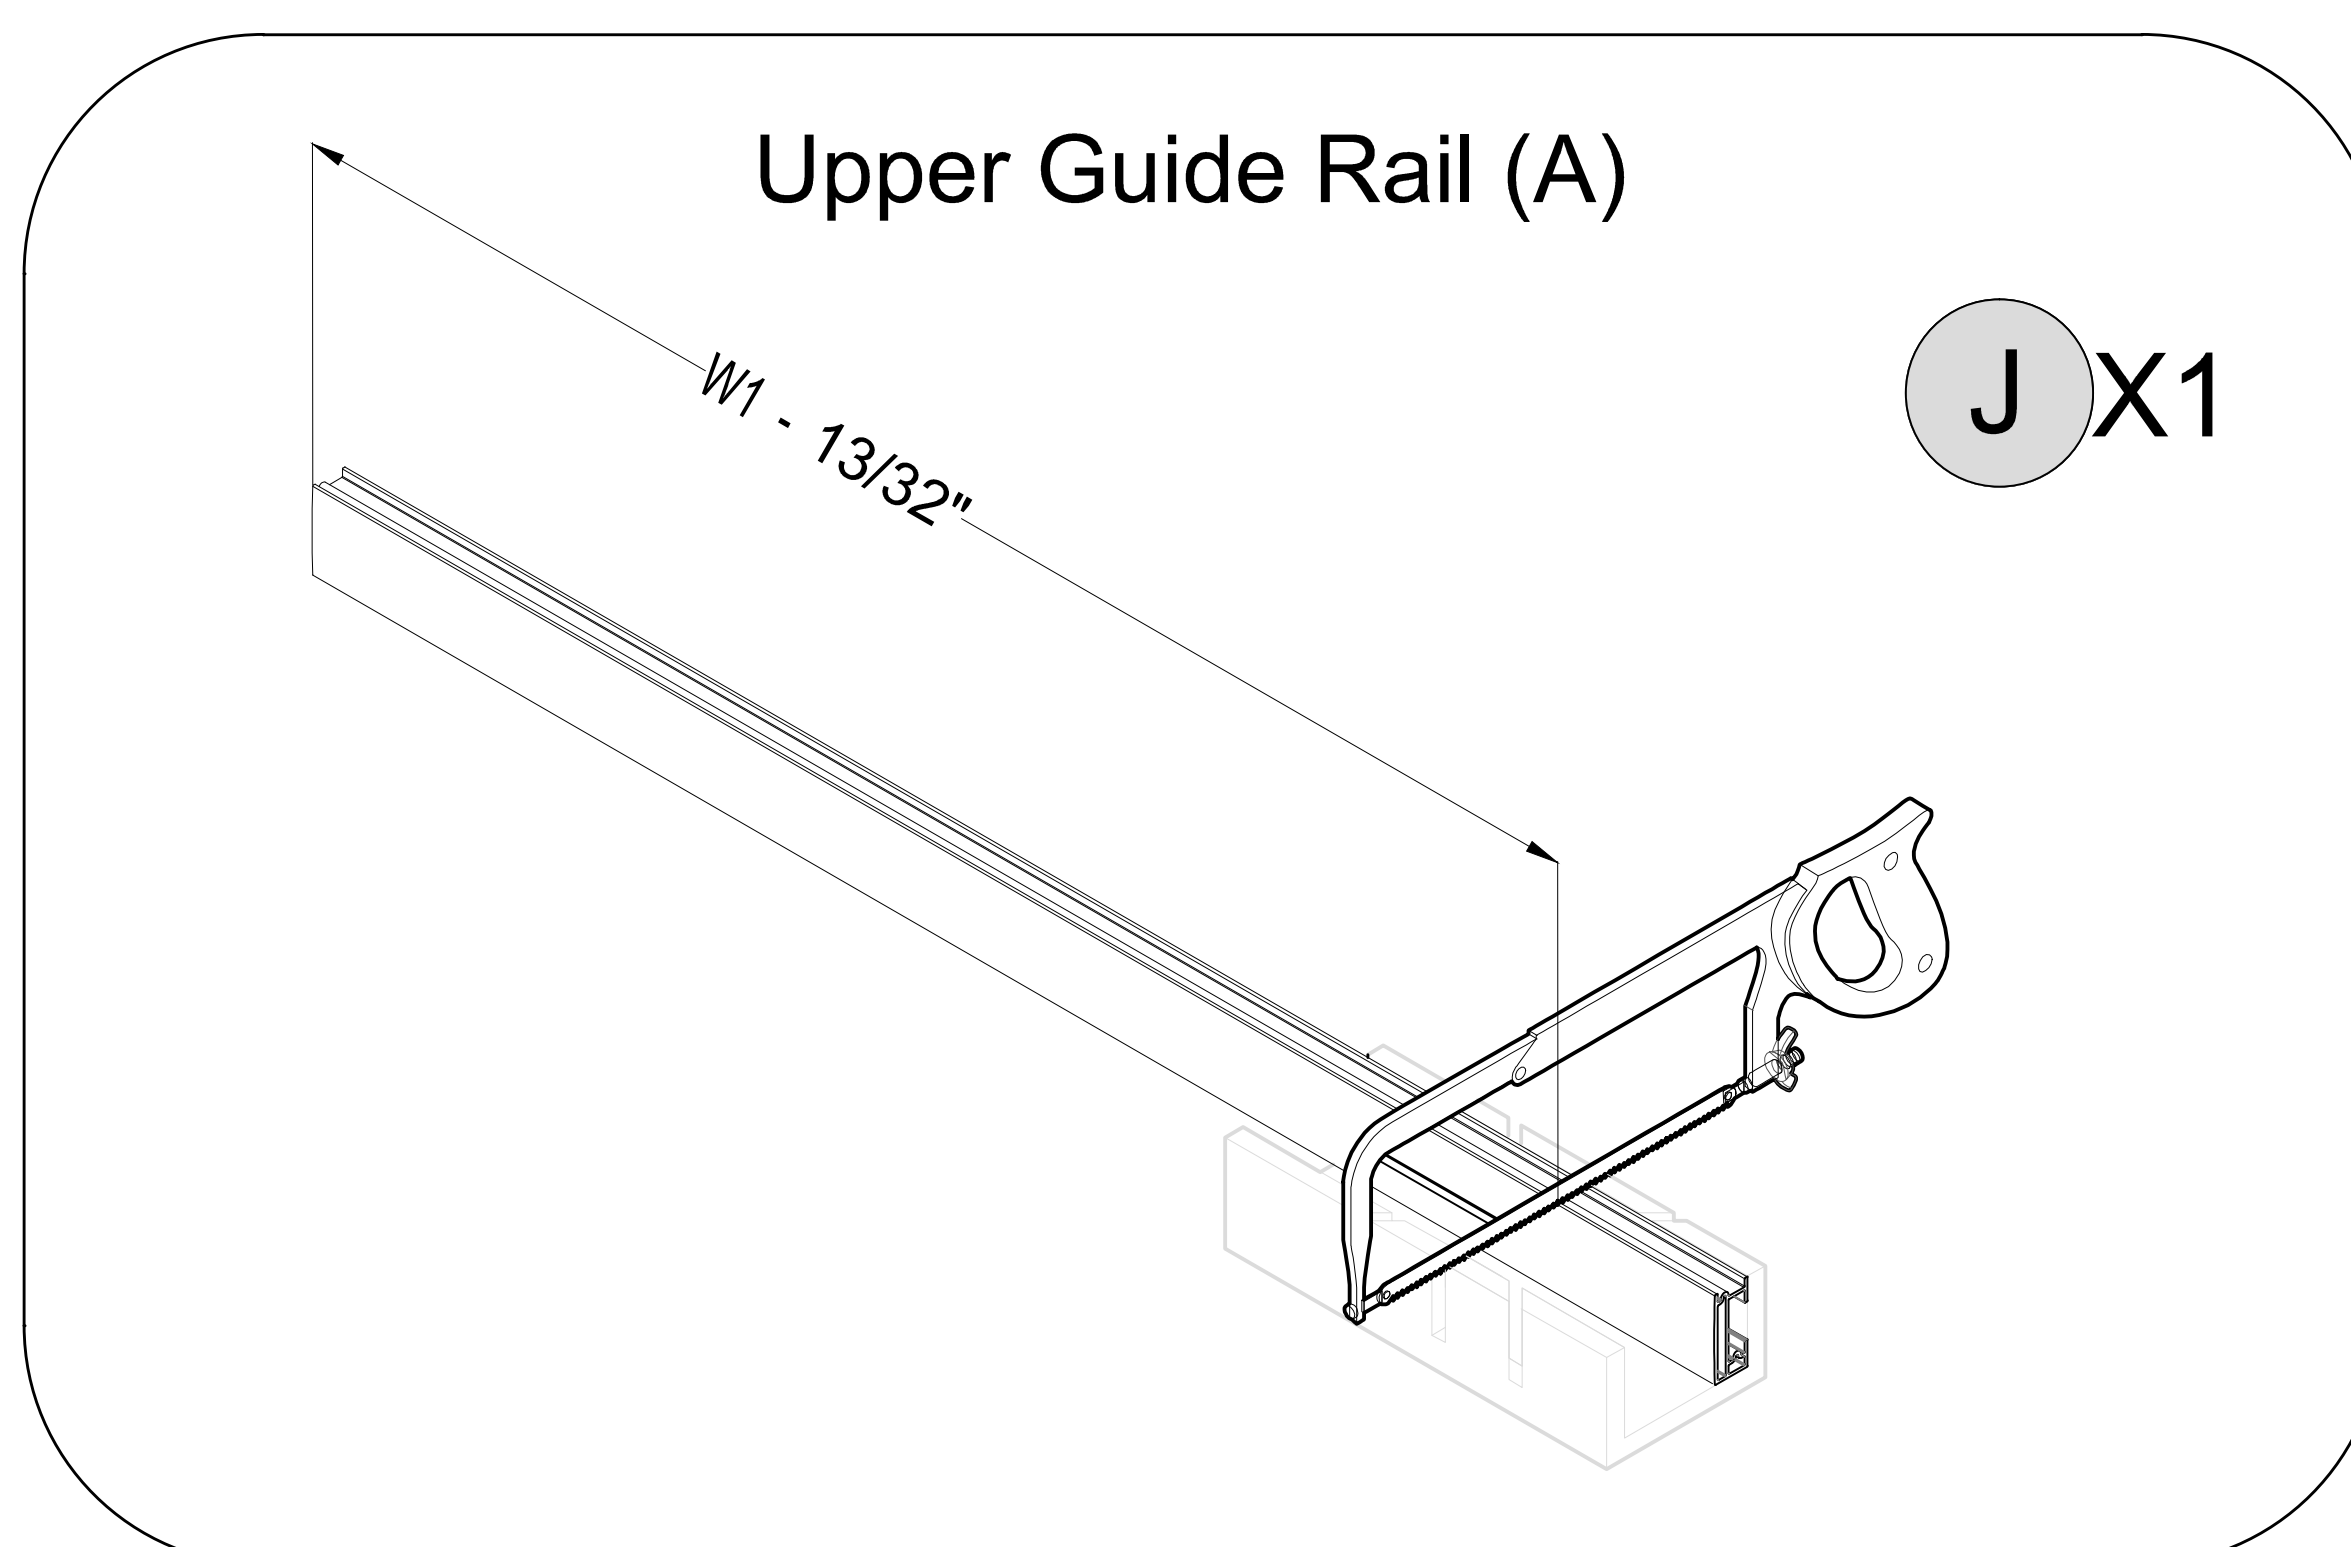

Cut the Bottom Rail (B) to: "W2"(bottom) dimension - $1/16$ "
Use a metal file to remove any burrs from the cut ends.

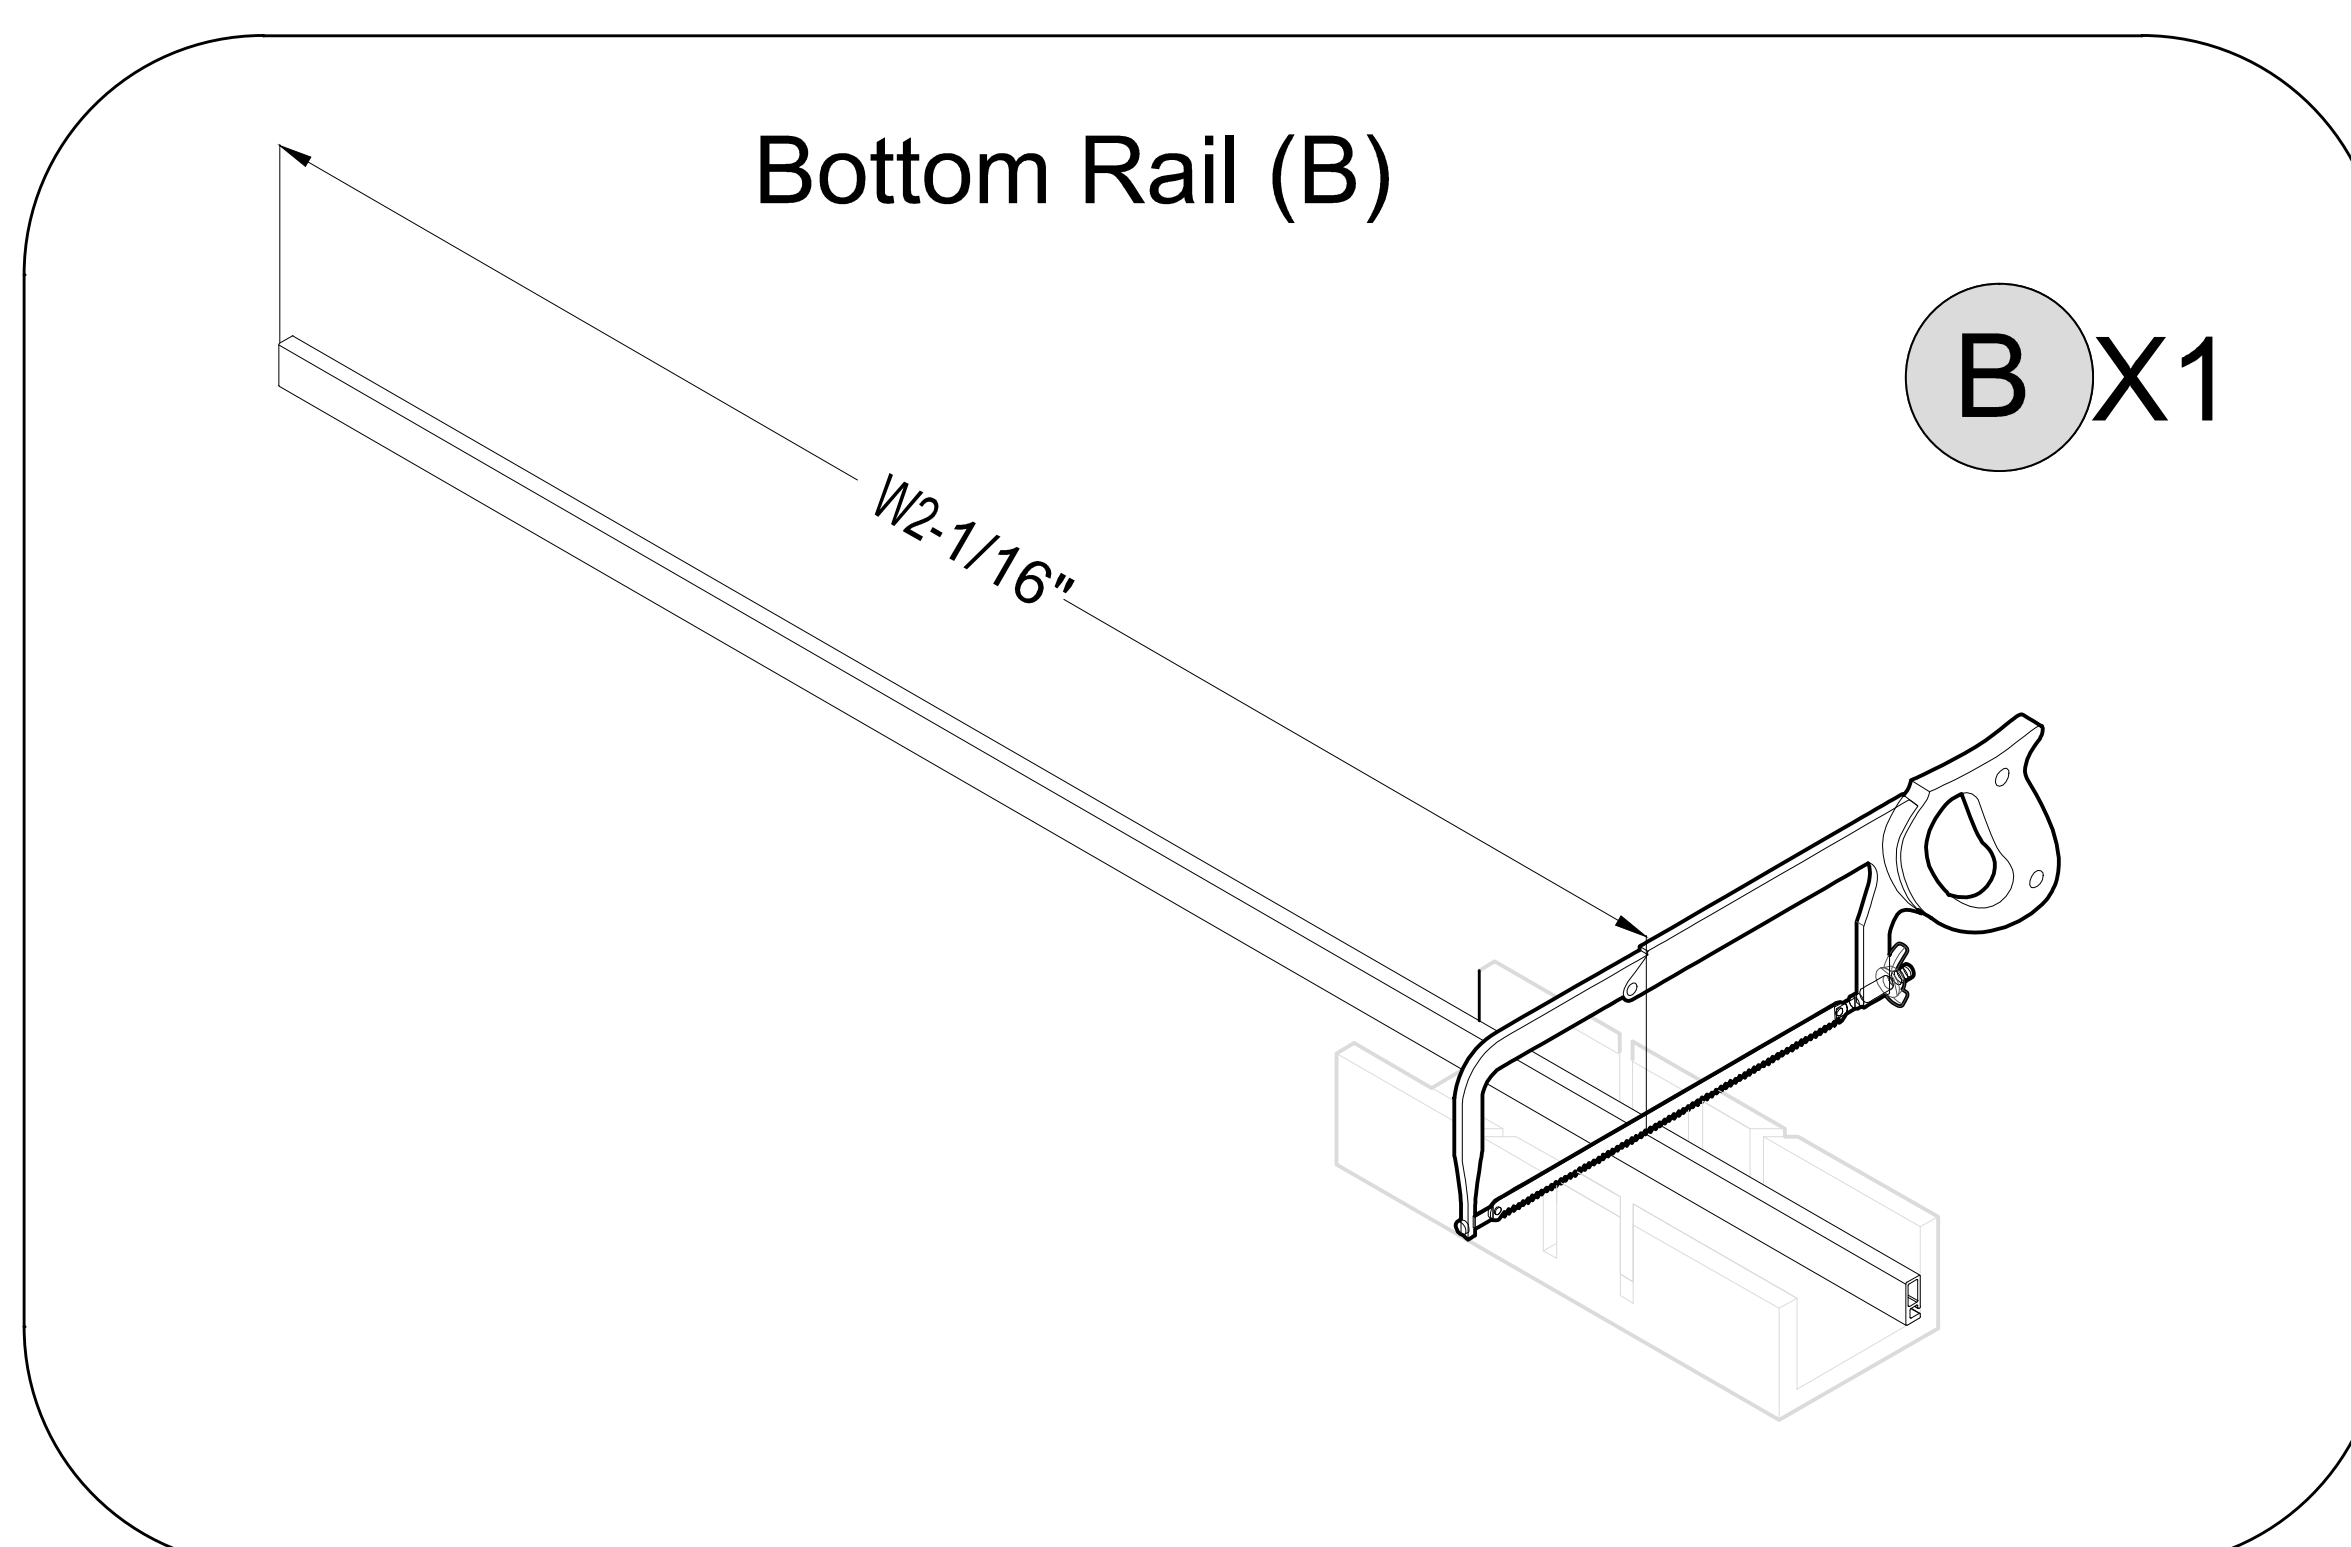


Fig 2

NOTE

The Upper Guide Rail, Wall Profiles and Bottom Rail are pre-cut for the model size:
Upper Guide Rail (J) = 60"
Wall Jamb (E) = 69 $1/4$ "
Bottom Rail (B) = 60"








Only the Upper Guide Rail (J) and Bottom Rail (B) need to be cut to fit the finished opening size.

3

Wall Jamb & Wall Bracket Installation

NOTE

- 1.Measure in 19/32" from the outside of the **Wall jamb(E)** as Fig.a;
- 2.Position the **Wall Jamb(E)** on the wall(19/32" inside).Please note one end with 2 holes faces up.Mark the location of the holes as Fig.b;
- 3.Drill the holes as Fig.c and Fig.d;
- 4.Apply silicone into the groove along the entire length of the **Wall Jamb(E)** as Fig e;
- 5.Attach the **Wall Jamb(E)** to the wall and attach the **Bracket(I)** to the **Wall Jamb(E)** as Fig f.

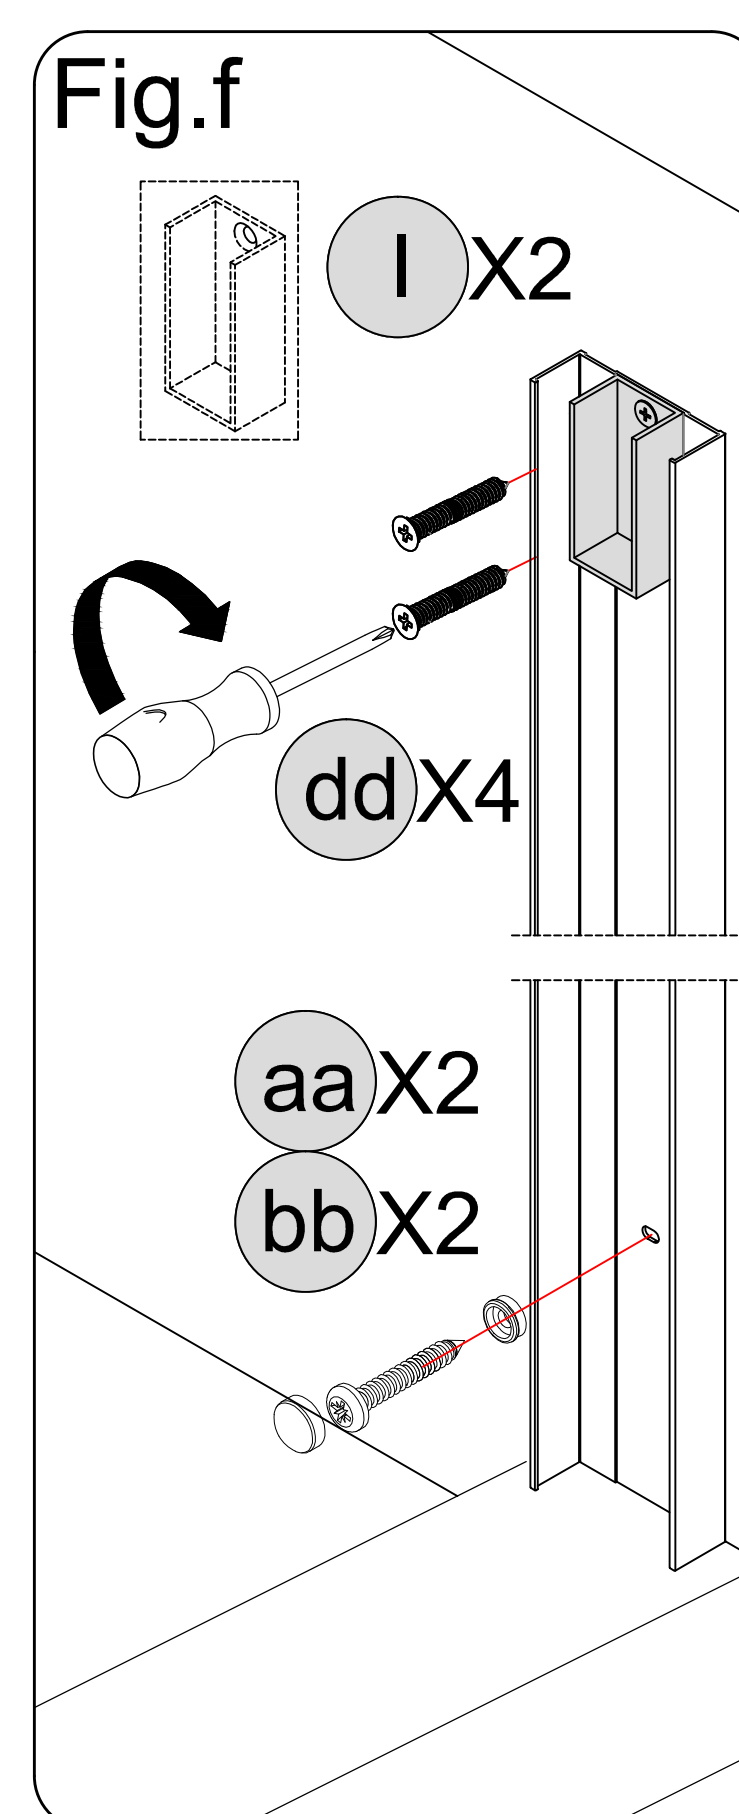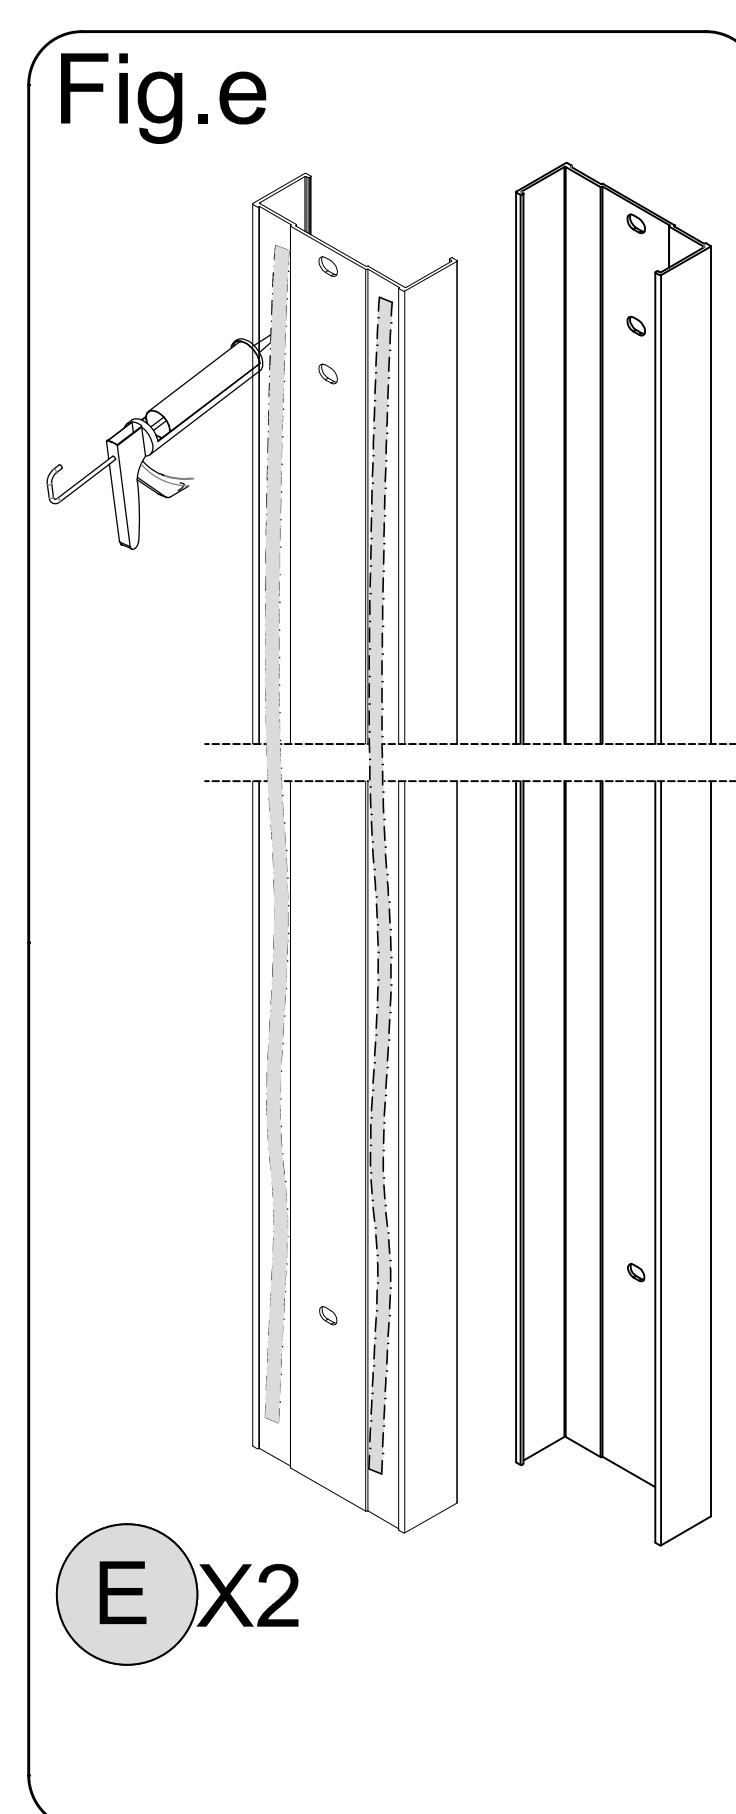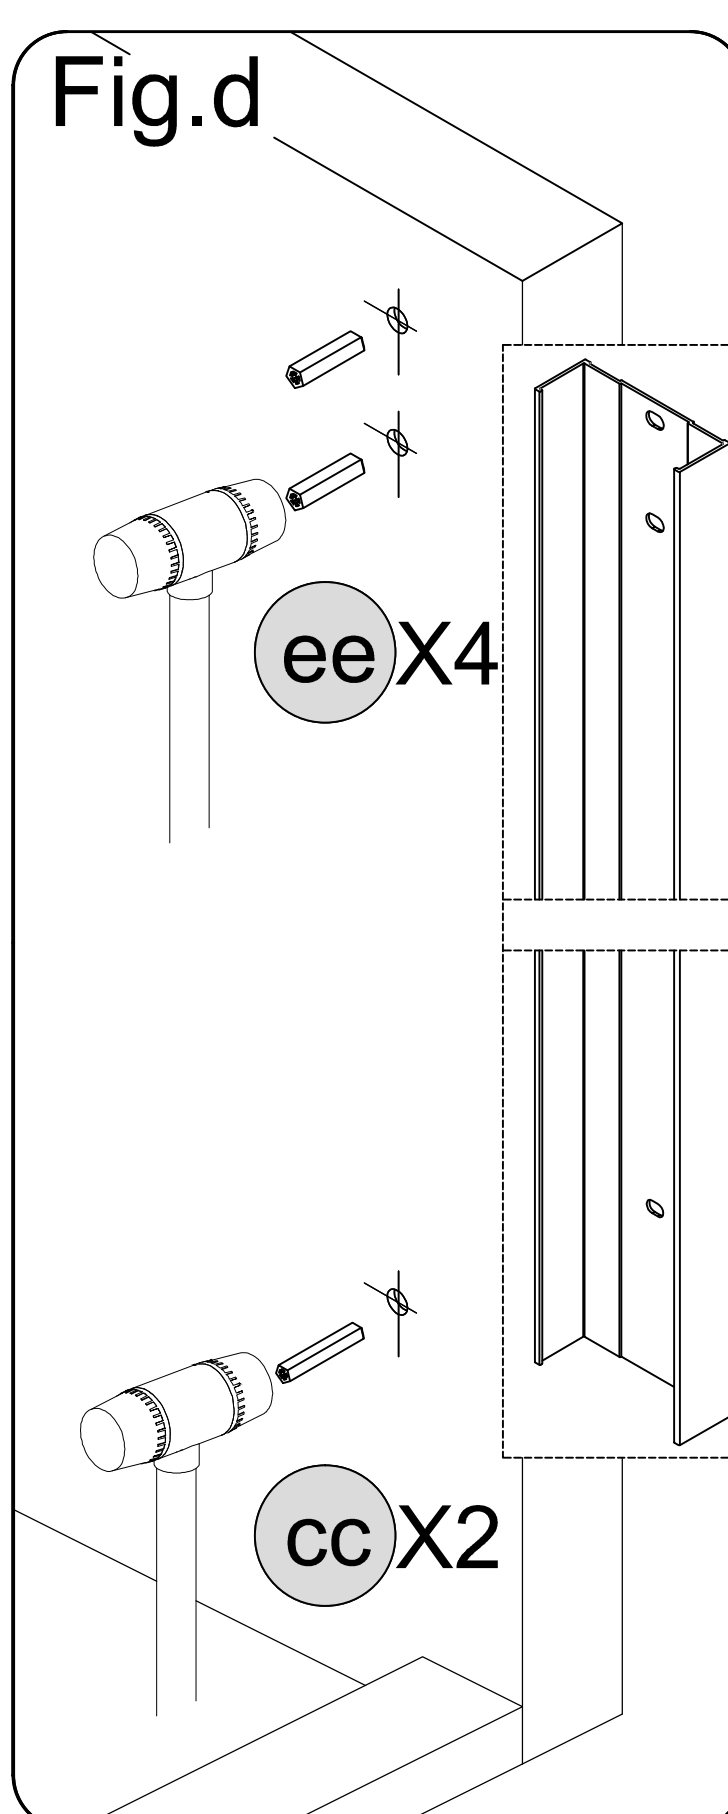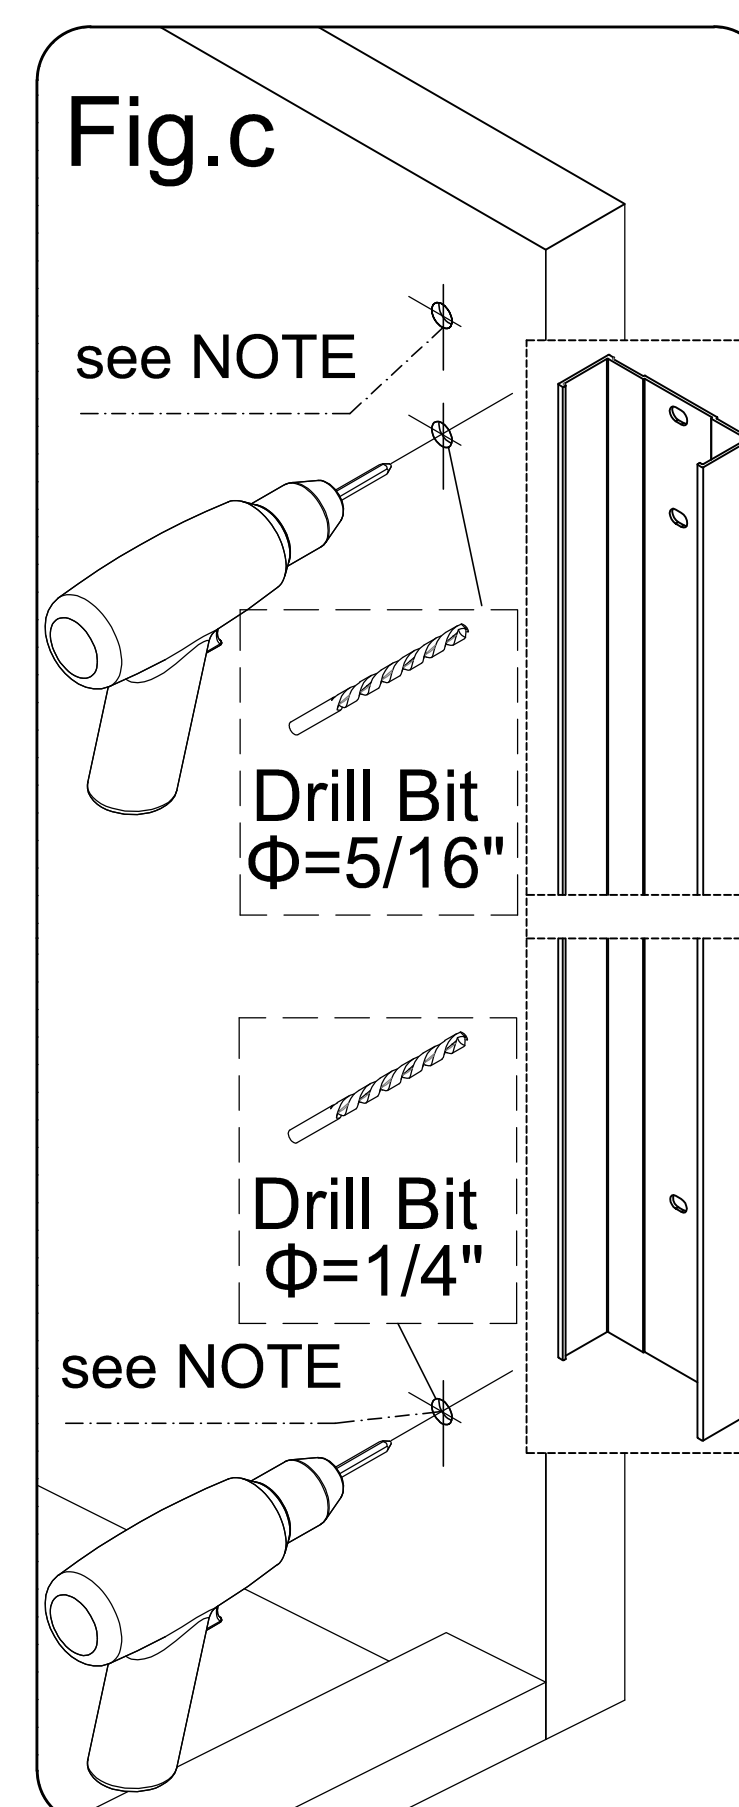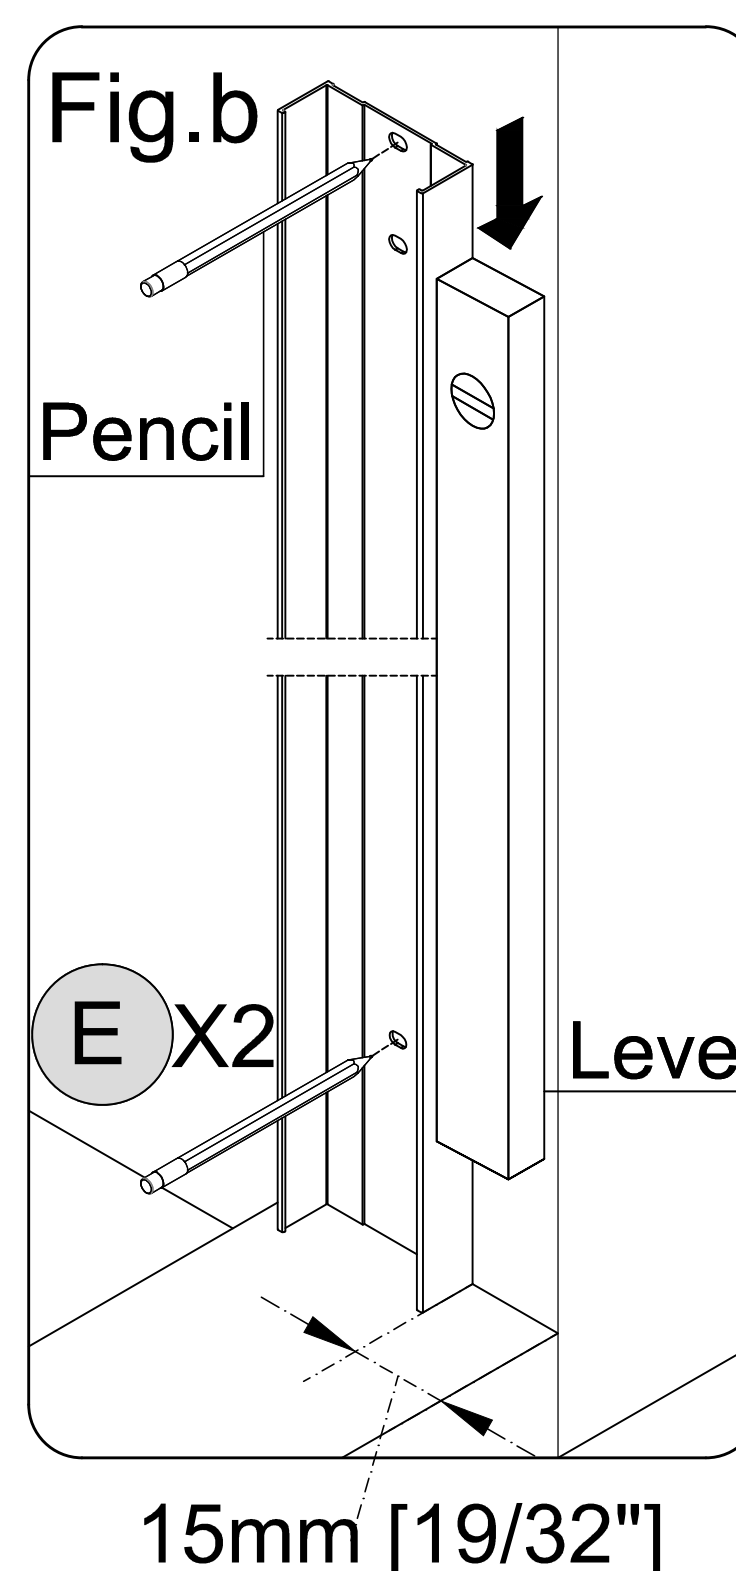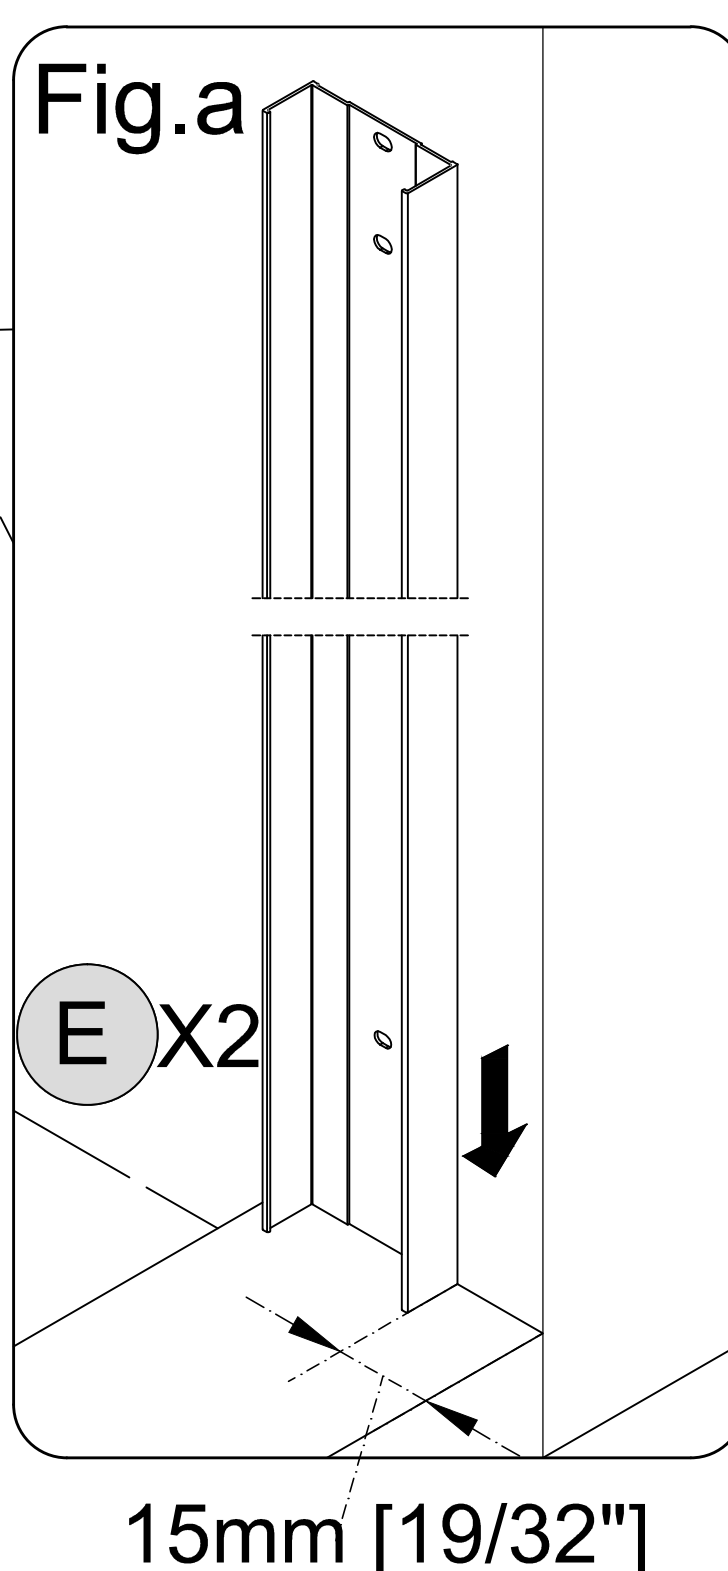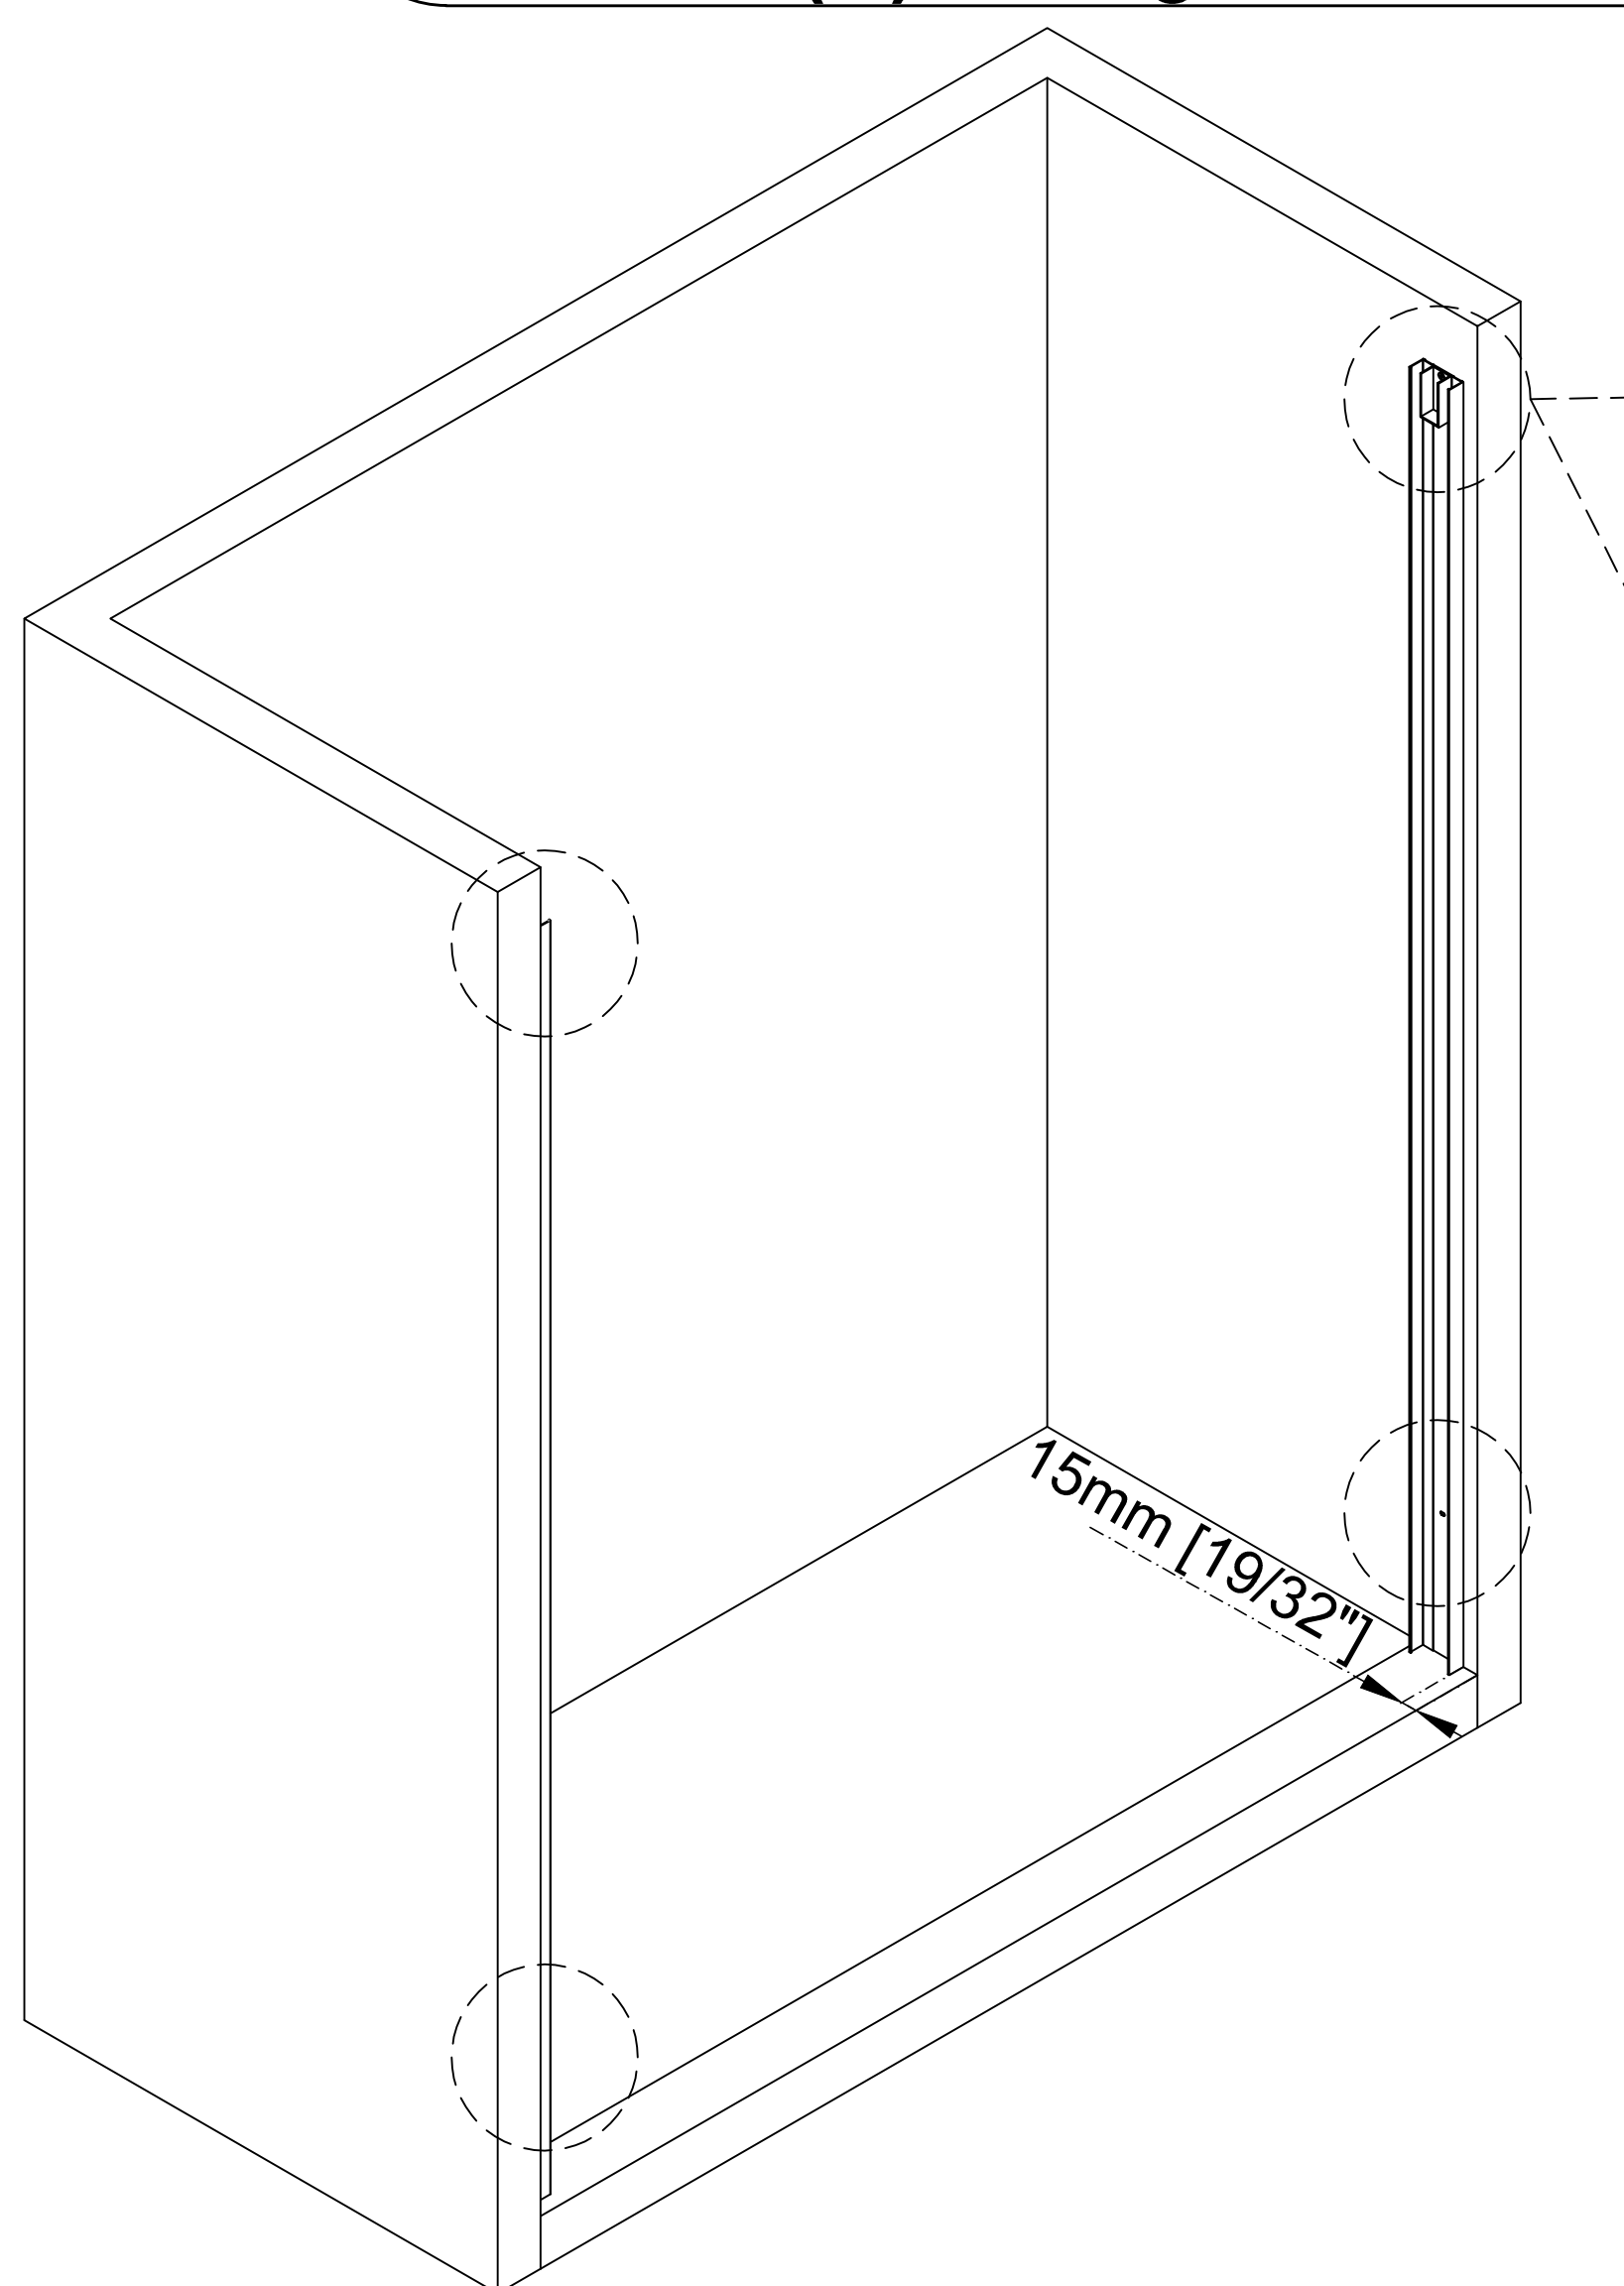

NOTE

- If a Stud is present behind the wall: drill a Ø3/16"(4mm) hole up to the stud, drill an Ø1/8"(3mm) pilot hole into the stud and use the ST4.0 x 30mm Pan Head Screws (bb), use the ST5 x 45 Countersunk Screws (dd) attach the wall bracket assemblies . OR
- If No Stud is present behind the wall: drill a Ø1/4"(6mm) hole and insert the wall anchors (aa) and use the ST4.0 x 30mm Pan Head Screws (bb). drill a Ø5/16" (8mm) hole and insert the wall anchors (ee) and use the ST5 x 45 Countersunk Screws (dd) attach the wall bracket assemblies .

4

Upper Guide Rail & Inside Roller Installation

1. Insert the **Inside Roller (K)** into **Upper Guide Rail (J)**.
2. Insert the **Upper Guide Rail (J)** into the installed **Wall Bracket Assembly (I)**.

NOTE

Put **Inside Glass Panel (L)** inside the shower place before install the **Upper Guide Rail(J)**, and the green label faces outside.

2 holes on the top!



see Label

Check the
Upper Guide
Rail for level.

Lay the glass on a soft
padded surface!



1 Insert K to J

J X1

K X2

2 Insert J to I

J X1


5

Bottom guide & Bottom Rail Installation


NOTE

Measure across the width of the threshold to locate and mark the center.


Drill a $\varnothing 1/4"$ (6mm) hole and insert the **Wall Anchors (cc)** and use the ST4.0 x 30mm Pan Head **Screws (bb)**.

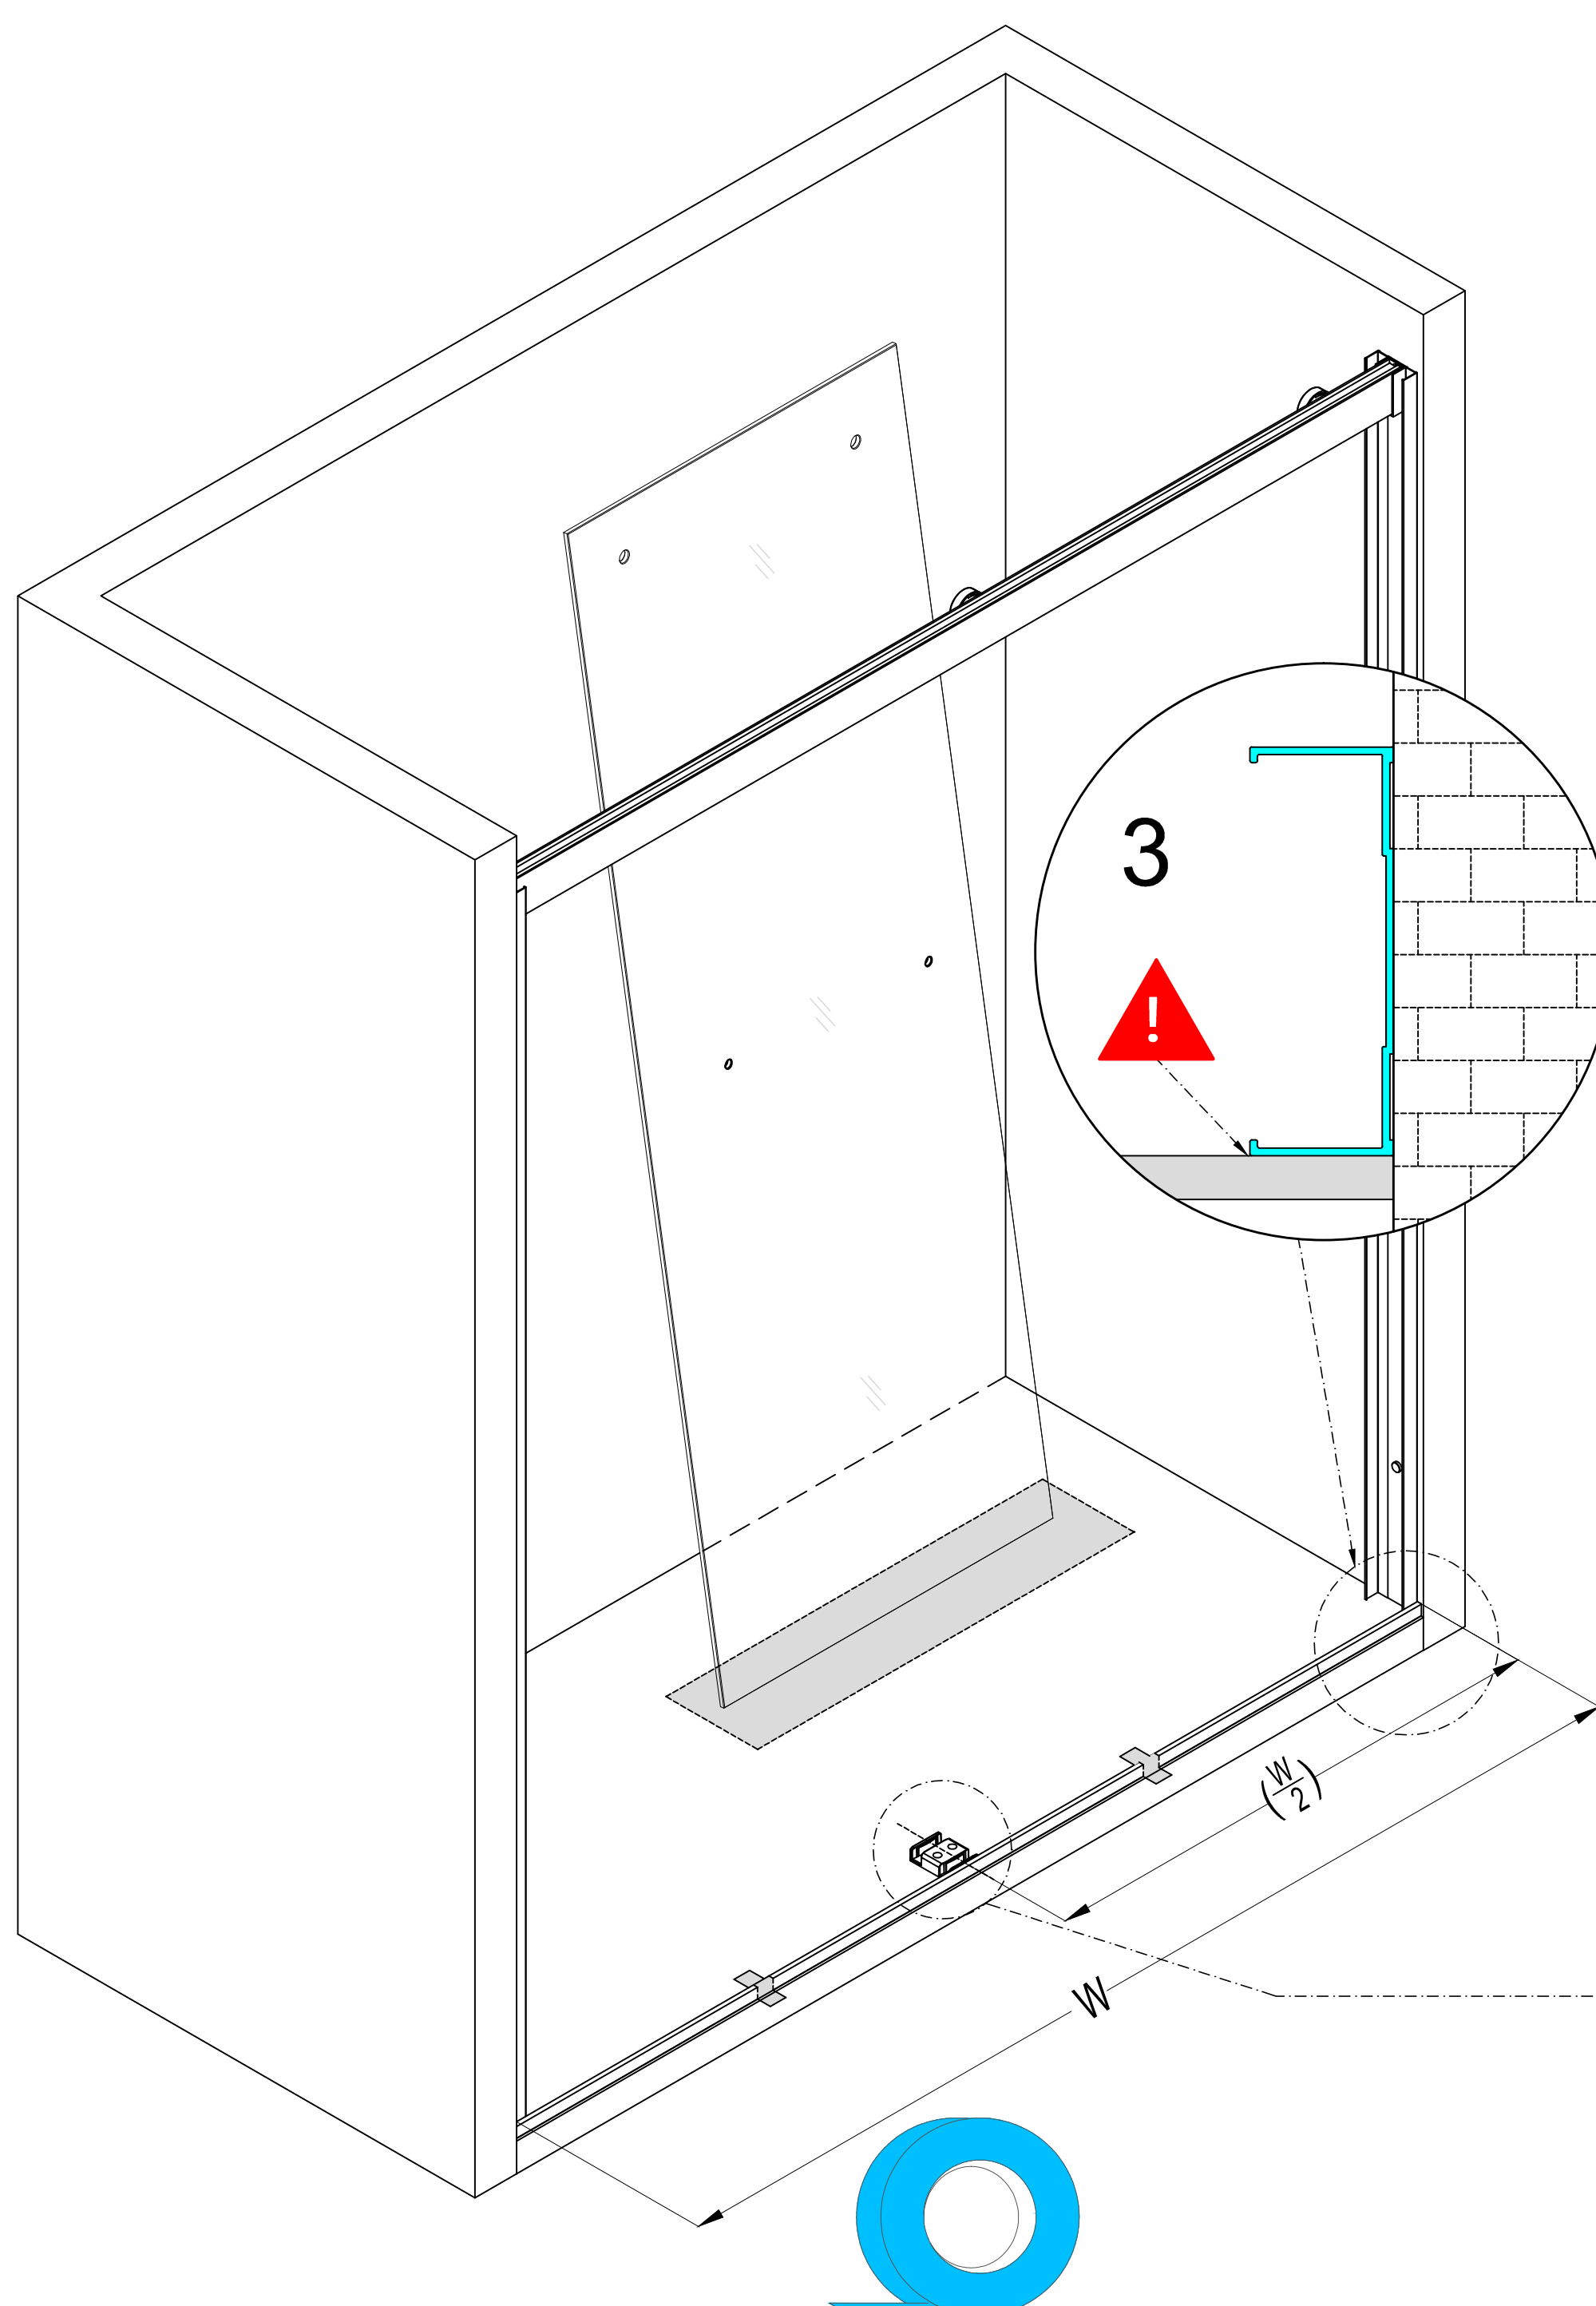

1 Insert A to B

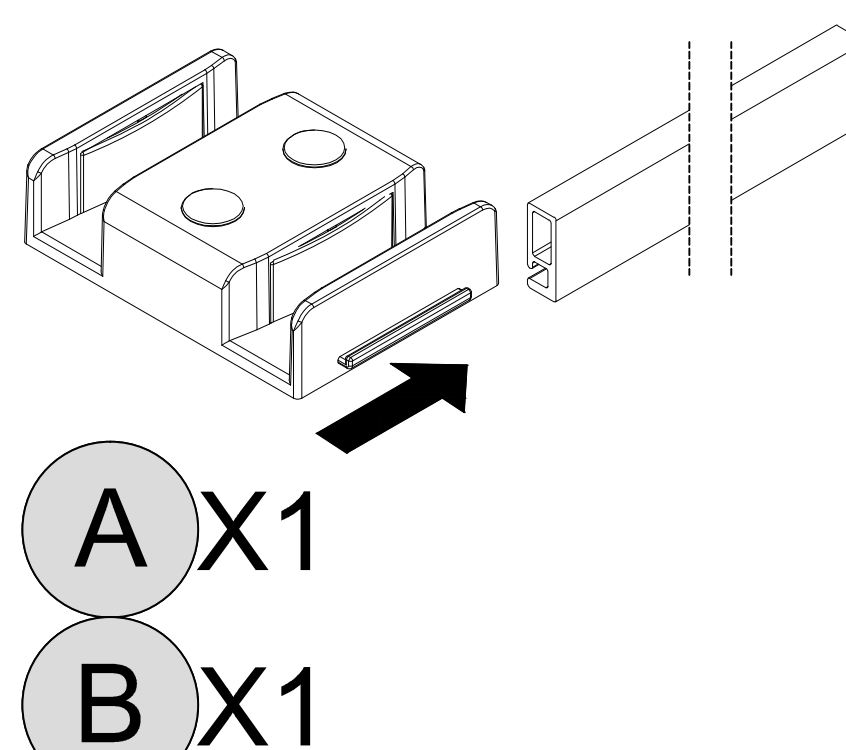


2 Measuring

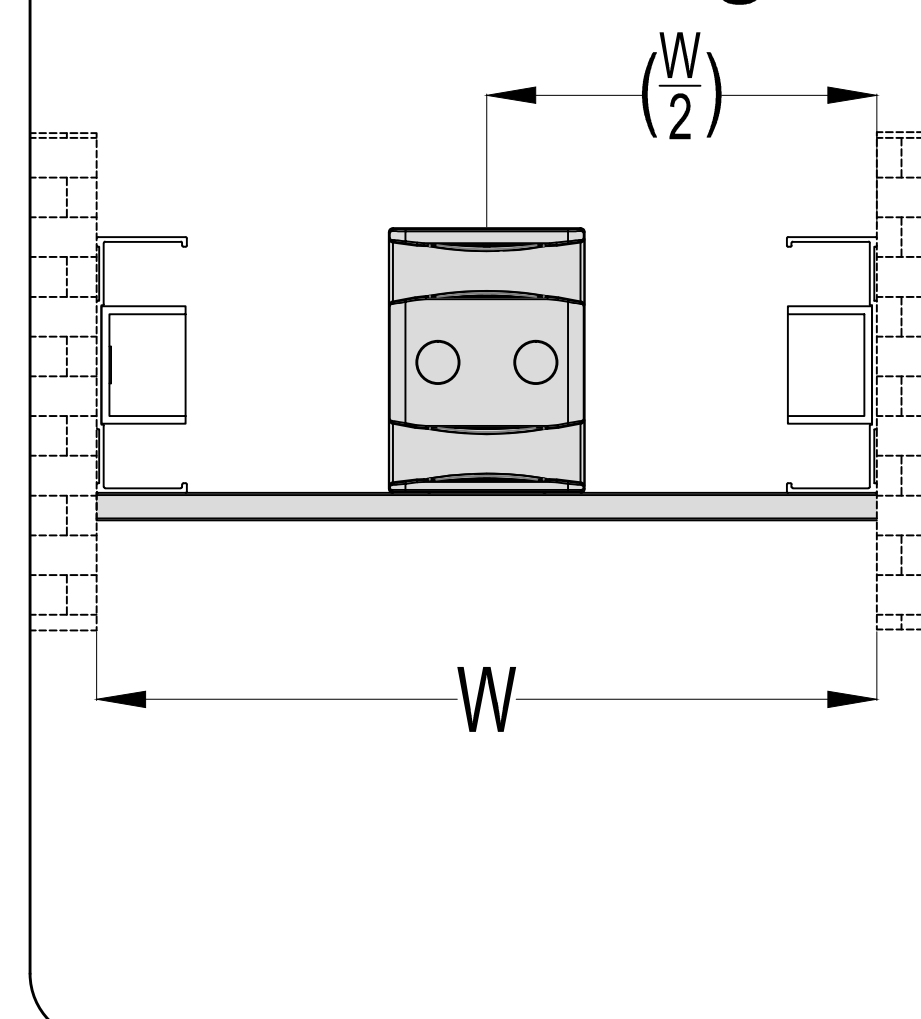


4

Marking

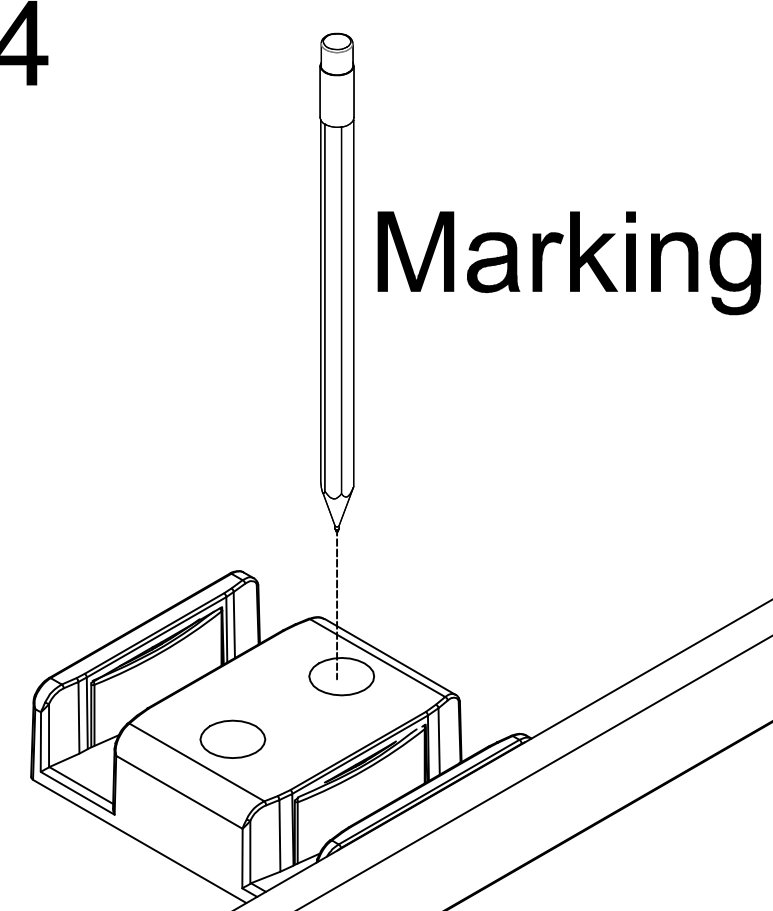

5

Drill Bit
 $\varnothing = 1/4"$

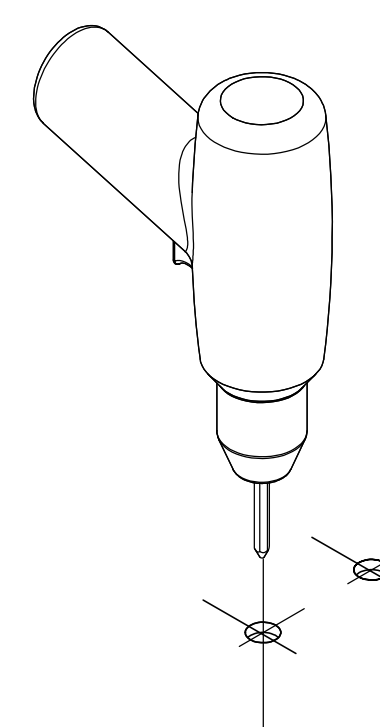


Use Painter's Tape to hold the Water seal

- 1、 Slide the **Bottom Guide(A)** to the **Bottom Rail(B)**.
- 2、 Position the **Bottom Guide(A)** to the middle of shower door.
- 3、 Put the **Bottom Rail(B)** next to the outside of two **Wall jambs(E)**.
- 4、 Mark the holes.
- 5、 Drill holes.
- 6、 Insert the **Wall Anchors(cc)**.
- 7、 Install the **Screws(bb)**.


6

cc X2

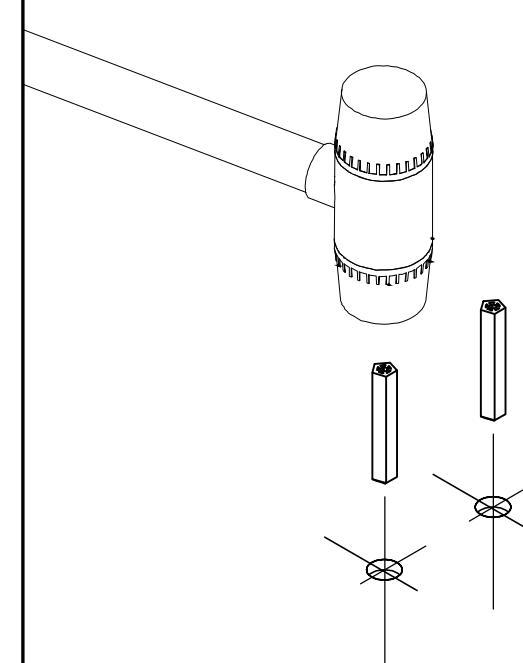

7

bb X2

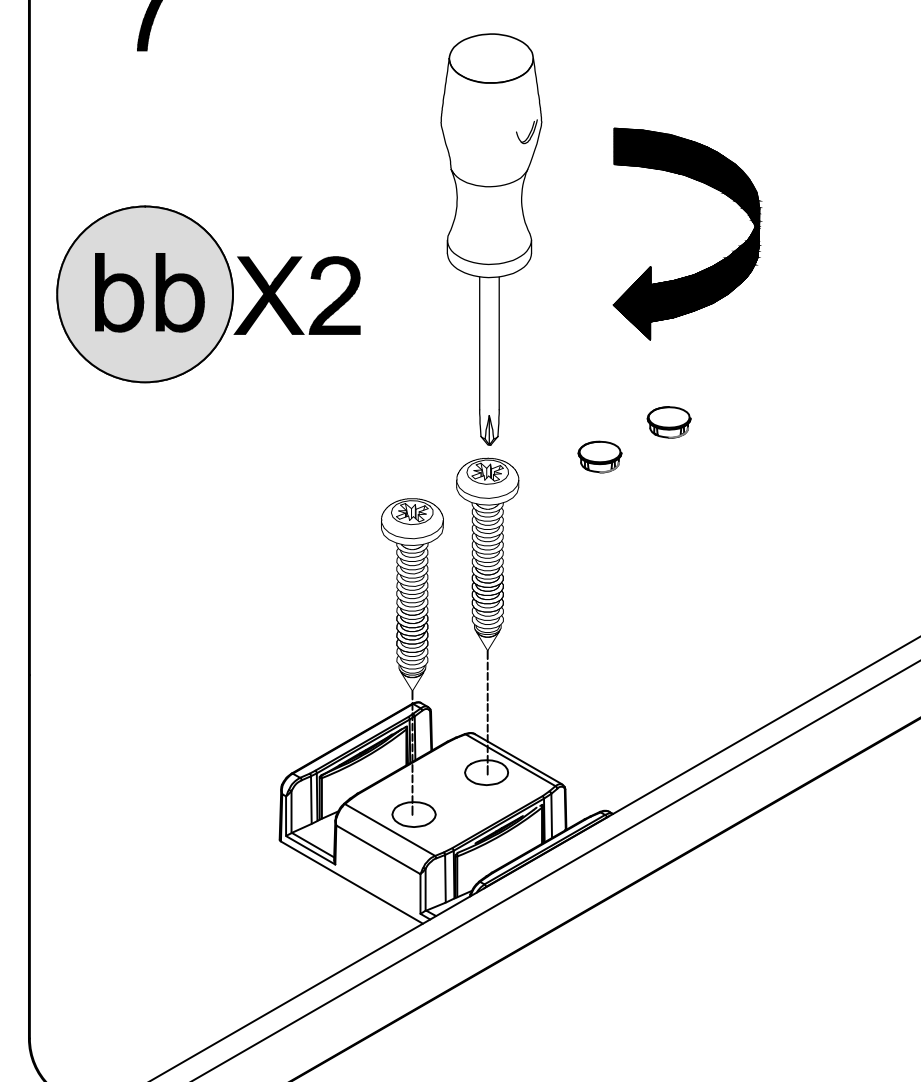

6

Inside Door panel Installation

NOTE


DO NOT install the towel bars on the glass until instructed.
DO NOT lift the glass using the towel bars.
This could result in damage to the glass and/or serious personal injury.
Always use an assistant or a professional grade glass suction cup when handling heavy glass.



The green label faces outside.

see Label

Fig.1

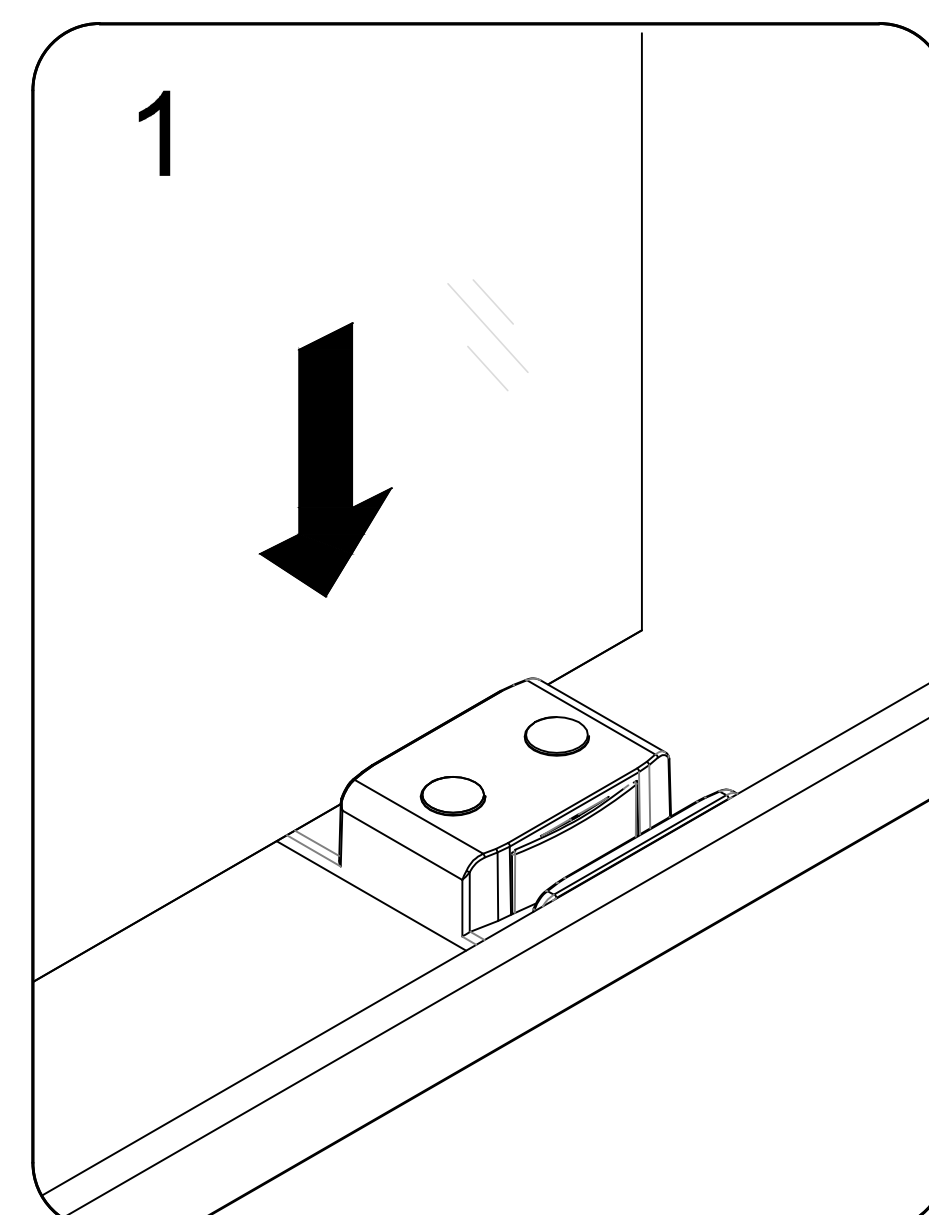

Inside View

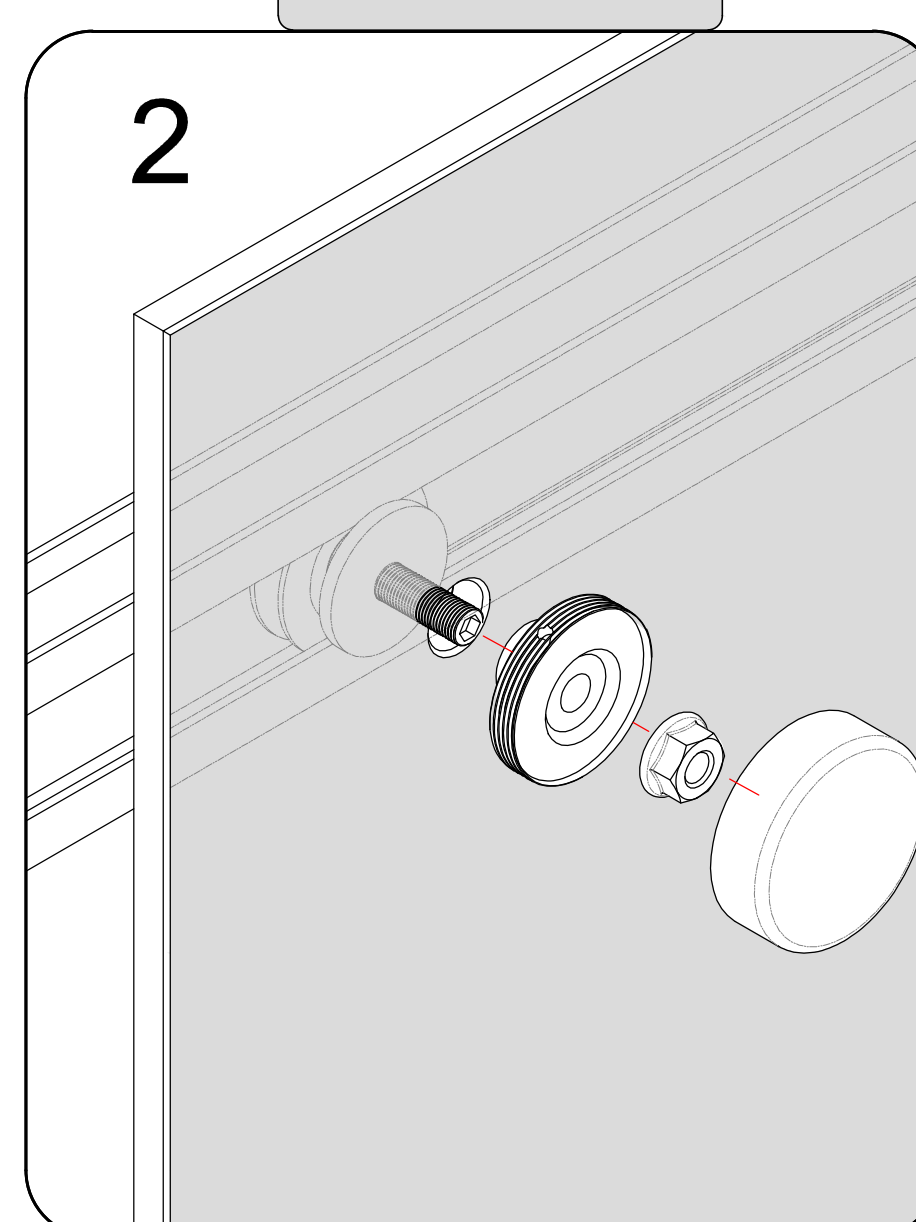


Fig.2

Inside View

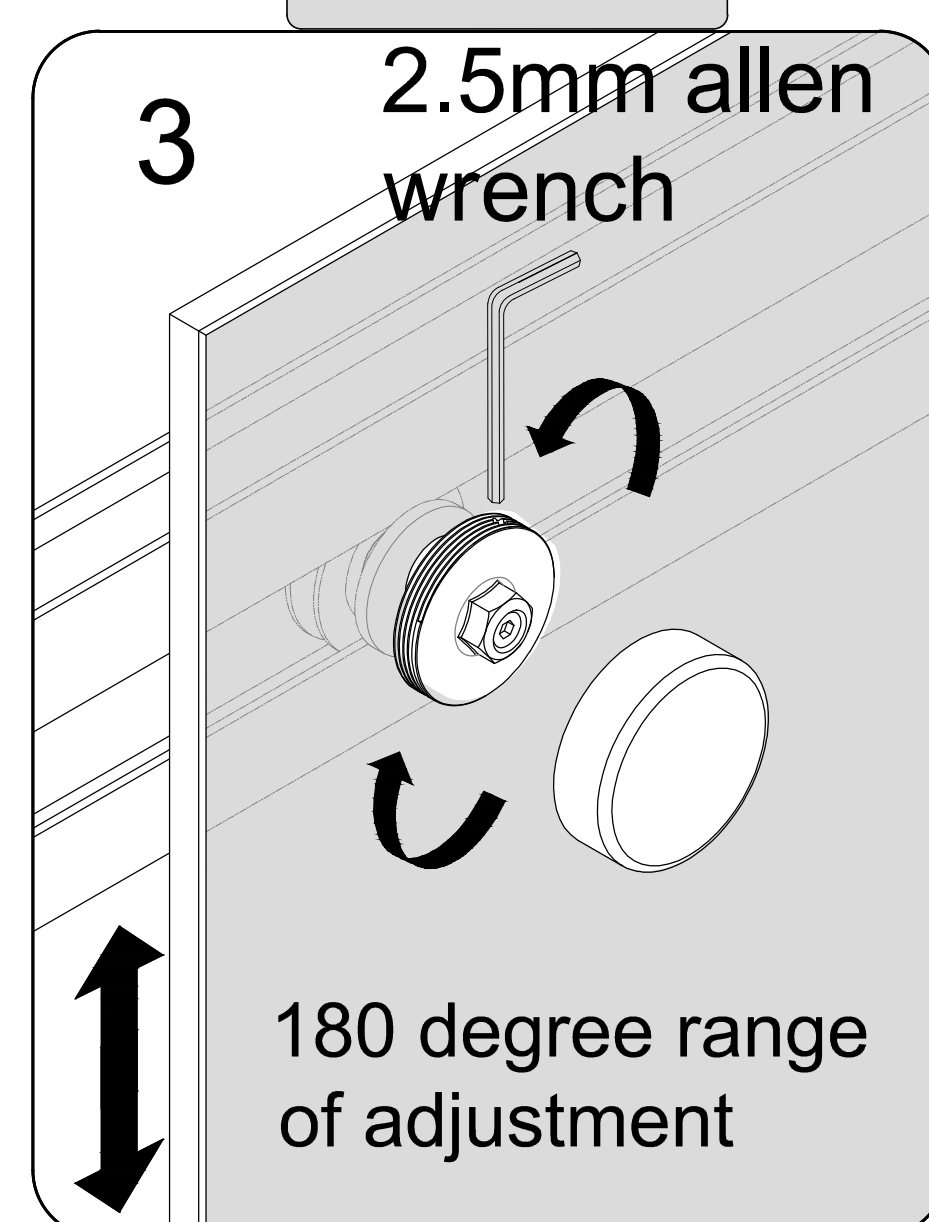


Fig.3

NOTE

1. Insert the **Inside Door Panel(L)** into the **Bottom Guide(A)** as Fig 1.
2. Remove the cap and screw from the **Rollers (K)** and attach the **Rollers (K)** to the **Inside Door Panel(L)**. Fig2
3. Adjust rollers up or down to make sure the door align with wall as Fig 3.
4. Fasten the screw nut. as Fig4.

Inside View


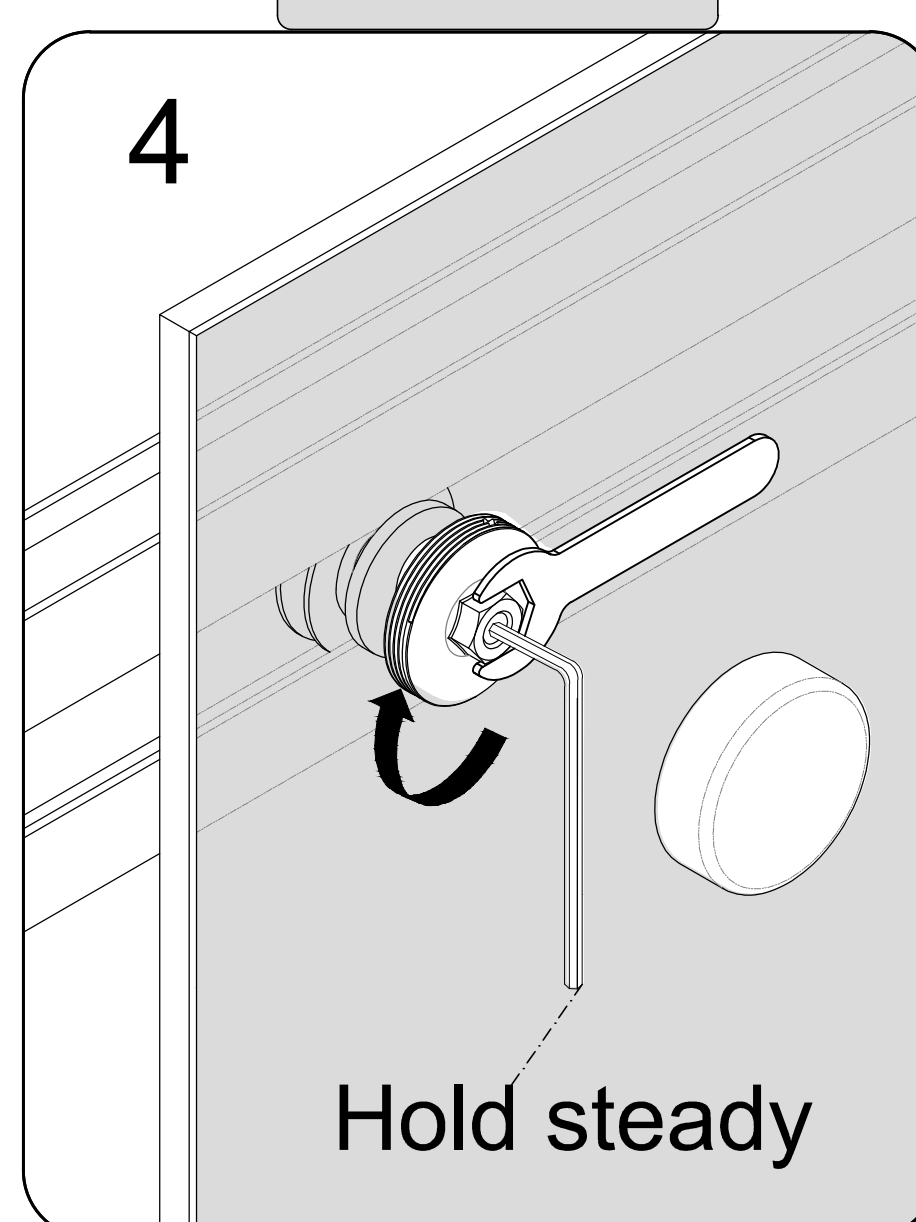


Fig.4

5

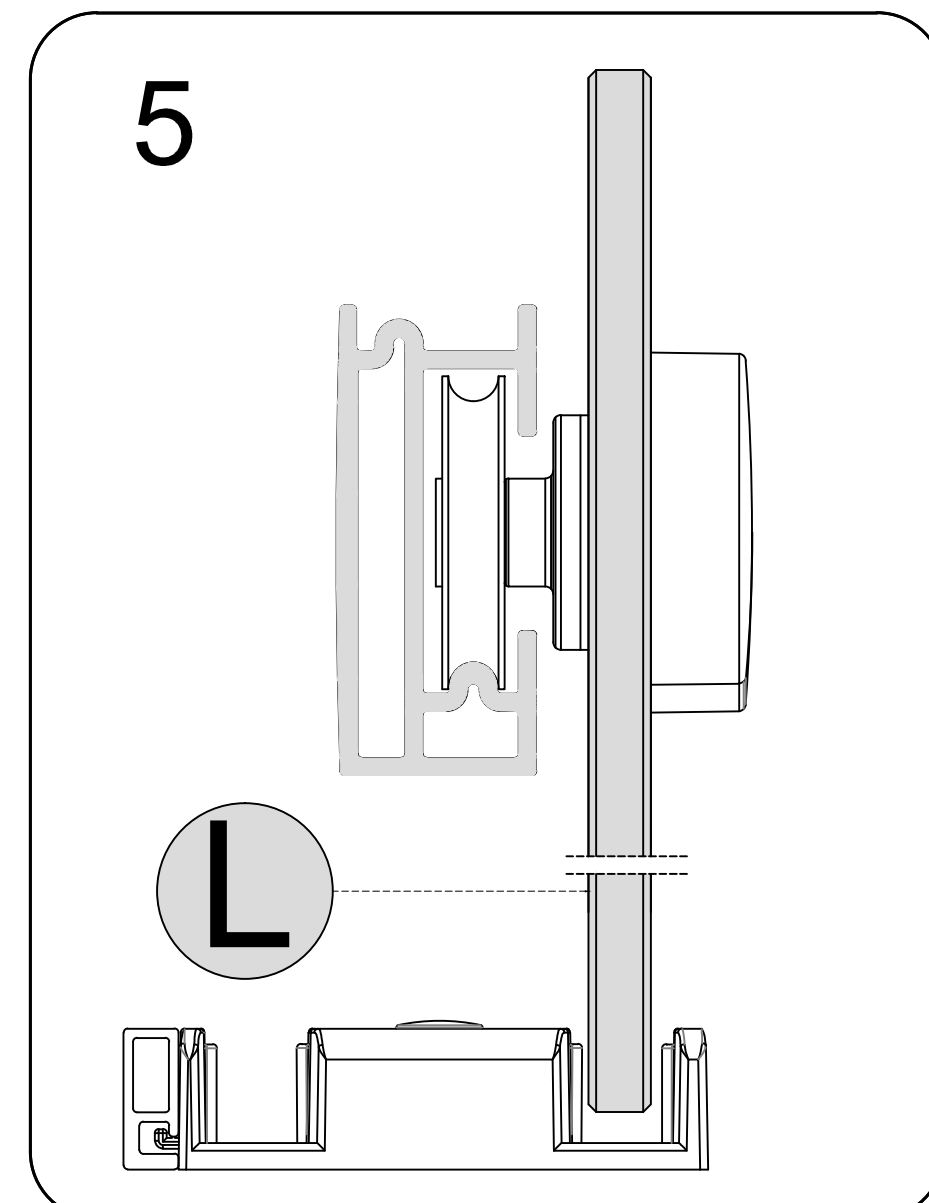

6-1

Outside Door panel & Outside Roller Installation

NOTE


DO NOT install the towel bars on the glass until instructed.

DO NOT lift the glass using the towel bars.

This could result in damage to the glass and/or serious personal injury.

Always use an assistant or a professional grade glass suction cup when handling heavy glass.

Remove the cap and screw from the Rollers (H) and attach the **Rollers (H)** to the **Outside Door Panel(C)**.

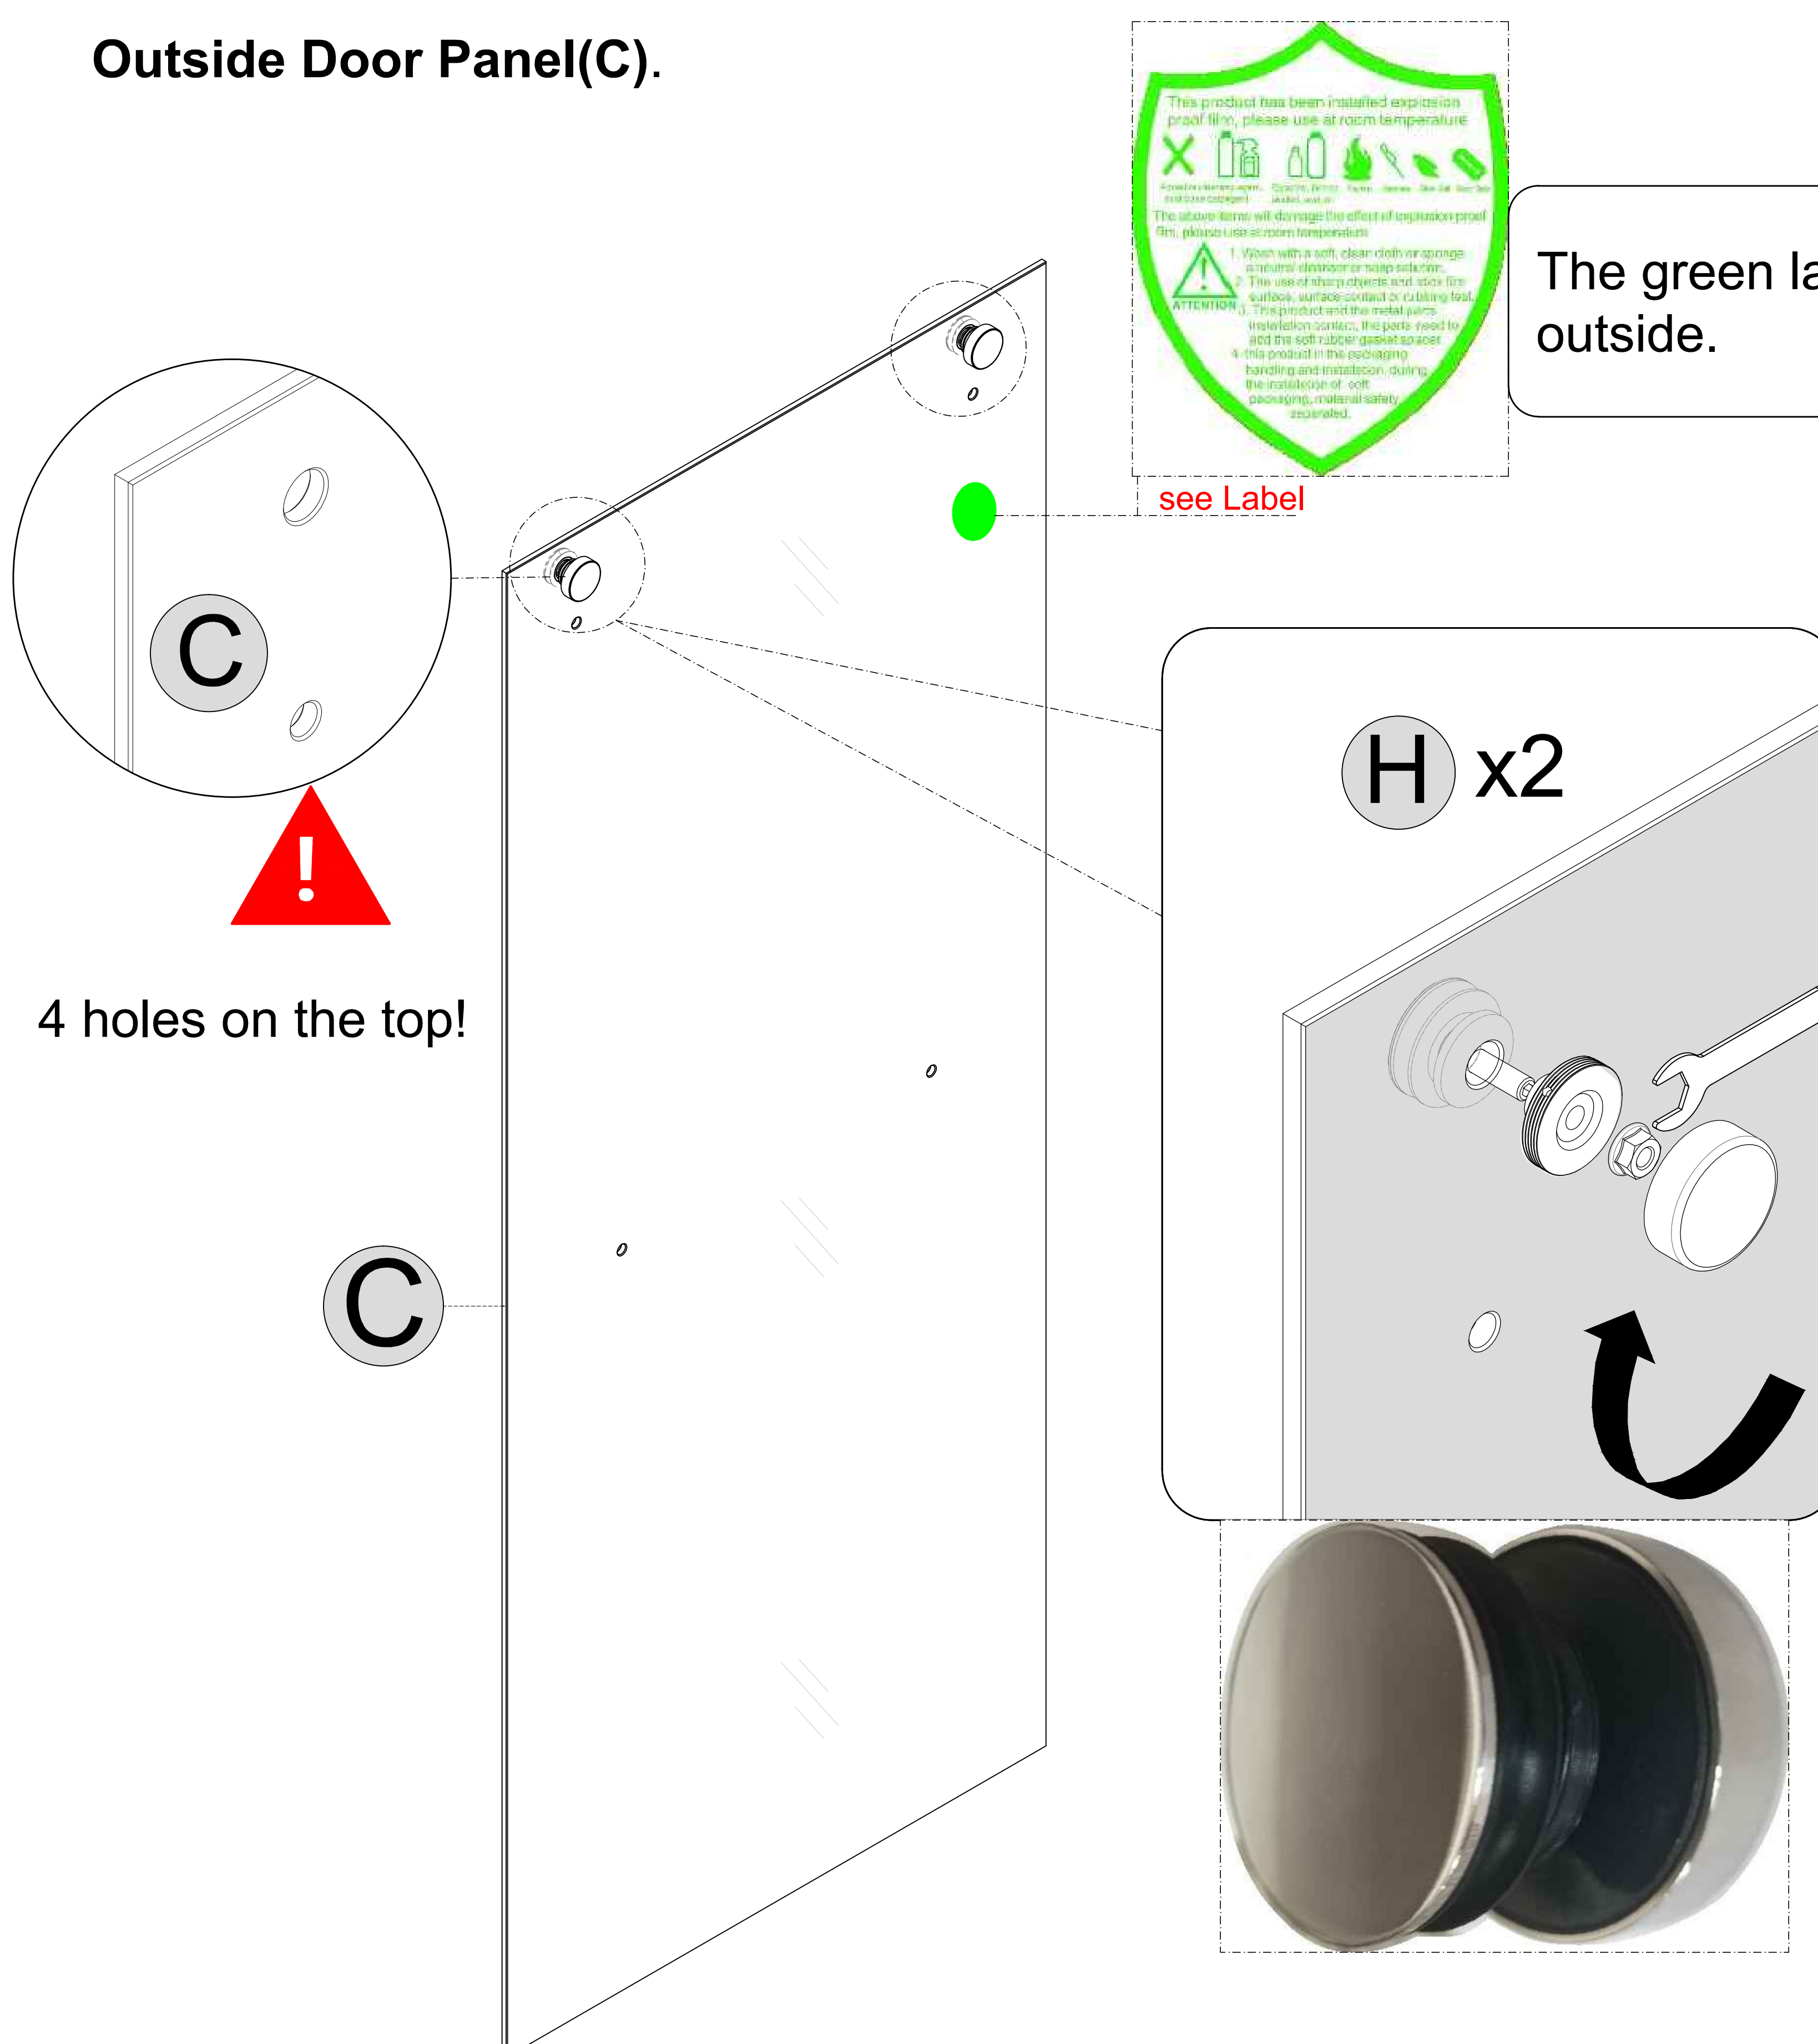

Door panel(outside) & Roller(outside) Installation

This product has been installed explosion proof fan, please use at room temperature

X Avoid cleaning agent, oil, etc. Avoid oil Fire Smoke Hot Flame No lit lighter

The above items will damage the effect of explosion proof fan, please use at room temperature

ATTENTION

1. Wipe with a soft, clean cloth or sponge a neutral detergent to remove oil stain.
2. The use of sharp objects and acids firm surface, surface contact or rubbing test.
3. This product and the metal parts (insulation contact, the parts need to use the soft rubber gasket to seal).
4. This product in the packaging, handling and installation, during the installation of csh packaging, materials safety enclosed.

2.5mm allen wrench

180 degree range
of adjustment



Adjust rollers up or down
so door aligns with wall.

7

Anti-jump assembly Installation

NOTE

Attach the **Anti-jump Assembly (G)** to the **Outside Door Glass (C)** to prevent the door glass from being lifted off of the **Upper Guide Rail (J)**. Adjust the **Anti-jump Assembly (G)** to within 1/32" beneath the **Upper Guide Rail (J)**.

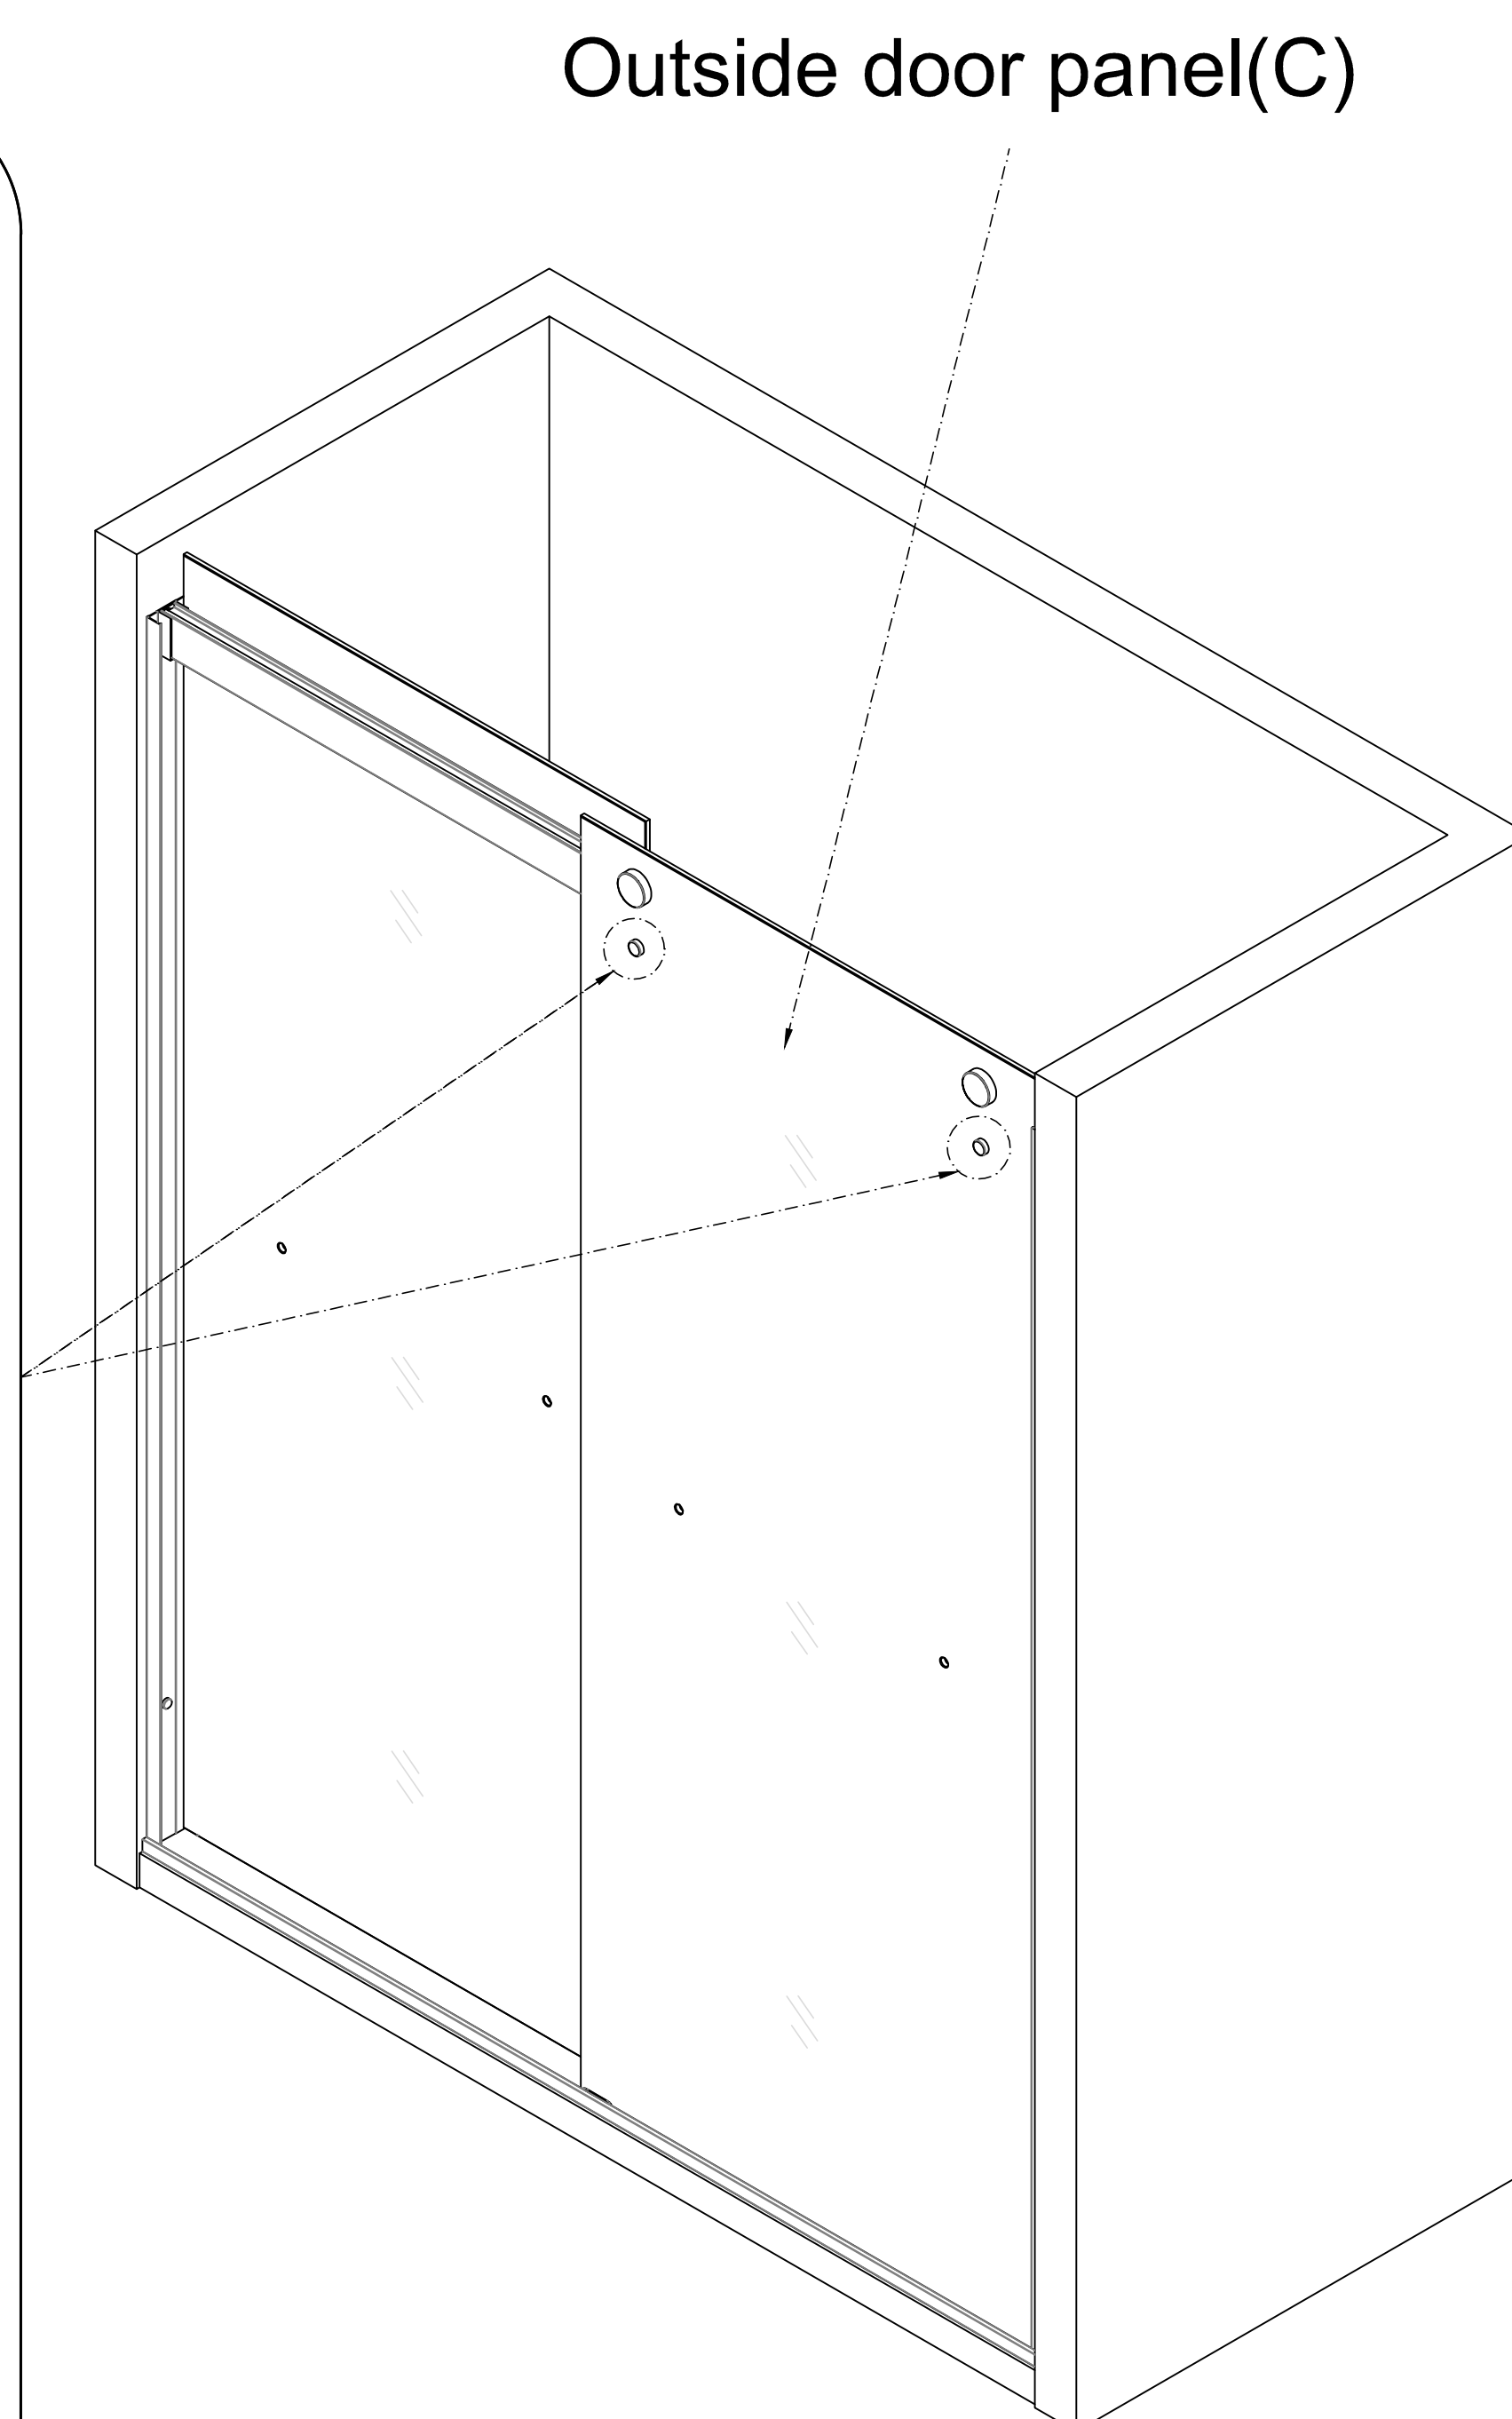
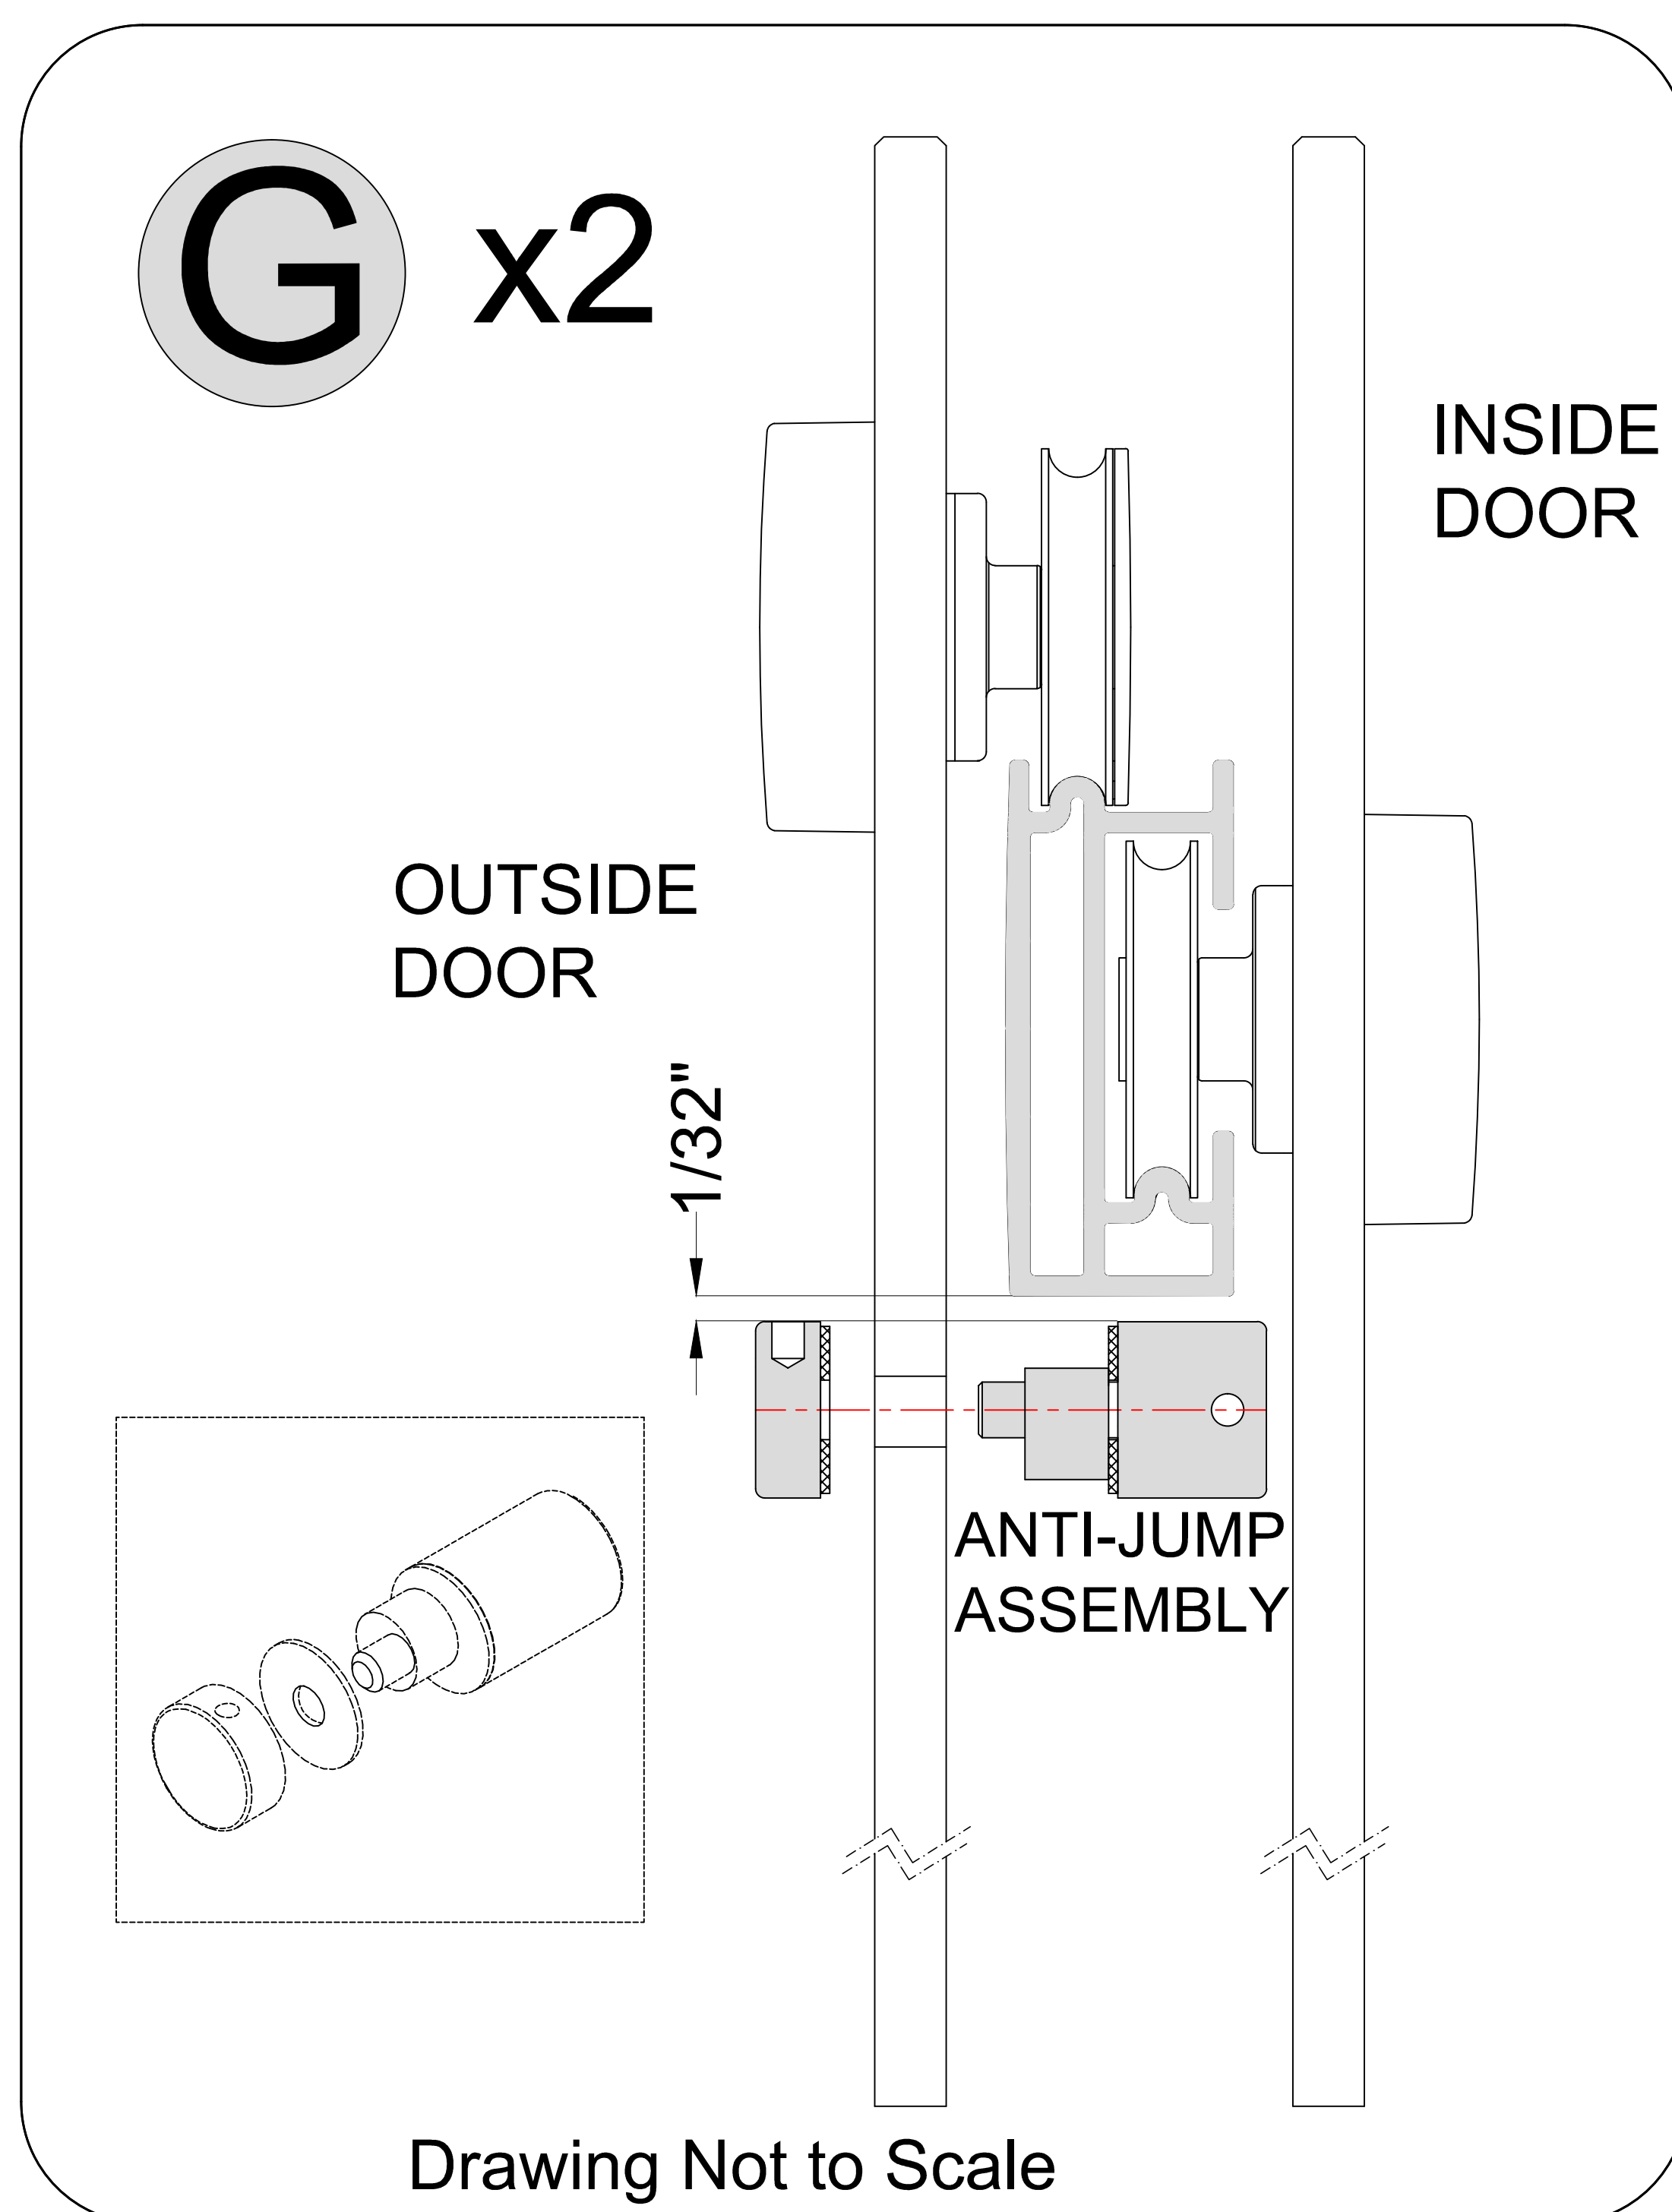


8

Handle Installation

NOTE

Attach the **Handle (F)** to the **Inside Door Panel (L)** and to the **Outside Door Panel (C)**. Be sure to use all of the supplied rubber gaskets to protect the glass.

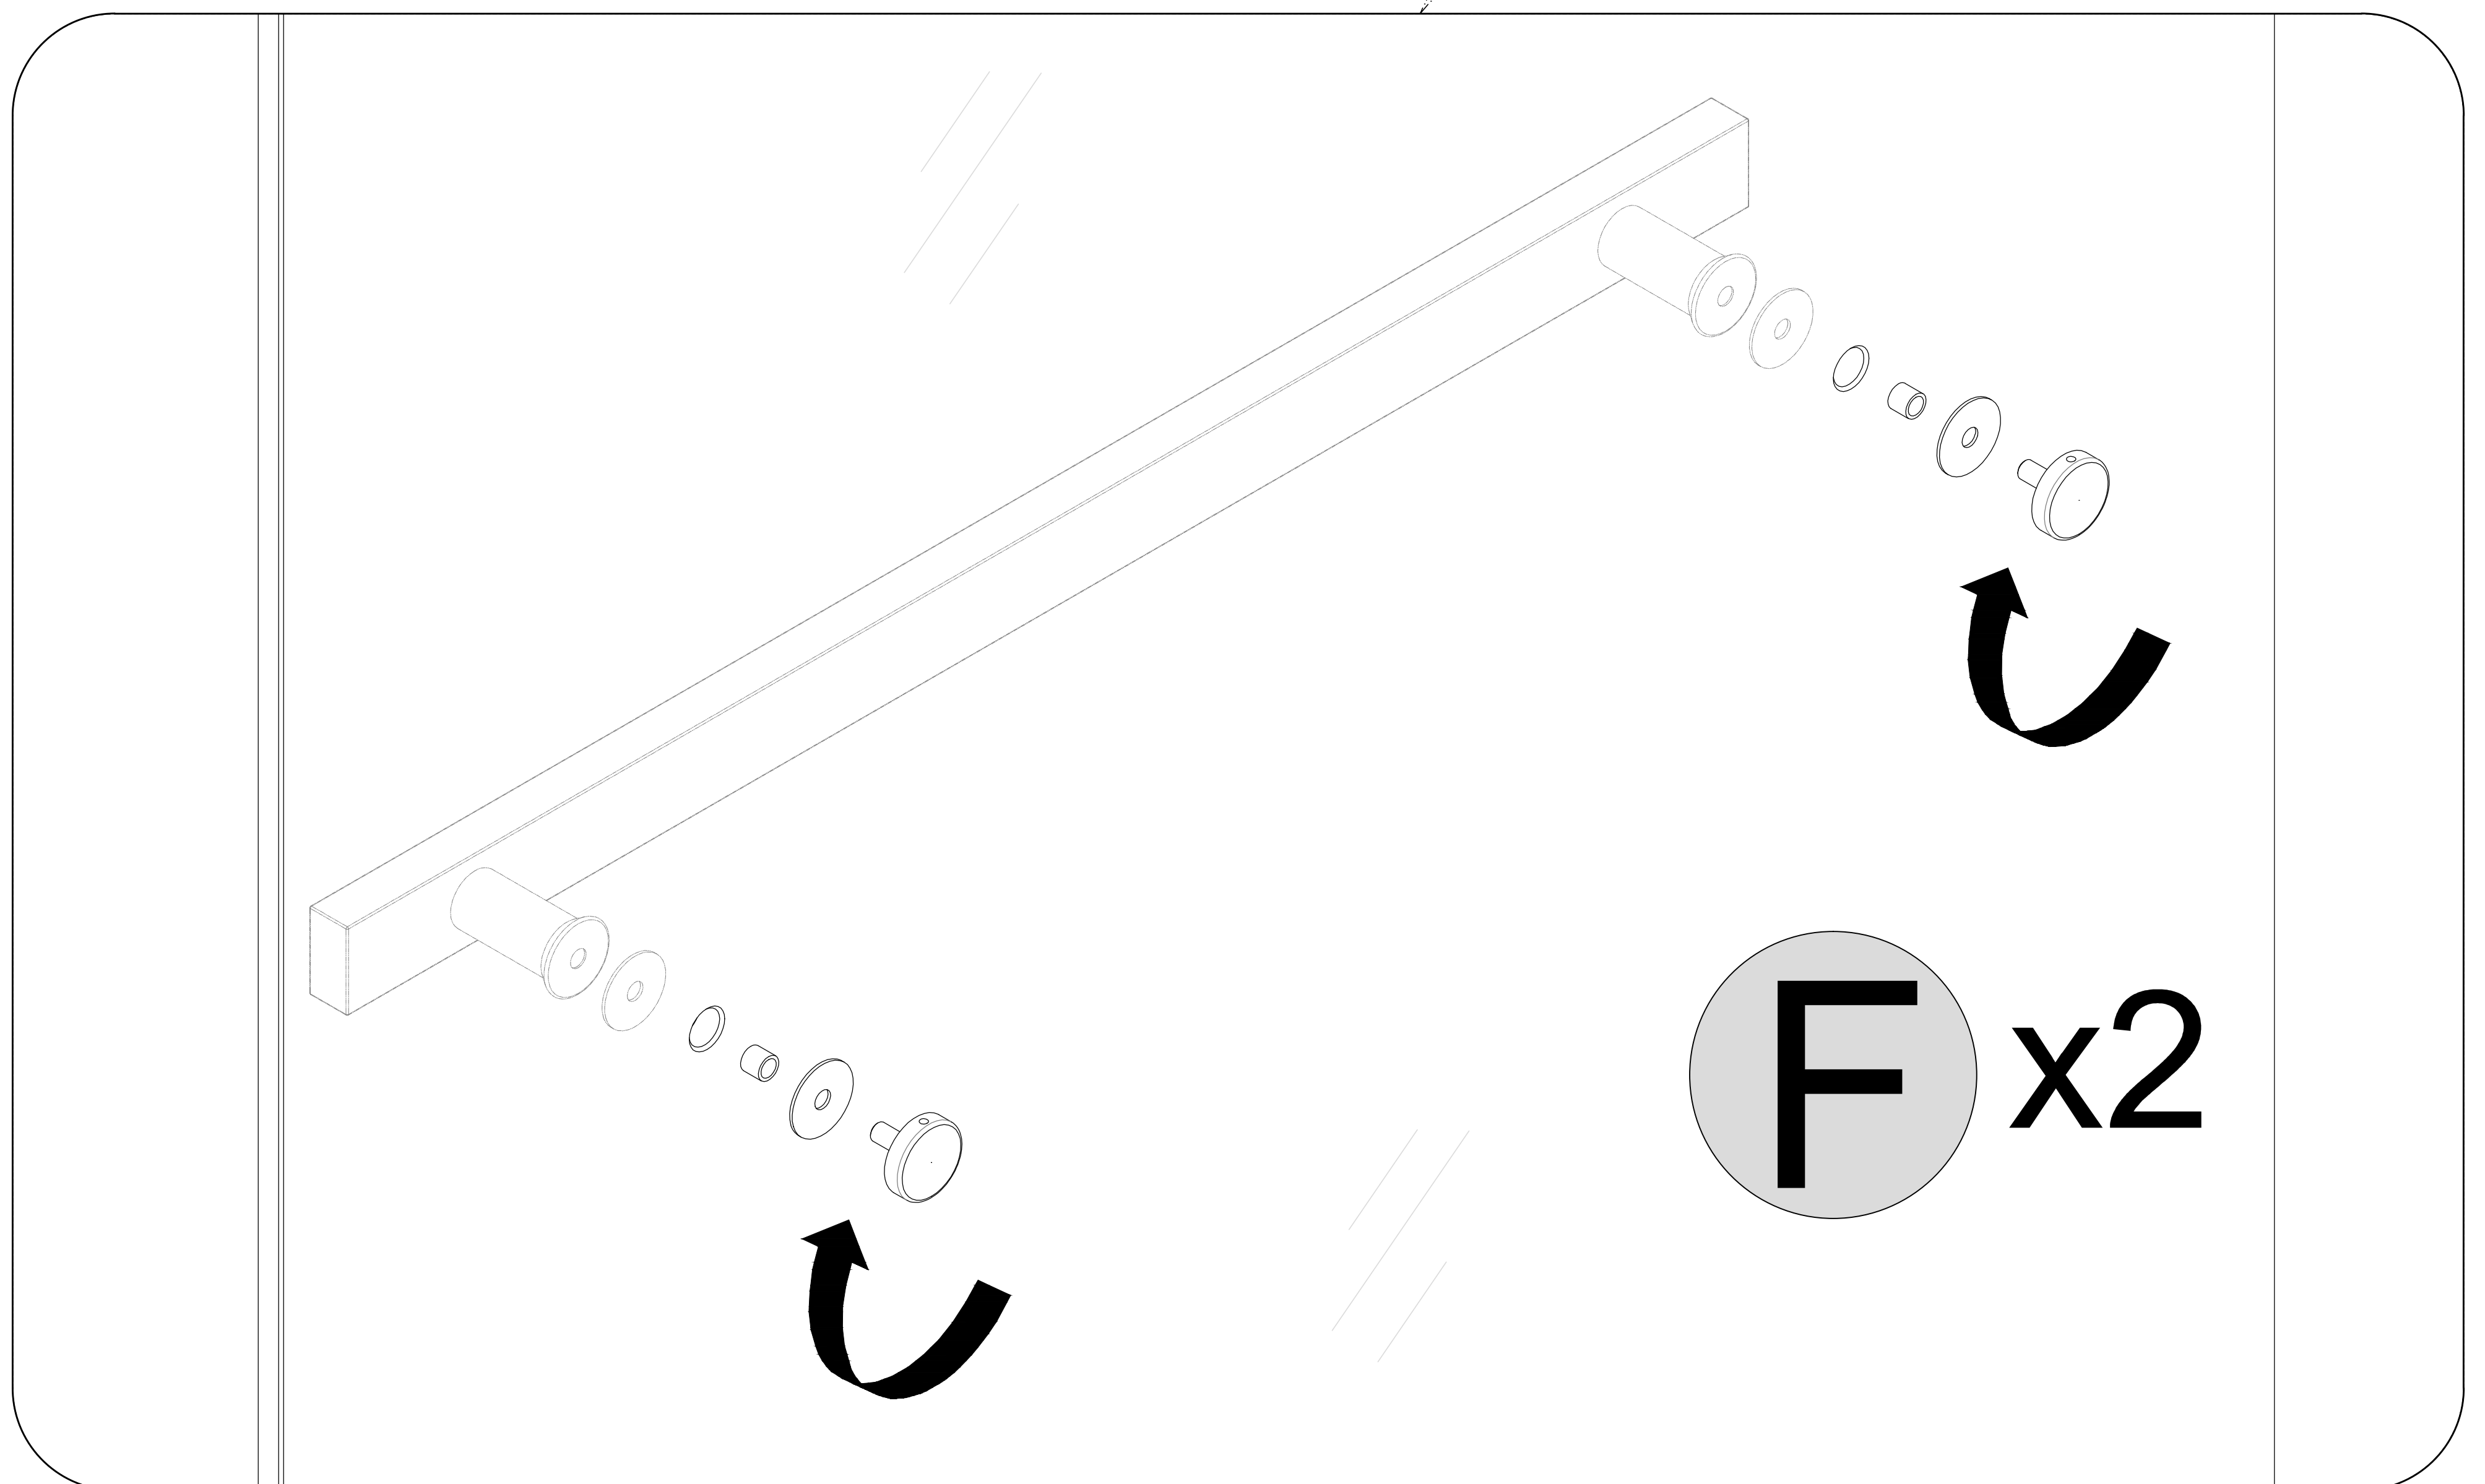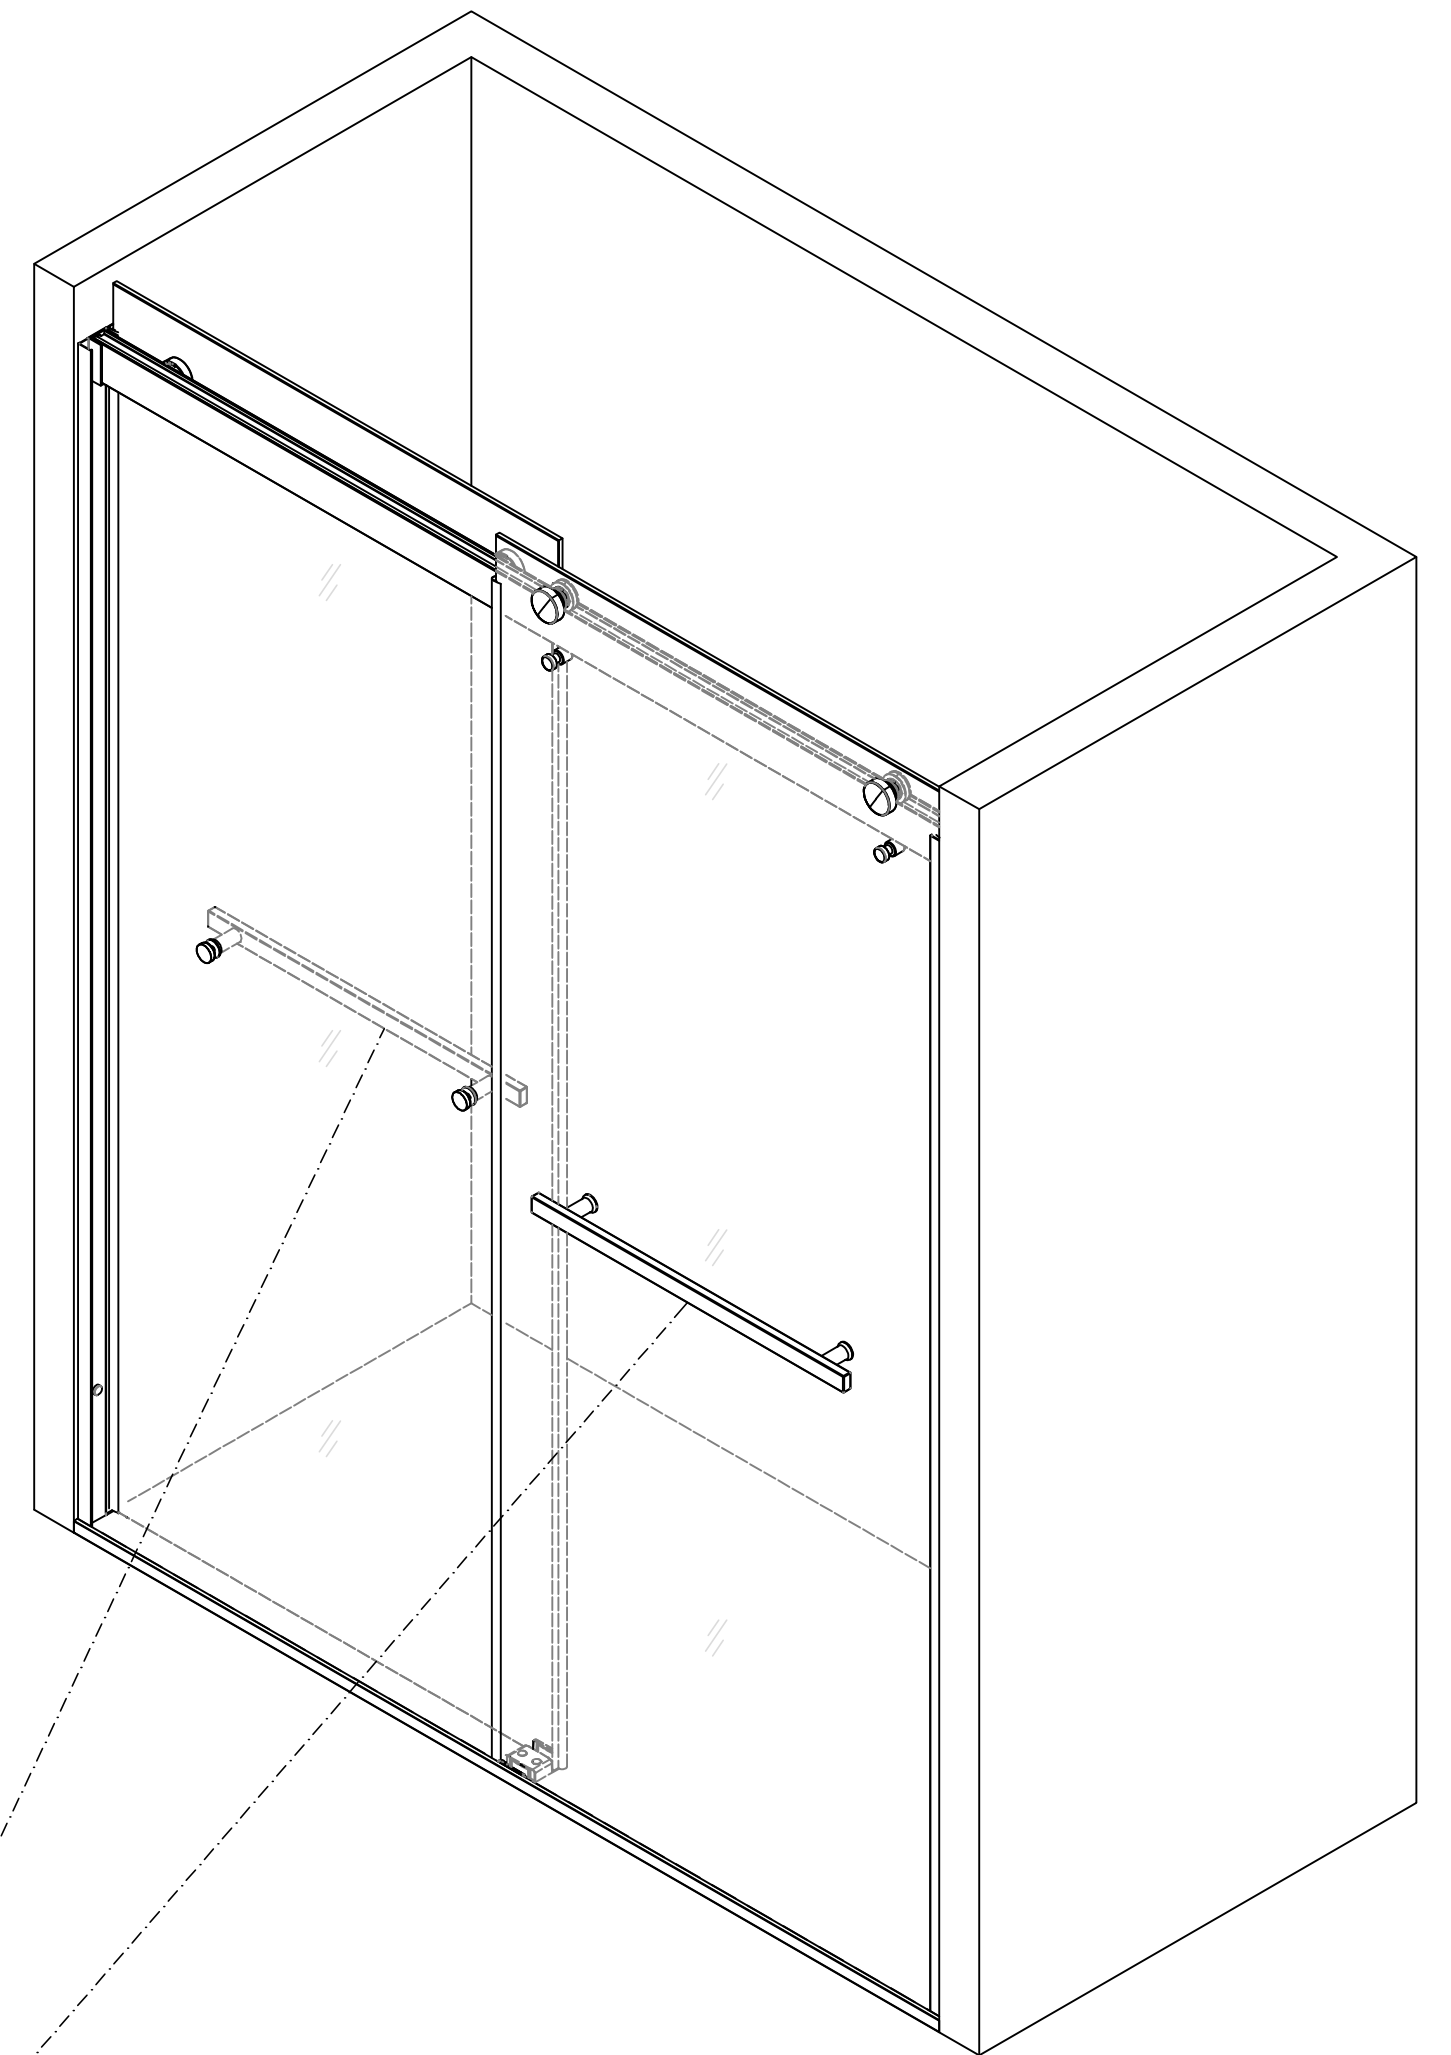


9




Attach the F shape seal to Door panel

NOTE

2 pieces on the each door.

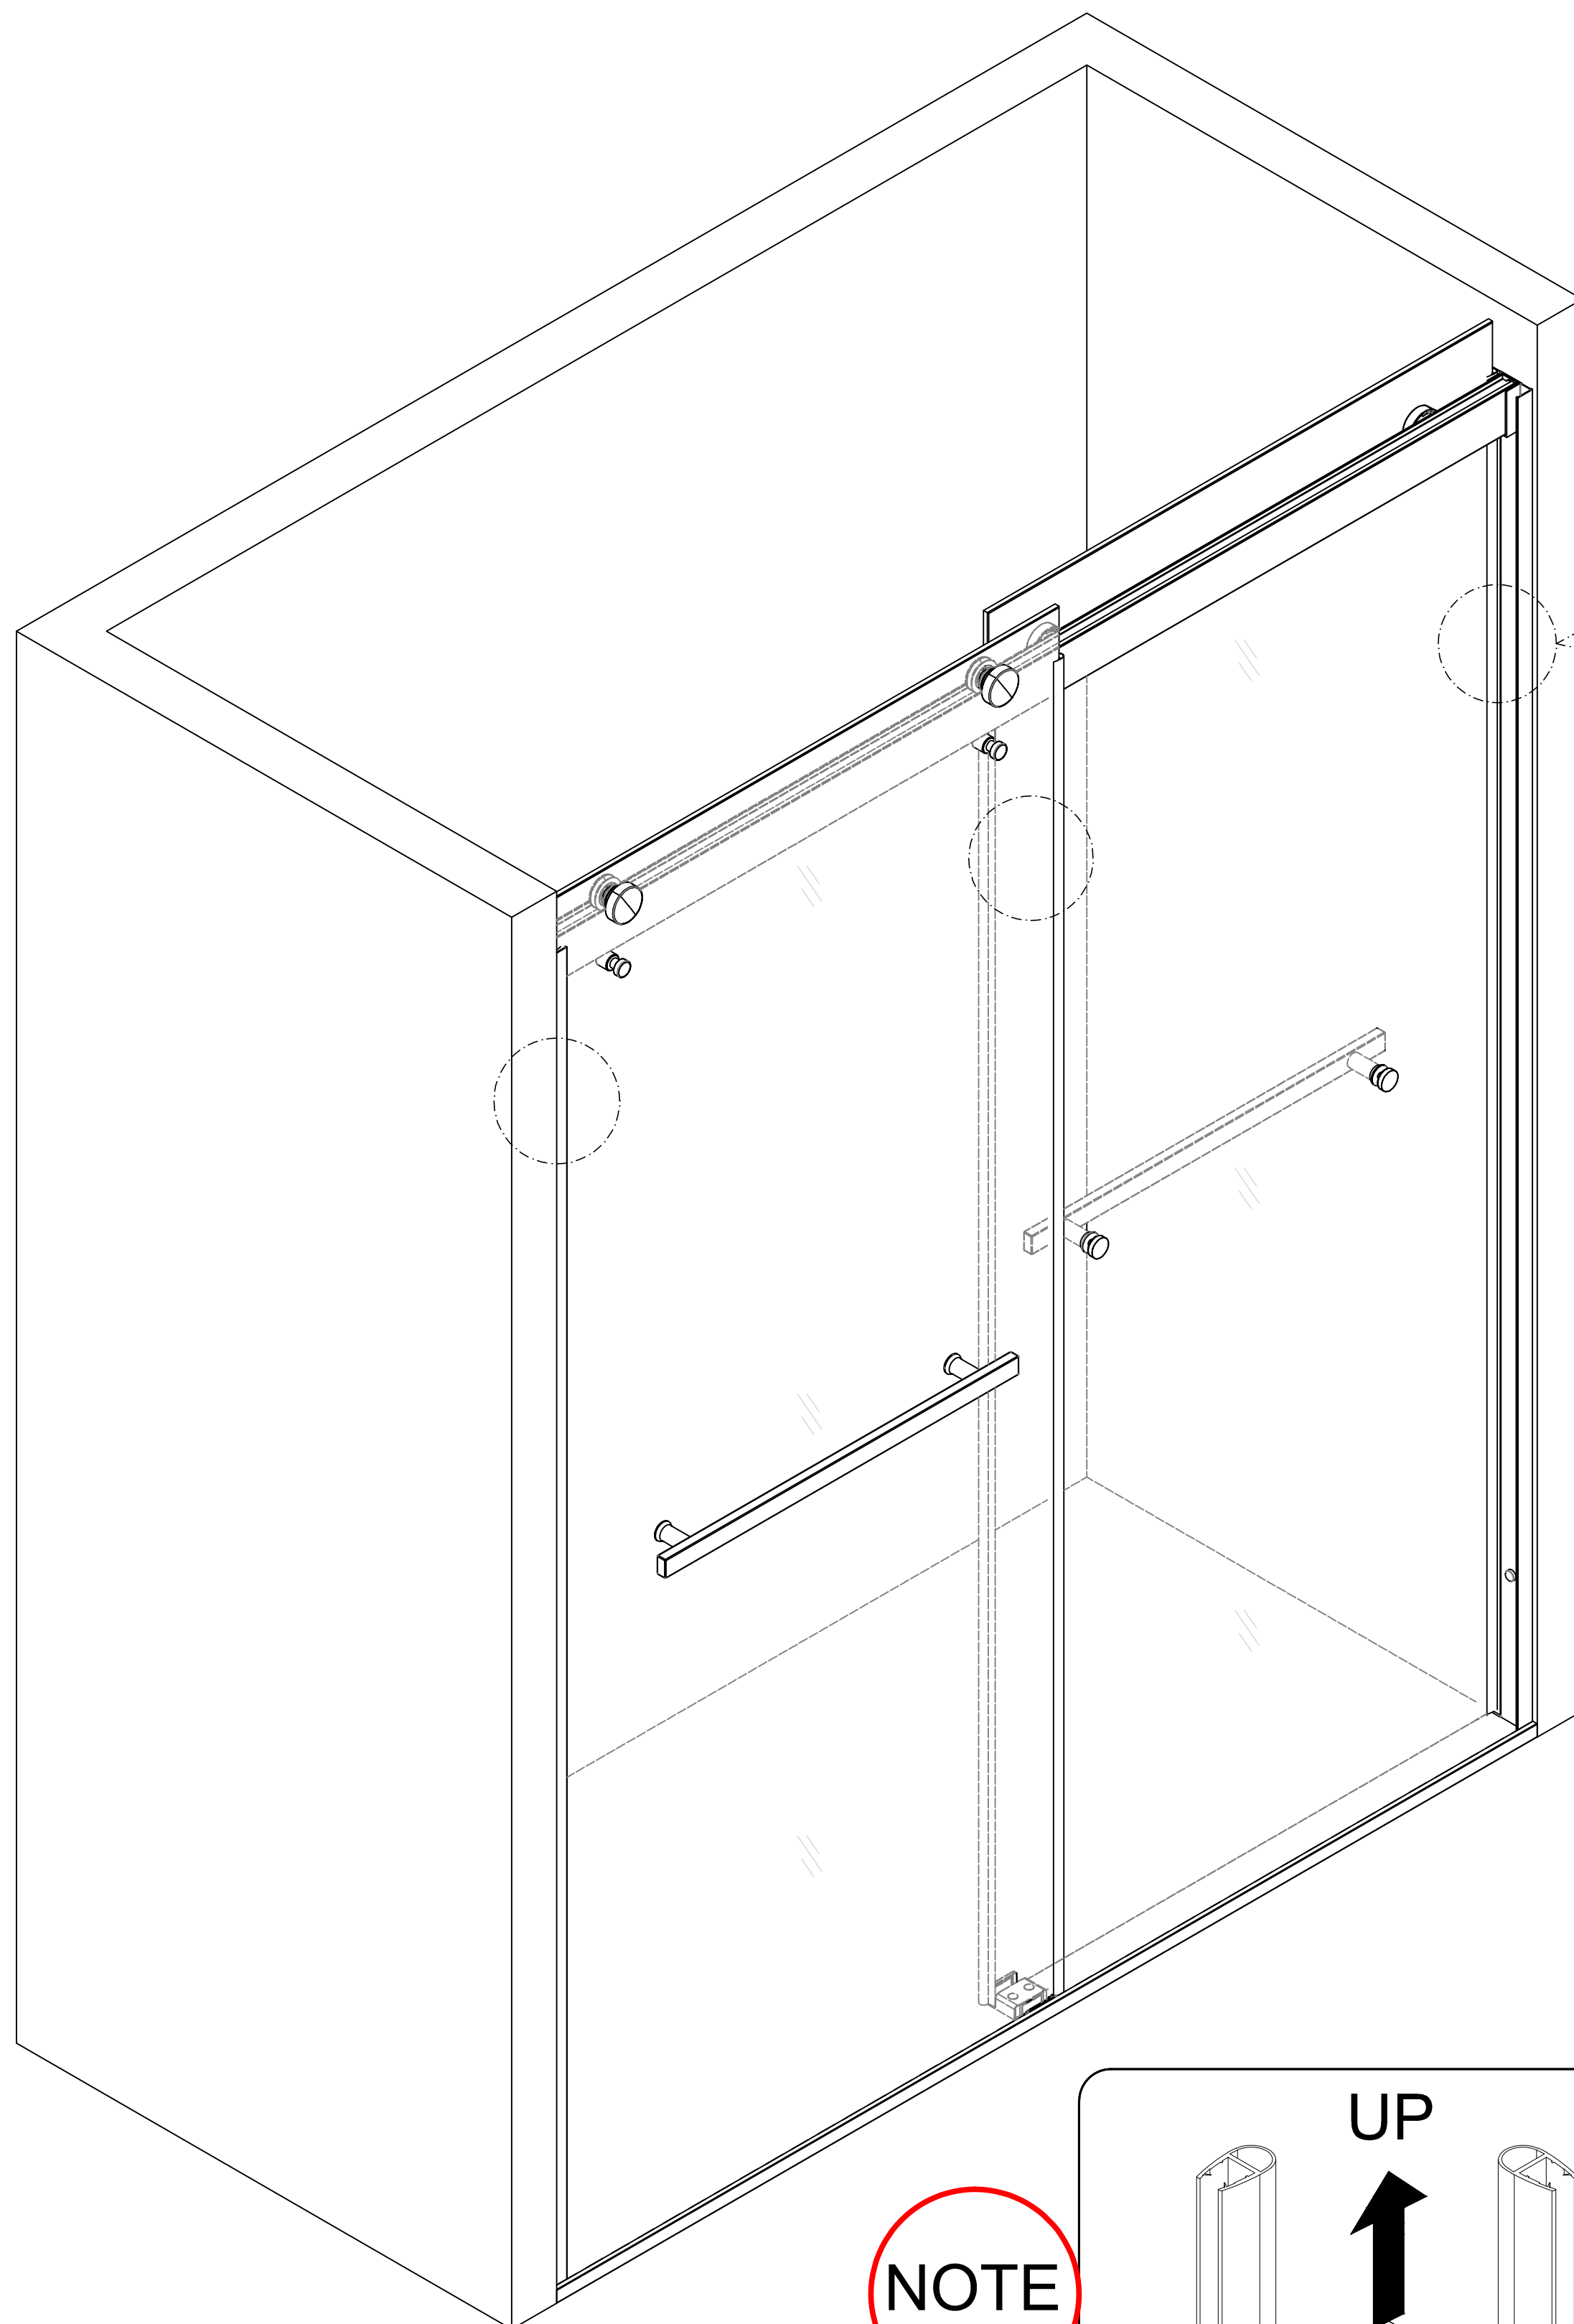

NOTE

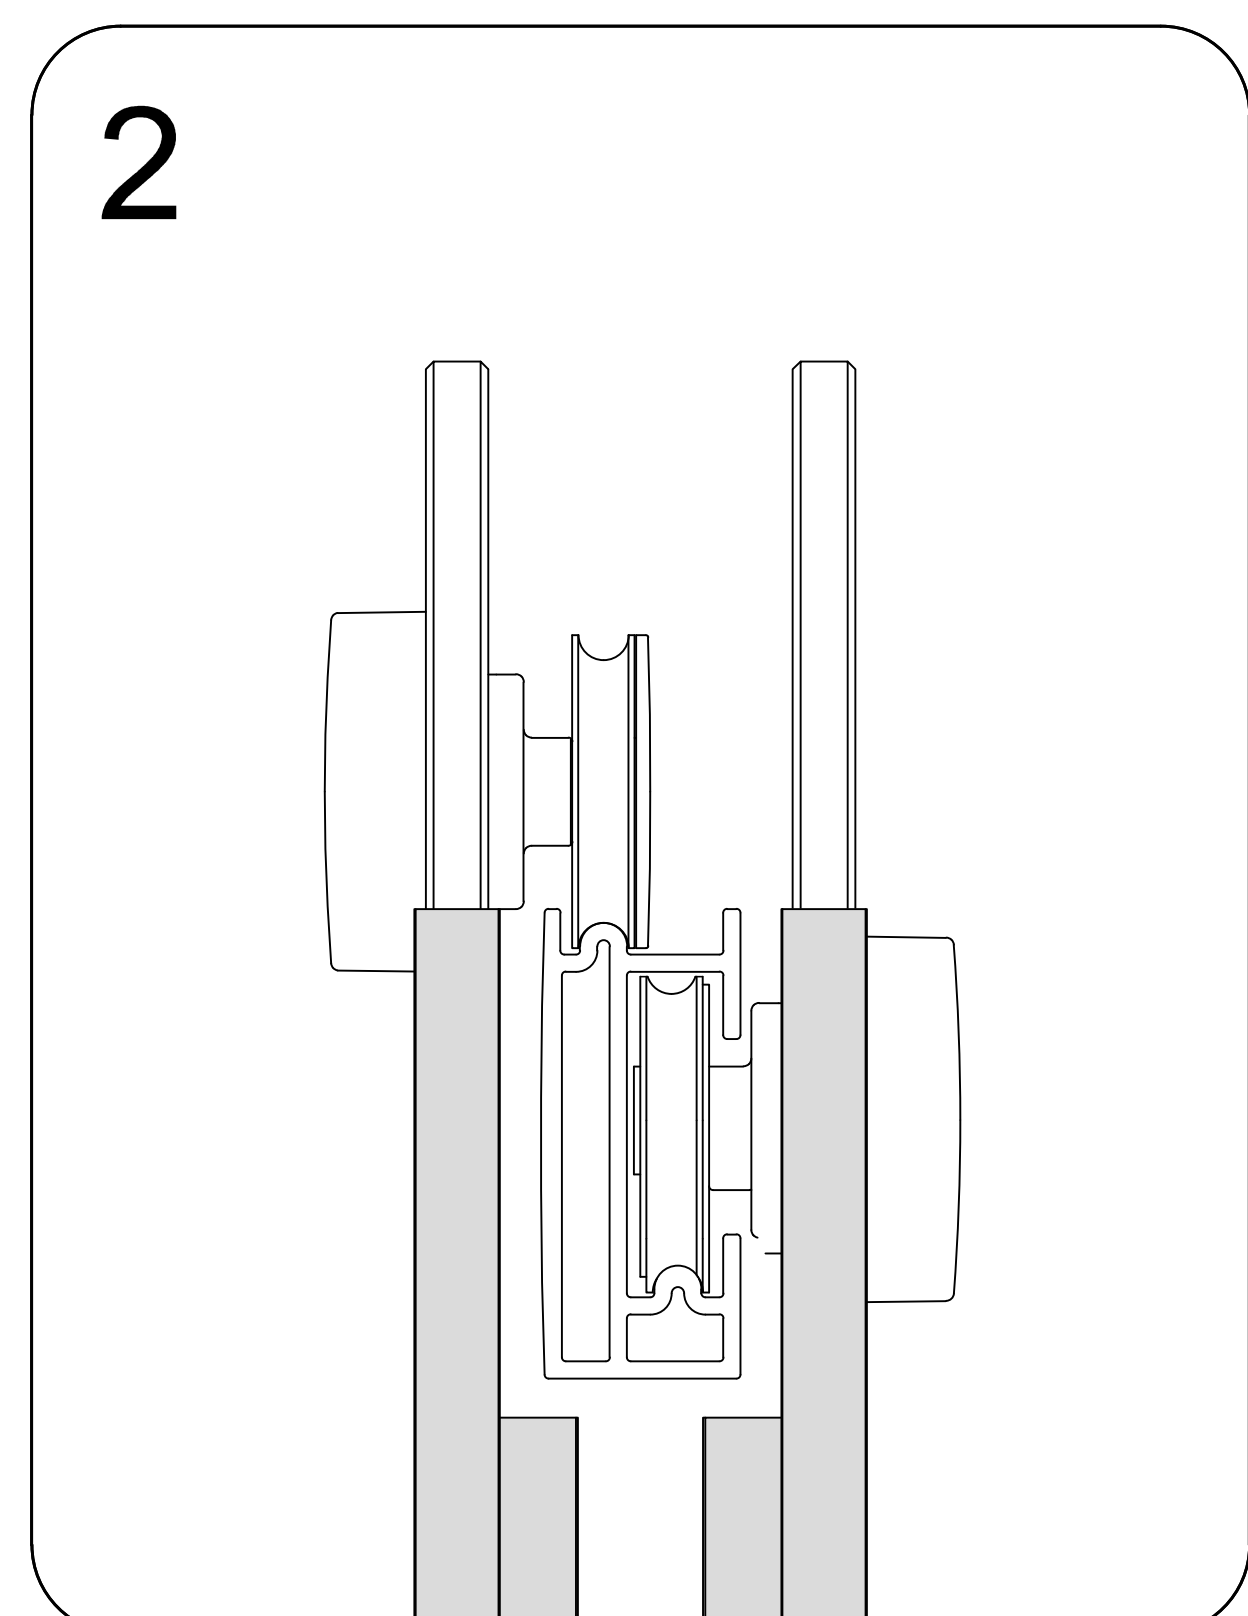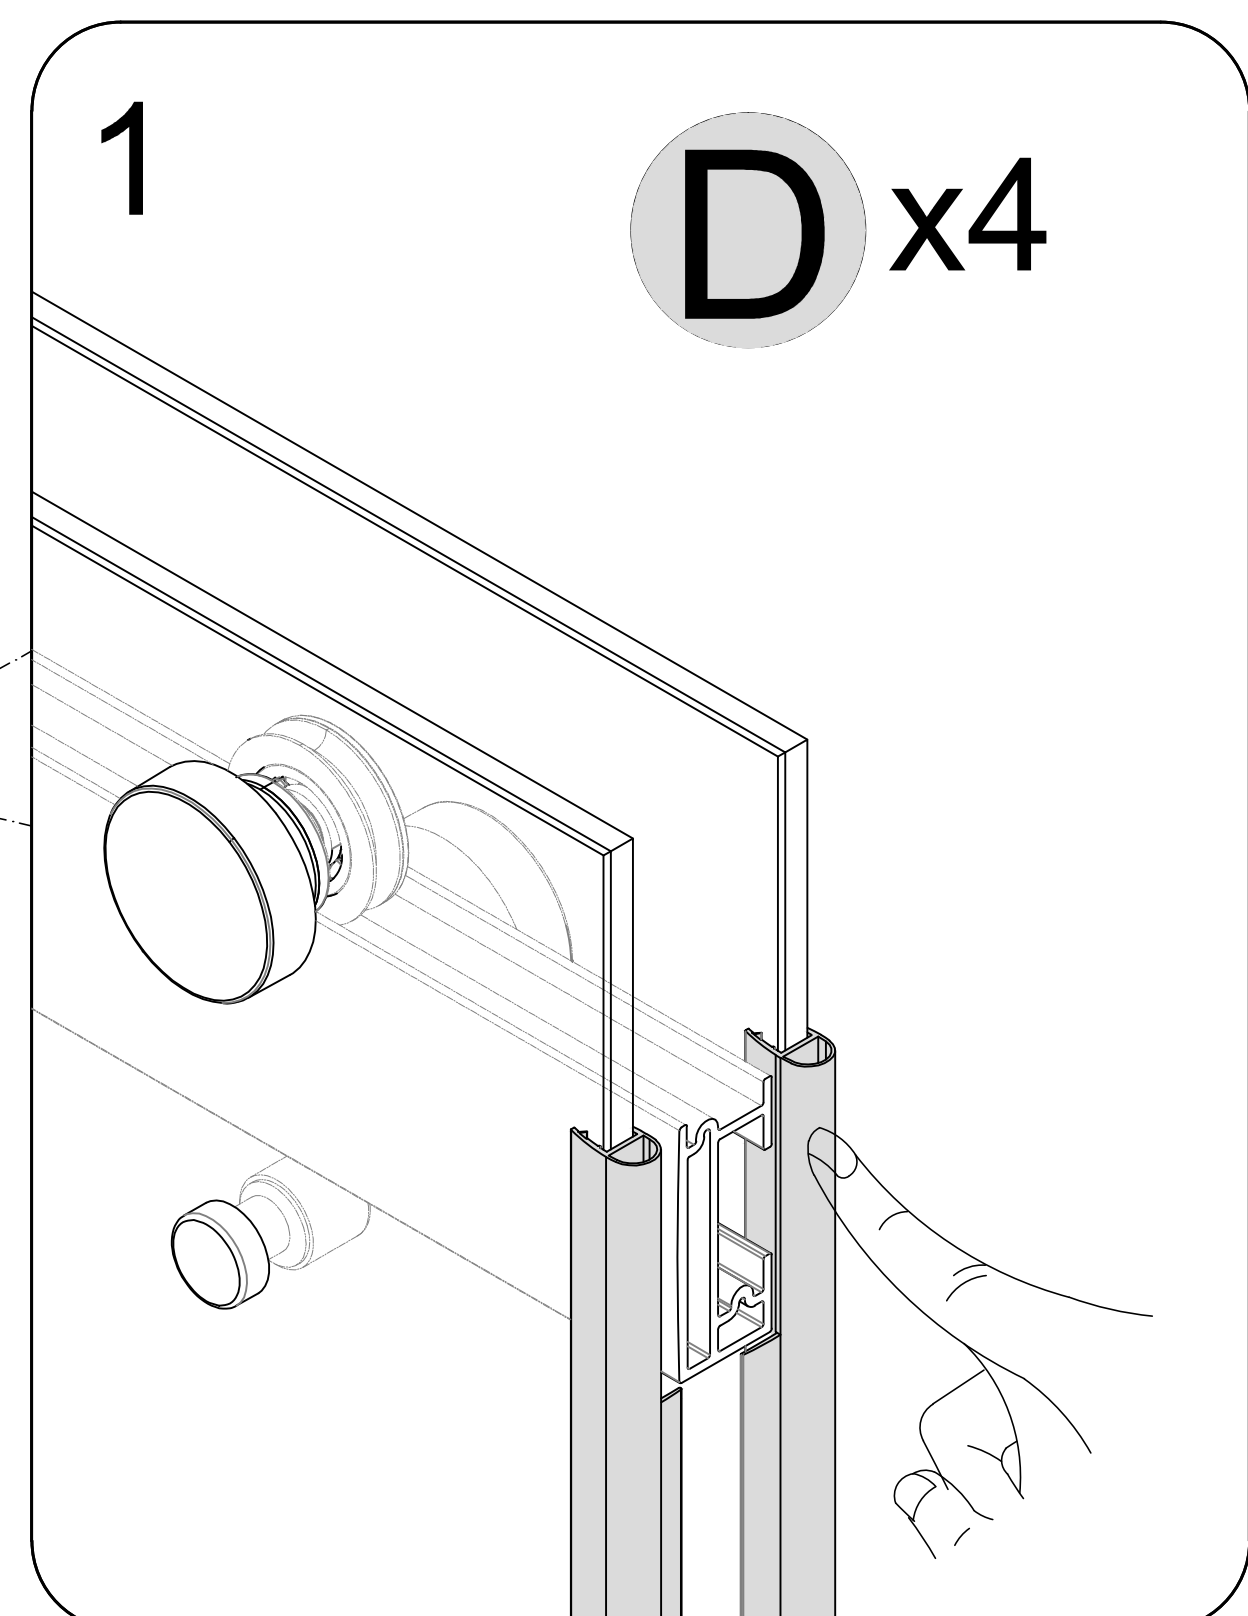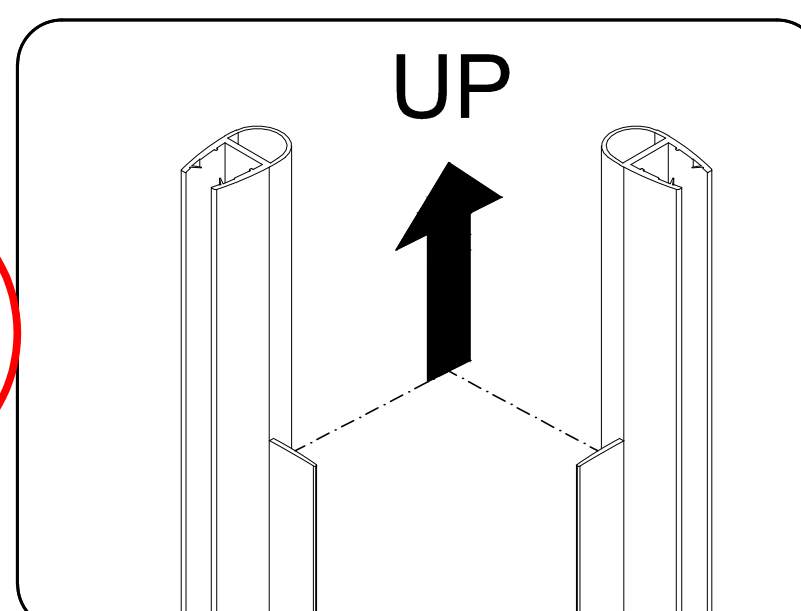

Attach the F shape seal to Door panel , The cropped end faces up

10


Check the door panel switch




!

Unscrew the screws and
adjust the wall jamb
inside and out .

1

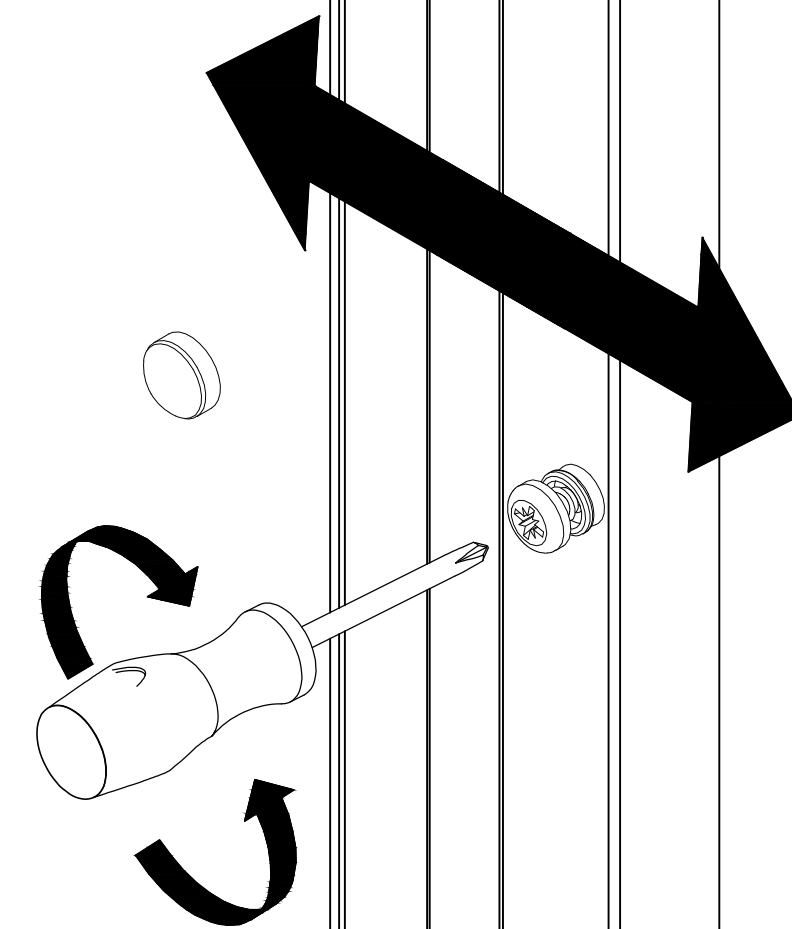

2

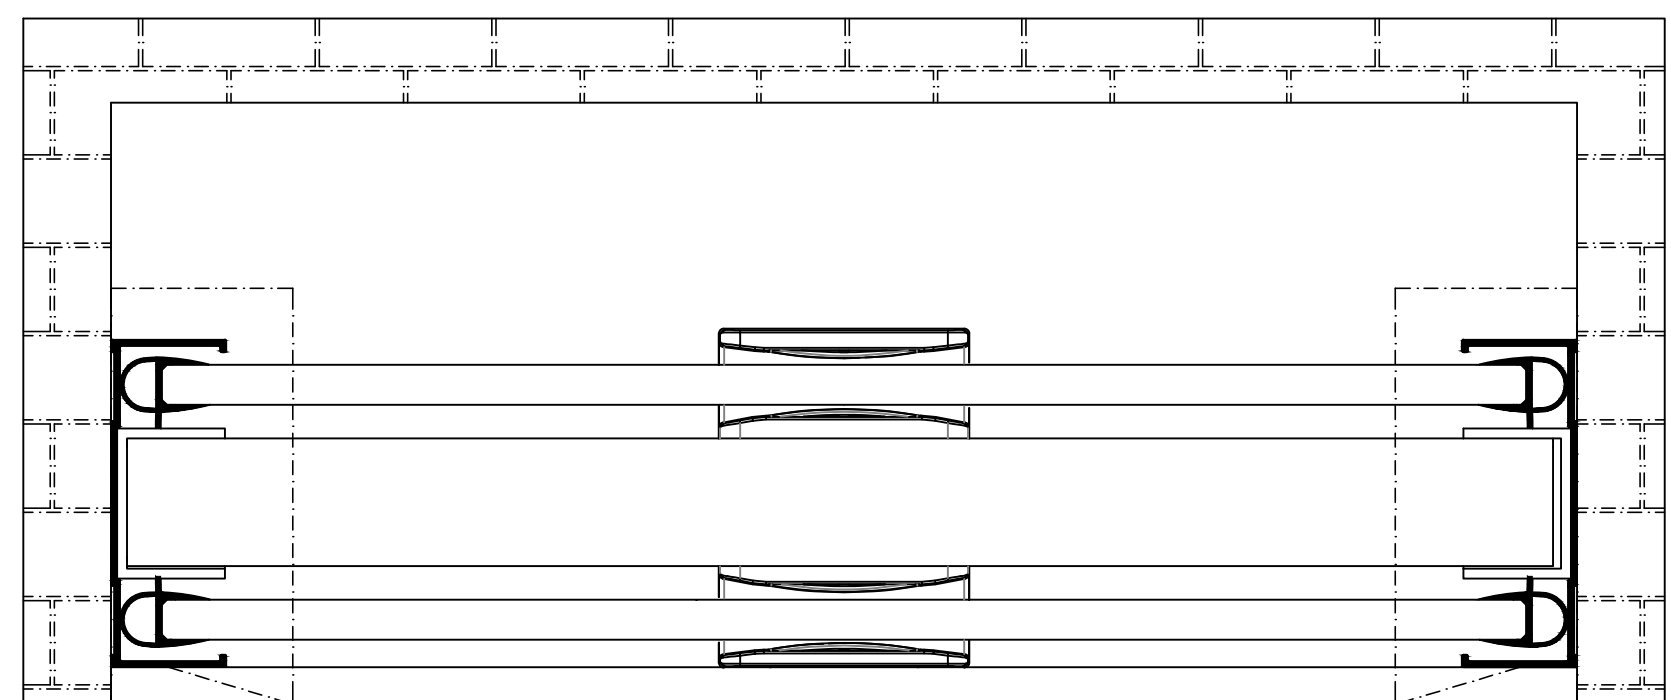

NOTE

Ensure that the door panel goes
inside the Wall Jamb.

11

SEALING

NOTE


The surfaces need to be clean and free of debris before applying silicone.

NOTE



Ensure that the Shower door closes tightly and opens smoothly.
Apply a good quality silicone sealant along the wall Jamb(C) and Bottom Rail (A) .




Allow 24 hours for the silicone to cure before using the shower.

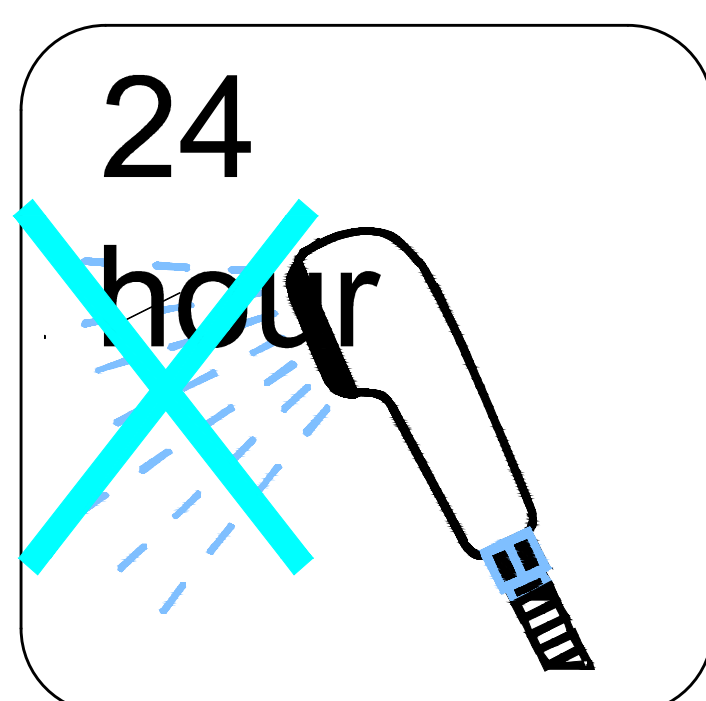



Apply Silicone Sealant,(not supplied).

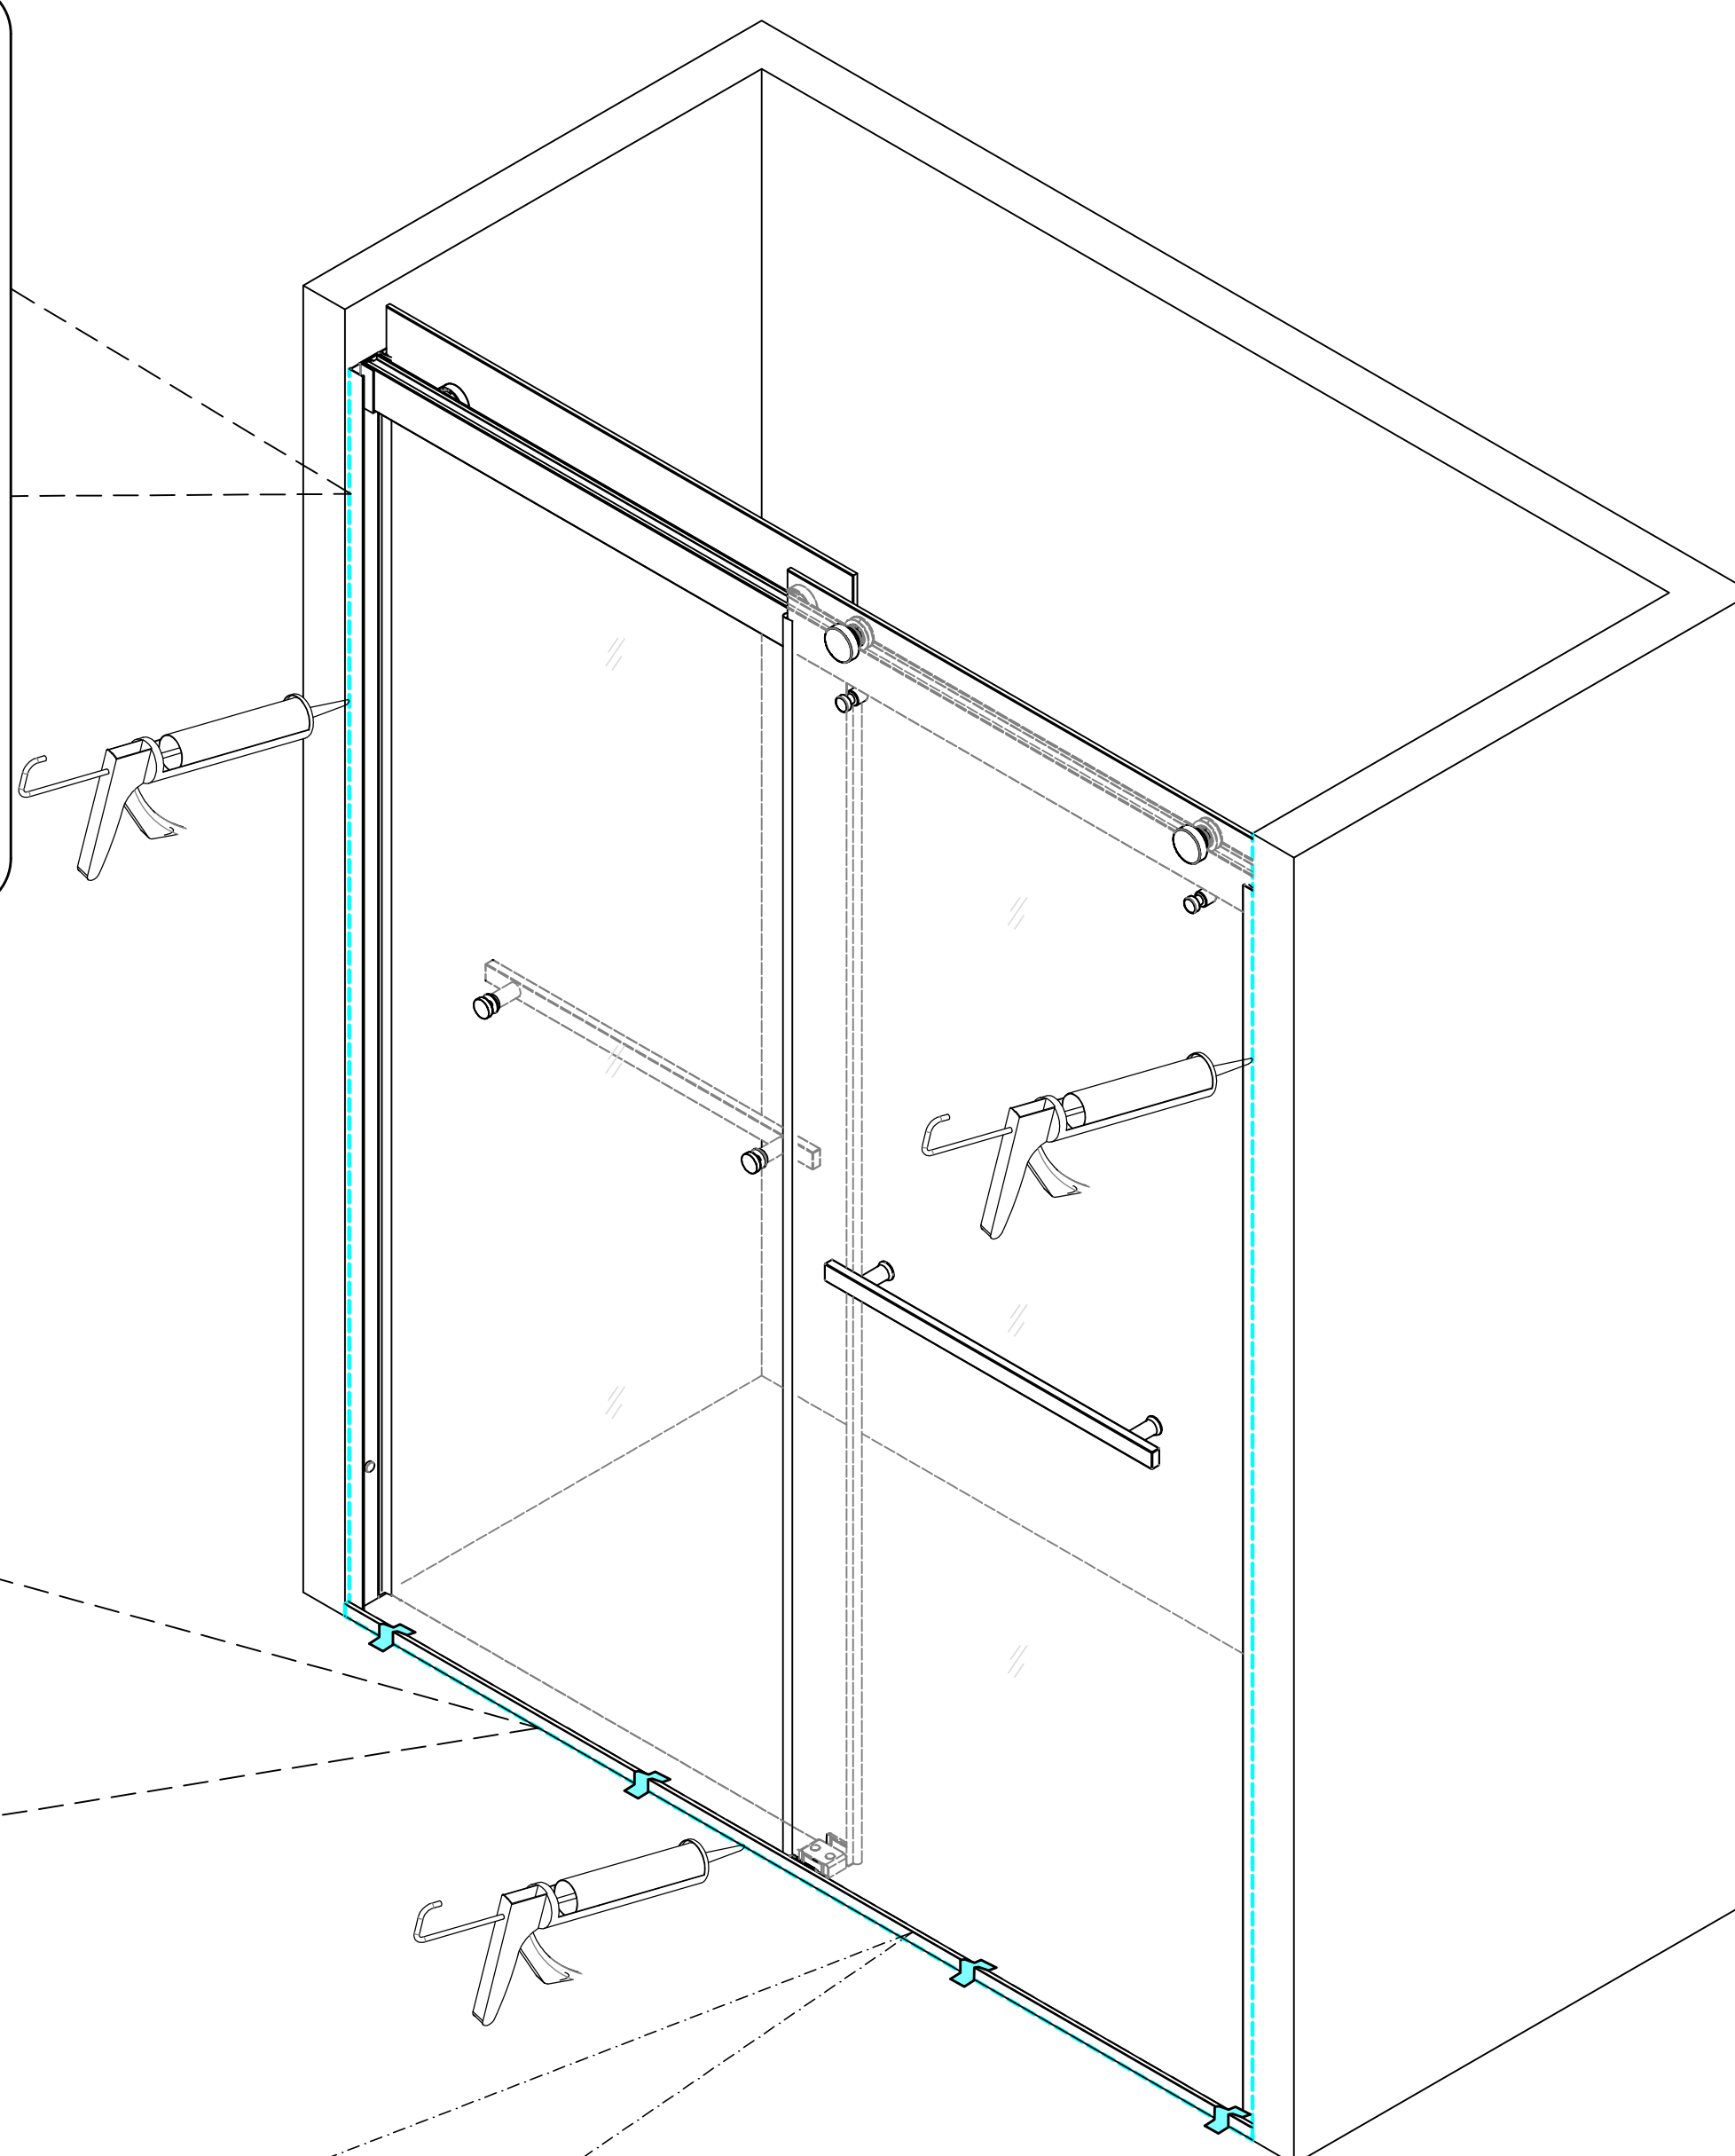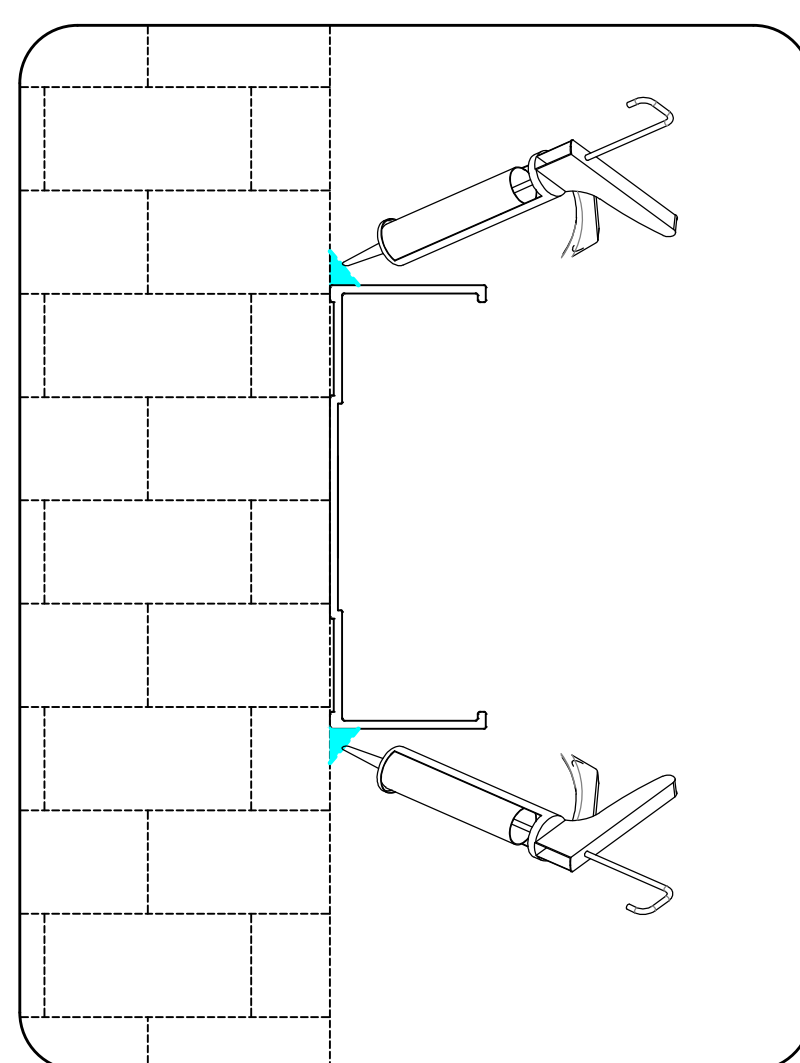

Inside View

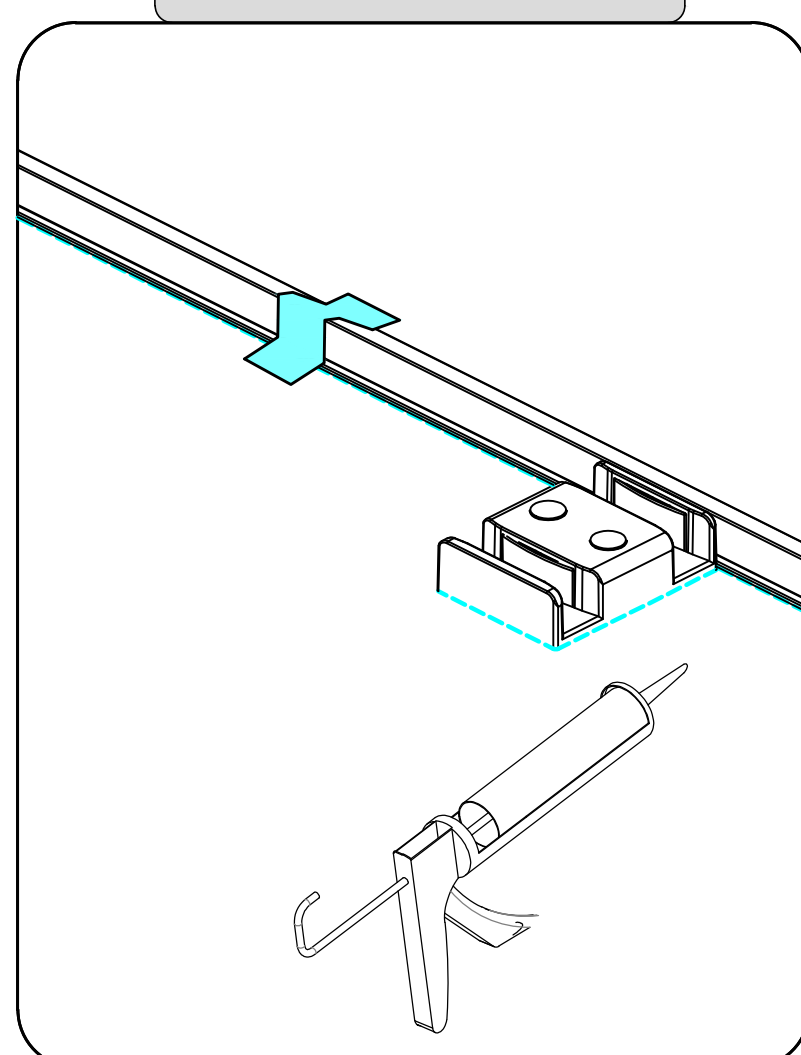

Apply silicone around the bottom rail.

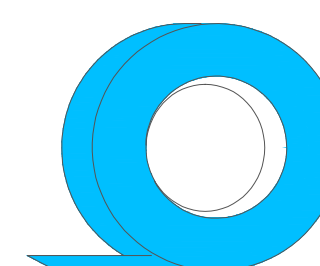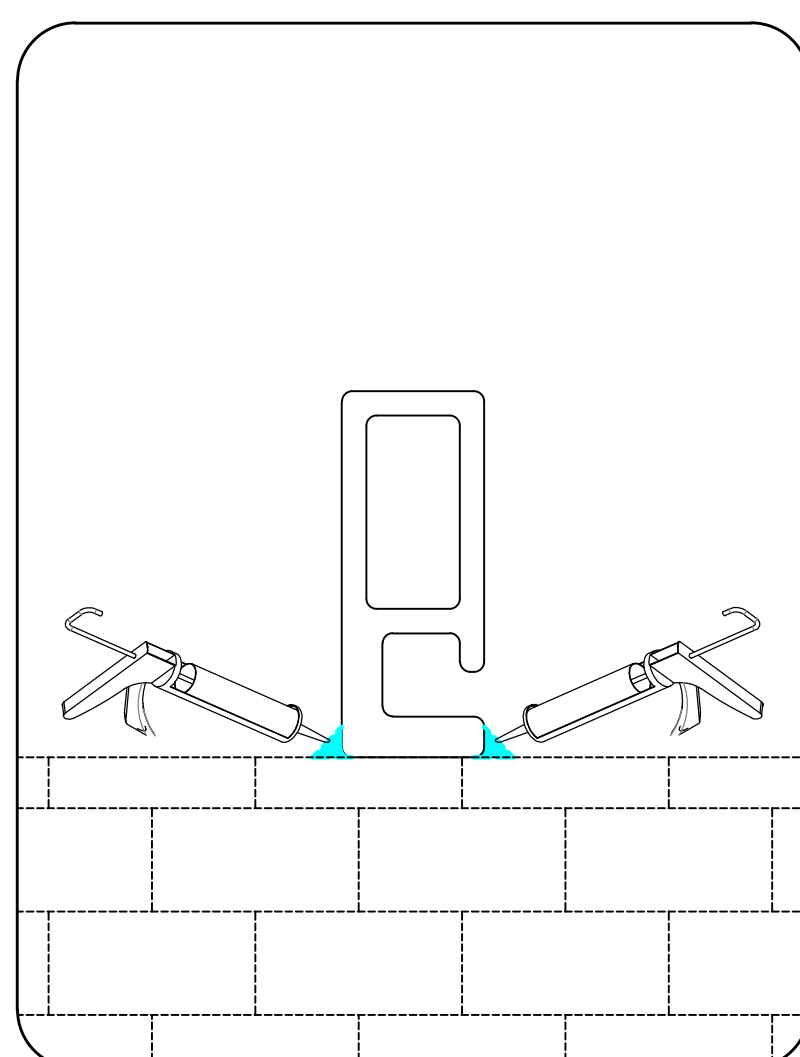

Use Painter's Tape to hold the Water seal tight in position while the silicone cures.

GrōGro