

Skip Shoe Cabinet

Parts list



Side support x 2




Top laminate x 1



Baffle plate x 3



Door inner panel x 6

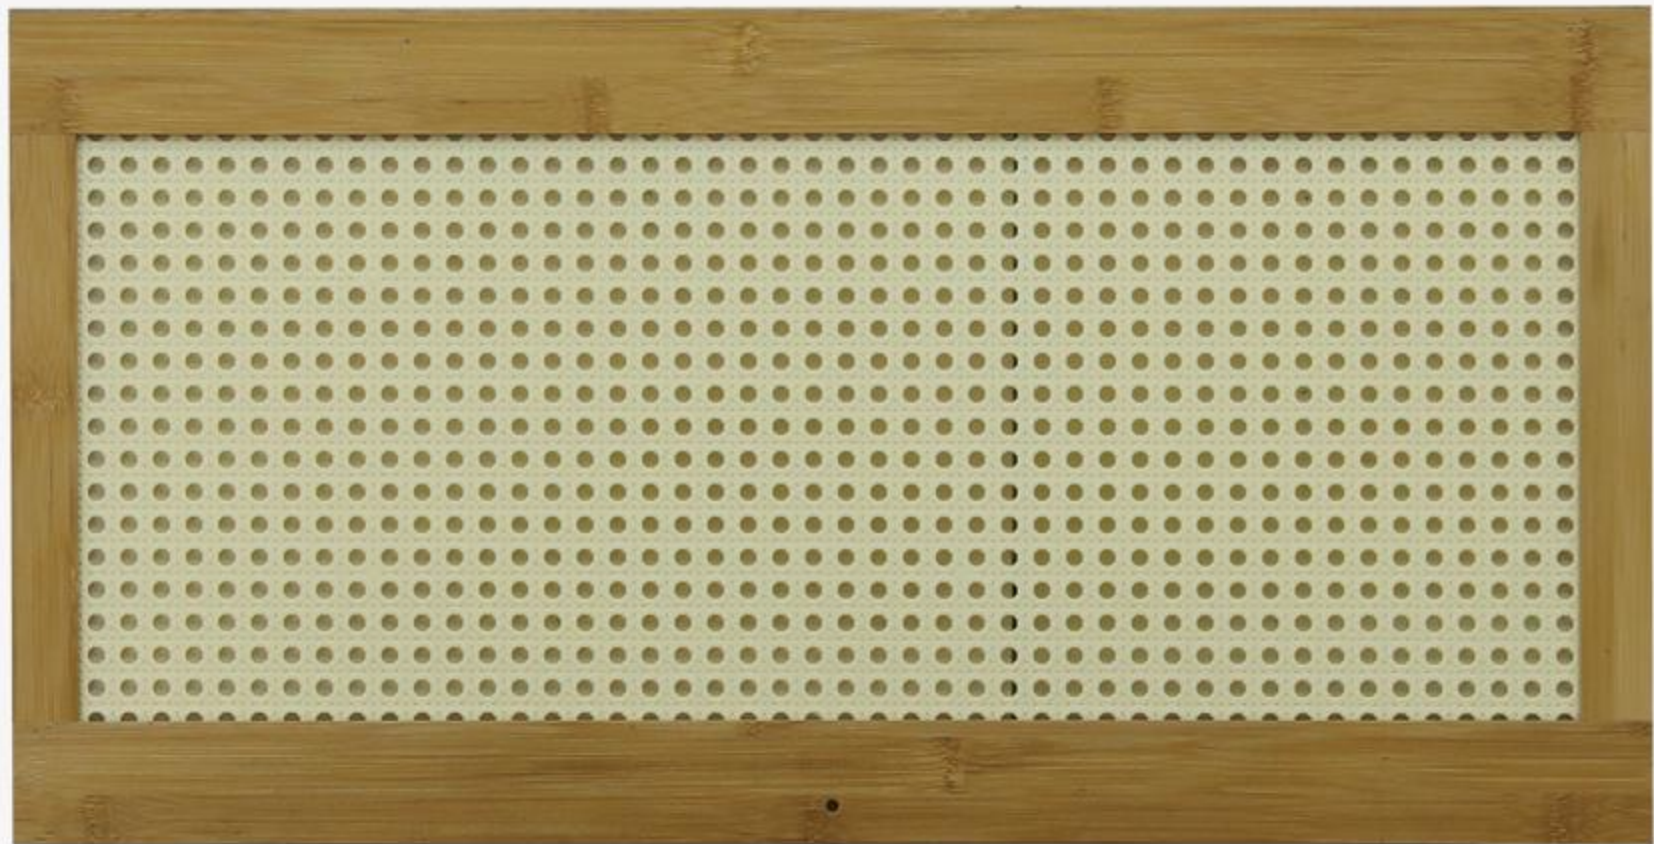

Door panel x 3



link x 2



Vertical rail x 2




Top strip x 1



Support strip x 4



Plastic baffle left x 1

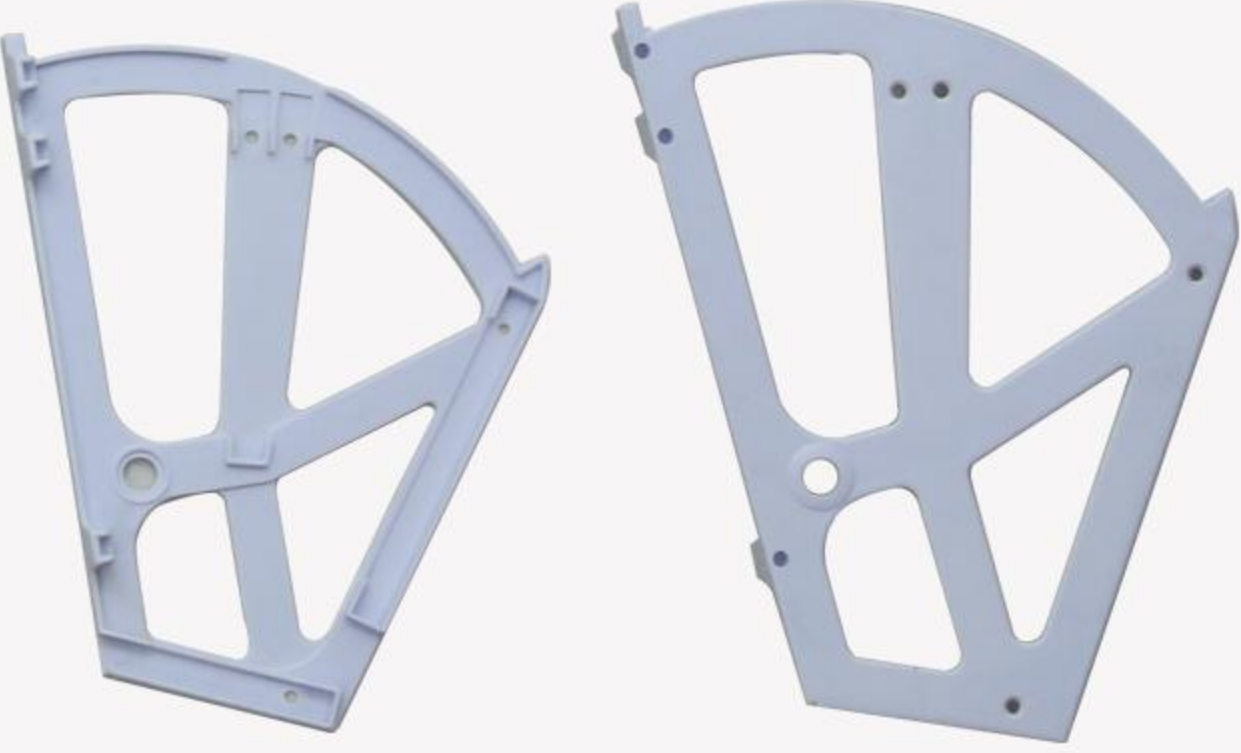

Plastic baffle right x 1



doorknob



Smooth joint



link x 8



Expansion screw nuts



Double-sided tape



Tip guard



nut



Keycard strip



Big screw



Small screw



Small flat head screws



Large flat head screws



Installation tool

Installation procedure



1.The side bracket and bracket bracket are installed with large screws



2.Take out the two support bars and install them with large screws



3.Remove top layer and install with large screws




4.Take out the other side bracket and secure it with a large screw




5.Put up shelves



6.Take out the smooth connector and insert it into the hole on the side support

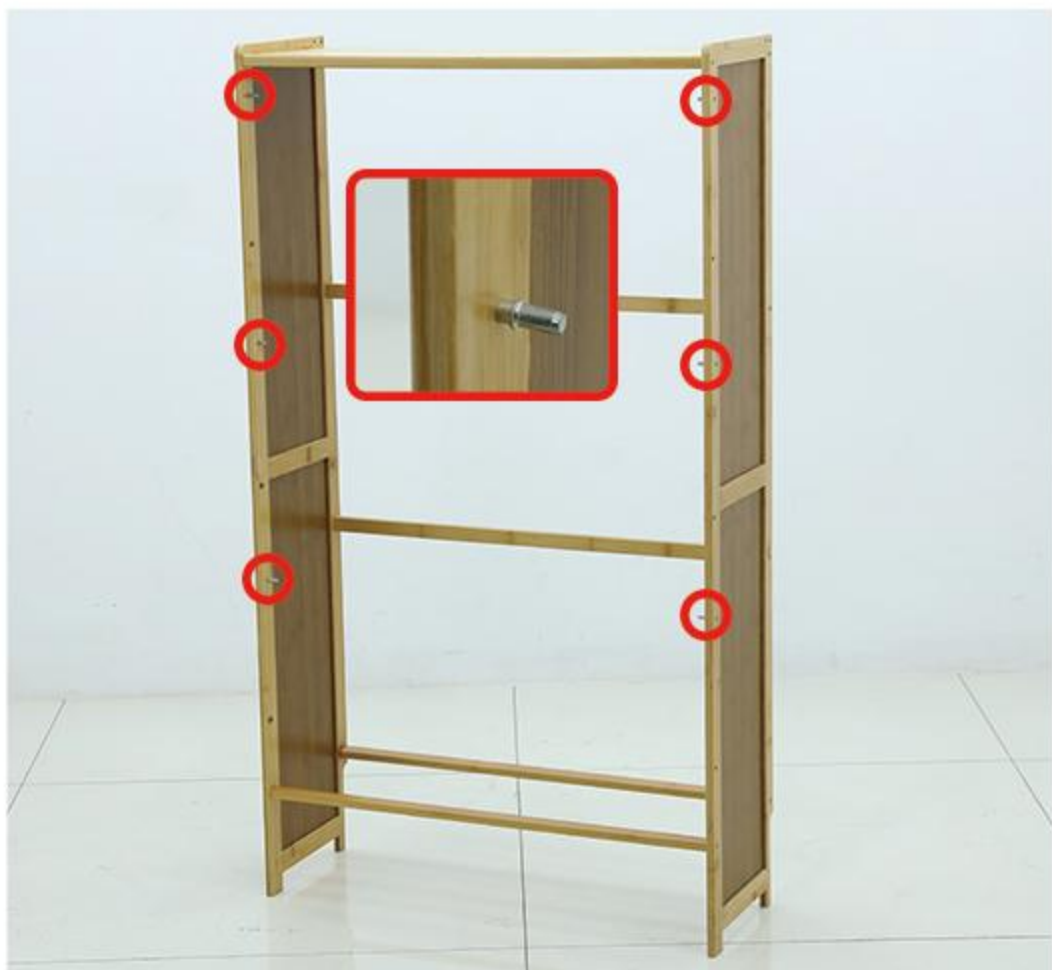

7.Take out the card and insert it into the hole on the side support

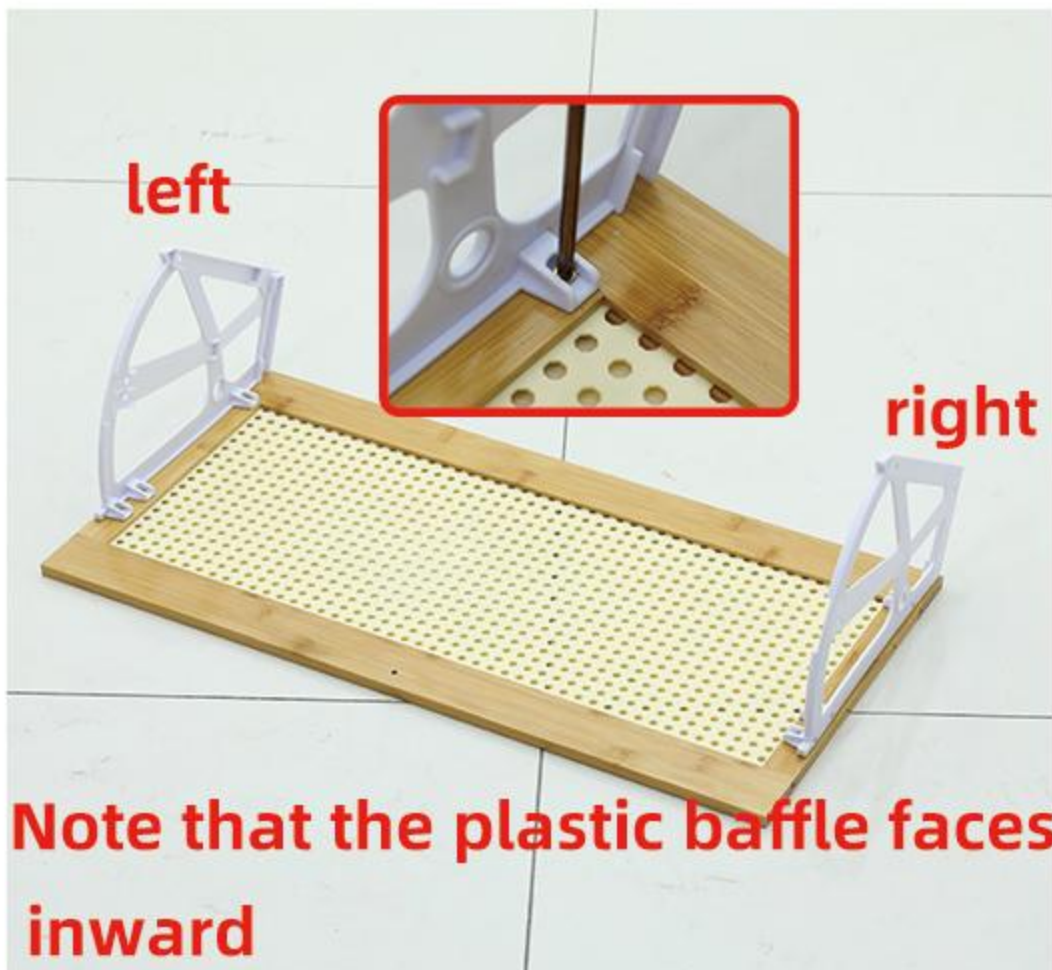

8.Take out the door panel and the plastic baffle and install it with small screws




9.Remove the baffle plate and insert it into the slot of the plastic baffle plate with small screws



10.Take out the laminate stuck into the plastic baffle card slot and install it with small screws



11.Install door handles with small flat head screws

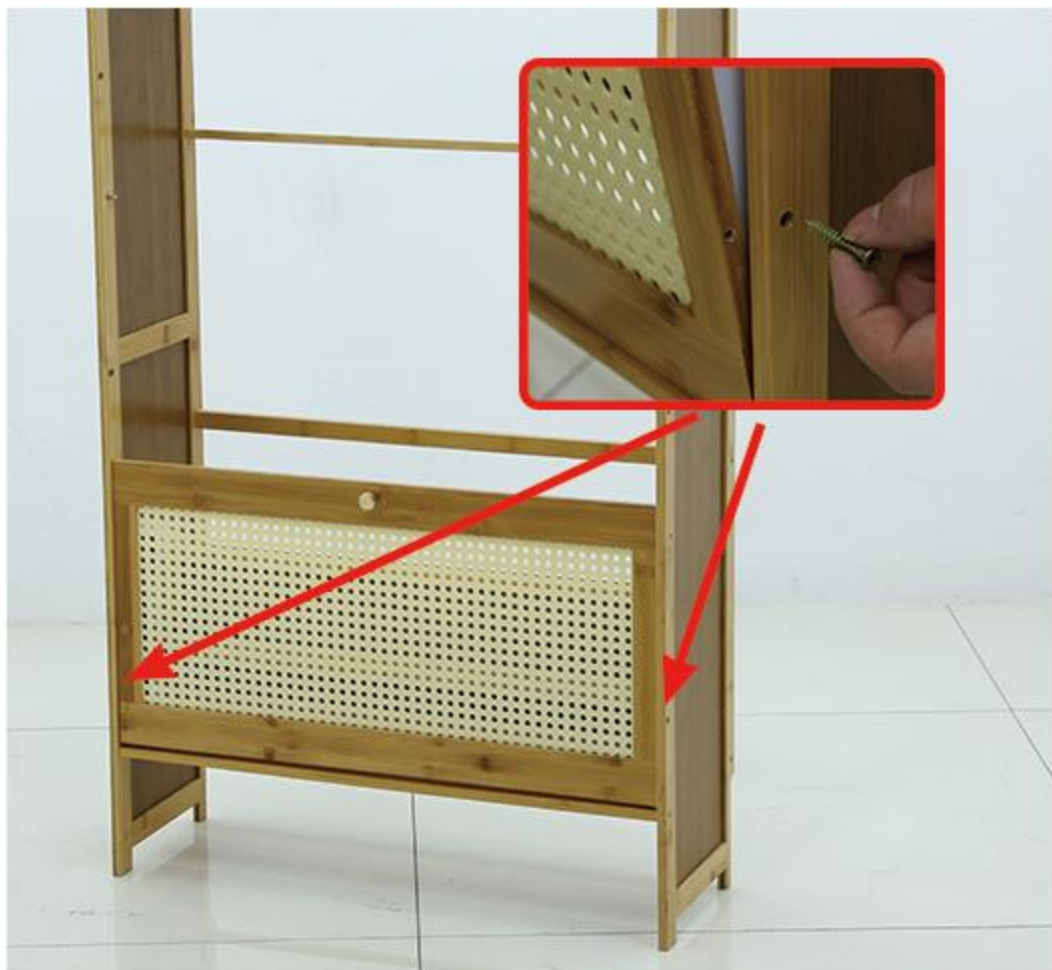

12.Then fasten the door panel to the side bracket with large screws
Large screws through the smooth connector



13.Install the remaining two door panels



14.Take out the vertical bar and secure it to the side bracket with large flat head screws and nuts



15.Take out the hook bar and install it on the vertical bar with large screws



16.Remove top stopper and install with large screws



17.Take out the hook and install it on the hook strip with small screws



18.Take out the tip guard and double-sided tape, and glue the double-sided tape on the tip guard



19.Take it out and glue it to the wall and shoe rack



20.If you are afraid that it is not firm enough, you can also install it with expansion screws in the middle hole of the hook stop strip