

Parts List For Bed

HARDWARE BAG


- (1) 1/4-20 X 3/4" FLAT ALLEN HEAD SCREW- 8
- (2) 1/4" ID X 5/8" OD FLAT METAL WASHER- 18
- (3) 1/4-20 X 1" FLAT ALLEN HEAD SCREW-8
- (4) 1/4" ID SPRING METAL WASHER - 8
- (5) 1/4-20 X 2 1/2" FLAT ALLEN HEAD SCREW-2
- (6) 1/4-20 HEX NUT -2
- (7) 4MM ALLEN WRENCH- 1
- (8) 10MM OPEN WRENCH-1

BED CARTON

- (9) HEADBOARD PANEL- 1
- (10) EXTENSION LEG-2
- (11) FOOTBOARD PANEL-1

SIDE RAIL CARTON

- (12) SIDE RAIL- 2
- (13) CROSS RAIL- 2
- (14) CENTER SUPPORT RAIL- 1
- (15) DOUBLE END PLASTIC CAP- 15 FOR FULL BED
(16 FOR QUEEN AND KING BED)
- (16) SINGLE END PLASTIC CAP- 30 FOR FULL BED
(32 FOR QUEEN AND KING BED)
- (17) WOOD SLATS- 30 FOR FULL BED
(32 FOR QUEEN AND KING BED)

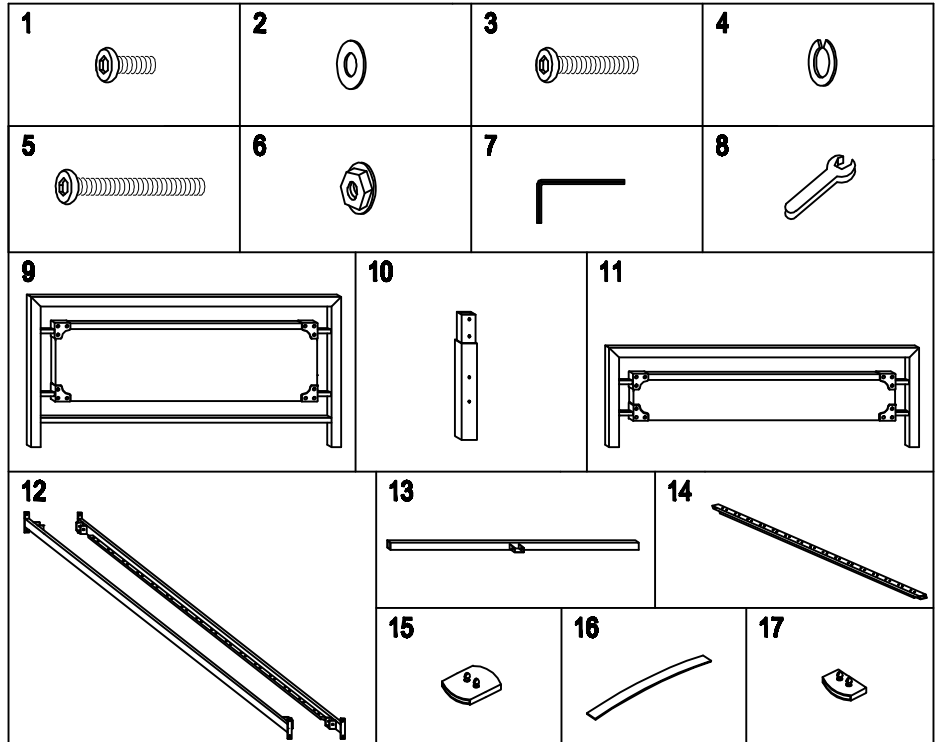

SAVE ALL PACKAGING MATERIALS UNTIL PRODUCT IS FULLY ASSEMBLED. HARDWARE AND SMALL PIECES MAY NOT BE SEEN AND COULD BE ACCIDENTALLY DISCARDED WITH PACKAGING MATERIALS.

Instruction Sheet

NOTE: FOR EASY ASSEMBLY YOU NEED THE HELP OF OTHER PERSON.

Step 1- Assembly of Extension Leg.

- Align top reduction on leg extension (10) with bottom of headboard panel (9) post.
- Carefully insert extension leg (10) into bottom of headboard panel (9) post. SEE FIGURE 1
- Secure extension leg (10) with screw (1) and flat metal washer (2). Use Allen wrench (7).


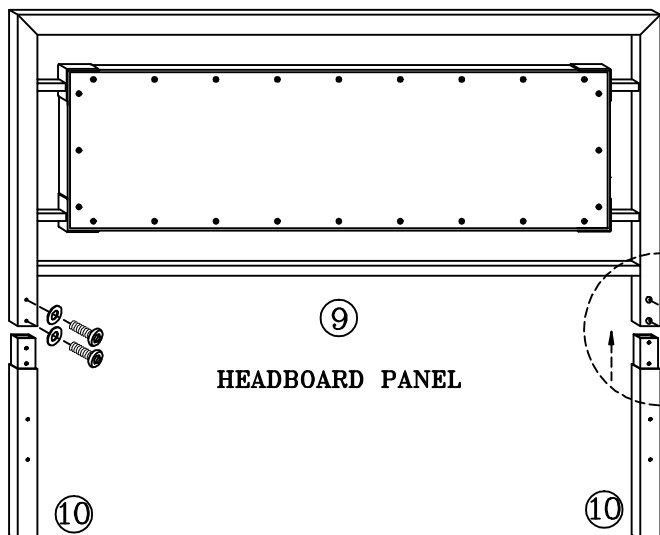



FIGURE 1

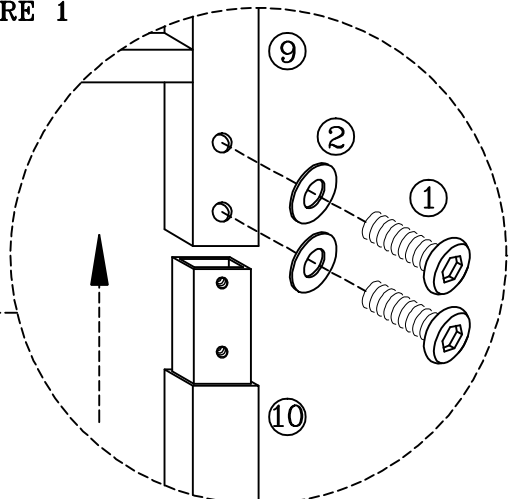

Instruction Sheet

Step 2- Assembly of Side Rails.

- Align threaded insert on extension leg (10) with pilot holes on side rails (12) metal bracket. SEE FIGURE 2
- Secure side rails (12) with screws (3), spring washer (4) and flat metal washer (2). Use Allen wrench (7).
- Repeat same steps with footboard panel (11).

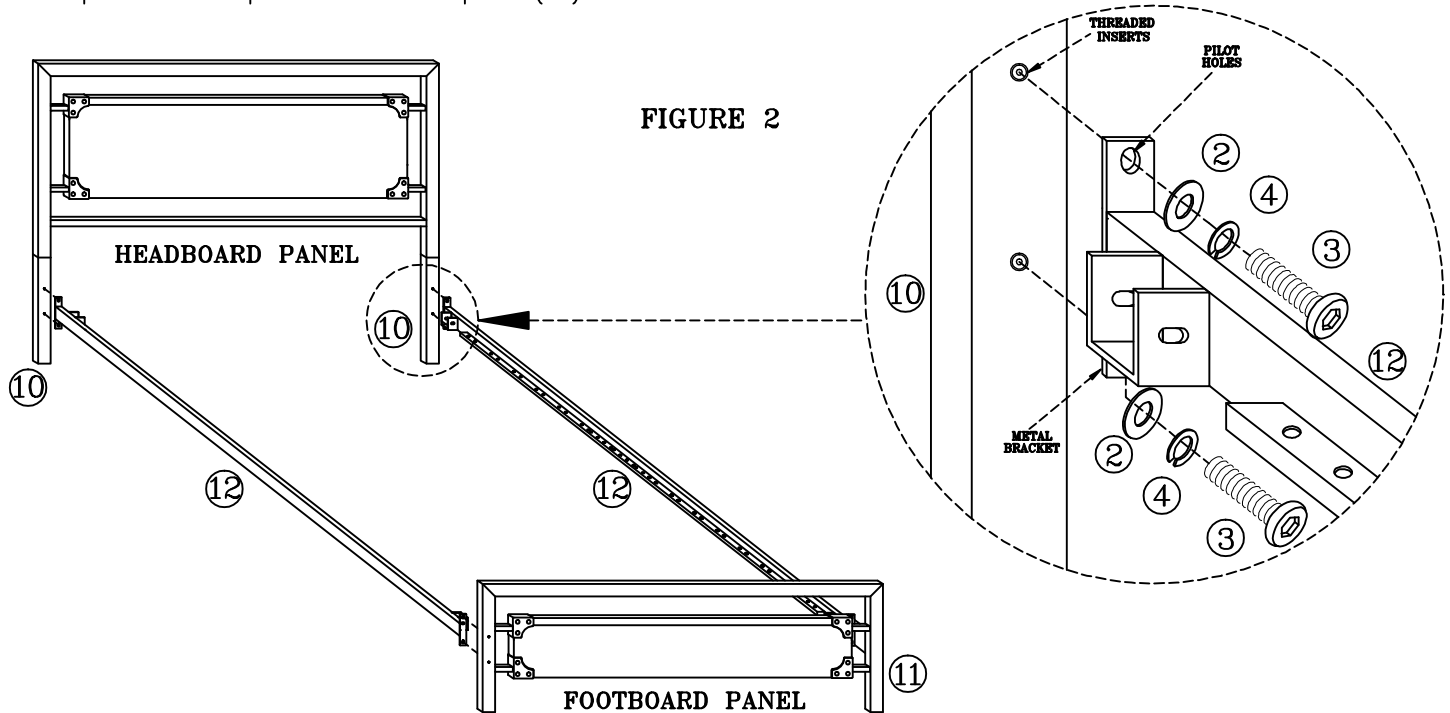


Step 3- Assembly of Cross Rail.

- Place cross rail (13) between side rail (12) metal bracket. SEE FIGURE 3
- Secure cross rail (13) with screw (1) and flat metal washer (2). Use Allen wrench (7).

Step 4- Assembly of center Support Rail.

- Place center support rail (14) between cross rails (13). SEE FIGURE 4
- Secure center support rail (14) with screw (5), flat metal washer (2) and hex nut (6).
- Tighten screw (5) with Allen wrench (7) and open wrench (8).

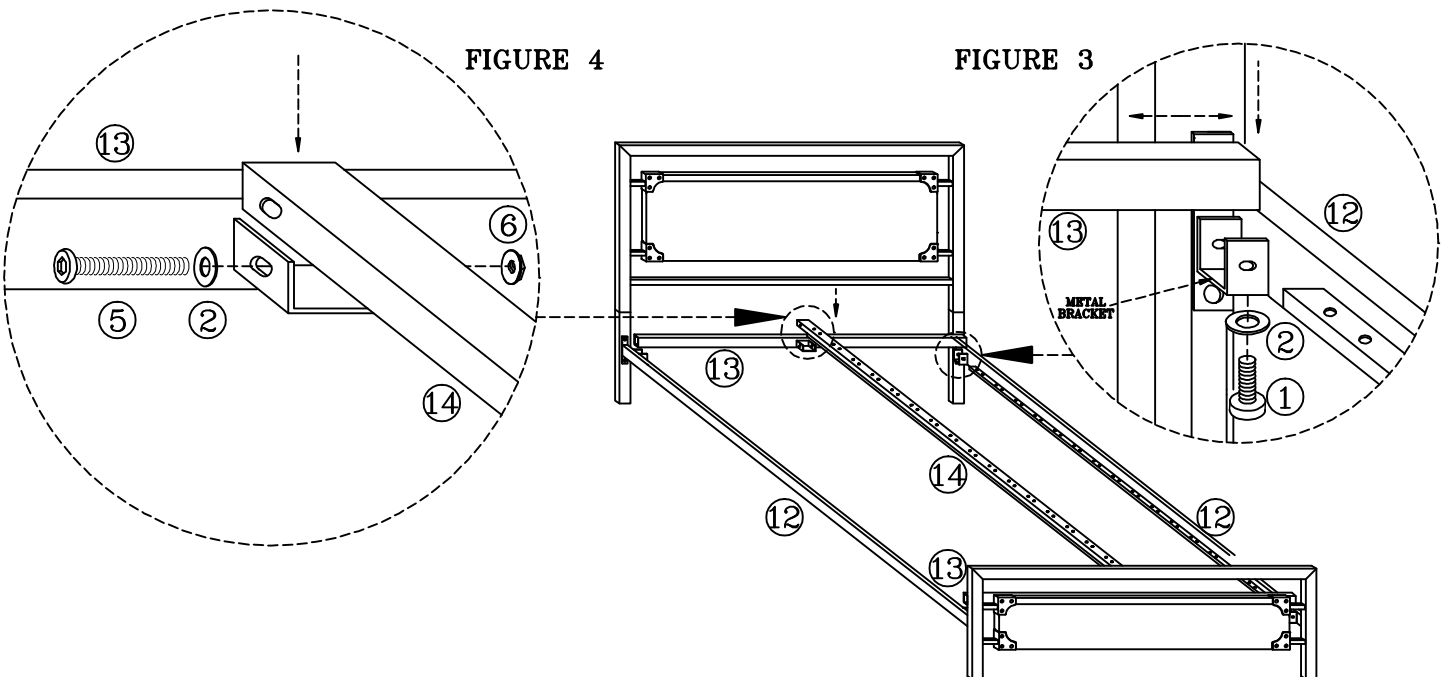


Instruction Sheet

Step 5- Assembly of Wood Slats.

- Insert double end plastic caps (15) on each pilot hole on center support rail (14). SEE FIGURE 5
- Carefully insert wood slats (16) on each side of double end plastic cap (15).
- Insert single end plastic cap (17) on each end of wood slat (16). SEE FIGURE 5
- Insert single end caps (17) on pilot holes on side rail cleat (12).

FIGURE 5

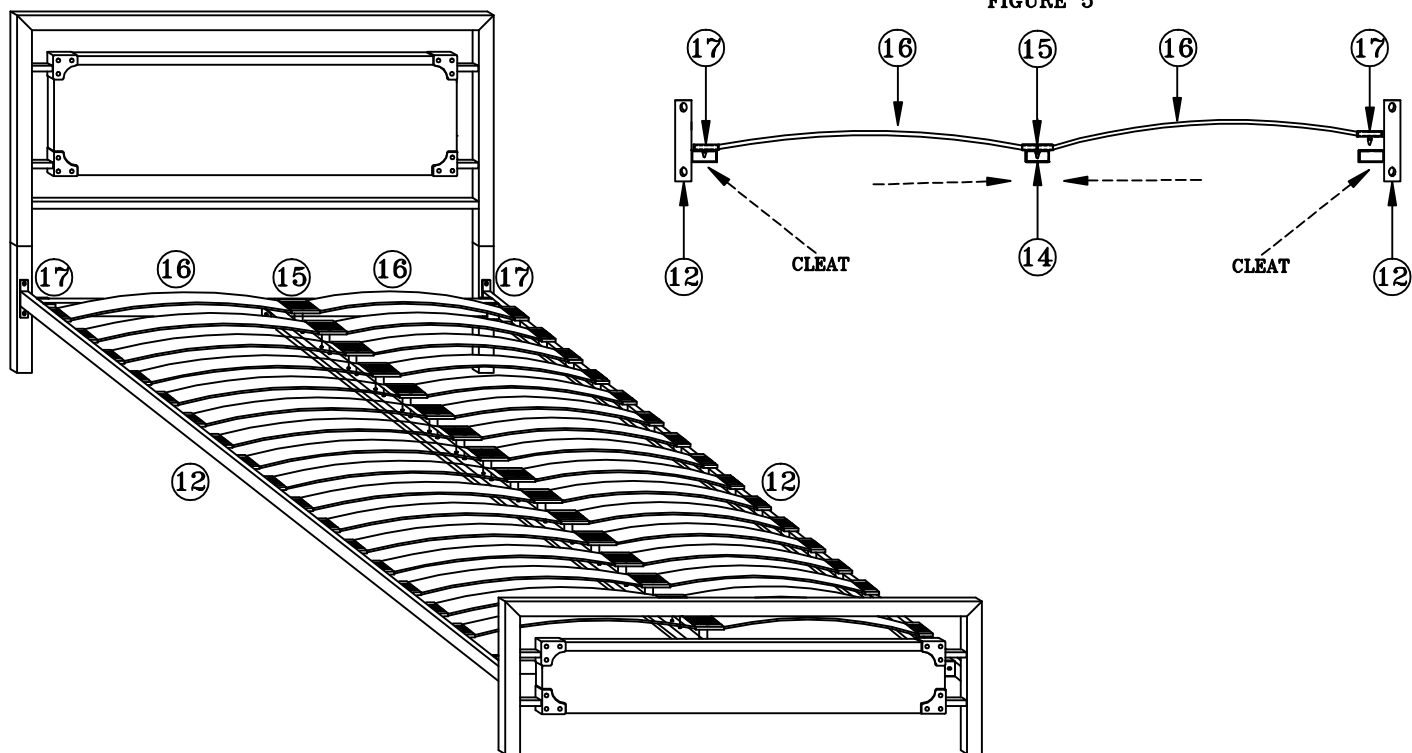

PRODUCT FULLY ASSEMBLED

