


# Assembly Instruction

Decorate your home, Brighten wonderful life











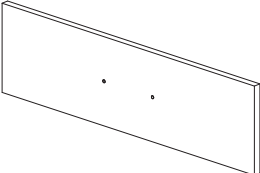
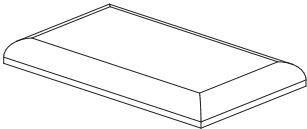

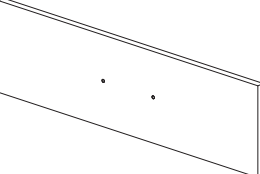
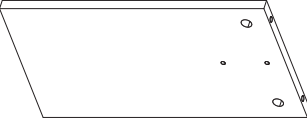

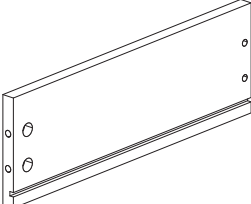
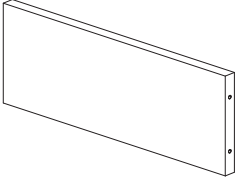
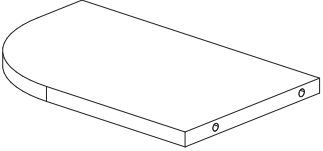
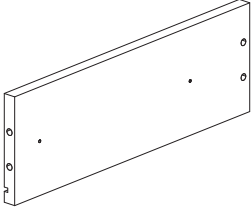
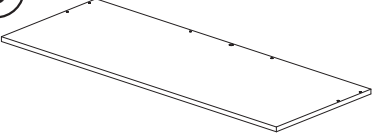
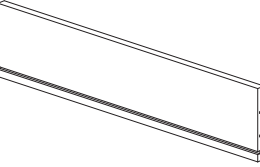


# Plate number

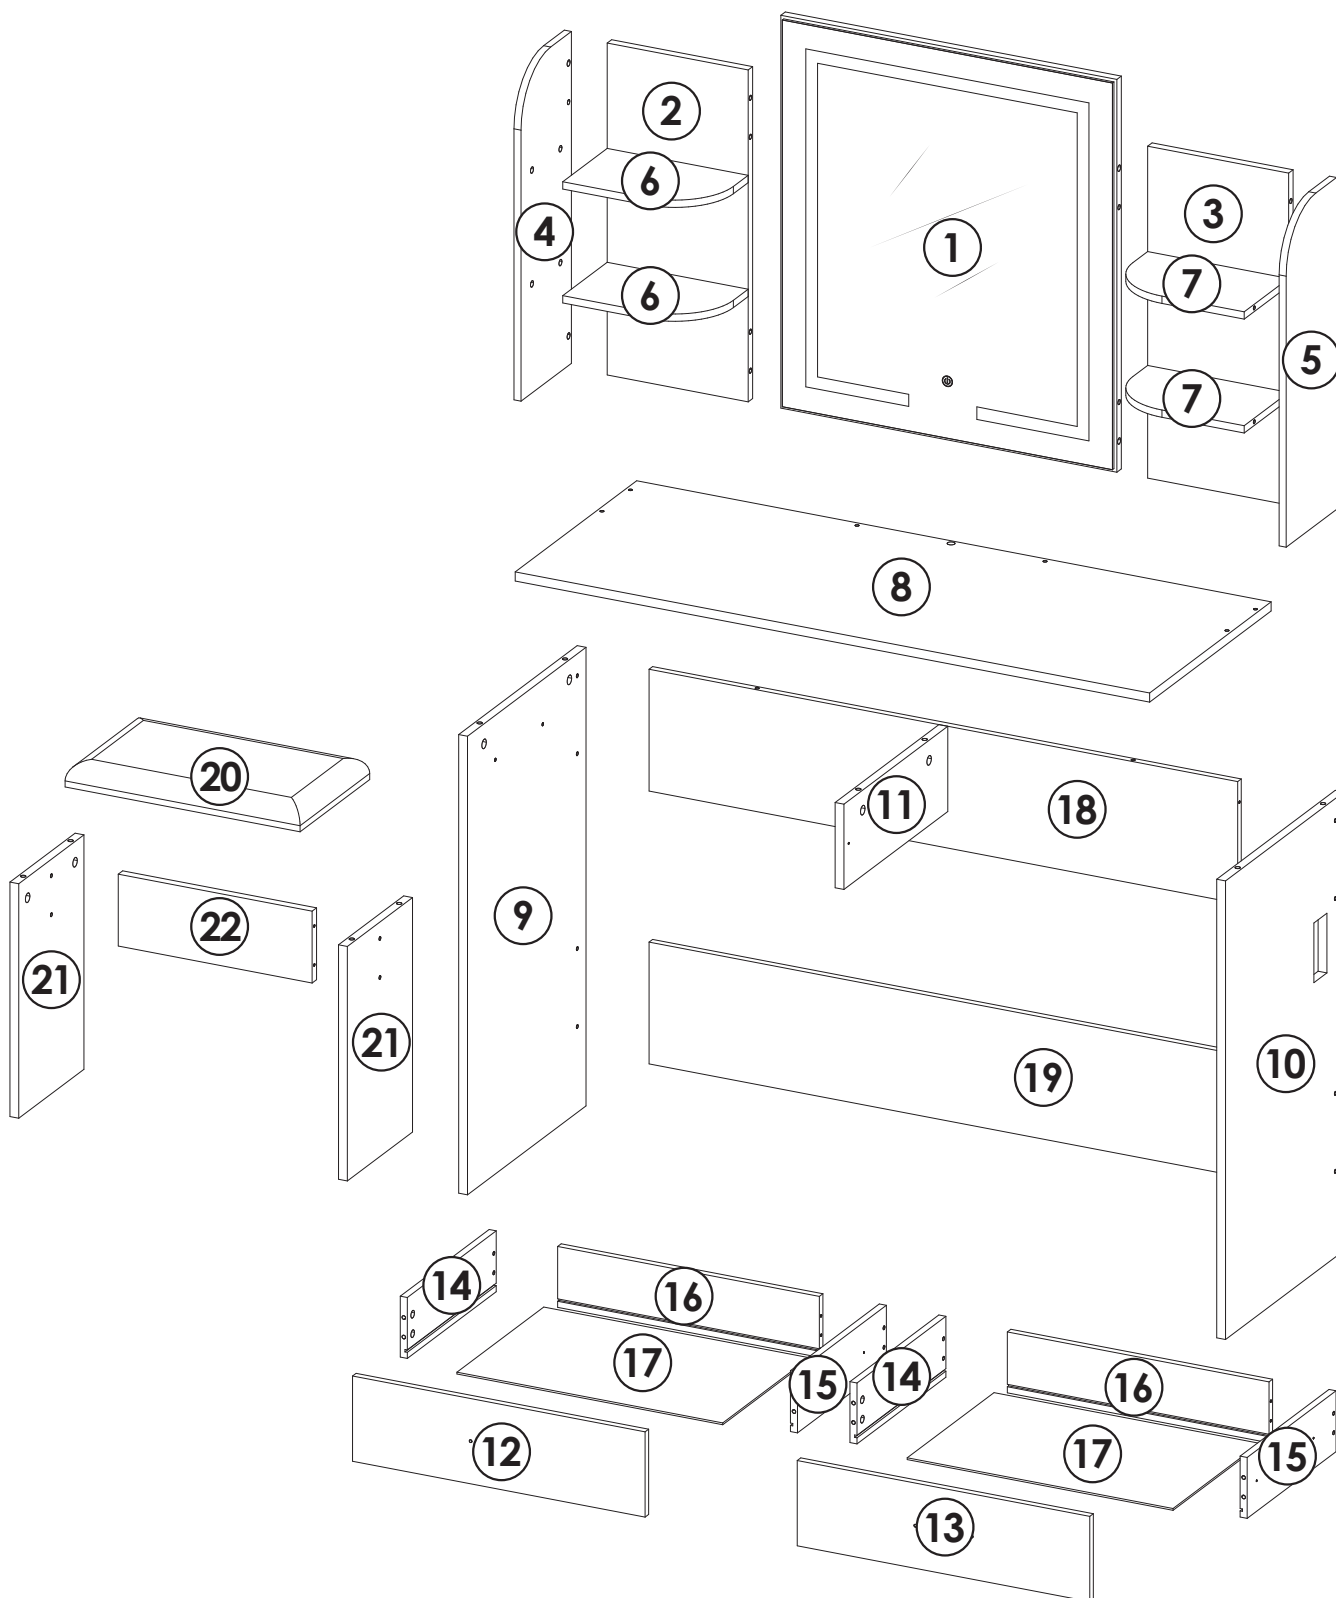











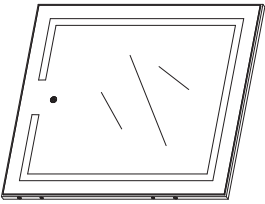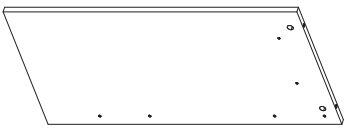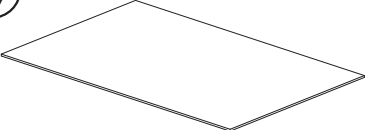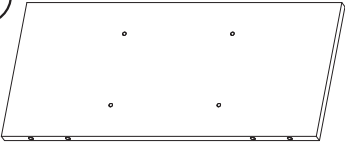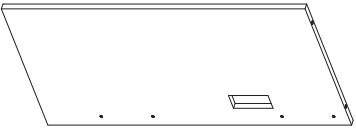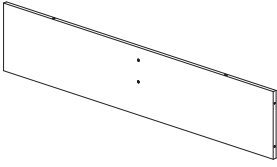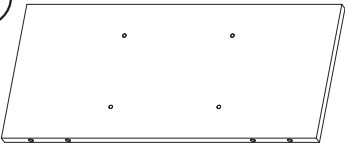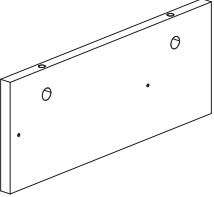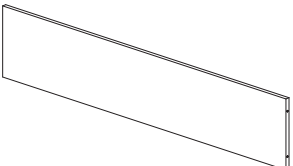







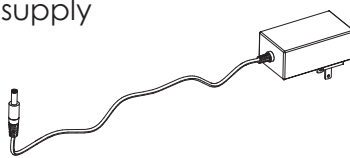
# PARTS LIST



Unit: (mm)

<b>1</b>  x1 PC	<b>9</b>  x1 PC	<b>17</b>  x2 PC
<b>2</b>  x1 PC	<b>10</b>  x1 PC	<b>18</b>  x1 PC
<b>3</b>  x1 PC	<b>11</b>  x1 PC	<b>19</b>  x1 PC
<b>4</b>  x1 PC	<b>12</b>  x1 PC	<b>20</b>  x1 PC
<b>5</b>  x1 PC	<b>13</b>  x1 PC	<b>21</b>  x2 PC
<b>6</b>  x2 PC	<b>14</b>  x2 PC	<b>22</b>  x1 PC
<b>7</b>  x2 PC	<b>15</b>  x2 PC	
<b>8</b>  x1 PC	<b>16</b>  x2 PC	

# ACCESSORIES LIST

Unit: (mm)

<b>A</b> 6x40  x18 PC	<b>B</b> 15x11  x18 PC	<b>C</b> =C <sub>1</sub> +C <sub>2</sub> 12 inches  x4 PC
<b>D</b> 8x40  x8 PC	<b>E</b> M3.5x14  x12 PC	<b>F</b> M5x40/#3   x36 PC/x1 PC
<b>G</b> 5xØ12  x8 PC	<b>H</b> M4x16/96   x4 PC/x2 PC	<b>J</b> 6x25  x16 PC
<b>K</b> 12x10  x16 PC	<b>L</b> 21mm  x32 PC	<b>M</b> Socket  x1 PC
<b>N</b> 6x40  x2 PC	<b>O</b> M3.5x12  x8 PC	<b>P</b> M4x50/8x40   x2 PC/x2 PC/x2 PC
<b>Q</b> Power supply  x1 PC		

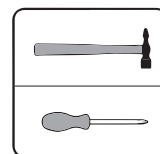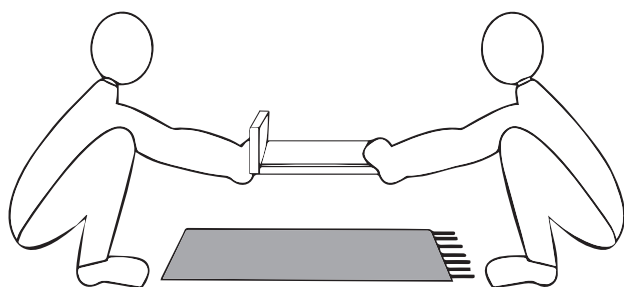


# INSTALLATION STEPS

## STEP1



Press the plastic part in the indicated direction to separate drawer runner **C1** and **C2** before assembling.

**REMARK:** Please grip the **C1** part while sliding the **C2** part.

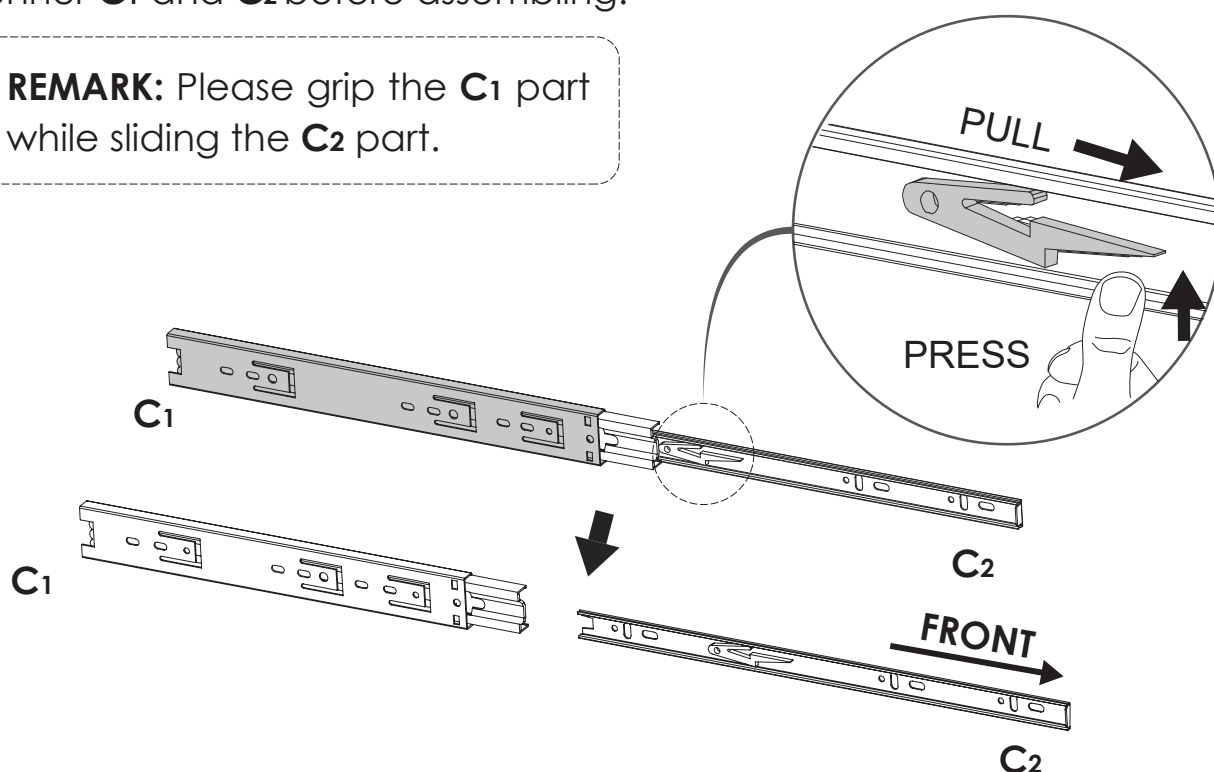

### REMARK:

1. Please locate the holes from the back of part **C1**.

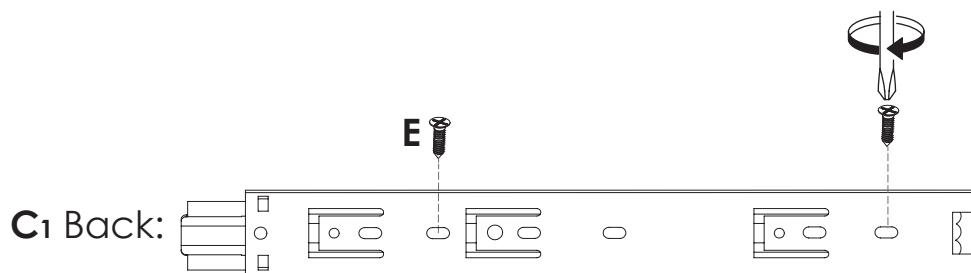





2. But install part **E** from the front of part **C1**.

## STEP2

### YOU WILL NEED

C1 x2

E x4

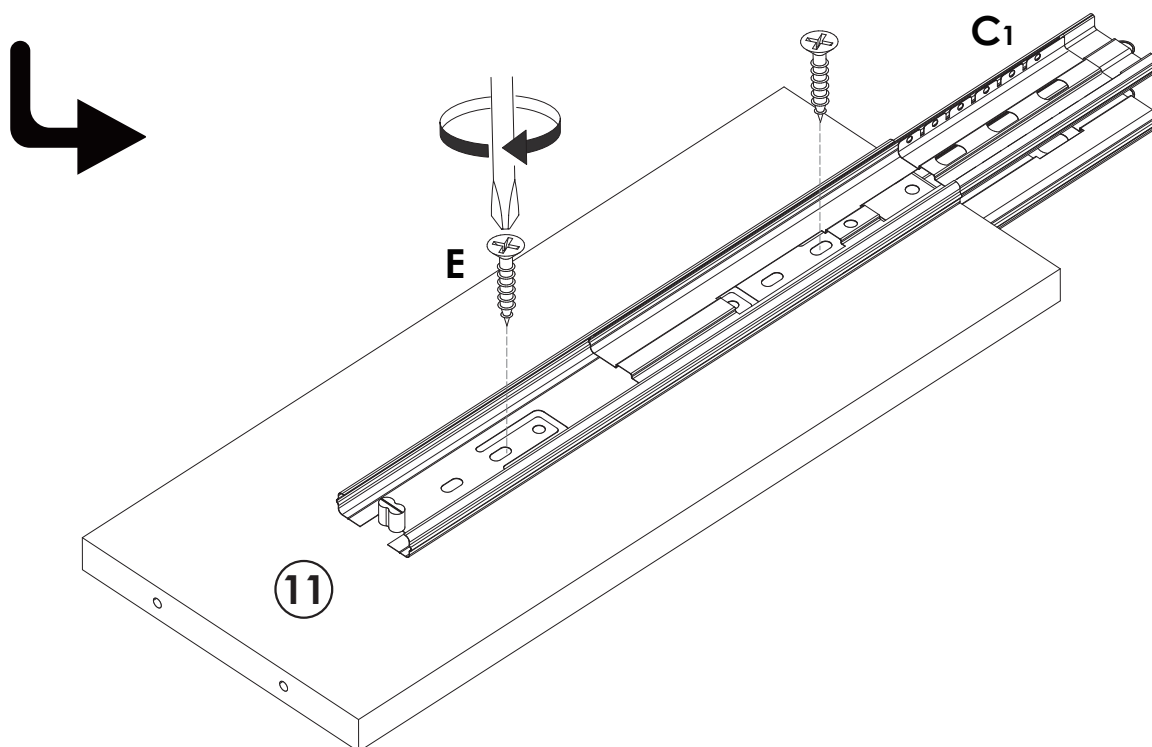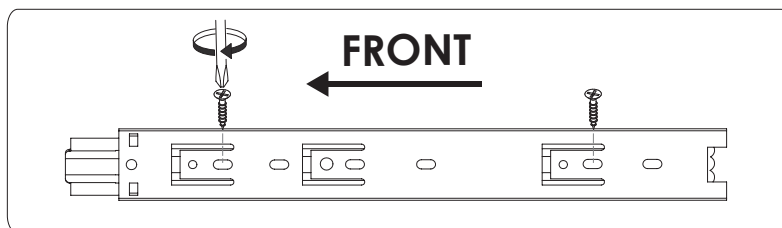
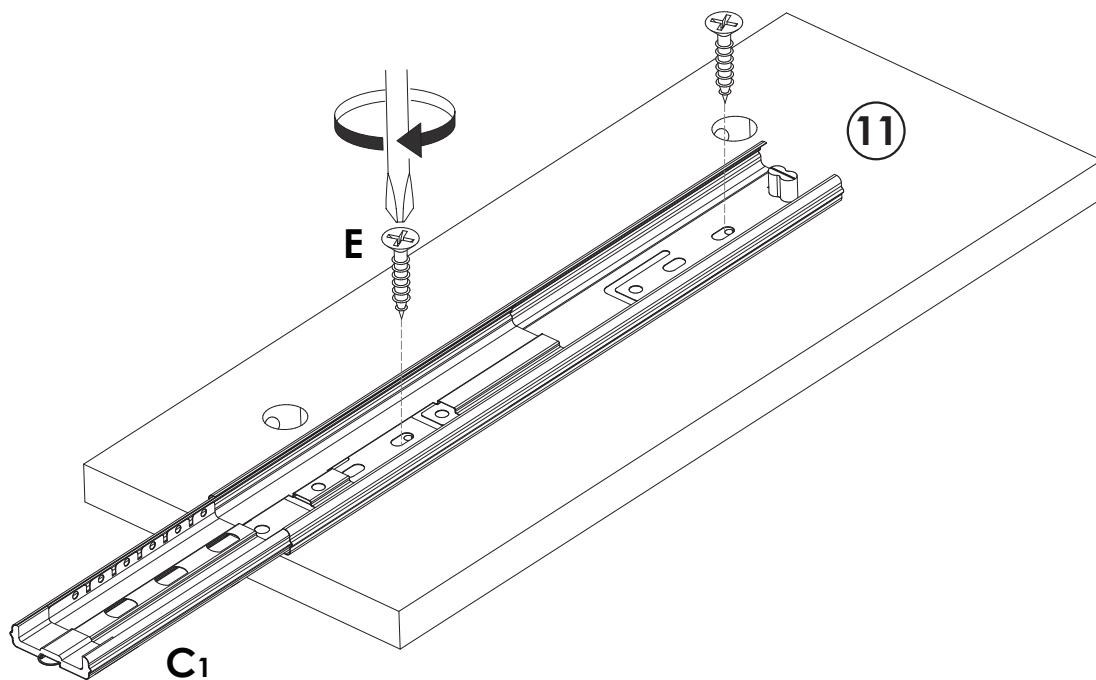
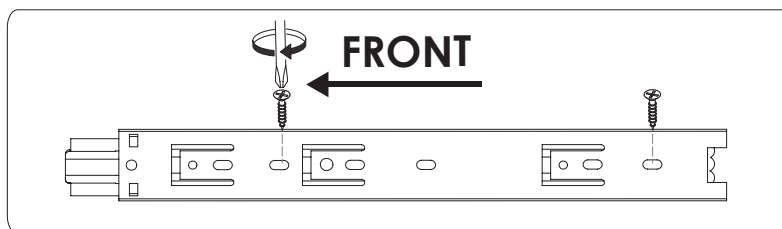


### STEP3

#### YOU WILL NEED

C1 x2





E x4

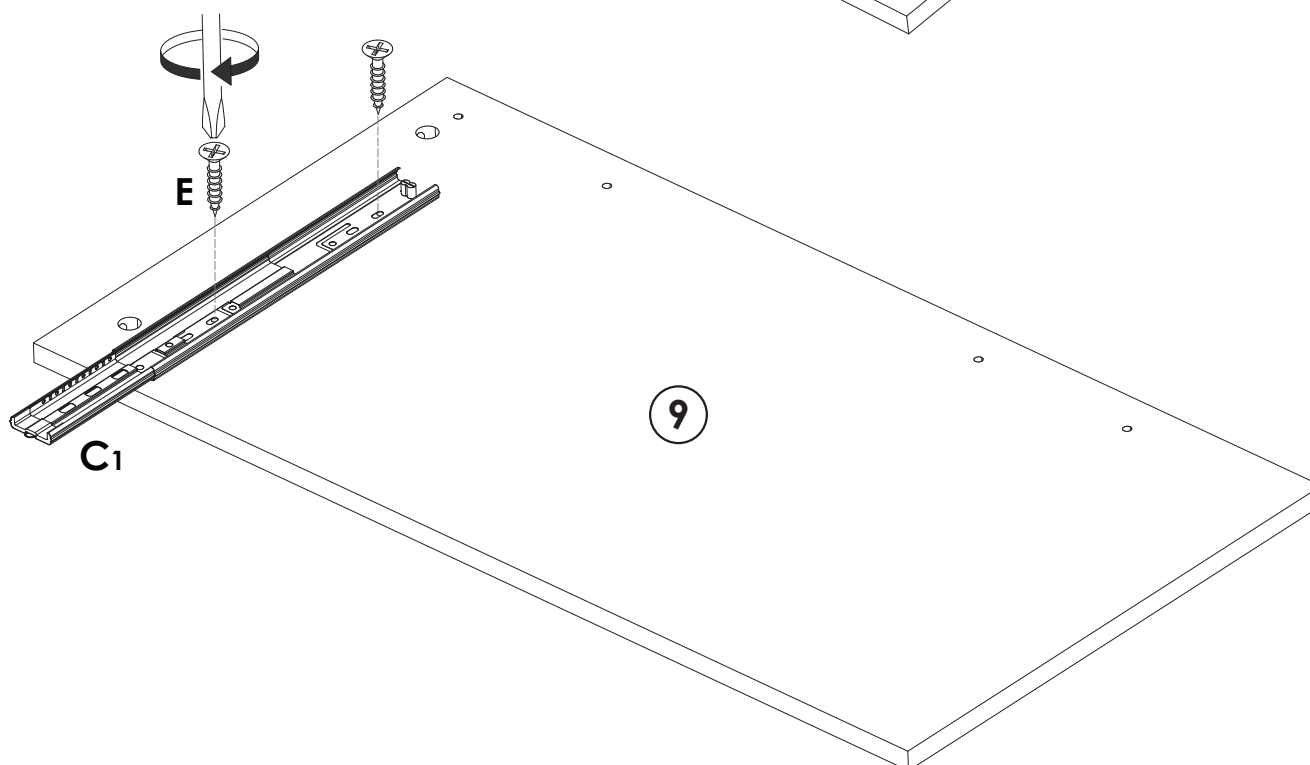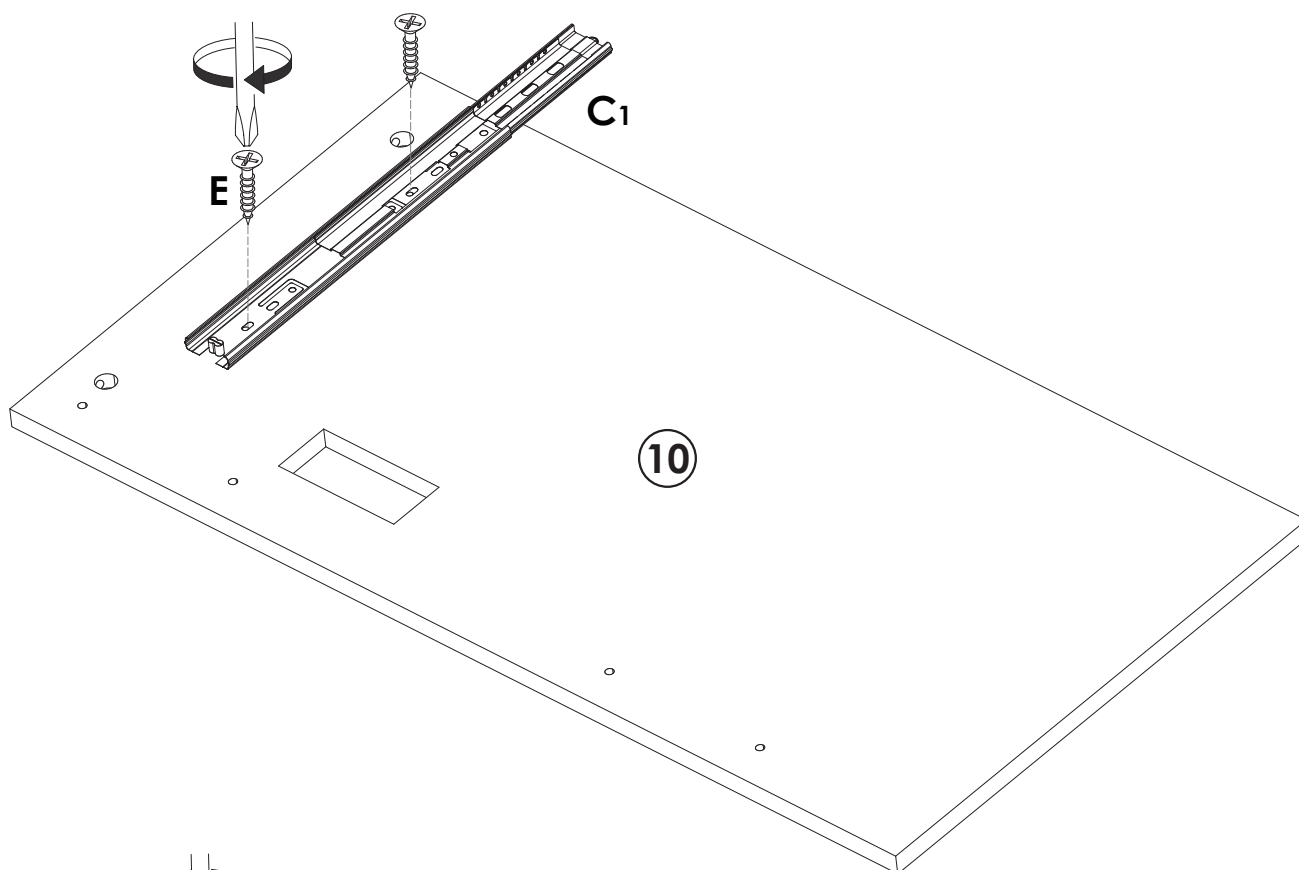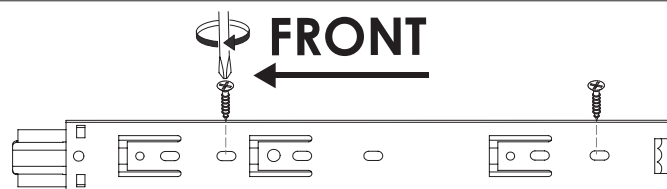

## STEP4

### YOU WILL NEED

F x6

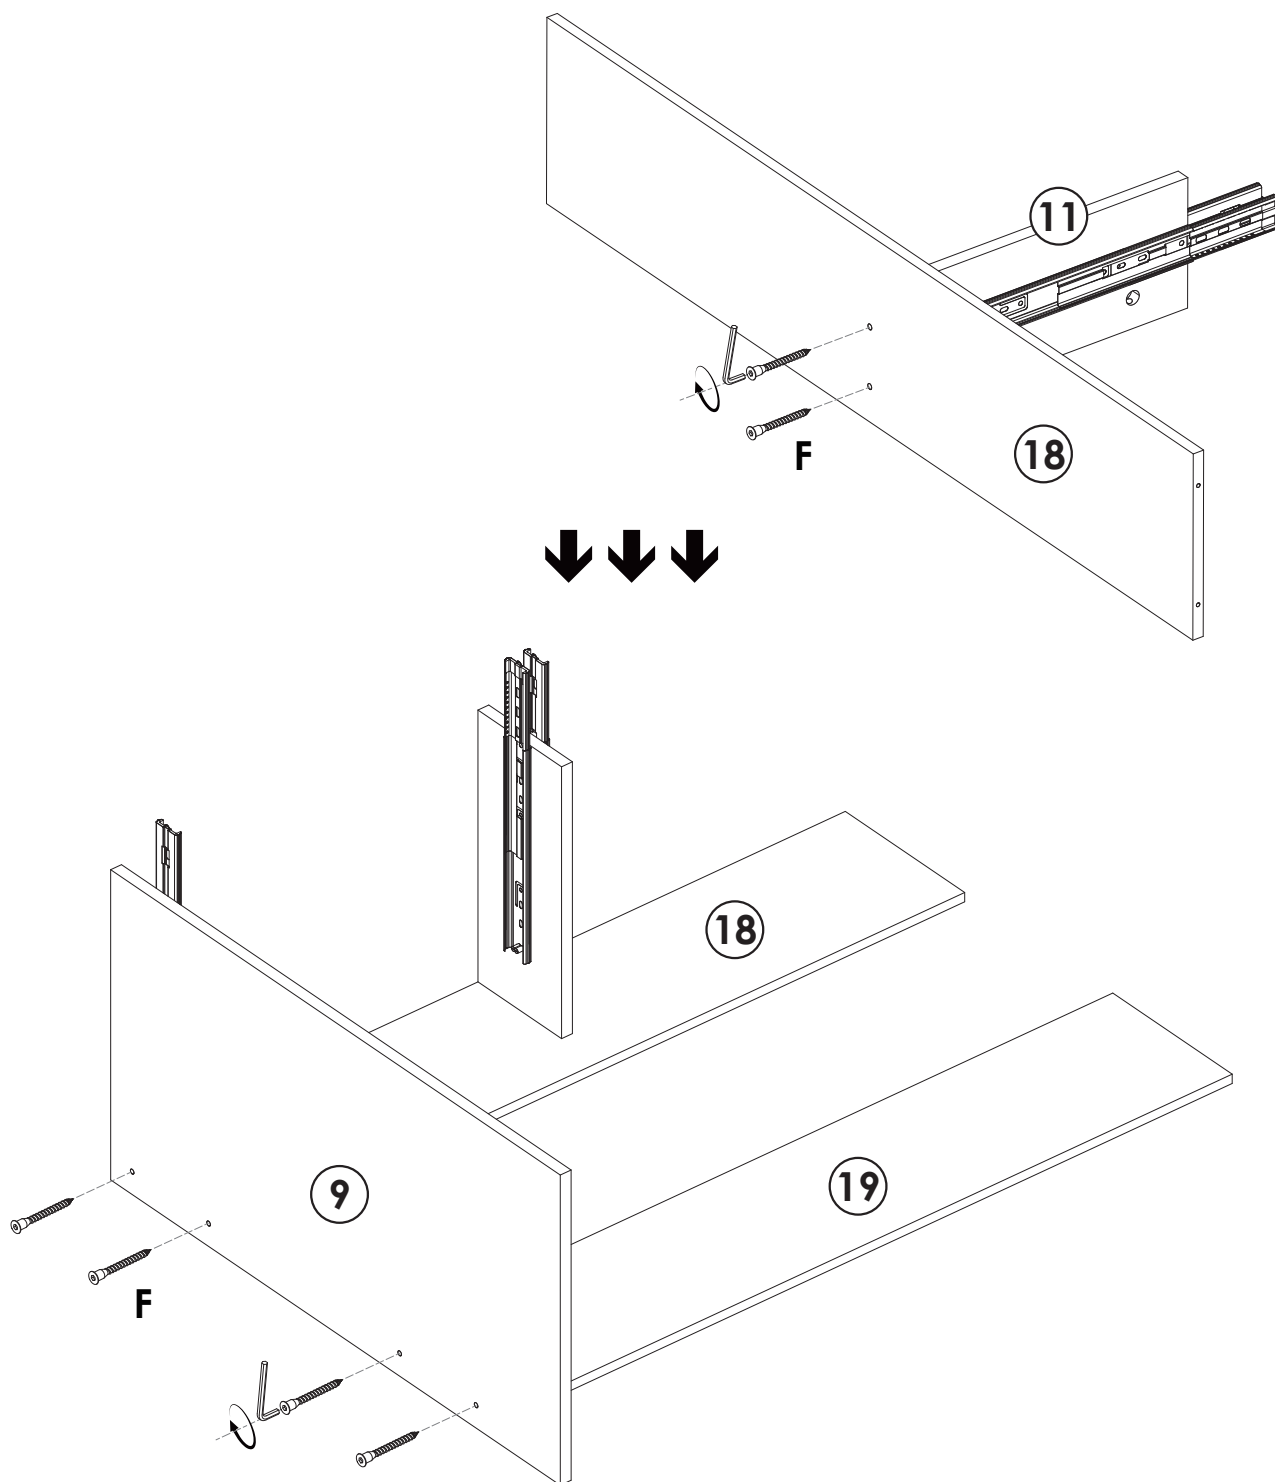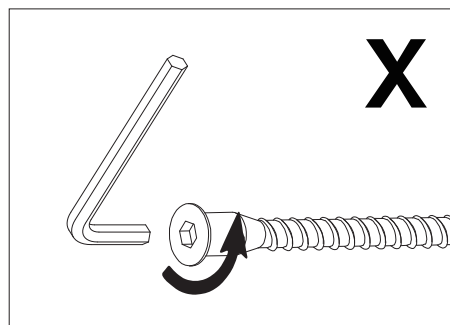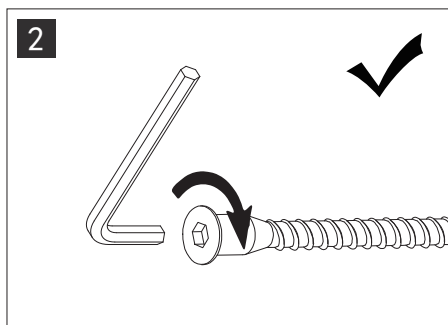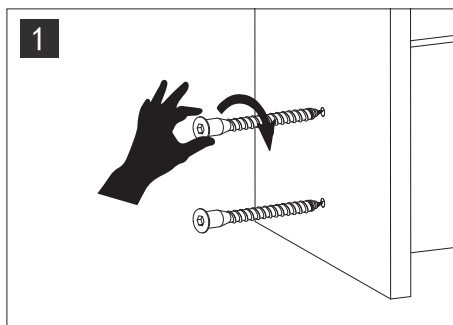




**STEP5**


**YOU WILL NEED**

**F** x4

**G** x4

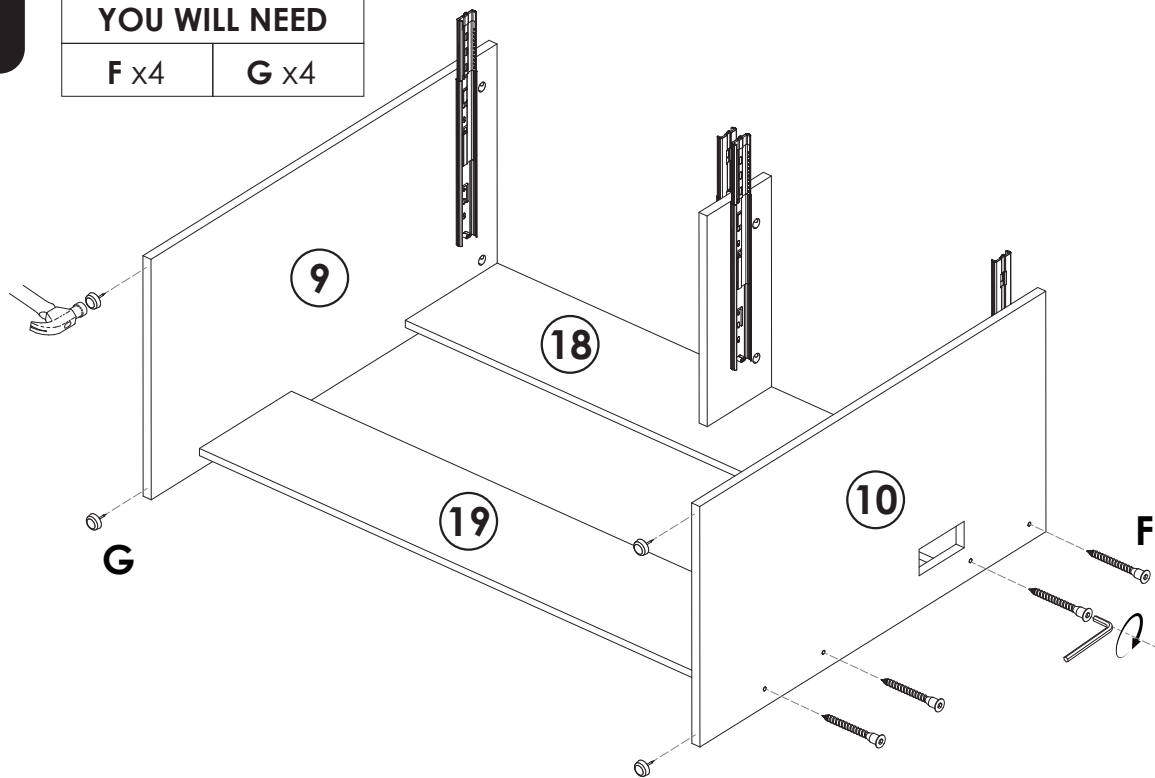

**1**

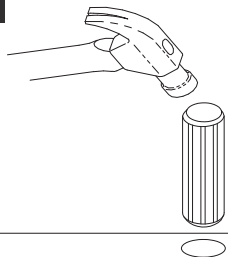

**2**



**X**



**X**




**✓**



**YOU WILL NEED**

**N** x2

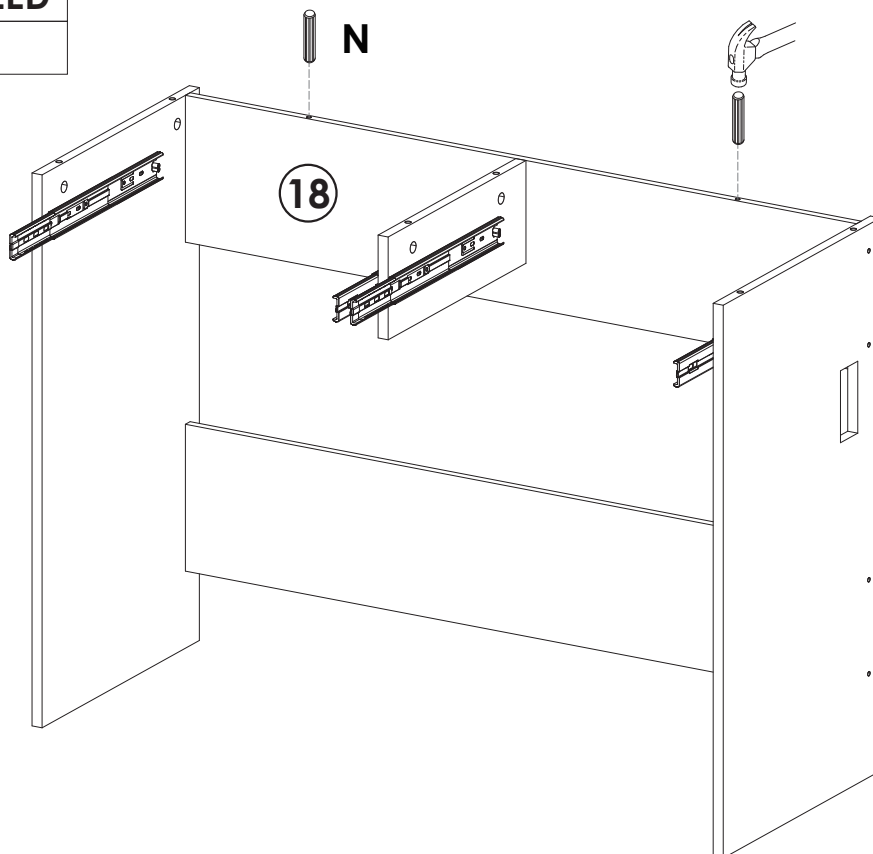



## STEP 6

### YOU WILL NEED

A x6

B x6



### Installation method of three in one rod and buckle

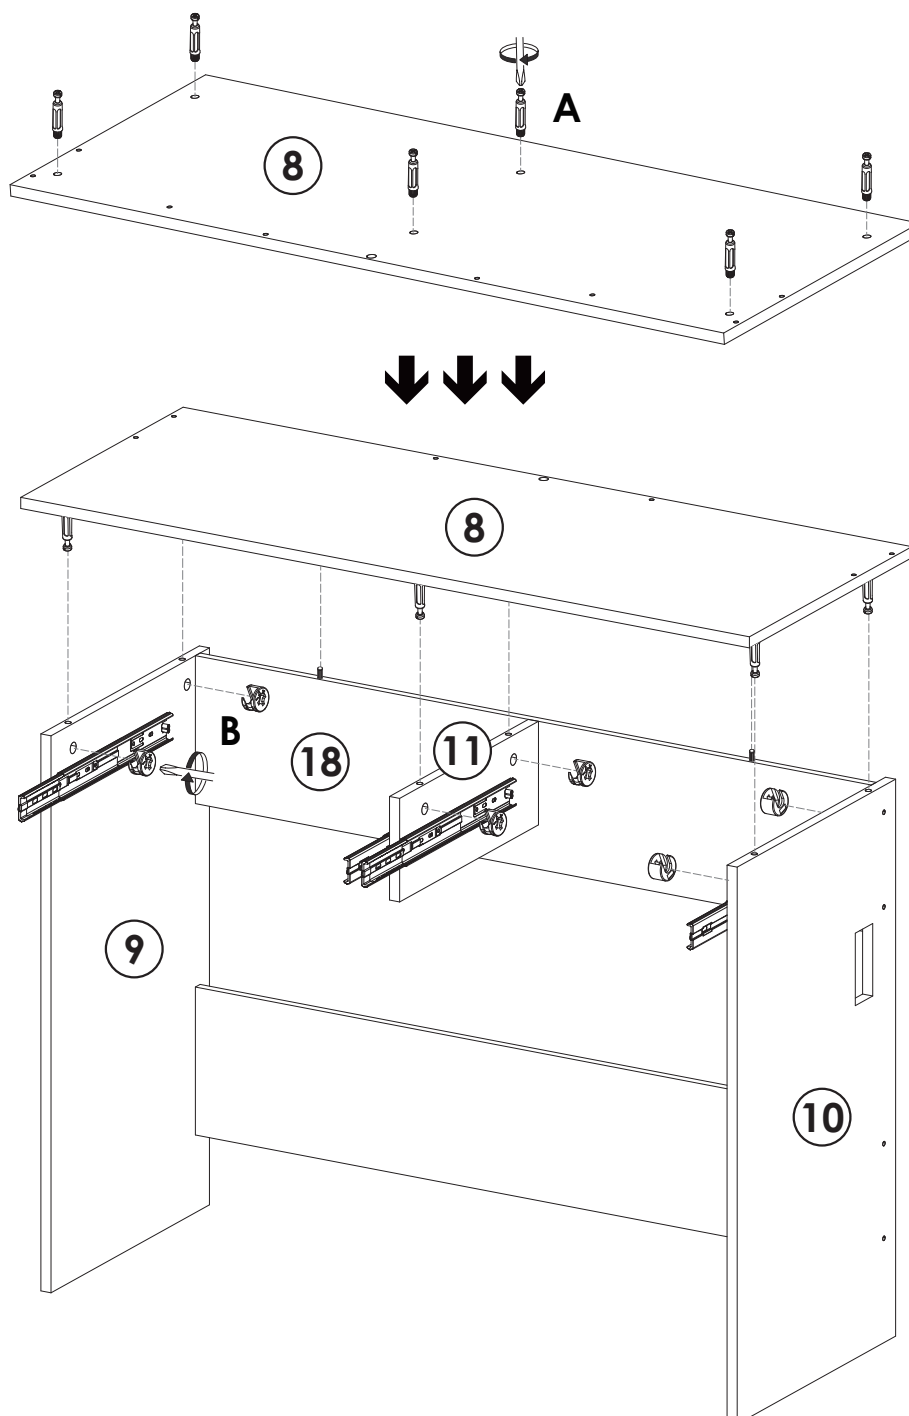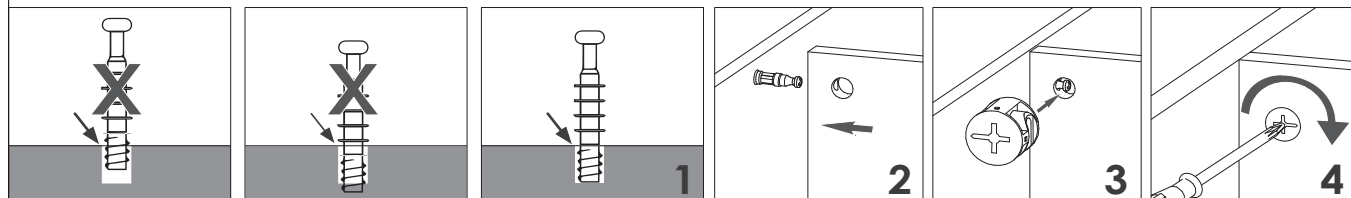

## STEP 7

### YOU WILL NEED

D x8

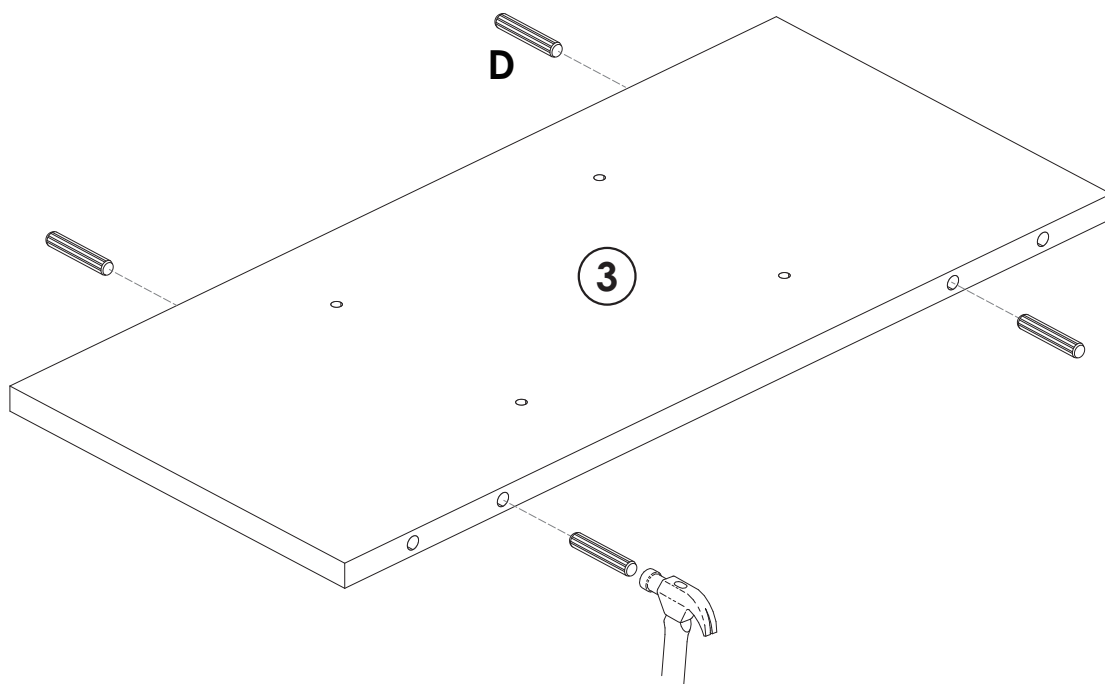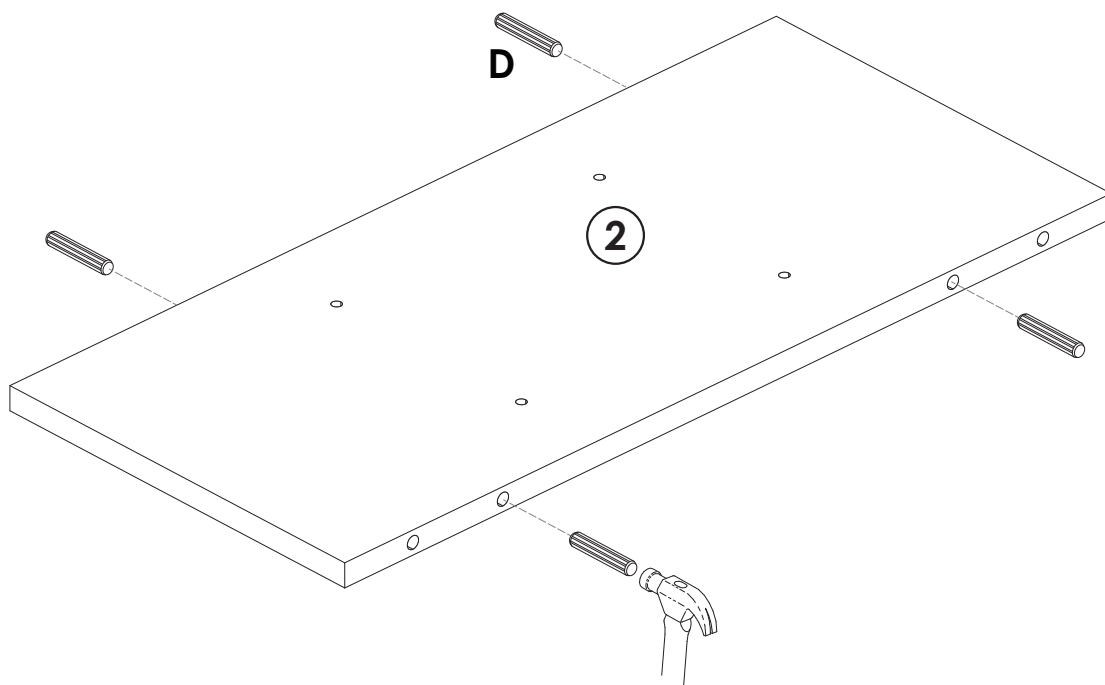

# STEP8

## YOU WILL NEED


A x2

B x2

F x4

J x4

K x4

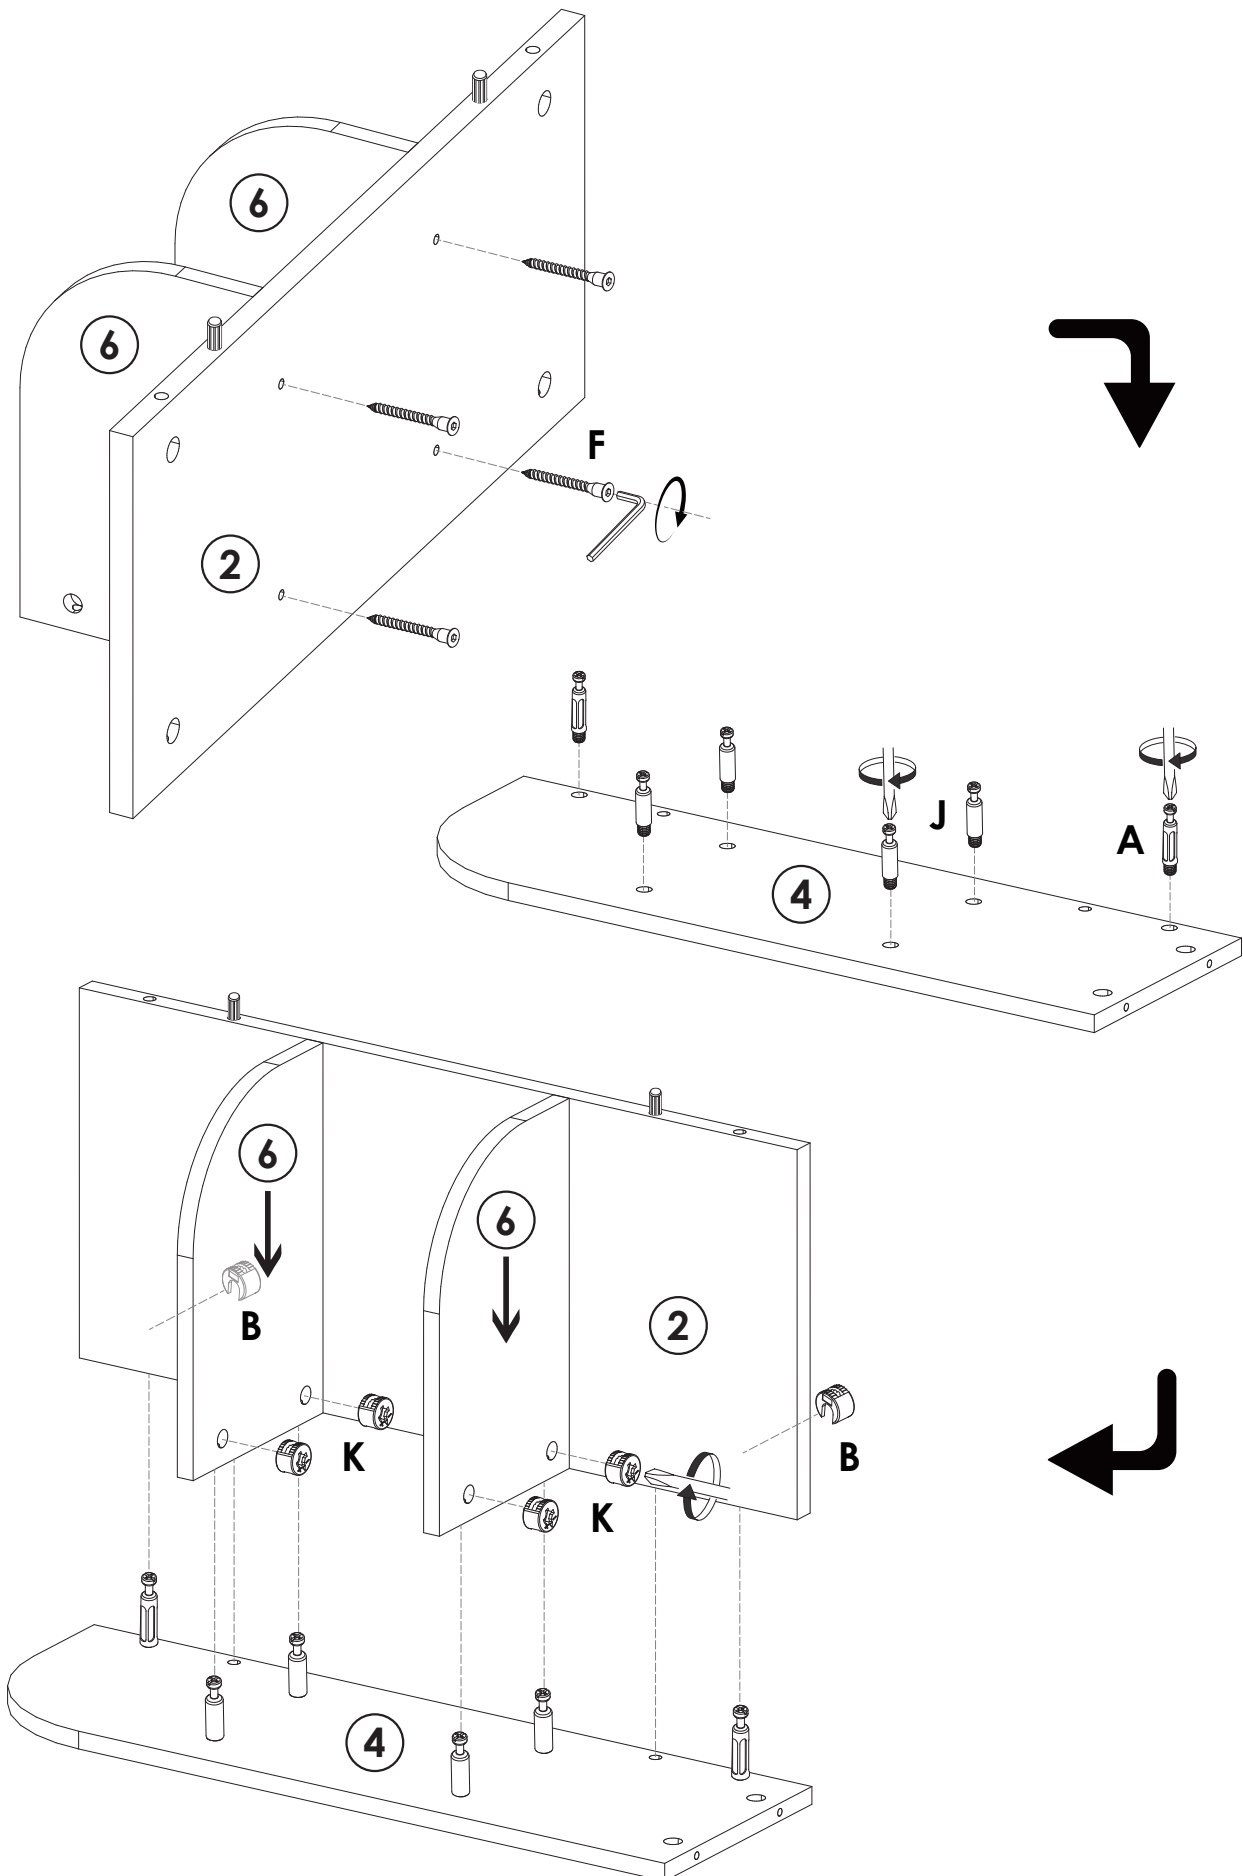

# STEP 9

## YOU WILL NEED


A x2

B x2

F x4

J x4



K x4

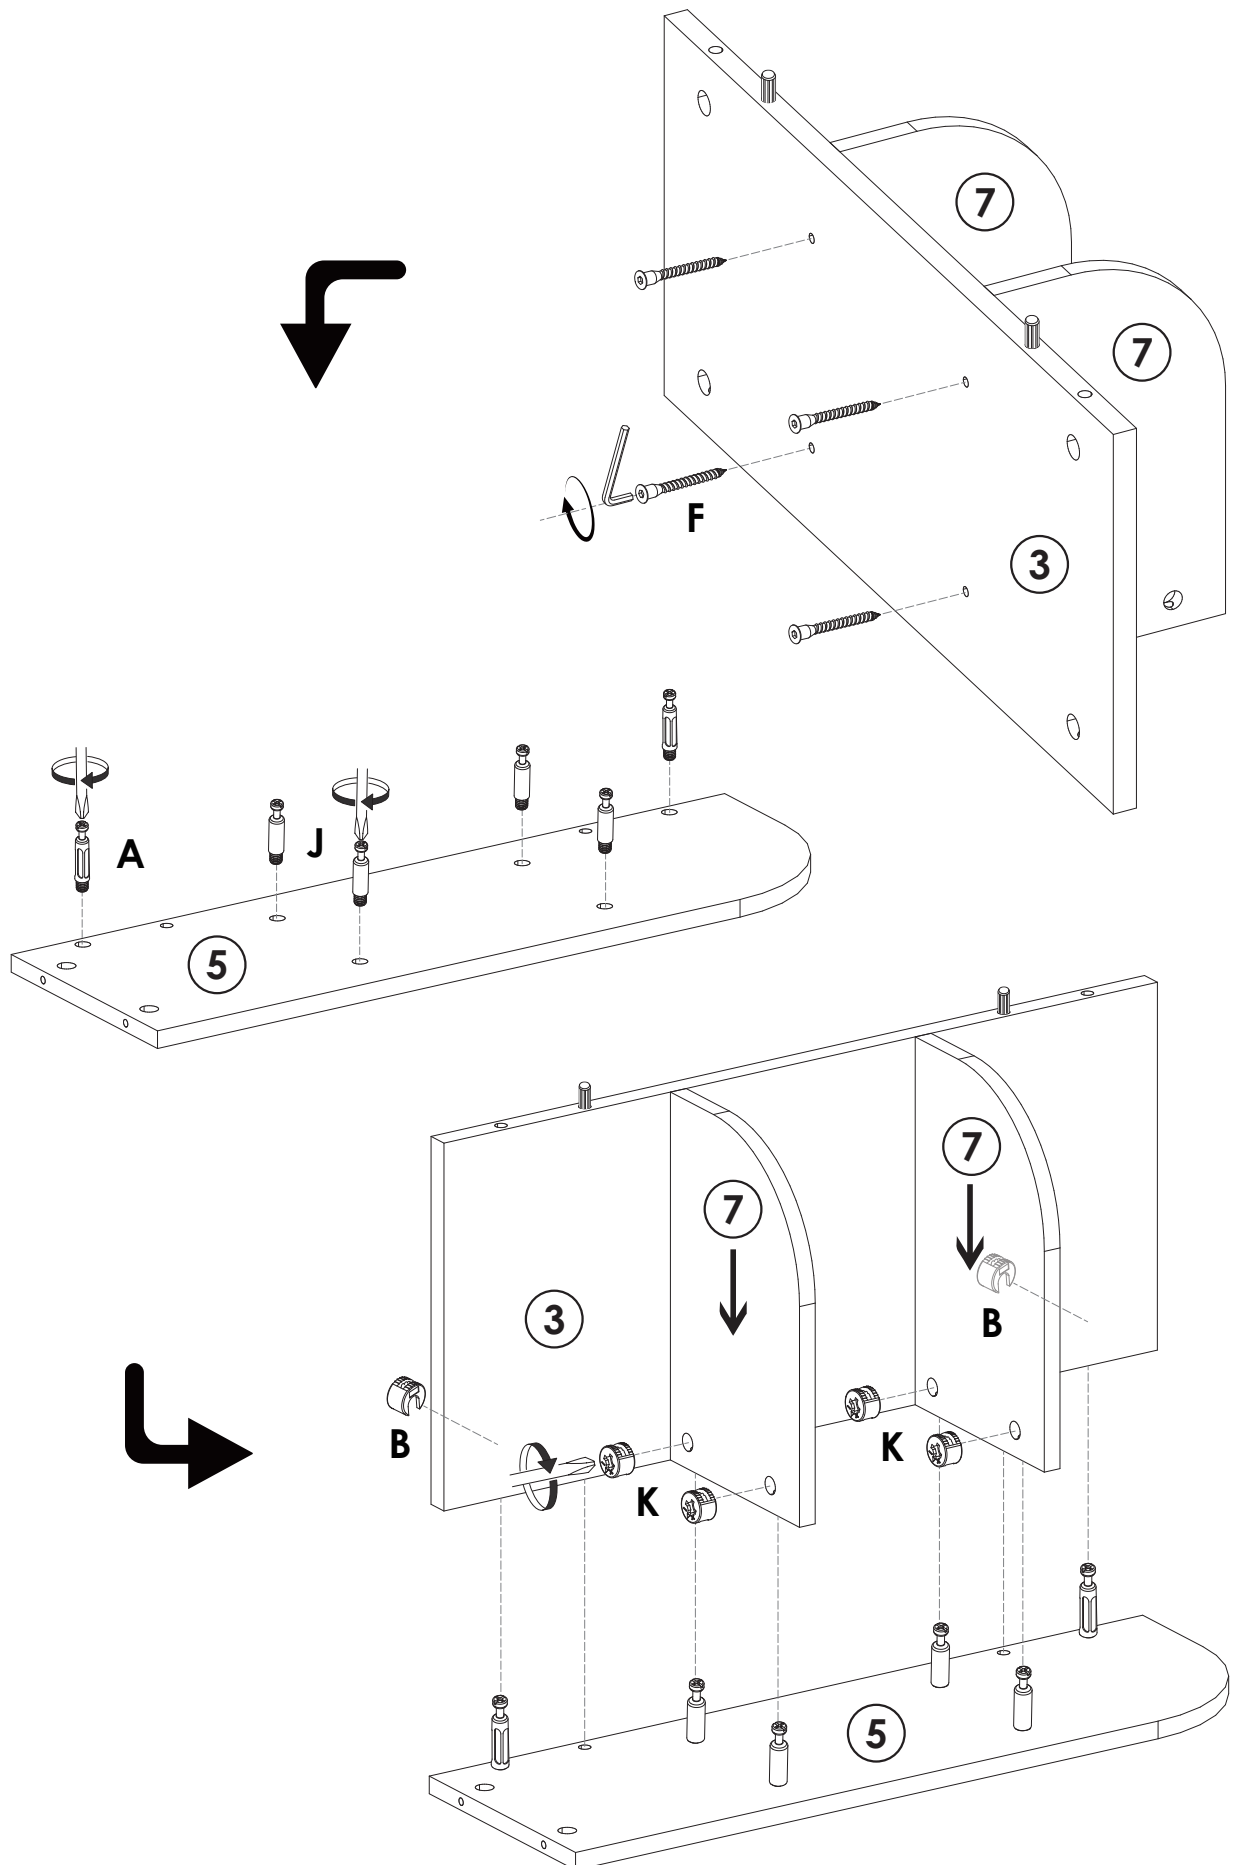

## STEP 10

### YOU WILL NEED

F x2

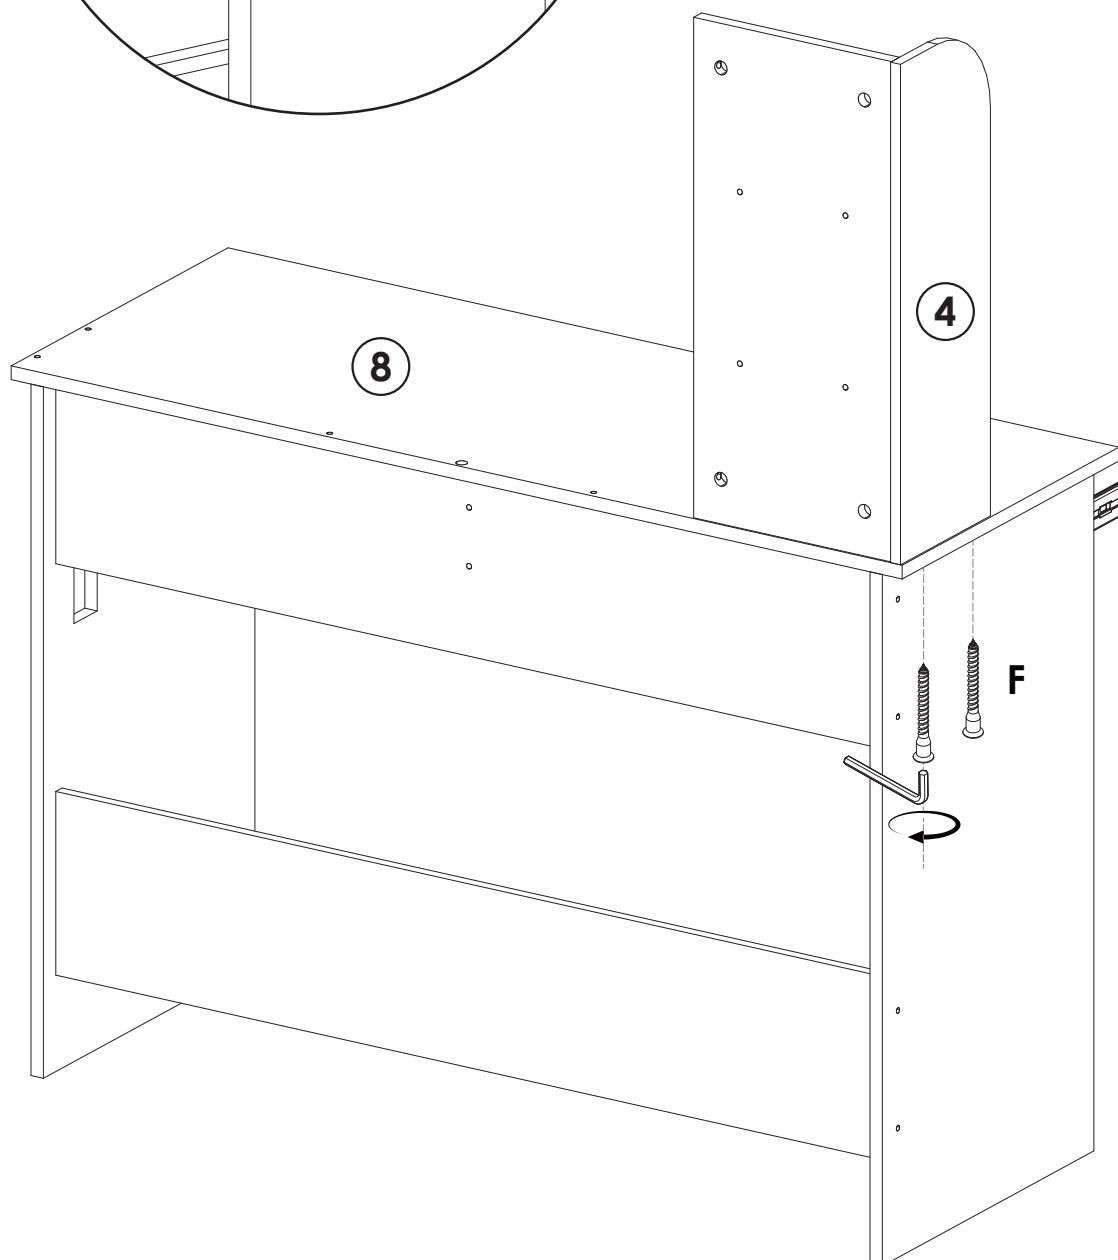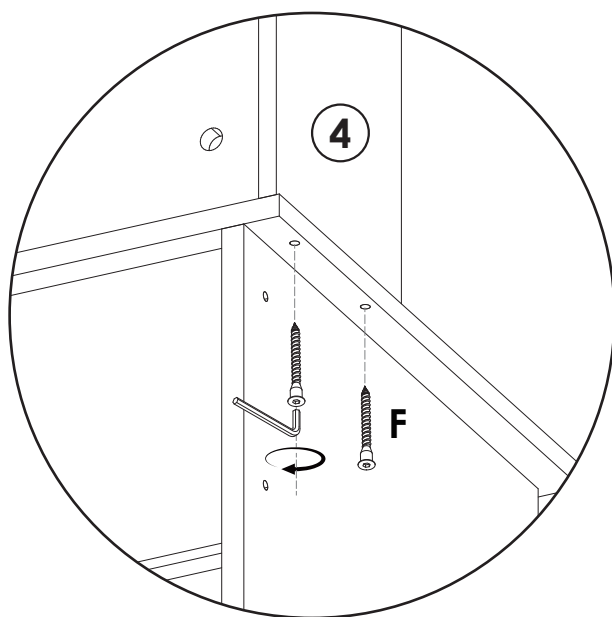



## STEP 11

### YOU WILL NEED

A x4

B x4



F x2

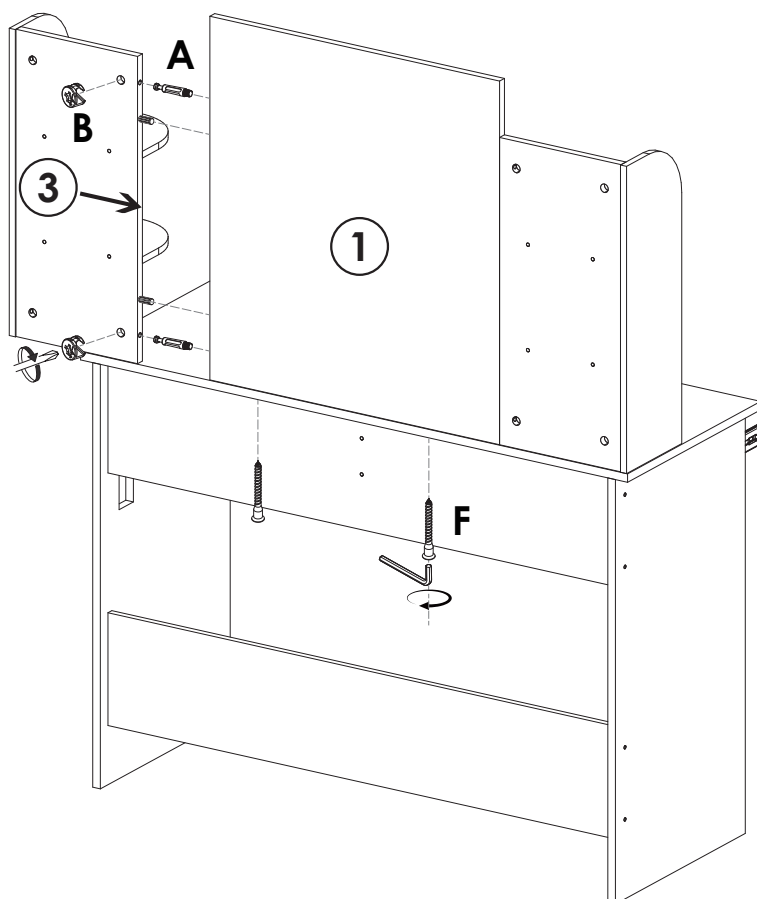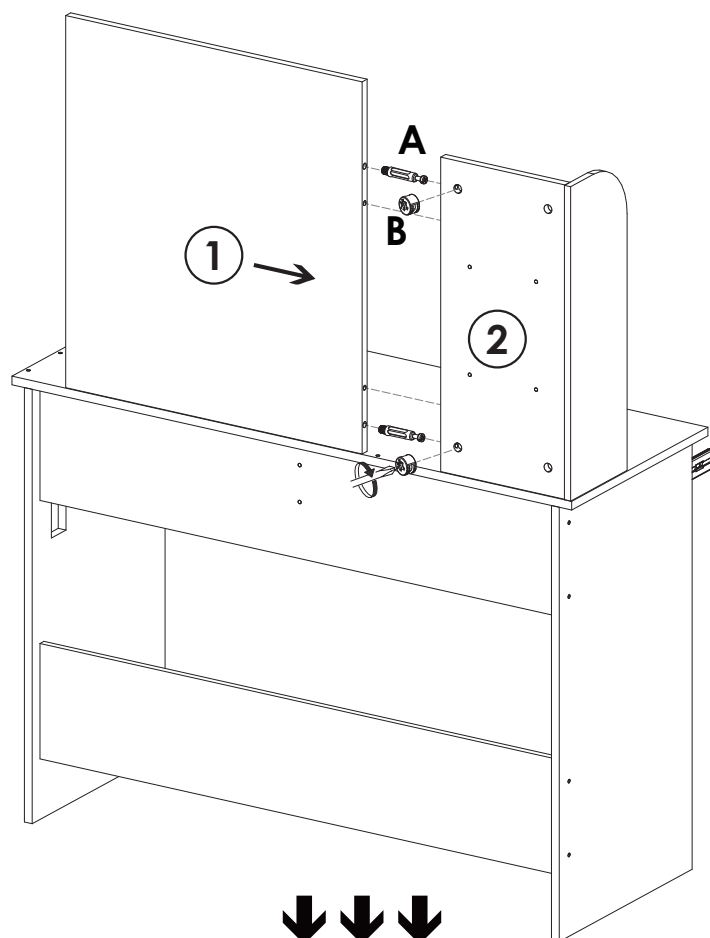

## STEP 12

### YOU WILL NEED

F x2

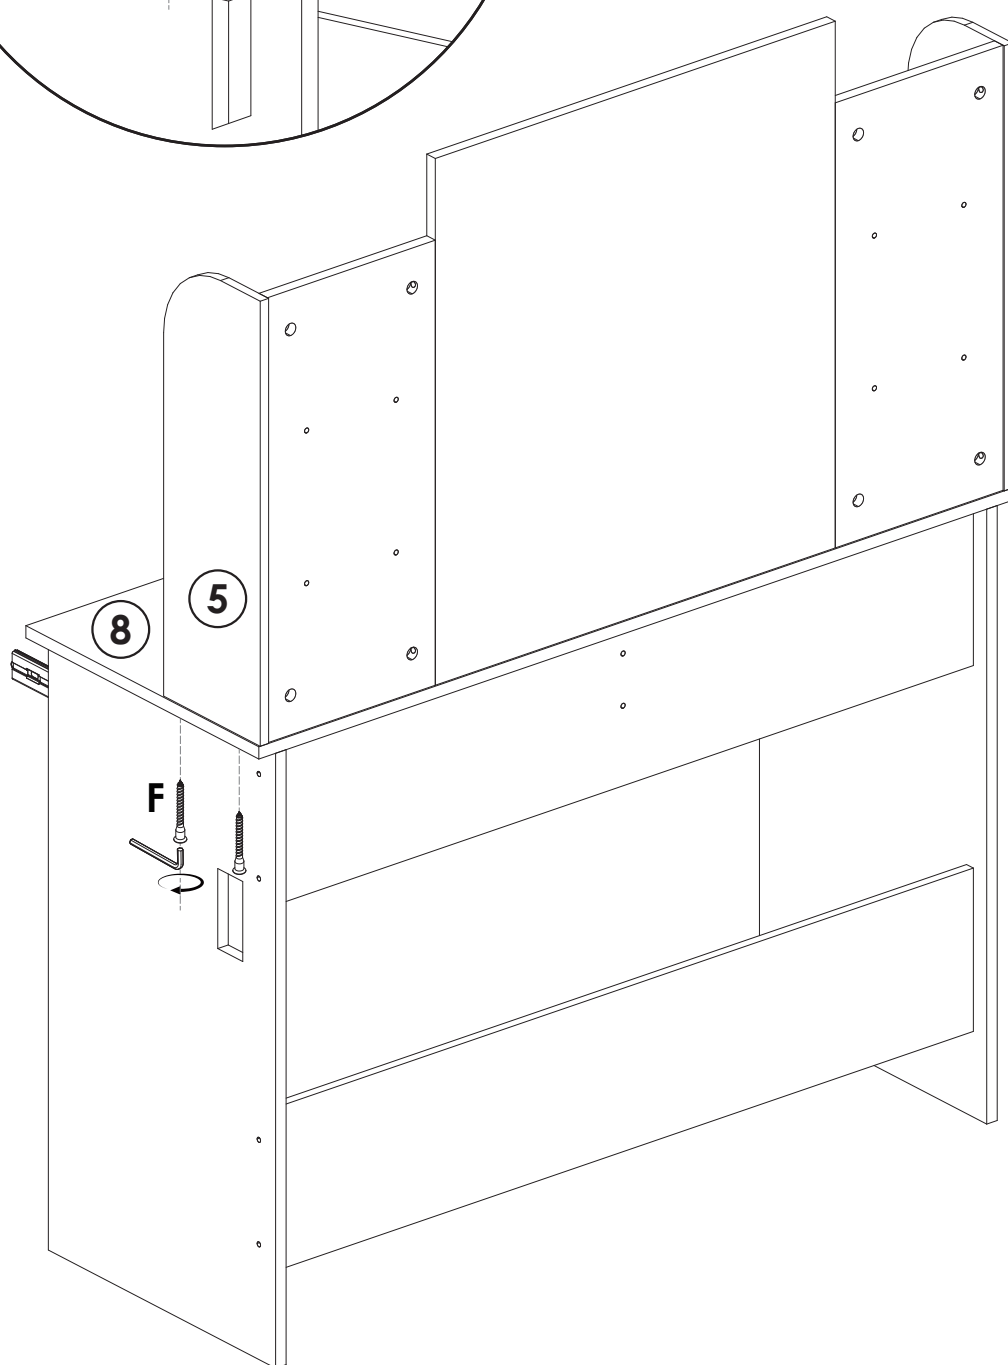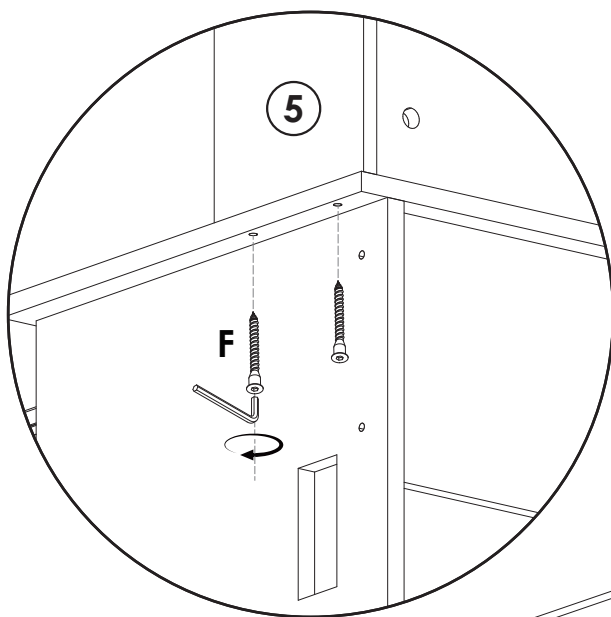




# STEP13

## YOU WILL NEED

F x8


J x8

1

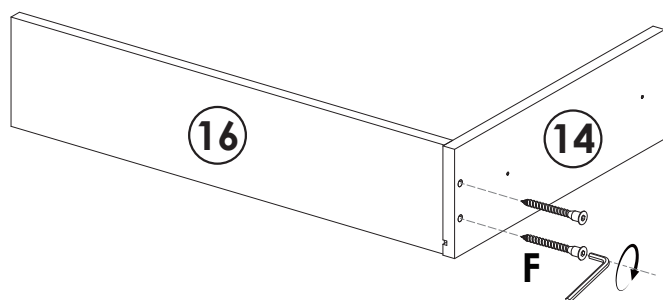


x2

2

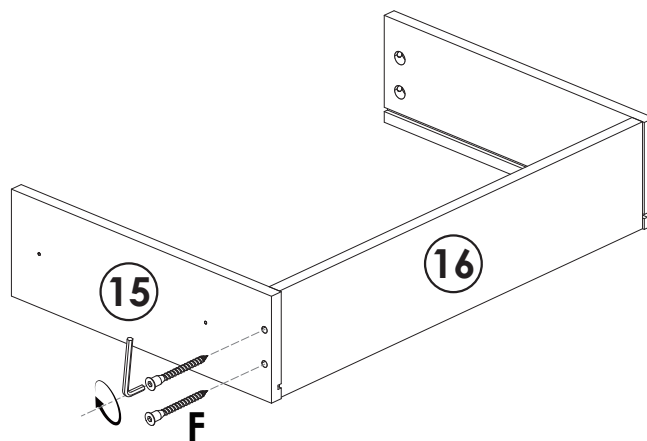


x2

3

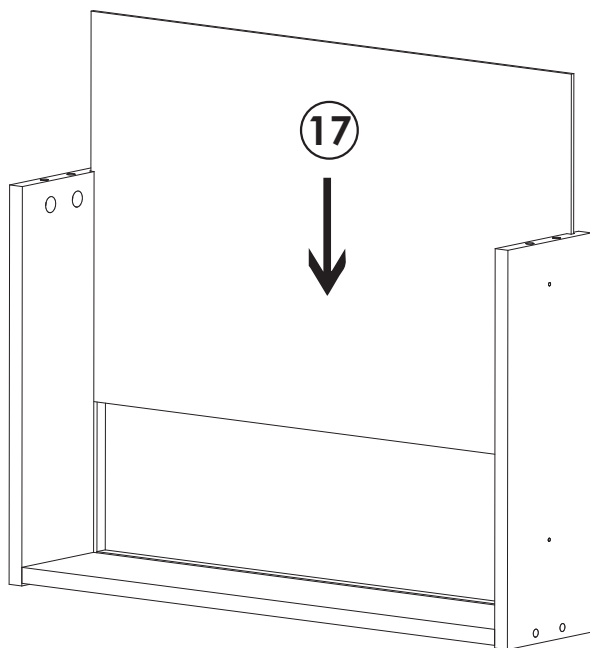

x2

4

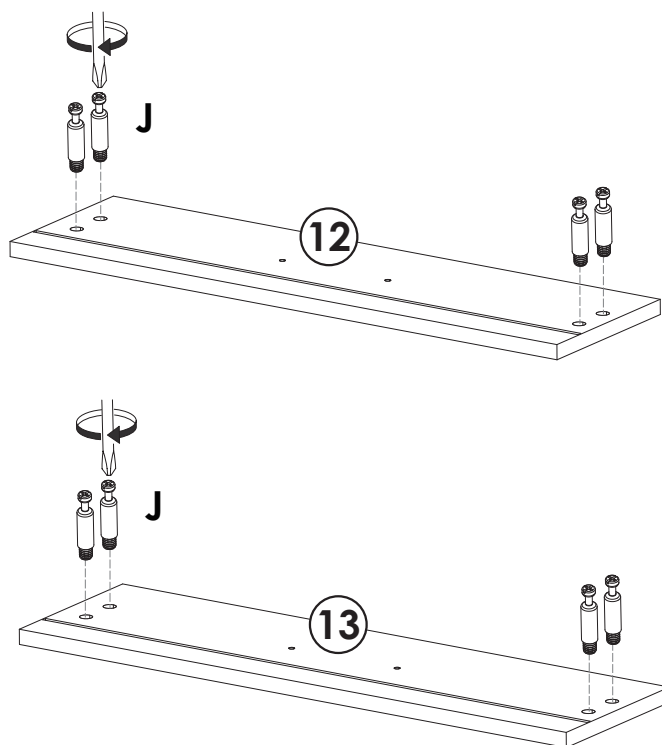


**STEP14**

**YOU WILL NEED**

**K x8**

**H x2**


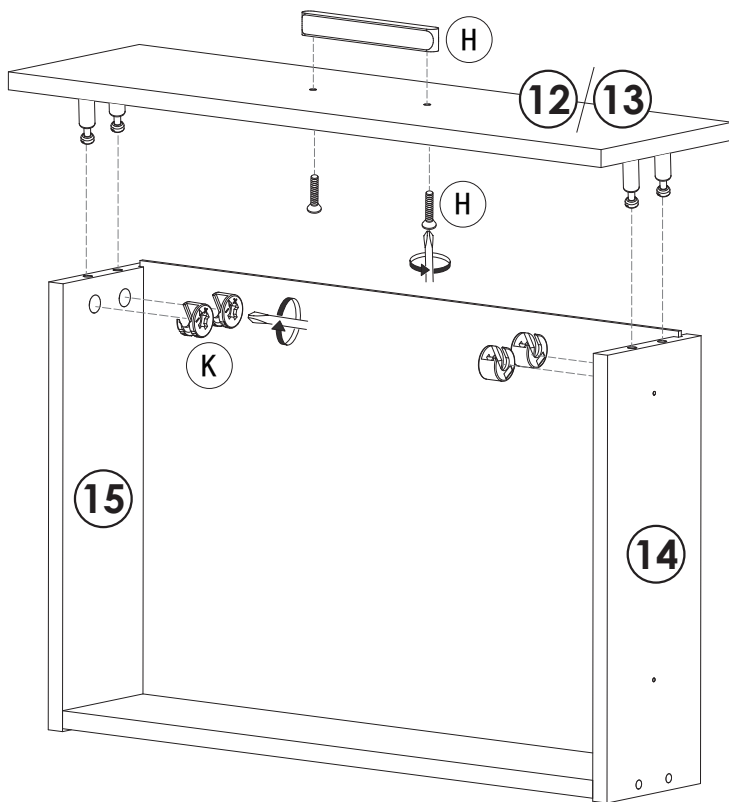


**x2**

**YOU WILL NEED**

**C<sub>2</sub> x4**


**O x8**

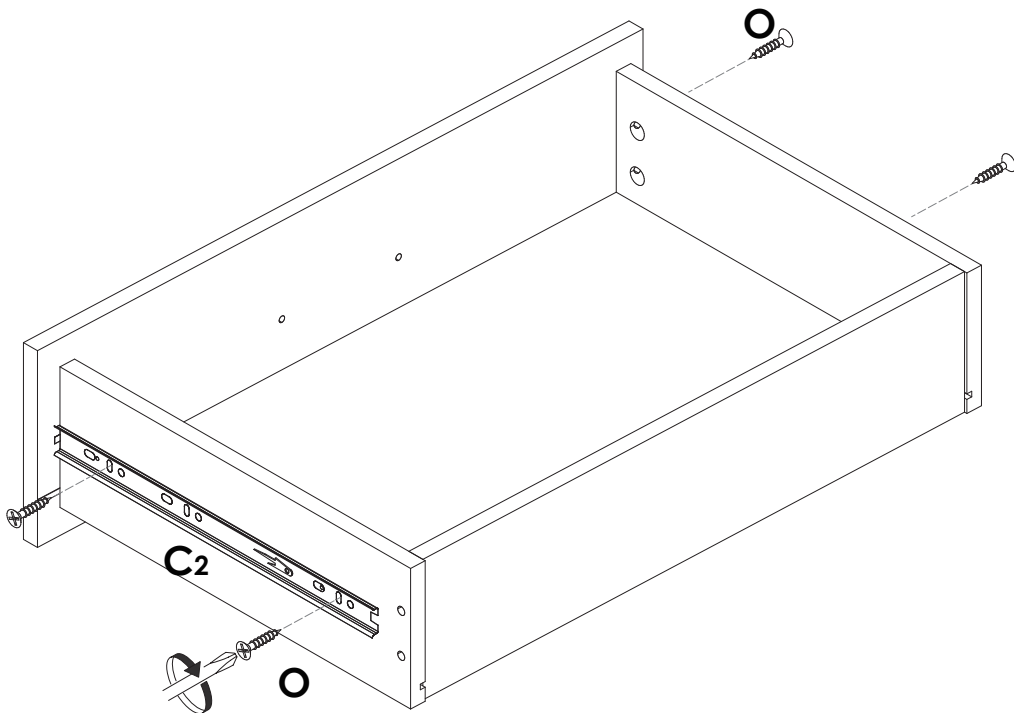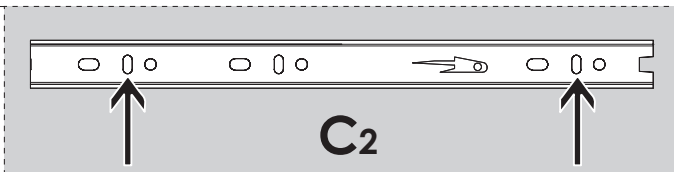

## STEP15


**REMARK:** Align the slide runners on the drawer with the unit and push it carefully inside until it stops.

★ If the drawer does not go in smoothly please take it out and repeat the step.

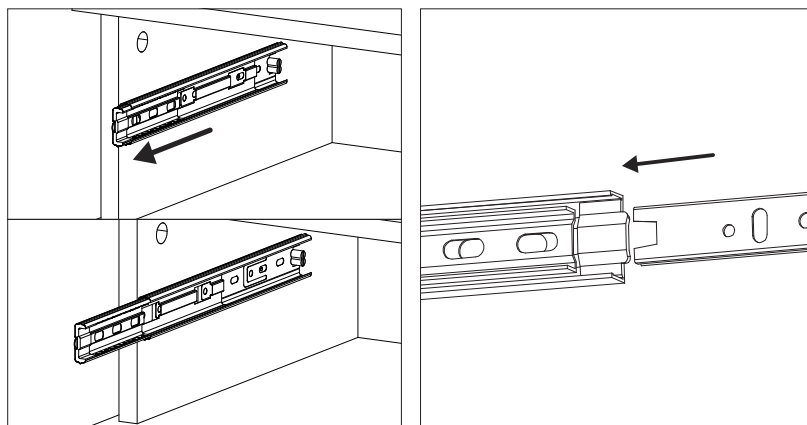


### REMARK:

1. First, slide the slide and ball on both sides of the slide to the outside.
- 2, when installing the drawer, align both sides first, and then push both sides inward at the same time.

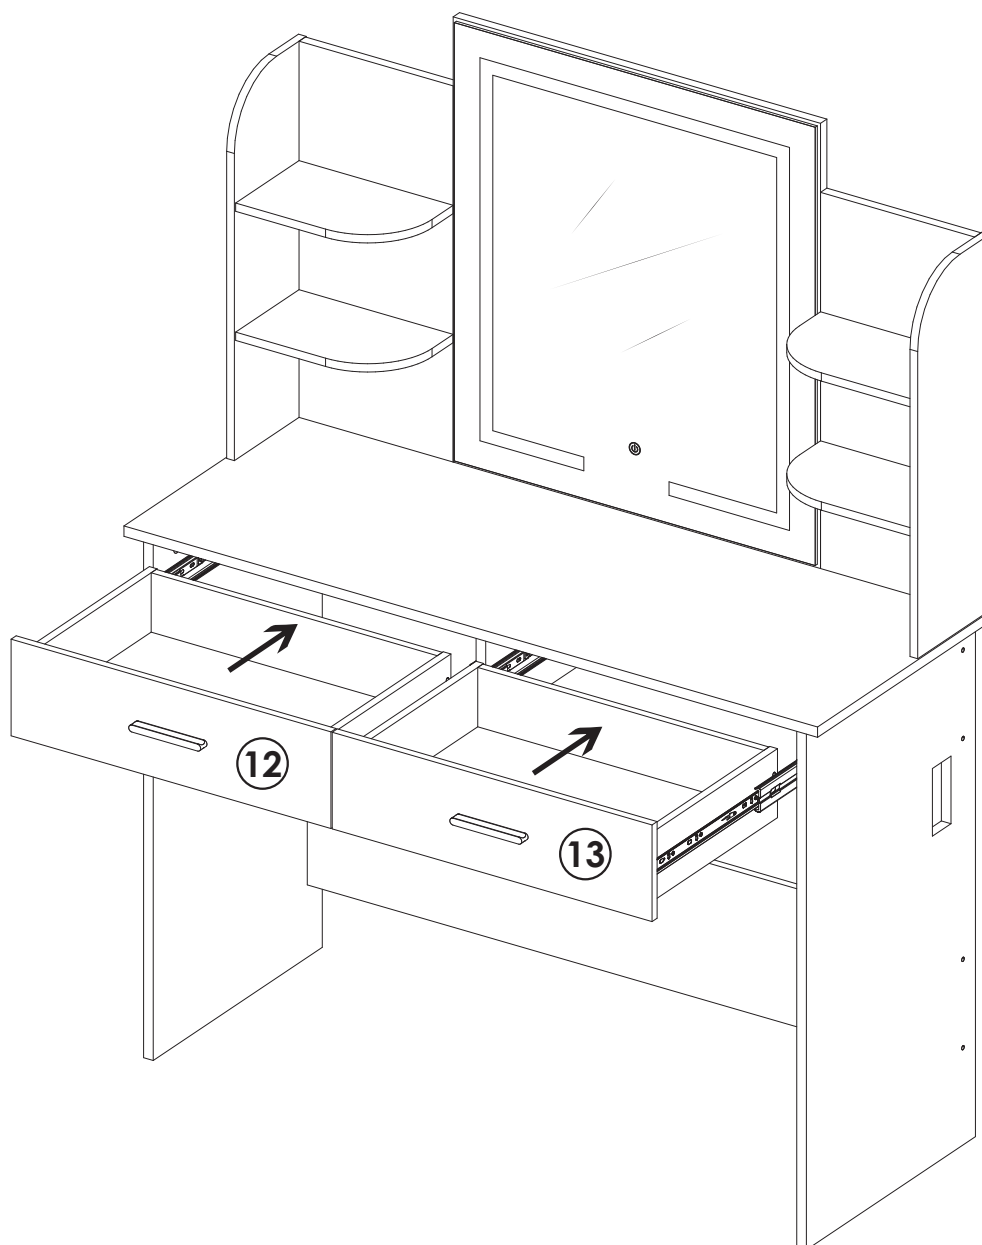

## STEP 16

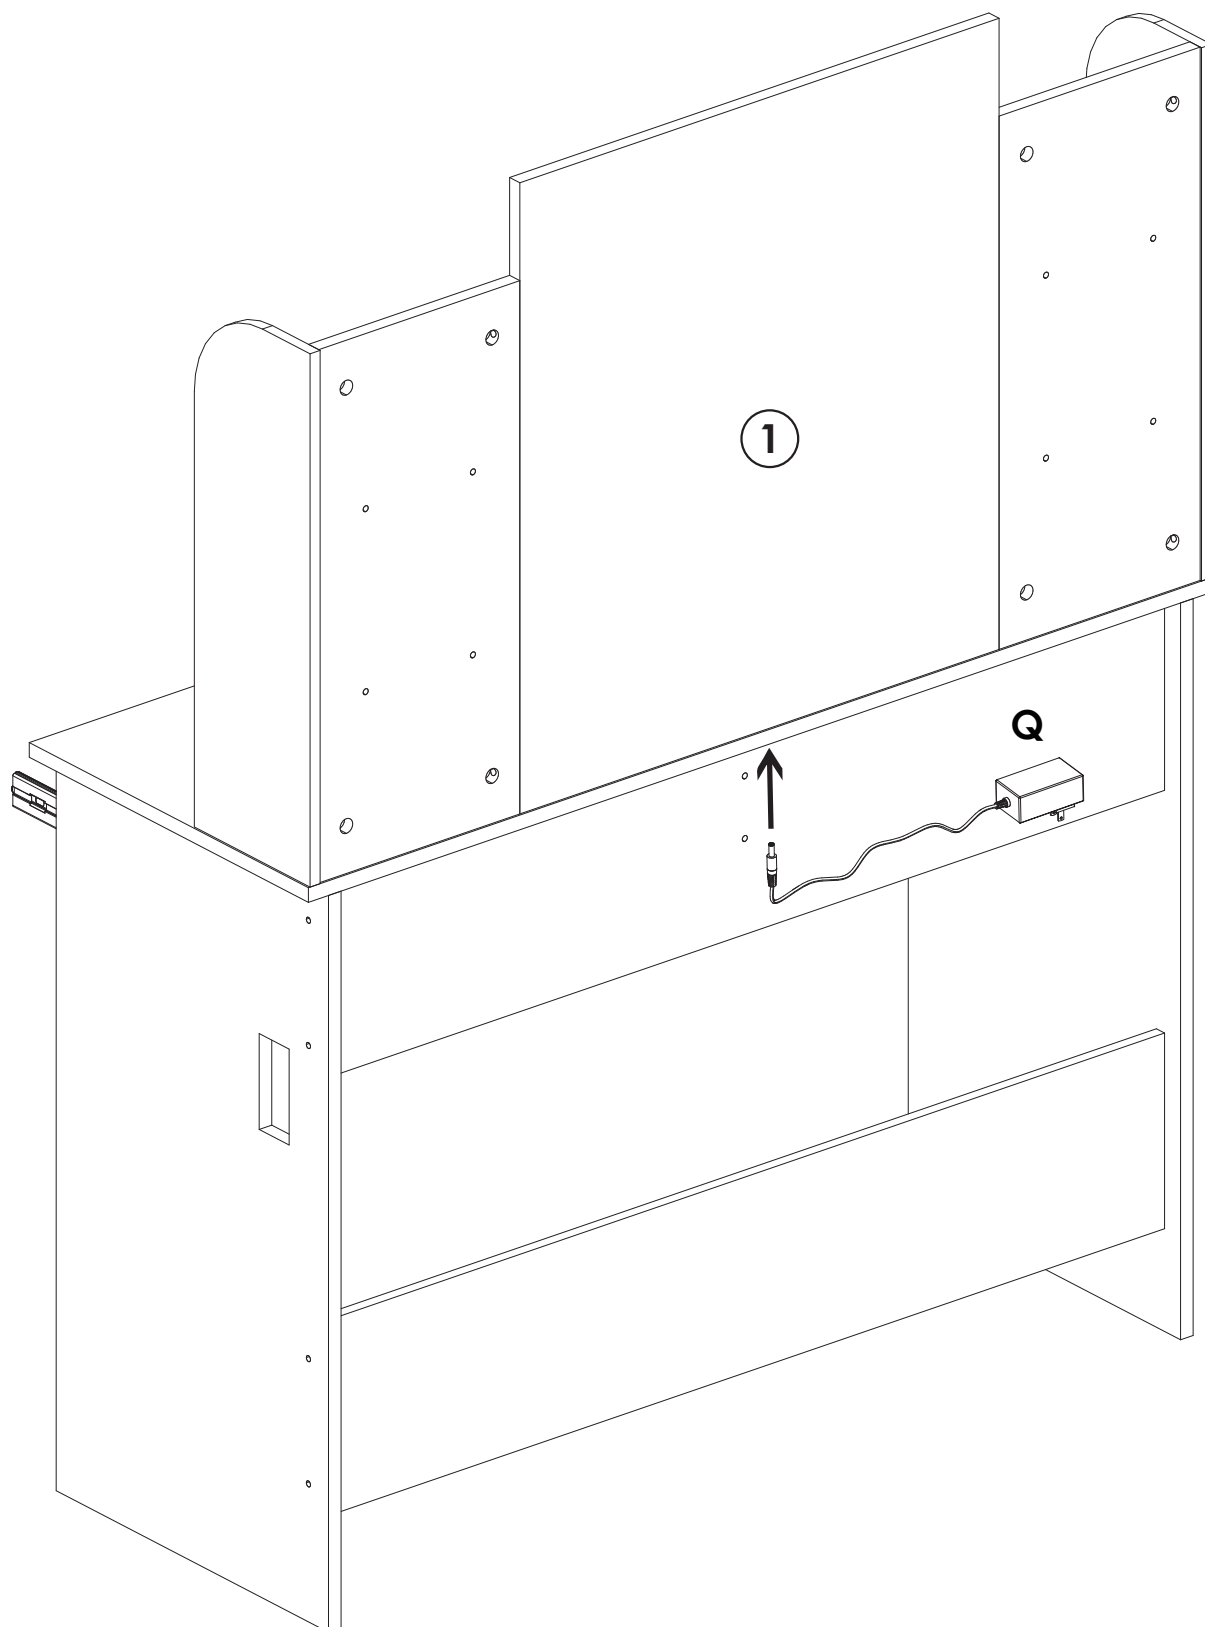

Q





x1

## STEP 17

### YOU WILL NEED

E x2

P x2

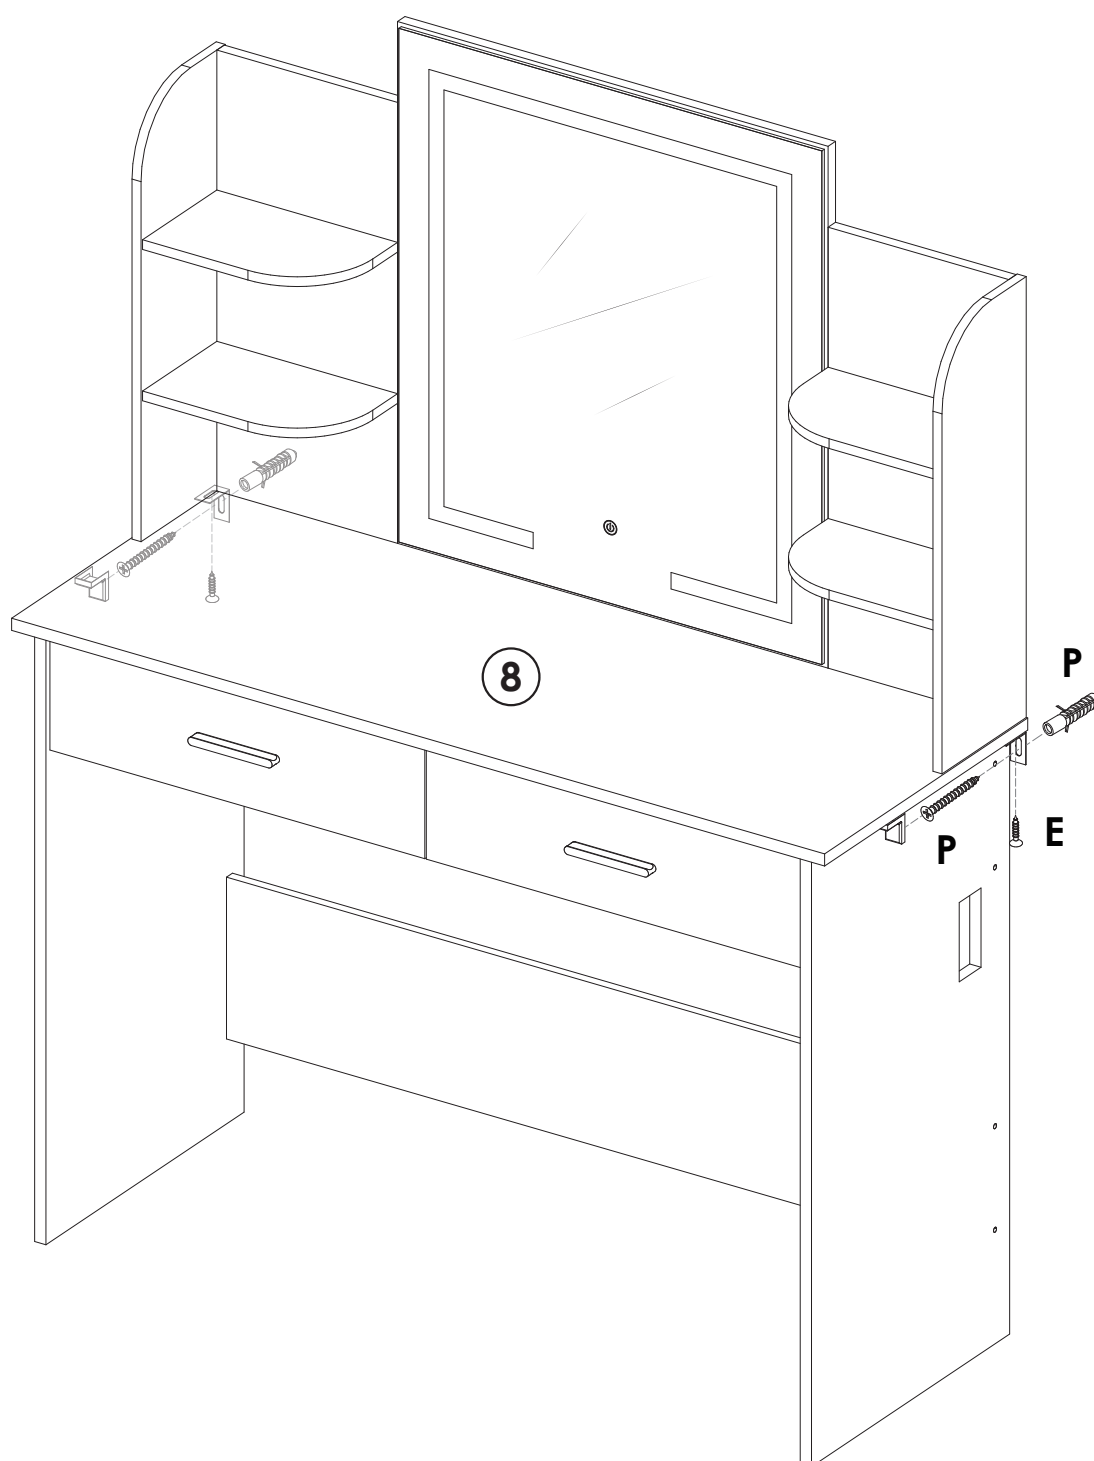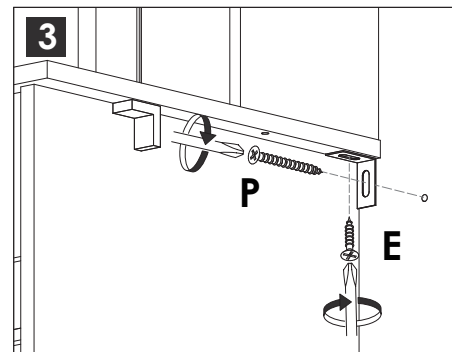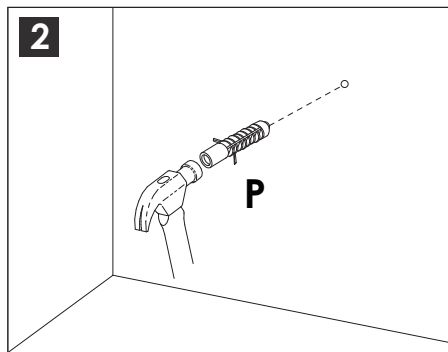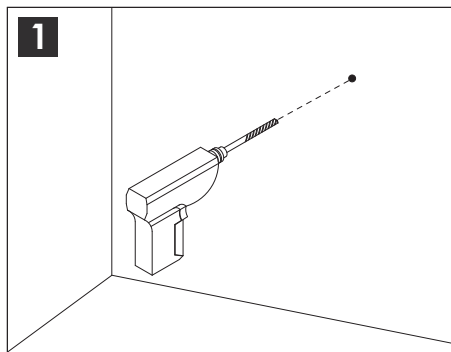

# STEP18

## YOU WILL NEED


A x4

B x4


F x4

G x4


1

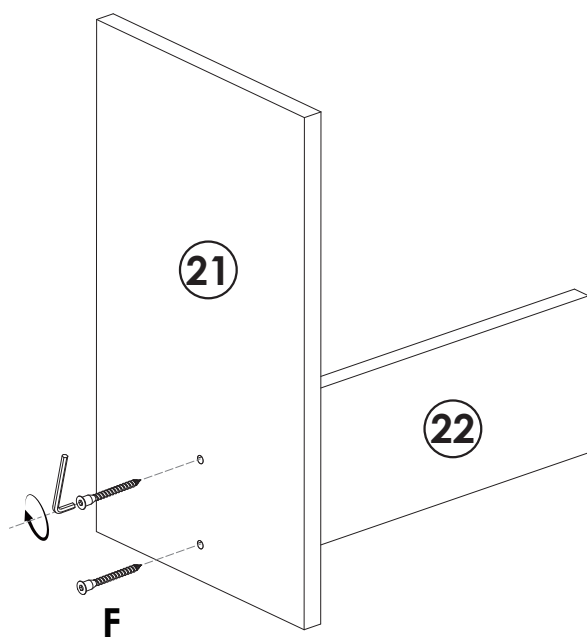


2

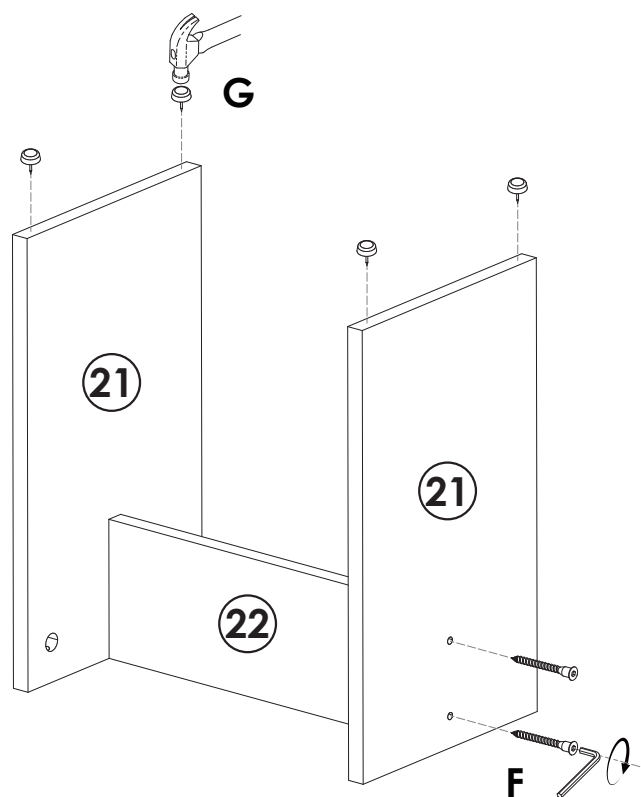

3

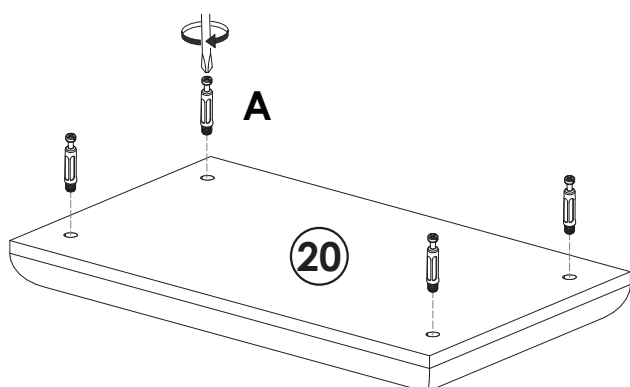

4


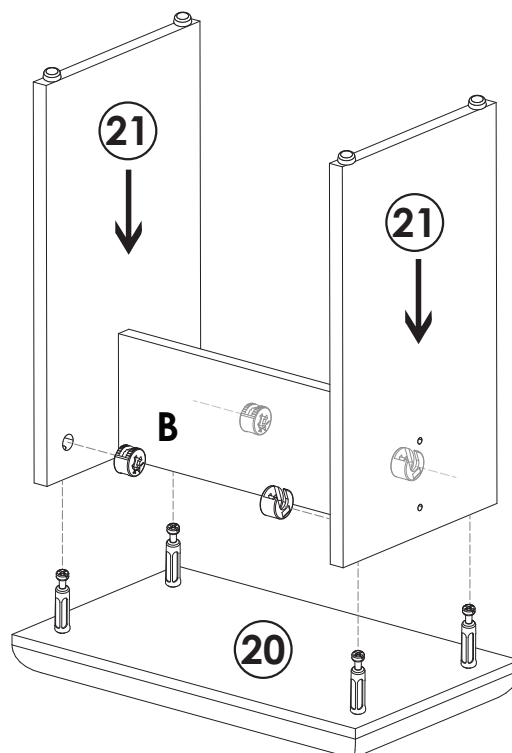


## STEP 19

### YOU WILL NEED

**E** x2




**M** x1

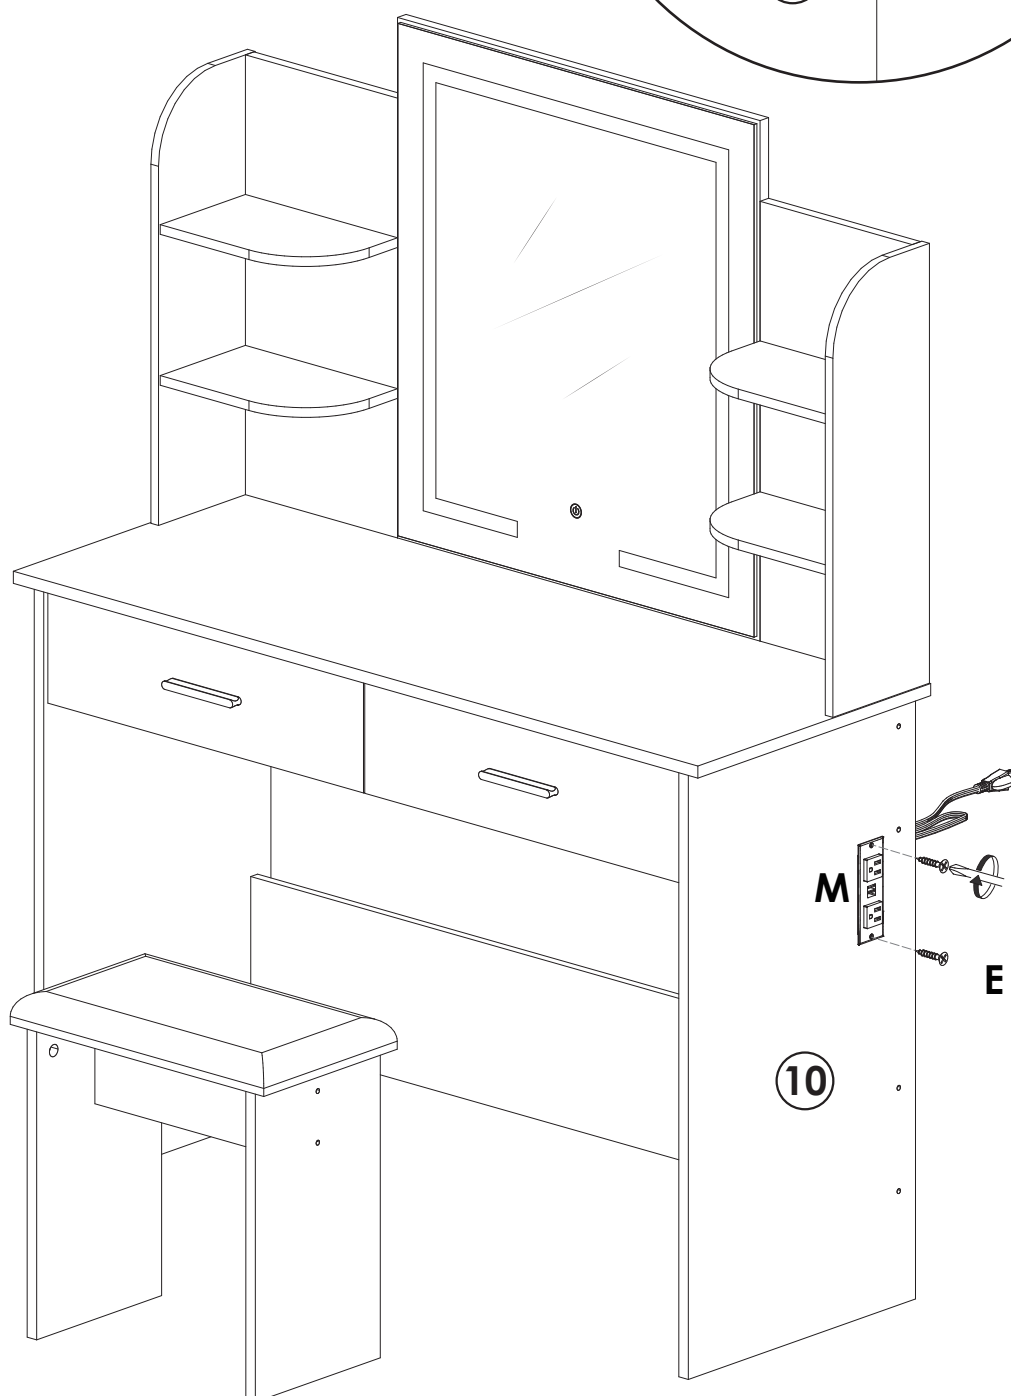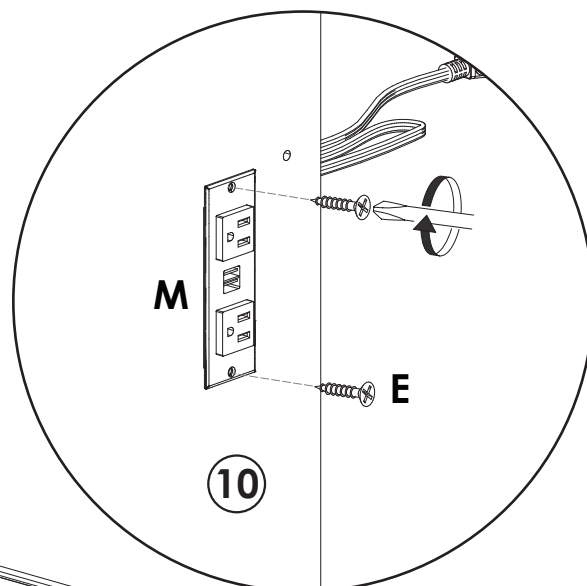

## STEP20

### YOU WILL NEED

L x32

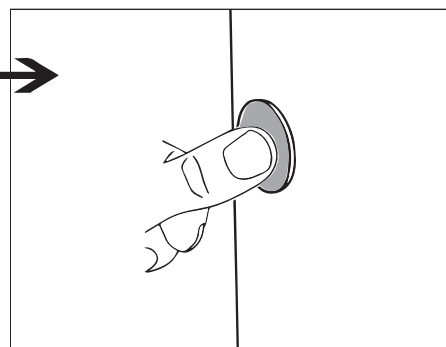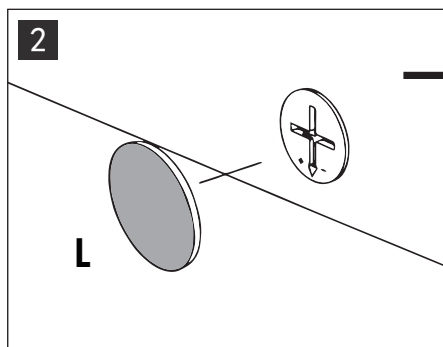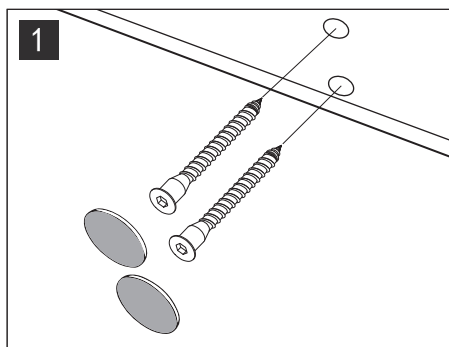

**Add L fittings to all exposed holes on the front of the product**

