


Assembly Instructions

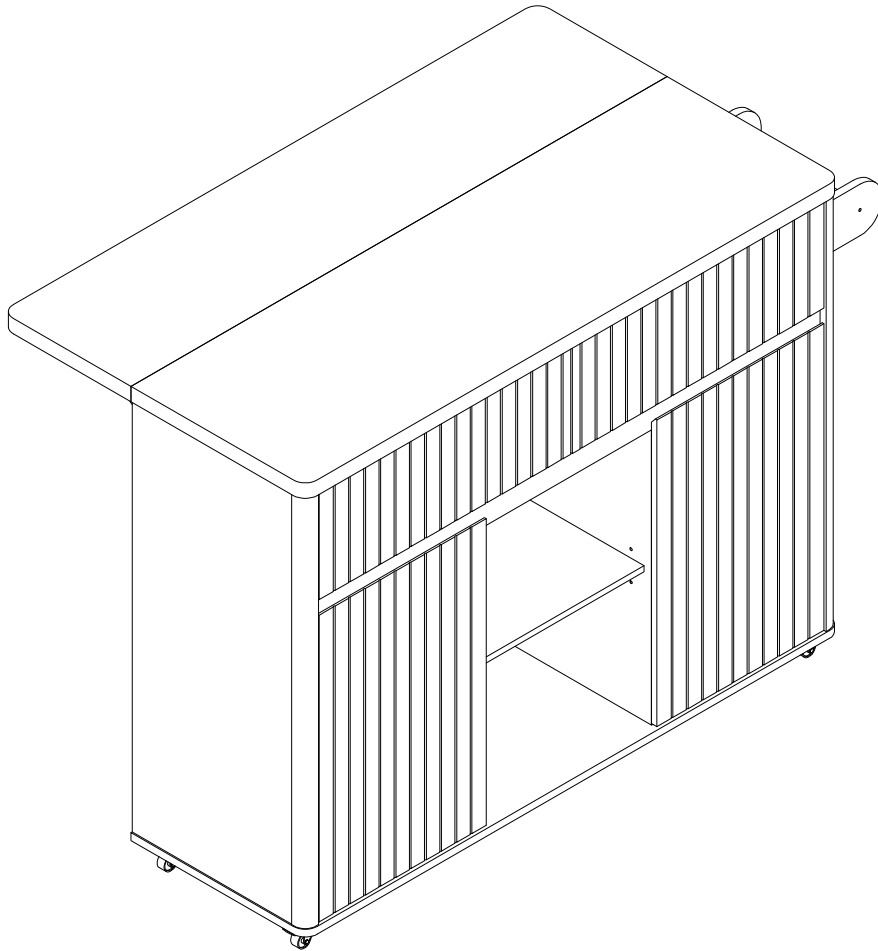

How to assemble the Weselon Mobile Kitchen Island with Storage & Drop Leaf?


Before Assembly

1. Assembly requires two or more people to complete.
2. Using power tools will make the installation finish faster.

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

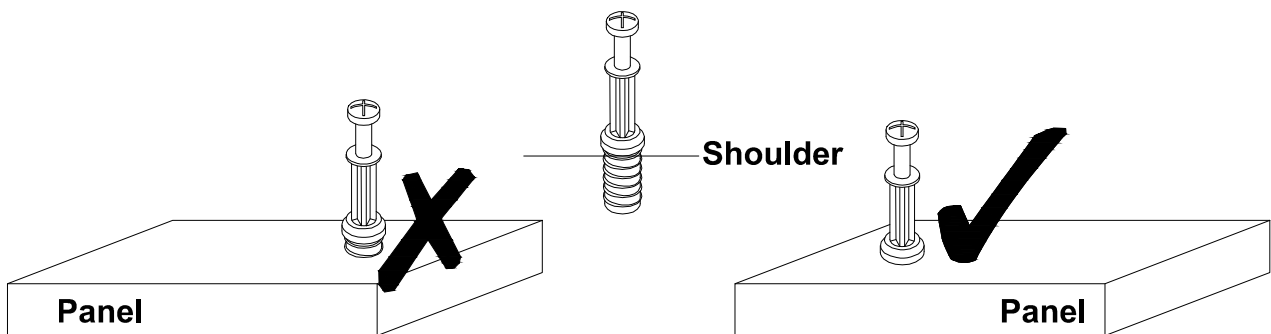

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

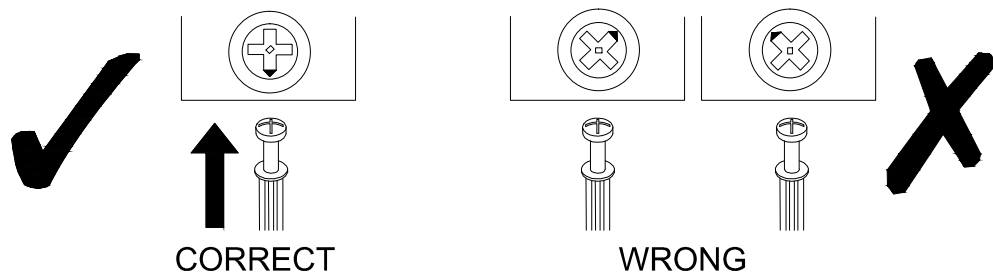

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT


Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.












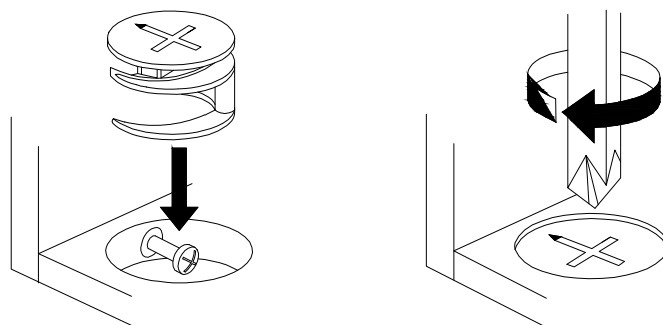


Turn cam lock clockwise to tighten.


Product structure

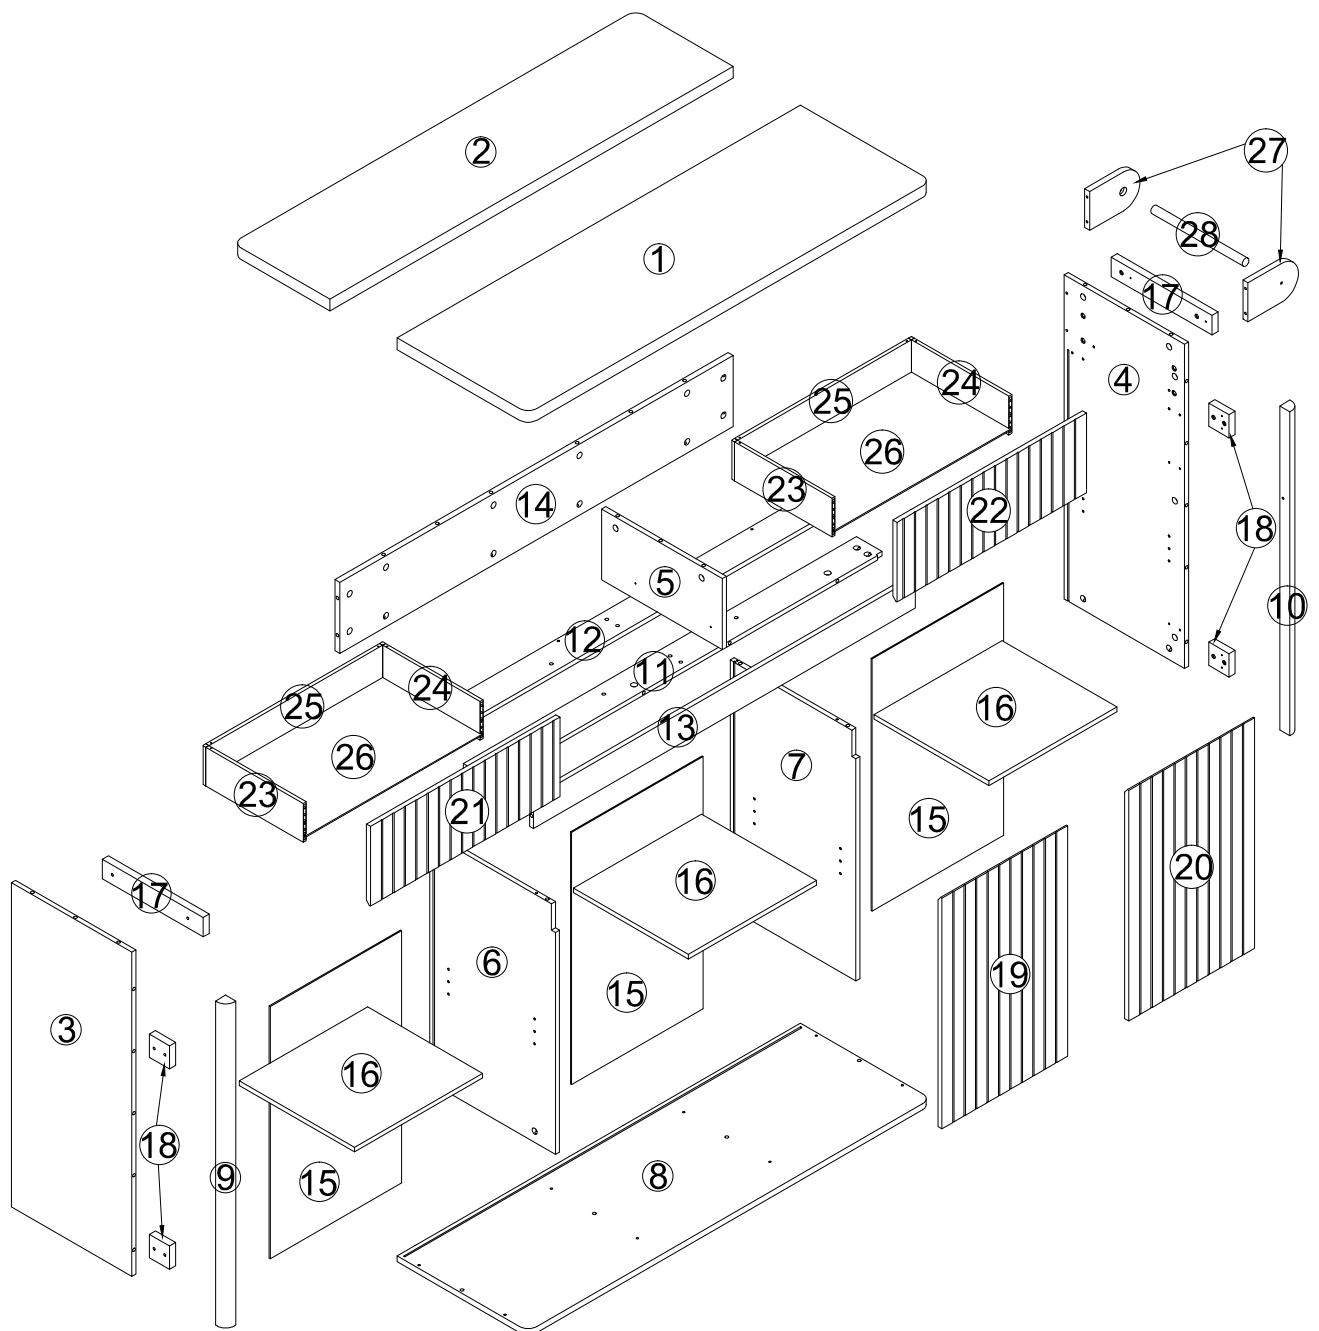


Part List

No. A Quantity:46 Pcs Cam Lock Dowel 8*28mm 	No. B Quantity:46 Pcs Cam φ15 	No. C Quantity:46 Pcs Sticker Ø20 	No. D Quantity:19 Pcs Dowel 8*30mm 
No. E Quantity:2 Sets Ordinary bottom-dragging rail 12" 	No. F Quantity:4 Pcs Large curved door hinge 	No. G Quantity:46 Pcs Screw M3.5*12mm 	No. H Quantity:9 Pcs Screw M4*25mm 
No. I Quantity:3 Pcs Pothook 	No. J Quantity:12 Pcs Shelf Support M5*15mm 	No. K Quantity:20 Pcs Screw M6*12mm 	No. L Quantity:12 Pcs Screw M5*25mm 
No. M Quantity:10 Pcs Screw M6*50mm 	No. N Quantity:1 Pc Allen Key 3# 	No. O Quantity:1 Pc Allen Key 4# 	No. P Quantity:3 Pcs Adjustable support rod 
No. Q Quantity:8 Pcs Cam Lock Dowel 8*25mm 	No. R Quantity:8 Pcs Rubber particles Ø6*12mm 	No. S Quantity:4 Pcs Drawer Connector 	No. T Quantity:16 Pcs Screw M3*12mm 
No. U Quantity:5 Pcs Swivel casters with brakes 	No. V Quantity:2 Pcs Screw M3.5*20mm 	No. W Quantity:12 Sets Plastic Wedge 	

STEP 1

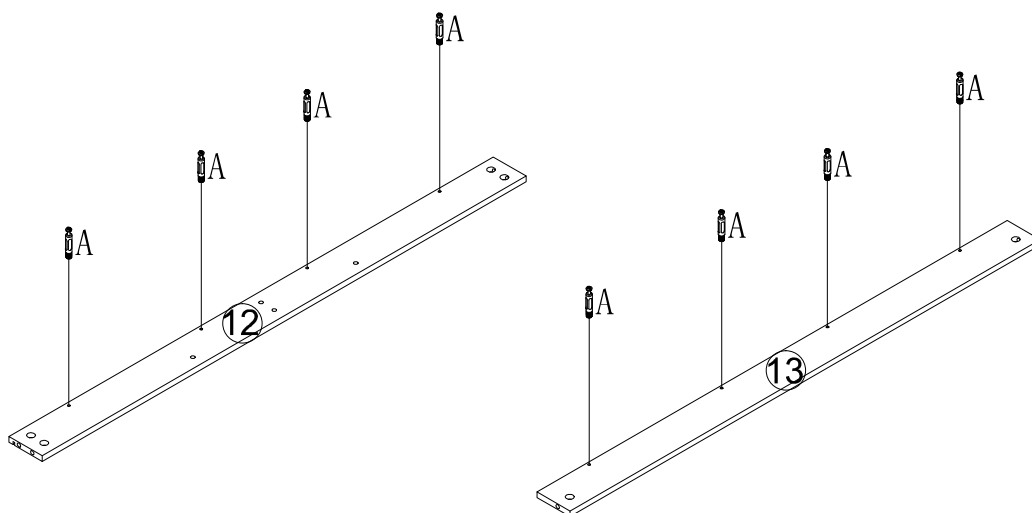


No. A
Quantity: 8 Pcs
8*28 mm





STEP 2

Correct

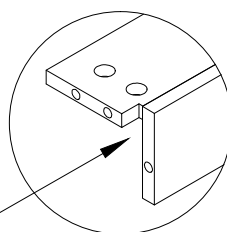

Please pay attention to the
installation direction during
installation

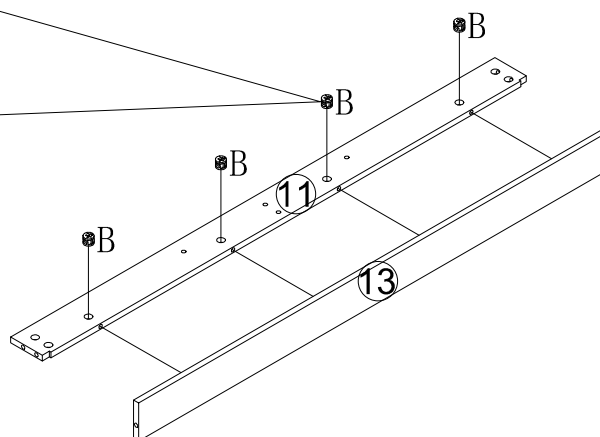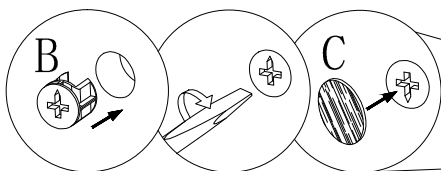


No. B
Quantity: 4 Pcs
Ø15



No. C
Quantity: 4 Pcs
Ø20



STEP 3

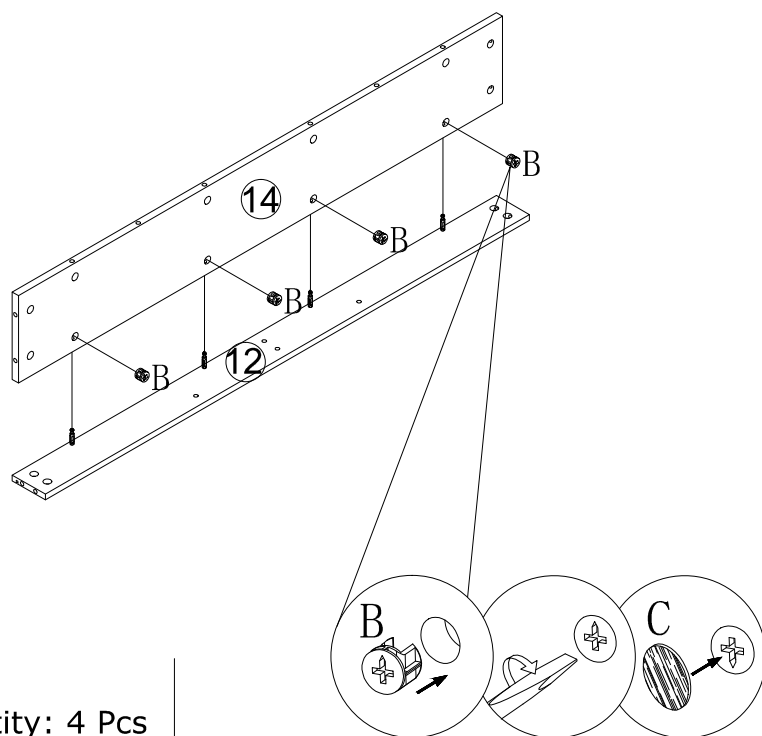


No. B
Quantity: 4 Pcs
Ø15




No. C
Quantity: 4 Pcs
Ø20




STEP 4

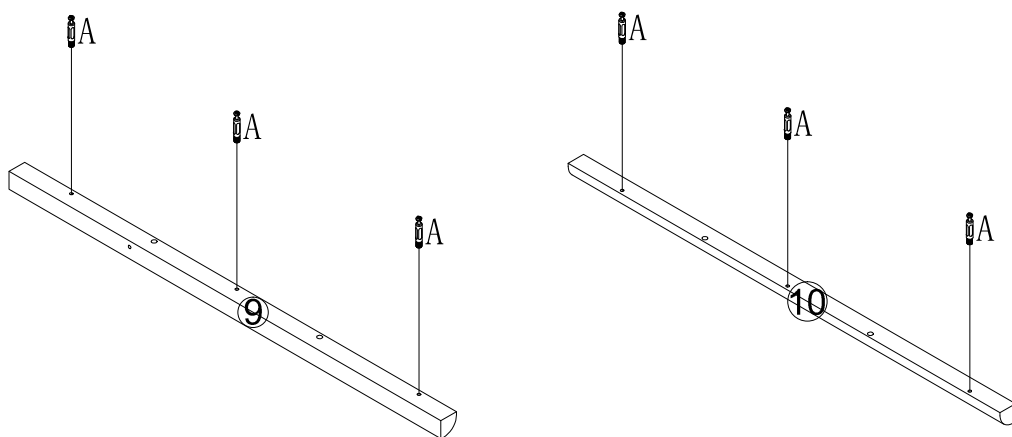

No. A
Quantity: 6 Pcs
8*28 mm



STEP 5

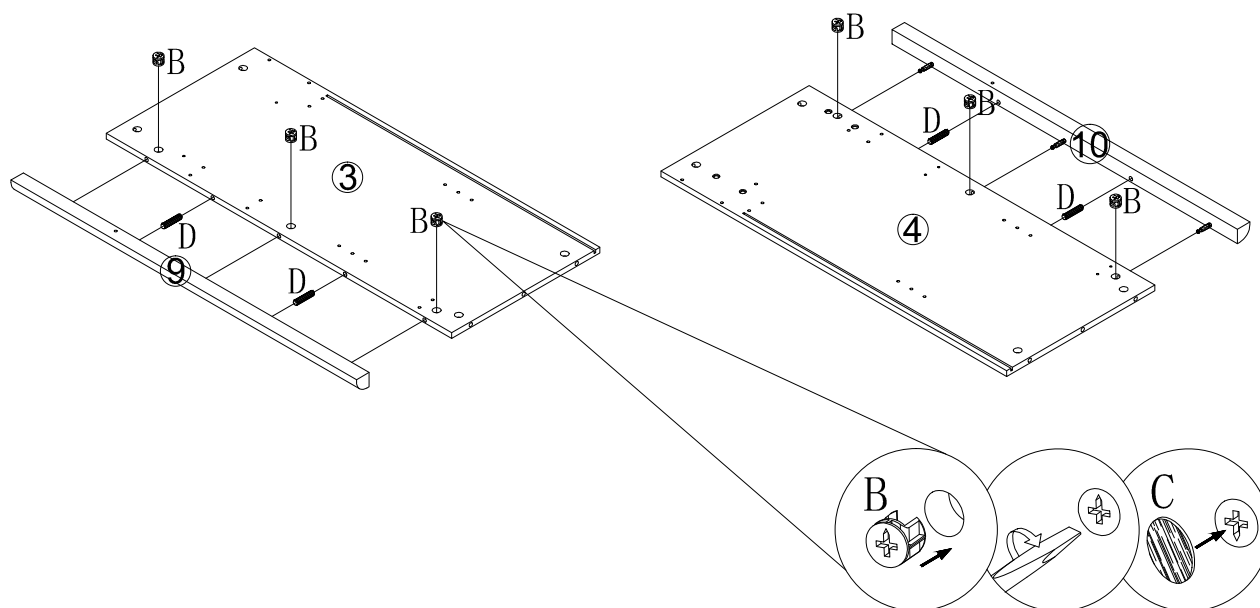


No. B
Quantity: 6 Pcs
Ø15




No. C
Quantity: 6 Pcs
Ø20



No. D
Quantity: 4 Pcs
8*30mm




STEP 6

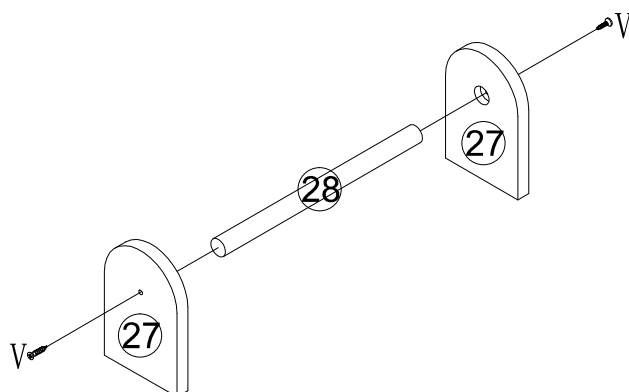

No. V
Quantity: 2 Pcs
M3.5*20mm



STEP 7

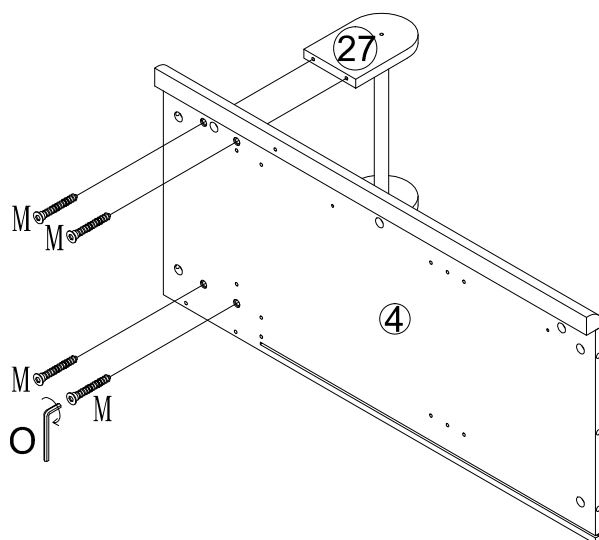

No. M
Quantity: 4 Pcs
M6*50mm




No. O
Quantity: 1 Pc
4#



STEP 8

Please pay attention to the installation direction during installation; the guide hole should face outward.

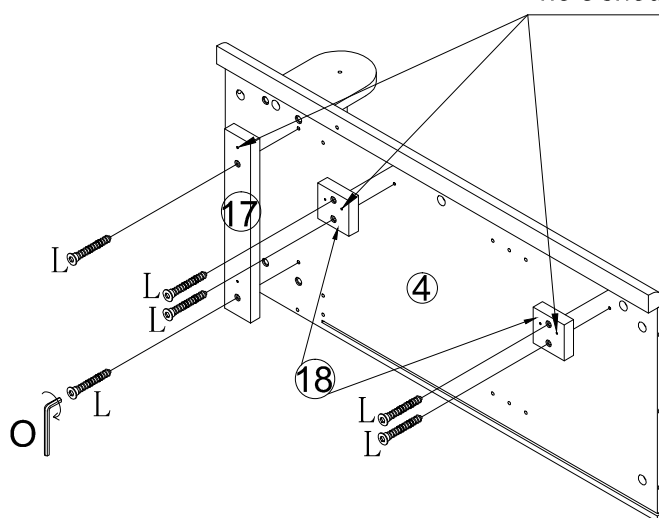

No. L
Quantity: 6 Pcs
M5*25mm




No. N
Quantity: 1 Pc
3#



STEP 9

Please pay attention to the installation direction during installation; the guide hole should face outward.

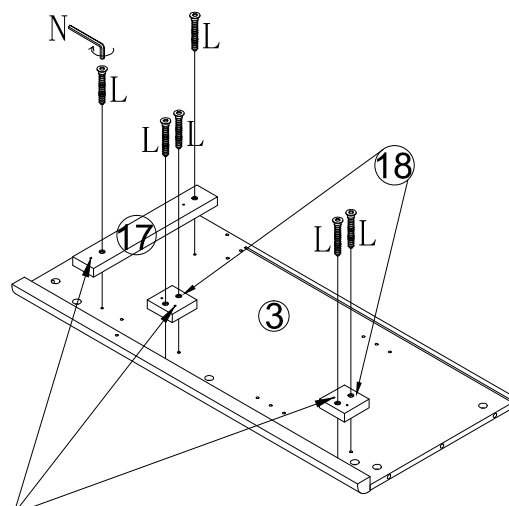


No. L
Quantity: 6 Pcs
M5*25mm




No. N
Quantity: 1 Pc
3#




STEP 10

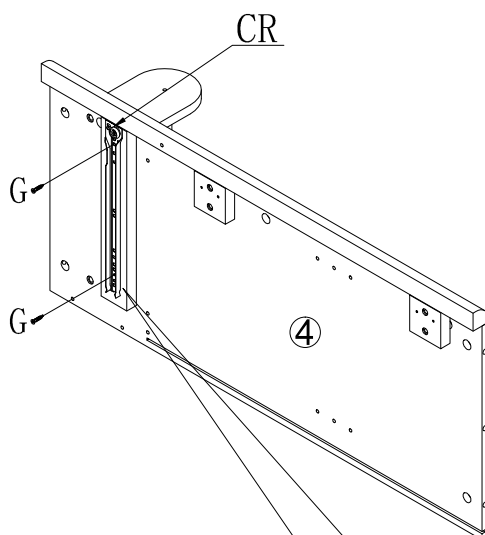


No. E
Quantity: 1 Pcs
12"




No. G
Quantity: 2 Pcs
M3.5*12mm

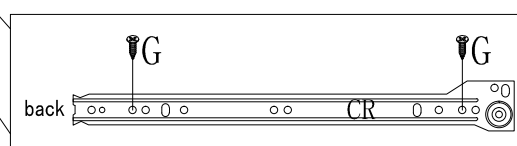

STEP 11

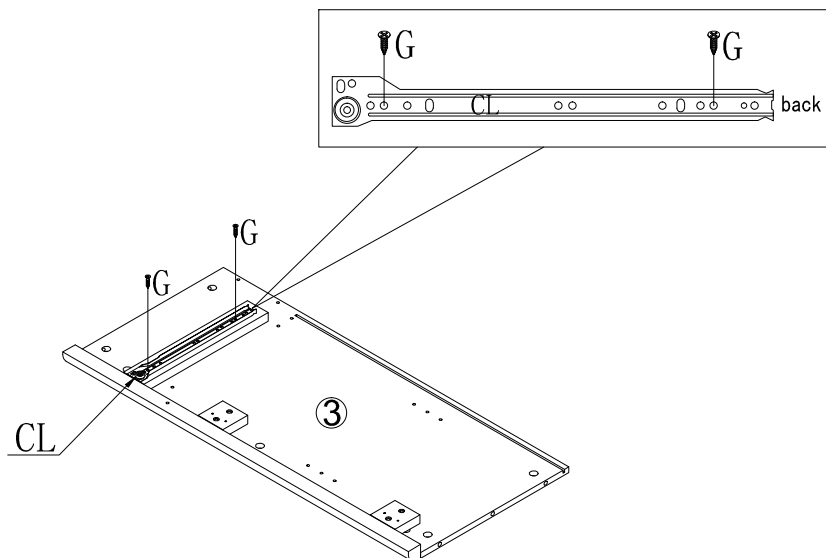


No. E
Quantity: 1 Pcs
12"




No. G
Quantity: 2 Pcs
M3.5*12mm




STEP 12

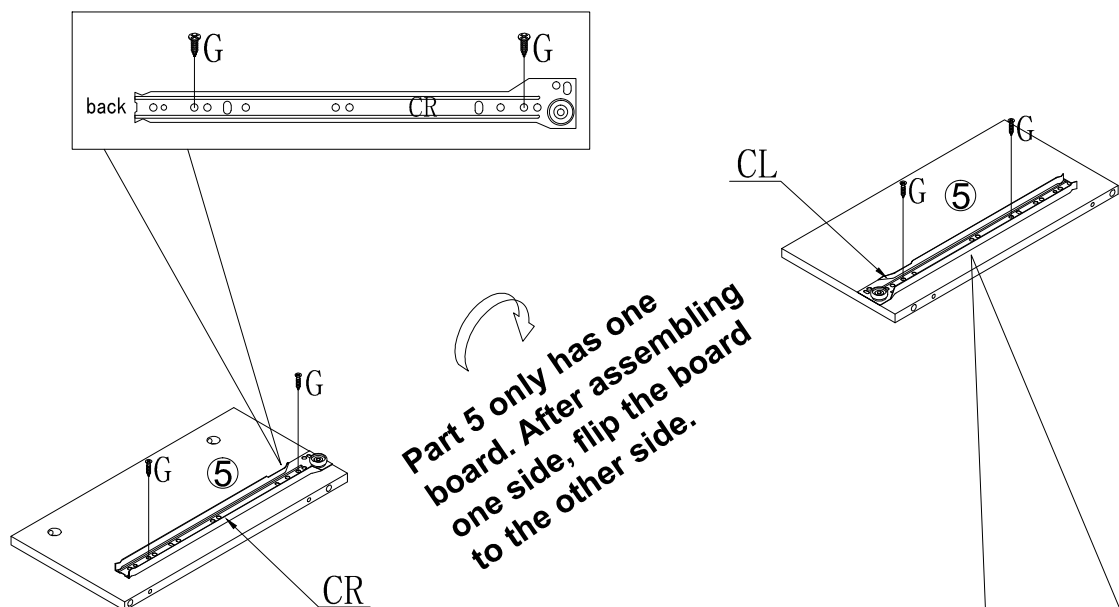


No. E
Quantity: 1 Sets
12"




No. G
Quantity: 4 Pcs
M3.5*12mm

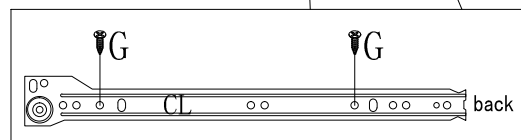


STEP 13

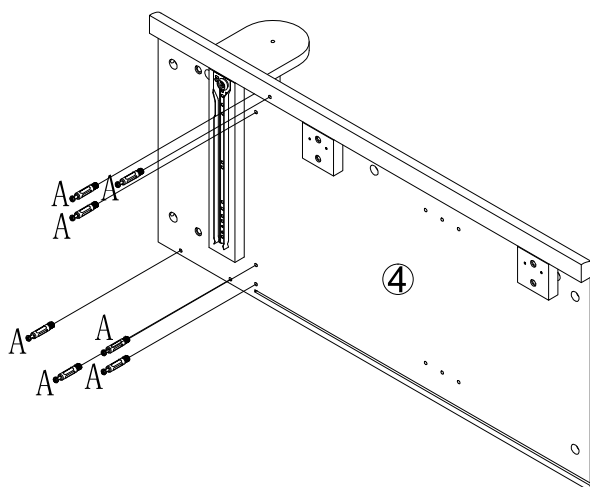

No. A
Quantity: 7 Pcs
8*28 mm



STEP 14

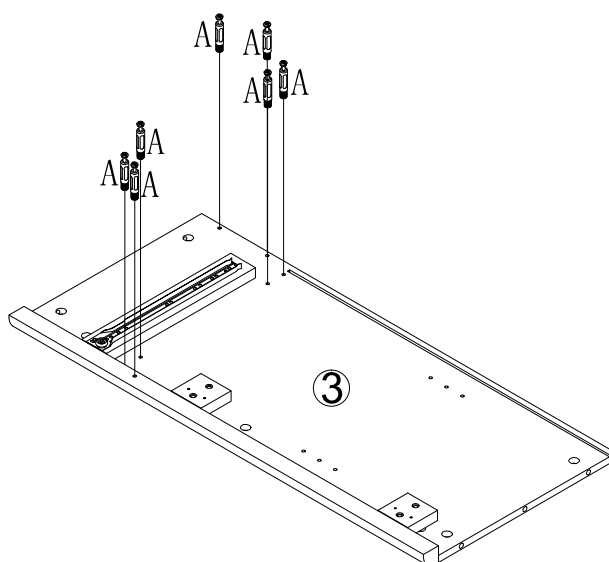

No. A
Quantity: 7 Pcs
8*28 mm




STEP 15

No. B
Quantity: 7 Pcs
Ø15



No. C
Quantity: 7 Pcs
Ø20

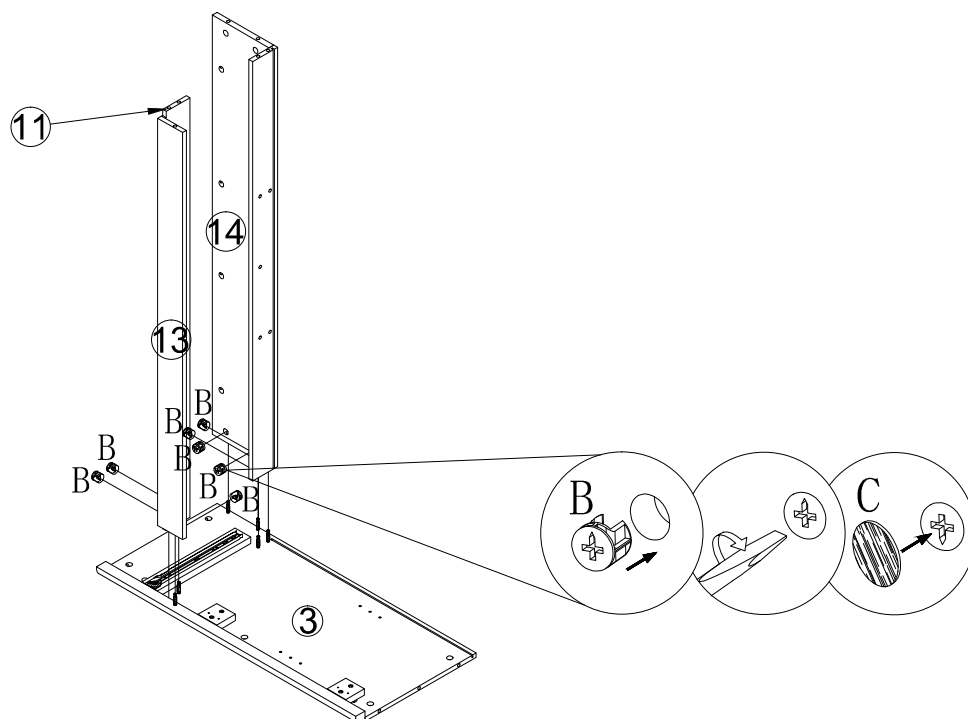


STEP 16

Please note that the upper panel is suspended during installation. Please support the upper panel with your hand.

No. B
Quantity: 7 Pcs
Ø15




No. C
Quantity: 7 Pcs
Ø20

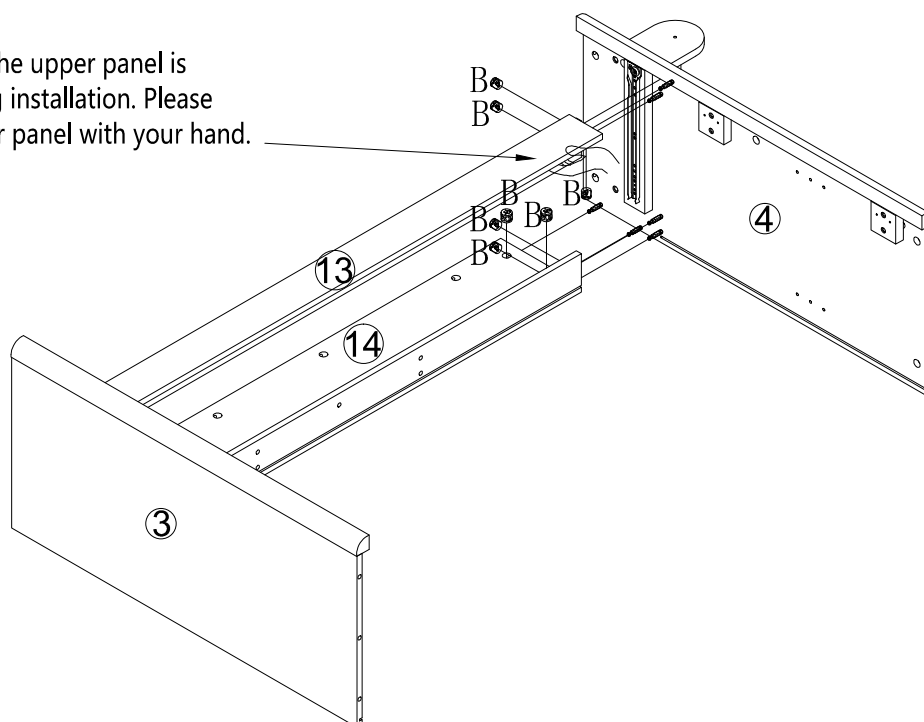

STEP 17


No. D
Quantity: 2 Pcs
8*30mm



No. M
Quantity: 2 Pcs
M6*50mm




No. O
Quantity: 1 Pc
4#

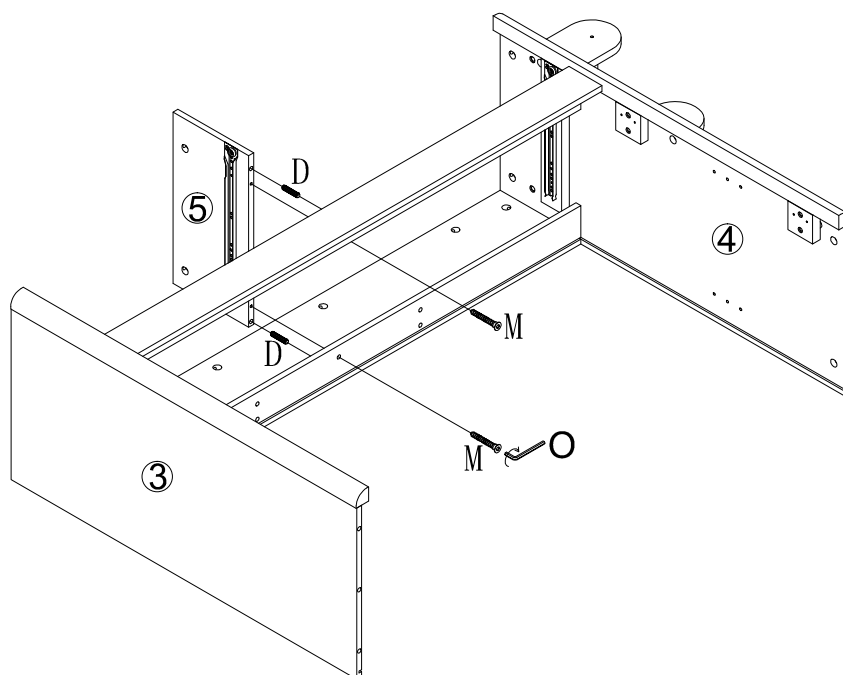

STEP 18


No. D
Quantity: 4 Pcs
8*30mm




No. M
Quantity: 4 Pcs
M6*50mm



No. O
Quantity: 1 Pc
4#

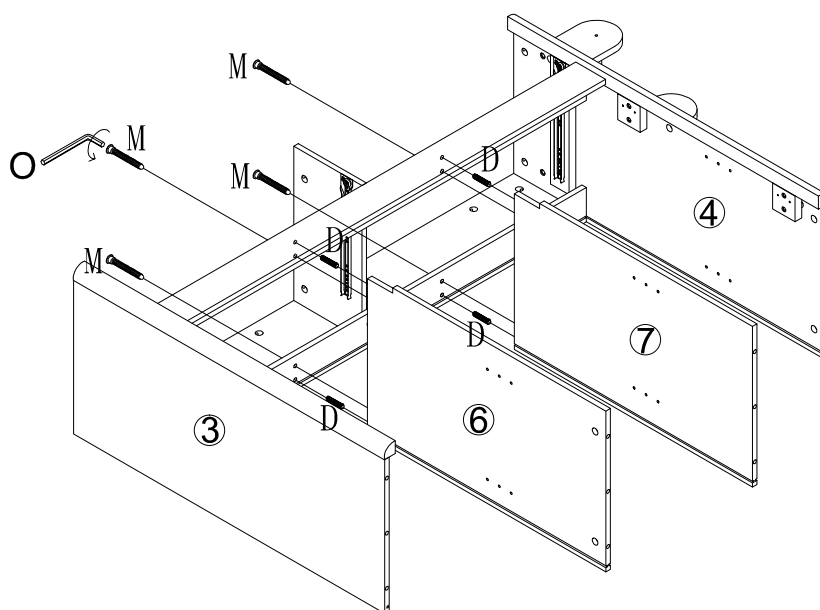

STEP 19

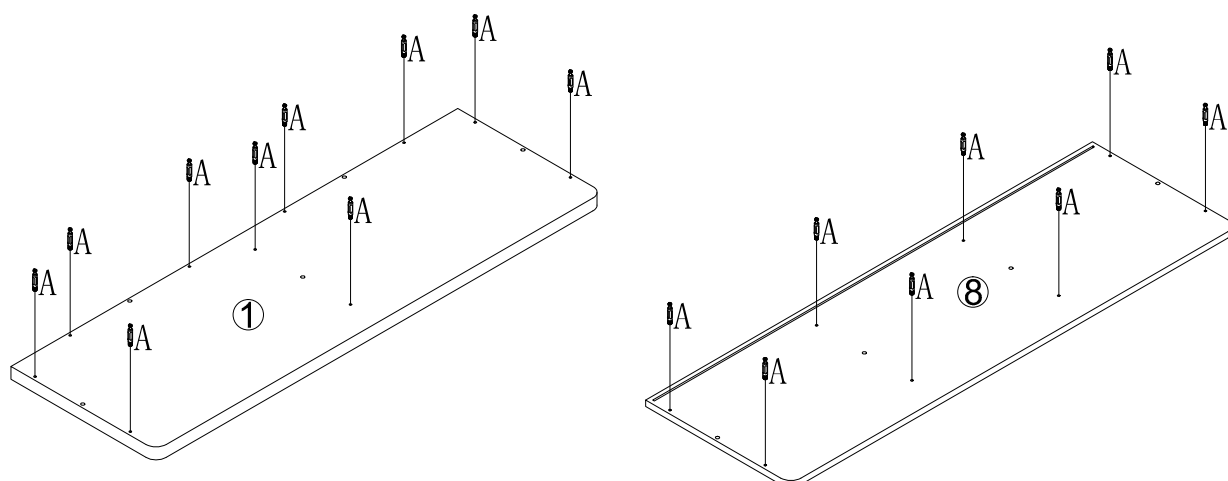

No. A
Quantity: 18 Pcs
8*28 mm



STEP 20



No. B
Quantity: 10 Pcs
Ø15




No. C
Quantity: 10 Pcs
Ø20



No. D
Quantity: 5 Pcs
8*30mm

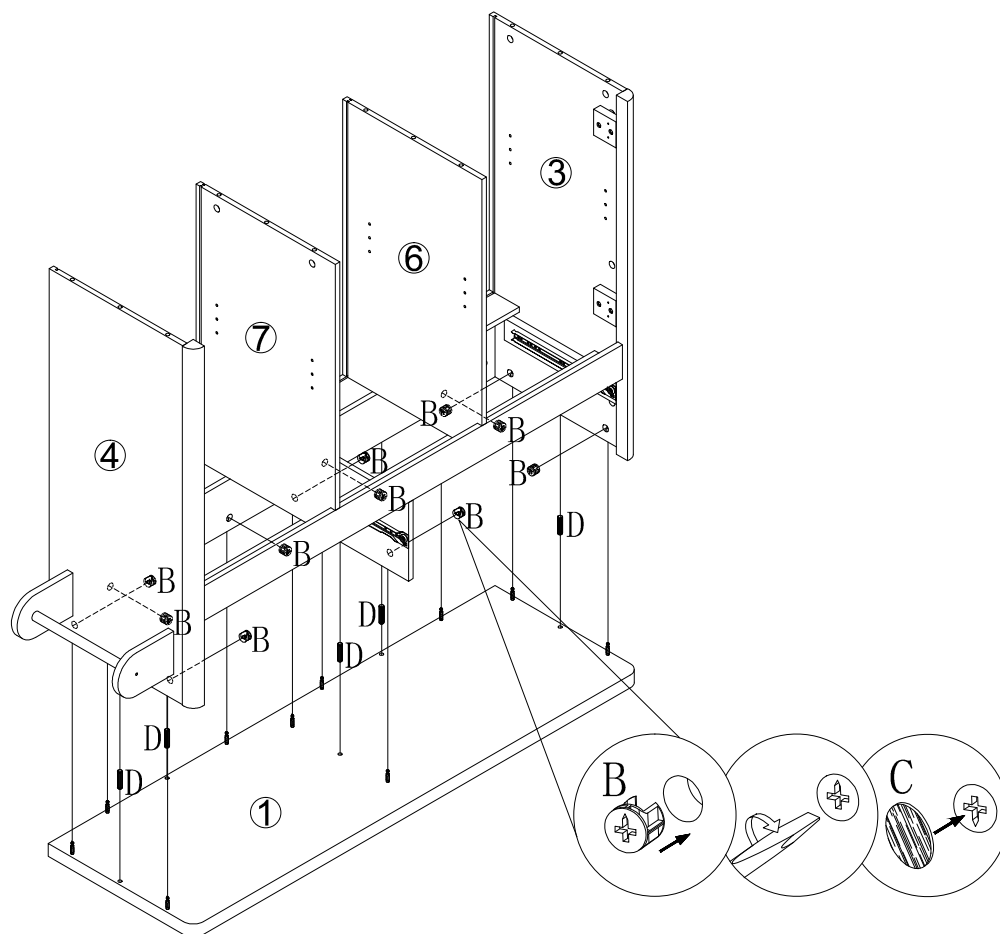

STEP 21

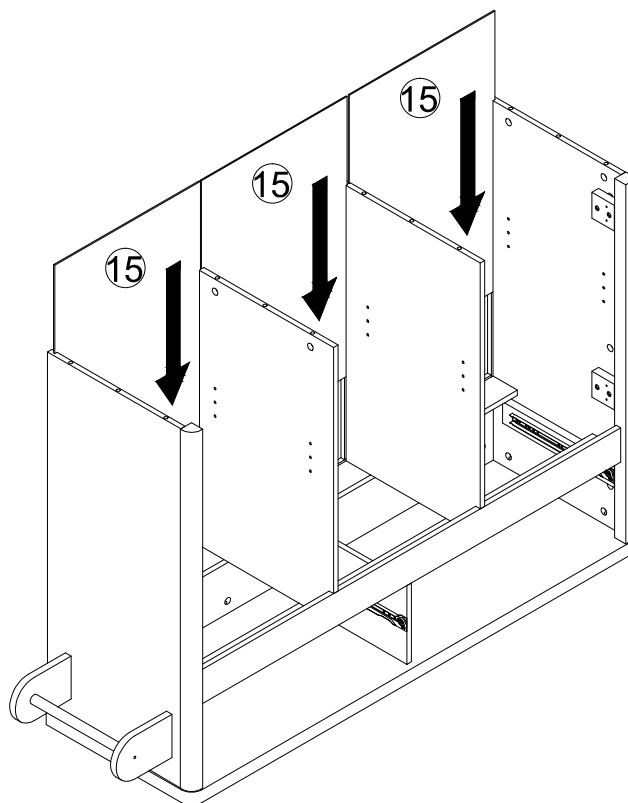

STEP 22



No. B
Quantity: 8 Pcs
Ø15



No. C
Quantity: 8 Pcs
Ø20



No. D
Quantity: 4 Pcs
8*30mm

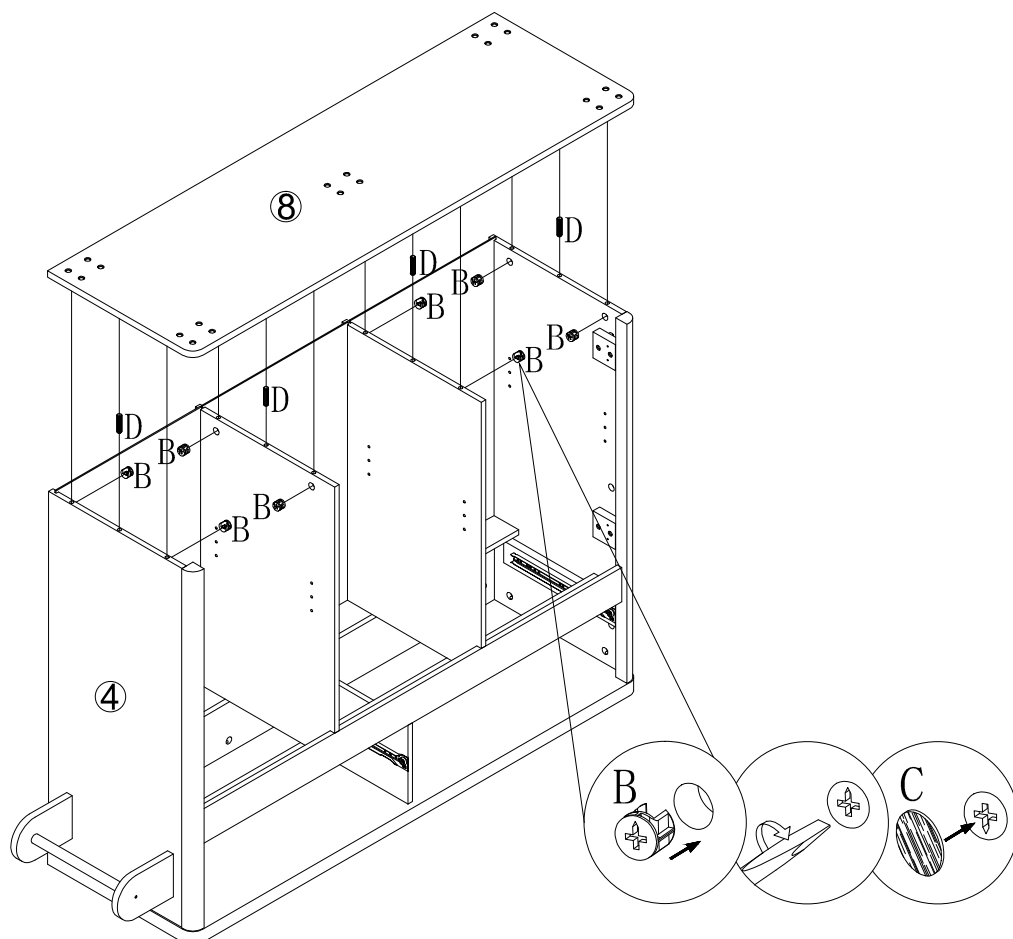

STEP 23



No. K
Quantity: 20 Pcs
M6*12mm



No. O
Quantity: 1 Pc
4#




No. U
Quantity: 5 Pcs

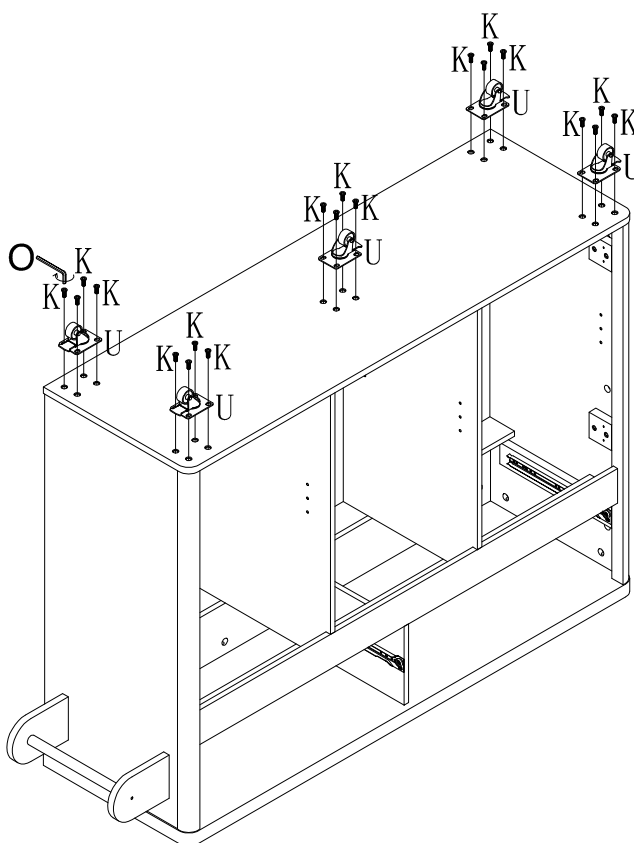


STEP 24



No. J
Quantity: 12 Pcs
M5*15mm

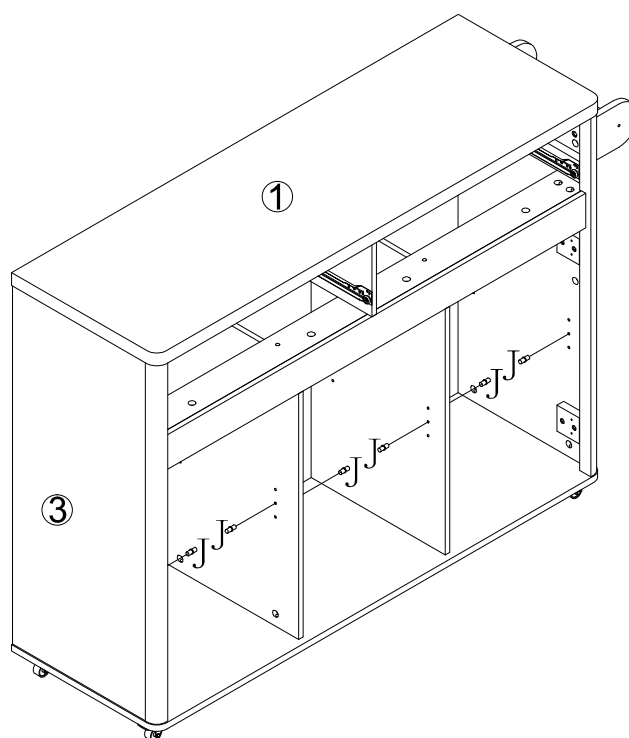


STEP 25

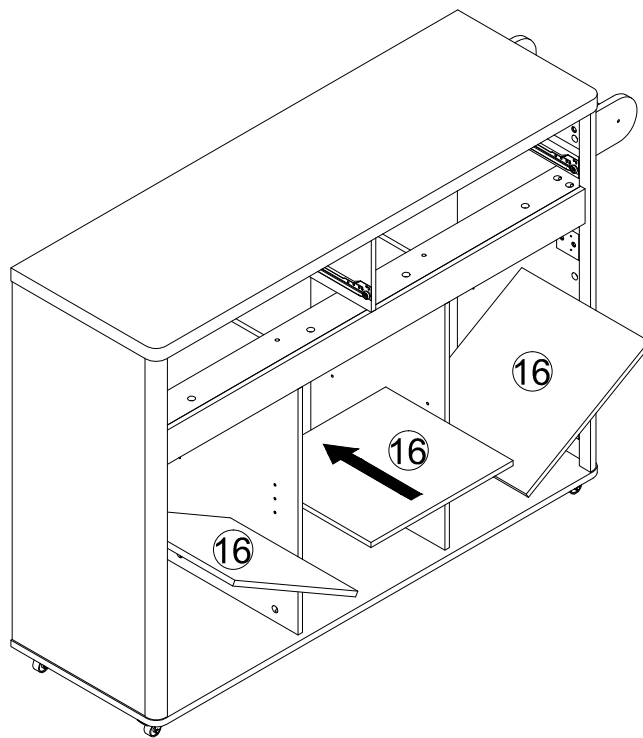


STEP 26

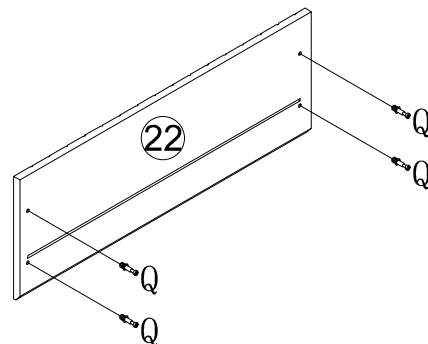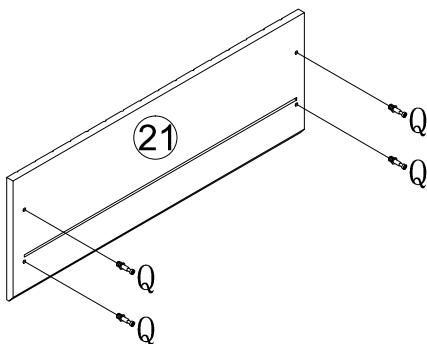


No. Q
Quantity: 8 Pcs
8*25mm




STEP 27

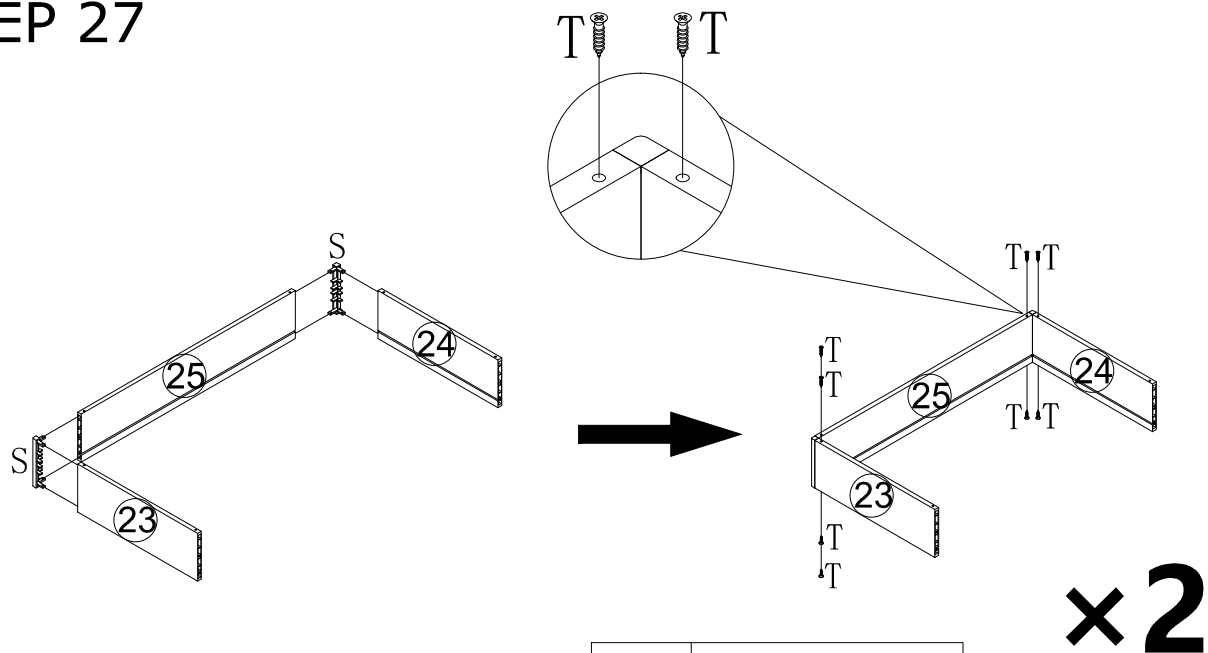

No. S
Quantity: 4 Pcs




No. T
Quantity: 16 Pcs
M3*12mm




Please note that both the top and bottom need to be secured with screws when connecting.

STEP 28

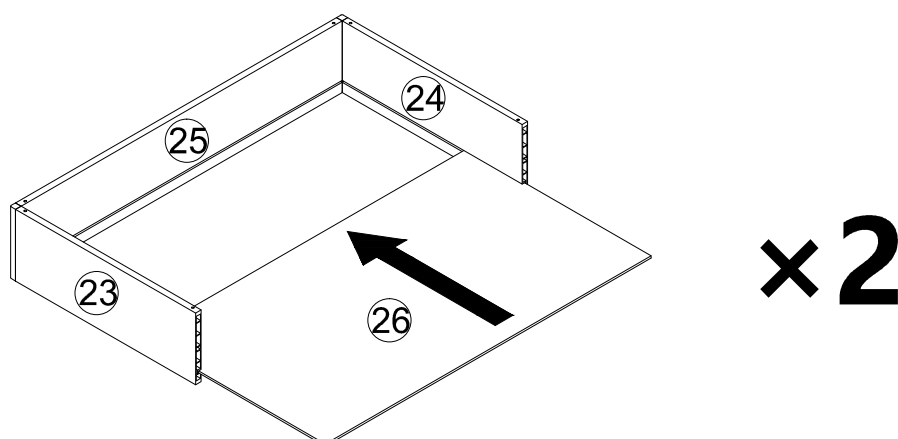

STEP 29

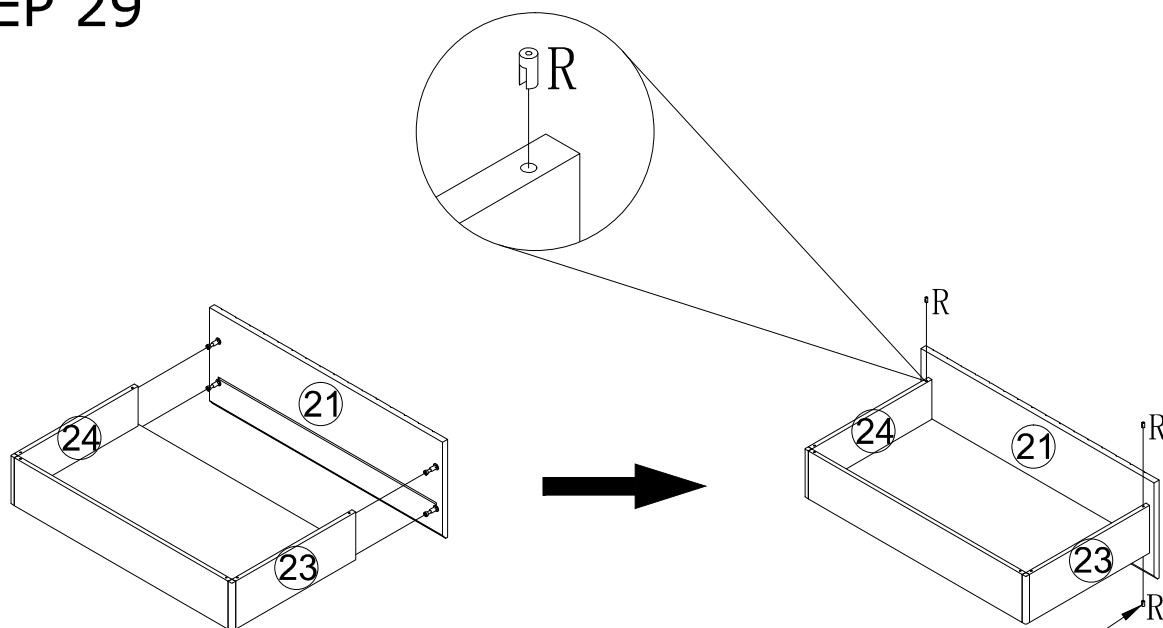


No. R
Quantity: 4 Pcs
Ø6*12mm



Please note that at the connection, both above and below, the glue beads need to be tapped into place.

STEP 30

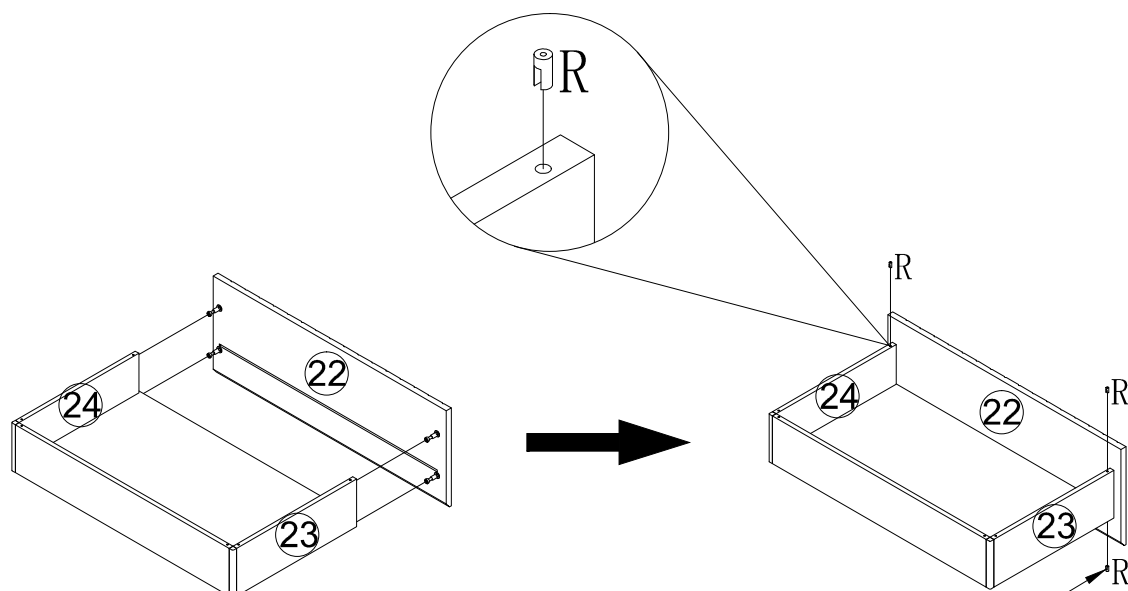


No. R
Quantity: 4 Pcs
Ø6*12mm




Please note that at the connection, both above and below, the glue beads need to be tapped into place.


STEP 31

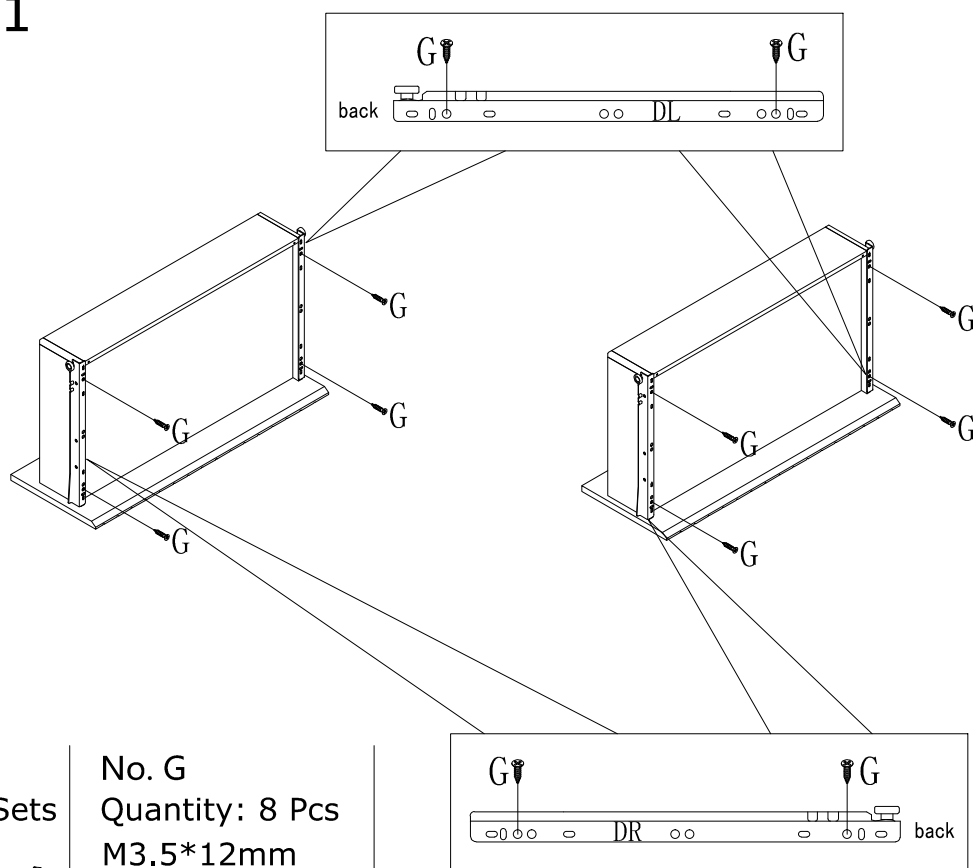


No. E
Quantity: 2 Sets
12"



No. G
Quantity: 8 Pcs
M3.5*12mm



STEP 32

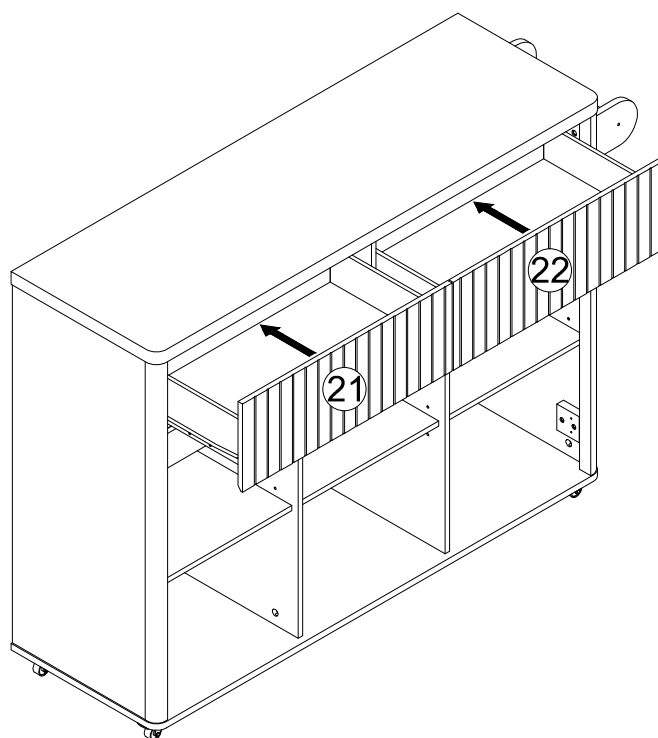


The way to adjust the door by hinge.




TikTok



YouTube


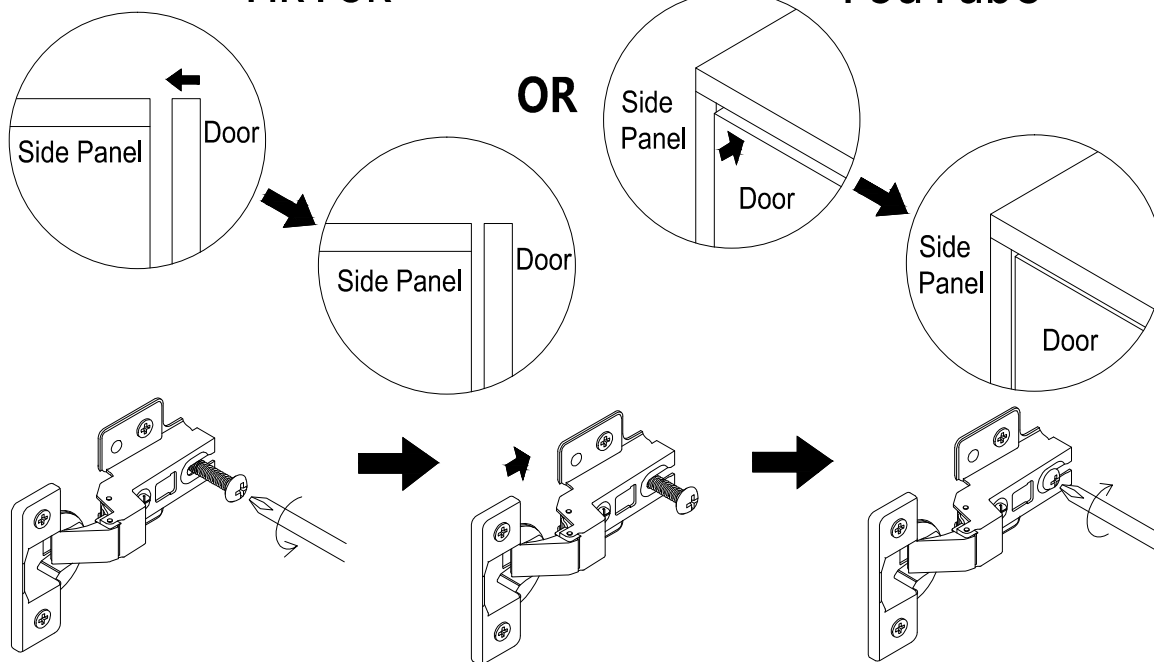


If the gap is too big between side panel and door or the door is over the edge of side panel, loose the back screw as shown, then move in the door with hinge and tighten the back screw as shown when the gap is just well.


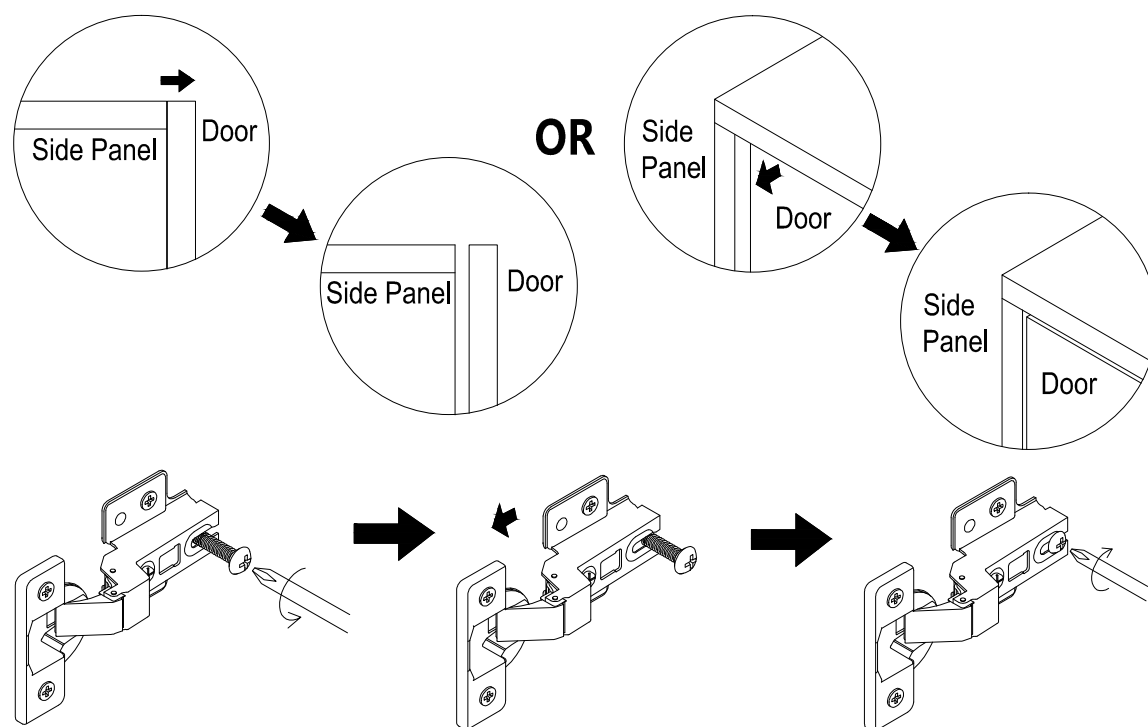


If the gap is too small between side panel and door or the door sank in side panel, loose the back screw as shown, then move out the door with hinge and tighten the back screw as shown when the gap is just well.



! IMPORTANT: When making height or depth adjustments, please ensure you adjust **BOTH** the top and bottom hinges of the door simultaneously. Adjusting only one hinge will be ineffective and may cause stress on the hardware.

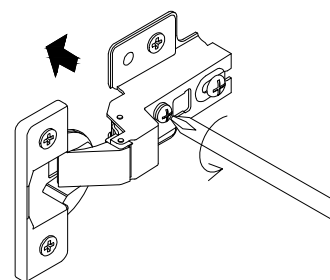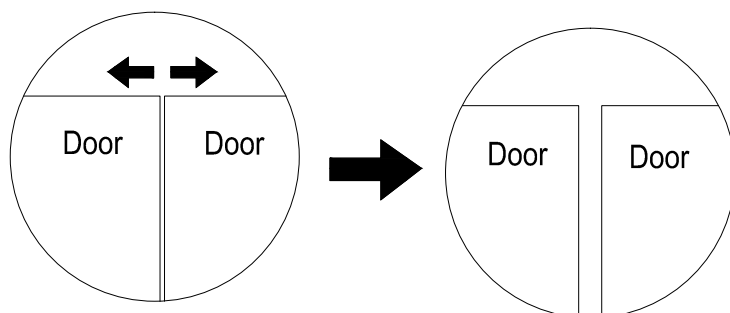




If the gap is too small between two doors, loose the front screw as shown.

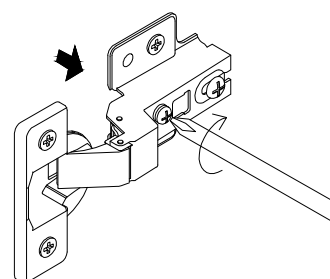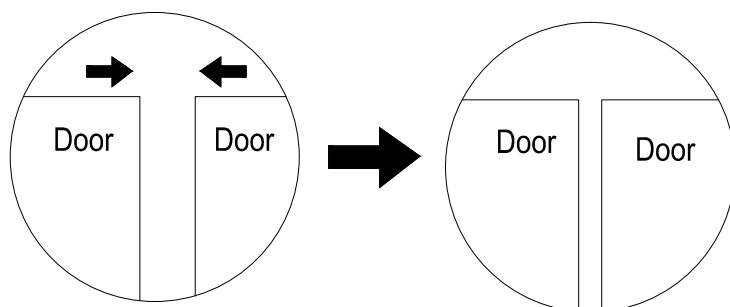

If the gap is too small between two doors, loose the front screw as shown.

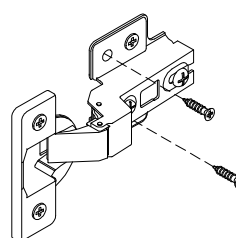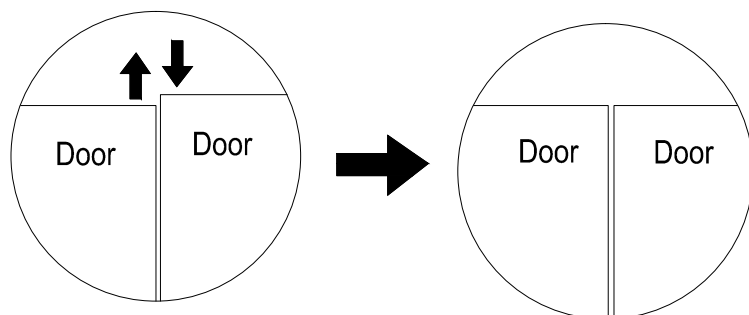


Attention:
After adjusted Hinges,
then lock screws.

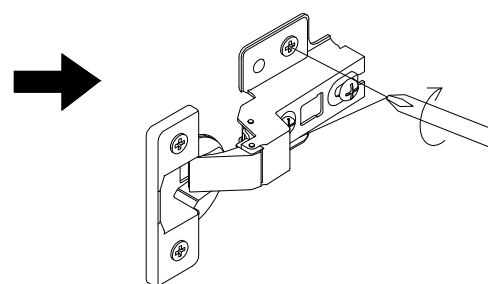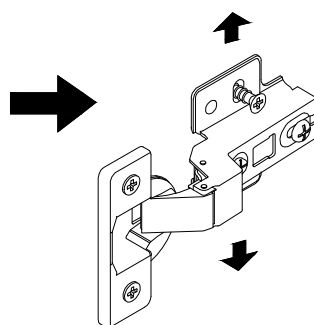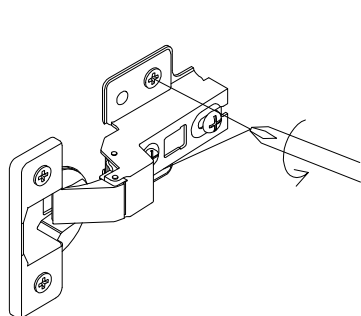



If the doors are not in same level, losse the back screws on wing, then adjust the door up and down, tighten the screws when both doors are in same level.Screw front two screws on wing when all are in place.

STEP 33

No. F
Quantity: 4 Pcs





No. G
Quantity: 8 Pcs
M3.5*12mm

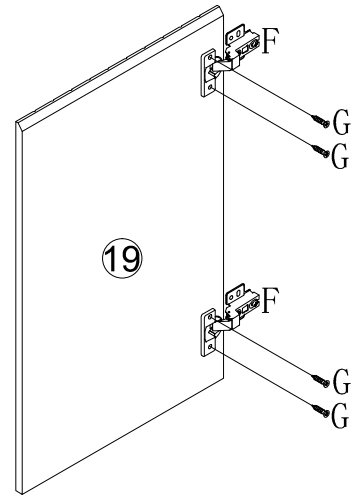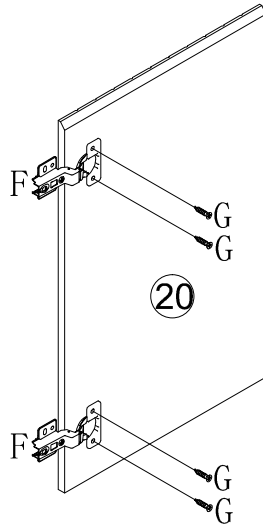

STEP 34

First, use screws to secure the two rear guide holes of the door hinge into the two guide holes of the side panel.

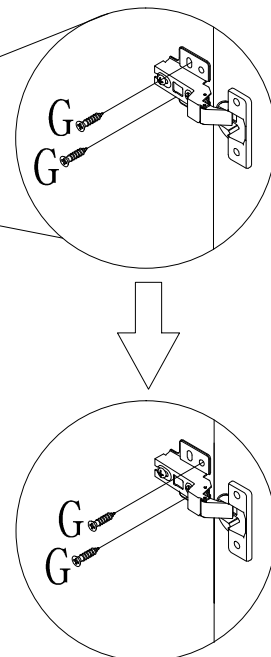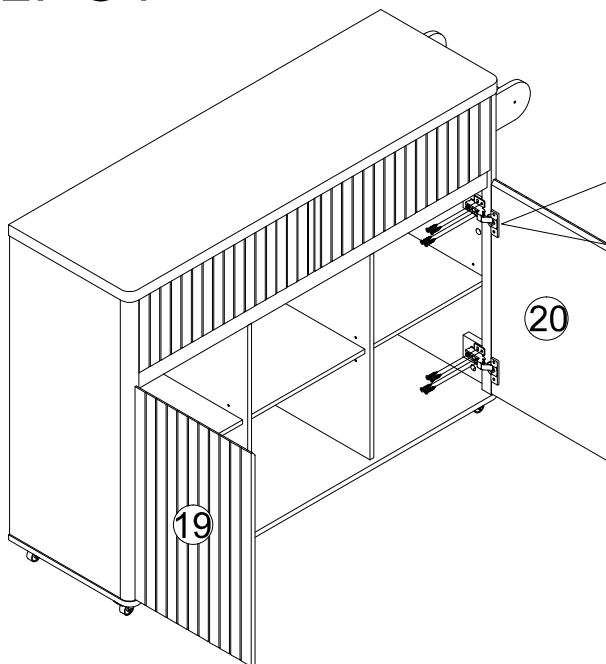


No. G
Quantity: 16 Pcs
M3.5*12mm




If you encounter difficulties during adjustment, please refer to the guidance on pages 20 and 21 to adjust the gaps of the cabinet doors. After making the gaps even, please tighten the two screws on the front side.

STEP 35

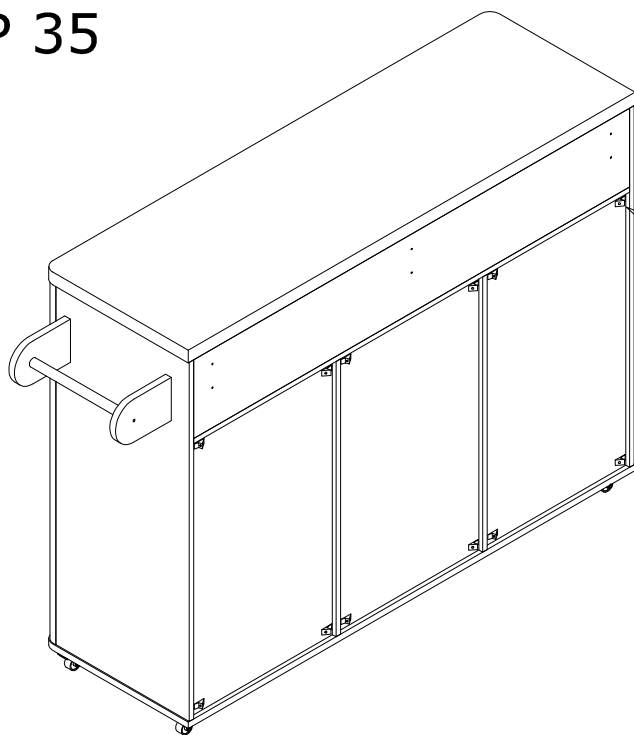


Description: Insert the thinner end of the reinforcement into the gap in this back panel, then tighten the screws. This will make the cabinet more stable.


No. W
Quantity: 12 Sets




STEP 36

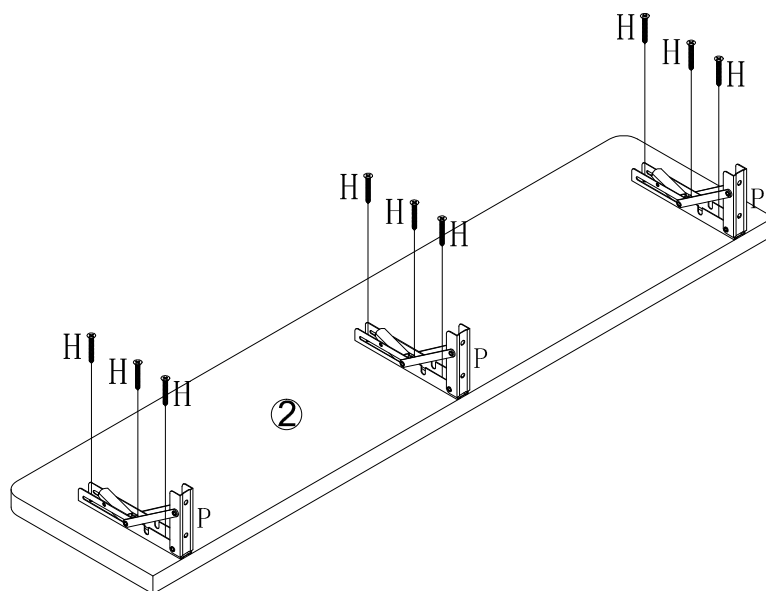


No. H
Quantity: 9 Pcs
M4*25mm



No. P
Quantity: 3 Pcs




STEP 37

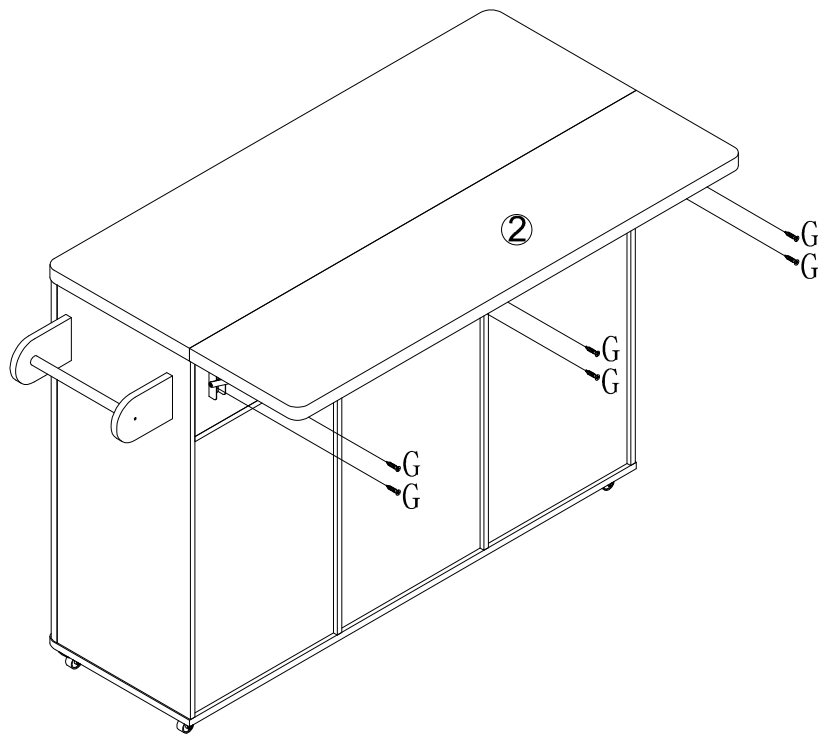

No. G
Quantity: 6 Pcs
M3.5*12mm





STEP 38

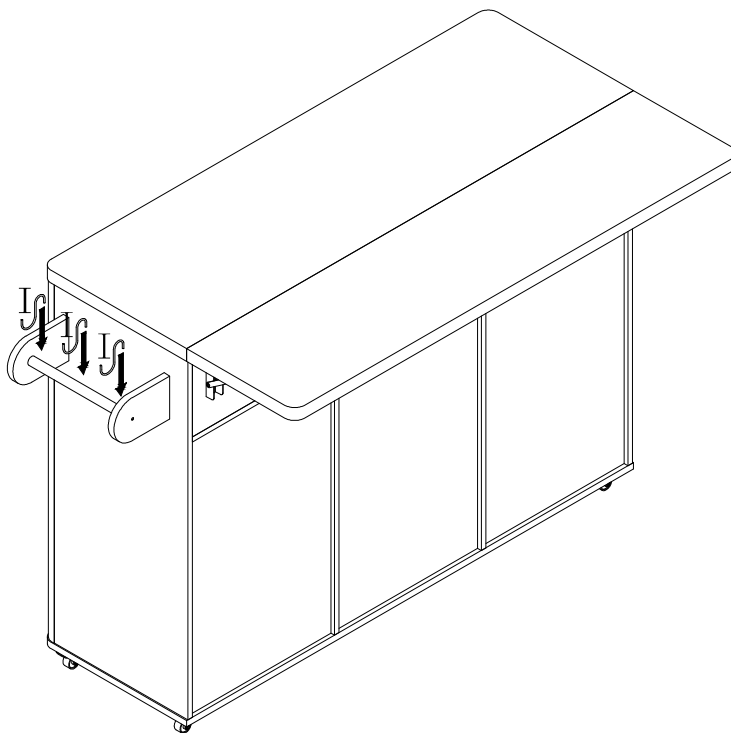

No. I
Quantity: 3 Pcs



STEP 39

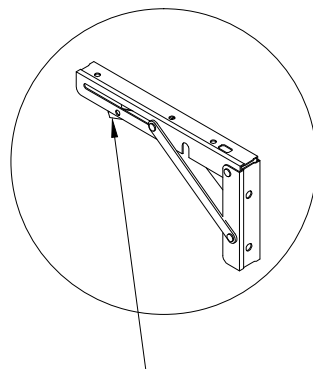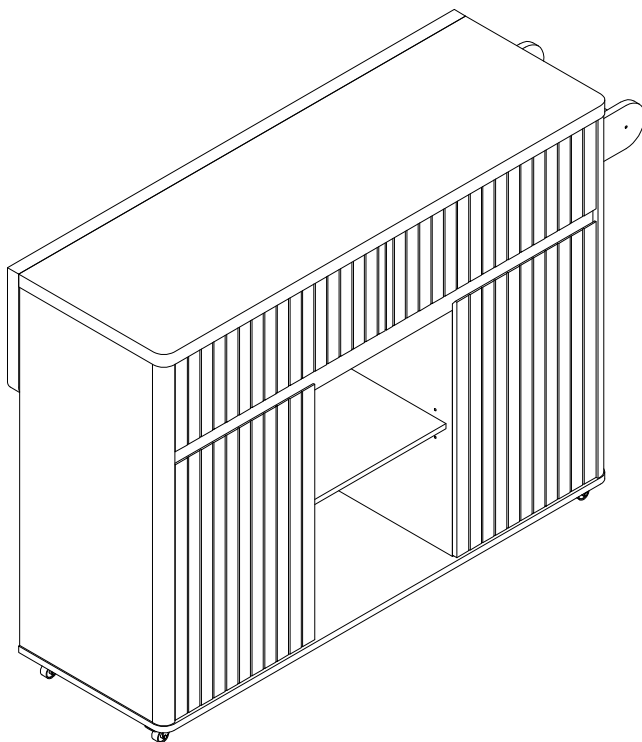

If you need to retract and lower the rear panel, you must simultaneously press down the handles at the bottom of the three adjustable support rods when folding the rear panel.

STEP 40

