


Folding Table

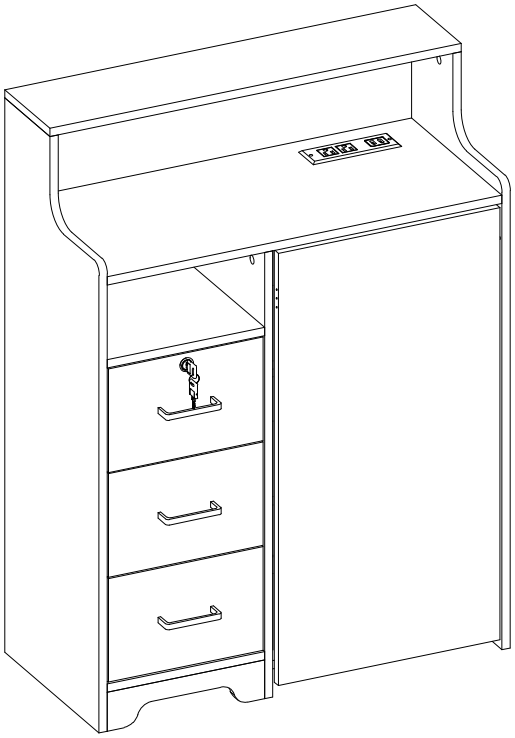


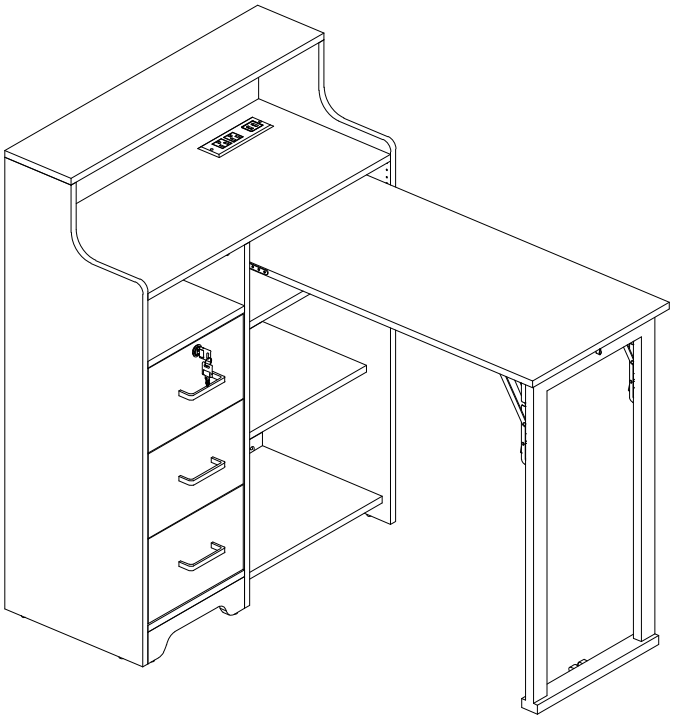


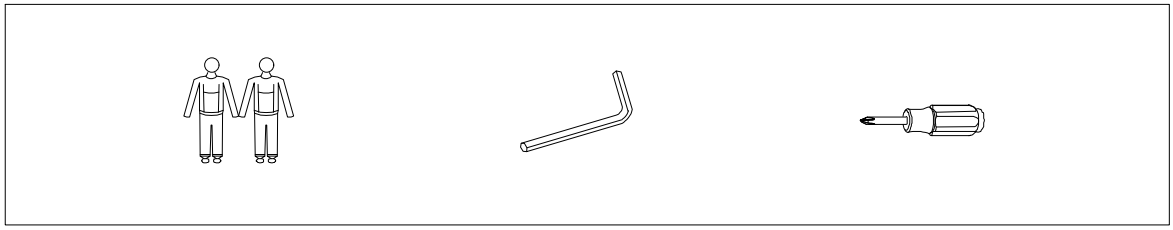

Version：1.0














ASSEMBLY INSTRUCTION

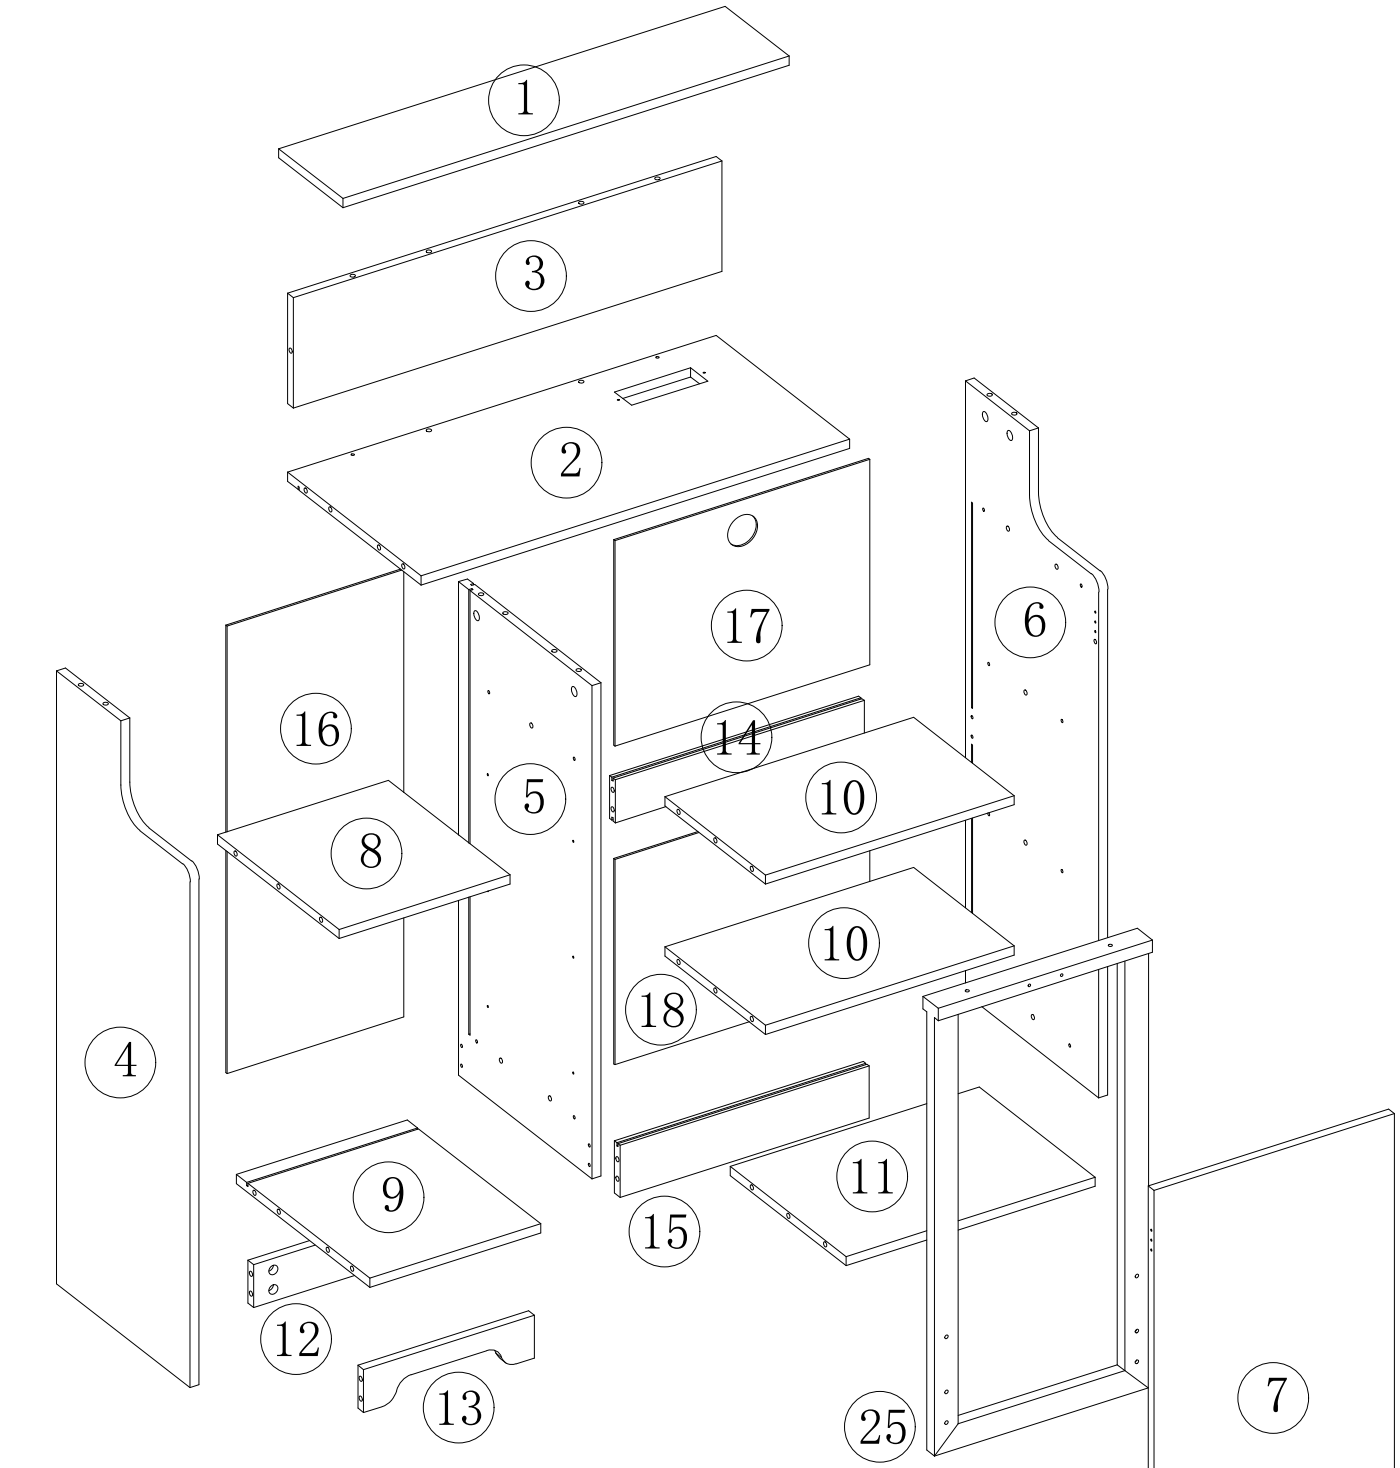

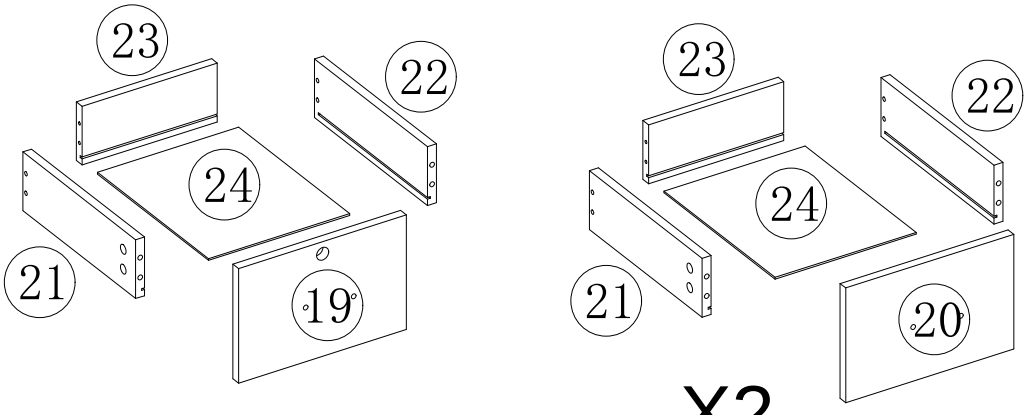


X2

ASSEMBLY INSTRUCTION

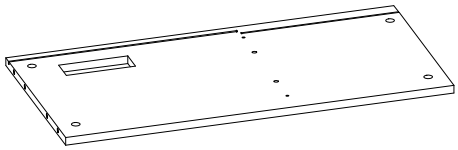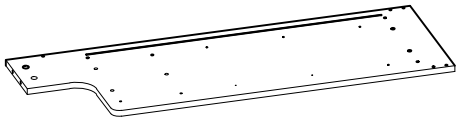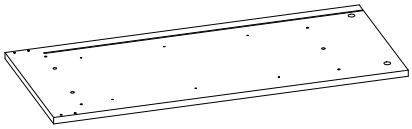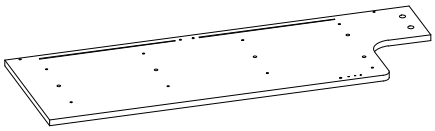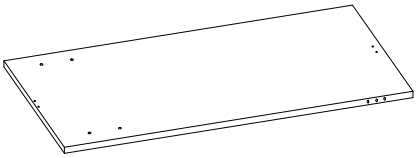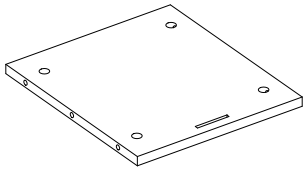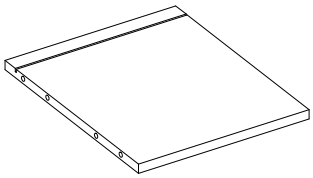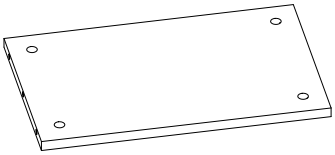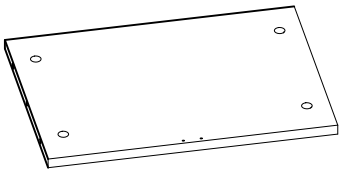1  X1	2  X1	3  X1
4  X1	5  X1	6  X1
7  X1	8  X1	9  X1
10  X2	11  X1	12  X1
13  X1	14  X1	15  X1


ASSEMBLY INSTRUCTION

16

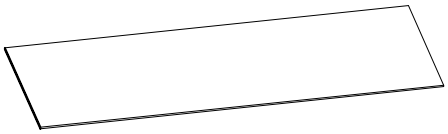


X1

17

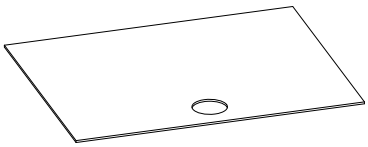


X1

18

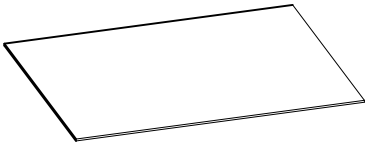


X1

19

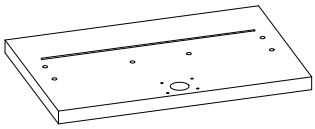


X1

20

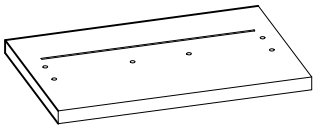


X2

21




X3

22




X3

23




X3

24

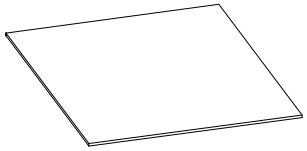












X3

25

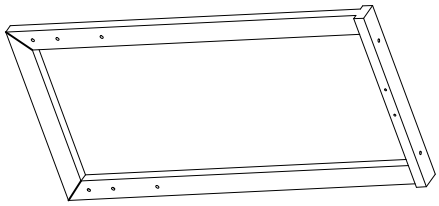


X1

ASSEMBLY INSTRUCTION

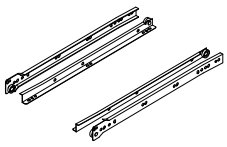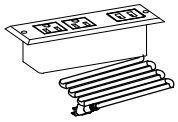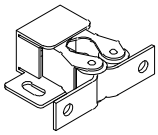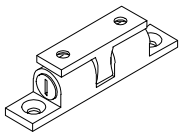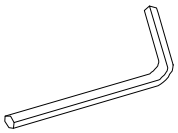
A M5x40mm  X12	B  (K) X64	C 15x9mm  X64	D M3.5x12mm  X32
E  X2	F  L300mm X3	G M8x50mm  X22	H M4x12mm  X8
I M5x12mm  X4	J M4x20mm  X6	K  X3	L  X1
M  X1	N  X1	O  X1	P  M6 X2
Q  X2	R M3.5x16mm  X10	S M4   X1	
T M3x12mm  X6	U  X16		


ASSEMBLY INSTRUCTION

STEP 1

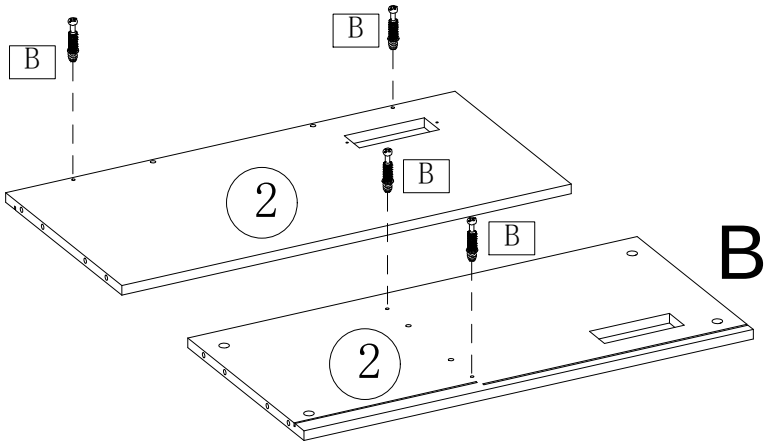

Back

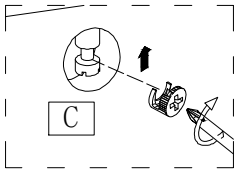

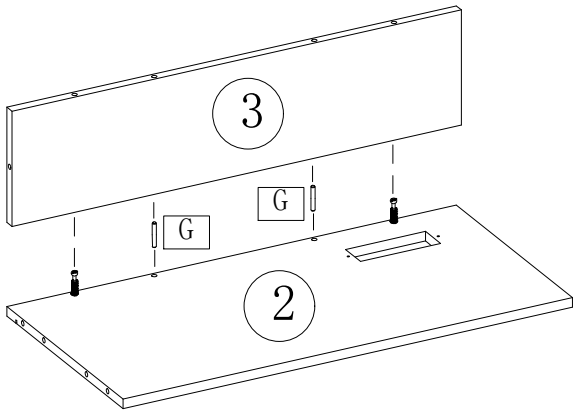



C *2


B (K) *4

G M8x50mm *2

STEP 2

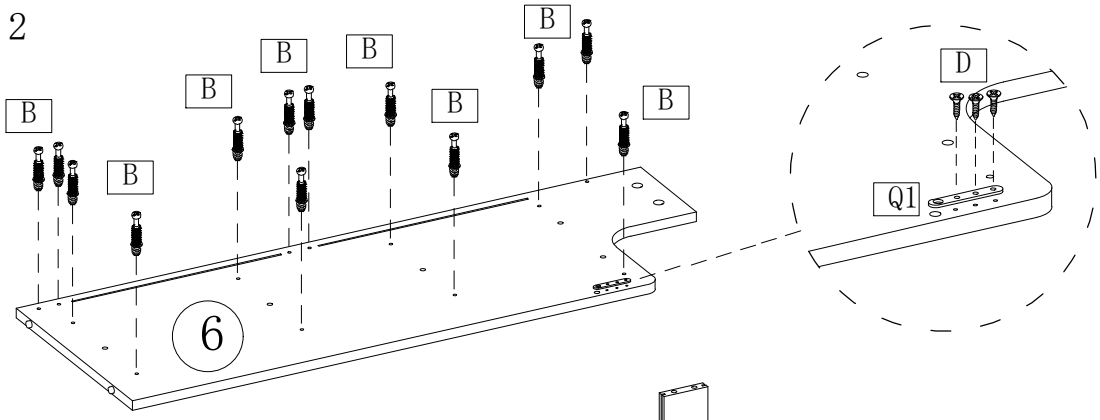

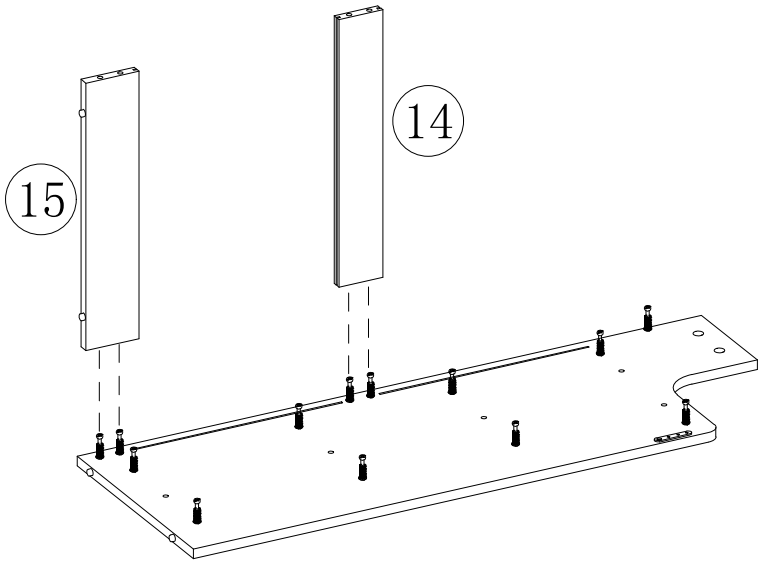

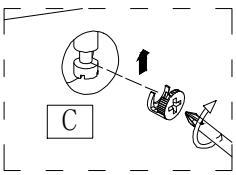

D M3.5x12mm *3


Q1 *1


B (K) *13

C *4

ASSEMBLY INSTRUCTION


STEP 3

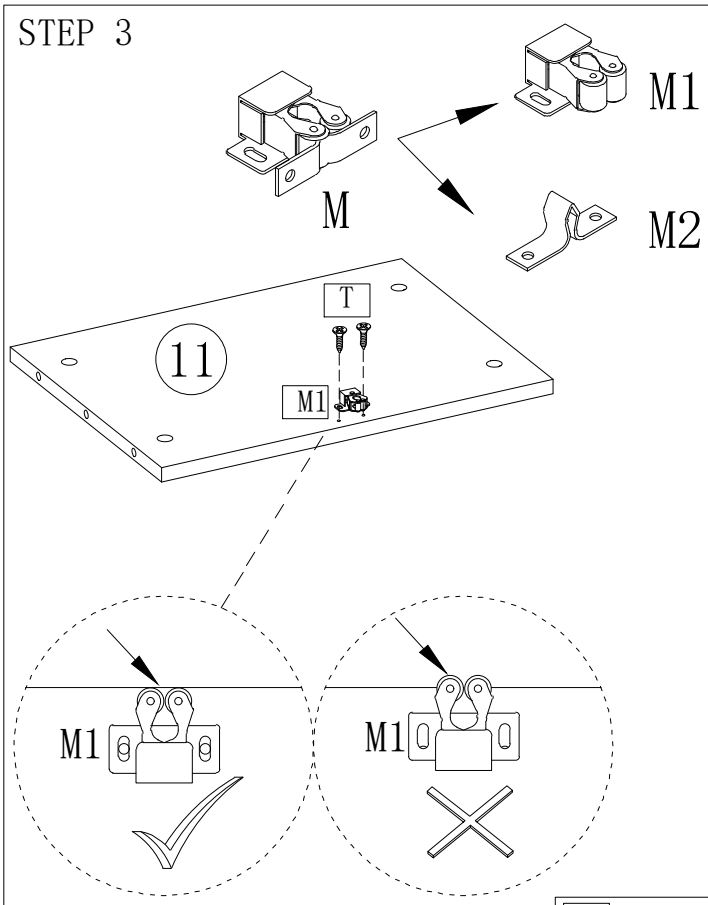

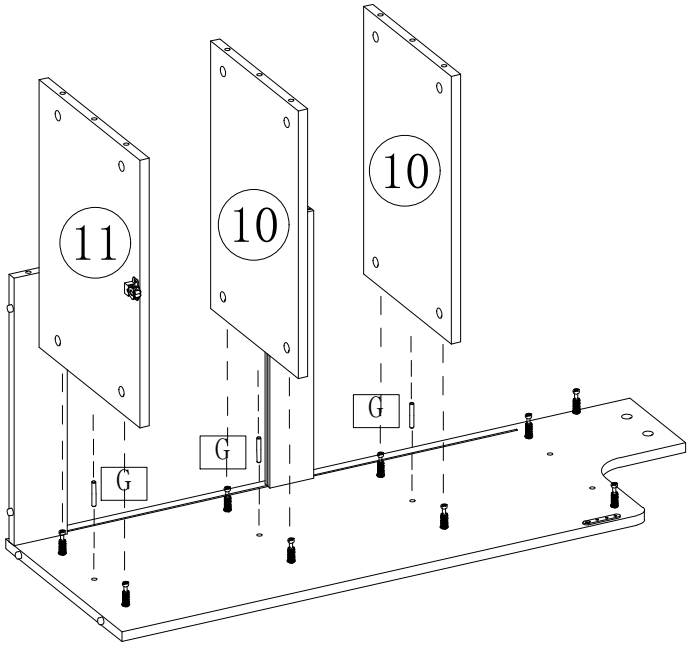


G	T	M	C
M8x50mm *3	M3x12mm *2	*1	*6

STEP 4

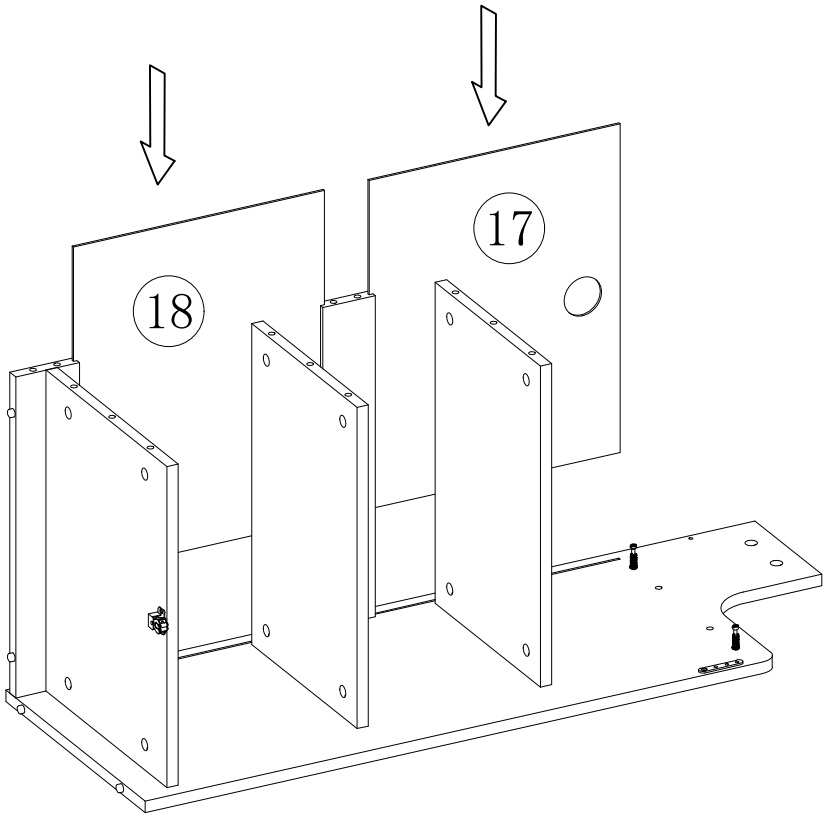


ASSEMBLY INSTRUCTION

STEP 5

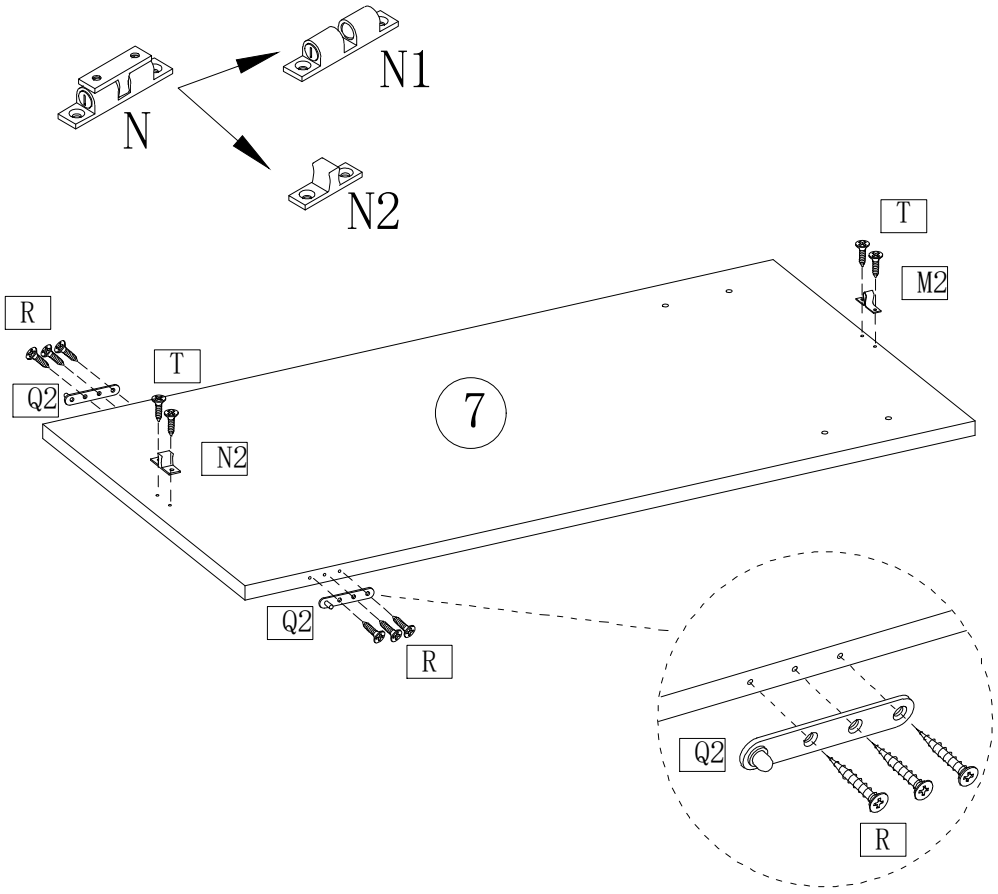

M2	*1
N	*1
Q2	*2
T M3x12mm	*4
R M3.5x16mm	*6


STEP 6

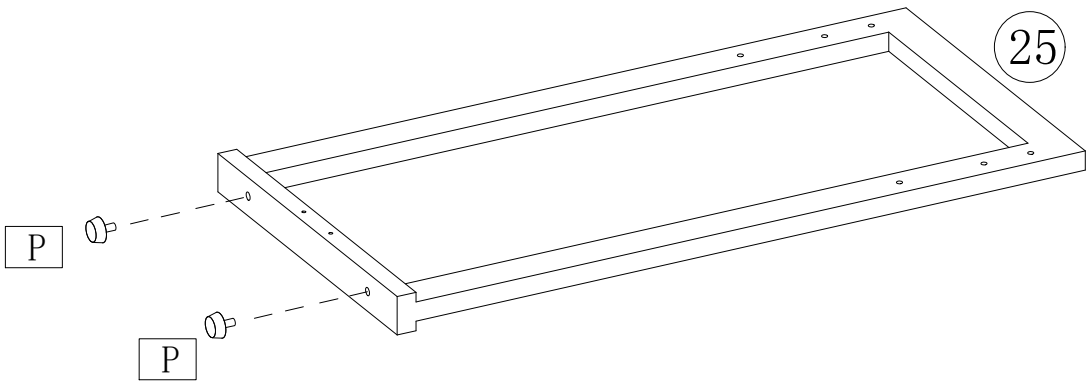


P	*2

ASSEMBLY INSTRUCTION

STEP 7

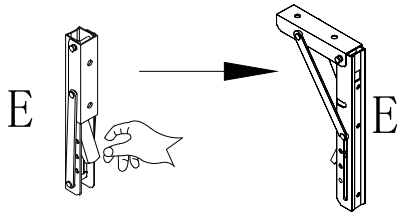

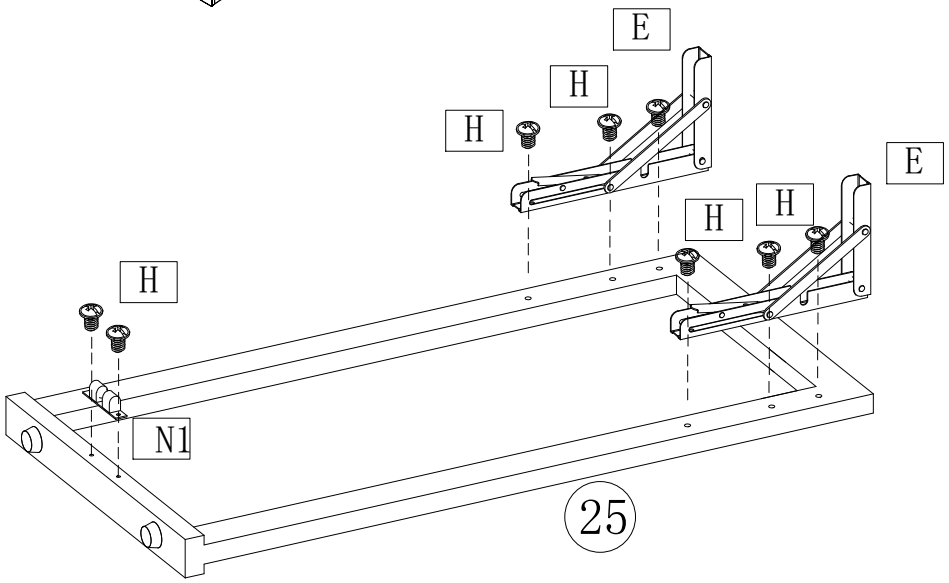


N1 *1

H M4x12mm *8

E *2


STEP 8

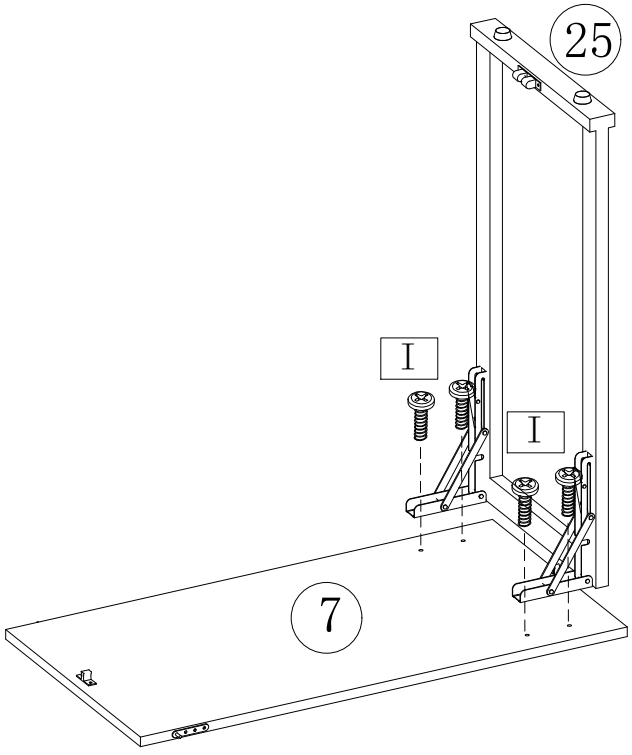


I M5x12mm *4

ASSEMBLY INSTRUCTION

STEP 9

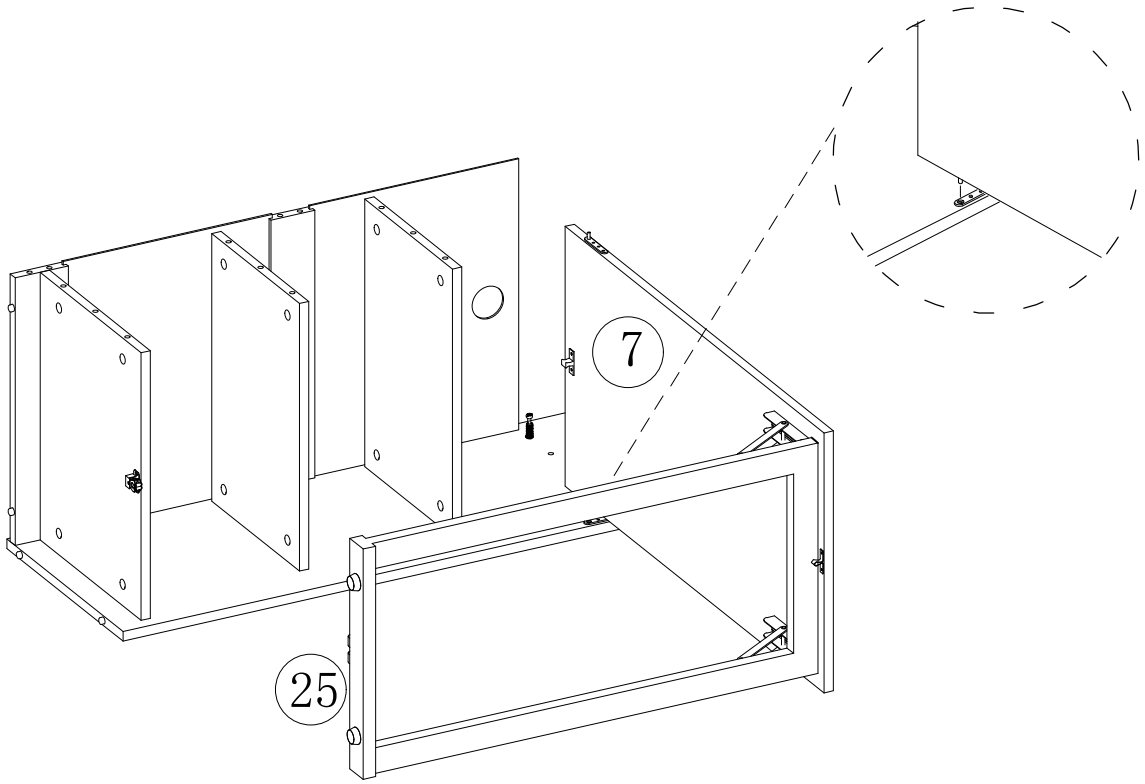


STEP 10

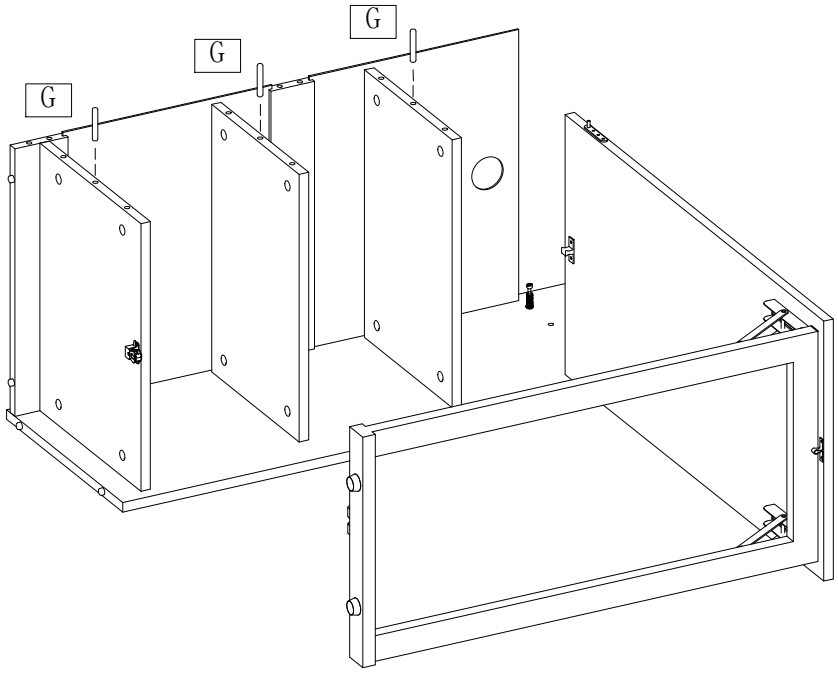


G M8x50mm *3

ASSEMBLY INSTRUCTION

STEP 11

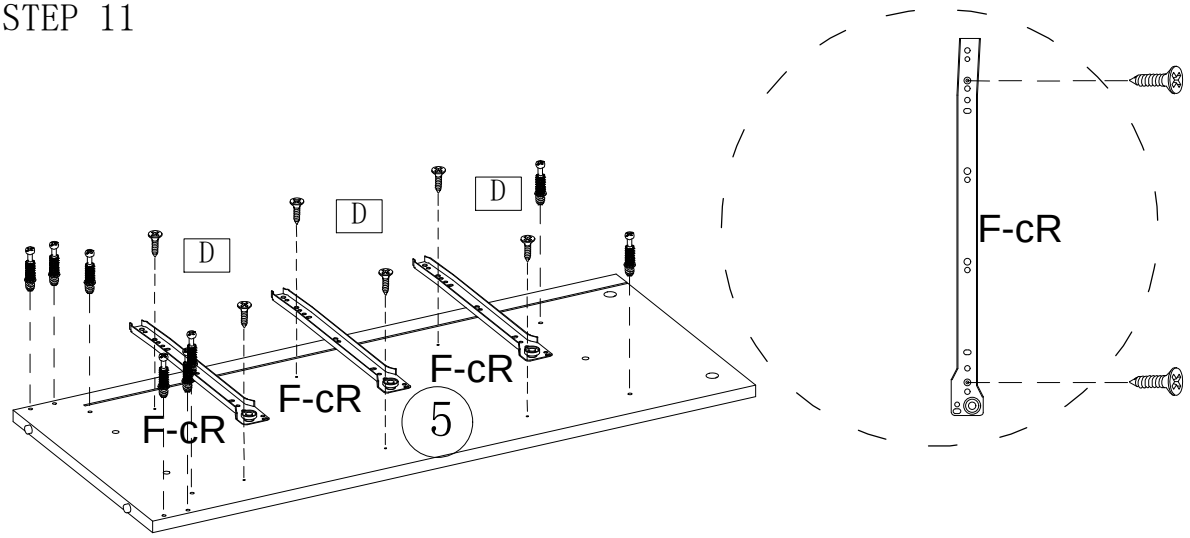


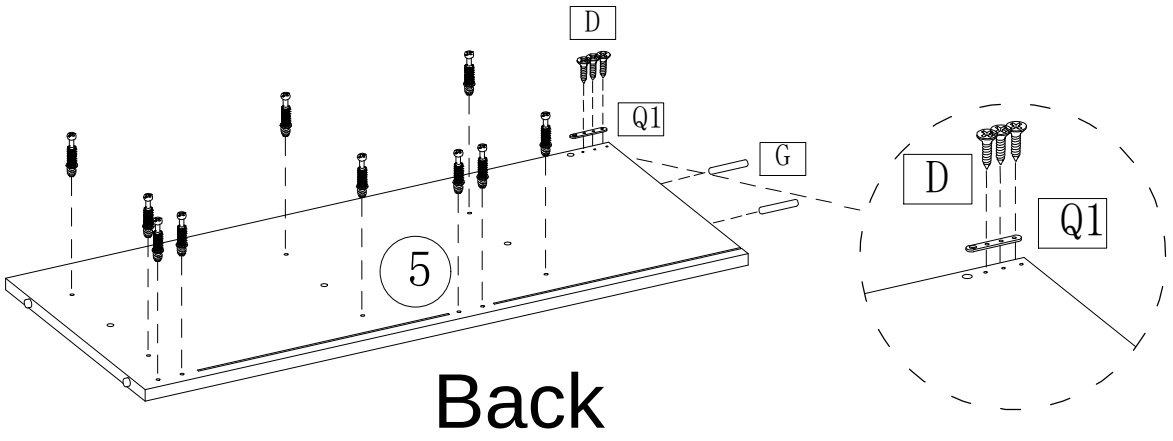

Back

B	(K) *18
Q1	*1
F	F-cR *3
G	M8x50mm *2
D	M3.5x12mm *9


STEP 12

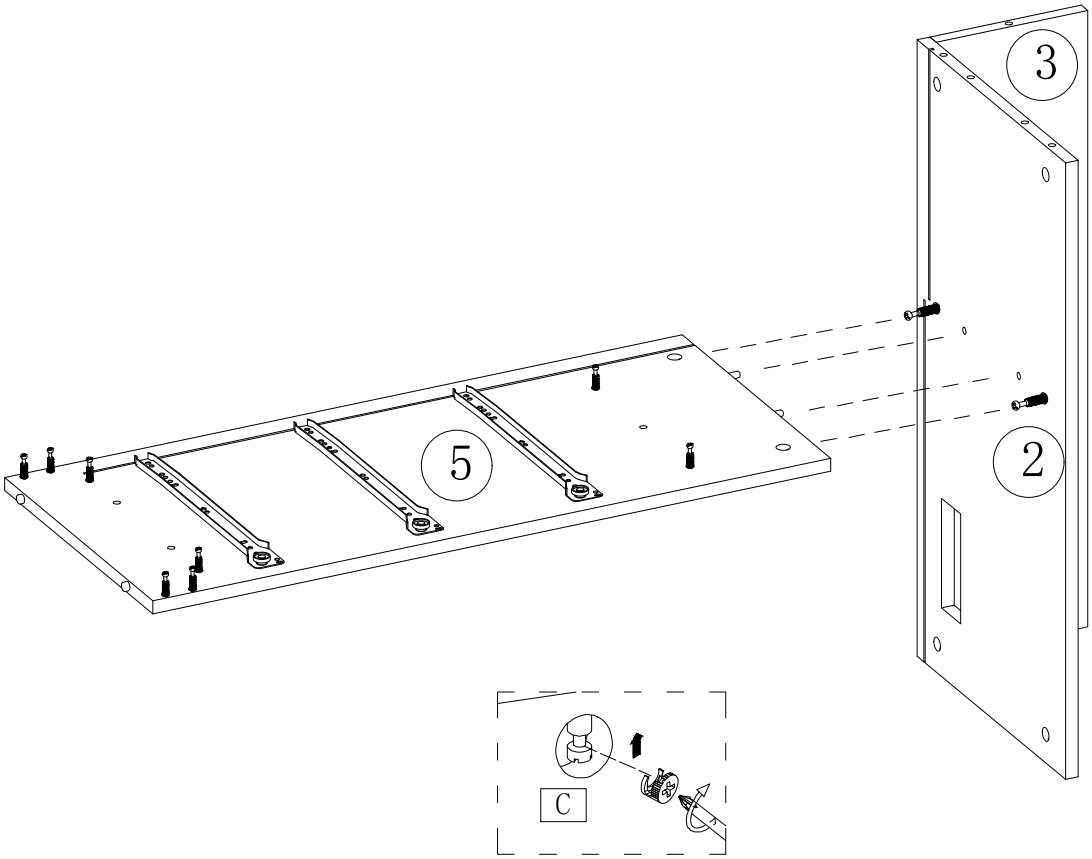



C	*2

ASSEMBLY INSTRUCTION

STEP 13

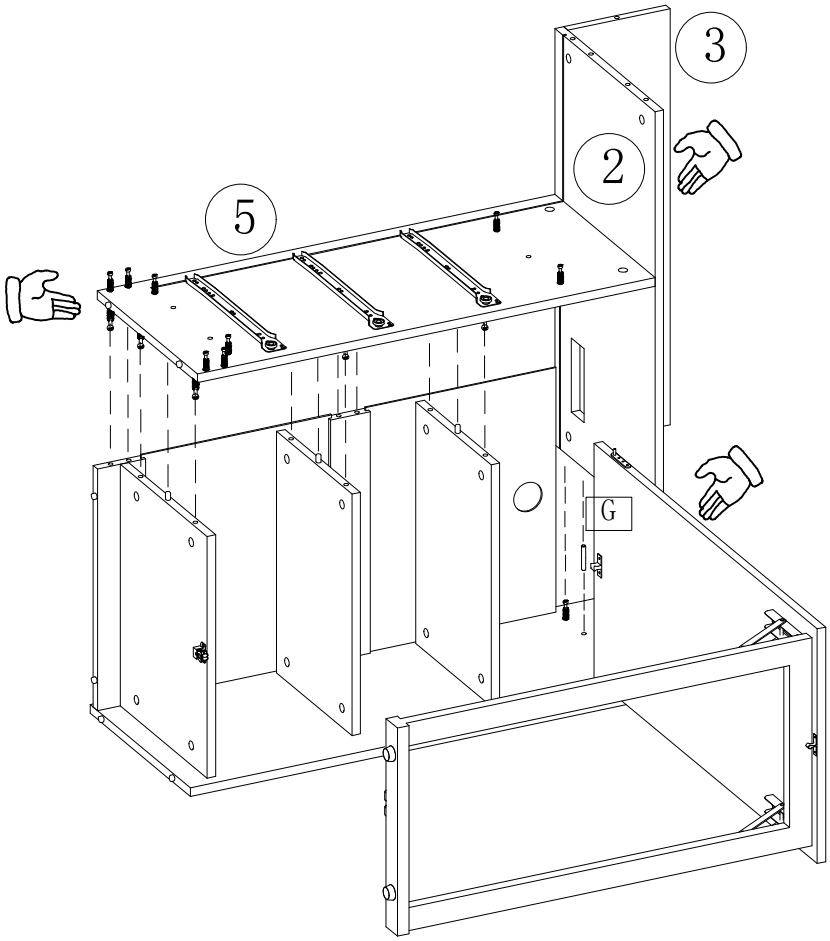

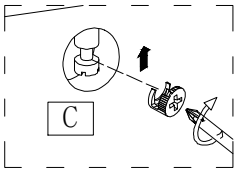





C *12

G *2

STEP 14

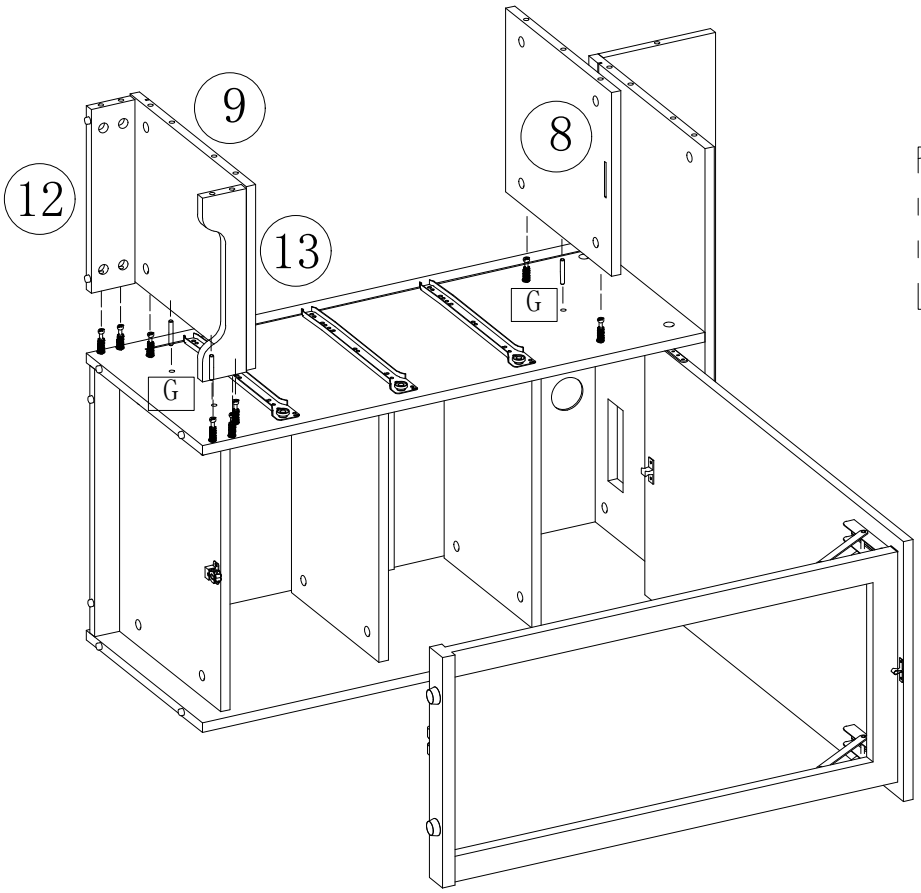

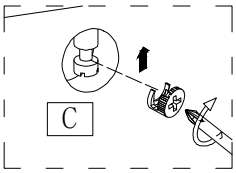


C *8


G *3


ASSEMBLY INSTRUCTION

STEP 15

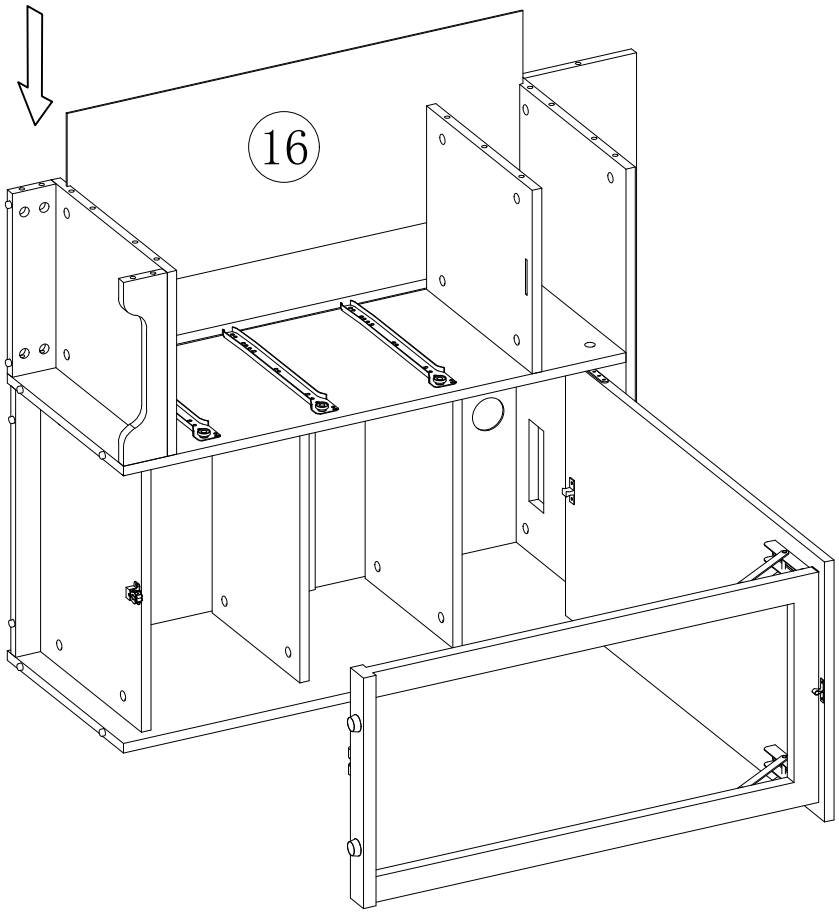

STEP 16

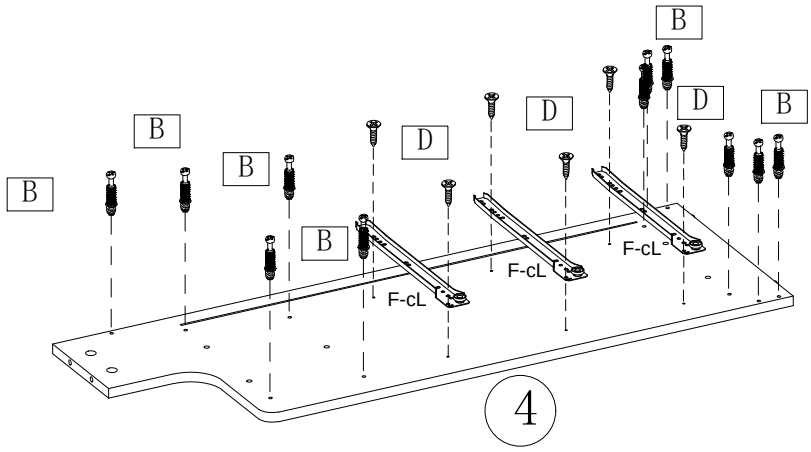


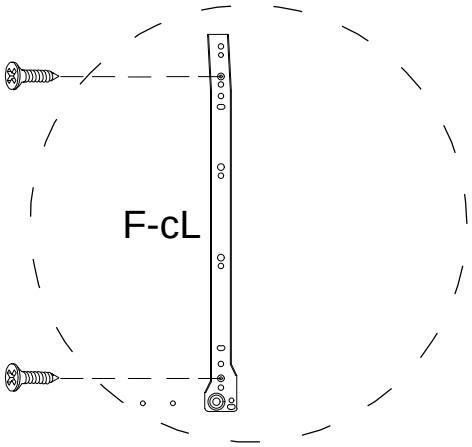


B	(K) *11
F	F-cL *3
D	M3.5x12mm *6

ASSEMBLY INSTRUCTION

STEP 17

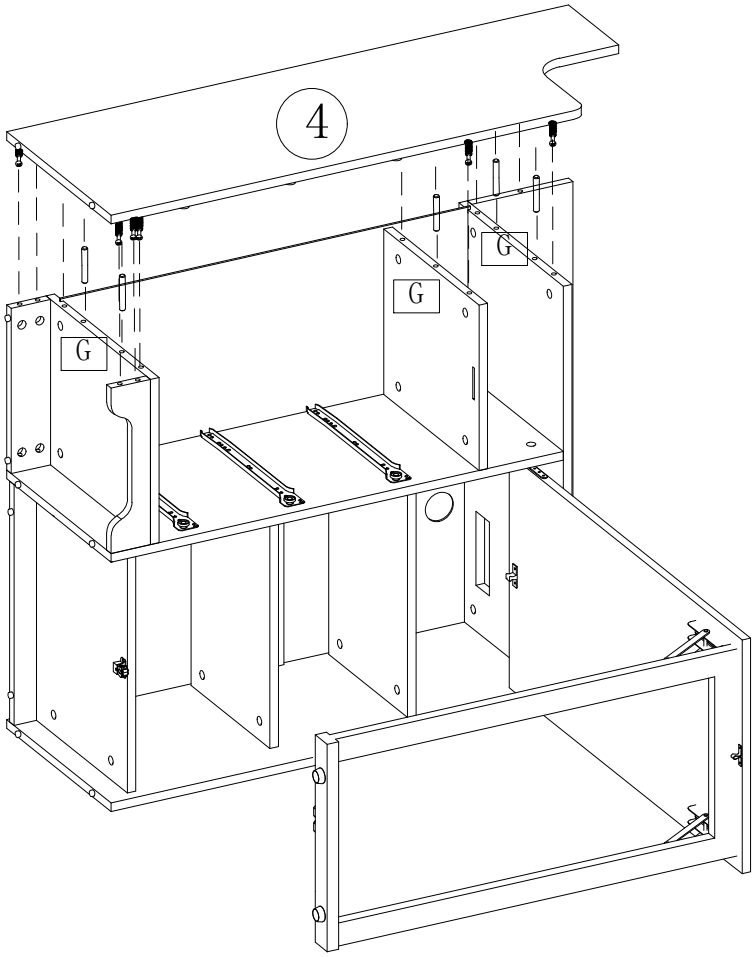


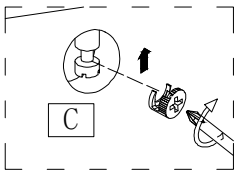

C *11

G *5


STEP 18

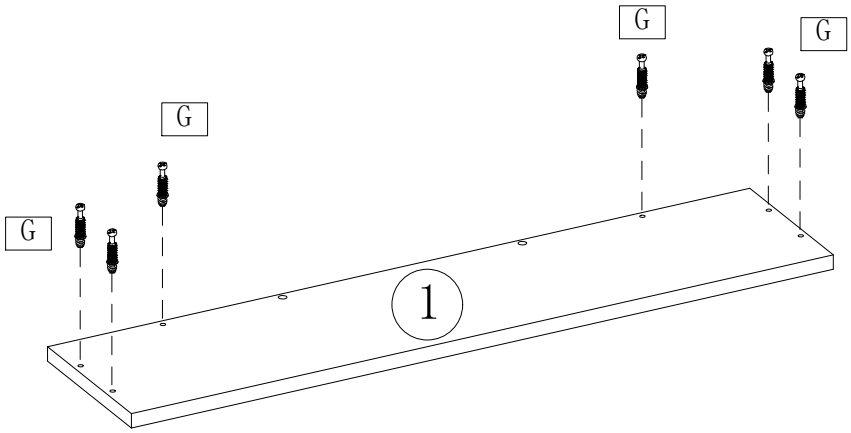


B (K) *6

ASSEMBLY INSTRUCTION


STEP 19

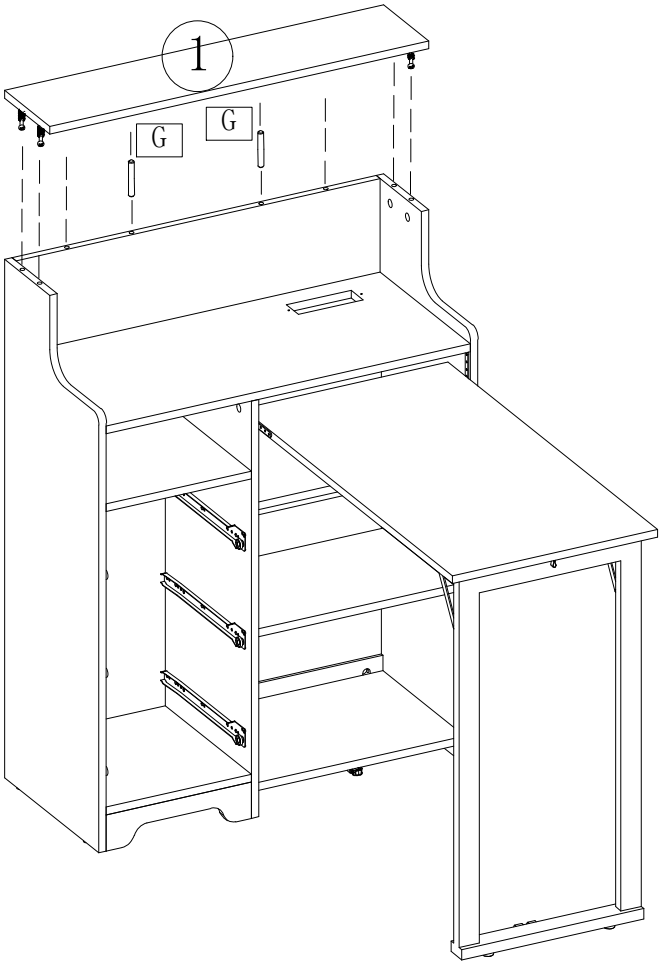


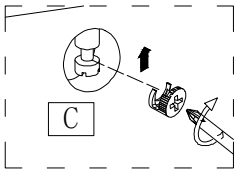

C 	*6
G 	*2

STEP 20

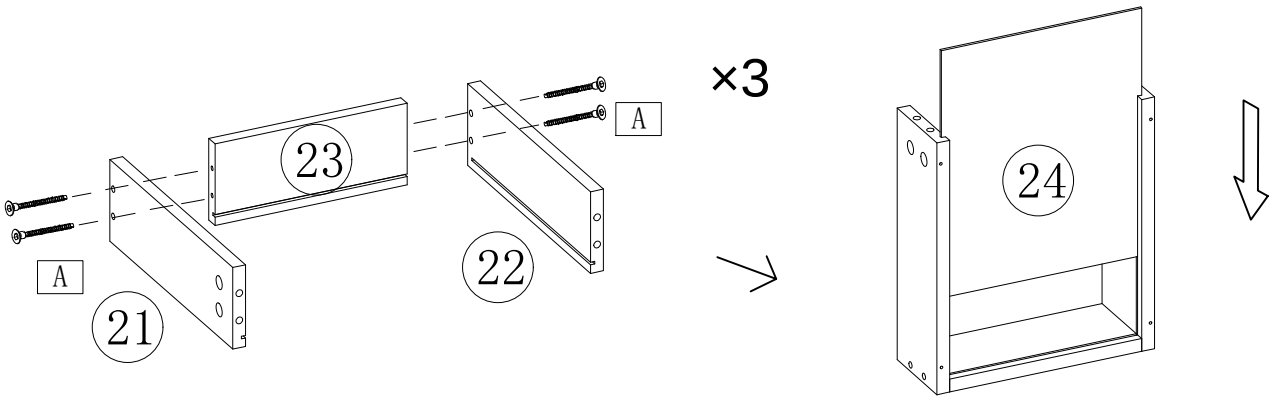


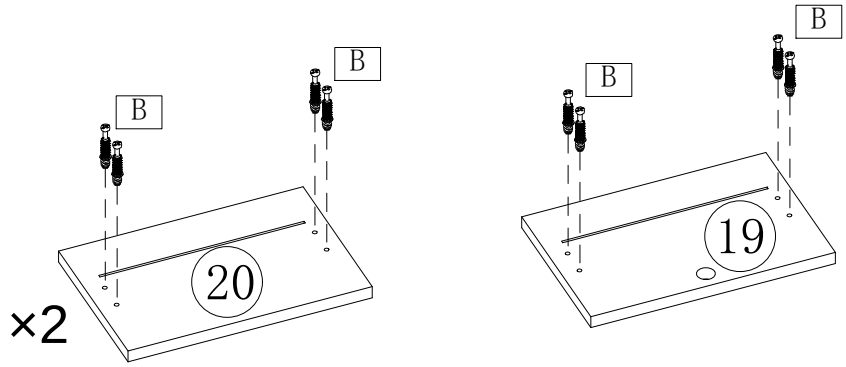


A M5x40mm 	*12
B  (K)	*12


ASSEMBLY INSTRUCTION


STEP 21

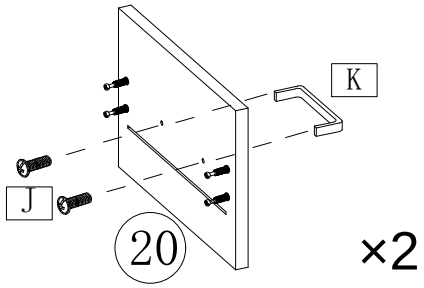


×2

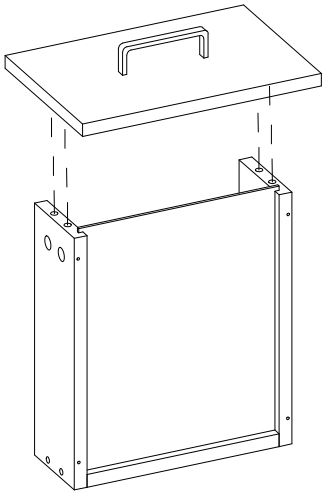

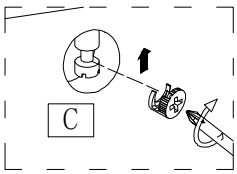


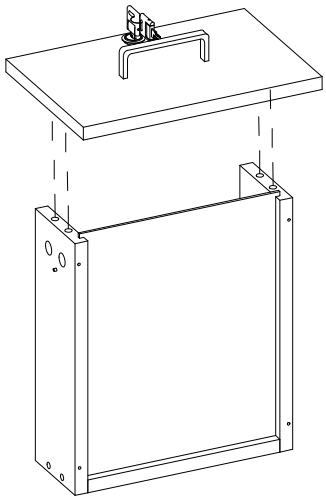

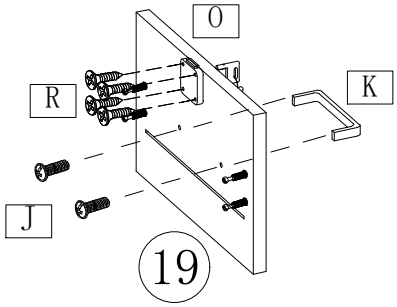



R M3.5x16mm	*4
C	*12
O	*1
J	*6
K	*3

STEP 22

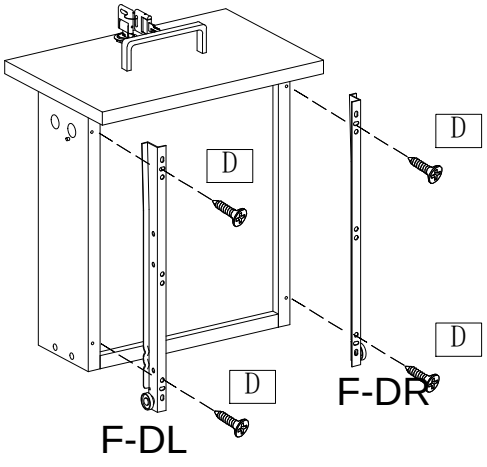

×2

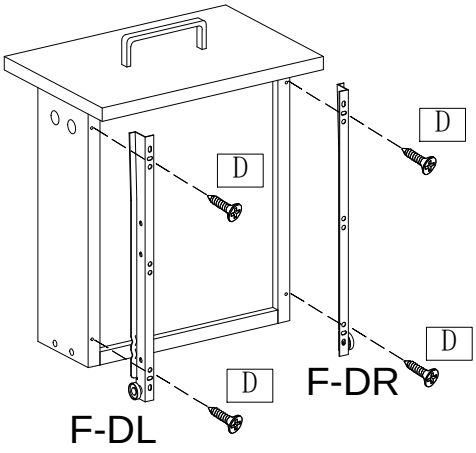


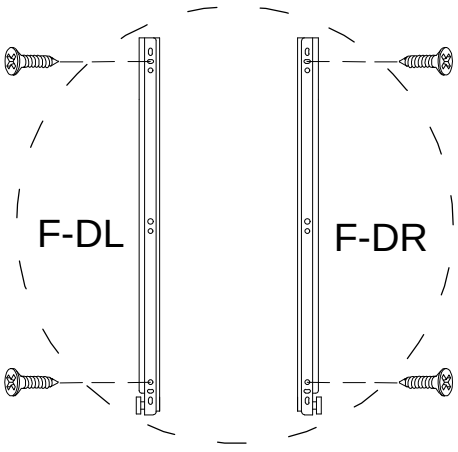


D M3.5x12mm	*12
F F-DL F-DR	*3

ASSEMBLY INSTRUCTION

STEP 23

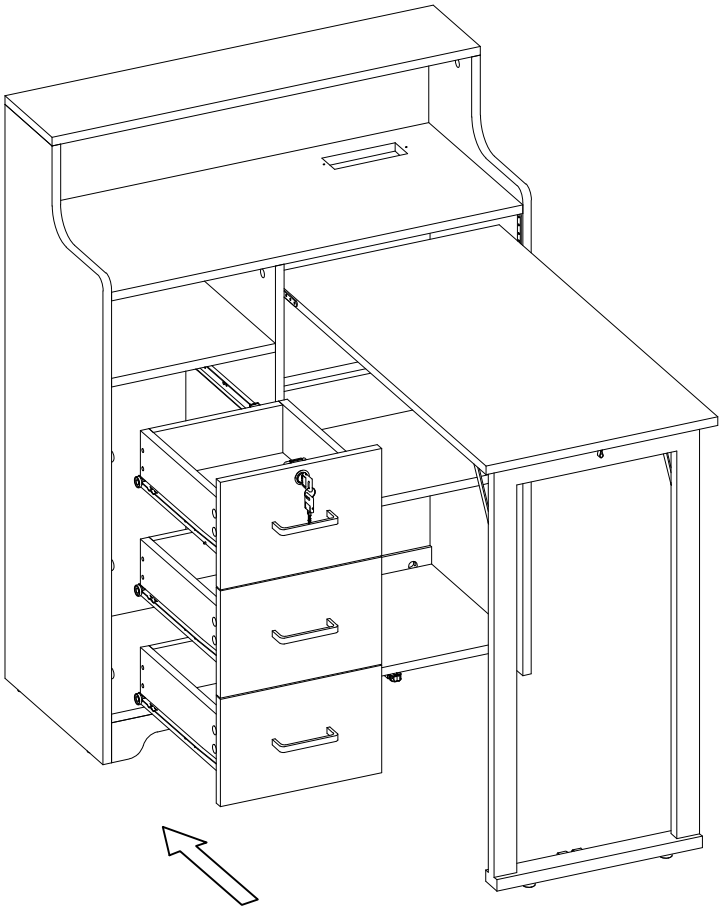

STEP 24

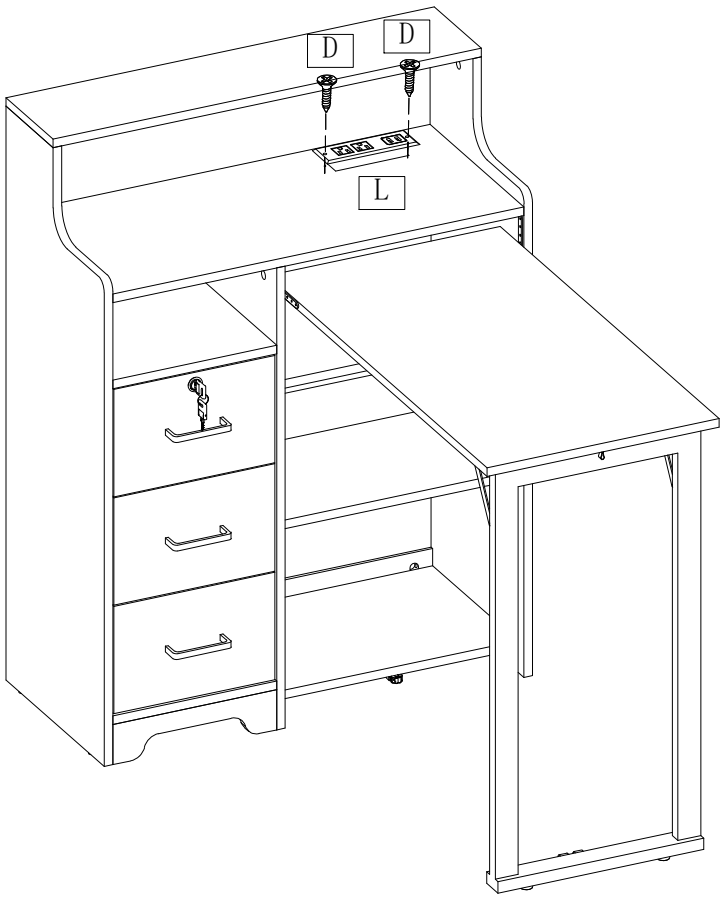


L *1

D M3.5x12mm *2


ASSEMBLY INSTRUCTION

STEP 25

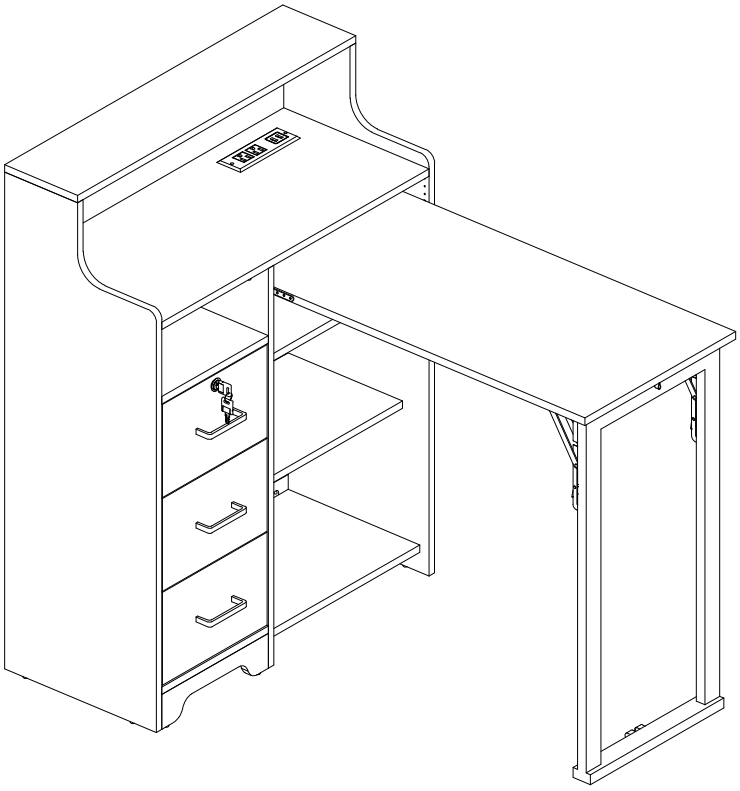

Open

STEP 26

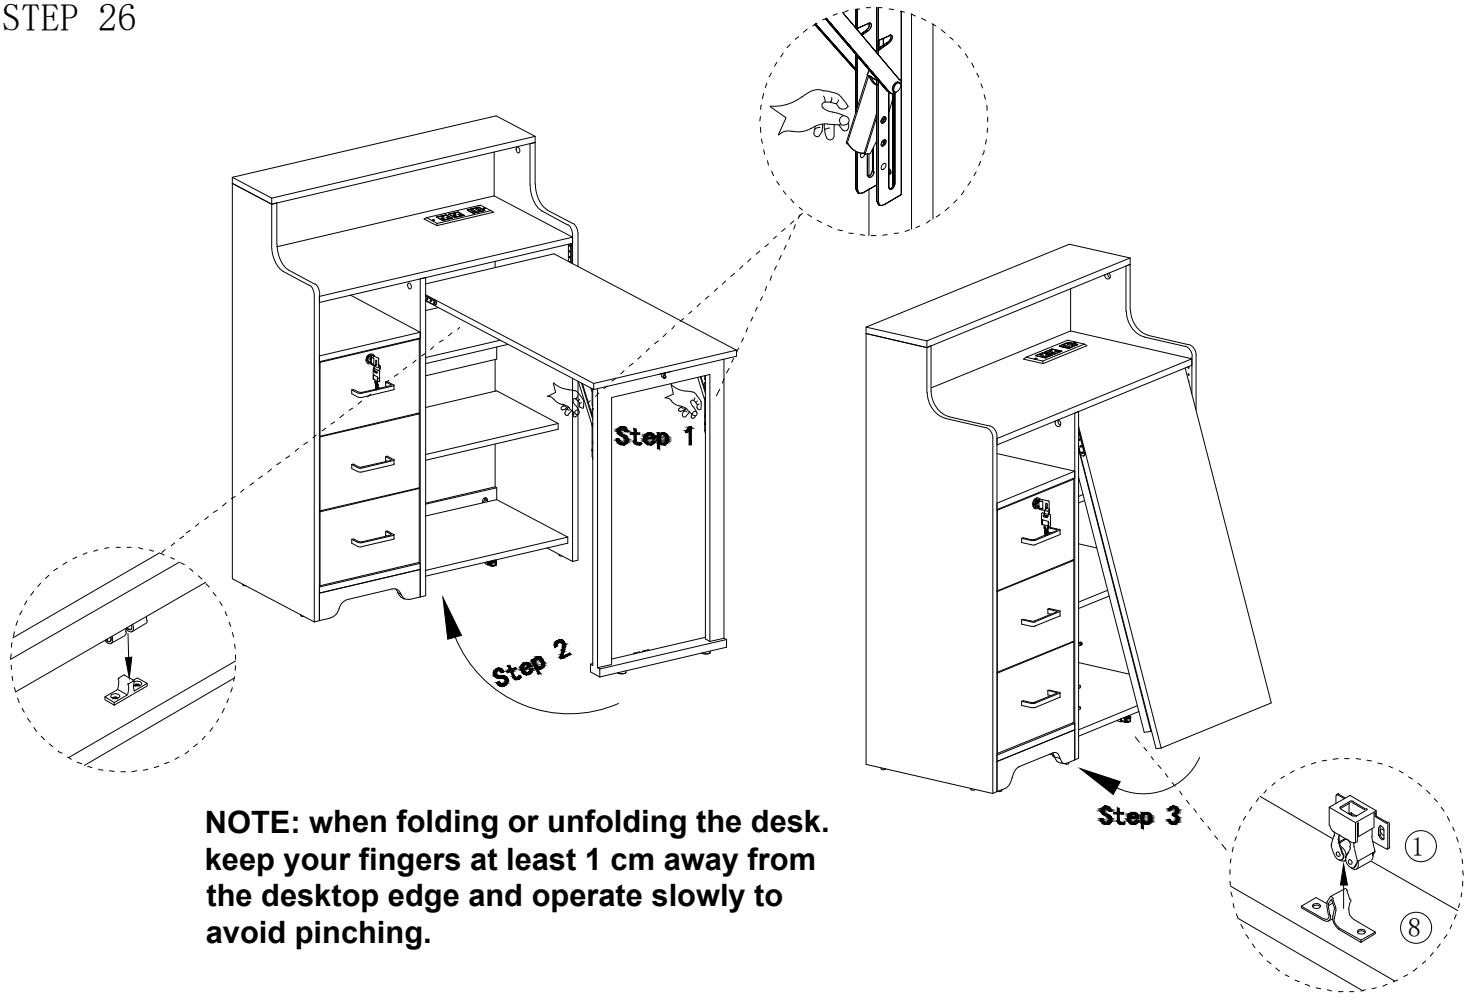

NOTE: when folding or unfolding the desk. keep your fingers at least 1 cm away from the desktop edge and operate slowly to avoid pinching.

ASSEMBLY INSTRUCTION

