


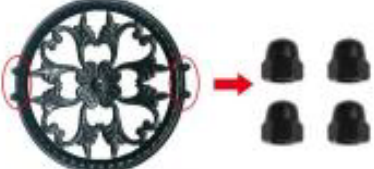

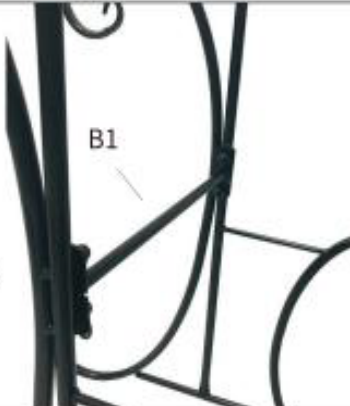


Installation Instructions

<p>Note:</p> <ul style="list-style-type: none"> Before installation, please remove the screws from the tier accessories. 	<p>A</p>  <p>2PCS</p>	<p>C</p>  <p>2PCS</p>	<p>D</p>  <p>4PCS</p>
	<p>B</p>  <p>2PCS</p>		

- Note:**
- The product is welded manually, and some unevenness is normal, which can be adjusted manually.
 - Pay attention not to tighten the screws in the installation process, and then tighten the screws after all parts are connected.


Step1:
Connect the a 1 and a 2 with the B 1



Step4:
Install B2 between C1 and C2



Step2:
Install D1, D2, D3 in turn

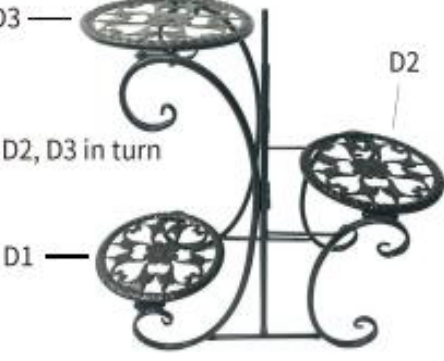

Step5:
Finally, install D4 and install the bottom foot pad



Step3:
Insert C1 and C2 above A1 and A2

