


ASSEMBLY INSTRUCTIONS

24 INCH BATH VANITY (COMBO)


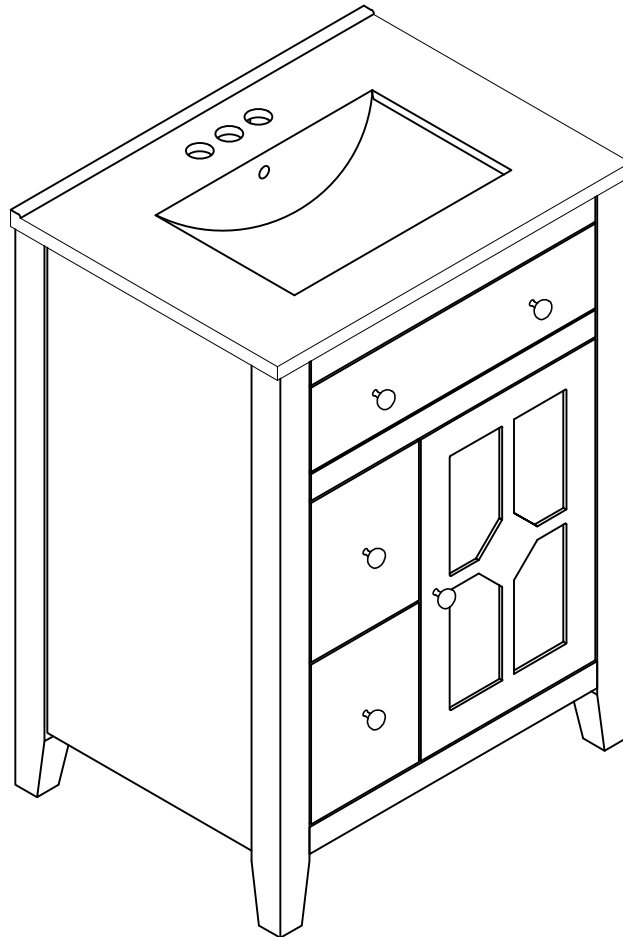


Thank you for purchasing this quality product. Be sure to check all pack material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


***Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!**
***Please assemble on a clean soft surface to avoid damage.**

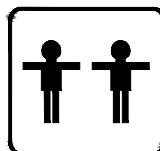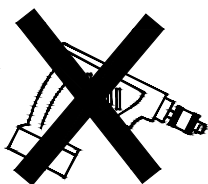


+

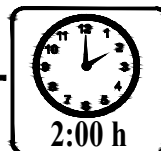

Tools Required



(Not included)



(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Before Installation

Important – Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions
















	Diagram A	Insert Cam Bolt into hole as shown in diagram A.
	Diagram B	Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Diagram C	Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
Connect the panels together.		
ARROW SIGN Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.		
To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>		

Detail View - CABINET






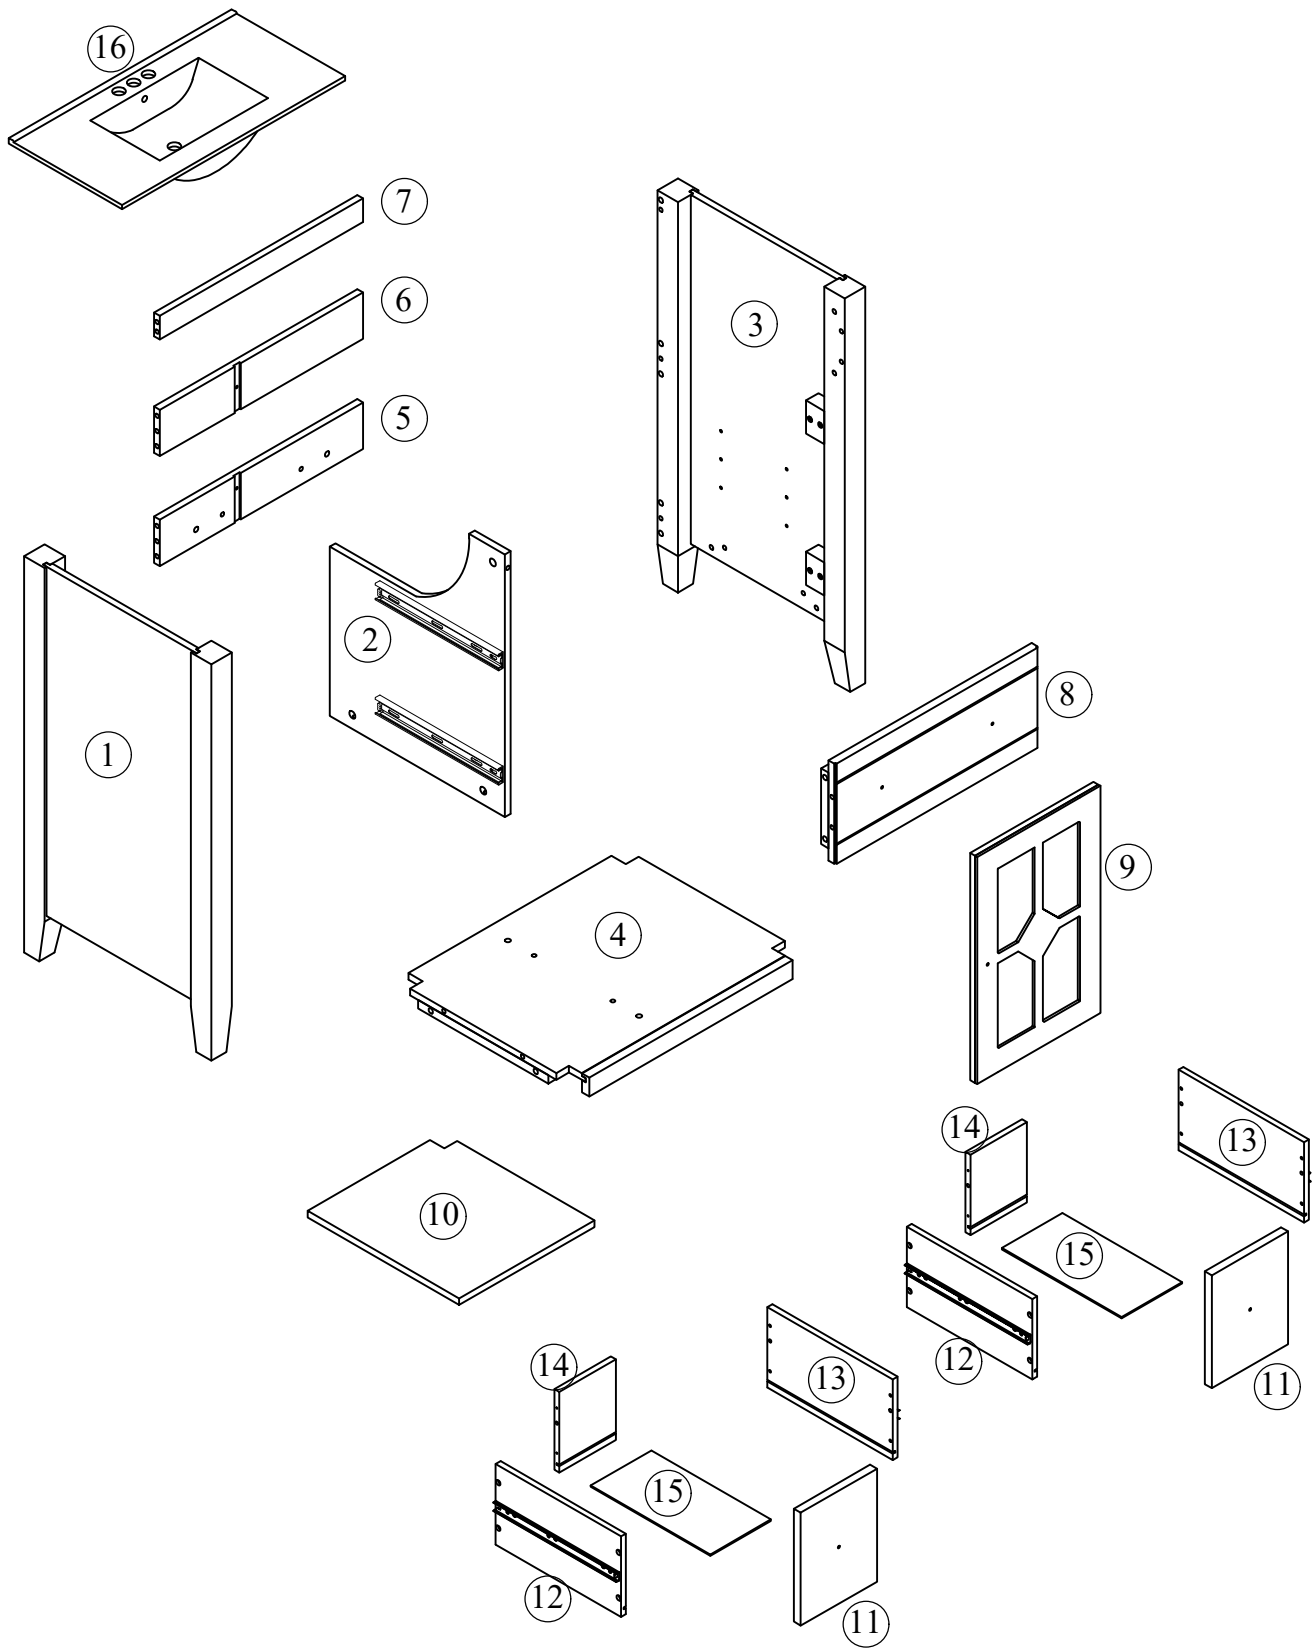


Identifying the Hardware -Identify the hardware using the illustrations below.

Part List-N710P280655

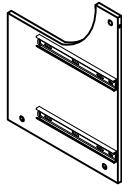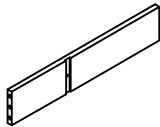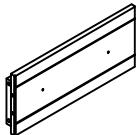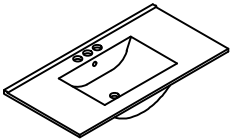
1		2	
	Side Panel (L) - 1pc		Mid Panel - 1pc
3		4	
	Side Panel (R) - 1pc		Frame Bottom - 1pc
5		6	
	Rear Panel Bottom - 1pc		Rear Panel Mid - 1pc
7		8	
	Rear Panel Top - 1pc		Drawer Fake - 1pc
9		10	
	Door cabinet - 1pc		Adjustable Shelf - 1pc
11		12	
	Drawer Face - 2pcs		Drawer Side(L) - 2pcs
13		14	
	Drawer Side(R) - 2pcs		Drawer Back - 2pcs
15		16	
	Drawer Bottom - 2pcs		Sink - 1pc

Hardware List-N710P280655

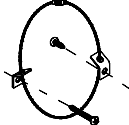
A  ø6x35mm	B  ø14.5x12mm	C  ø8x30mm
Three in one bolts - 15pcs	Three in one lock - 15pcs	Wood dowel - 18pcs
D  ø6x30mm	E  ø8xø4x32mm	F  ø8xø4x25mm
Wood dowel - 8pcs	Round head screw - 16pcs	Round head screw - 2pcs
G 	H  ø5/32"x25mm	I  ø5/32"x35mm
Handle - 5pcs	Handle screw - 3pcs	Handle screw - 2pcs
J 	K  ø7xø3.5x15mm	L 
Damping hinge - 2pcs	Flat head screw - 12pcs	Laminata Pad - 4pcs
M  ø1/4"x28mm	N  ø1/4"x16x1mm	O  ø1/4"x10x1.2mm
Hex-Head bolts - 8pcs	Flat Washer - 8pcs	Lock Washer - 8pcs
P  4mm	Q 	
Allen key - 1pc	Anti fall hardware - 2sets	

STEP: 1

A



2PCS

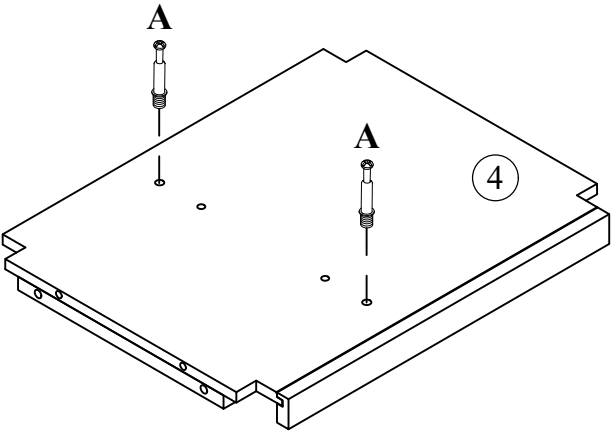


STEP: 2

B




2PCS


C




2PCS

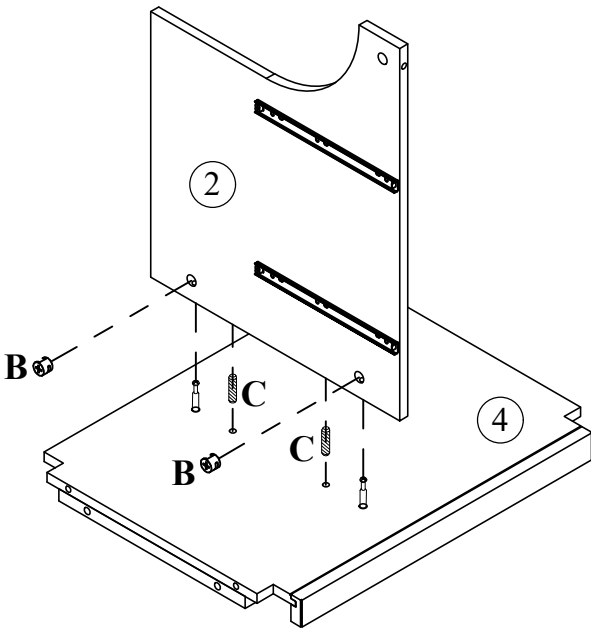



STEP: 3

A

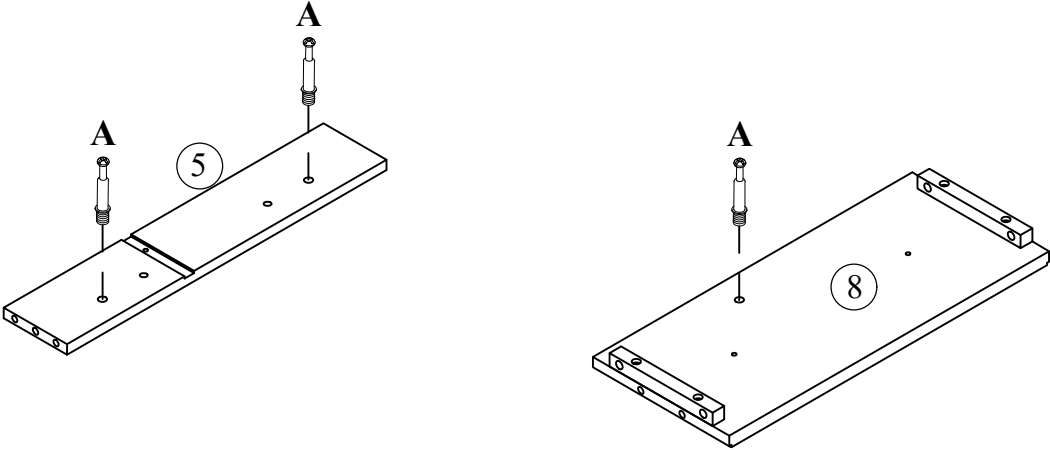3PCS





STEP: 4

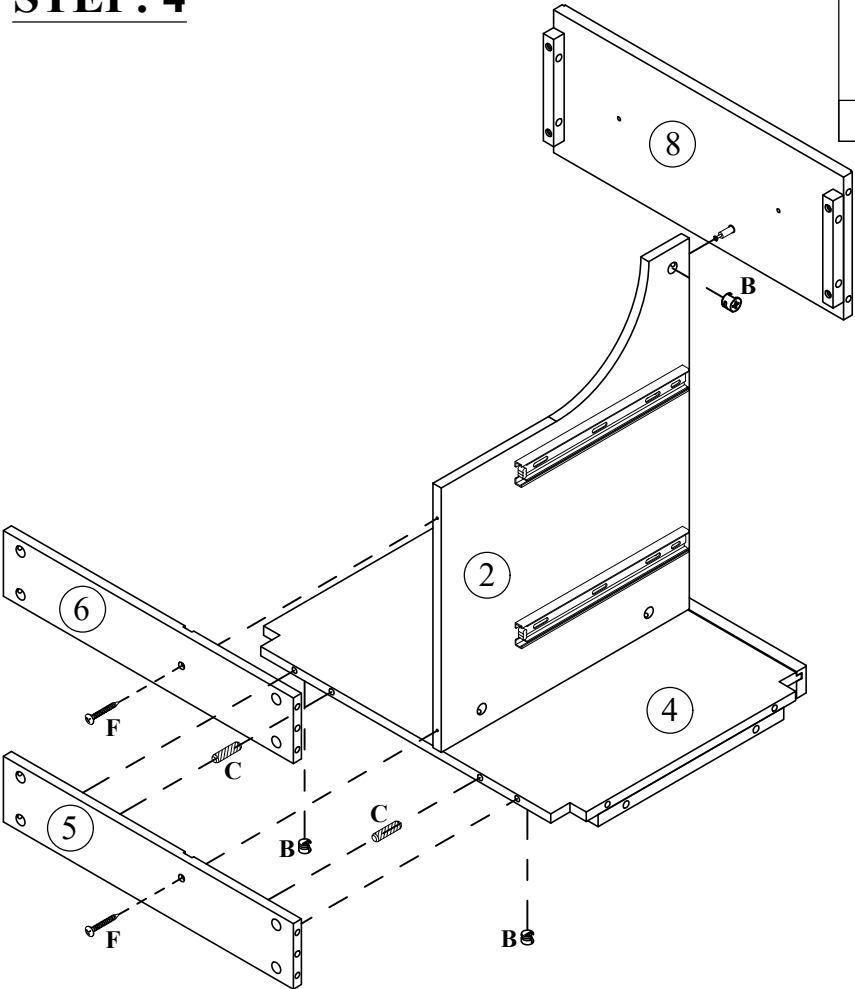B	C	F
		
3PCS	2PCS	2PCS




STEP: 5

A

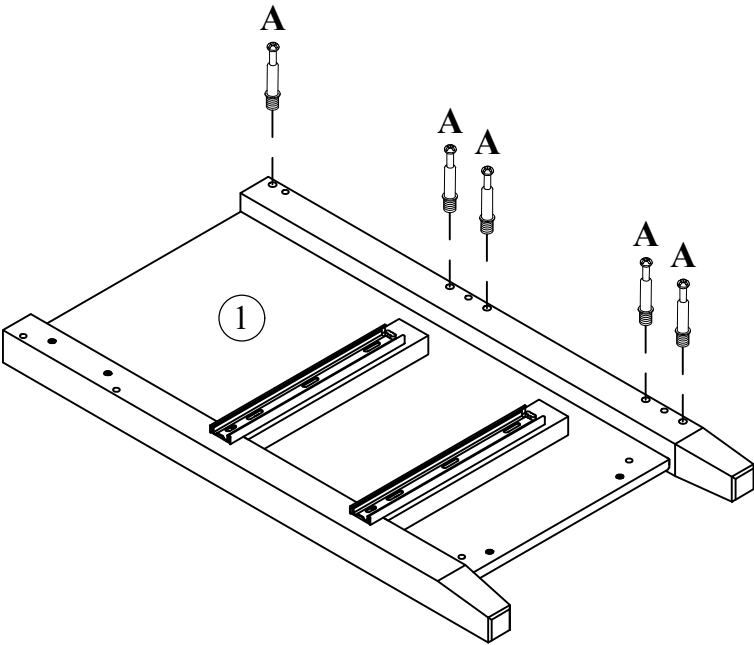5PCS




STEP: 6

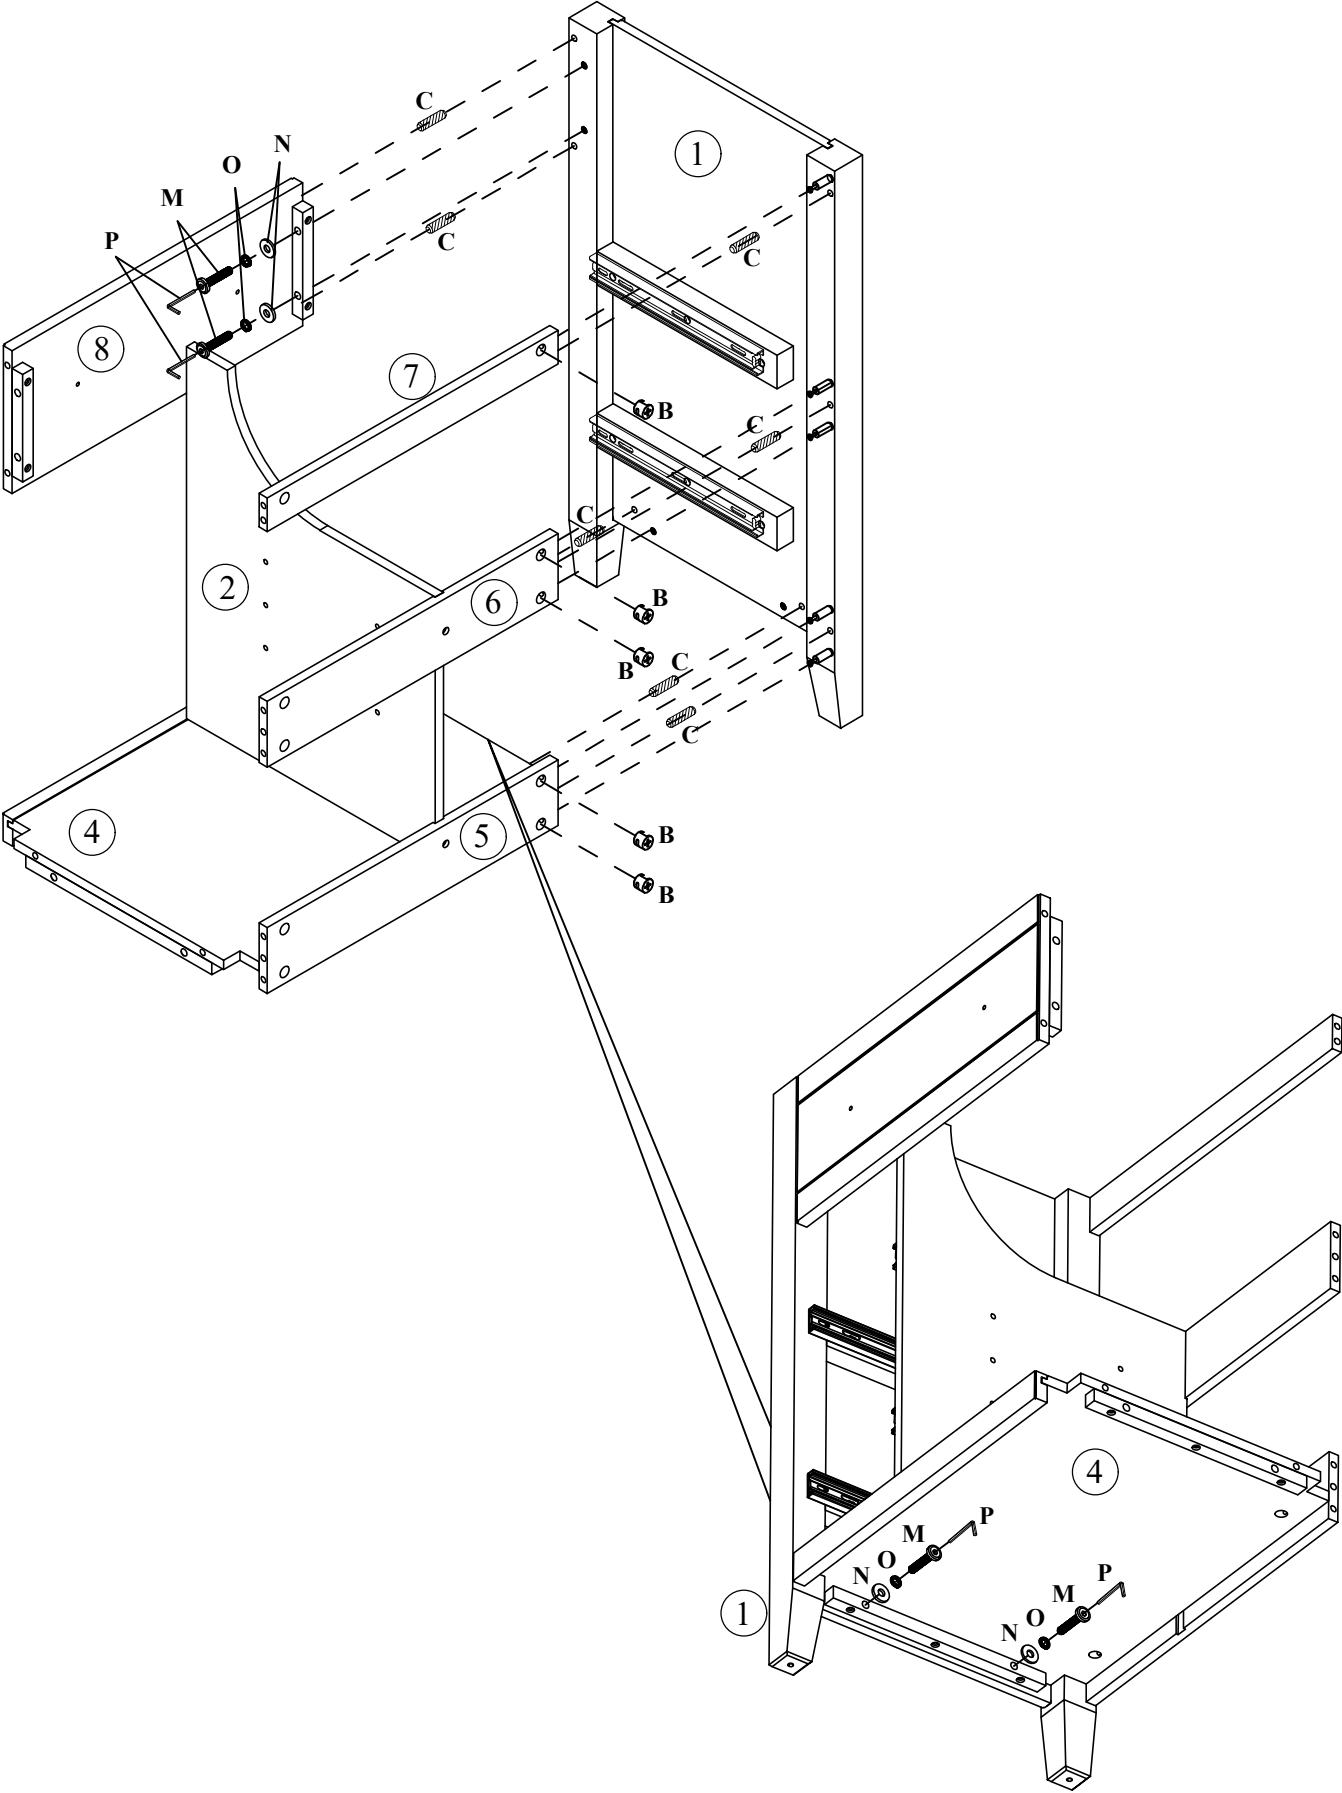B	C	M	N	O	P
					
5PCS	7PCS	4PCS	4PCS	4PCS	1PC




STEP: 7


A




5PCS

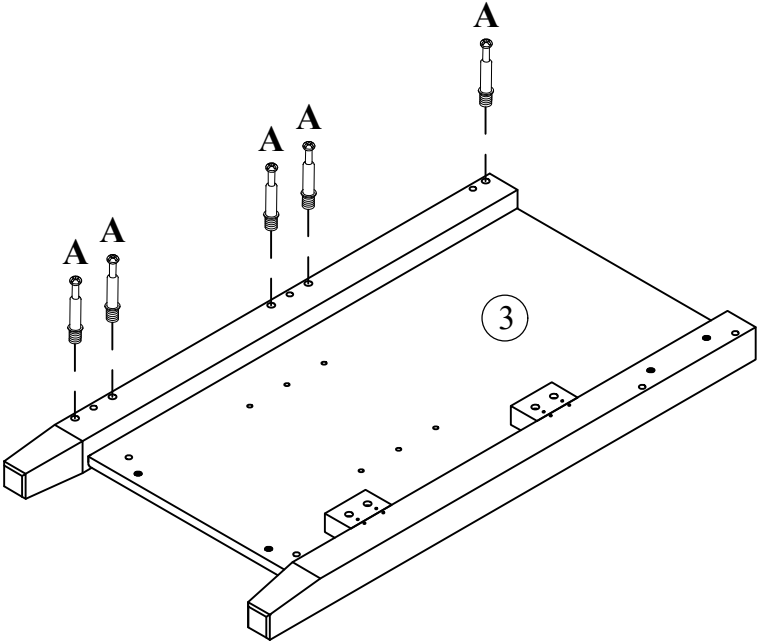

STEP: 8

B	C	M	N	O	P
					
5PCS	7PCS	4PCS	4PCS	4PCS	1PC



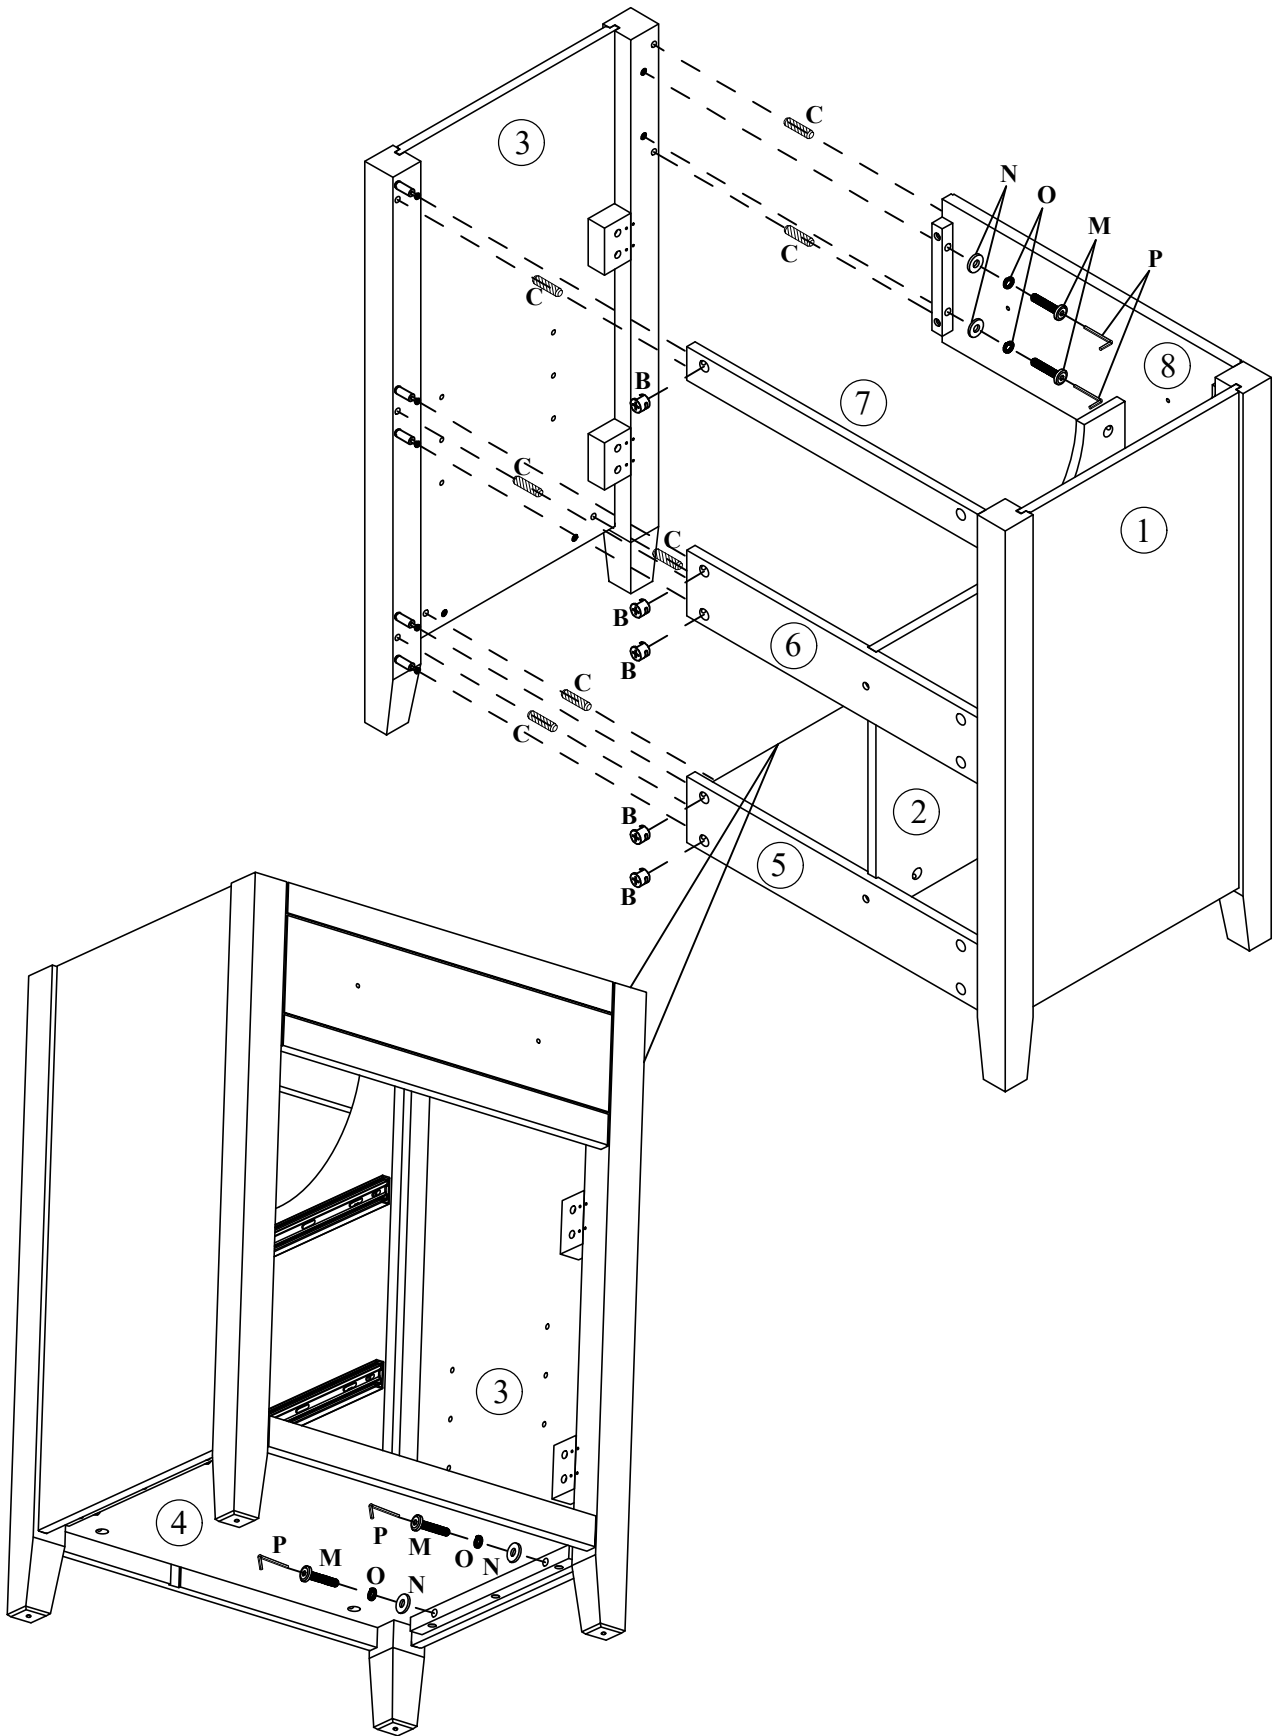


STEP: 9

L




4PCS

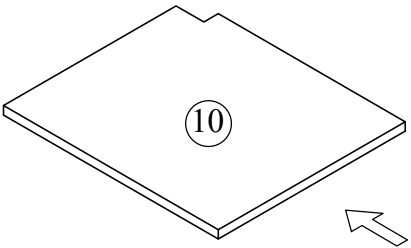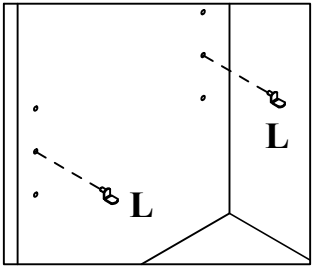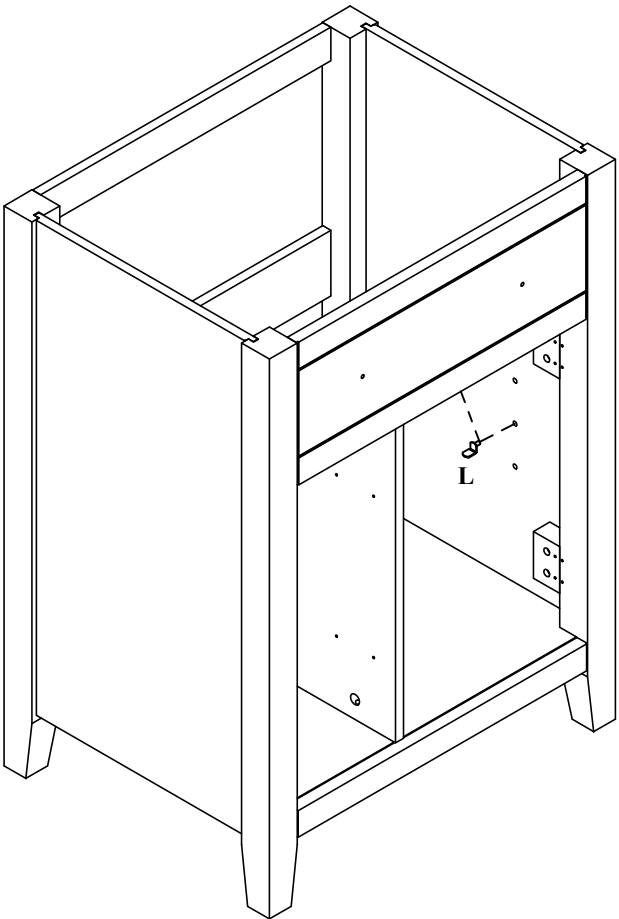

STEP: 10

H




2PCS


G





2PCS

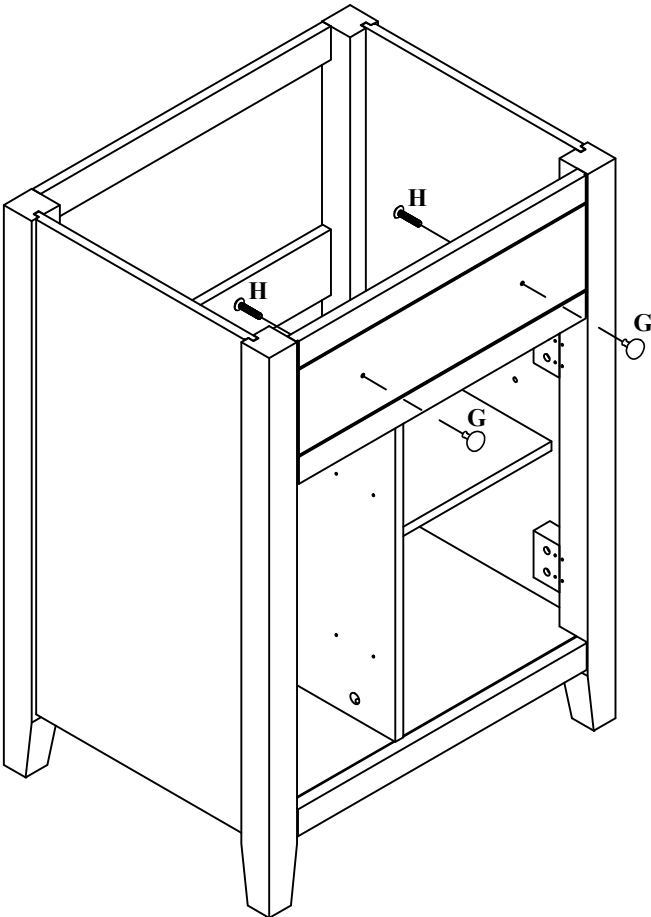




STEP: 11


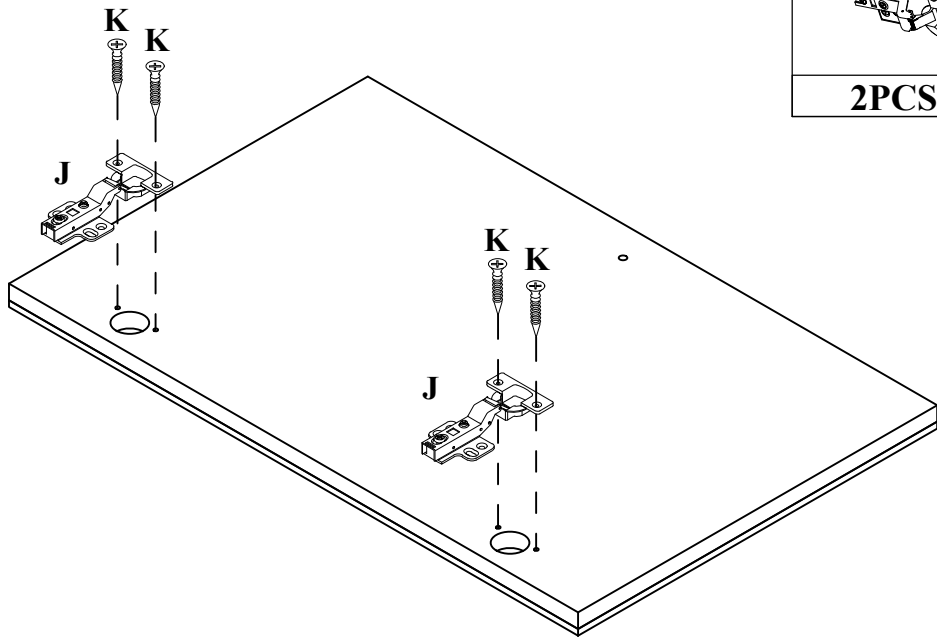


J	K
	
2PCS	4PCS


STEP: 12

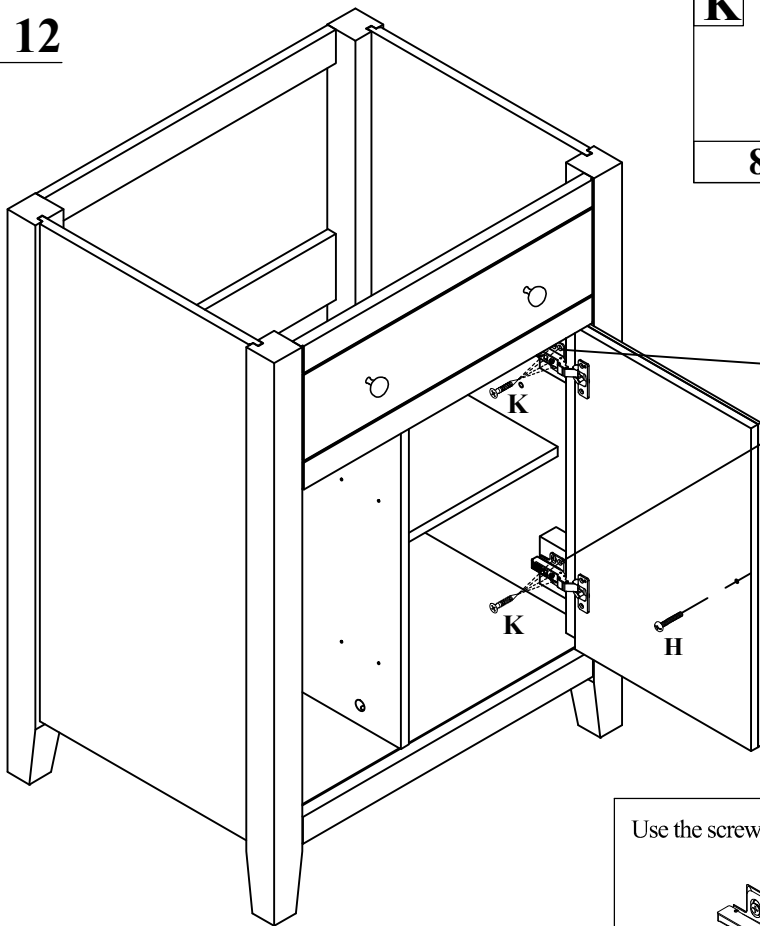





K	H	G
		
8PCS	1PC	1PC

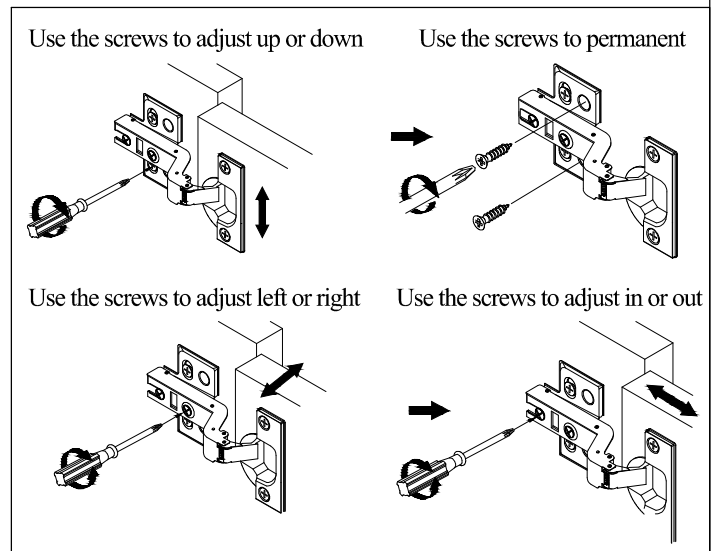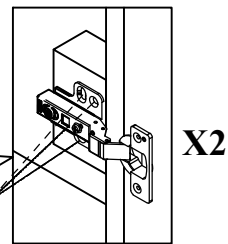


STEP: 13

G	I	D	E
			
2PCS	2PCS	8PCS	16PCS



x2

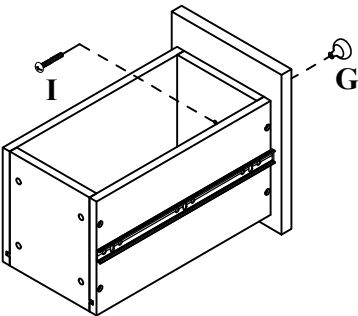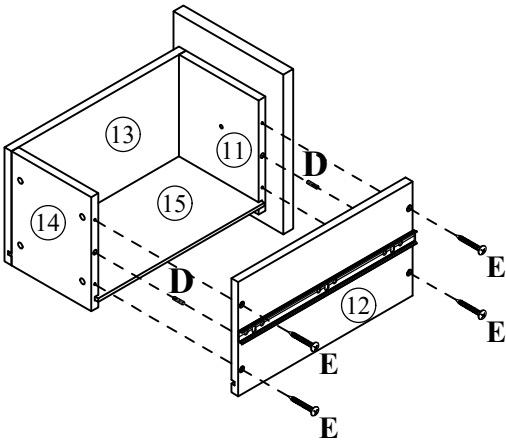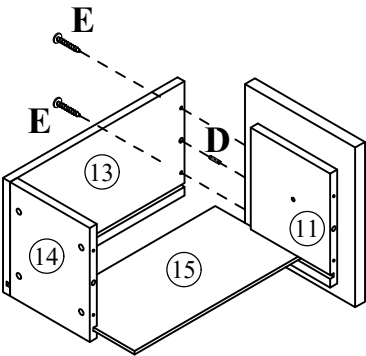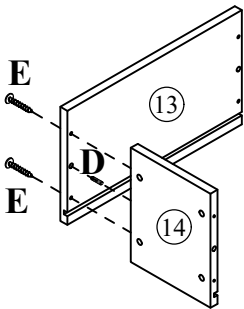

STEP: 14

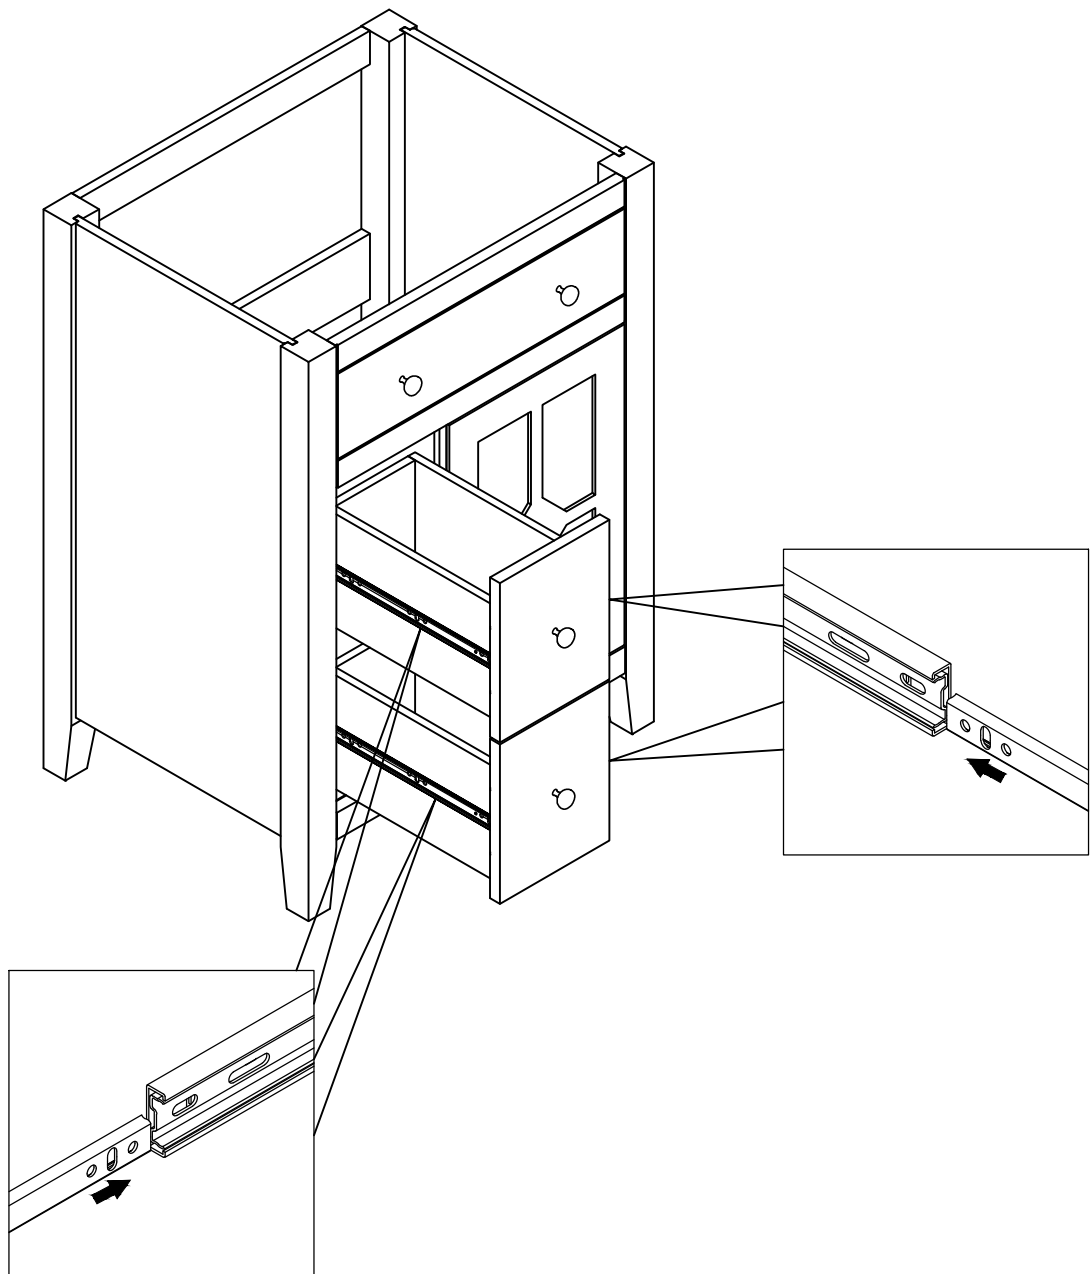


STEP: 15

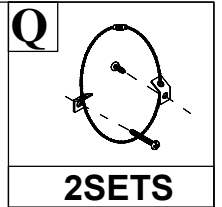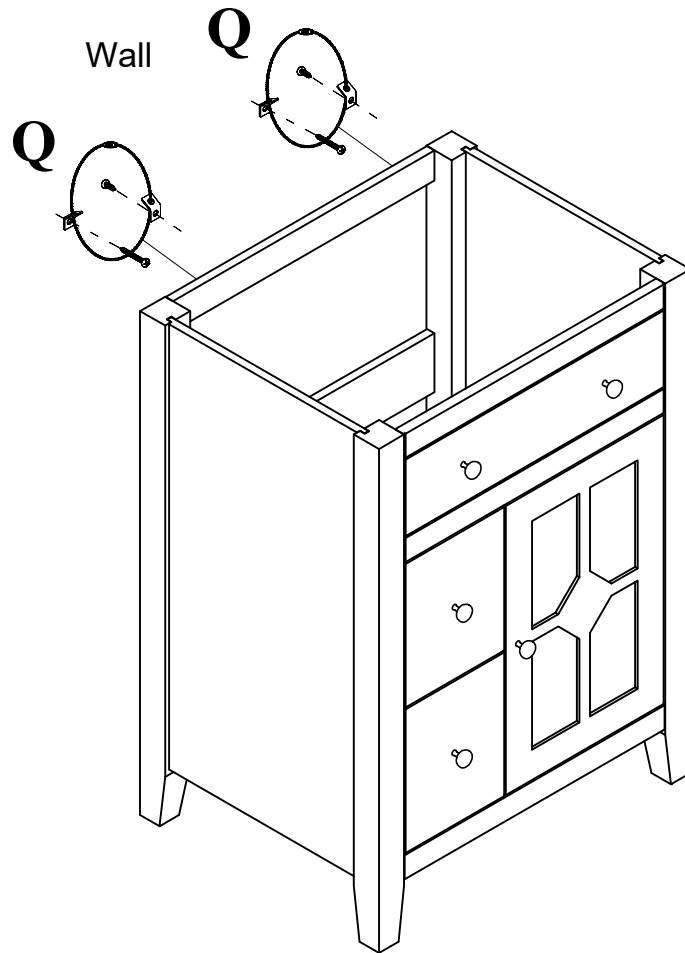



STEP: 16

Install the sink on the cabinet with glue.
Let stand for 24 hours

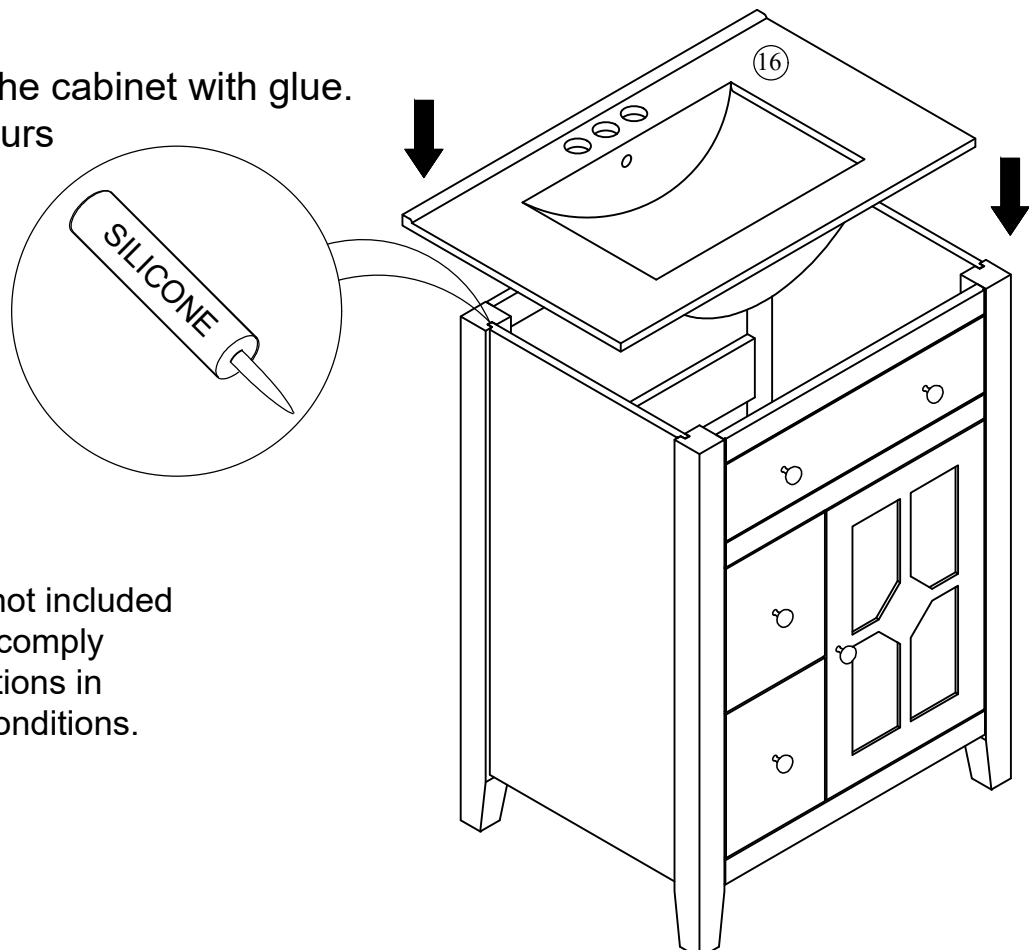


*Silicone glue is not included
in the package to comply
with safety regulations in
certain shipping conditions.

STEP: 17

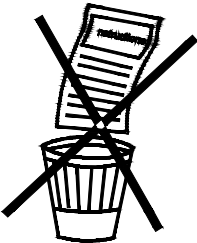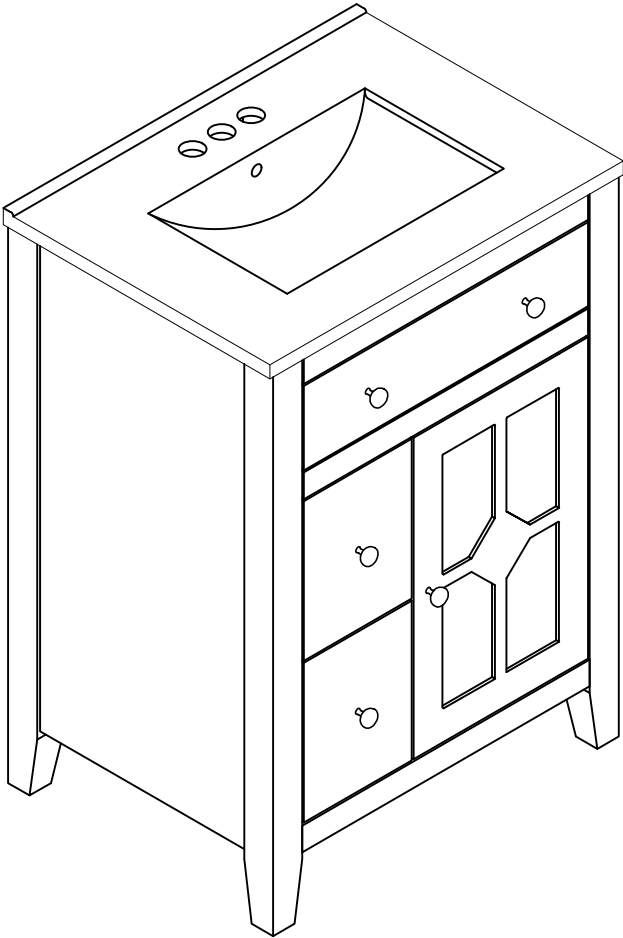


HINGE ADJUSTMENTS

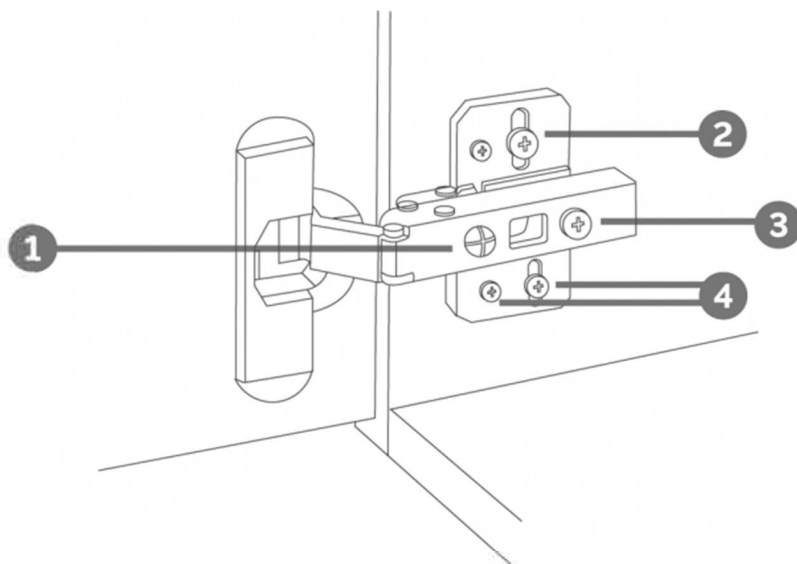


① Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from the side of the cabinet
anticlockwise to move the door closer to the side of the cabinet

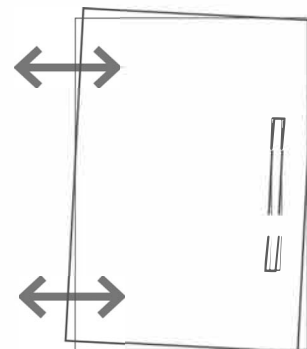

② ④ Height adjustment

While supporting the weight of the door, turn the screws
clockwise to move the door up
anticlockwise to move the door down

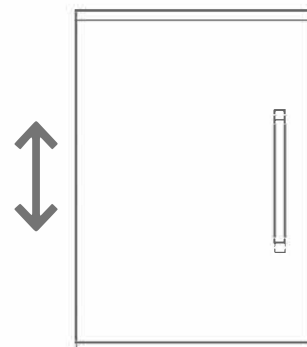

③ Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw
clockwise to decrease the gap between the door and the cabinet
anticlockwise to increase the gap between the door and the cabinet

