



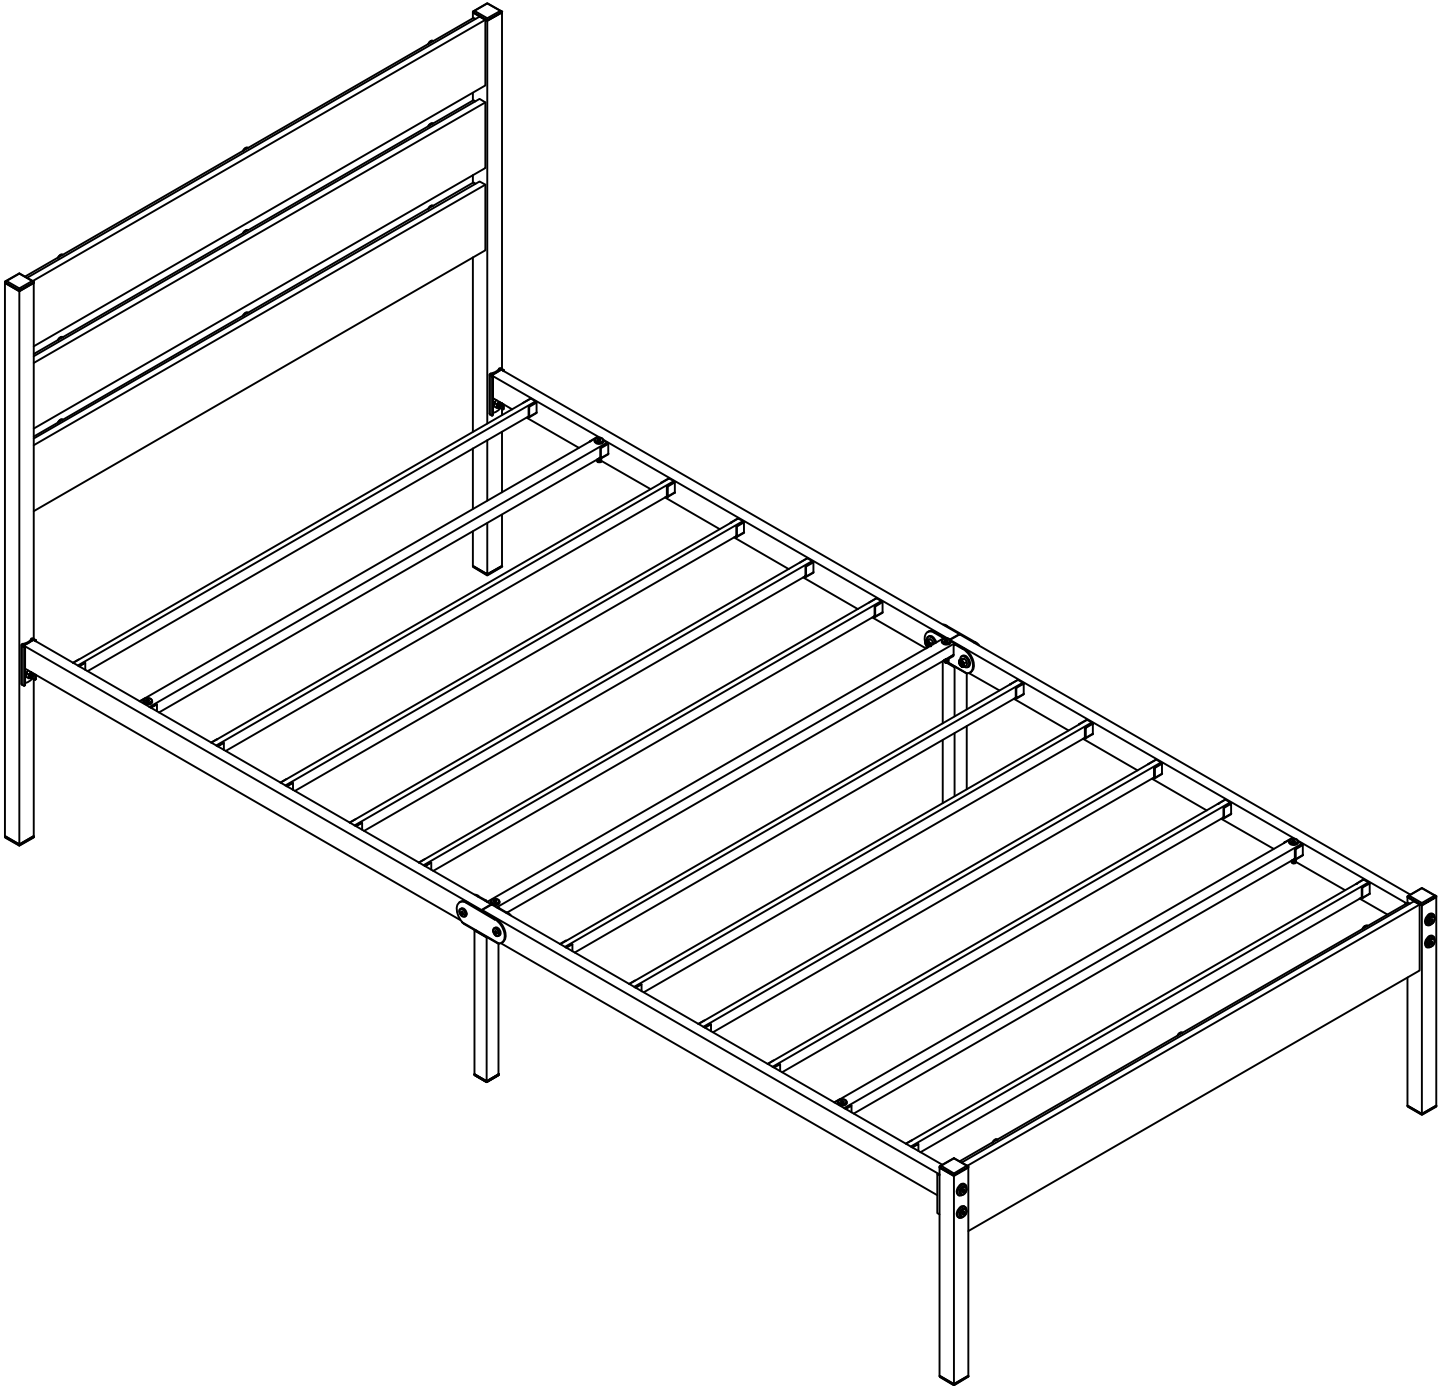

#Number System








KHD-BTJ-MBT02-RBN Lot No: VHX-NO.1

Follow the marked steps for the easiest assembling process
step 1 step 2 step 3 step 4...

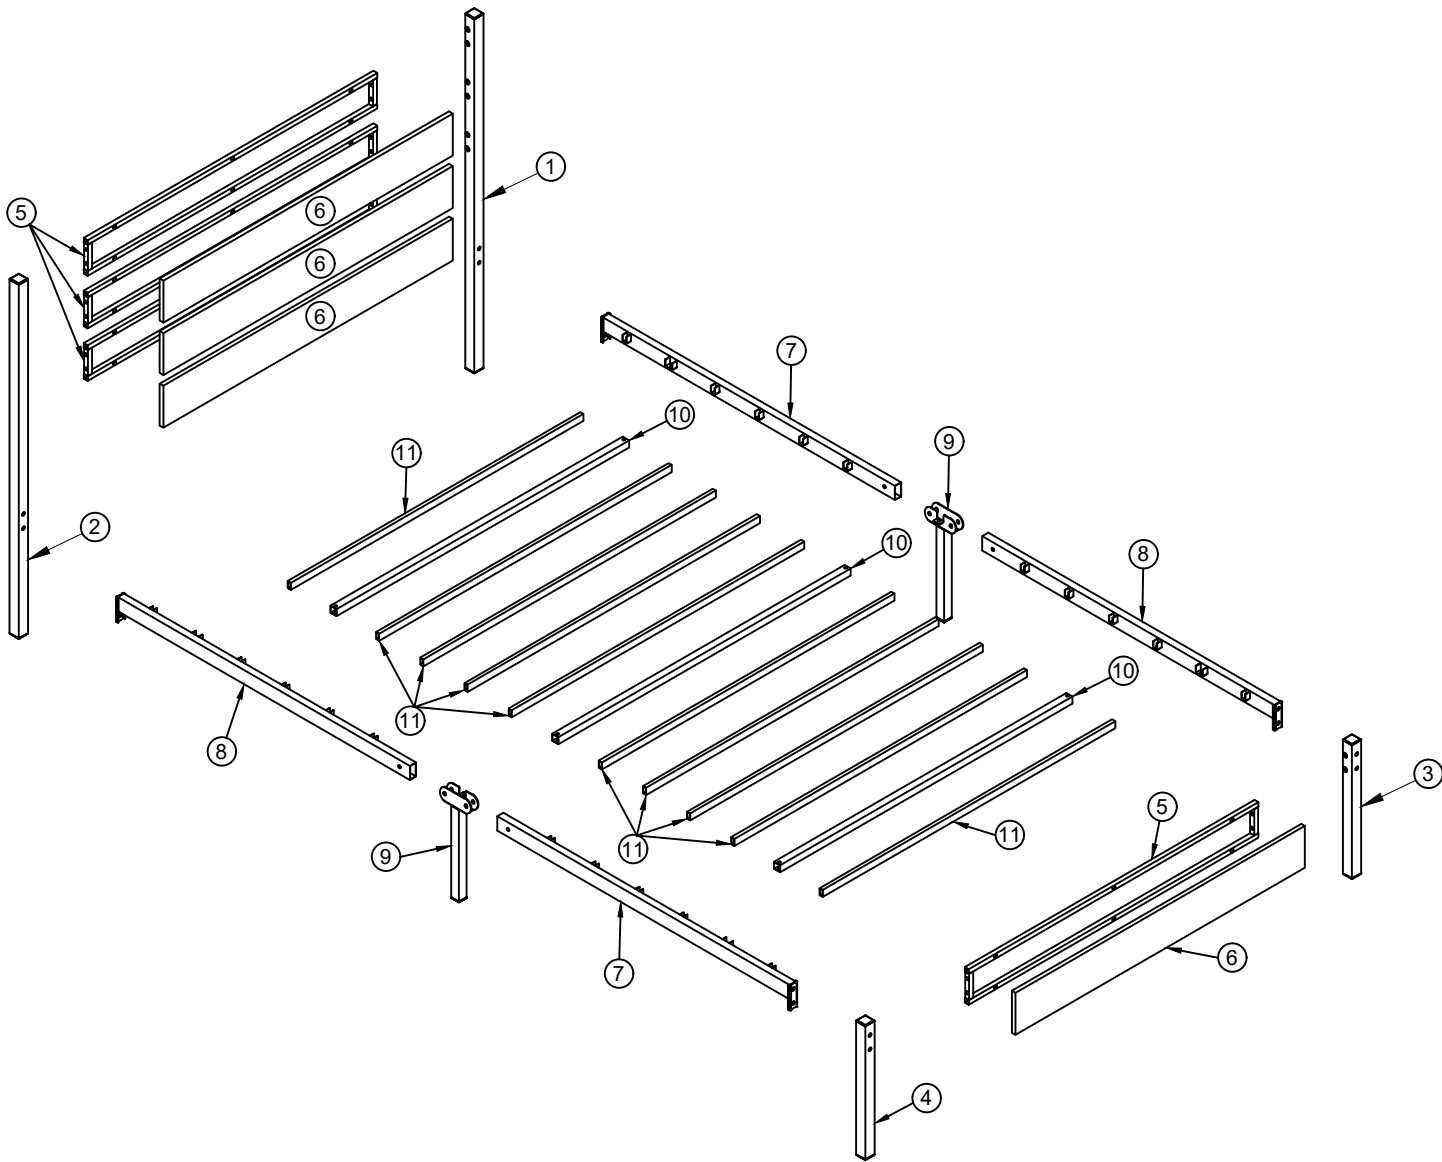


Check all the components & screws before assembly.
Do not install in case part is missing,.


PART LIST

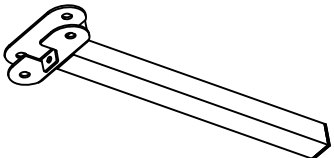①		1pc	②		1pc
③		1pc	④		1pc
⑤		4pcs	⑥		4pcs
⑦		2pcs	⑧		2pcs
⑨		2pcs	⑩		3pcs
⑪		10pcs			


HARDWARE LIST

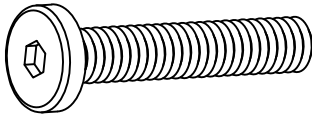


M8x45mm
Ⓐ x4pcs




M8x40mm
Ⓑ x4pcs




M6x35mm
Ⓒ x4pcs




M6x30mm
Ⓓ x6pcs




M6x25mm
Ⓔ x16pcs+1pc




M6x20mm
Ⓕ x24pcs+2pcs

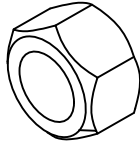


M8x12x6mm
Ⓖ x4pcs

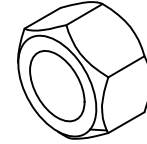


M6x10x5mm
Ⓗ x4pcs

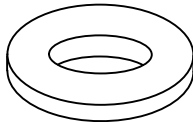


Ø18x1.5mm
Ⓘ x12pcs+1pc

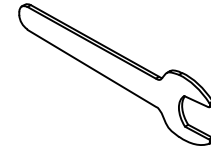

10mm
Ⓙ x1pc

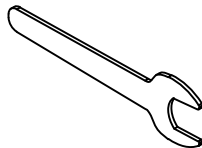


12mm
Ⓚ x1pc

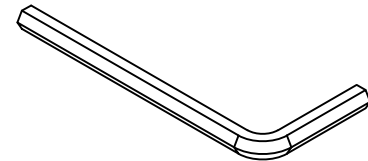

4mm
Ⓛ x1pc


Step 1

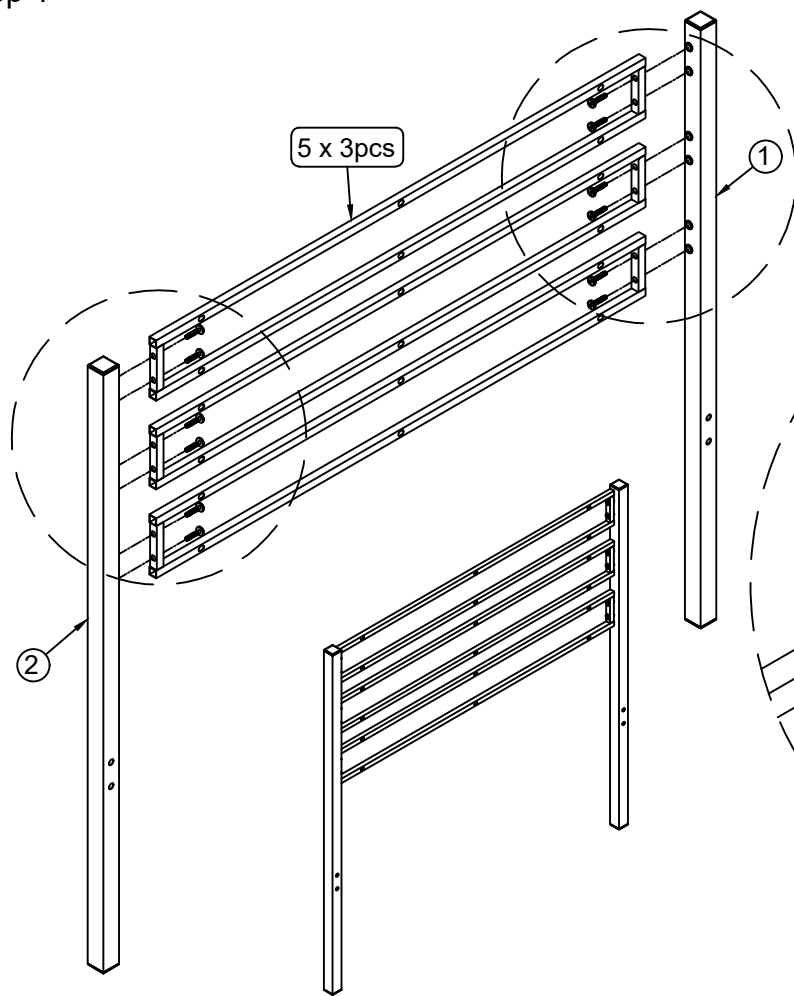


4mm
L x1pc




M6x25mm
E x12pcs

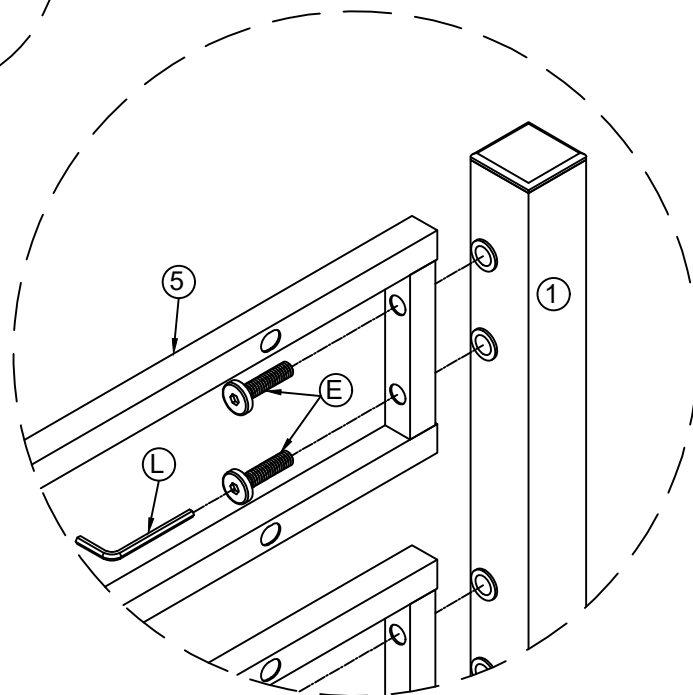


Step 2

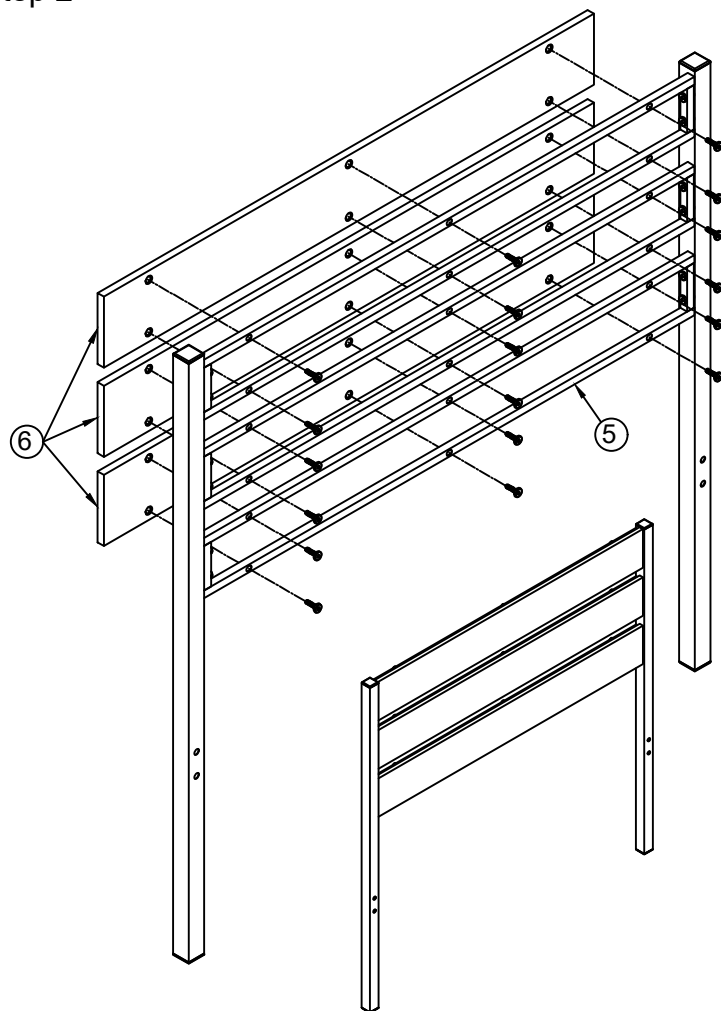


4mm
L x1pc



M6x20mm
F x18pcs

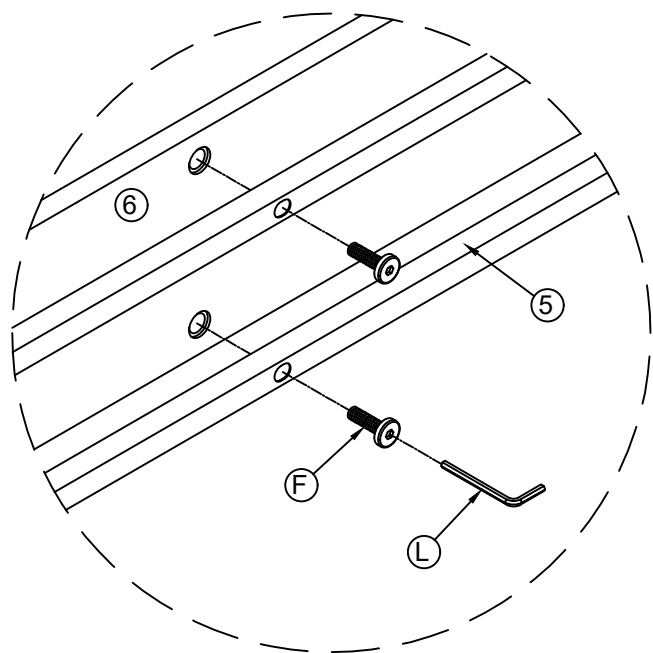


Step 3

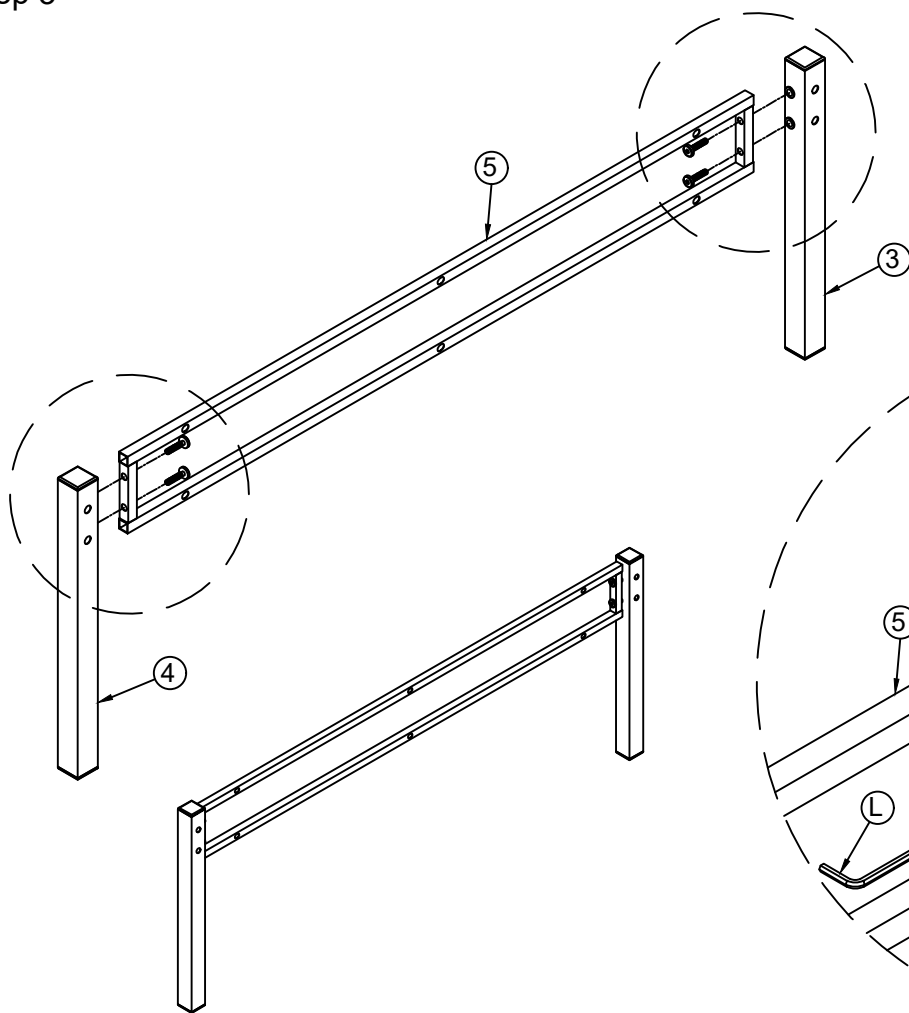



4mm
Ⓛ x1pc



M6x25mm
ⓔ x4pcs

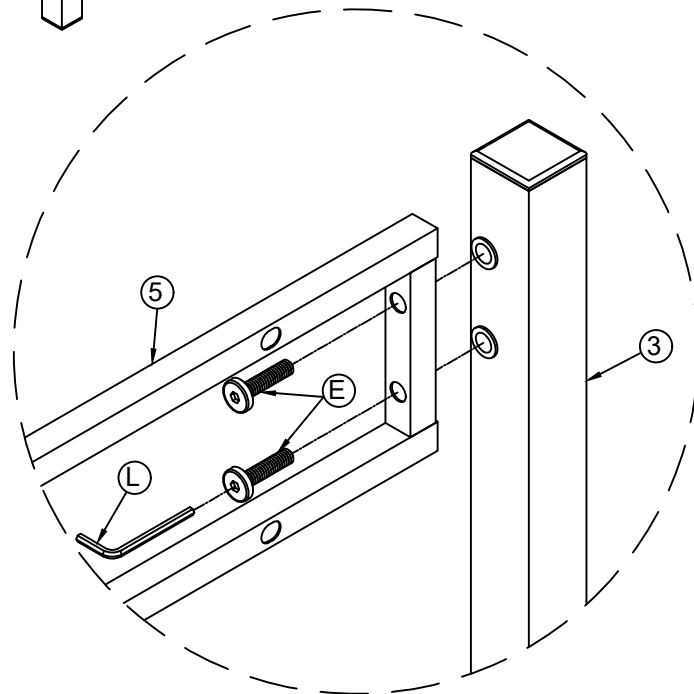


Step 4

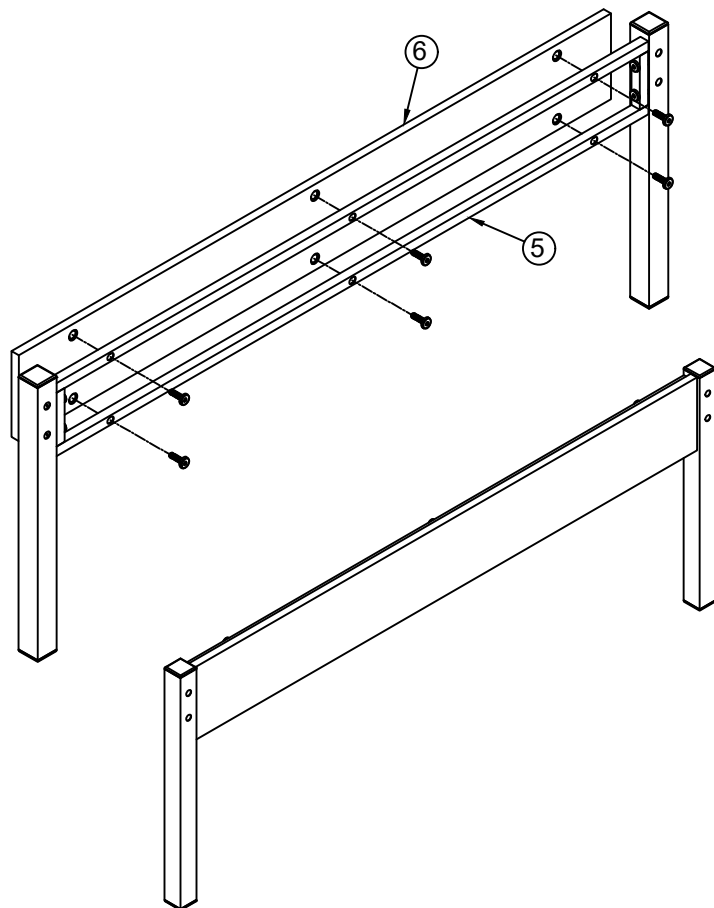


4mm
Ⓛ x1pc




M6x20mm
ⓕ x6pcs

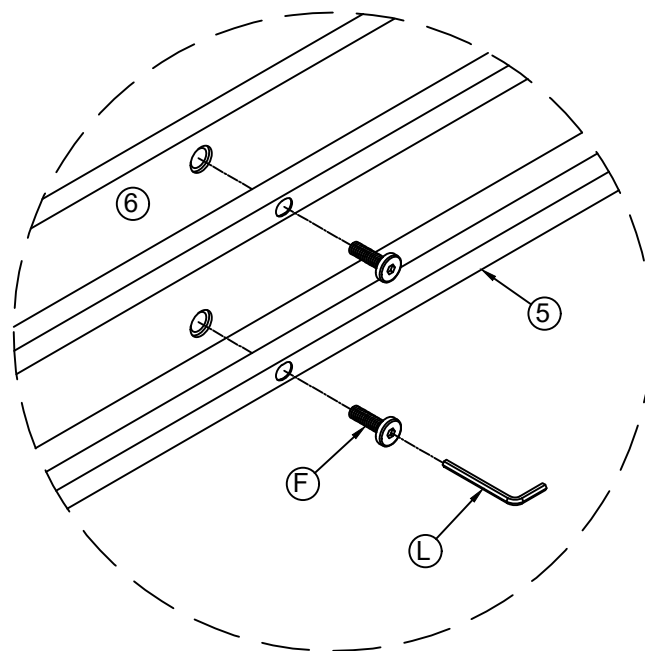

Step 5




10mm
(J) x1pc



4mm
(L) x1pc



M6x10x5mm
(H) x4pcs




M6x35mm
(C) x4pcs



Ø18x1.5mm
(I) x4pcs


X2

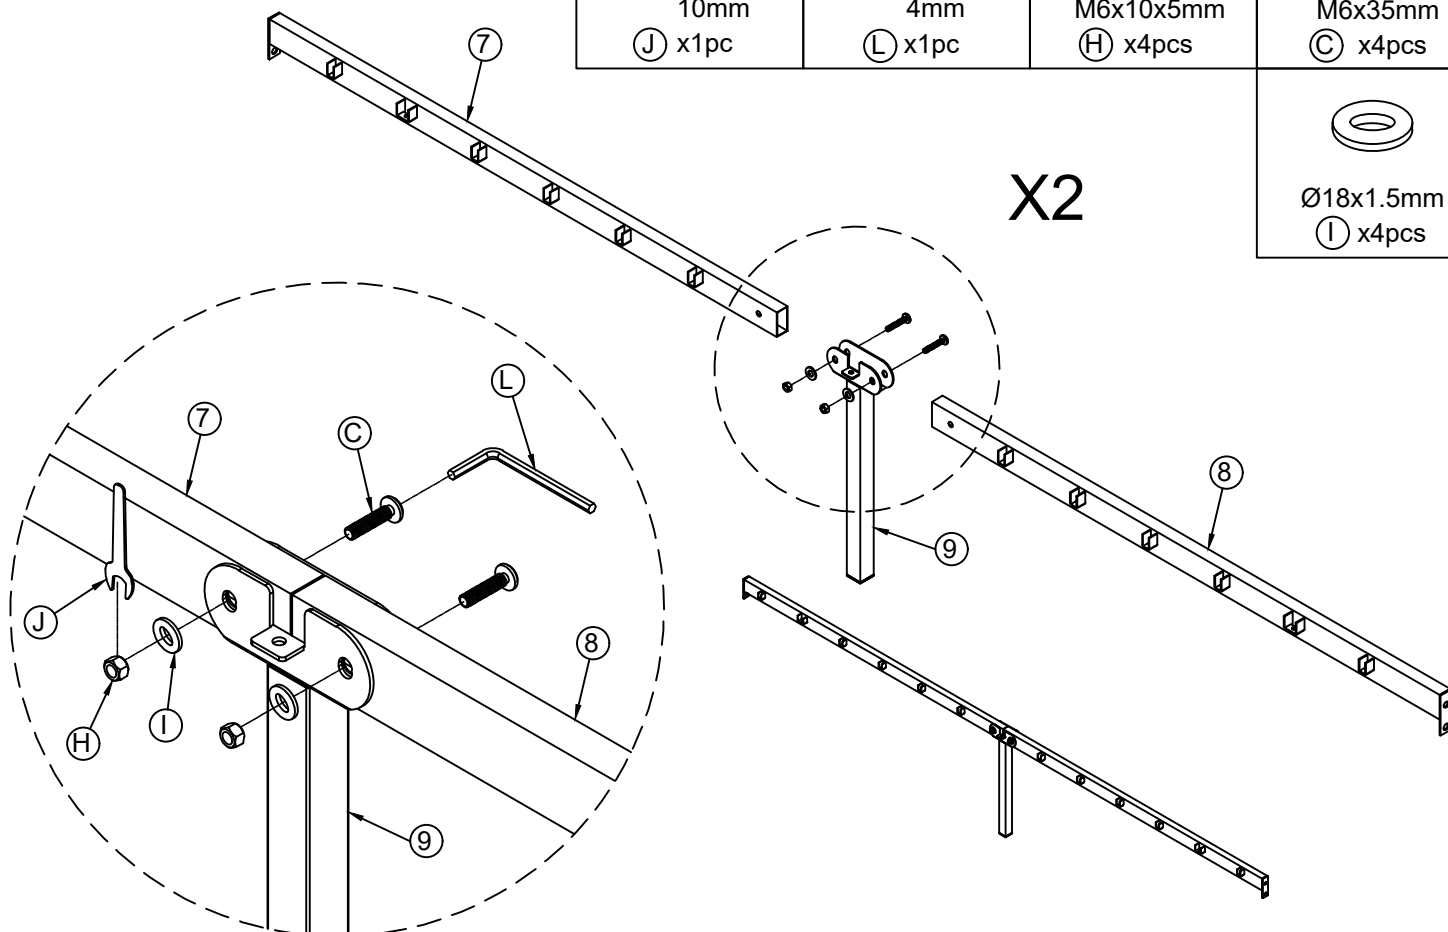

Step 6




4mm
(L) x1pc




Ø18x1.5mm
(I) x8pcs



M8x12x6mm
(G) x4pcs




M8x40mm
(B) x4pcs




M8x45mm
(A) x4pcs




12mm
(K) x1pc

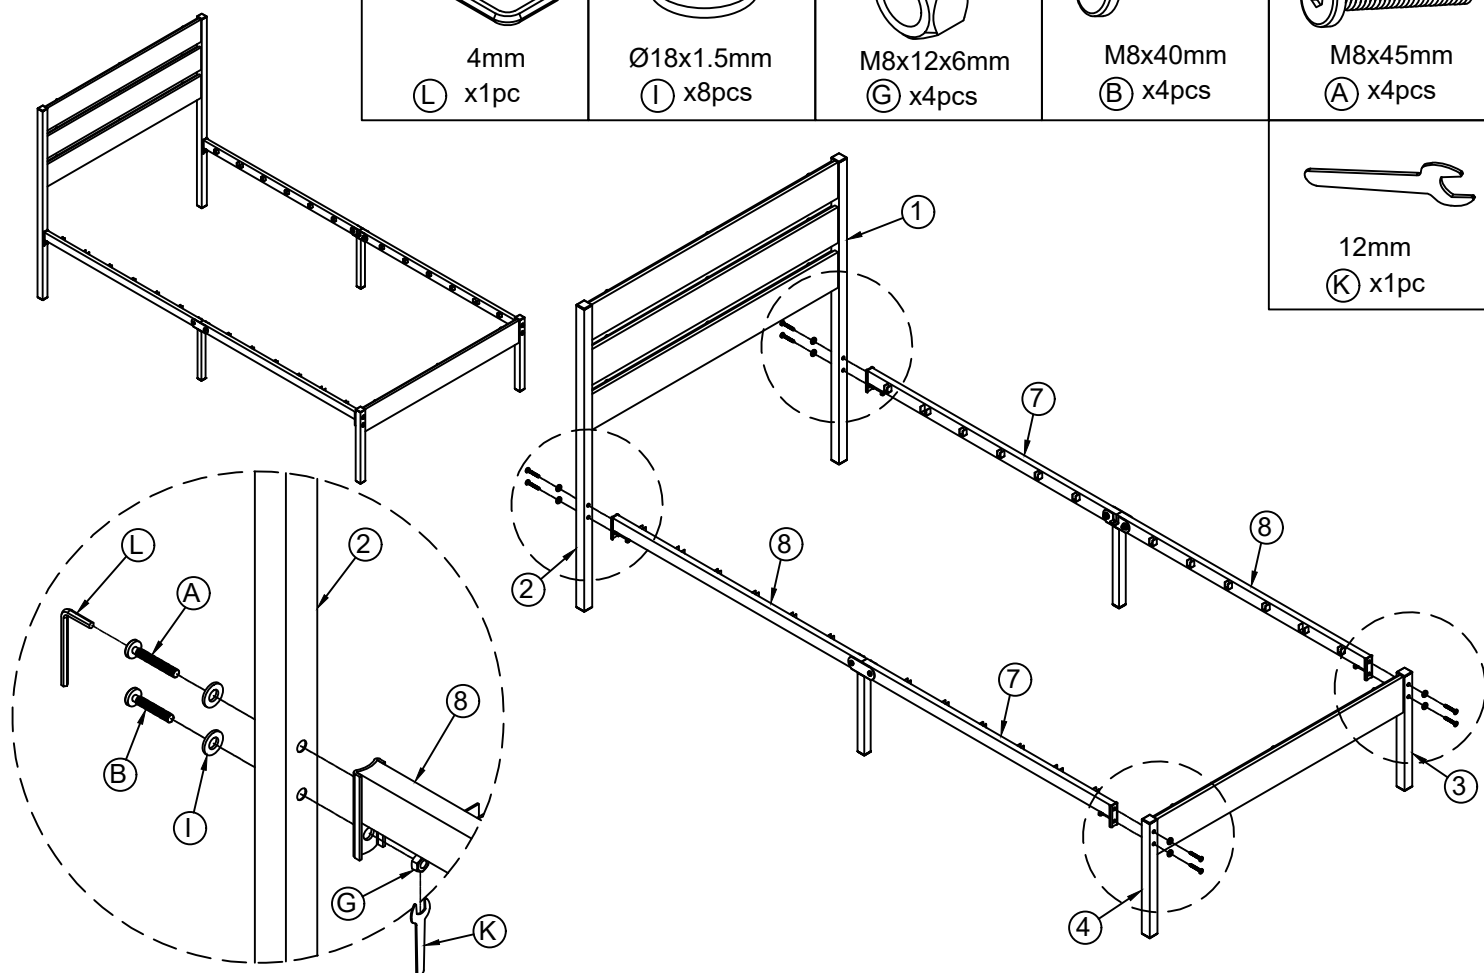


Step 7

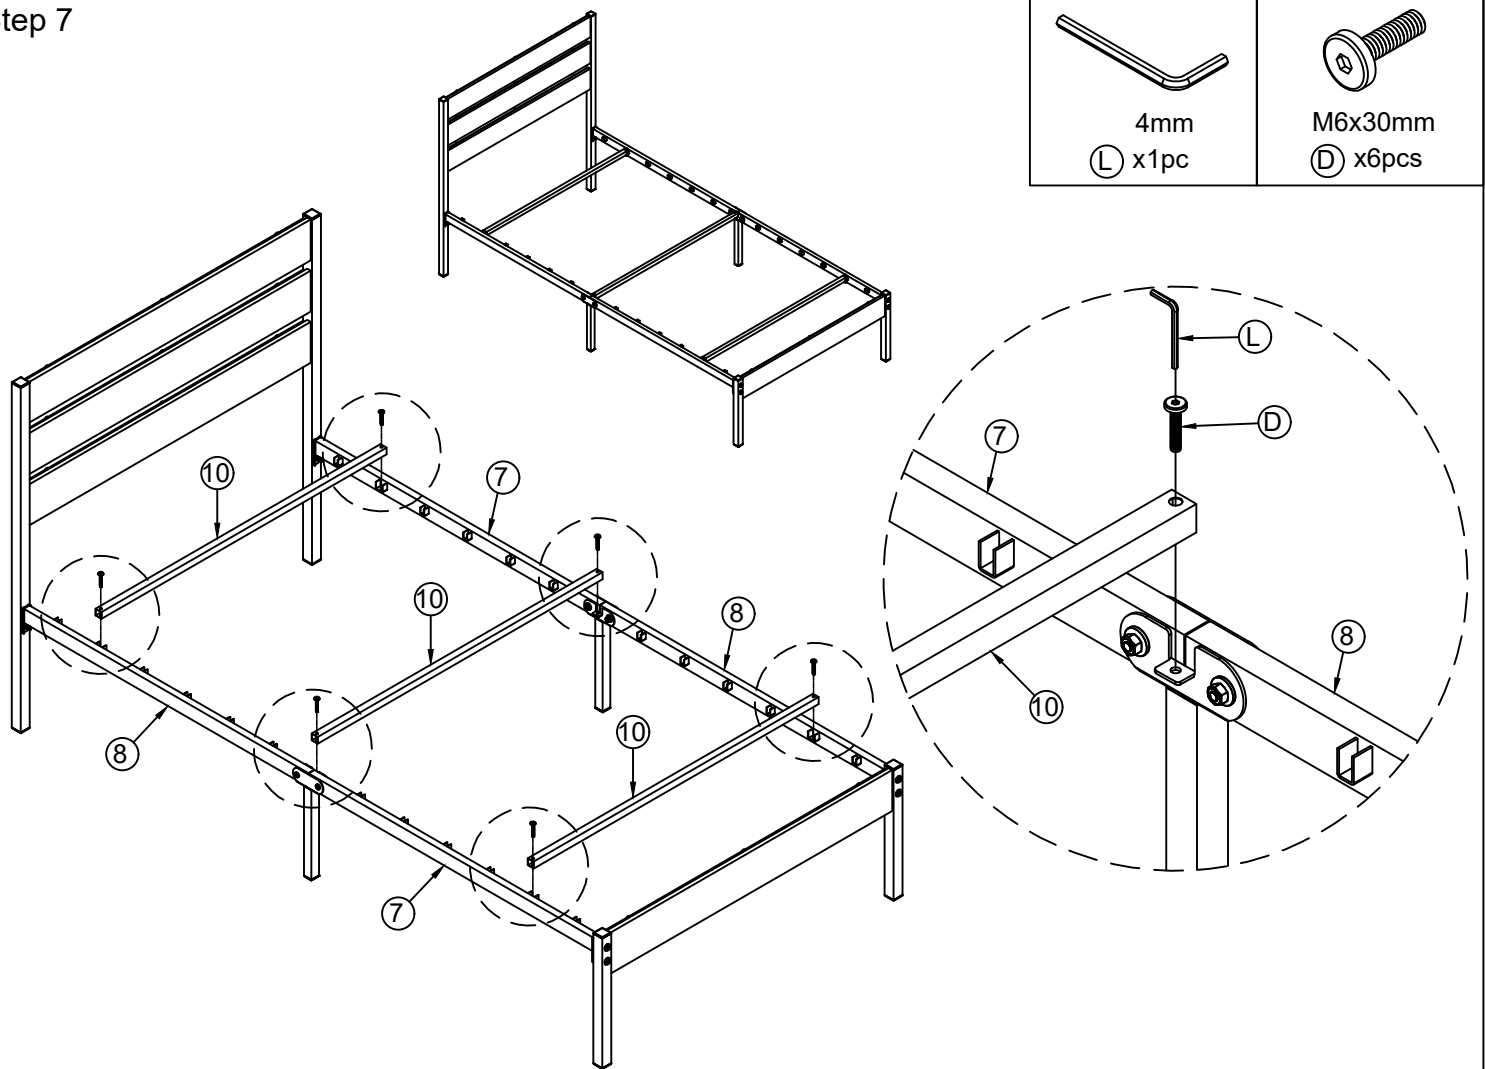

Step 8

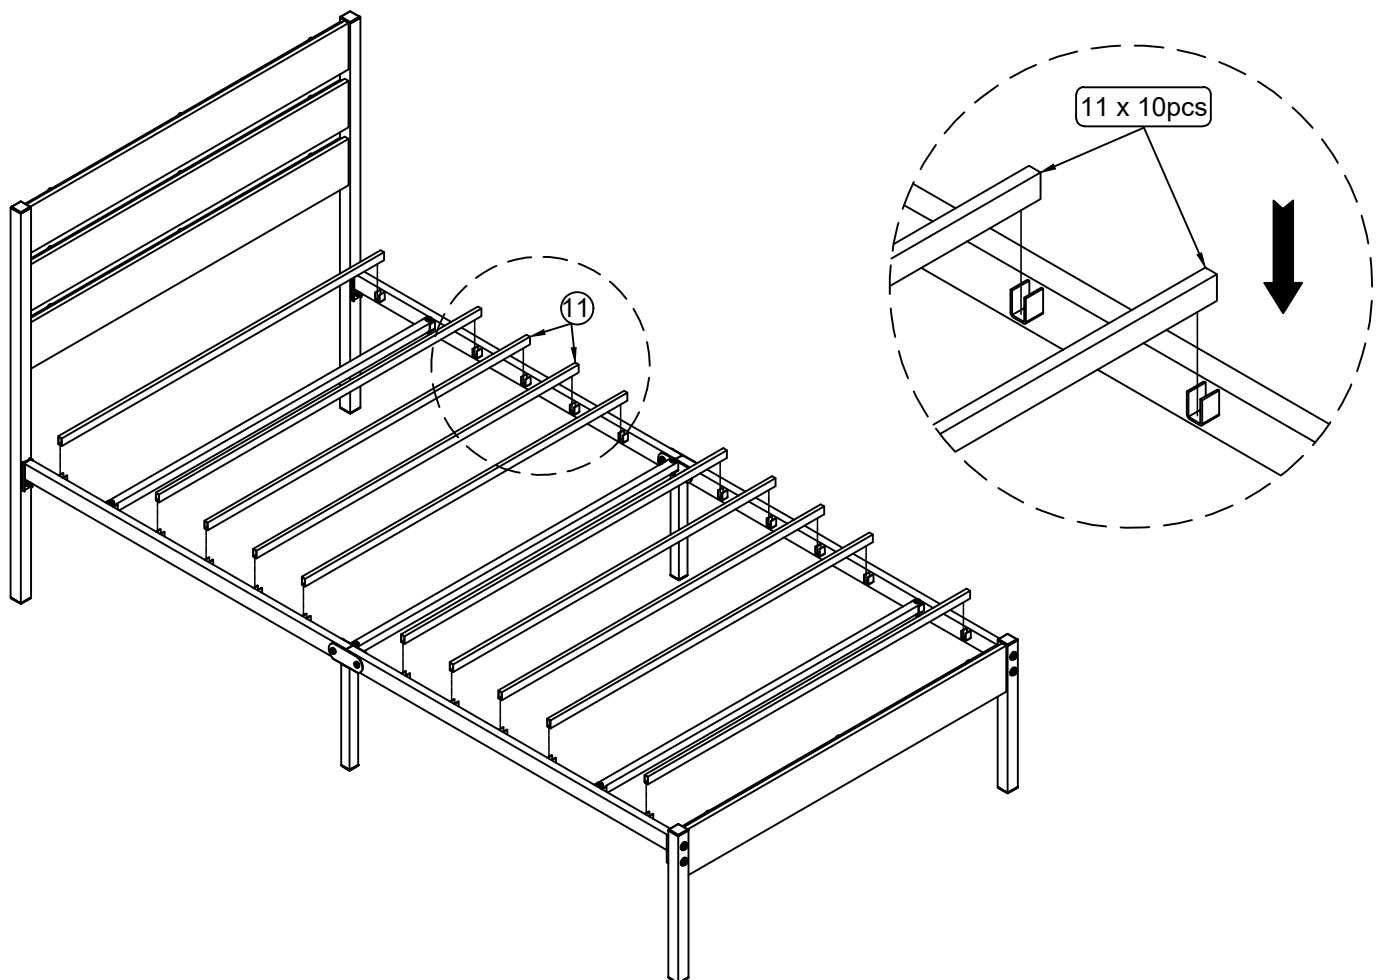

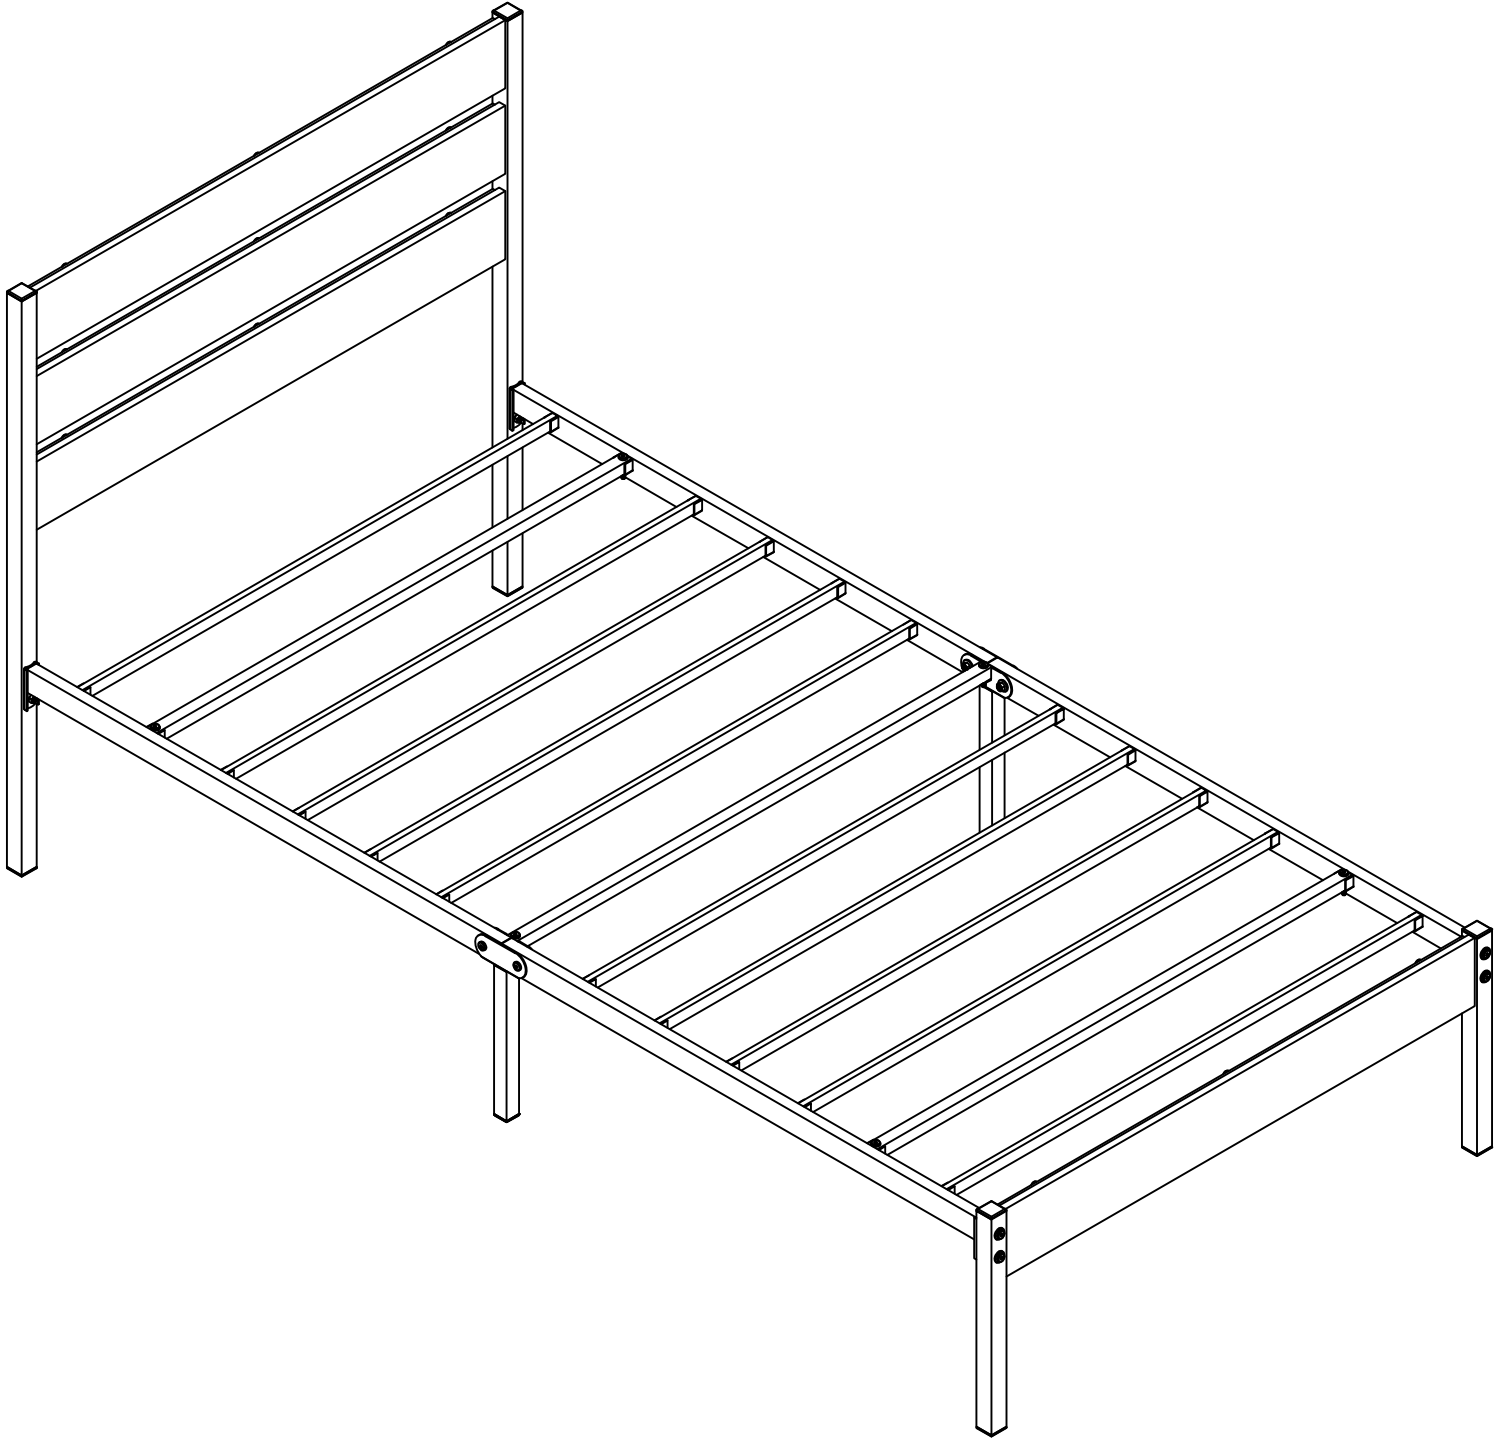

Note:
Check and tighten all screws