
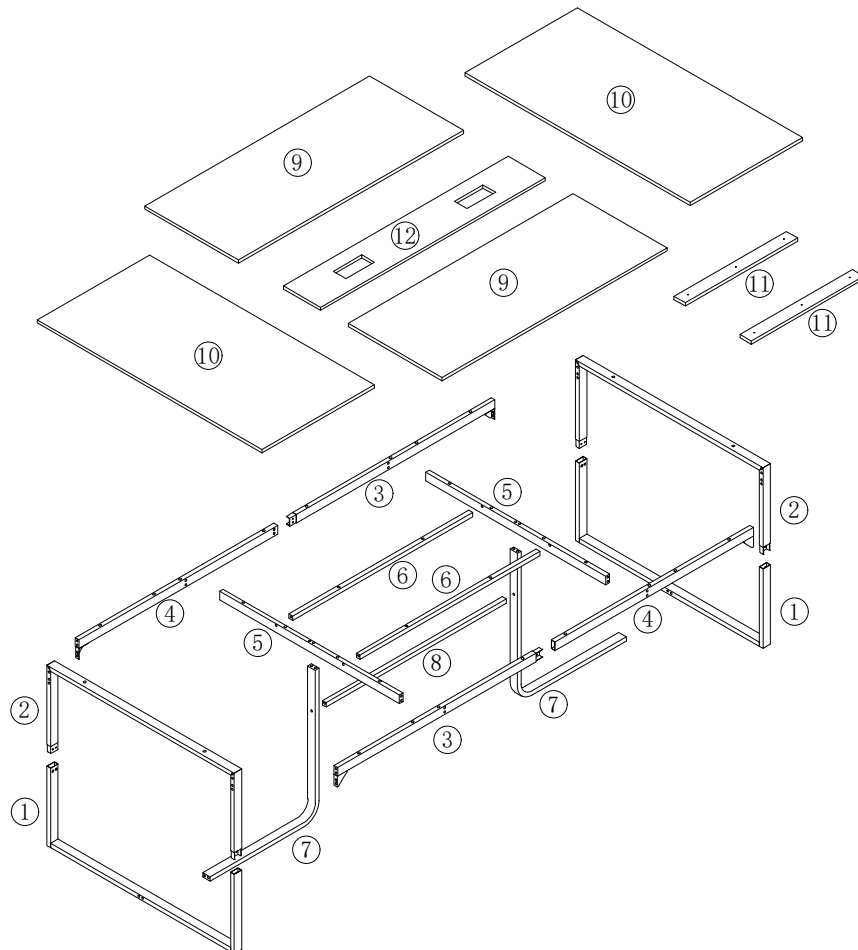
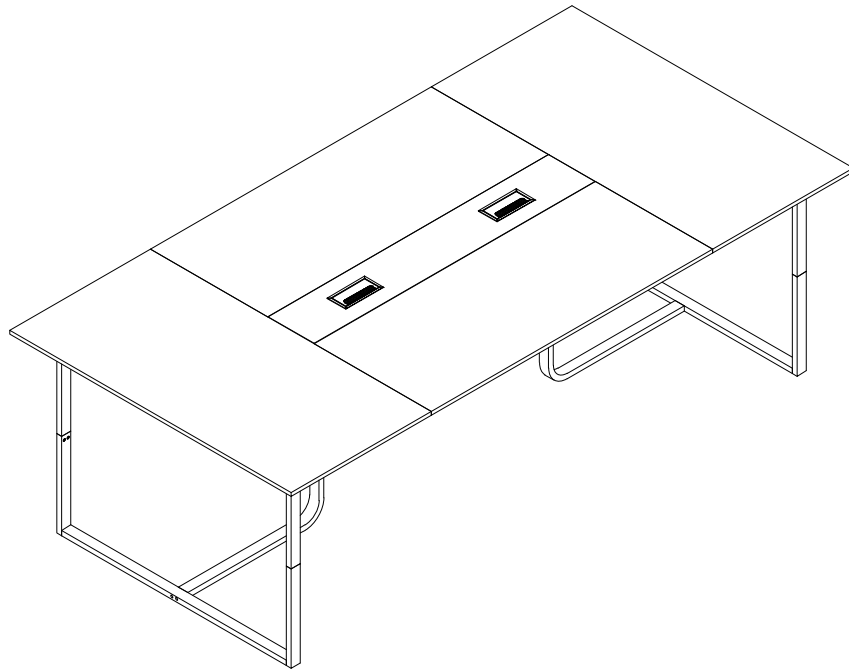
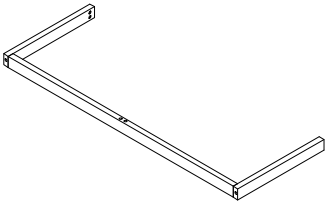
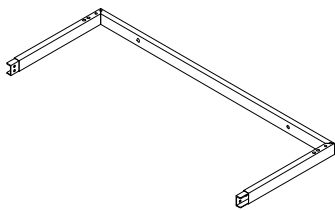
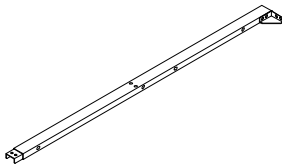
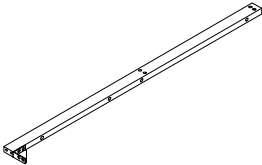
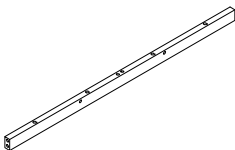
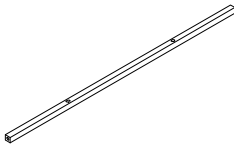
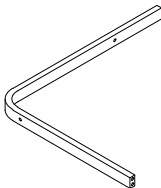
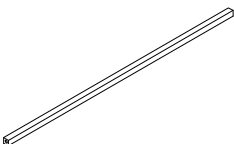
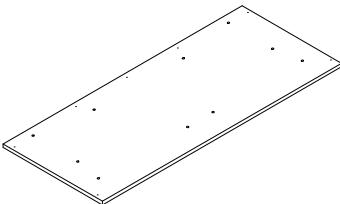
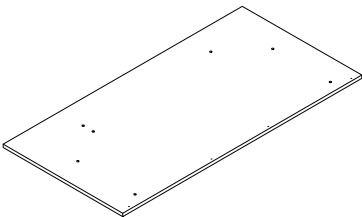






ASSEMBLY INSTRUCTION

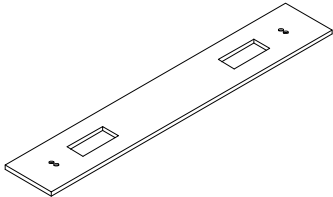

ASSEMBLY INSTRUCTION


① 2PCS 	② 2PCS 	③ 2PCS 	④ 2PCS 
⑤ 2PCS 	⑥ 2PCS 	⑦ 2PCS 	⑧ 1PC 
⑨ 2PCS 	⑩ 2PCS 	⑪ 2PCS 	⑫ 1PC 

ASSEMBLY INSTRUCTION

A 12PCS  M6*12	B 8PCS  M6*30	C 14PCS  M6*40	D 32PCS  M6*50
E 16PCS  M6*60	F 8PCS  M6	G 16PCS  Ø3.5*14	H 8PCS  40*18*1.5
I 6PCS  Ø3.5*25	J 6PCS  M8	K 2PCS  	

Step 1

A 8PCS

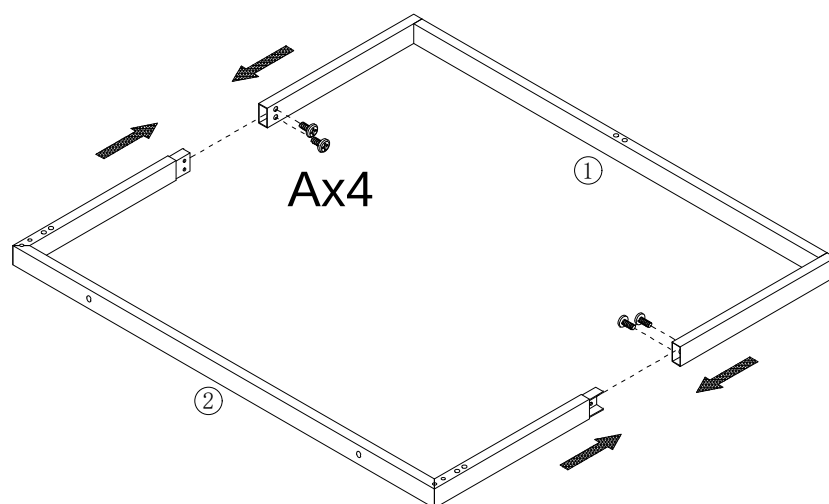
M6*12


x2

Step 2

A 4PCS



M6*12

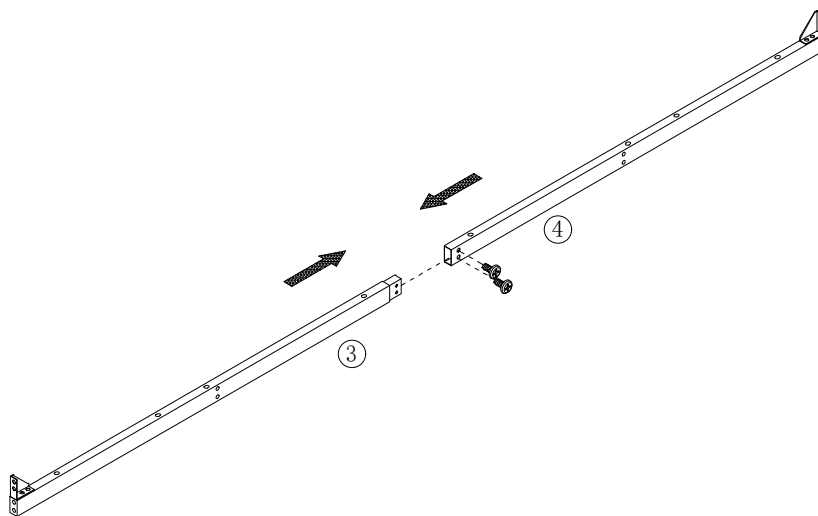


x2

Step 3

C 4PCS




M6*40

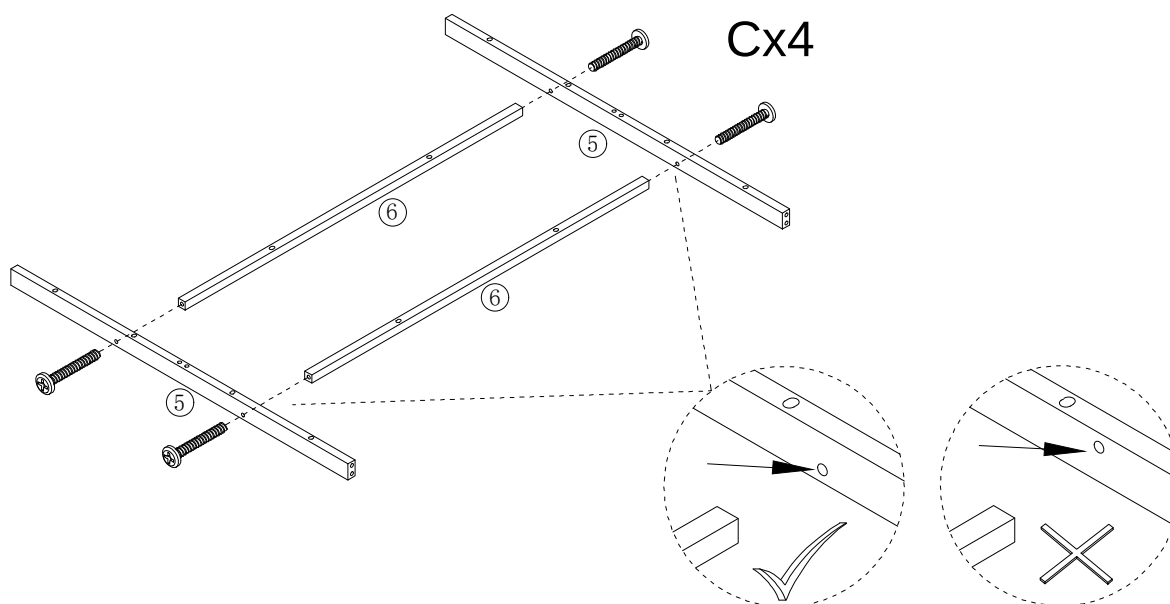

Step 4

C 8PCS
M6*40

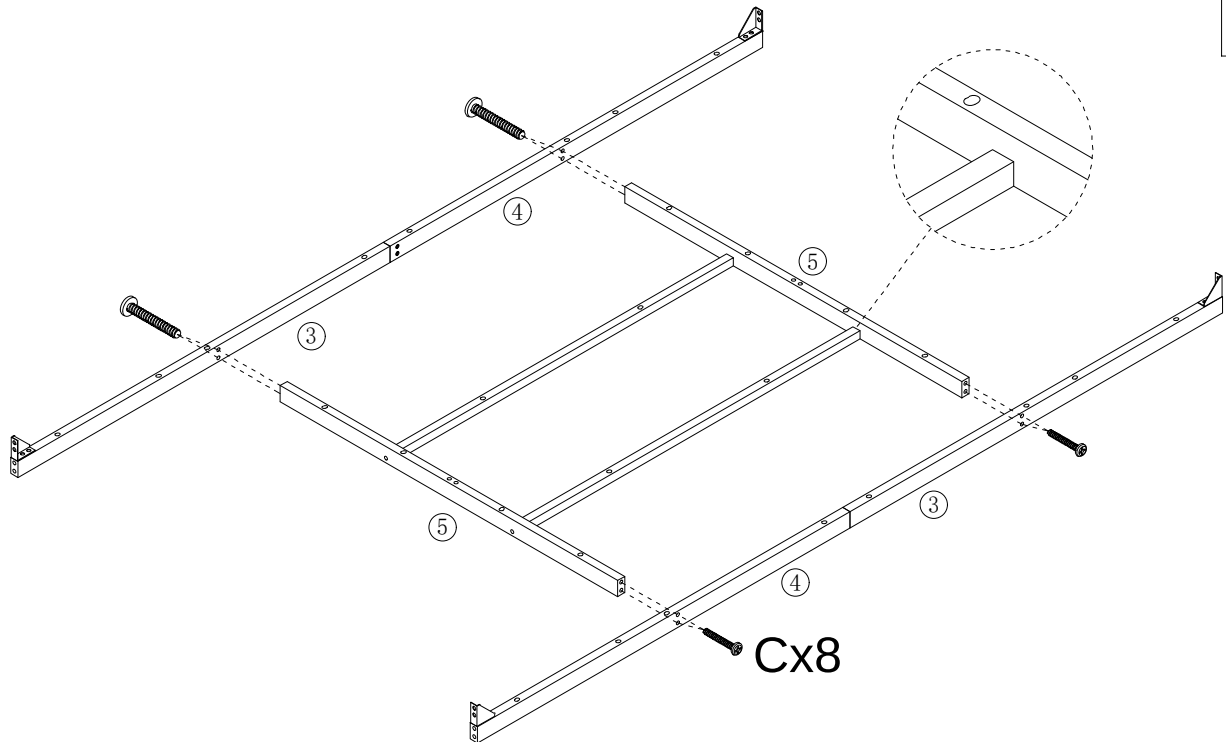


Step 5

D 8PCS
M6*50

E 8PCS
M6*60


F 8PCS
M6

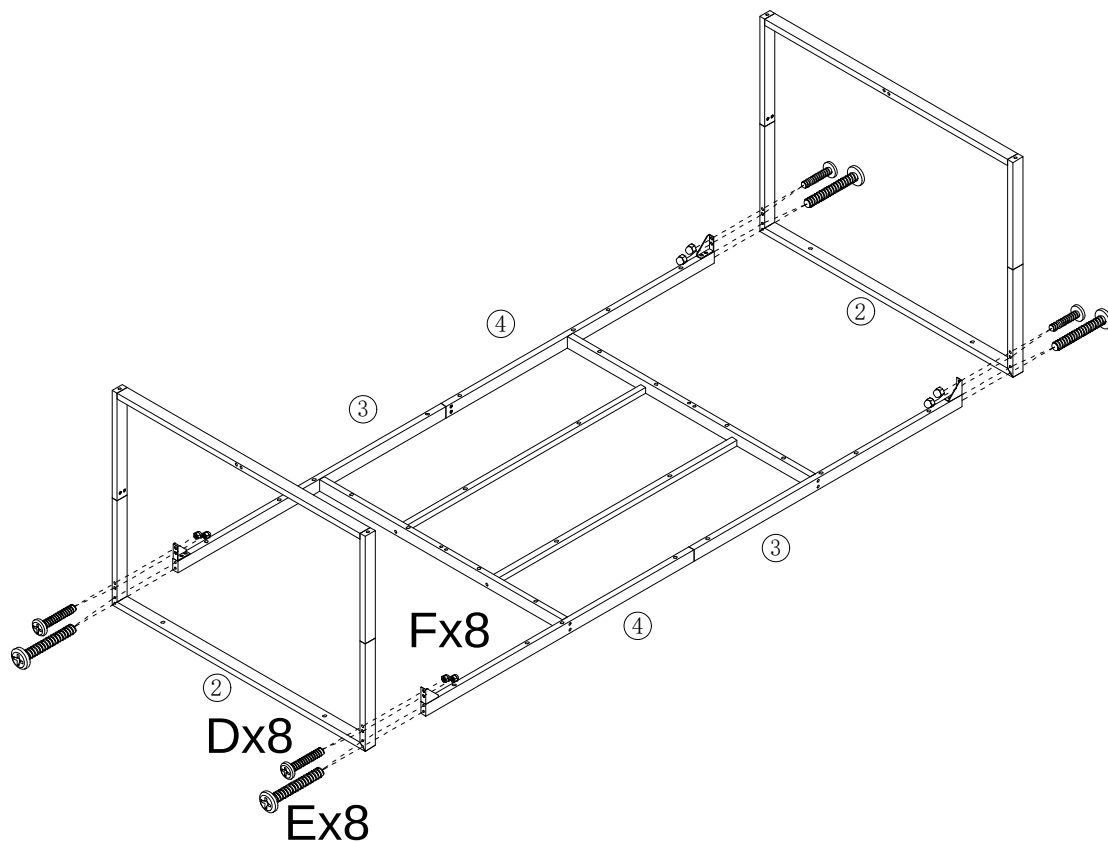

Step 6

E 8PCS
M6*60


Ex8

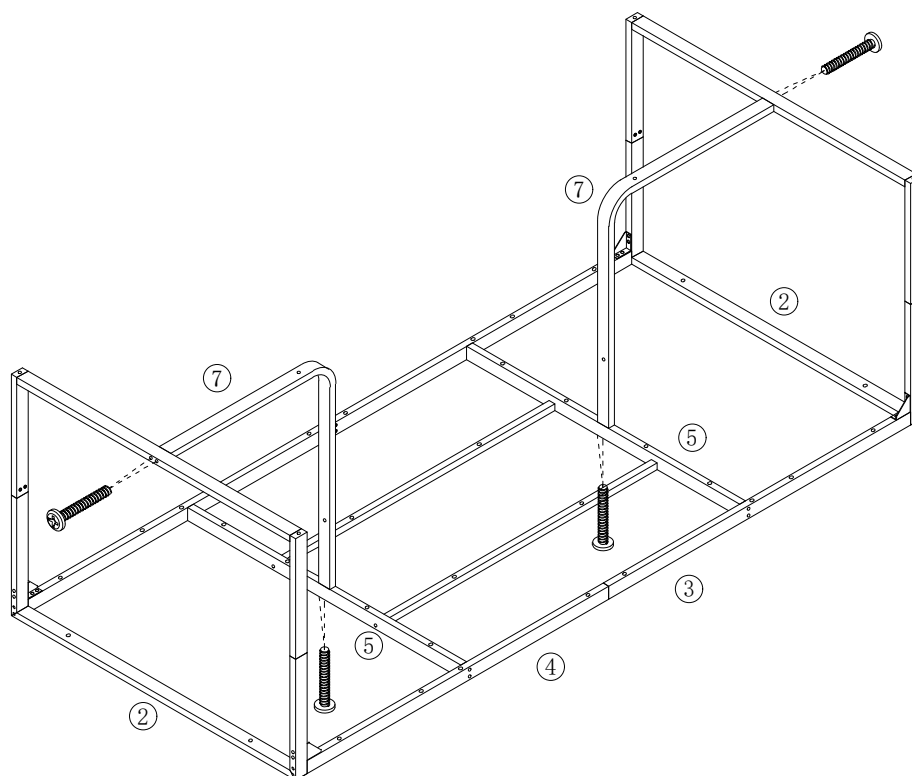

Step 7


C 2PCS
M6*40

Cx2

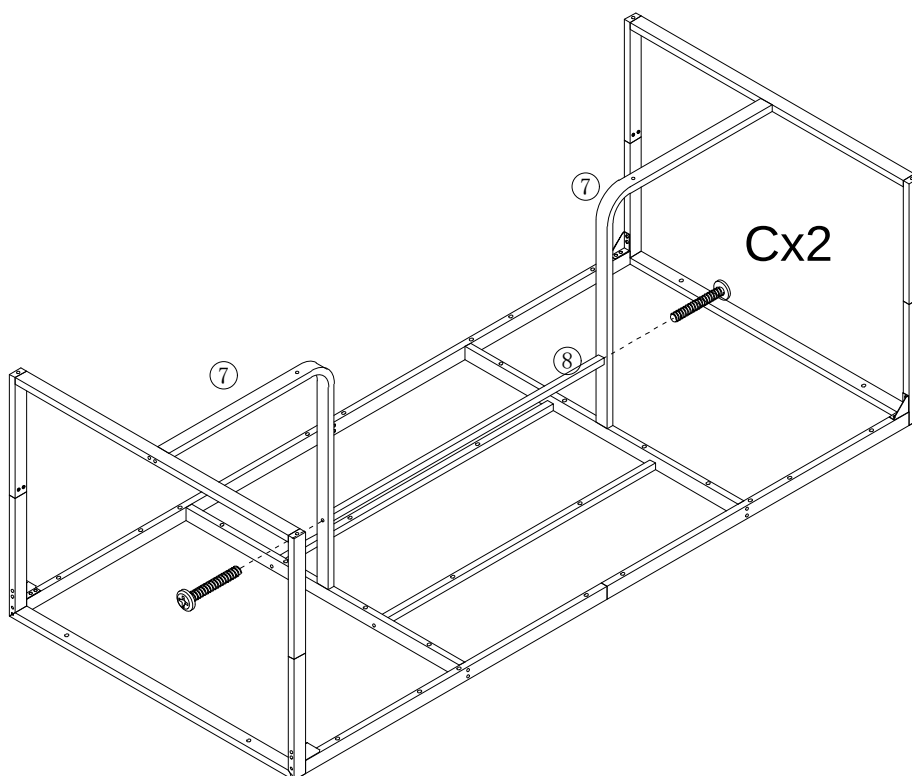

ASSEMBLY INSTRUCTION

Step 8

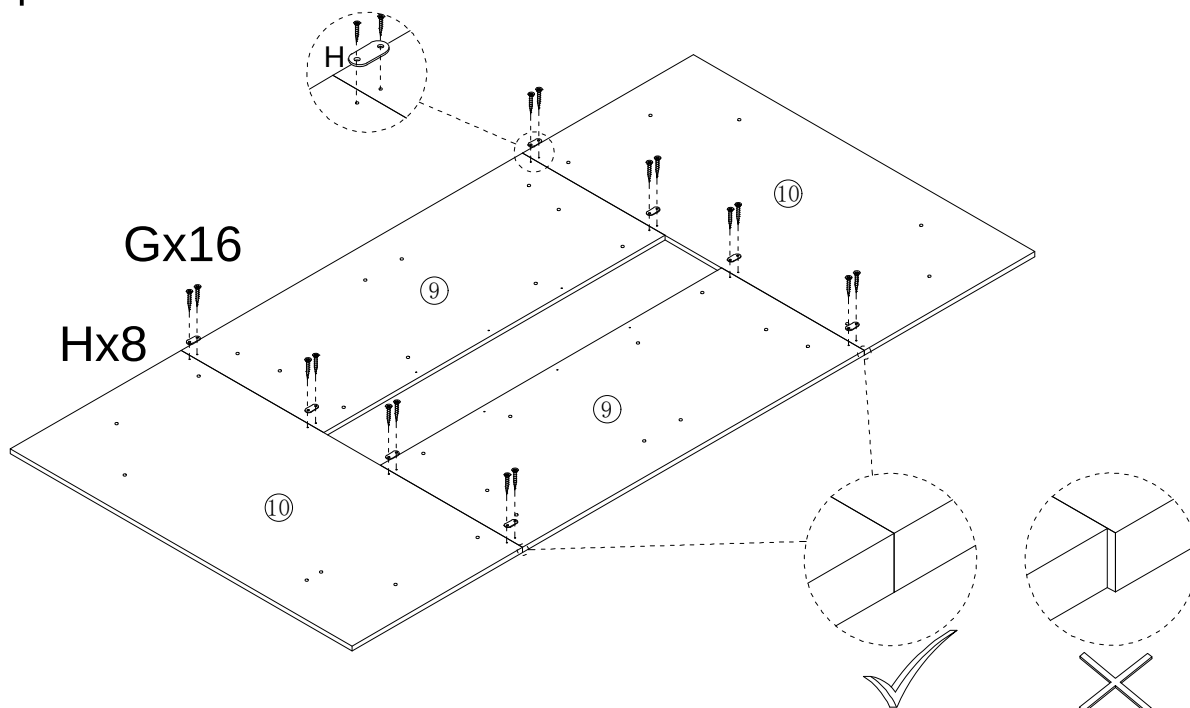

G 16PCS




03.5*14

H 8PCS



40*18*1.5

Step 9

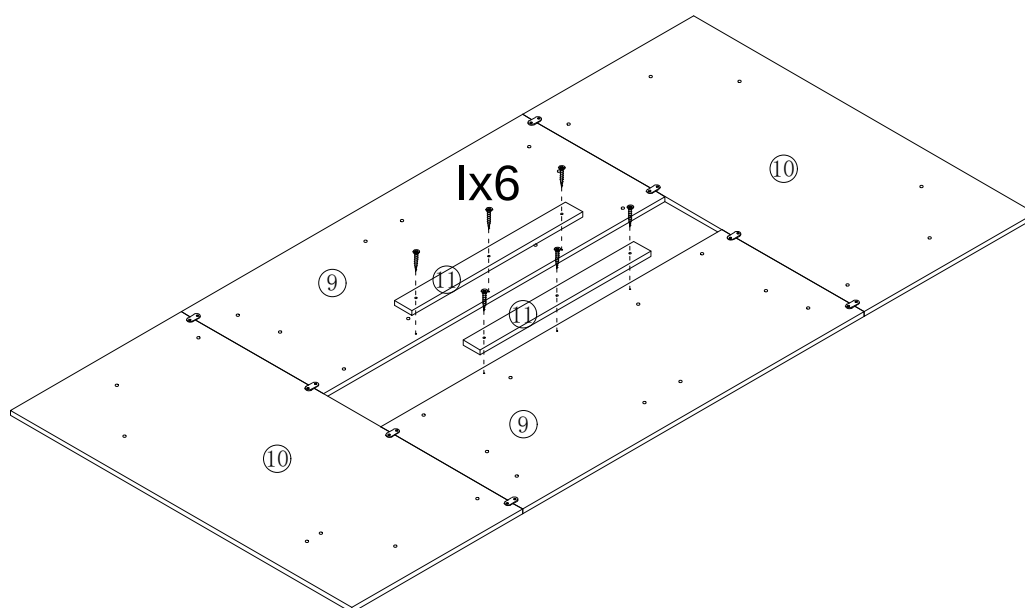

I 6PCS




03.5*25

Step 10

D 24PCS

M6*50

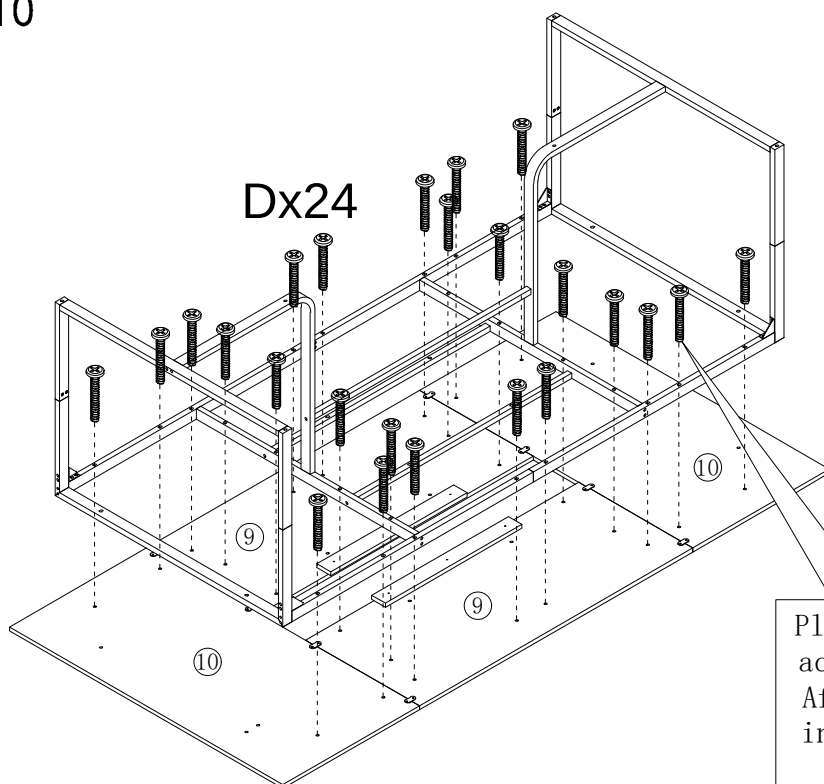

Please note that! Do not lock accessory D first in step 10. After installing accessory B in step 11, lock accessory D thank you.


Step 11

B 8PCS


M6*30

J 6PCS

M8

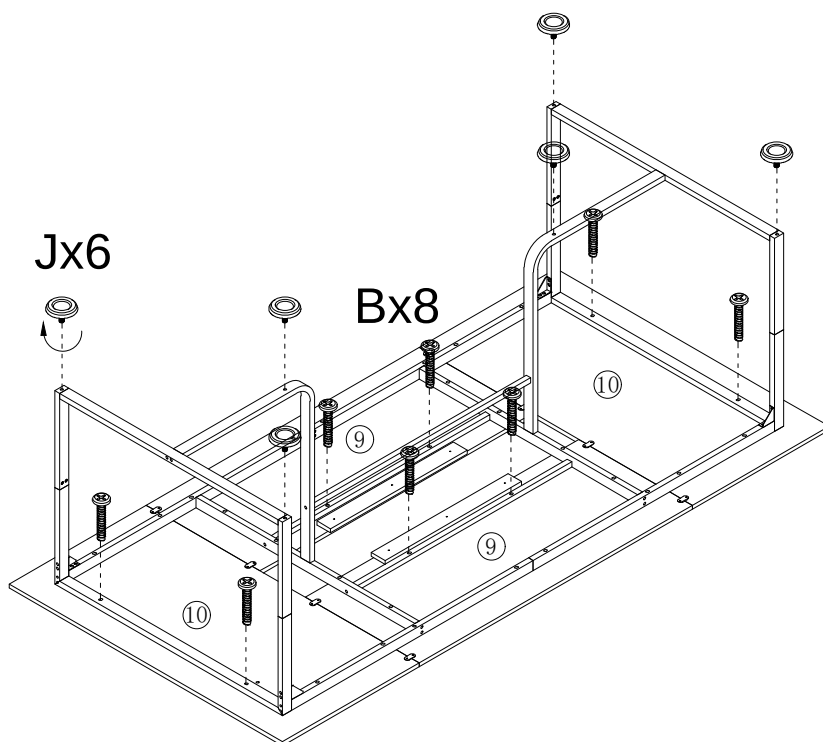


Step 12

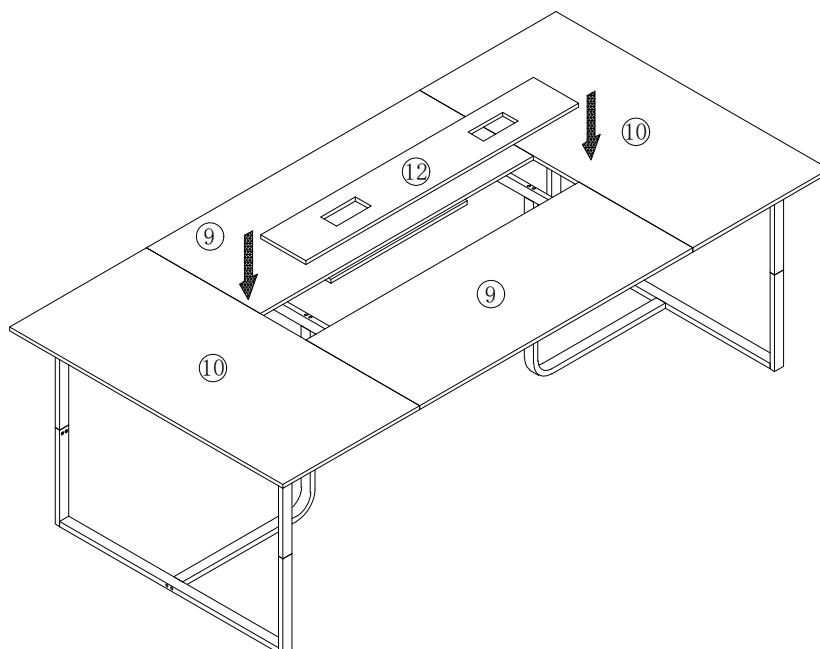

Step 13

K 2PCS

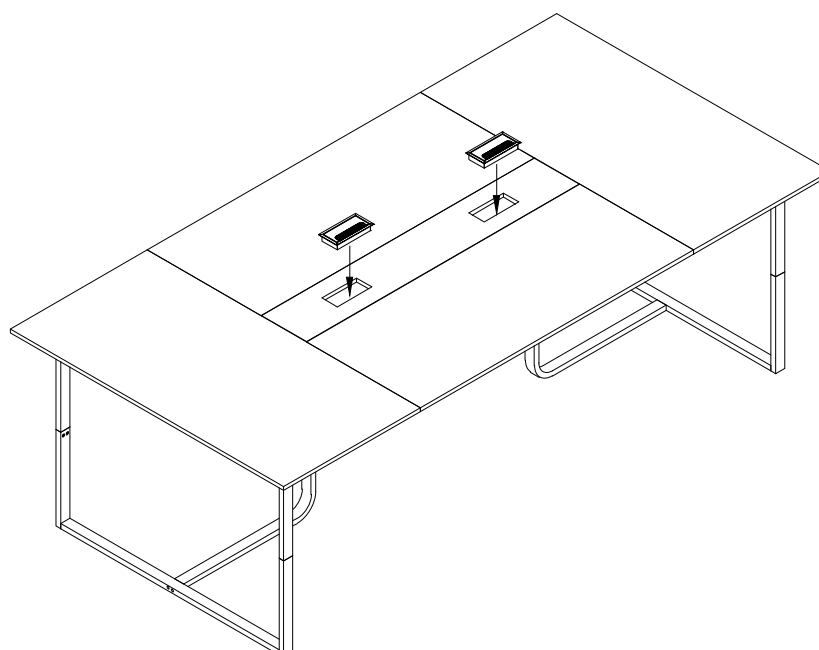

OK