


Coffee Table

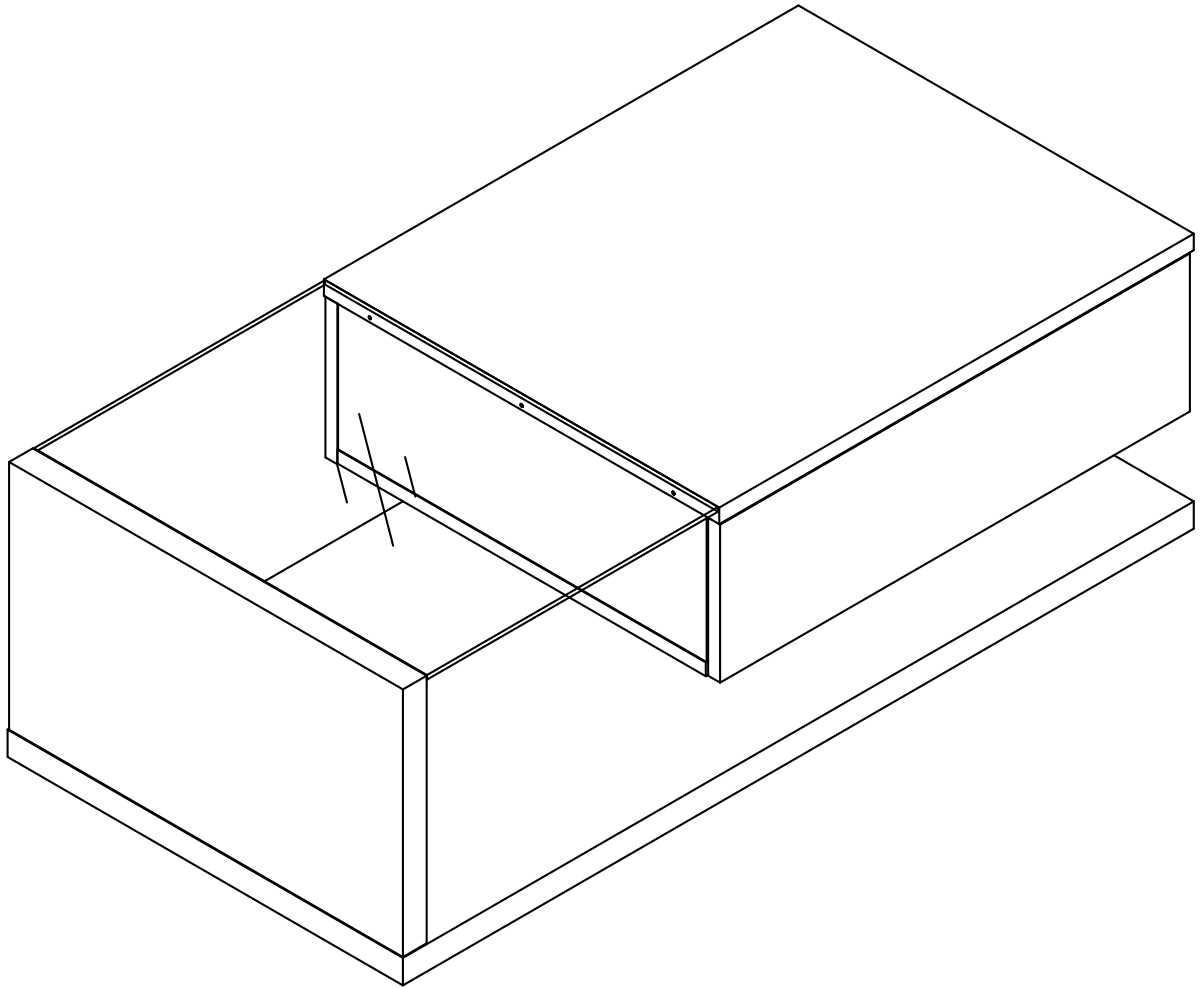

Made in Vietnam

For a Hassle-Free Installation


1. Ensure you have received all cartons and familiarize yourself with the workload. Make sure there are enough helping hands to assist you, and that you have allocated the time required to assemble your new product.
 2. Make sure you have cleared enough space in your home for the assembly. We recommend protecting your floor with a mat or cardboard to avoid scratches during the assembly process.
 3. Read instructions carefully and check no parts are missing.
 4. Lay out all hardware on a soft surface so you can easily identify them.
 5. Carefully identify all components according to the labeled alphabet to ensure that the parts are in the correct place.
 6. Install your new product carefully following the instructions. Don't skip ahead!
- * If any parts are missing or damaged, we will gladly ship you replacement parts free of charge. Please contact us order ID and the Store Name of your purchase, we're always here to help :)

WARNING













Serious or fatal injury may occur from unexpected assembly or use.

1. During the assembly process, keep all parts away from babies or children.
2. Always securely fix this product to the wall. Make sure the wall area to be drilled is free from hidden electrical wires, water and gas pipes.
3. Use of tip-over restraints may only reduce, but not eliminate the risk of tip-over.
4. Unless specially designed to accommodate, do not set heavy objects on top of this product.
5. Place the heaviest items on the lowest shelf.
6. Never allow children to climb or bang on drawers, doors or shelves.

Parts List

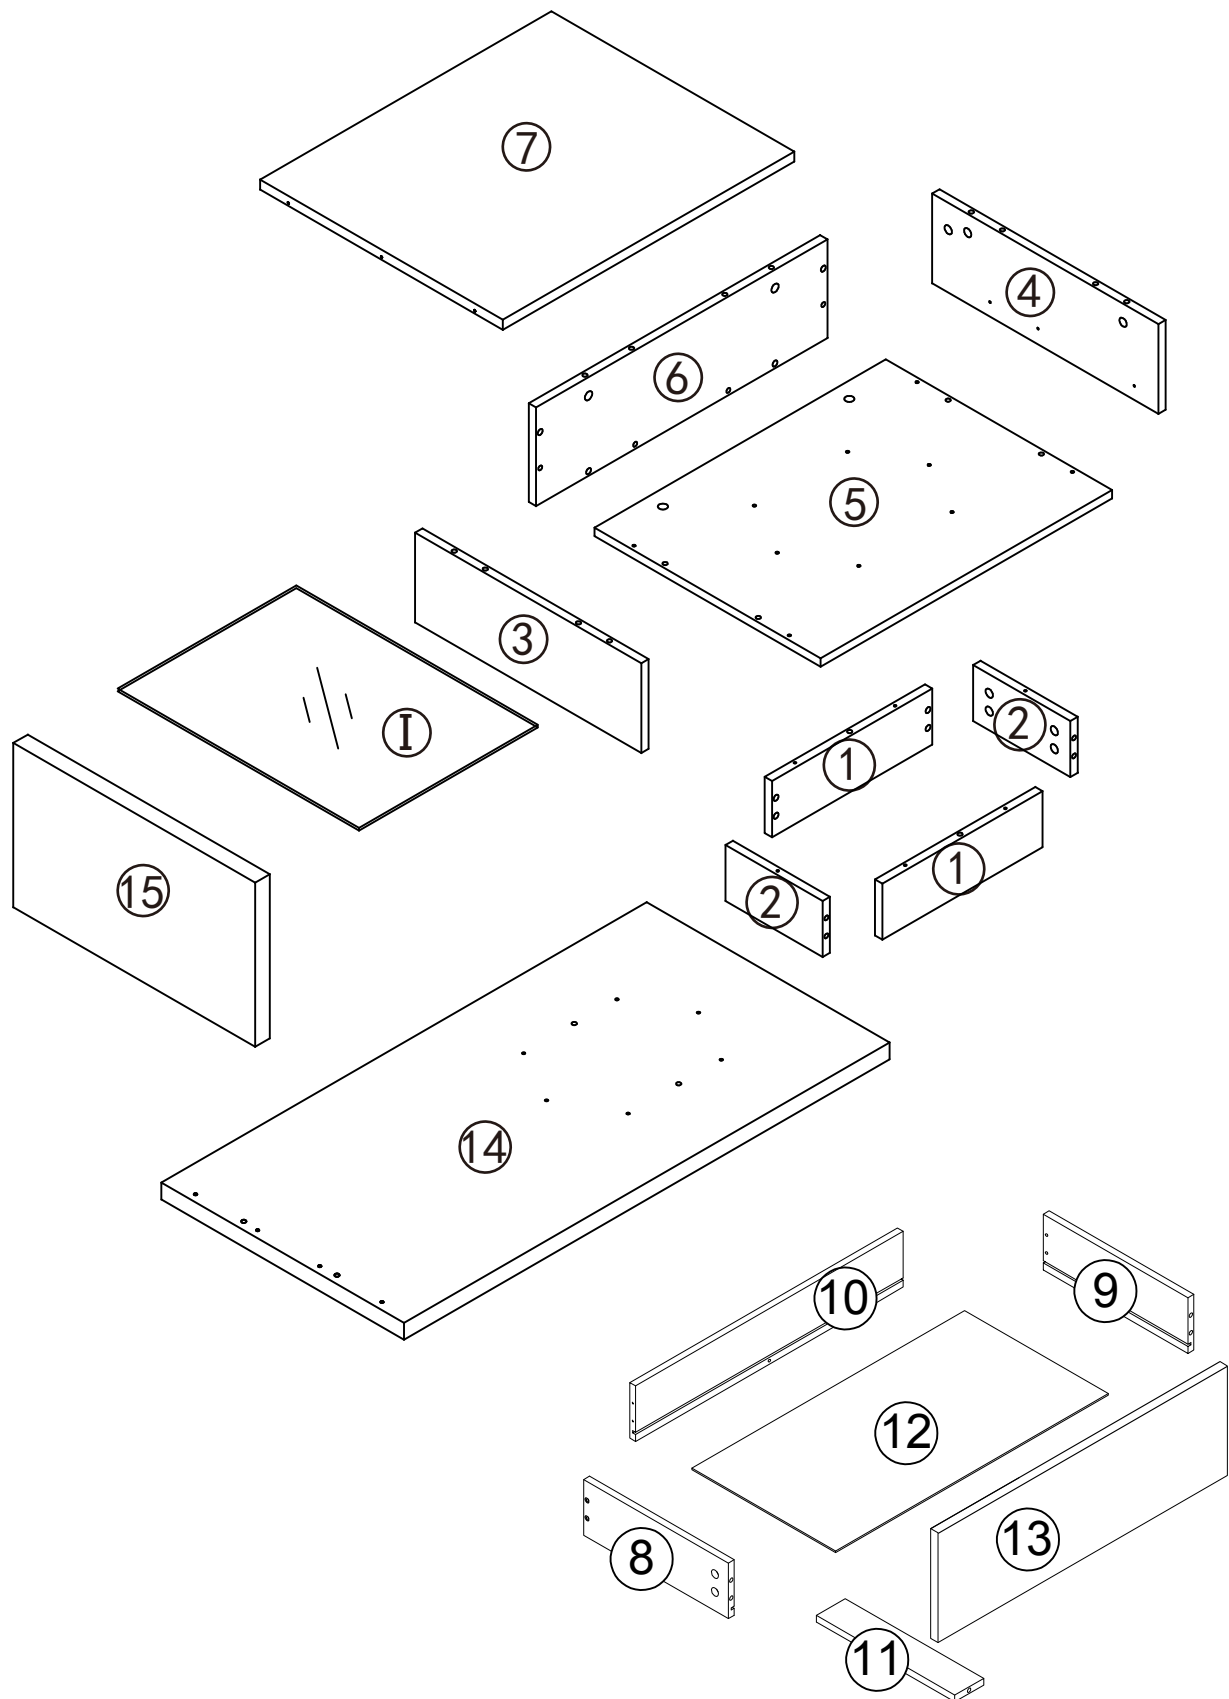


Parts List

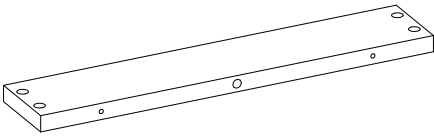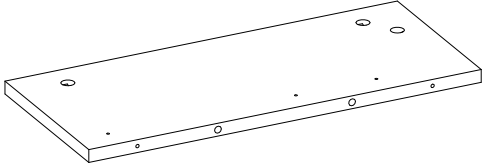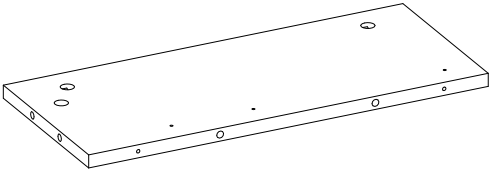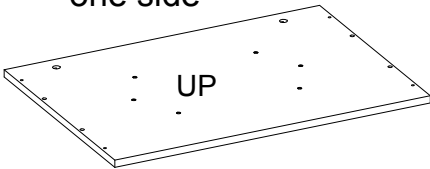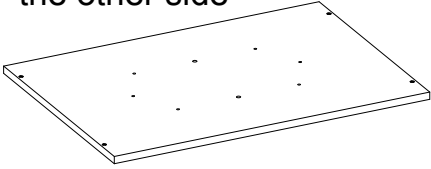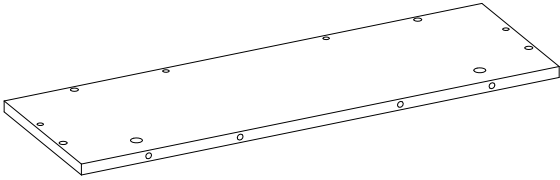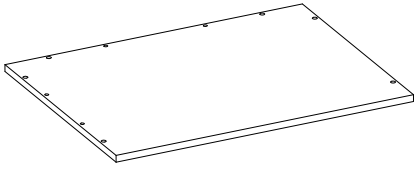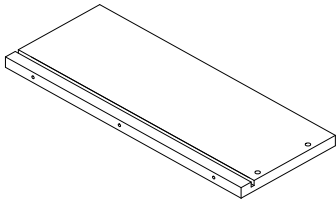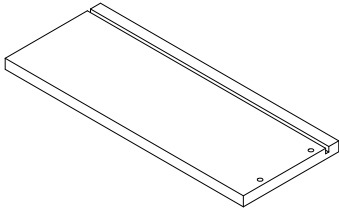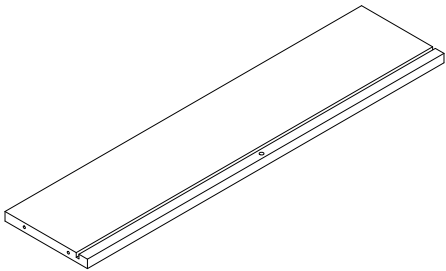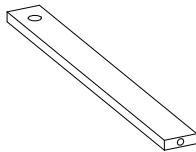1  370*70*15mm 2PCS	2  170*70*15mm 2PCS
3  200*468*15mm 1PC	4  200*468*15mm 1PC
5 one side  667*468*15mm	the other side  1PC
6  668*216*15mm 1PC	7  669*500*15mm 1PC
8  400*160*12mm 1PC	9  400*160*12mm 1PC
10  587*160*12mm 1PC	11  387*40*12mm 1PC

Parts List


12

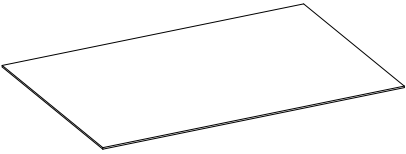

597*397*3mm

1PC

13

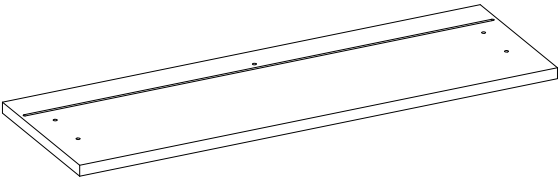


668*216*15mm

1PC


14

one side

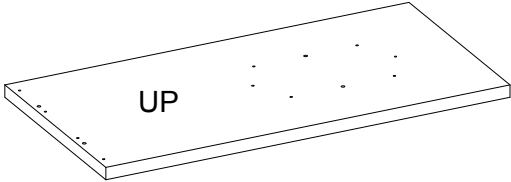


1000*500*30mm

the other side

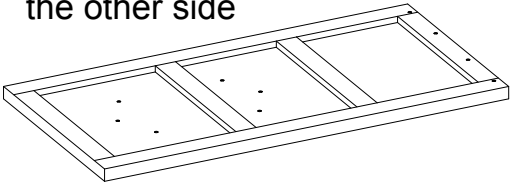

1PC





15













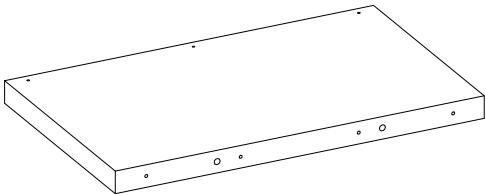


500*300*30mm

1PC


Hardware List

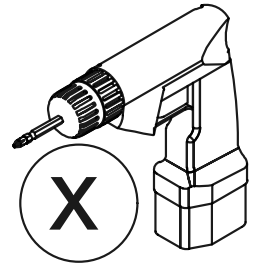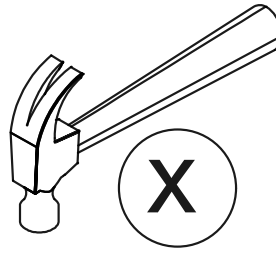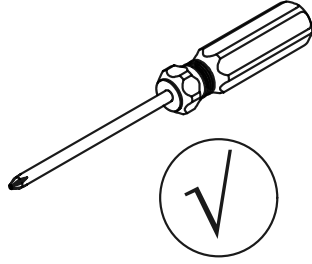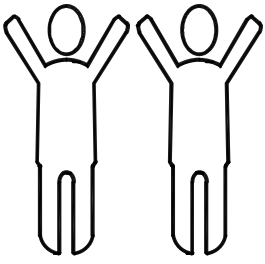

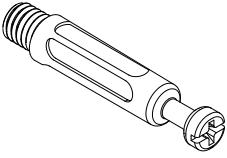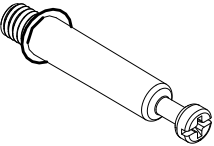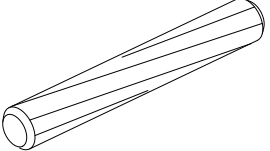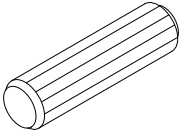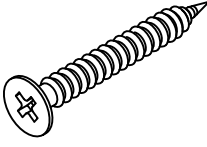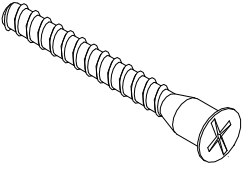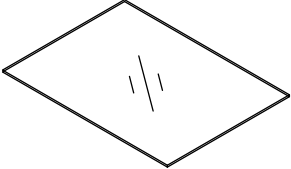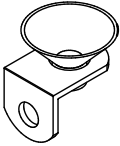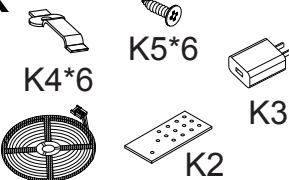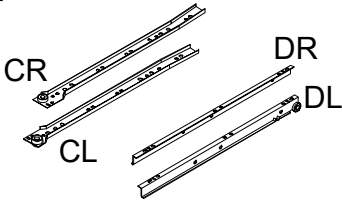A  $\varnothing 7 \times 40 \text{mm}$ 18PCS	B  $\varnothing 7 \times 40 \text{mm}$ 5PCS	C  $\varnothing 15 \times 9.5 \text{mm}$ 23PCS	D  $\varnothing 8 \times 50 \text{mm}$ 2PCS
E  $\varnothing 8 \times 30 \text{mm}$ 16PCS	F  $M3.5 \times 14 \text{mm}$ 20PCS	G  $M3.5 \times 30 \text{mm}$ 5PCS	H  $\varnothing 5 \times 50 \text{mm}$ 20PCS
I  $500 \times 300 \times 5 \text{mm}$ 1PC	J  $15 \times 17 \times 14 \text{mm}$ 6PCS	K  $K4 \times 6$ $K5 \times 6$ $K3$ $K2$ $K1$ 1SET	L  400mm 1SET
M  $\varnothing 13.5 \text{mm}$ 10PCS	N  $\varnothing 21 \text{mm}$ 23PCS	Spare plastic hardware  X4 $\varnothing 10 \times 10 \text{mm}$	




Assembly Steps

CAM BOLT INSTALLATION AS BELOW:

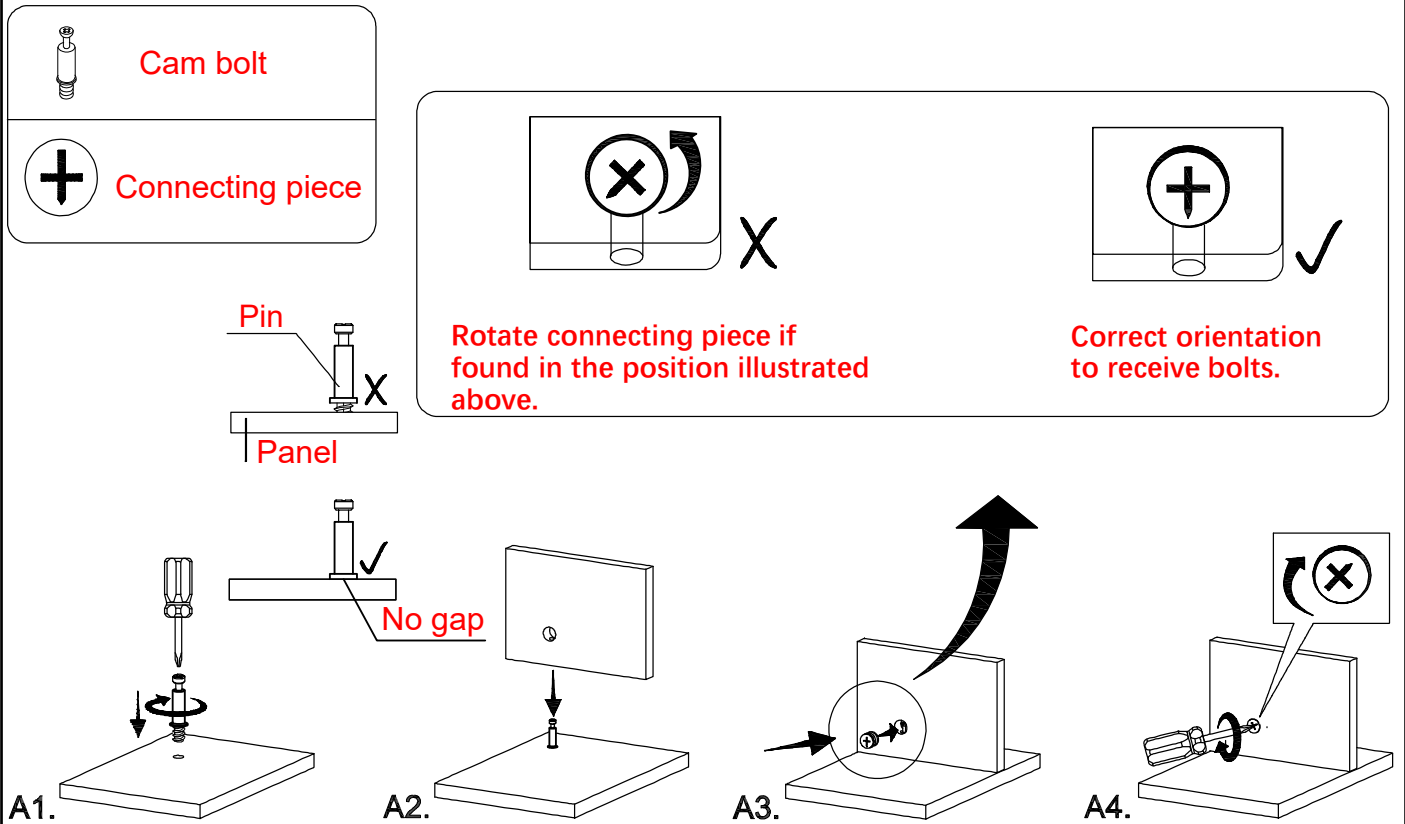

STEP 1



X2

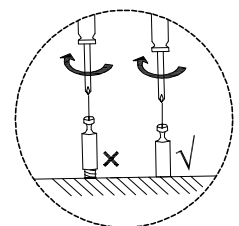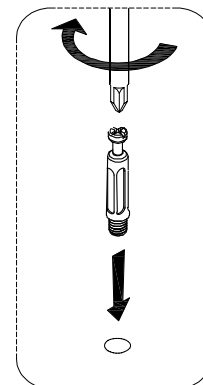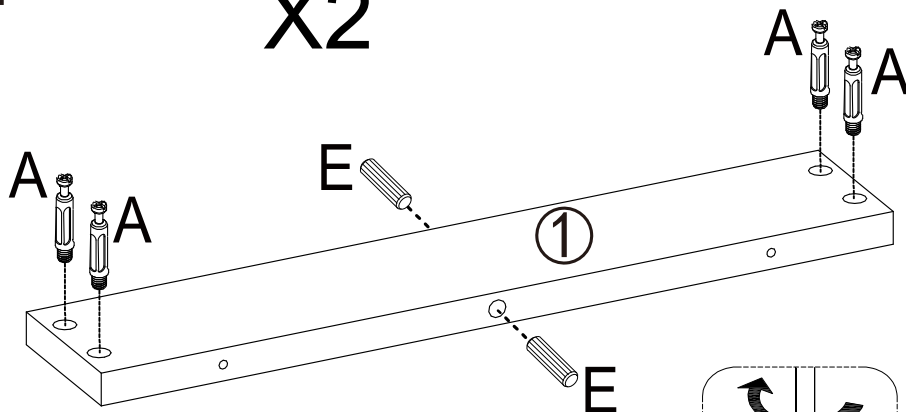

	E*4PCS
	A*8PCS



Assembly Steps

STEP 2

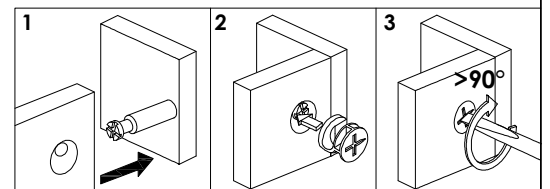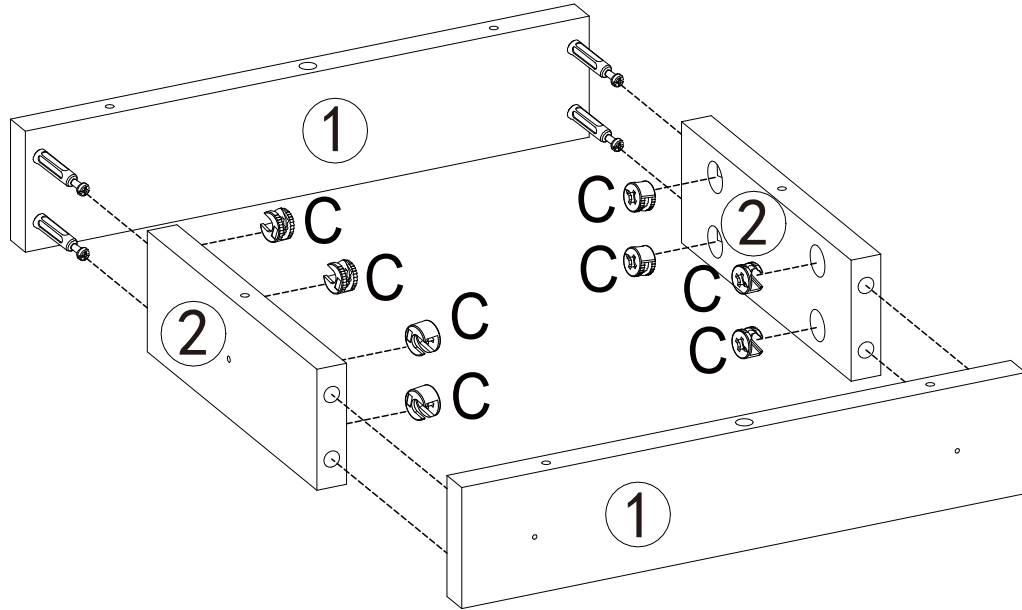


 C*8PCS


STEP 3

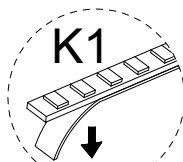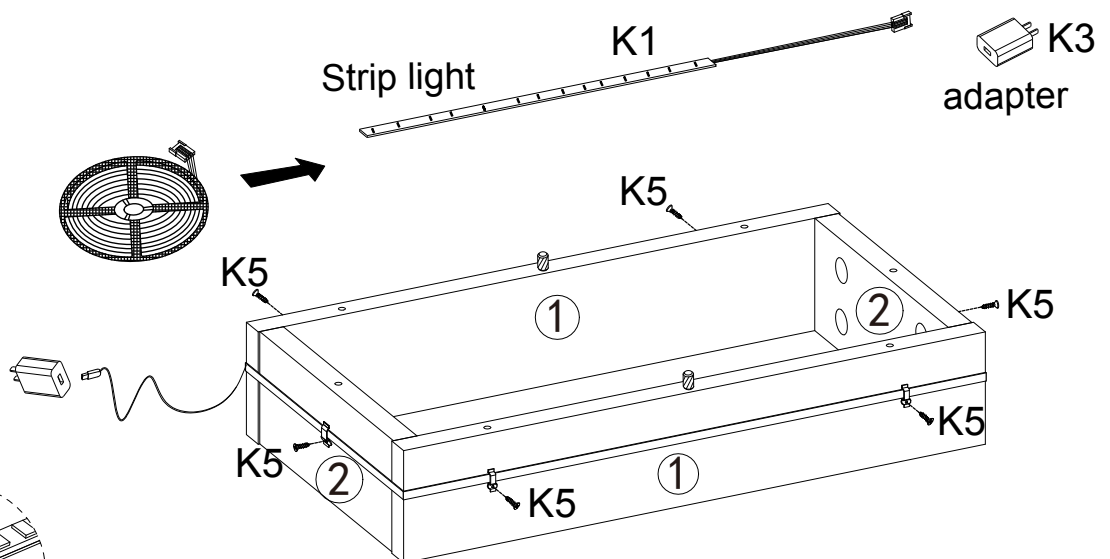


1. Remove the tape from the lamp belt

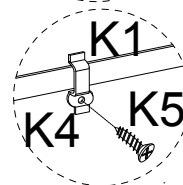

3. Attach the retaining buckle to board 3/4

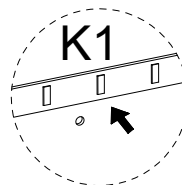

2. Glue the front light strip to board 3/4


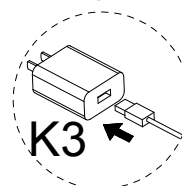


4. Finally, connect the power cord to the adapter

 K4*6  K5*6  K3  K1  K2 **K*1SET**


Assembly Steps

STEP 4

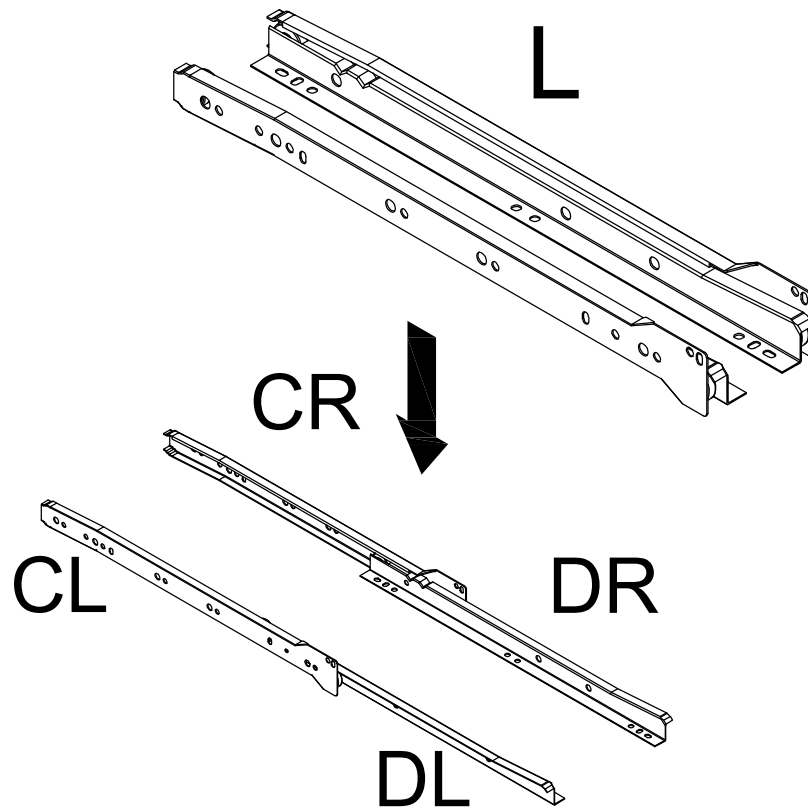


L*1SET

STEP 5

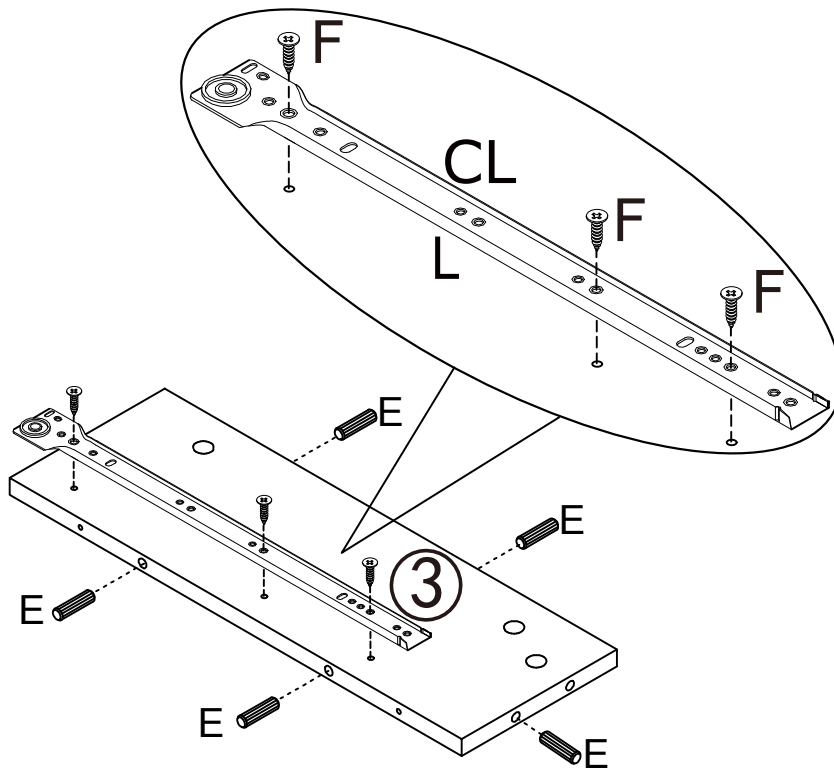

E*5PCS



CL*1PC





F*3PCS

Lock the slides onto the plate according to the holes shown in the illustration.

Assembly Steps


STEP 6

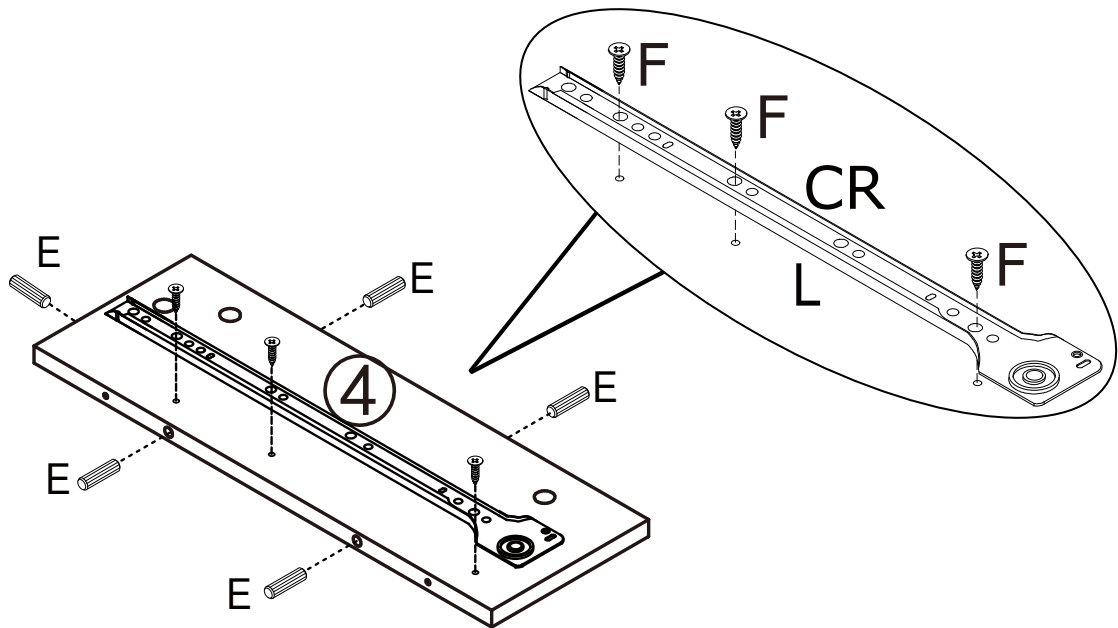

	E*5PCS
	CR*1PC
	F*3PCS

Lock the slides onto the plate according to the holes shown in the illustration.


STEP 7

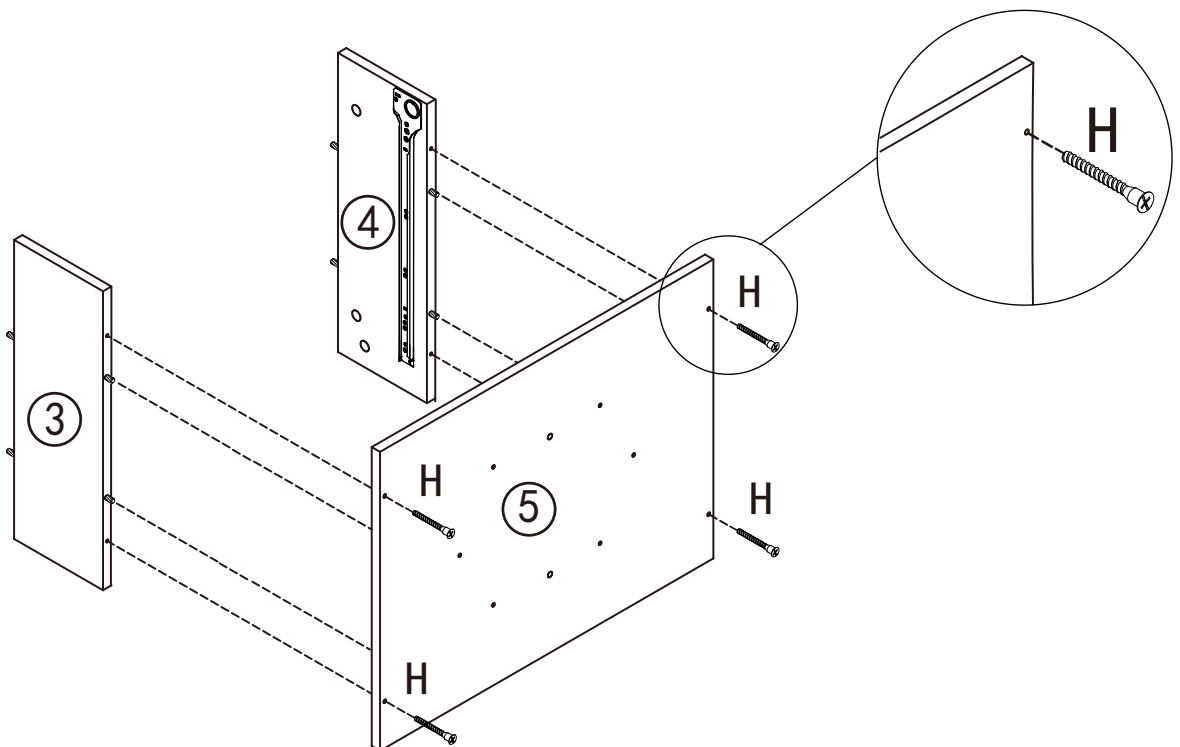



	H*4PCS
--	--------

Assembly Steps

STEP 8

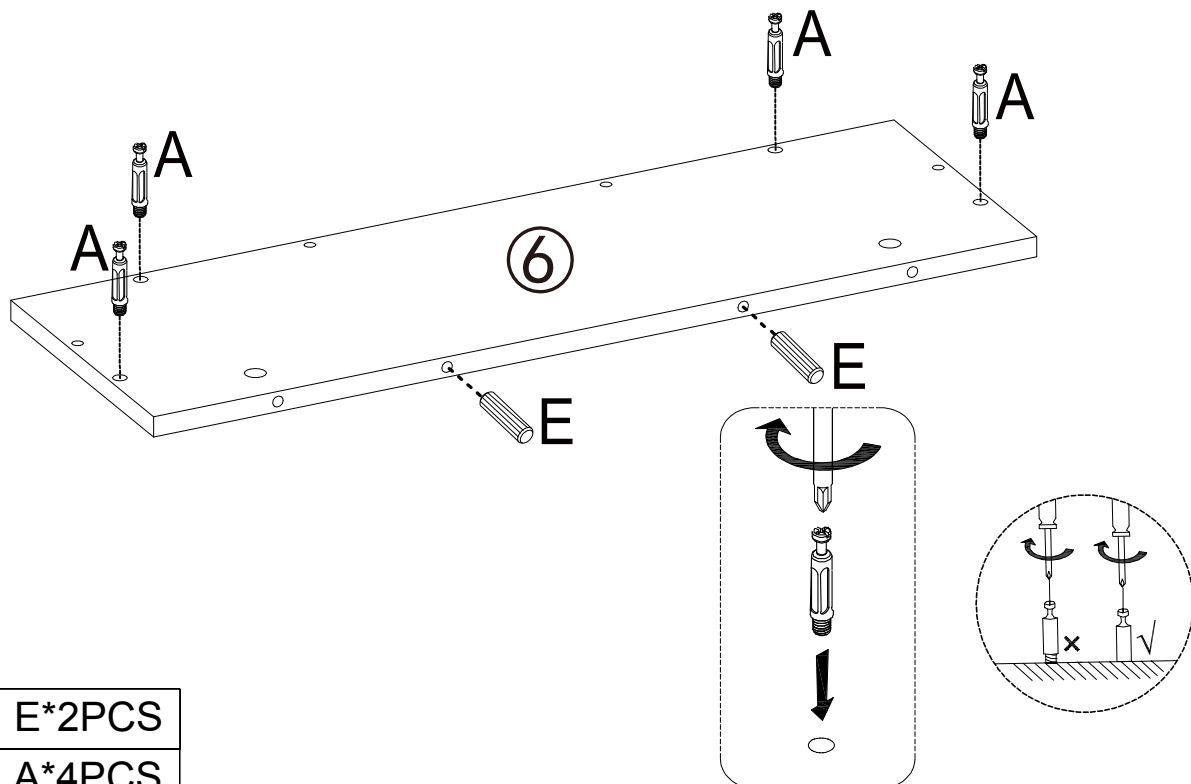



STEP 9

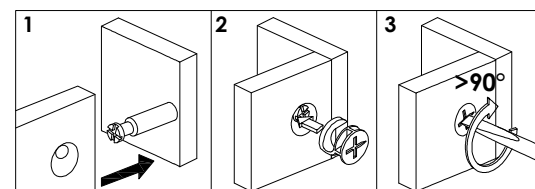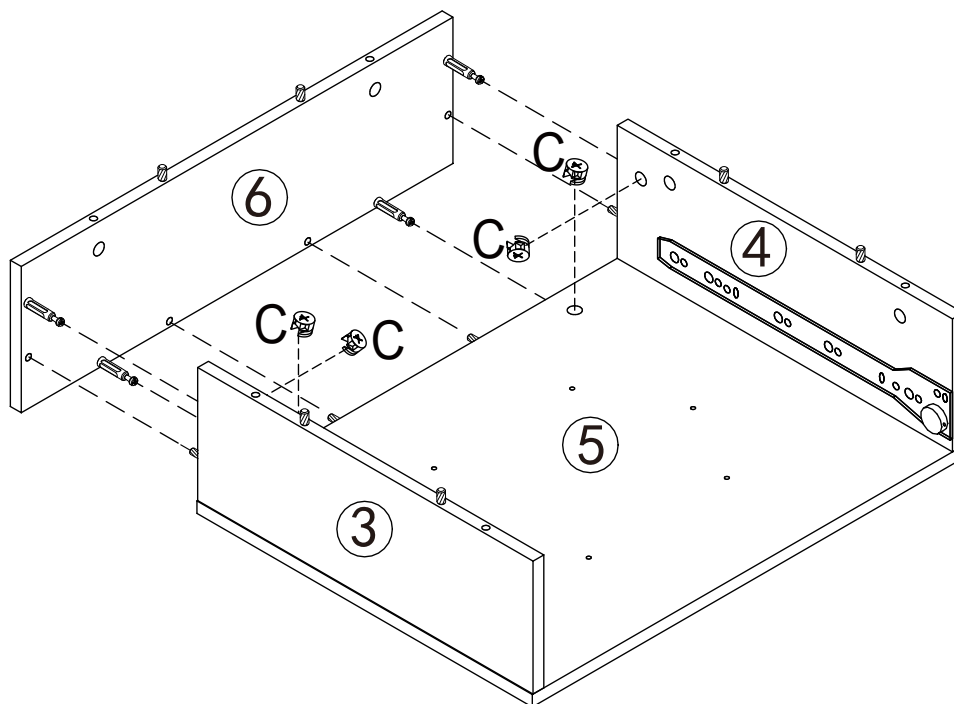

 C*4PCS





Assembly Steps

STEP 10

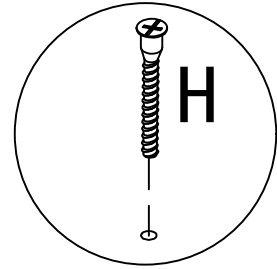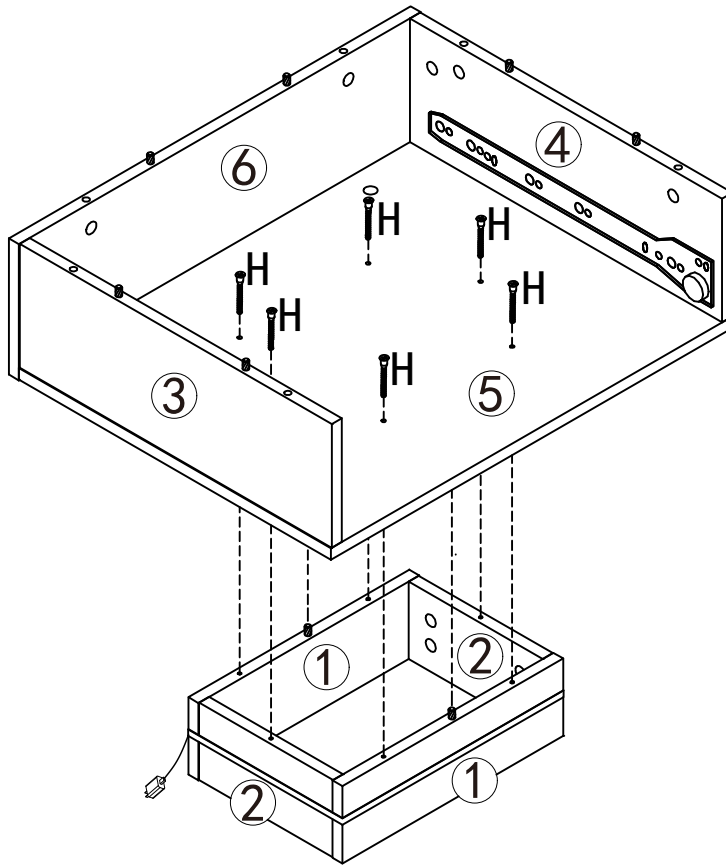

H*6PCS


STEP 11

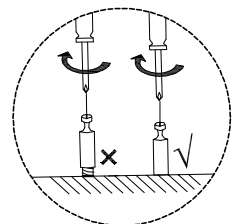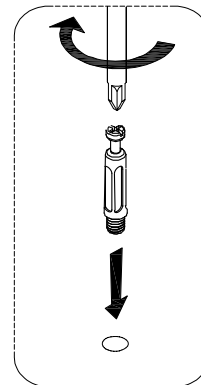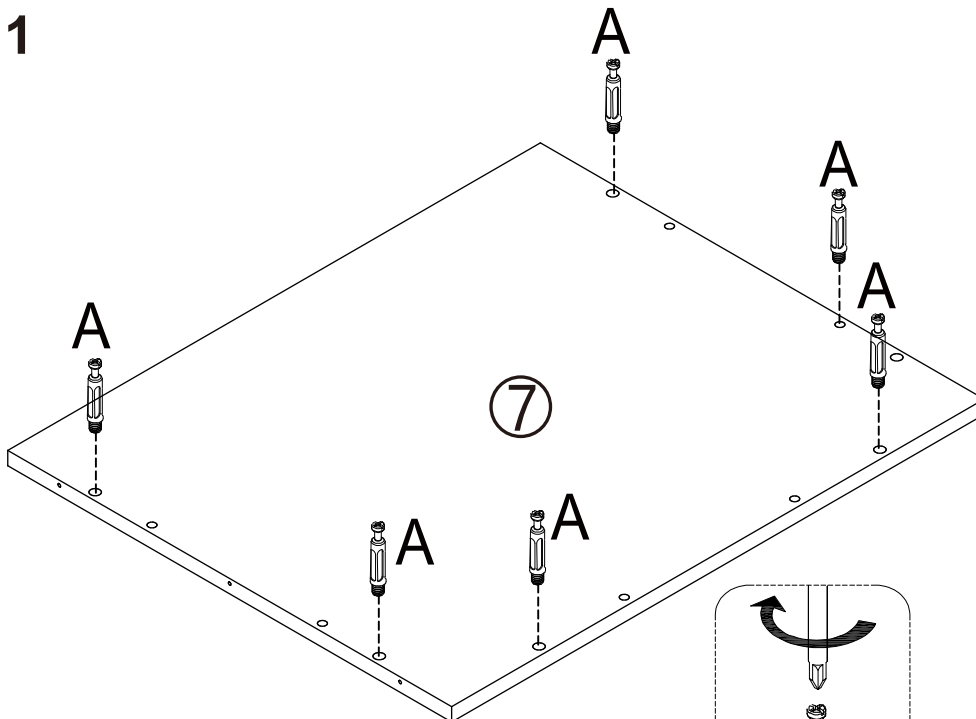

A*6PCS


Assembly Steps

STEP 12

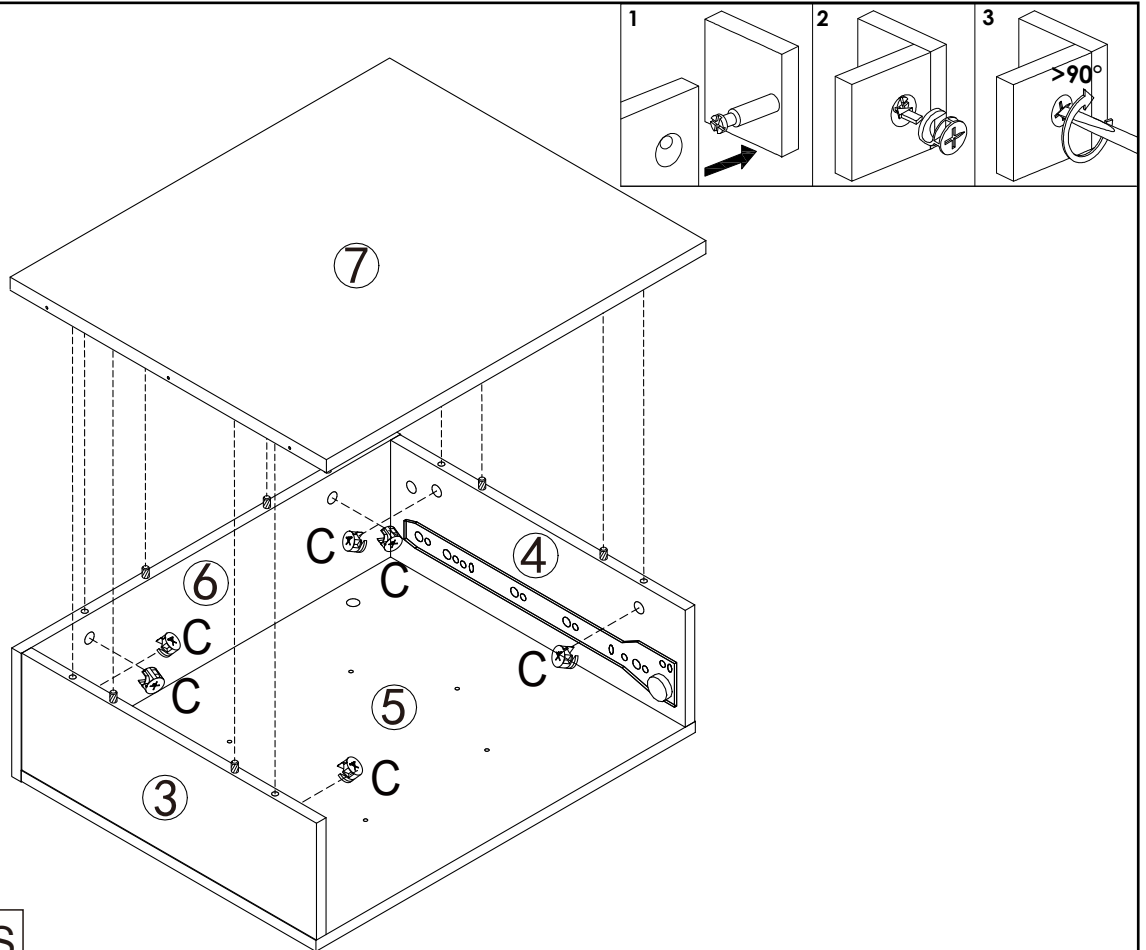

C*6PCS

STEP 13

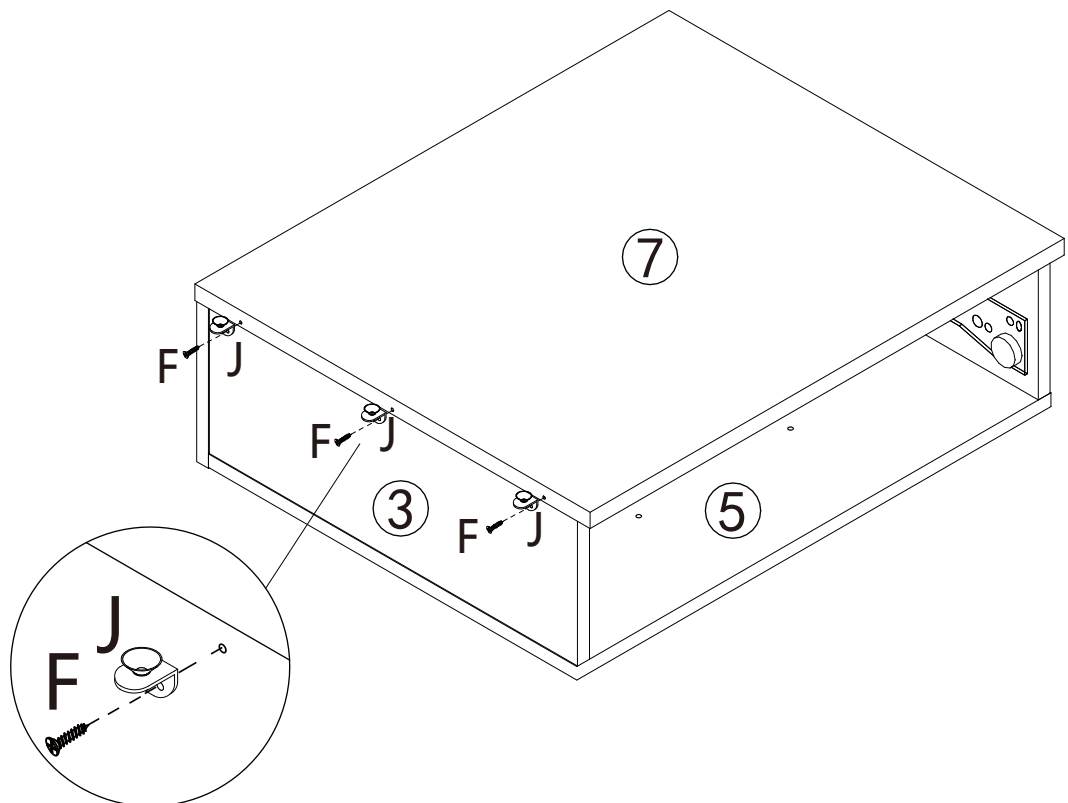


F*3PCS



J*3PCS


Assembly Steps

STEP 14

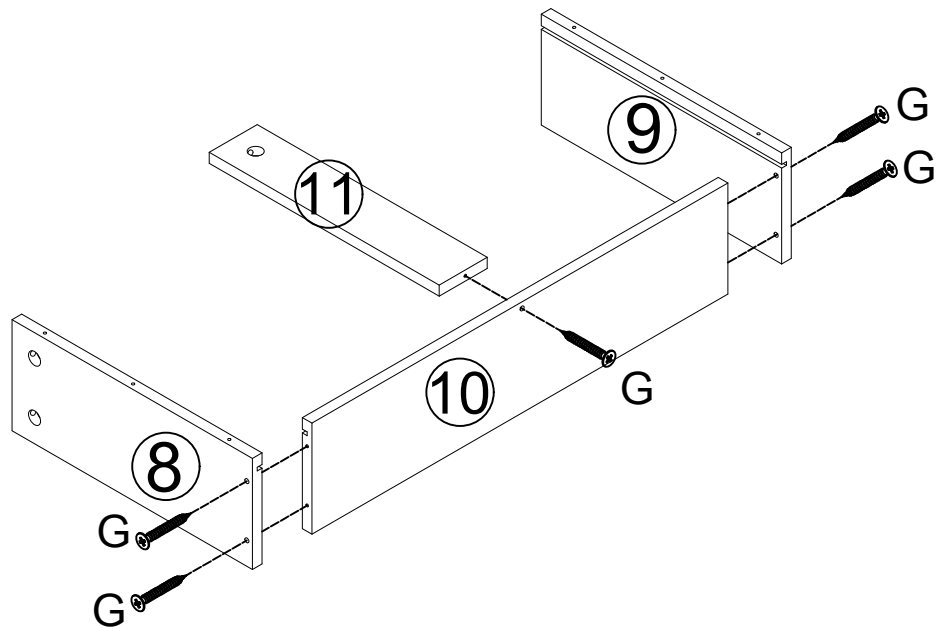

G*5PCS


STEP 15

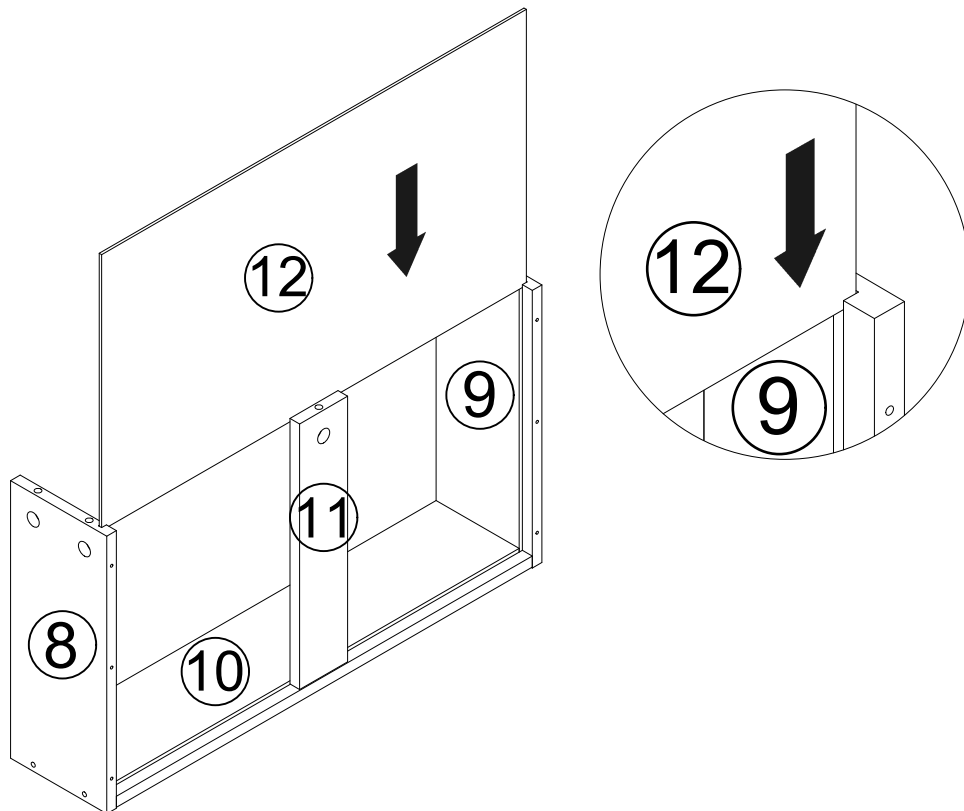

**Thin back board needs to be in side the slot,
other wise blocks the opposite plate montage.**


Assembly Steps

STEP 16

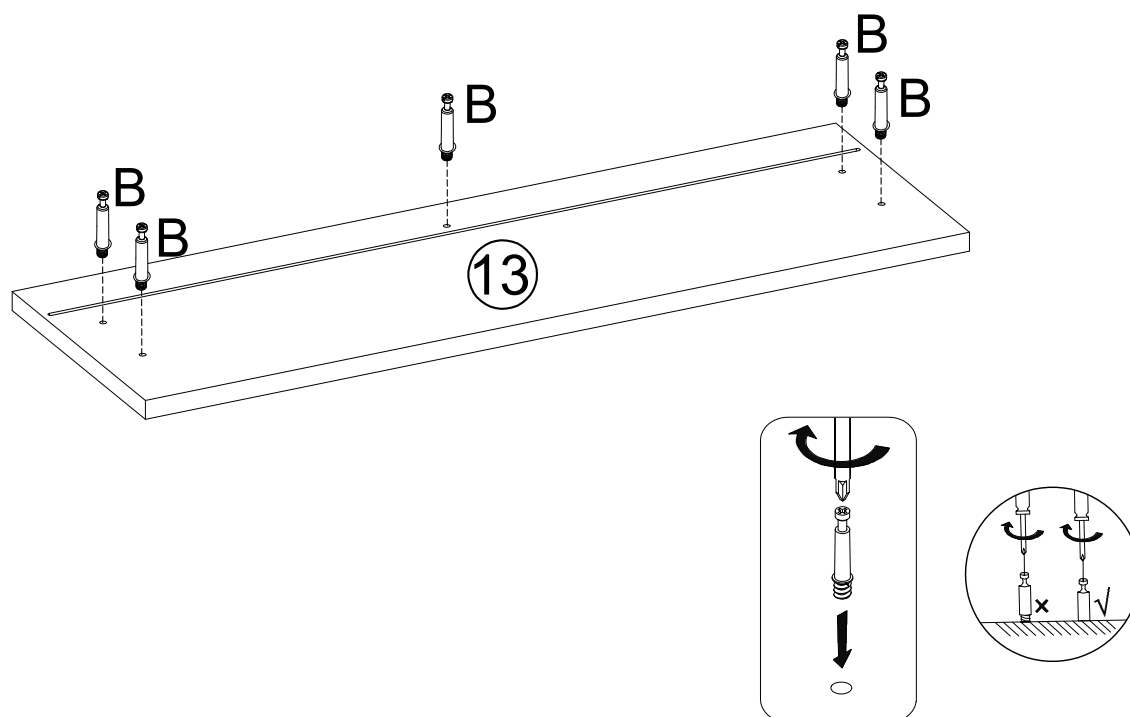

B*5PCS


STEP 17

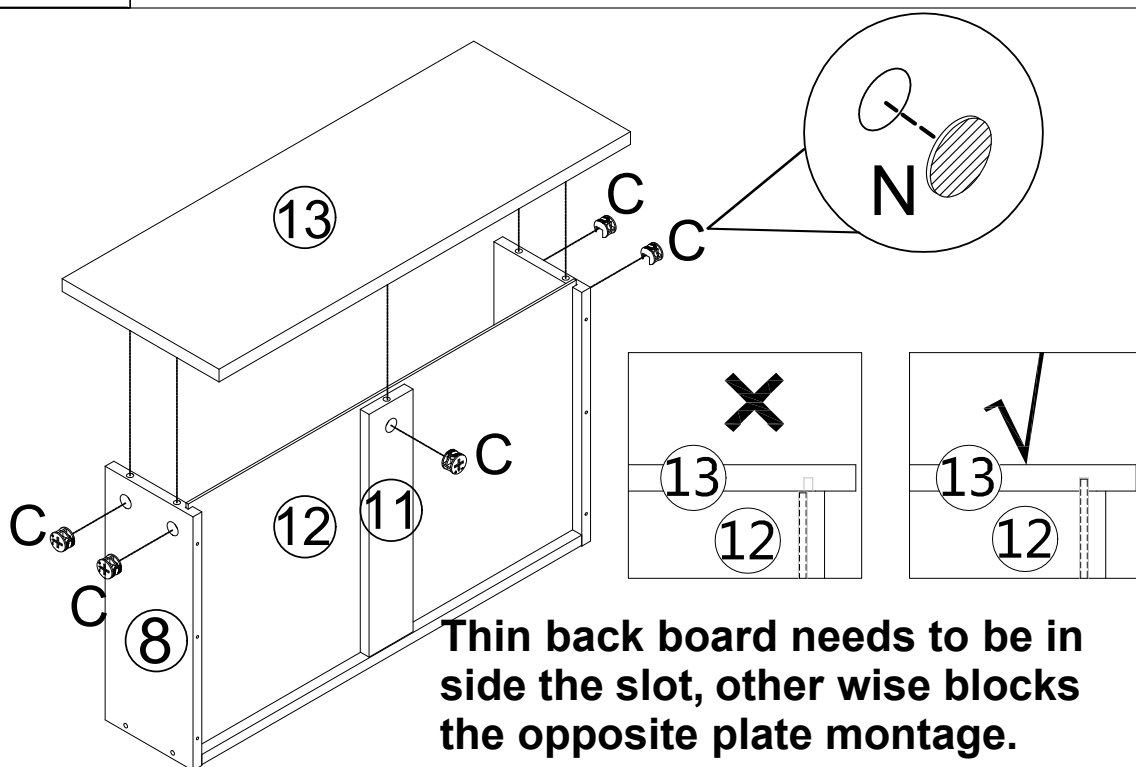

N*5PCS




C*5PCS

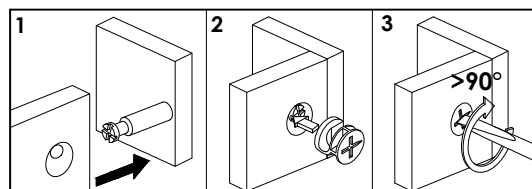

Assembly Steps


STEP 18

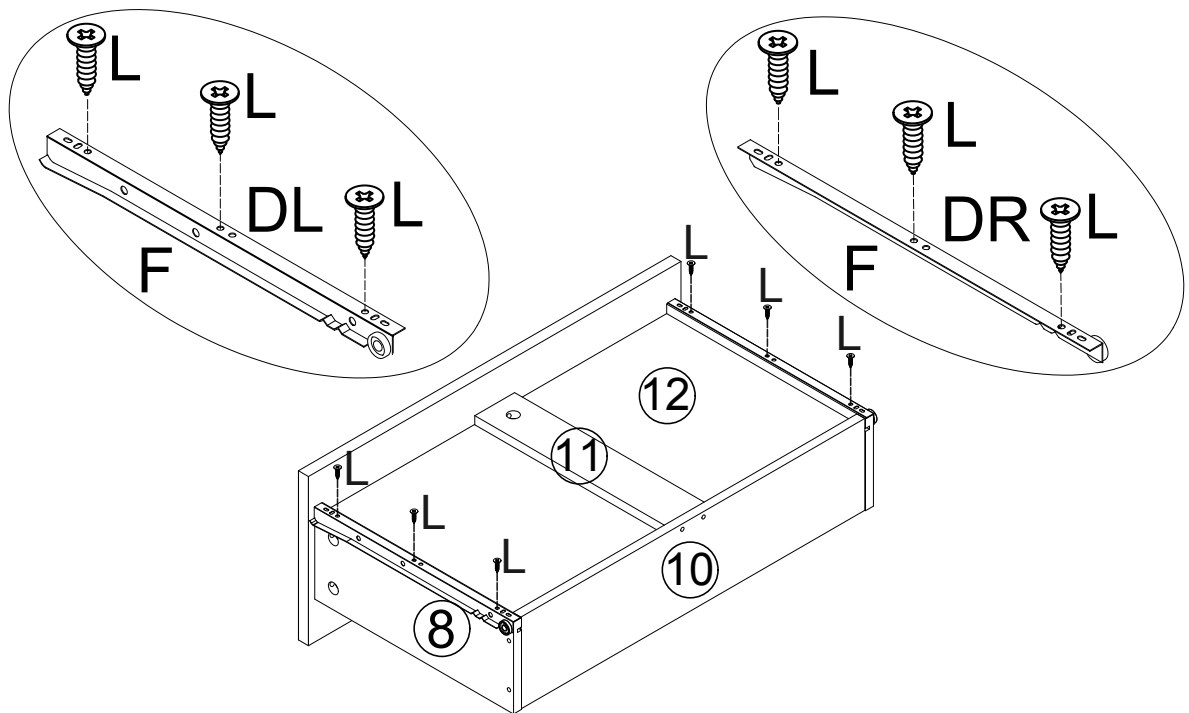

	L*6PCS
	DR*1PC
	DL*1PC

Lock the slides onto the plate according to the holes shown in the illustration.


STEP 19

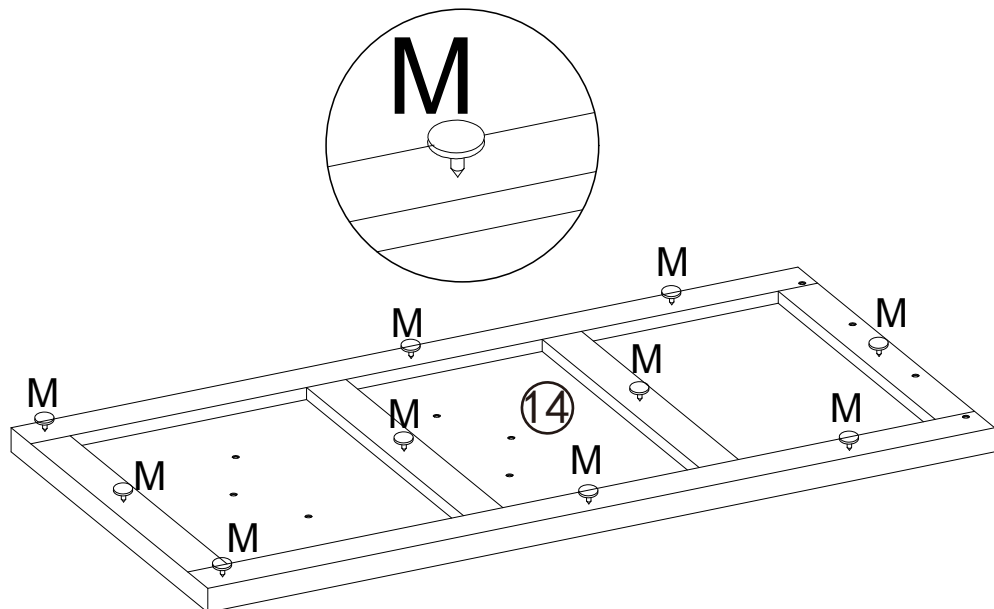

	M*10PCS
---	---------


Assembly Steps

STEP 20

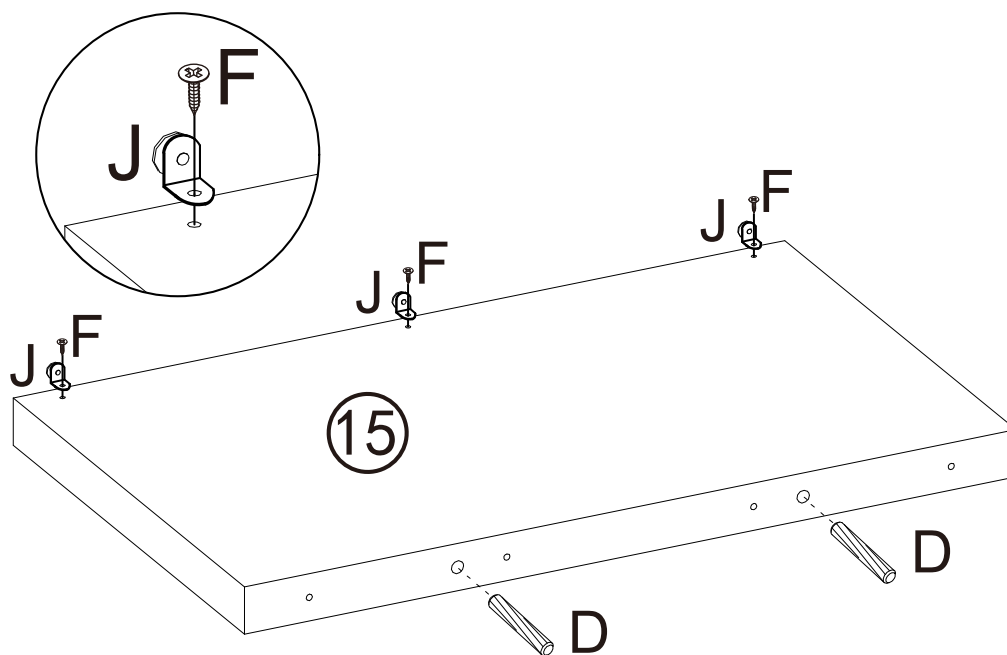

	F*3PCS
	J*3PCS
	D*2PCS


STEP 21

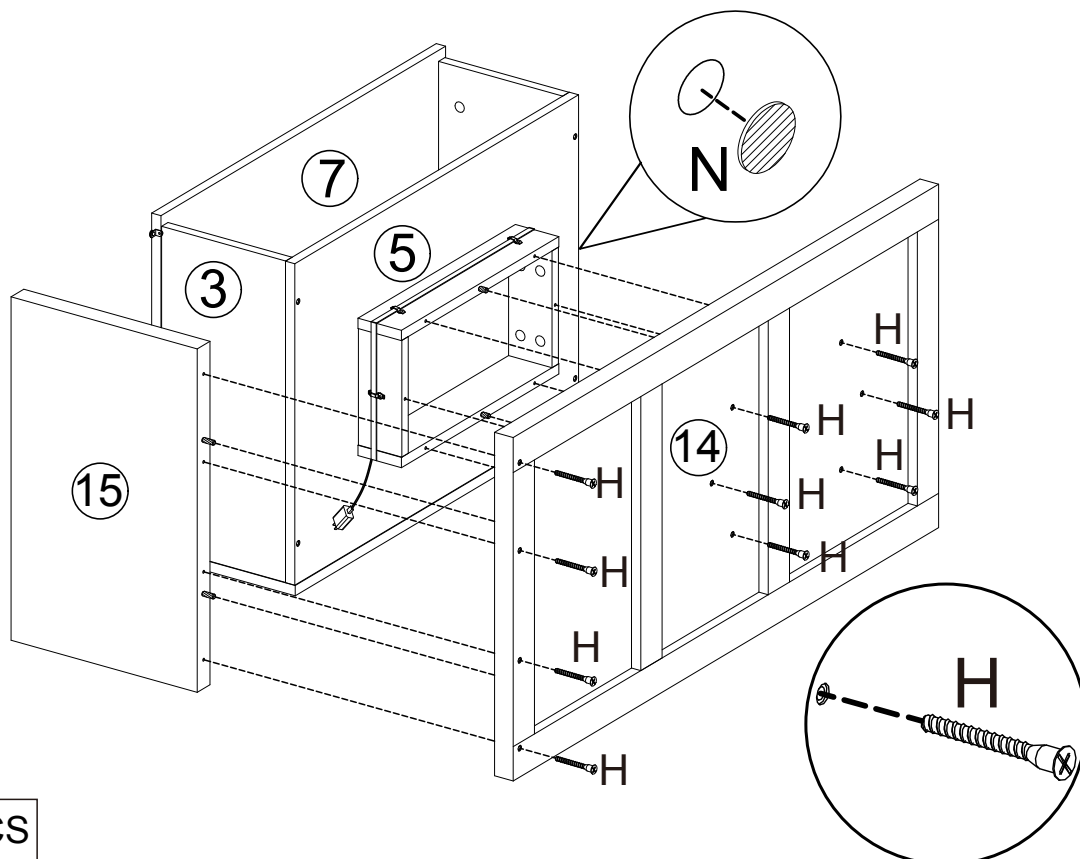


	N*12PCS
	H*10PCS

Assembly Steps

STEP 22

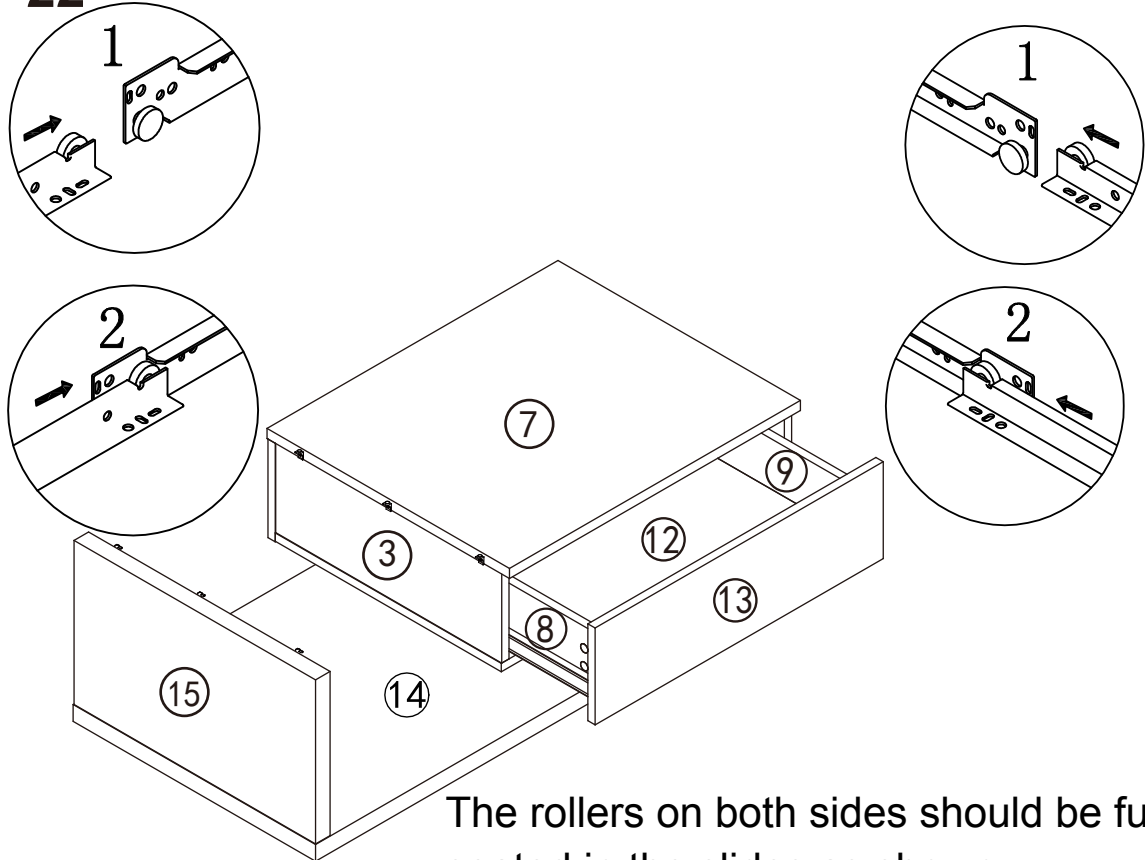


STEP 23

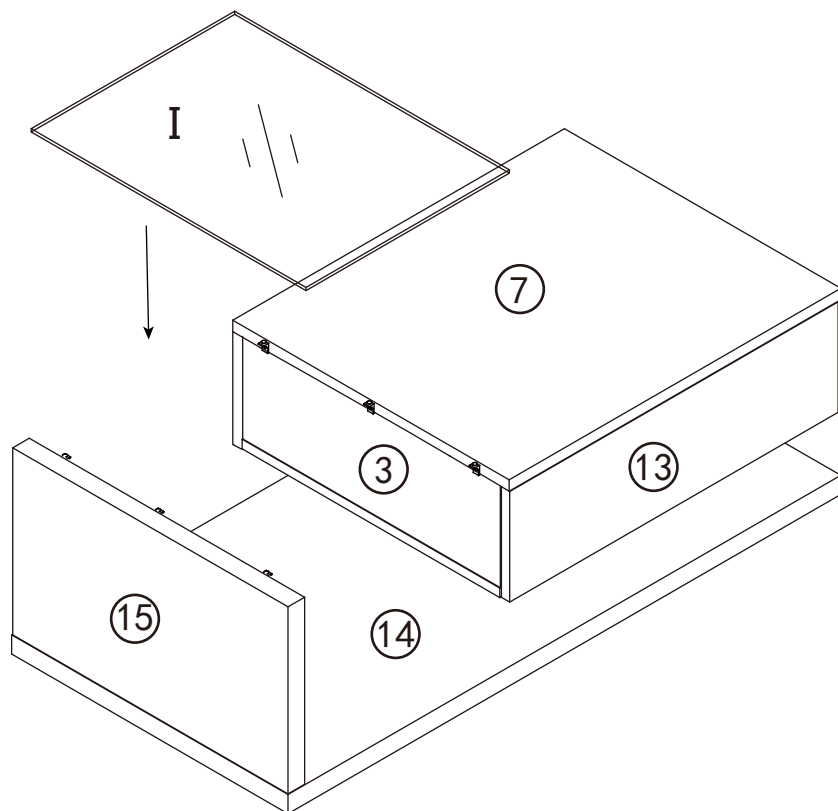


Assembly Steps

STEP 24

Finally, the protective film on the surface of part 1#2#3#4#5#6#7#13#14# 15# needs to be removed

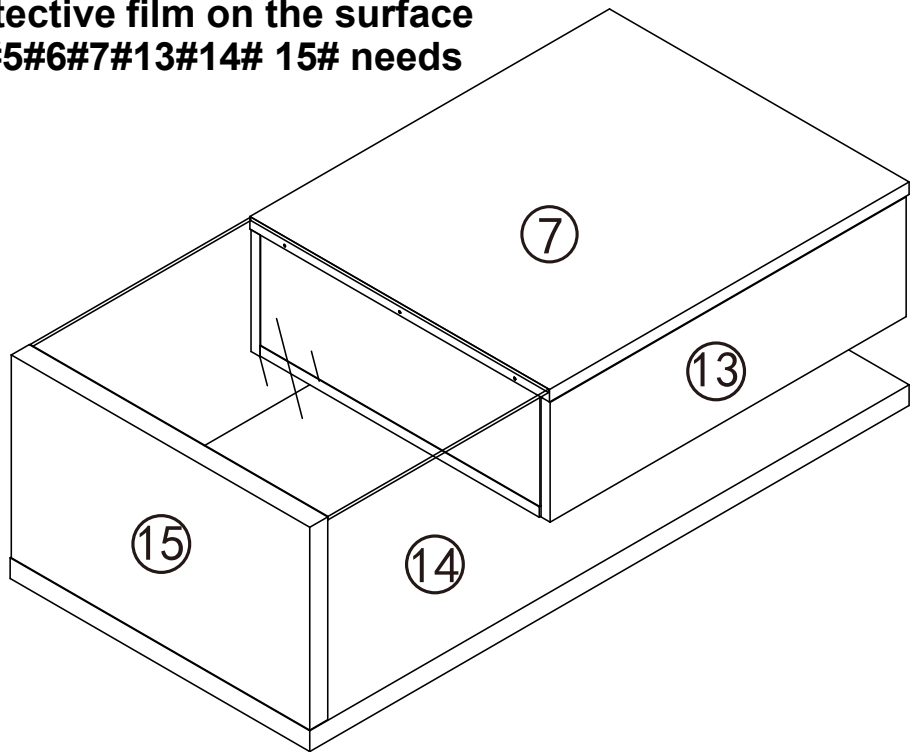

WARNING

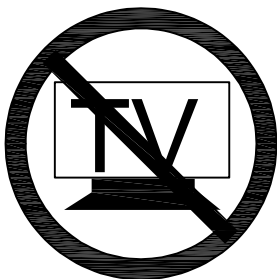

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.