


MOE'S

ASSEMBLY INSTRUCTION



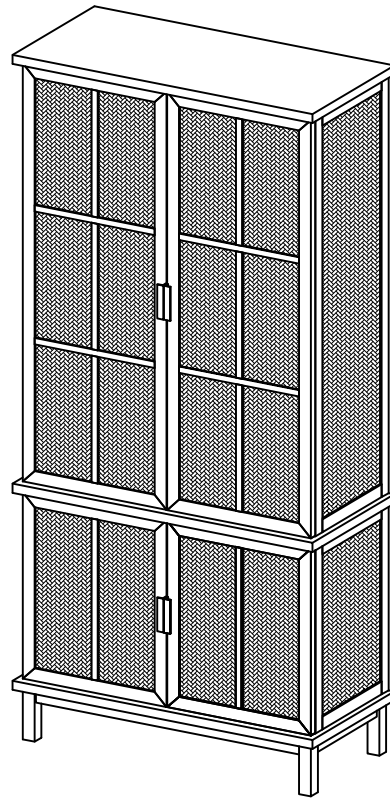


SEYMOUR TALL CABINET NATURAL

HN-1001-24



Thank you for your purchase!

PARTS AND HARDWARE



No	DESCRIPTION	IMAGE	Q.TY
Ⓐ	CABINET TOP		1
Ⓑ	CABINET BOTTOM		1
①	Metal Patch		2
②	Screw M4x20		8
③	Metal pegs		12

NOTES

Thank you for purchasing this quality product!
Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipping.

Caution: The item is heavy, take care when lifting and use 2 people to maneuver safely.

STEP 1

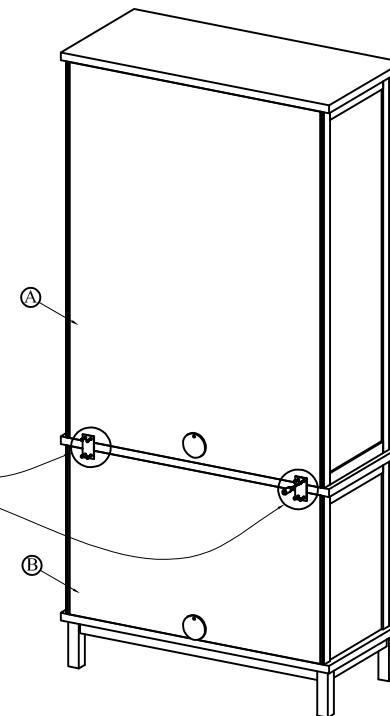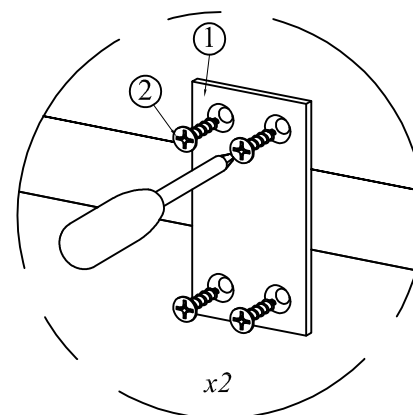

STEP 2

