


ASSEMBLY INSTRUCTION

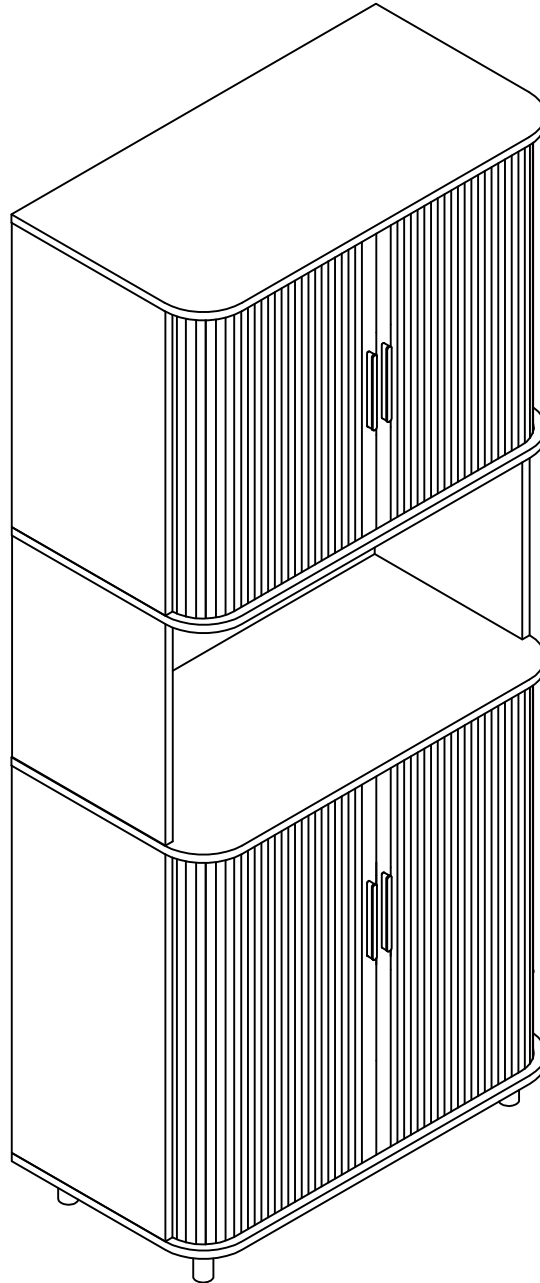


LikeMet



MADE IN CHINA

ASSEMBLY INSTRUCTION

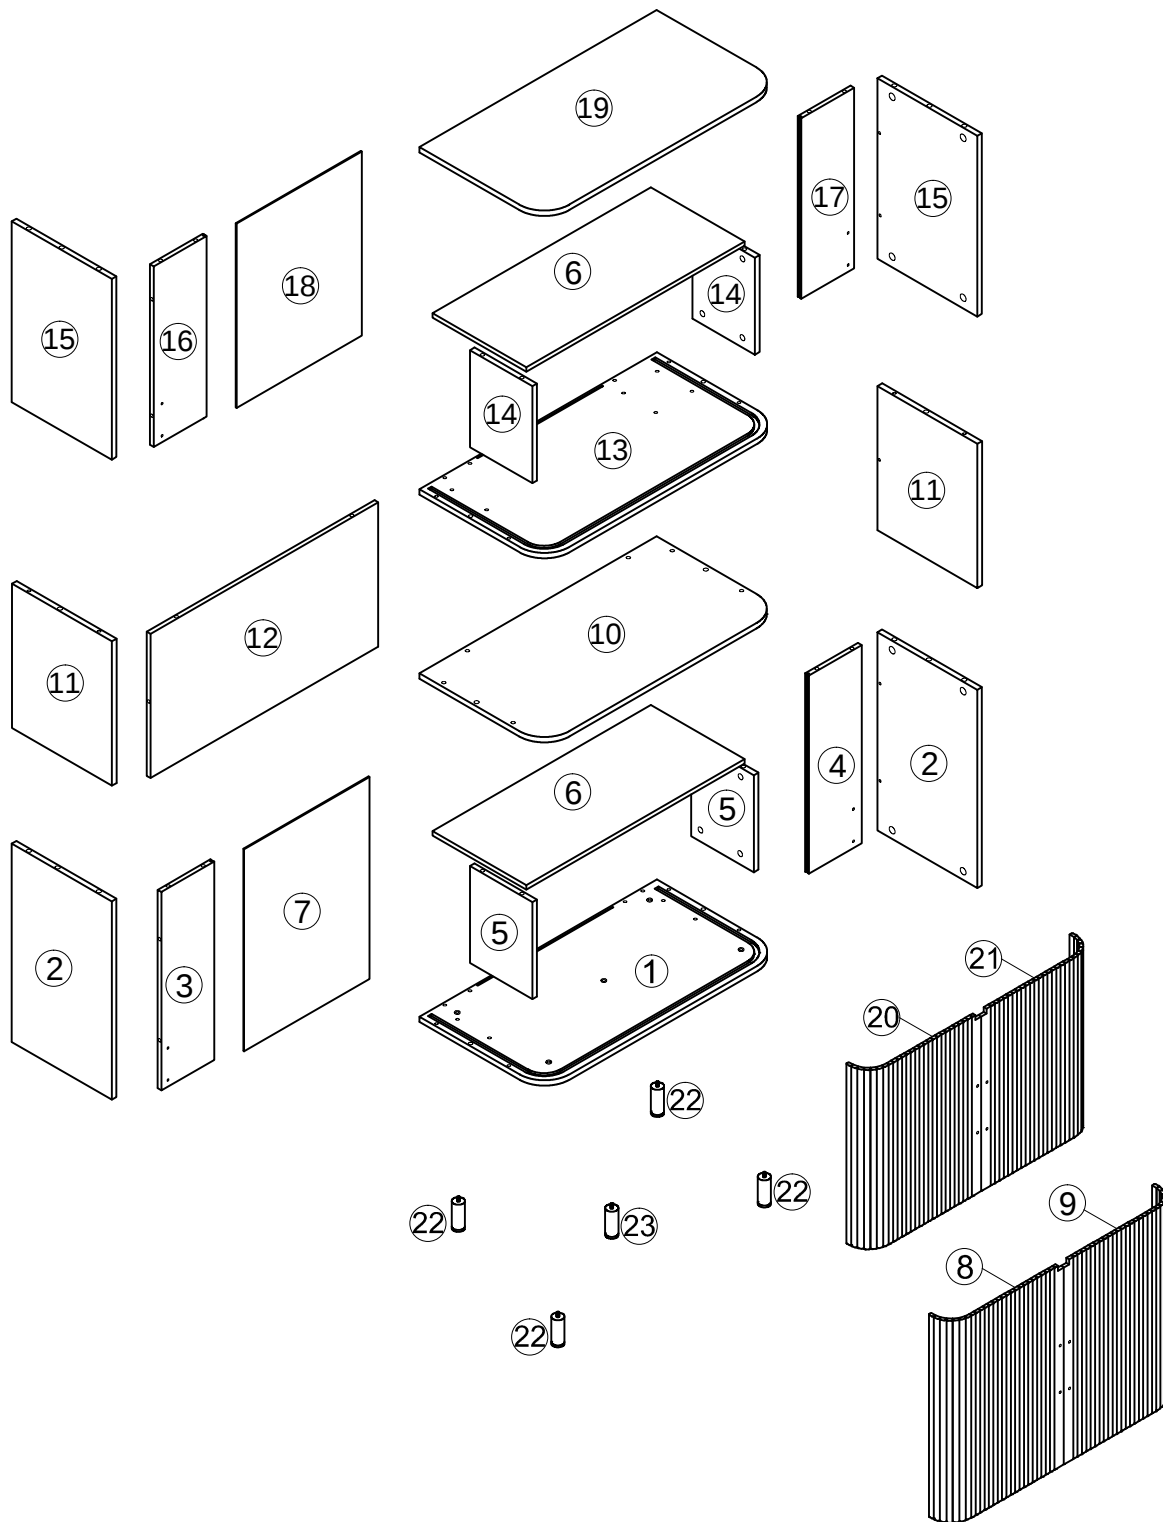

Dear Guests:

Before assembling your product, please wear gloves to protect your hands and ensure assembly quality.





Key Notes:

Protect hands from oils, dust, and chemicals.



















Choose gloves based on your task (e.g., standard latex/nitrile for indoor work; chemical-resistant for hazardous materials).

Ask our team if unsure—we're here to help!

ASSEMBLY INSTRUCTION

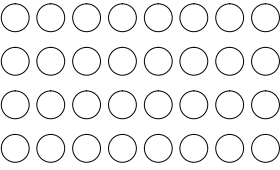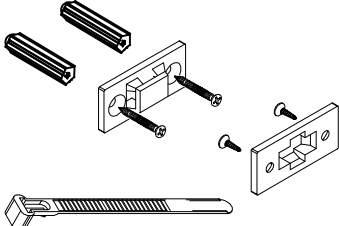
A ST6*40mm  X58+2	B Ø15*9mm  X58+2	C Ø 8*30mm  X4+1	D Ø 8*50mm  X4
E  X4	F M4*12mm  X8	G M7*48mm  X20+1	H 4mm  X1
I M8*25mm  X5	J  X5	K 5mm  X1	L  X1
M  X58	N  2 SET		

ASSEMBLY INSTRUCTION

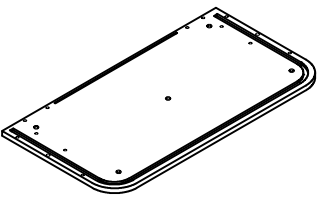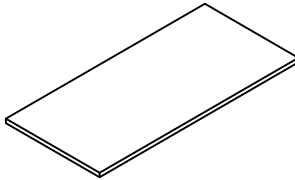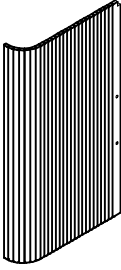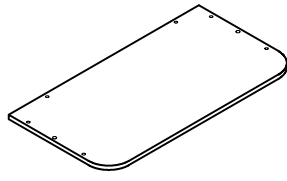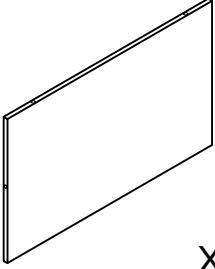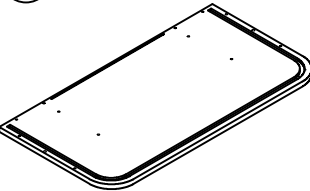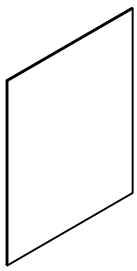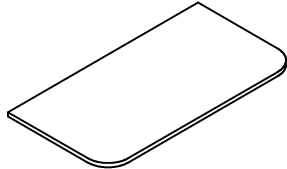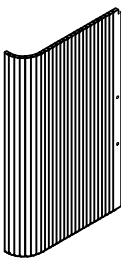


①  X1	②  X2	③  X1	④  X1
⑤  X2	⑥  X2	⑦  X1	⑧  X1
⑨  X1	⑩  X1	⑪  X2	⑫  X1
⑬  X1	⑭  X2	⑮  X2	⑯  X1
⑰  X1	⑱  X1	⑲  X1	⑳  X1
㉑  X1	㉒  X4	㉓  X1	

ASSEMBLY INSTRUCTION

STEP 1



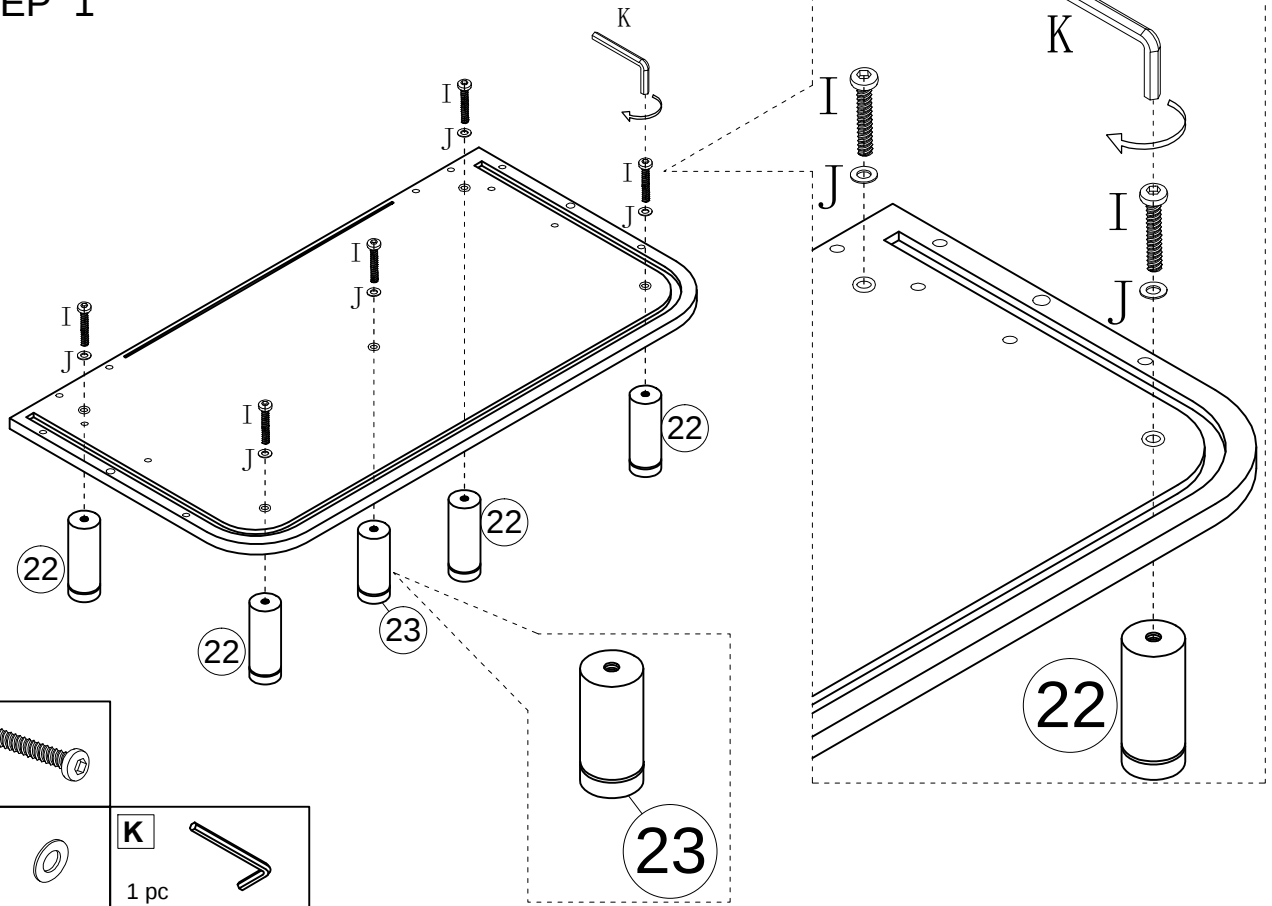


STEP 2

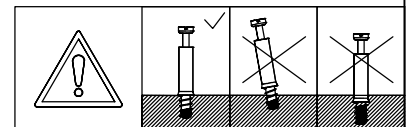

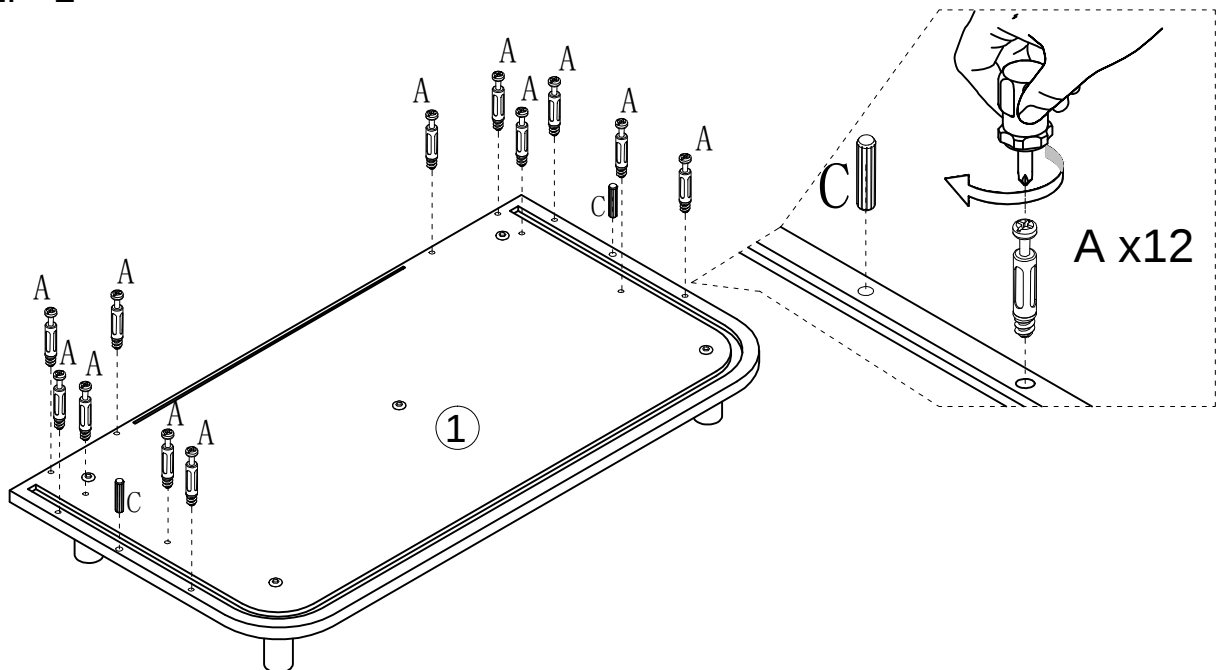


ASSEMBLY INSTRUCTION

STEP 3

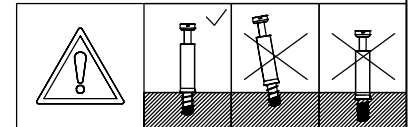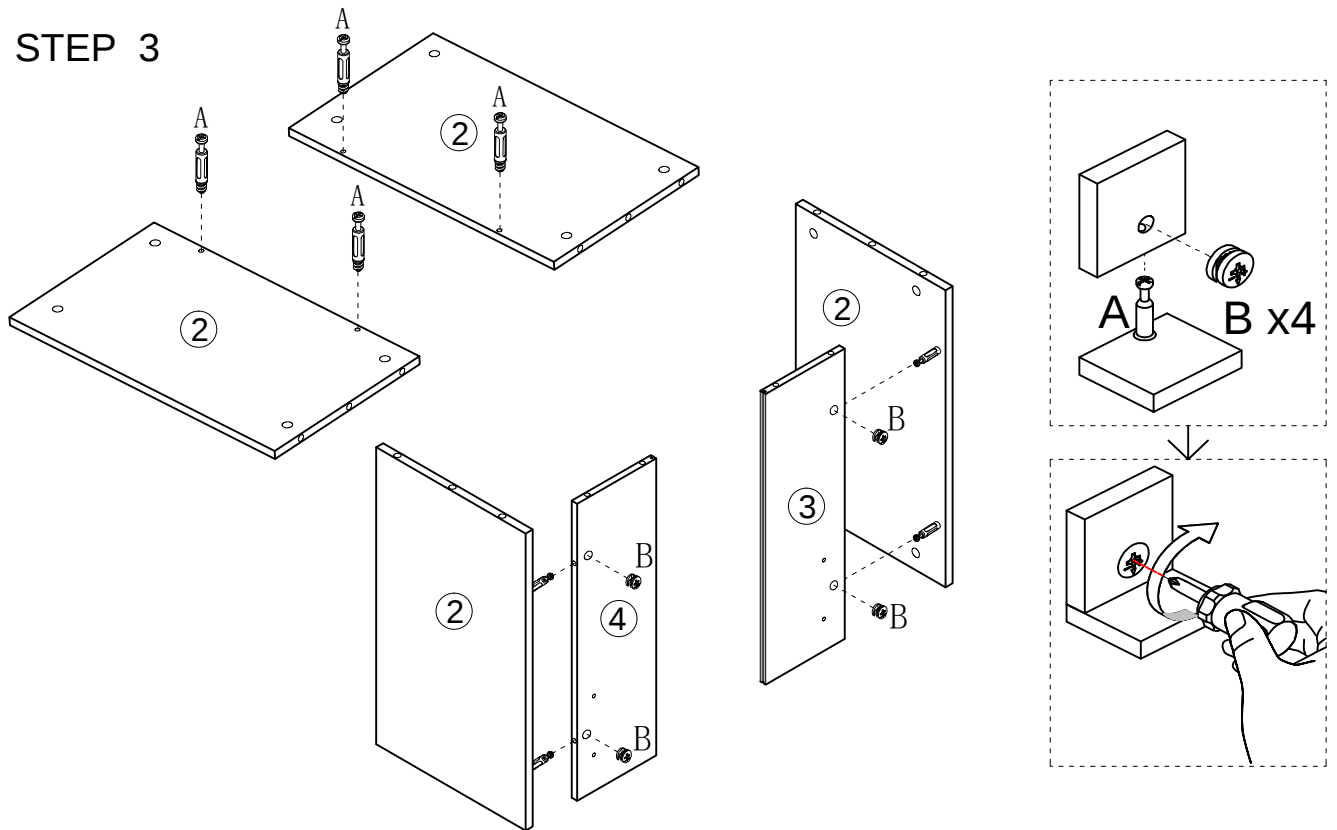


STEP 4

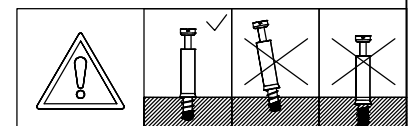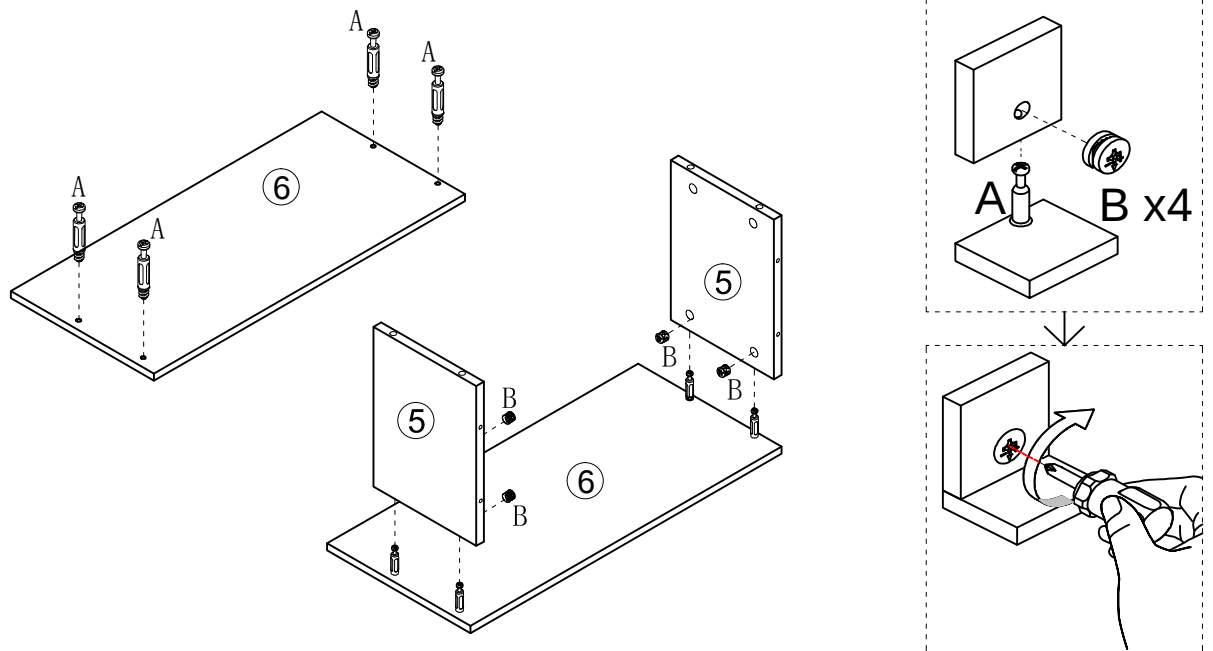


ASSEMBLY INSTRUCTION

STEP 5


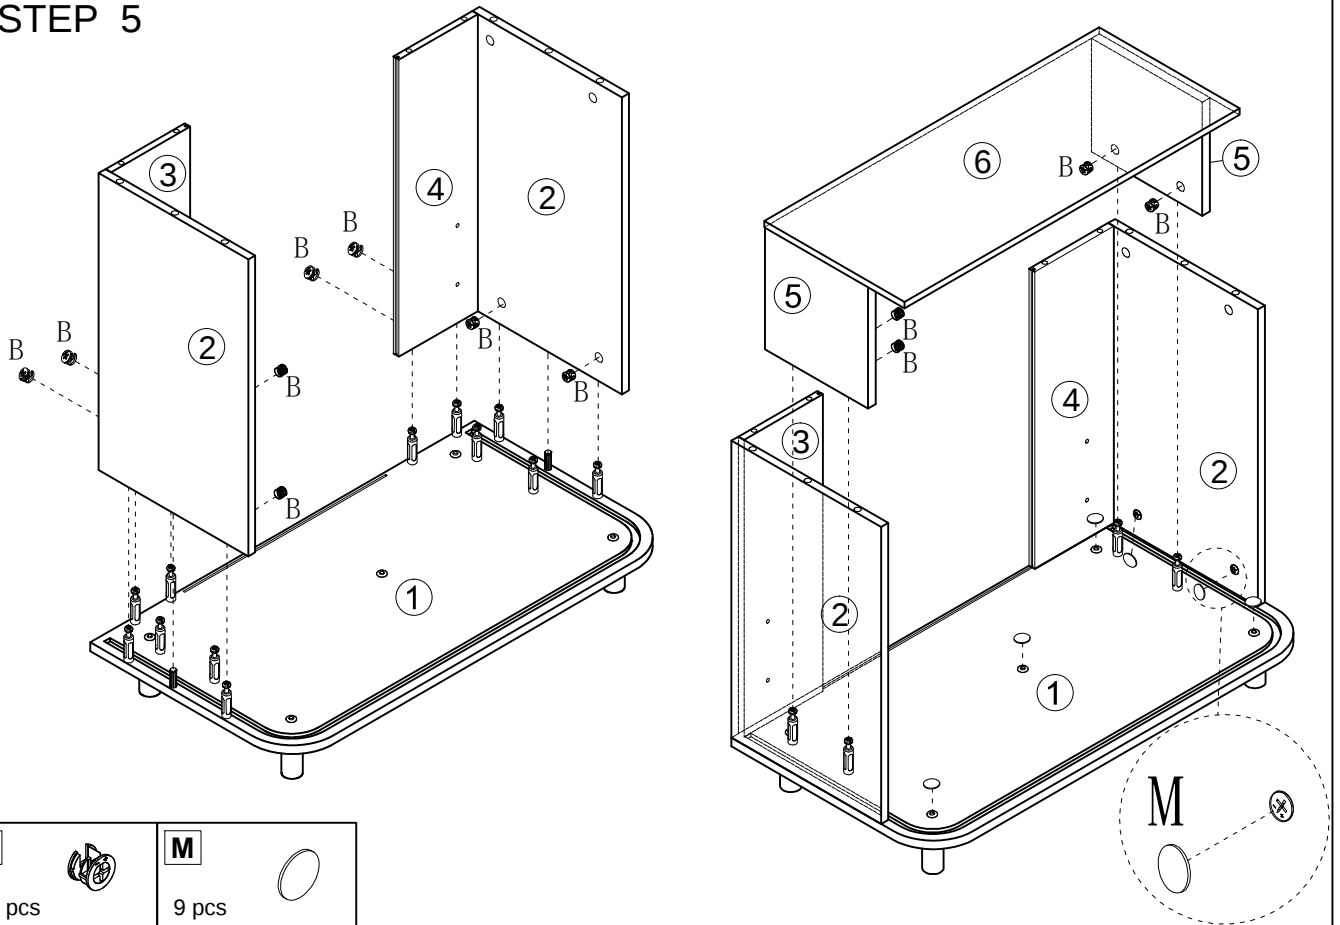


STEP 6

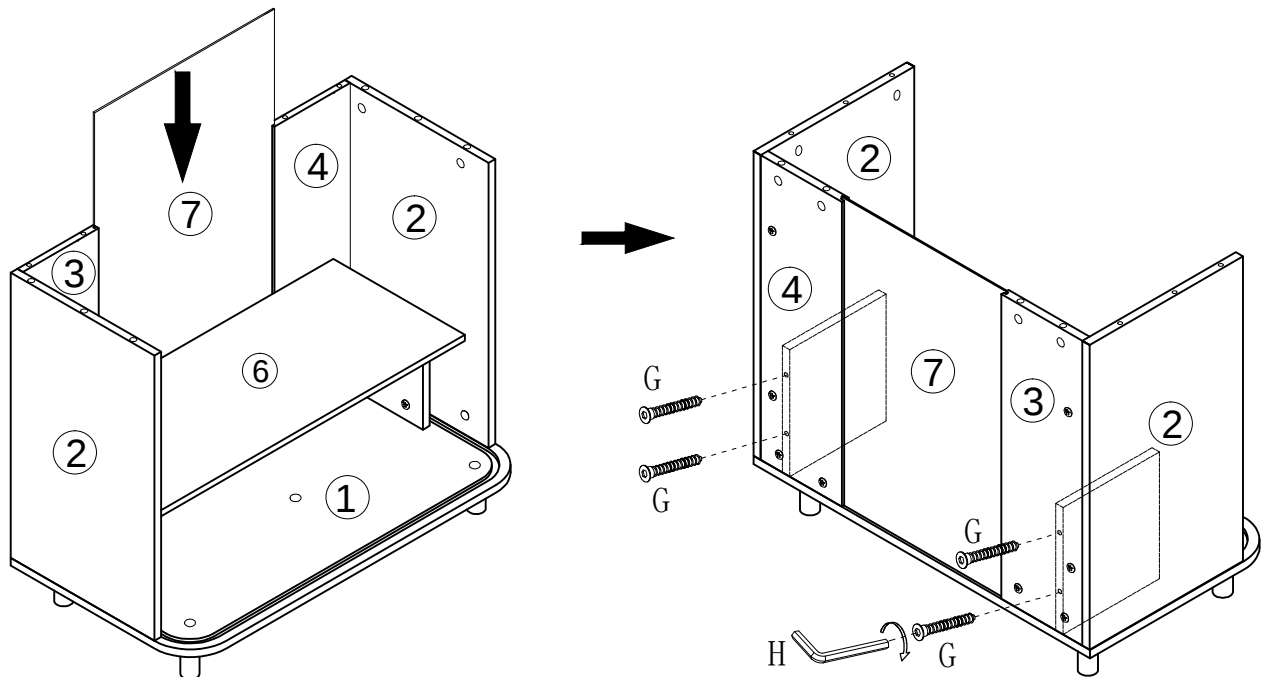



ASSEMBLY INSTRUCTION

STEP 7

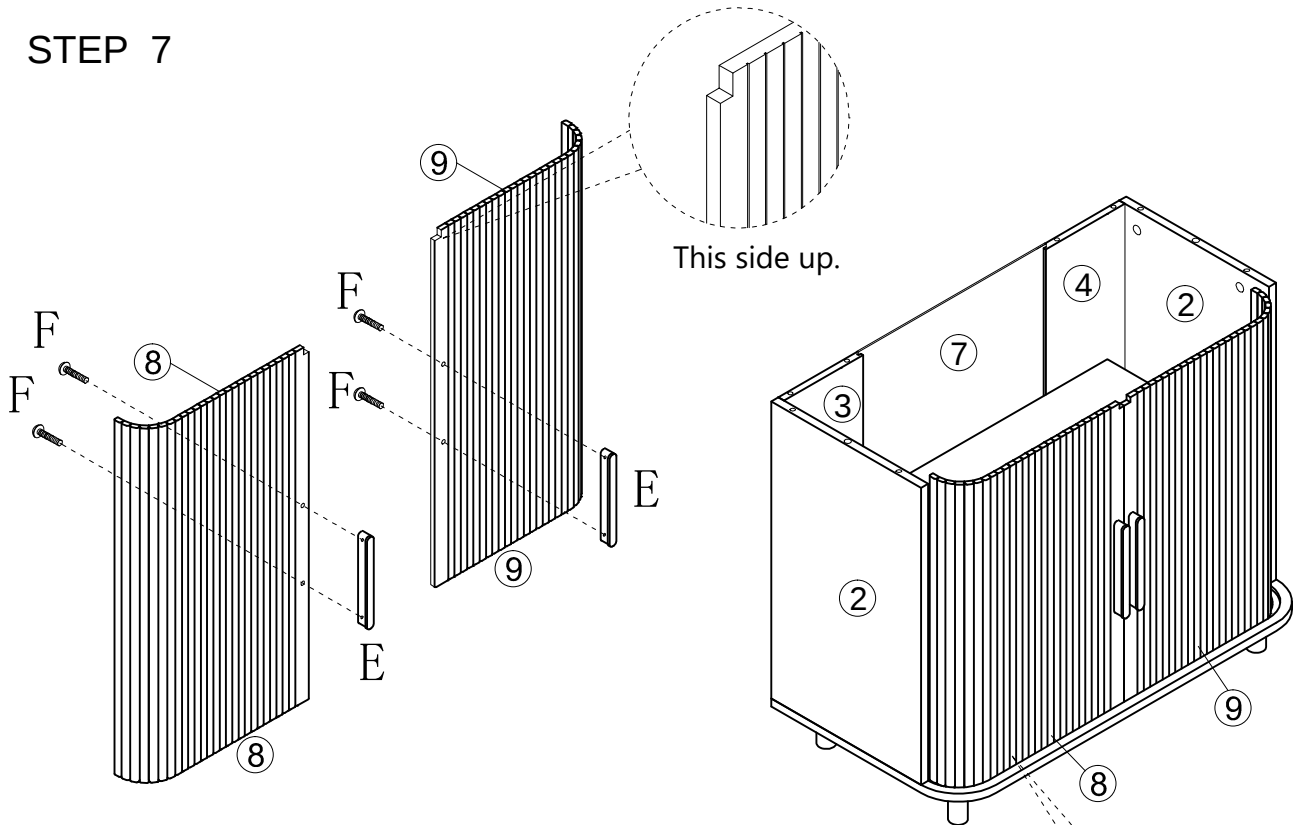


Make sure the doors are fully inserted in the groove of the top panel "1".

STEP 8

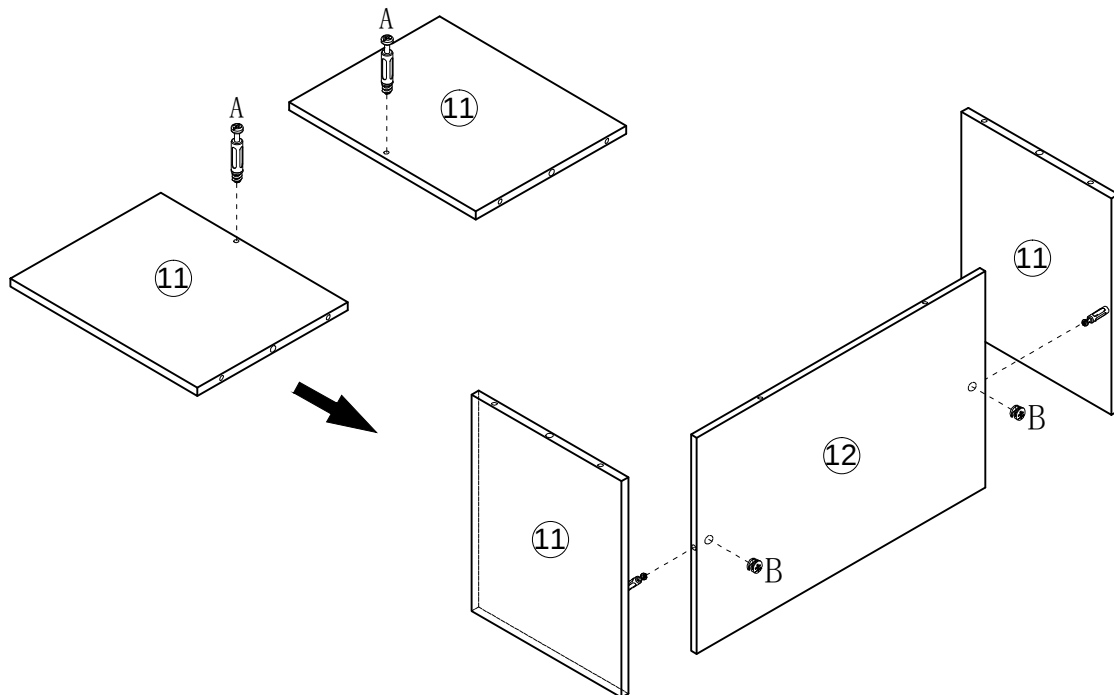


ASSEMBLY INSTRUCTION

STEP 9


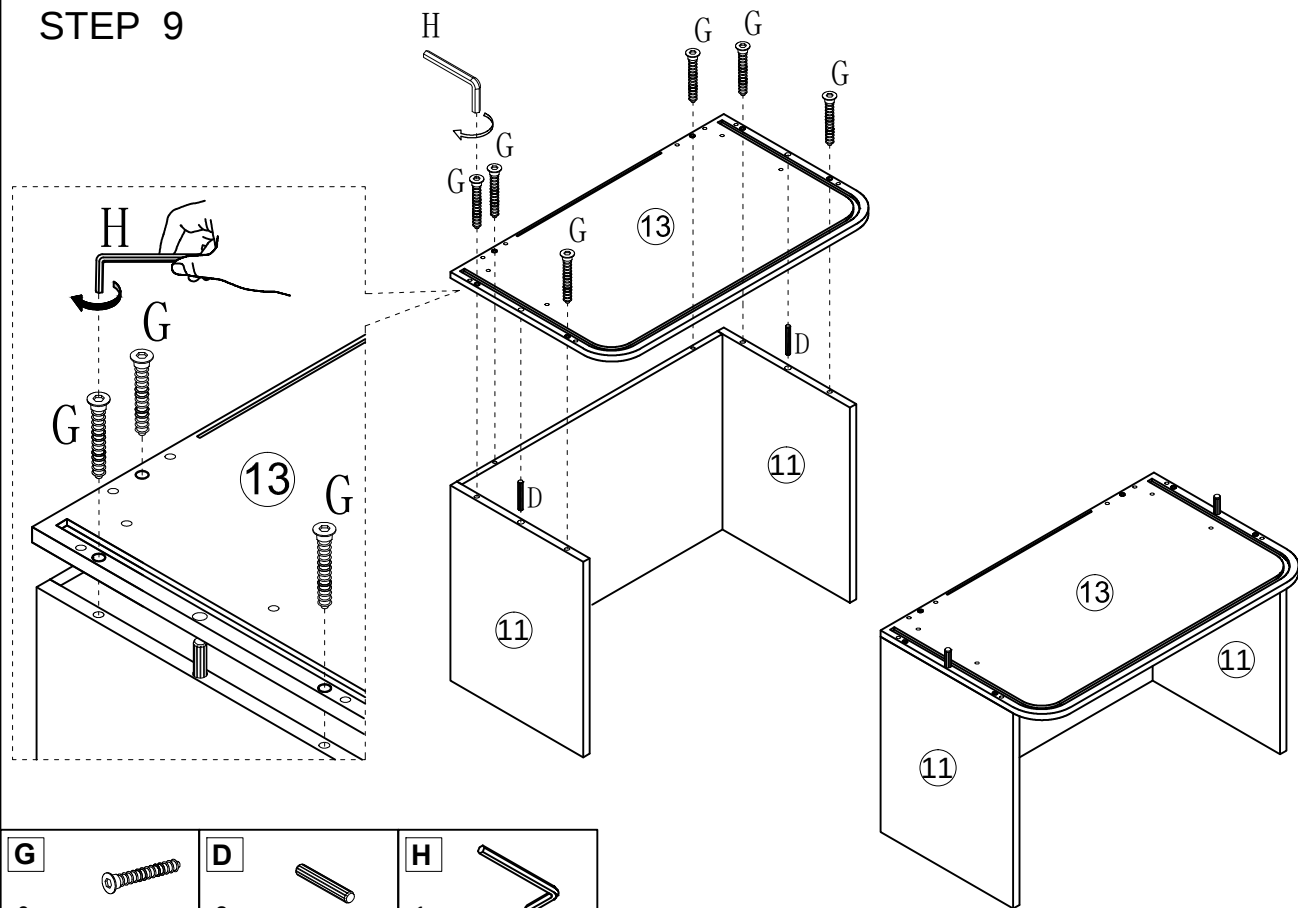


STEP 10





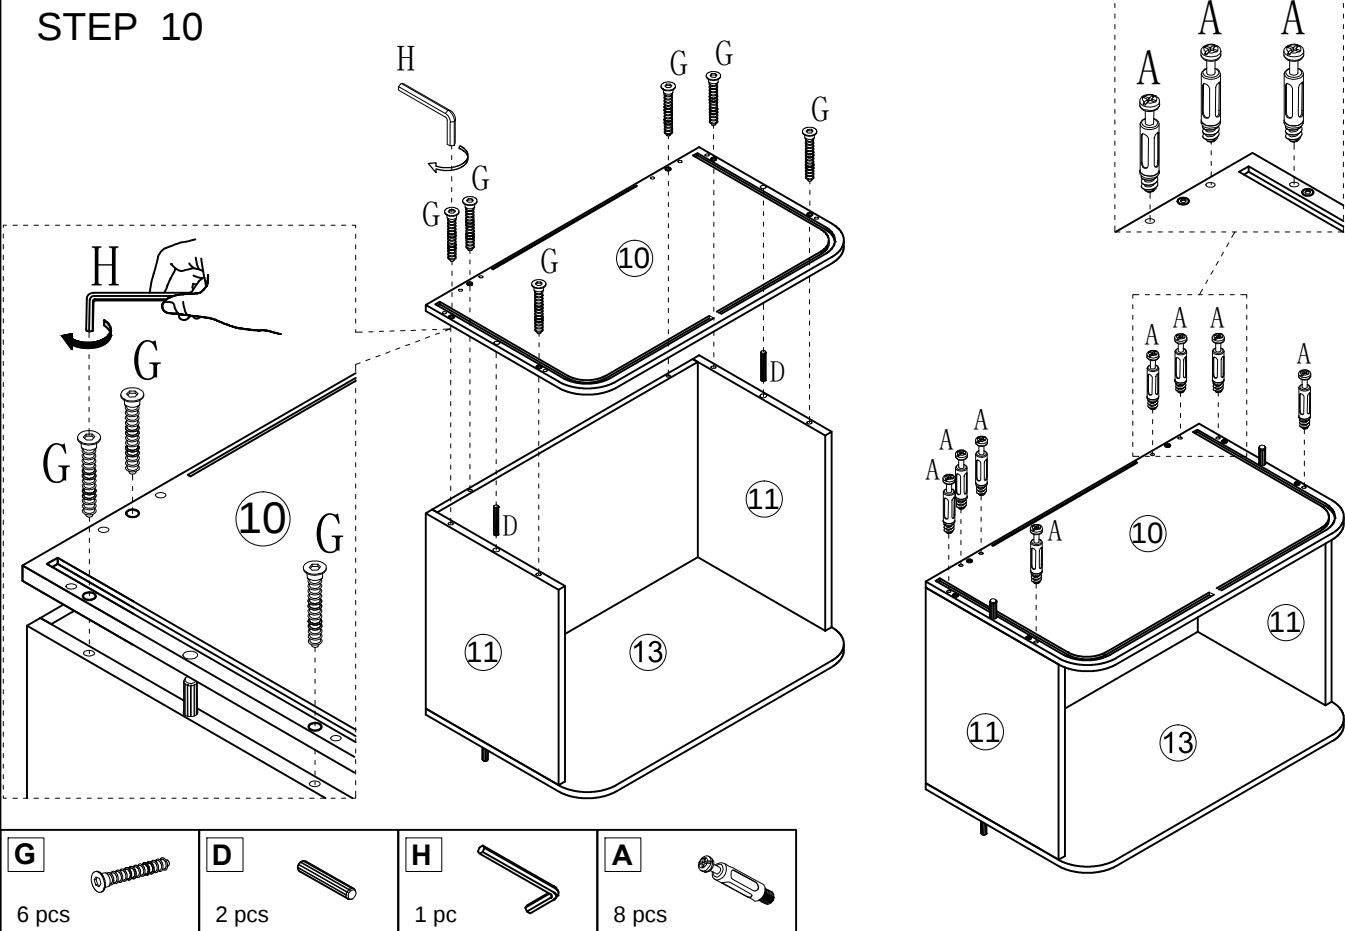


ASSEMBLY INSTRUCTION

STEP 11


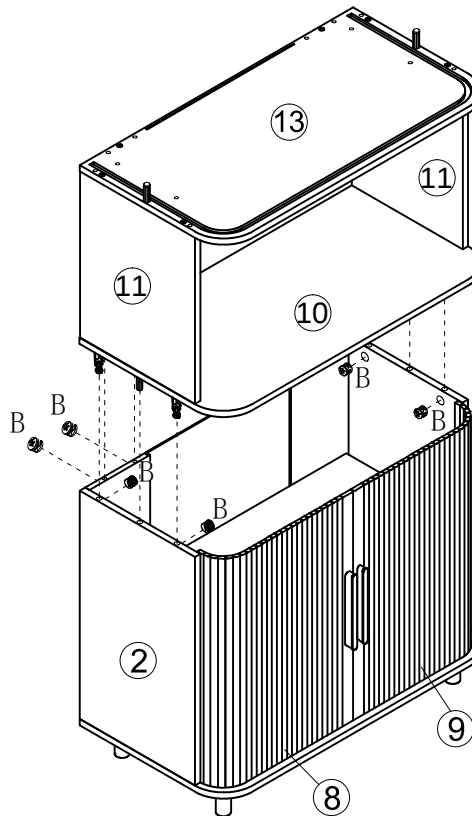
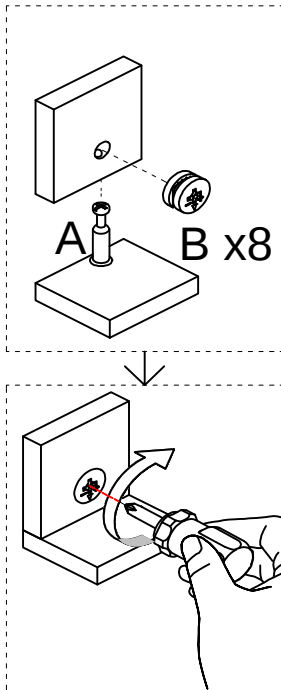


STEP 12

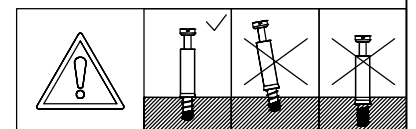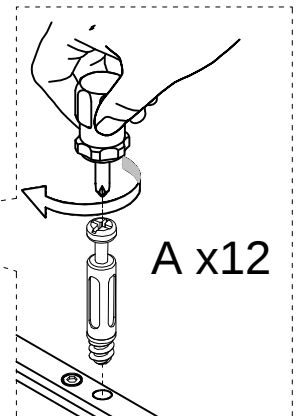
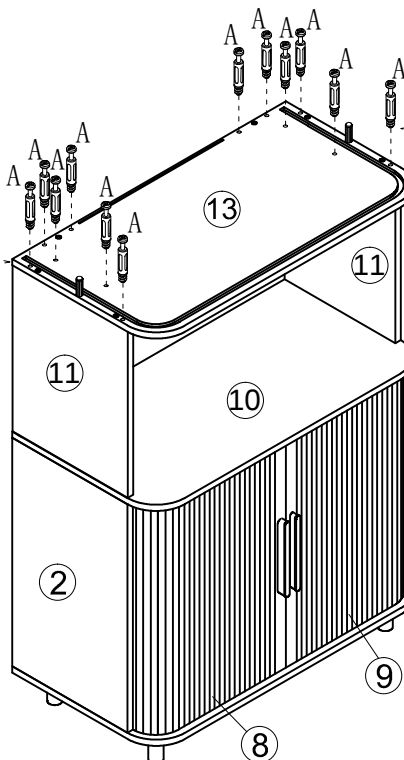
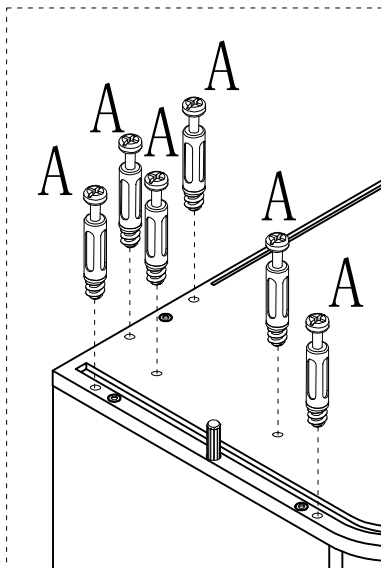


ASSEMBLY INSTRUCTION

STEP 13

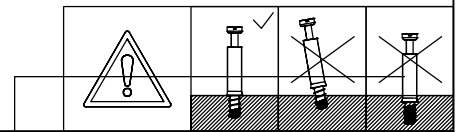
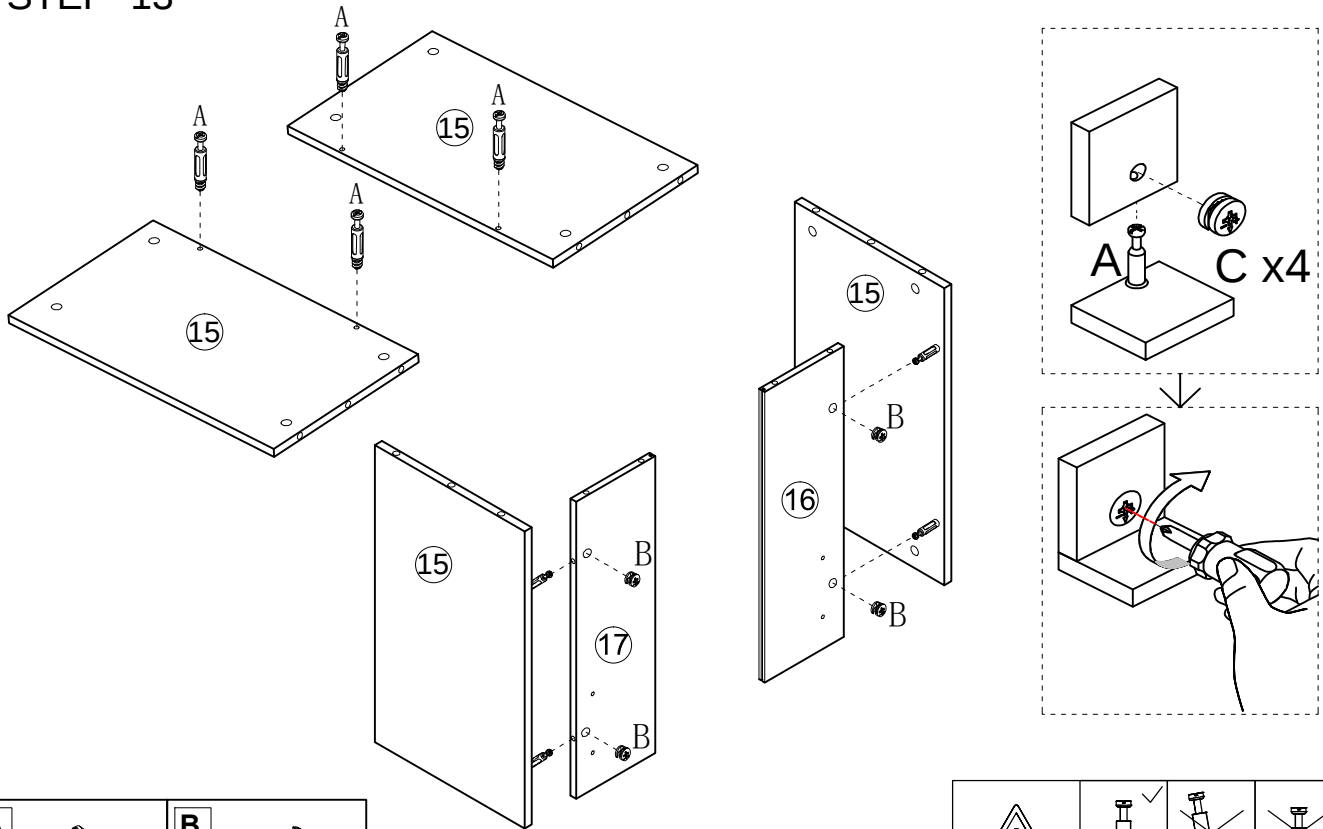


STEP 14

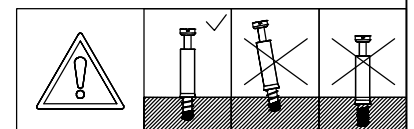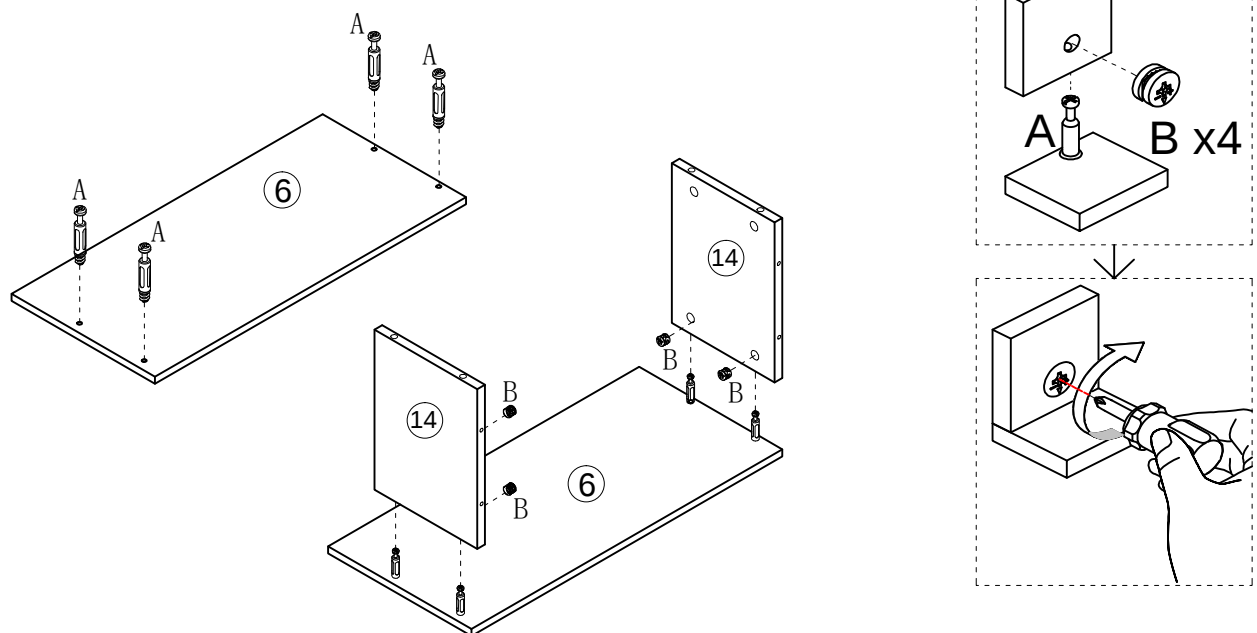

ASSEMBLY INSTRUCTION




STEP 15

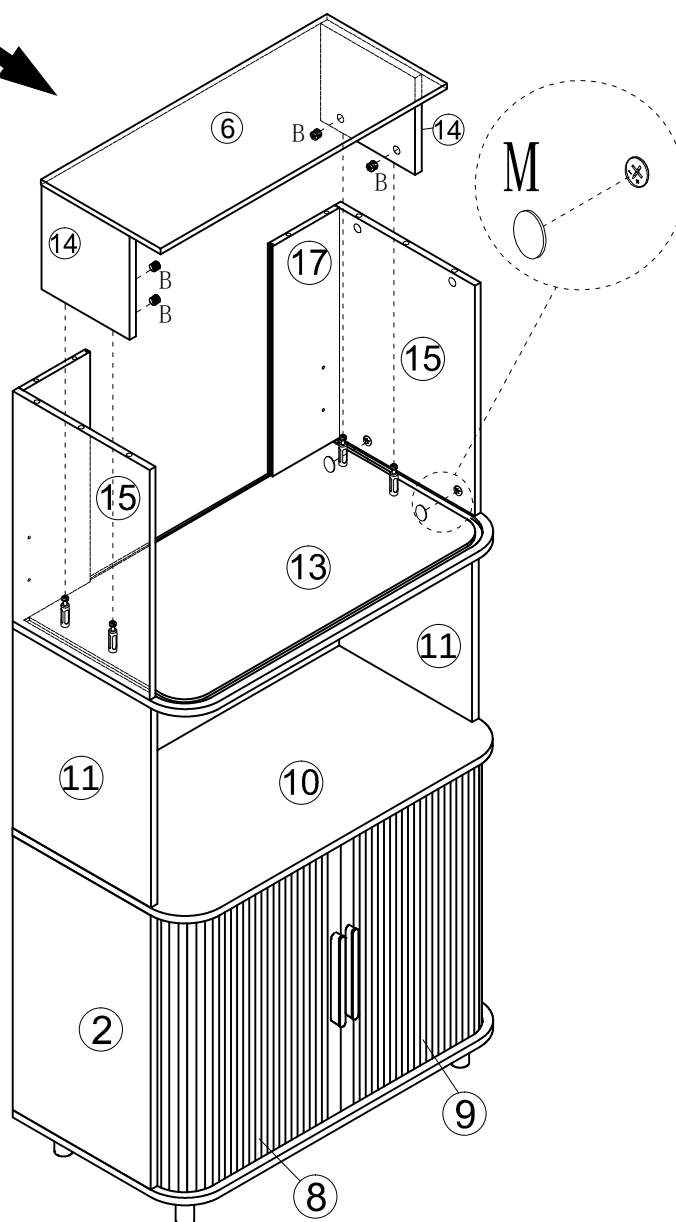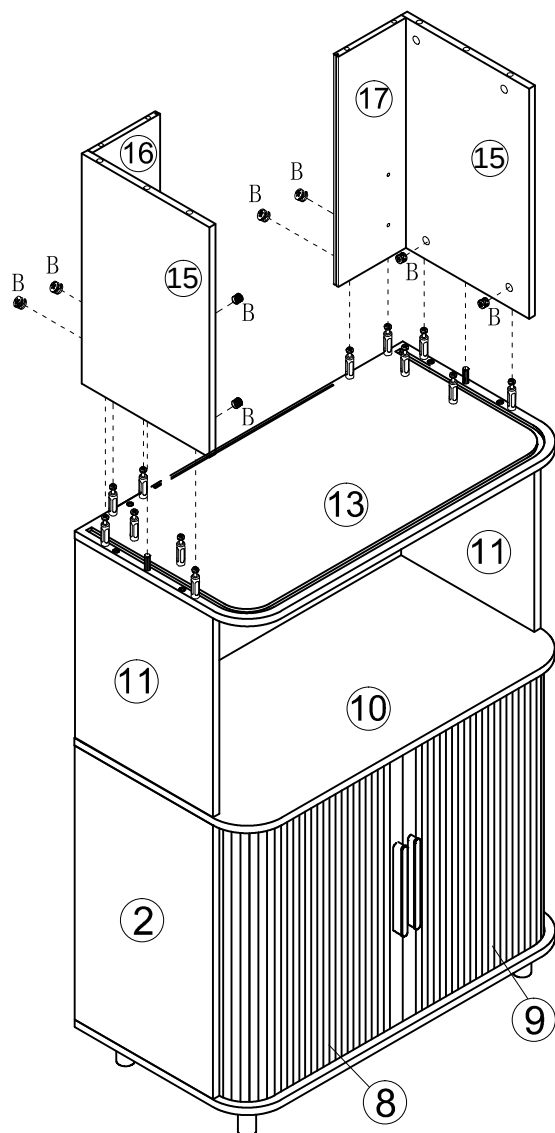

B		M	
12 pcs		4 pcs	


ASSEMBLY INSTRUCTION

STEP 16


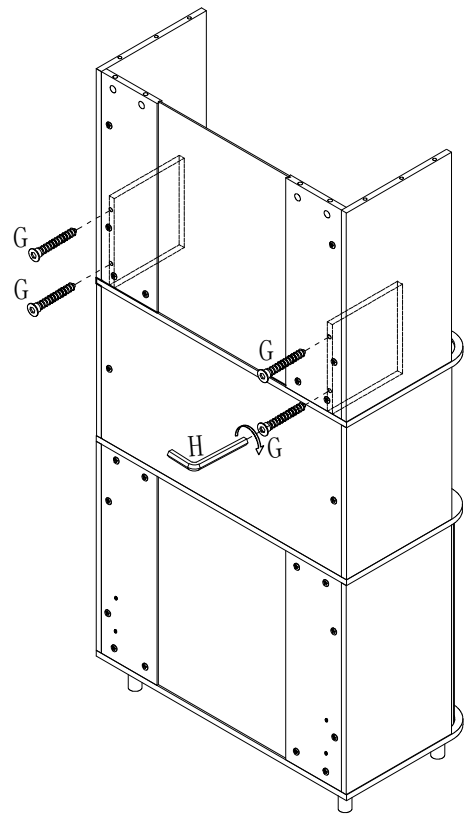
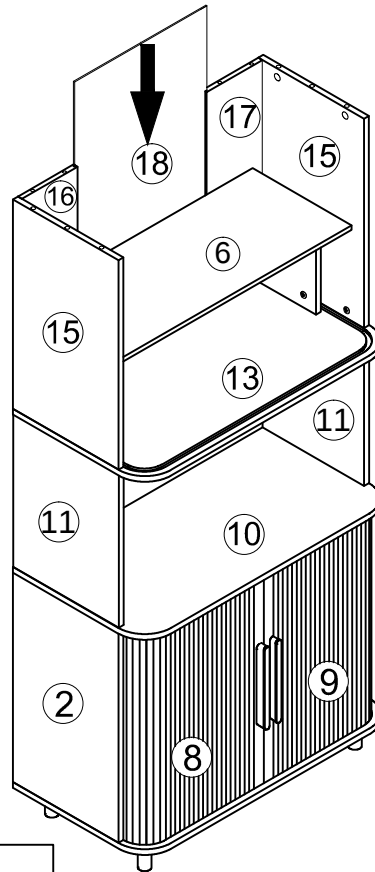


STEP 17

Make sure the doors are fully inserted in the groove of the top panel "13".



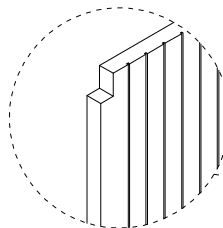


This side up.

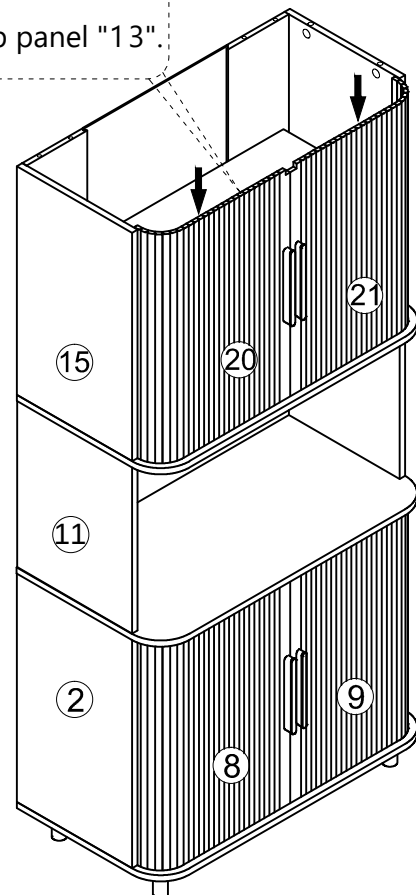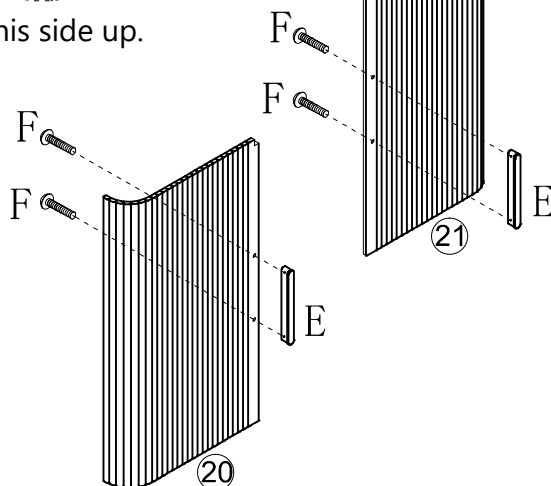

ASSEMBLY INSTRUCTION


STEP 18

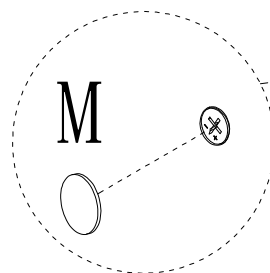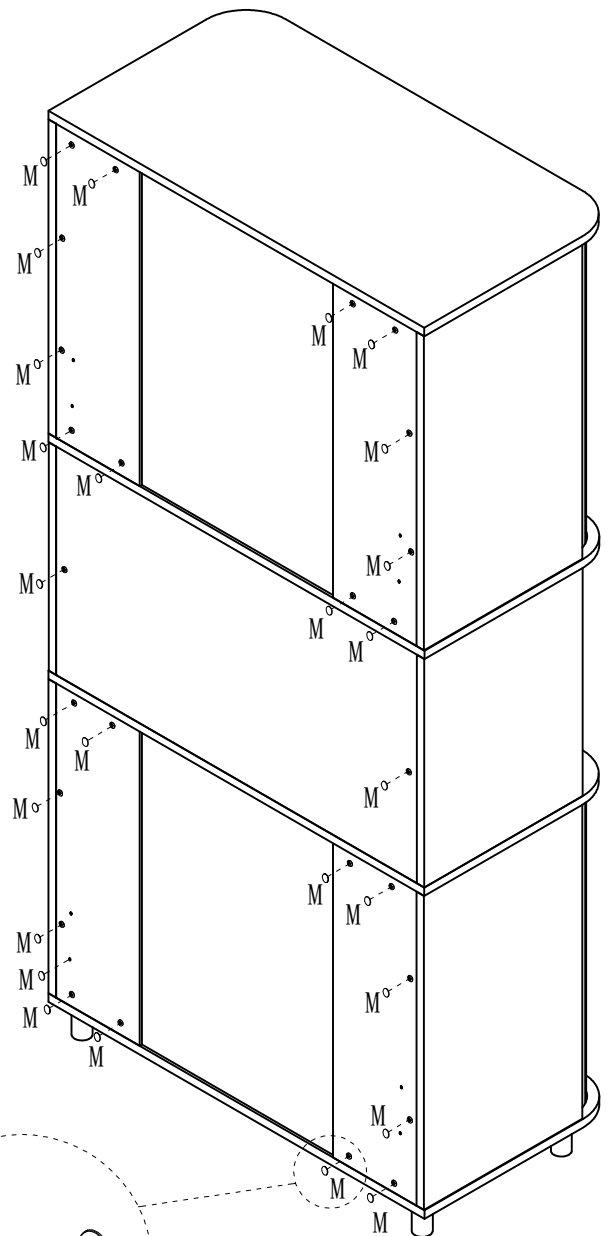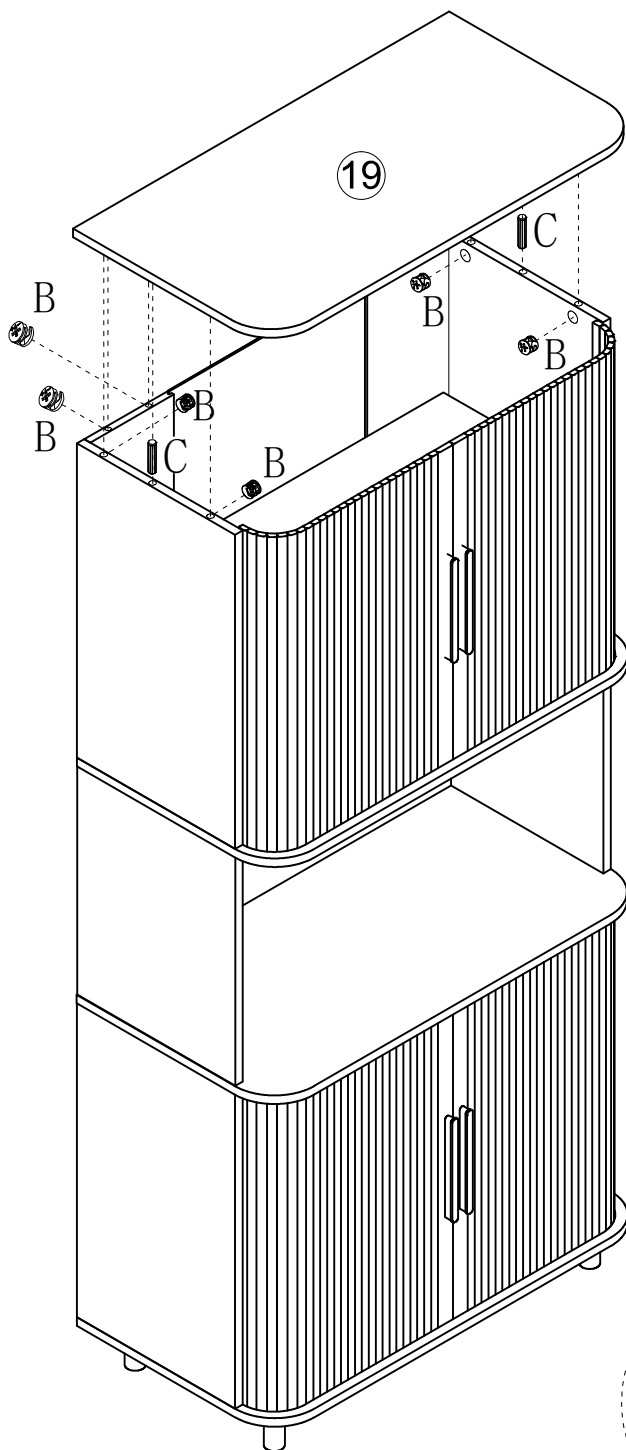

A		B		C		M	
8 pcs		8 pcs		2 pcs		45 pcs	


ASSEMBLY INSTRUCTION

STEP 19

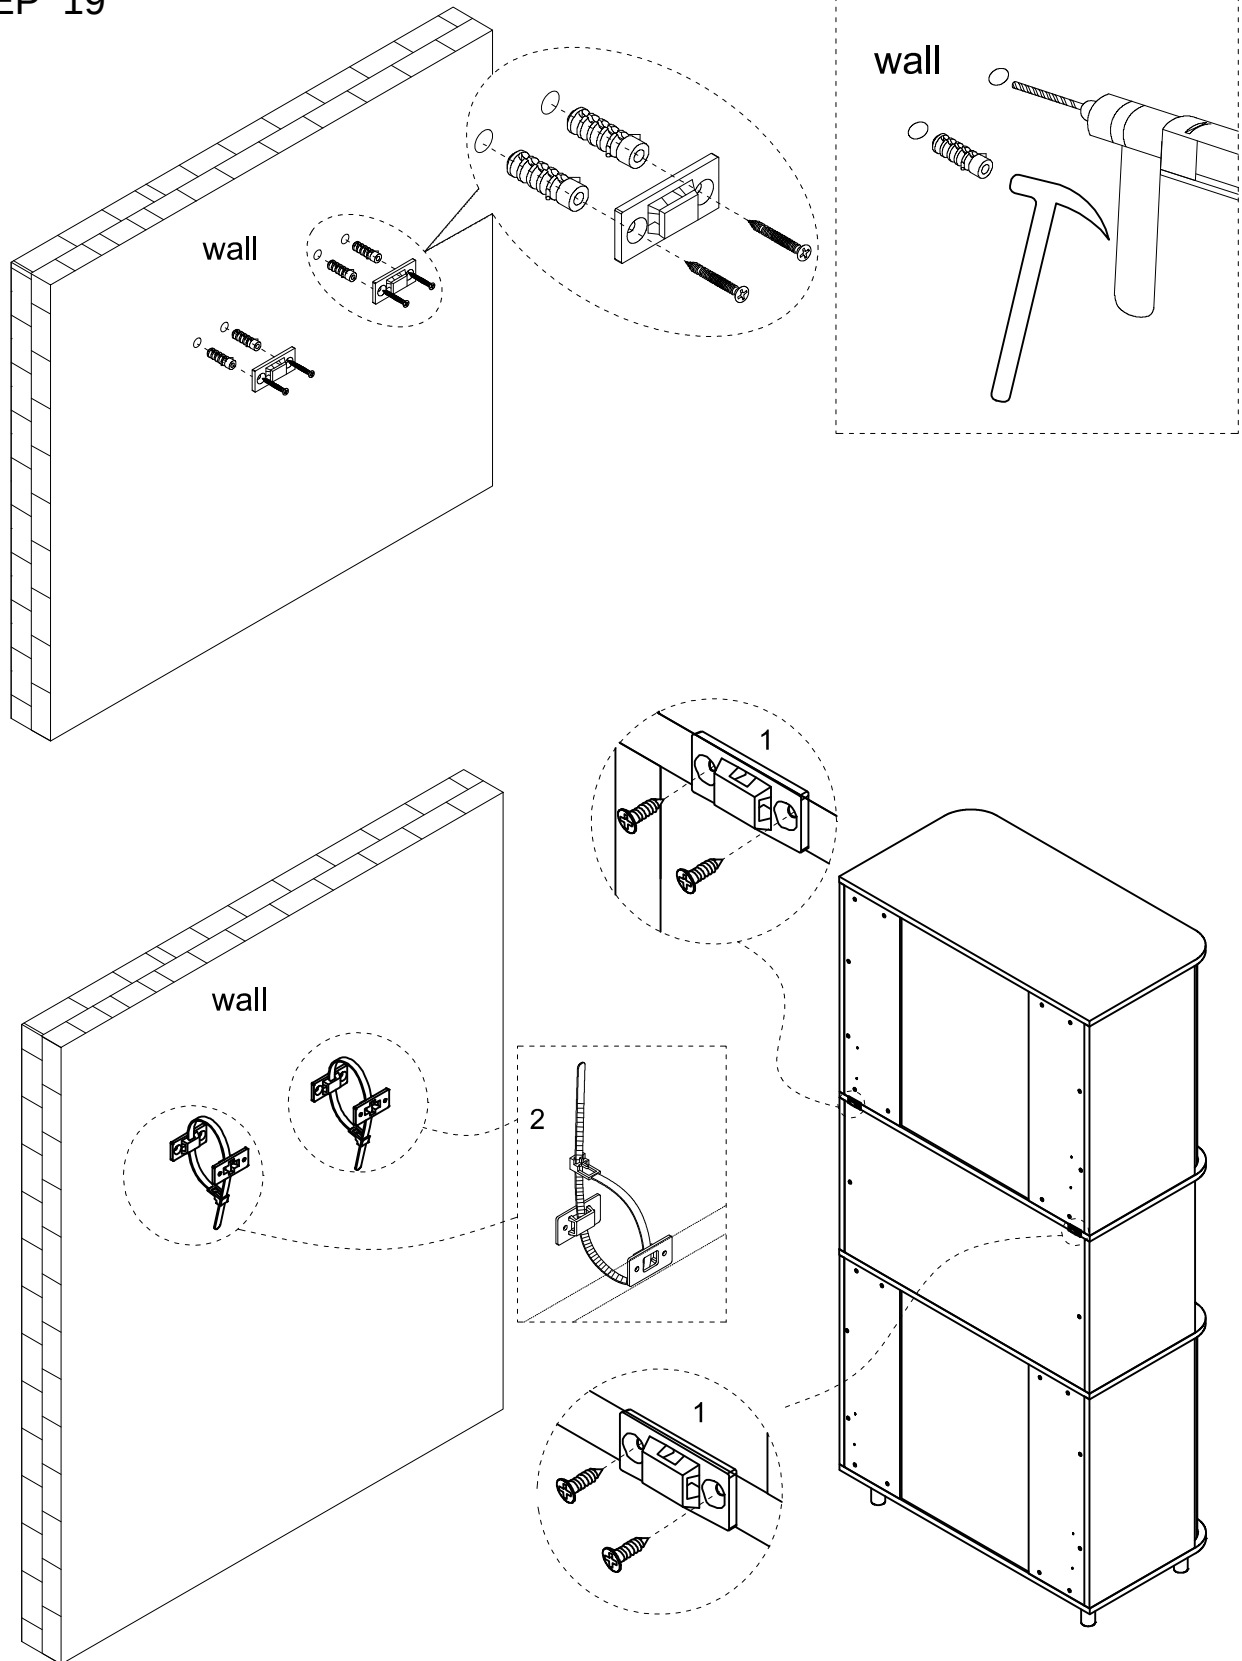


Note:

Please lift up the furniture by two people when moving is needed. Dragging may cause the legs failure.

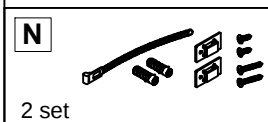

ASSEMBLY INSTRUCTION

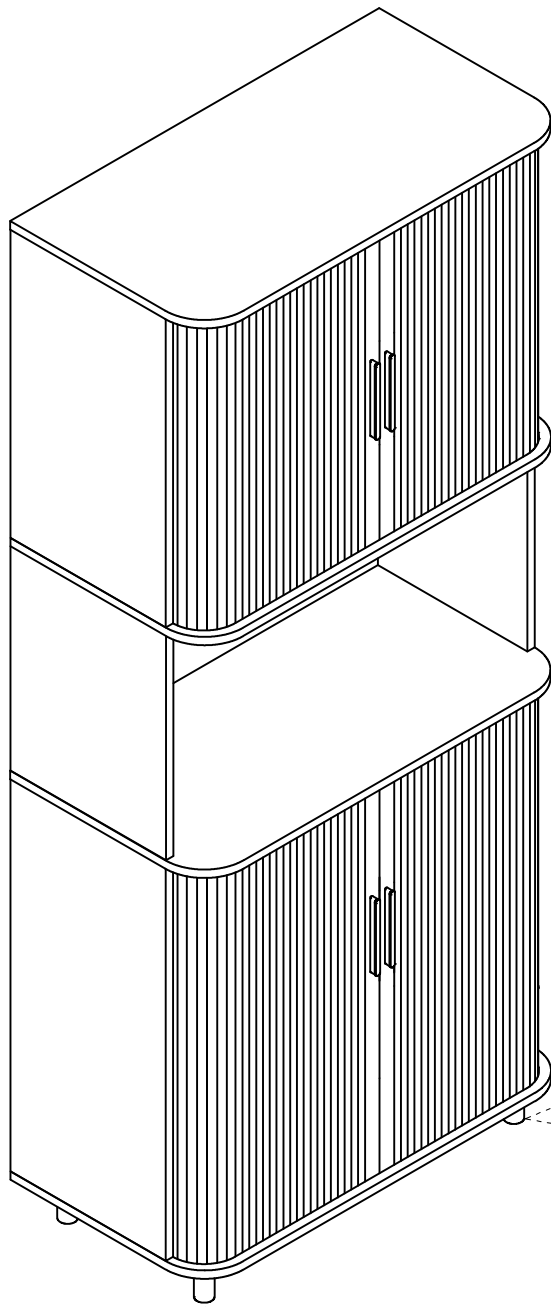

After installation, adjust the foot pad
to make the cabinet horizontal

