



ASSEMBLY GUIDE
SMART 2-DOOR WARDROBE

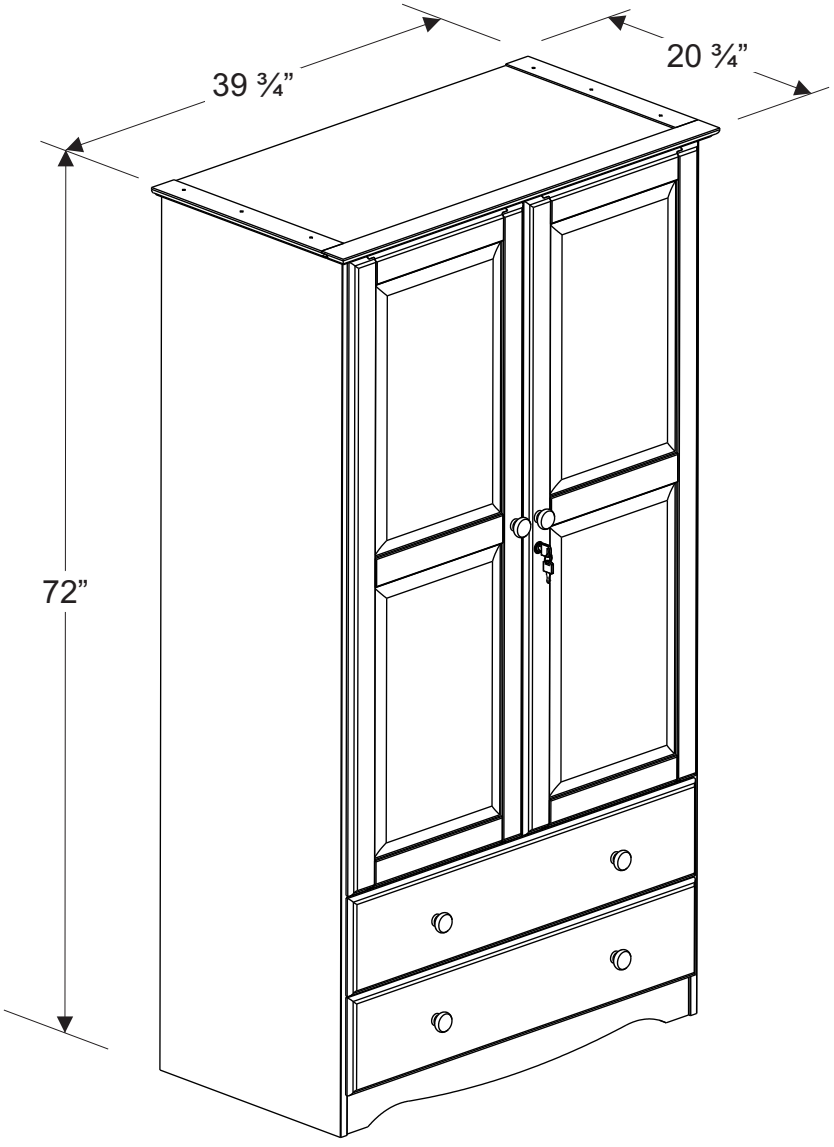

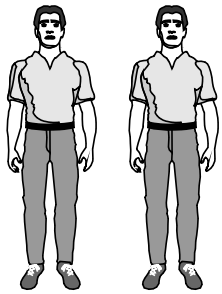

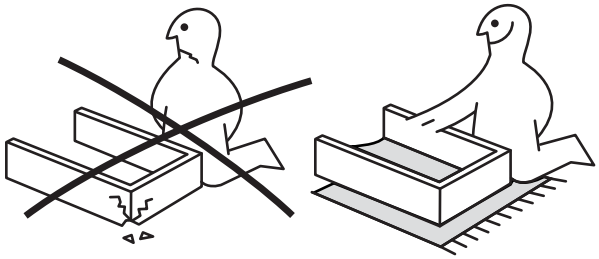


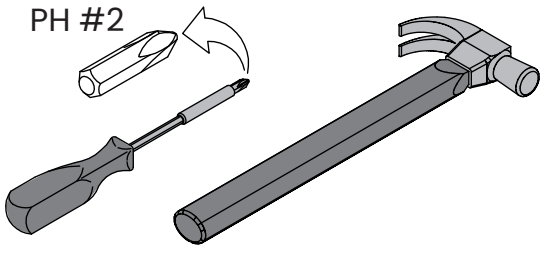












PRE-ASSEMBLY PREPARATION



- Please check the contents before assembling. A full checklist of parts is provided below.
- If any parts are missing or damaged, please contact us
- Assemble on a flat, smooth surface on top of a blanket.
- Use only low-speed power drill setting.
- Assemble as near as possible to the point of use.
- The hardware pack contains SMALL ITEMS which should be KEPT AWAY FROM YOUNG CHILDREN.



PARTS DIAGRAM

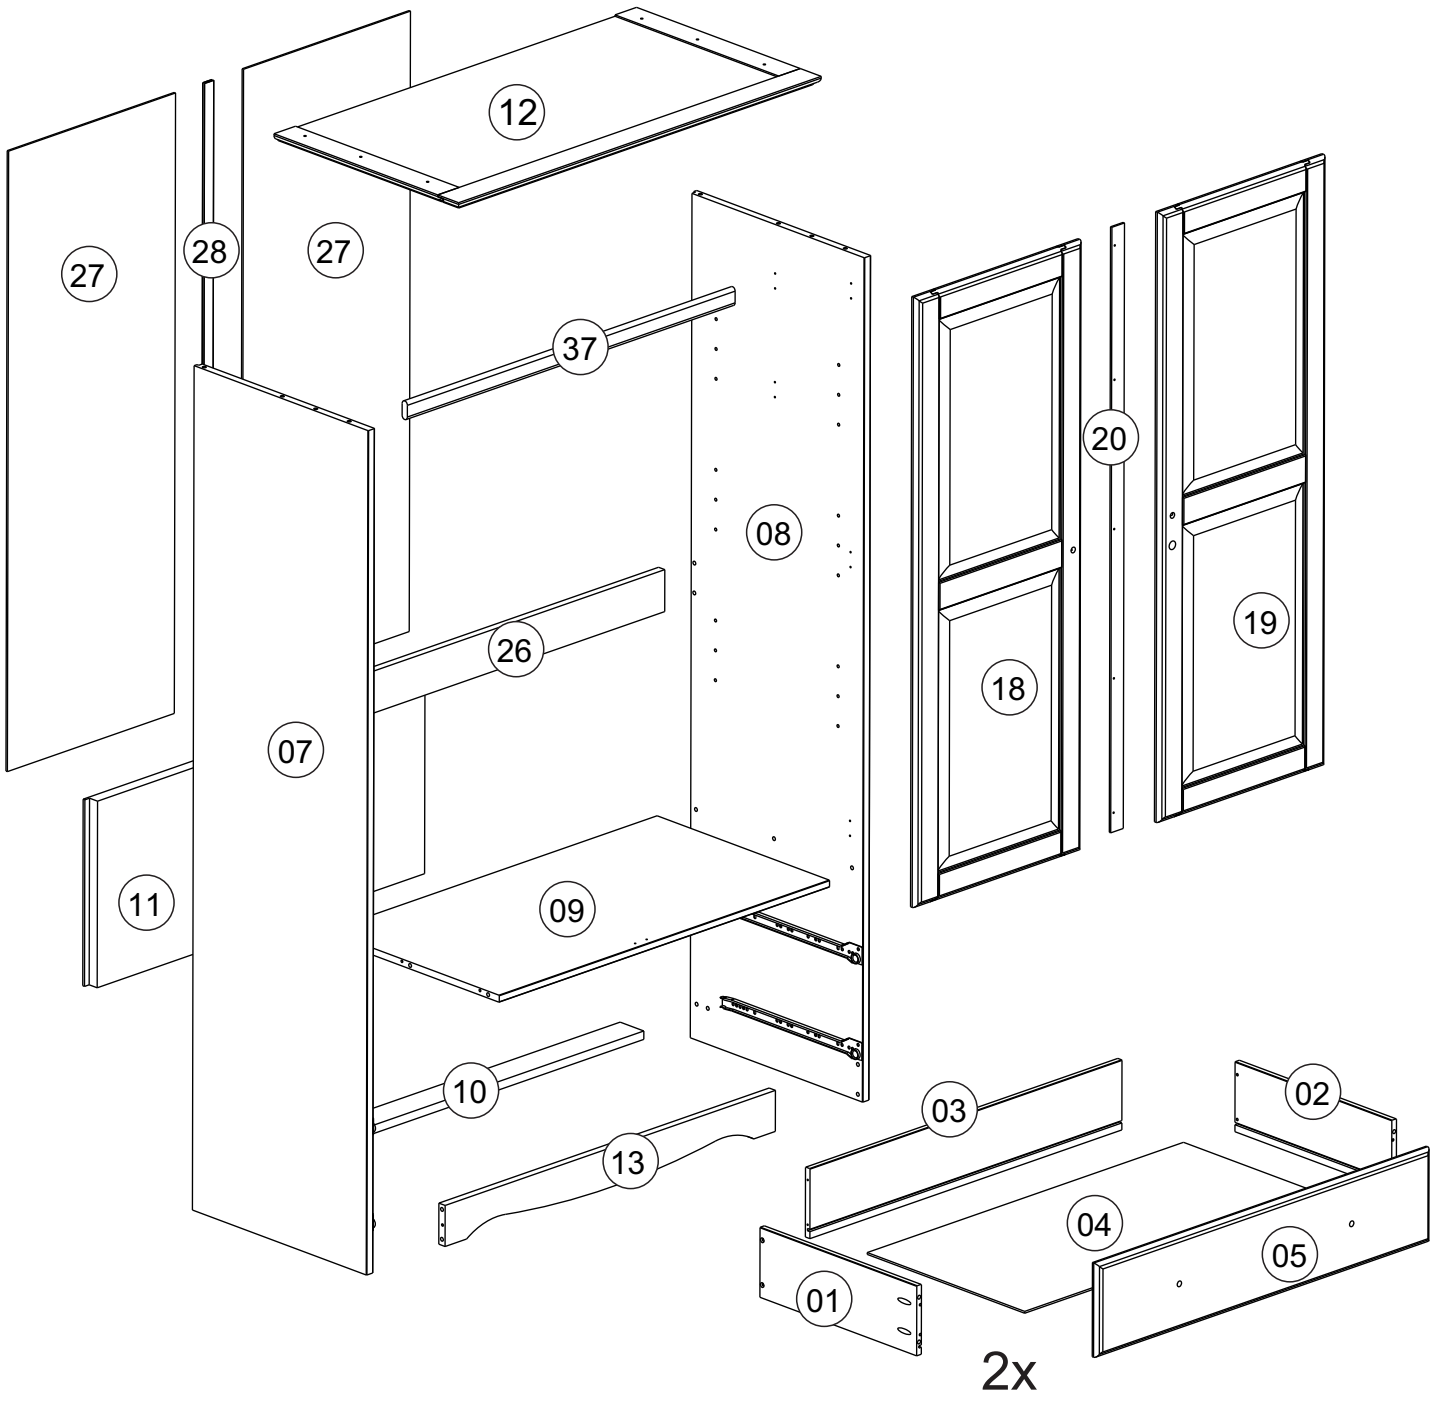

SCREWS ARE SHOWN IN ACTUAL SIZE

A1	 4,0x30	32+1
A8	 3,0x20	02+1
A16	 4,0x40	06+1
A41	 4,0x30	06+1
A42	 4,0x14	12+1
A44	 3,5x14	41+2
C2	 8,0x25	32+1
D3		02
D10		02
E17	 450mm - 17 3/4"	02
E18	 450mm - 17 3/4"	02
F1		01
F2		01
F3		02
F10		06

G1	 10x10	50
H1		06

FURNITURE ANTI-TIP KIT		
A8	 3,0x20	02+1
F8		02
F9		01


WARNING:
CHOKING HAZARD
Small Parts.
Adult Supervision Required.
Not for children under 3 years old.


WARNING:


FURNITURE TIPOVER CAN RESULT IN SERIOUS INJURY OR DEATH


This wardrobe includes tipover-prevention hardware that MUST BE ATTACHED TO THE WALL per the assembly instructions.


01)

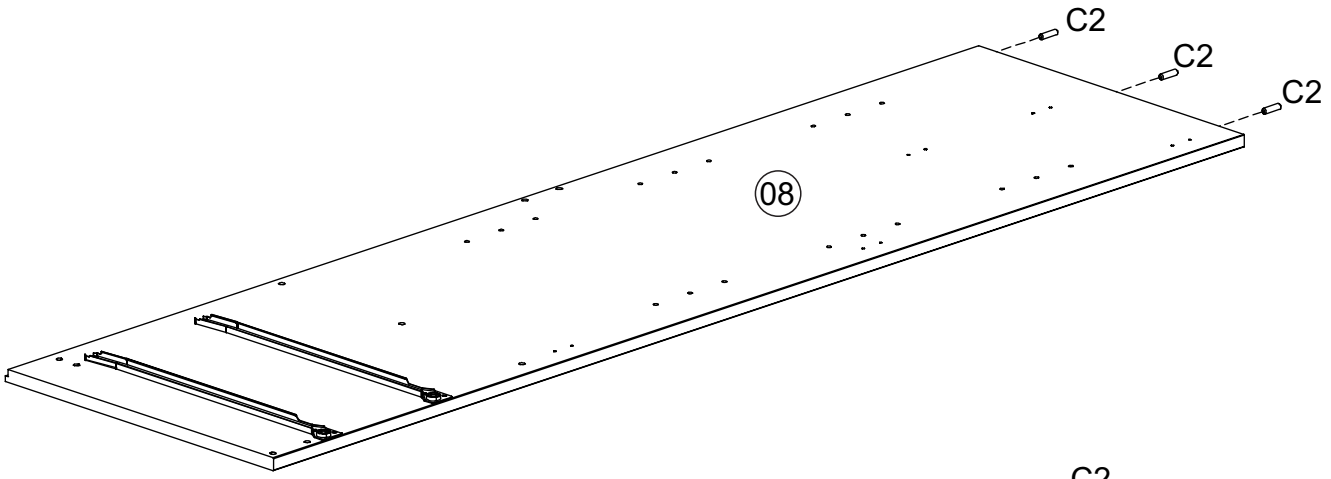


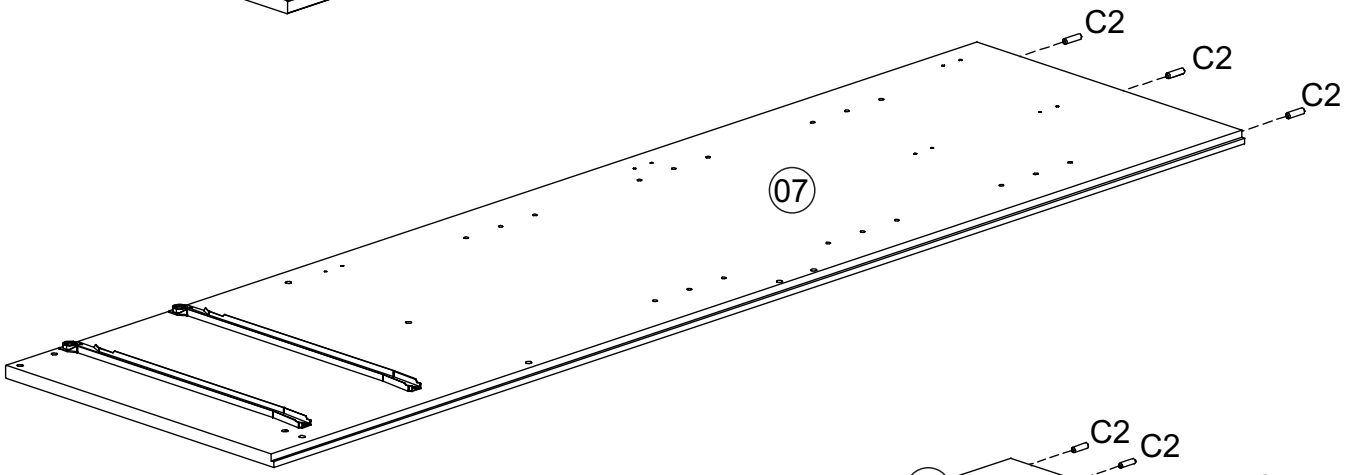


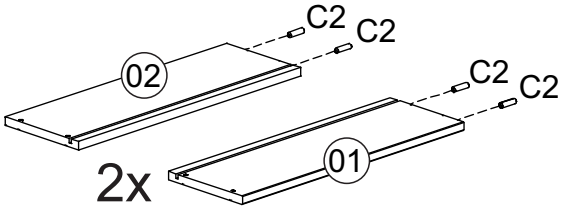


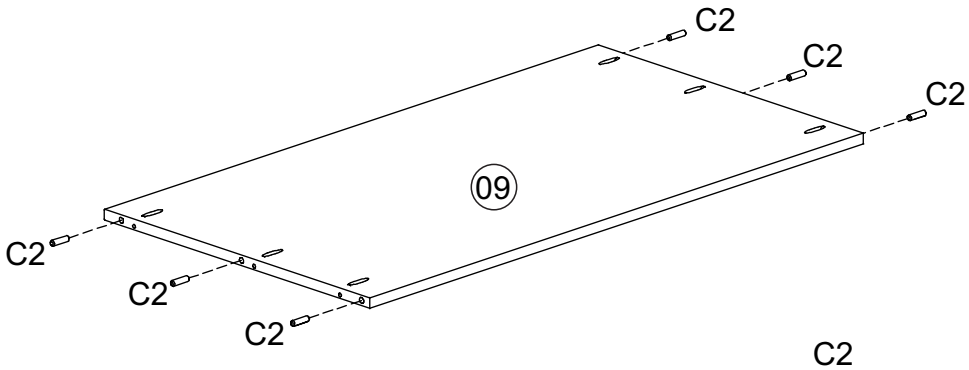

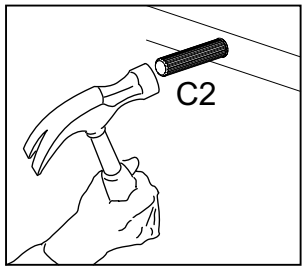

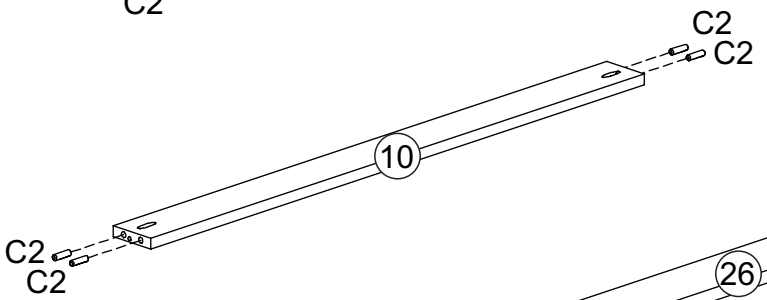


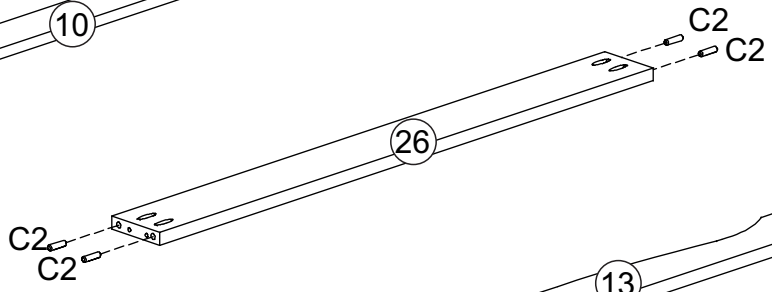

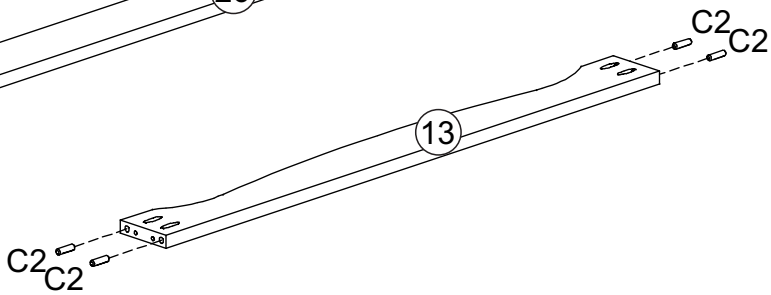

C2	8,0x25	32


02)

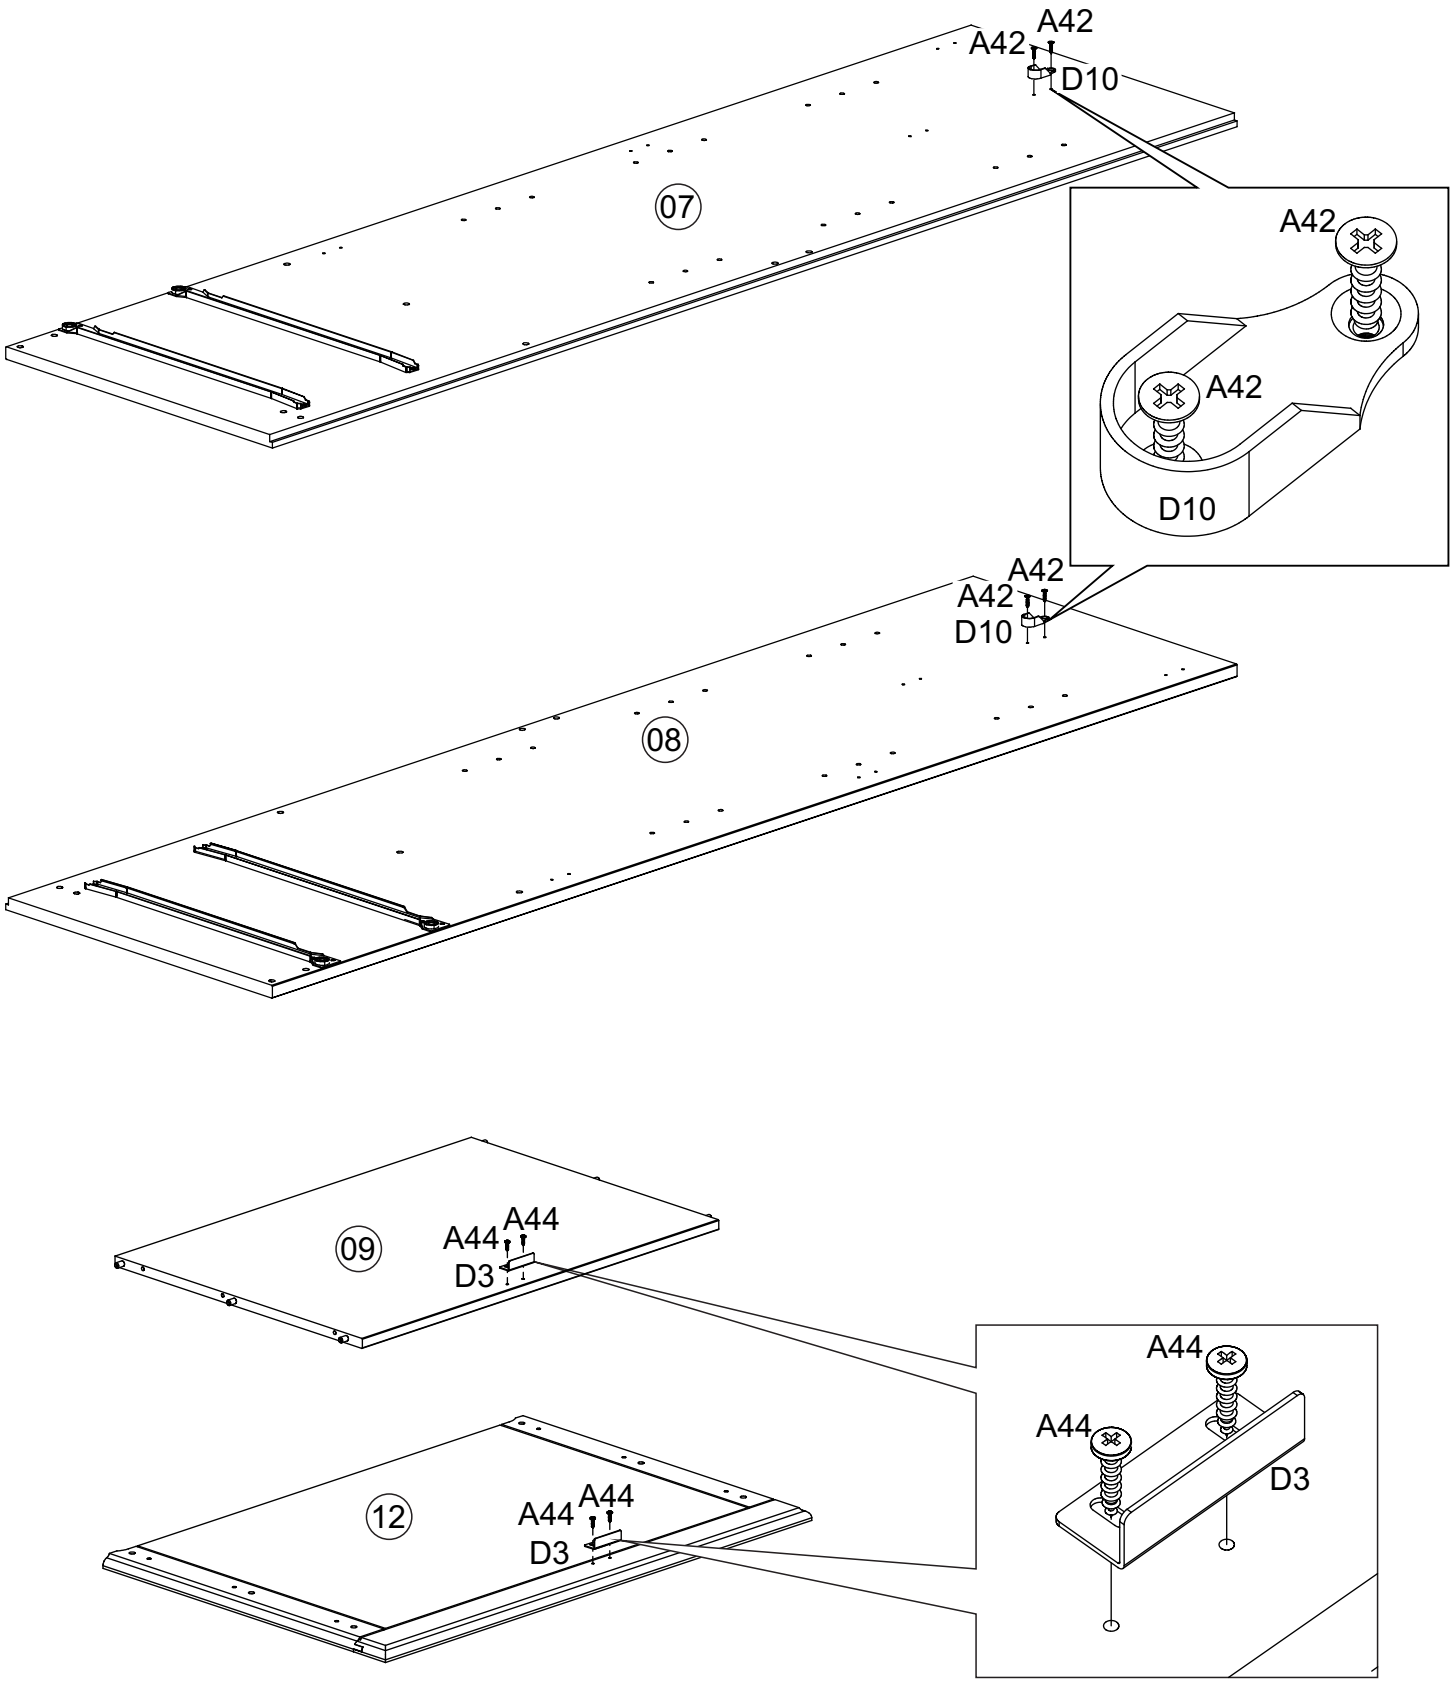

A42	4,0x14	04
A44	3,5x14	04


D3		02
D10		02

03)

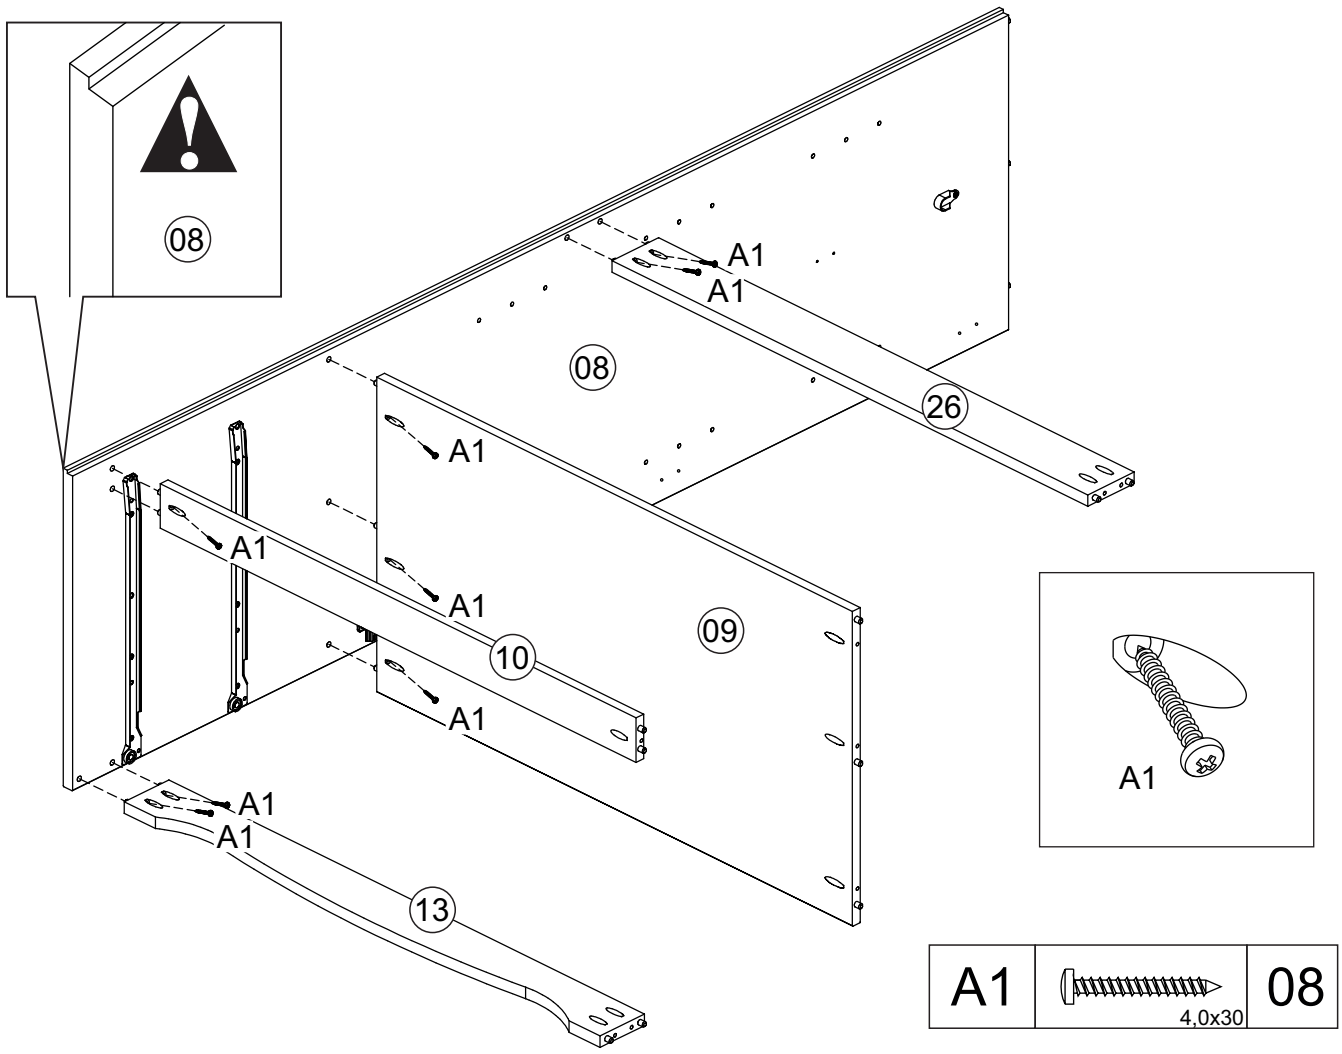


A1	4,0x30	08

04)

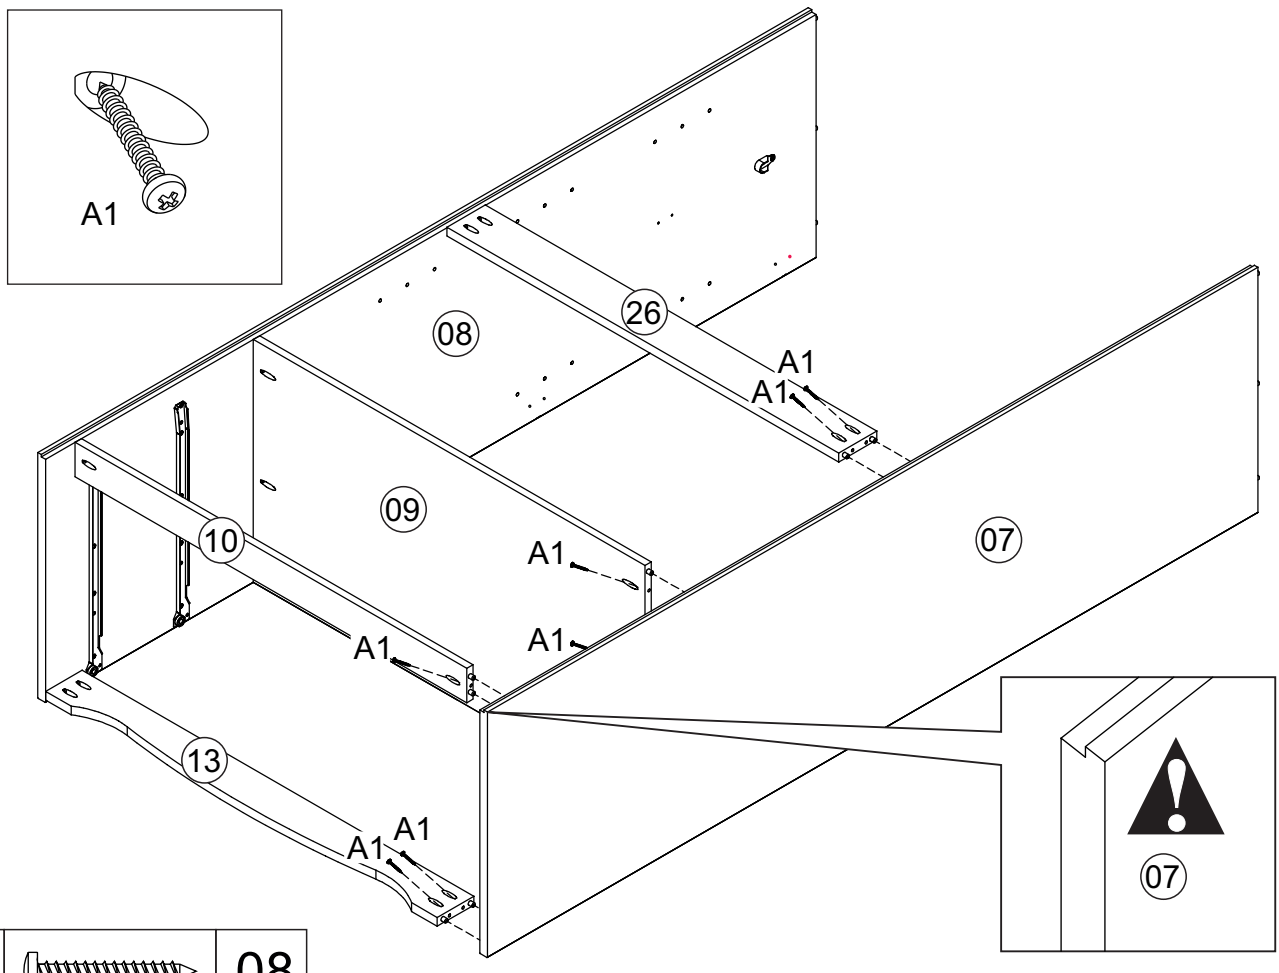


A1	4,0x30	08

05)

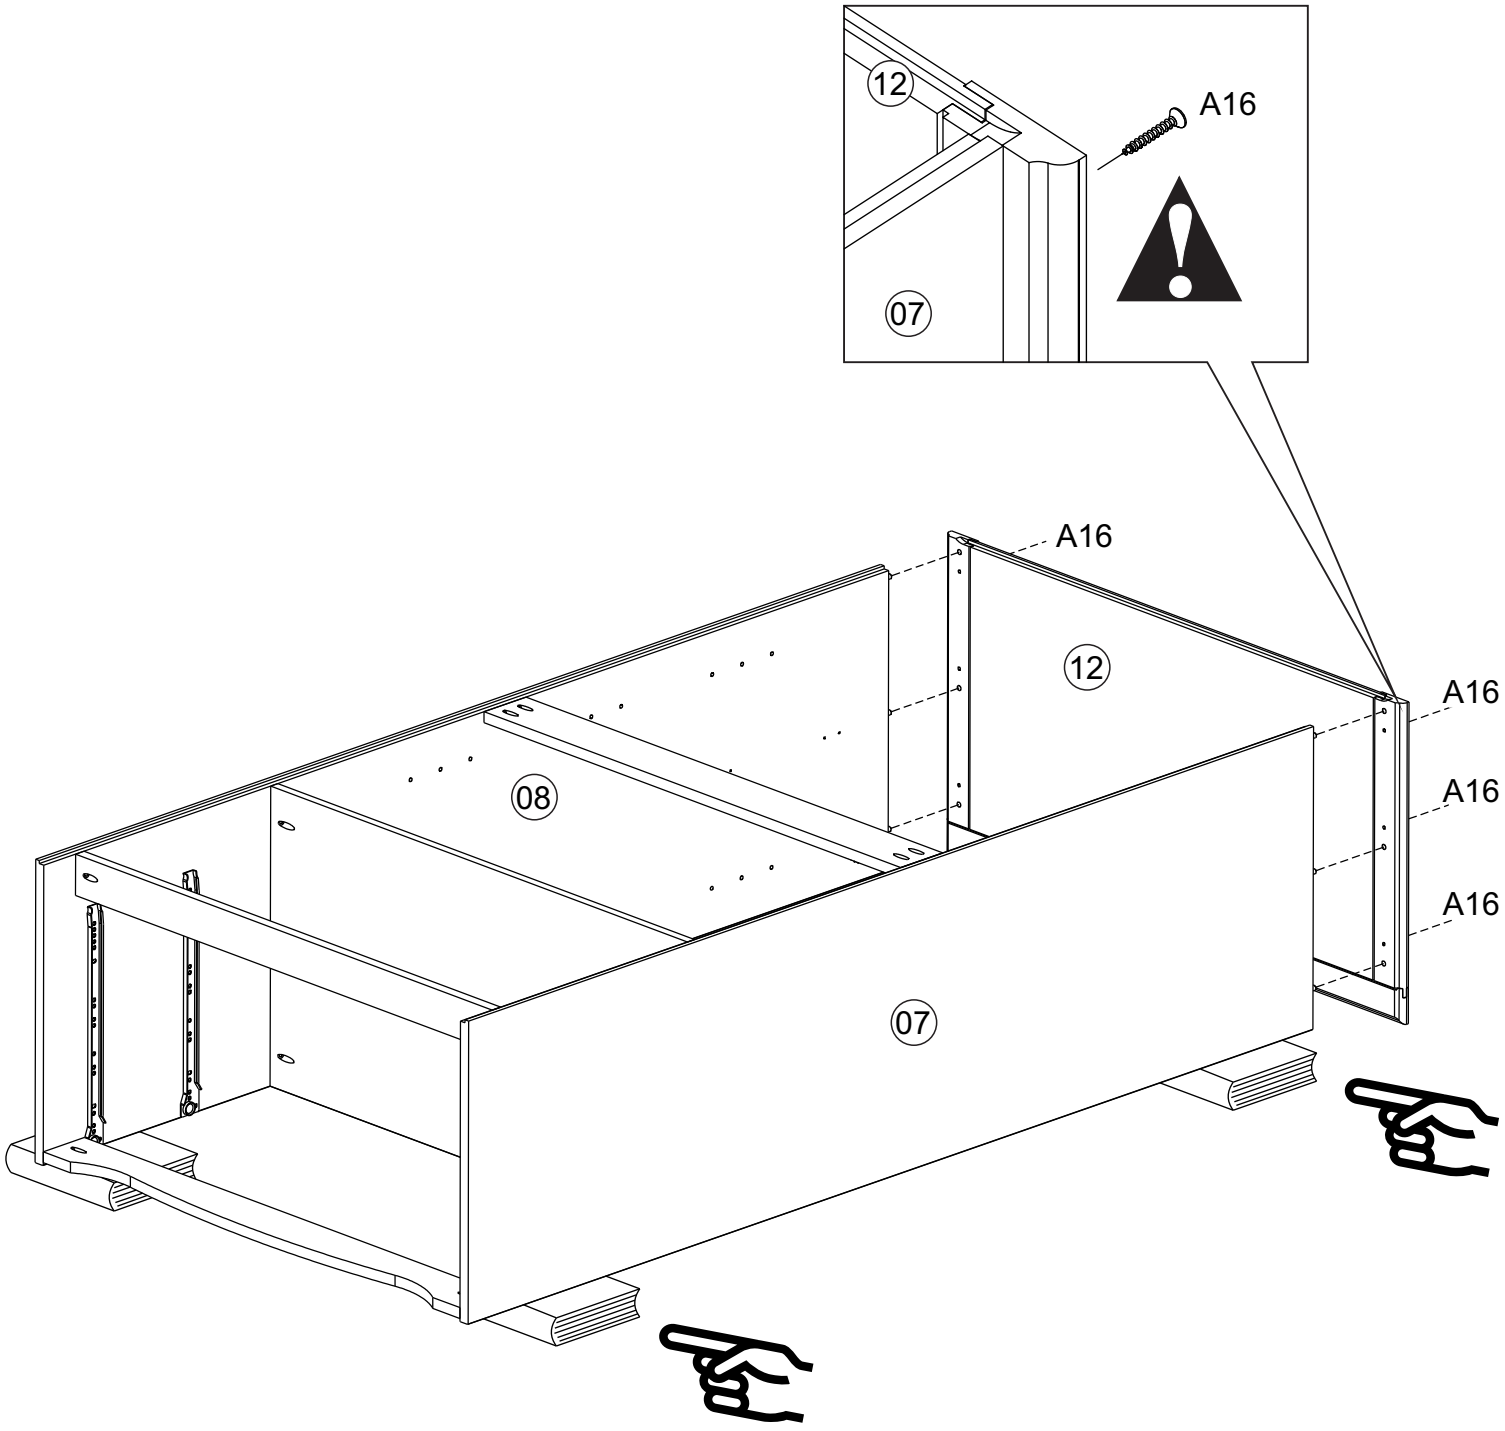


A16	4,0x40	06

06)

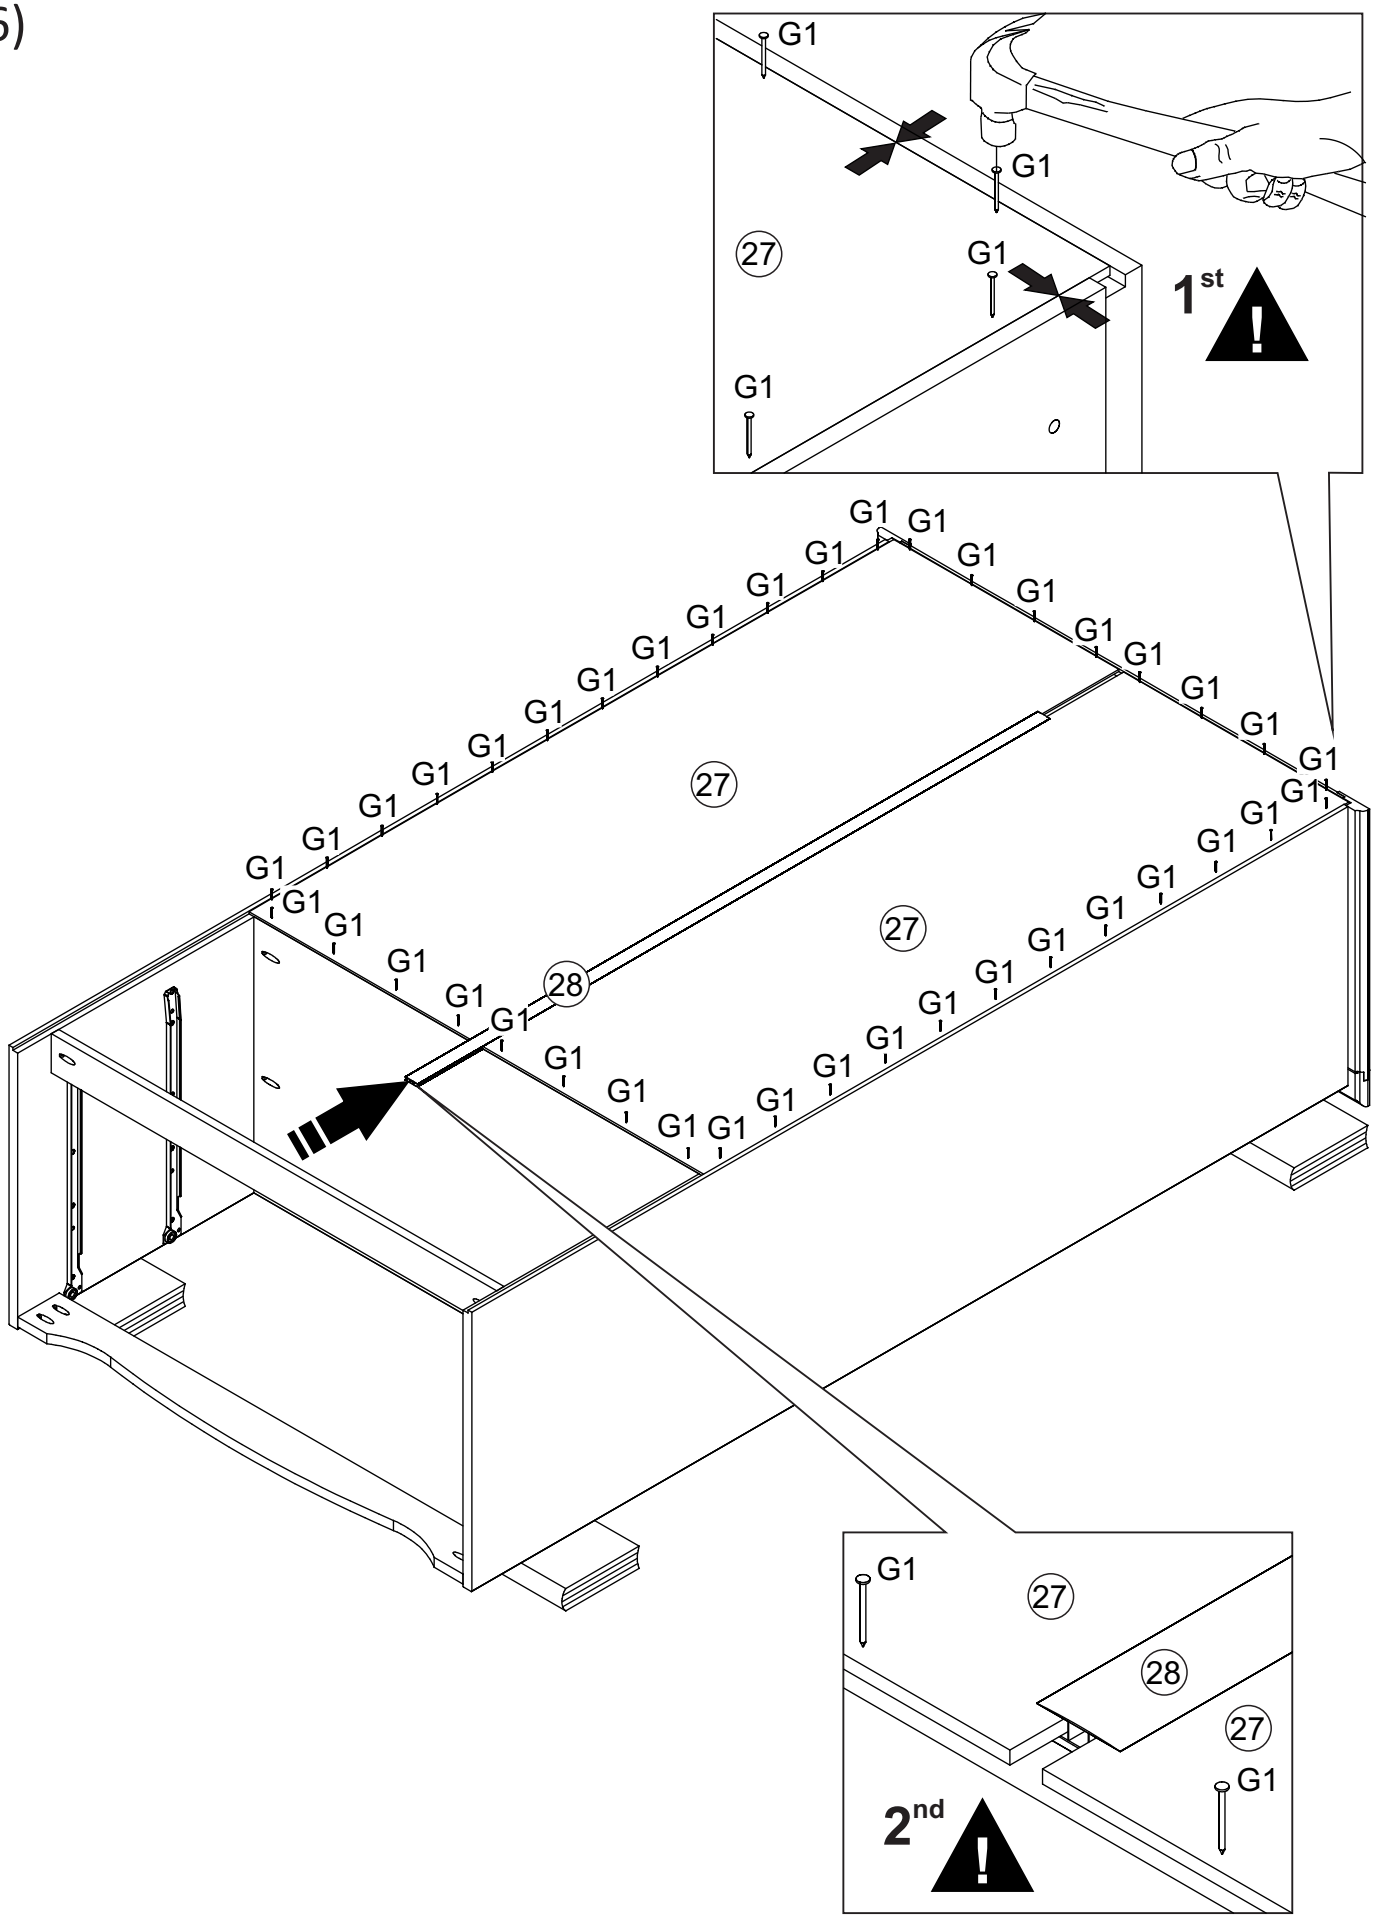


G1	10x10	40

07)

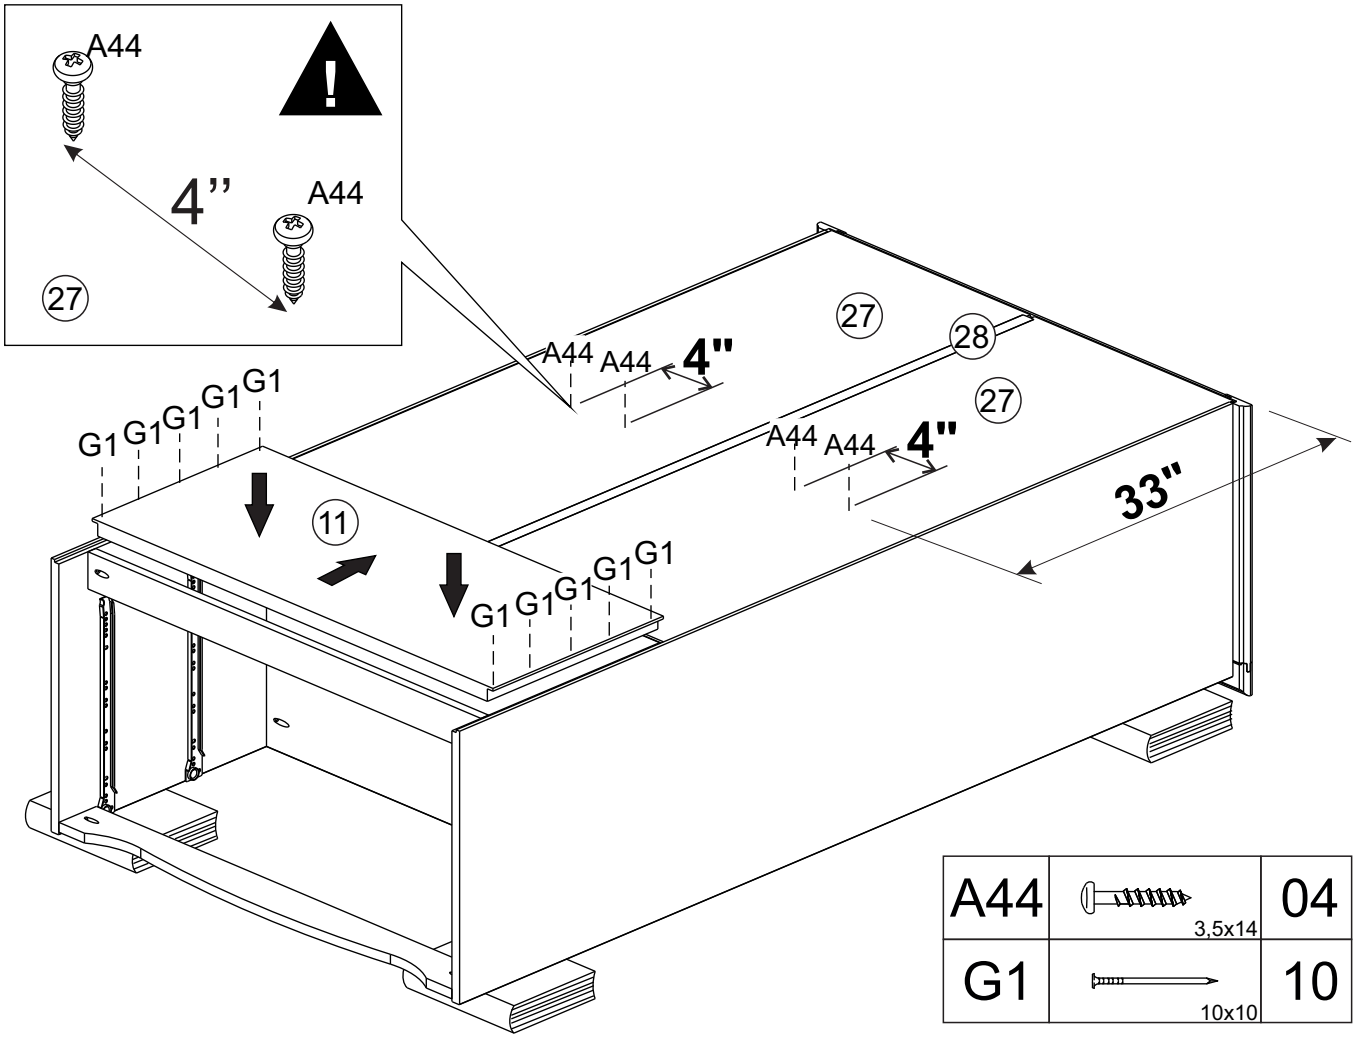

A44	3,5x14	04
G1	10x10	10


08)

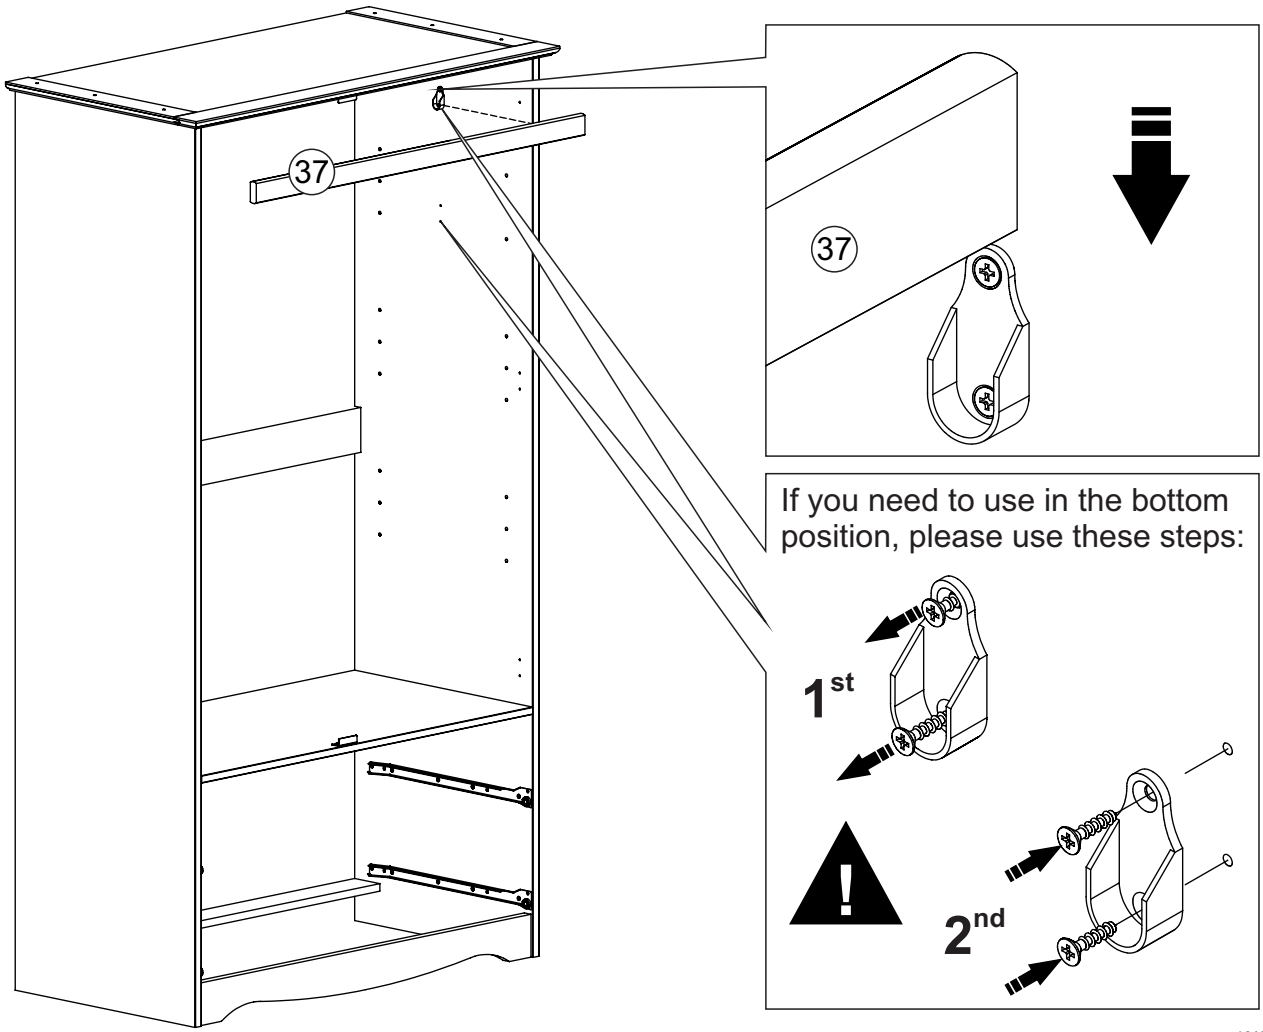


09)

Attach hinge (F10) to hinge plate if it comes separated.


Push hinge against plate until it clicks.

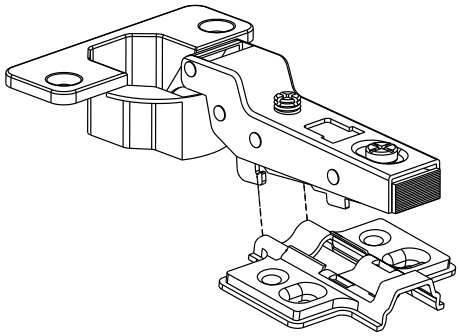


F10

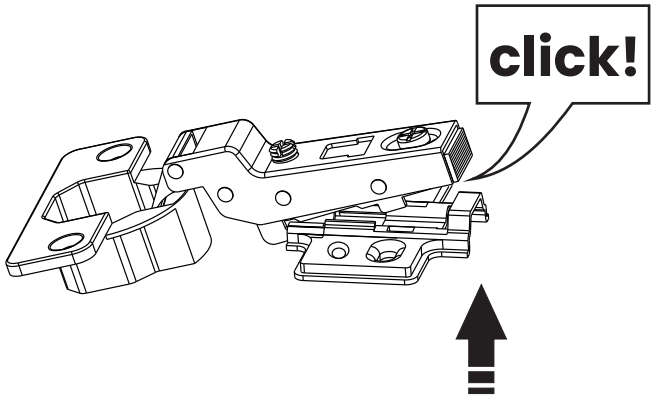


10)

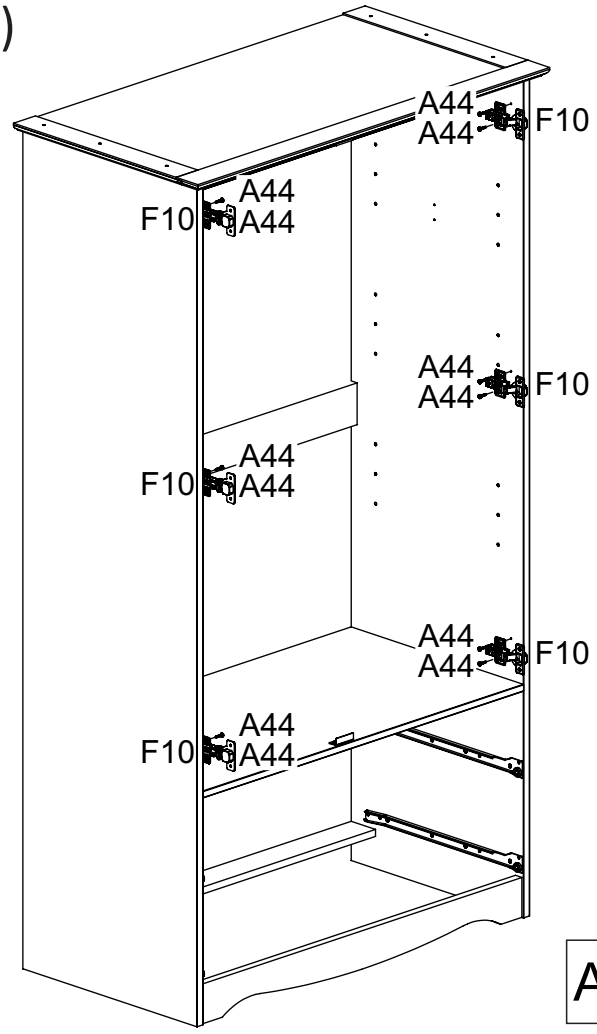

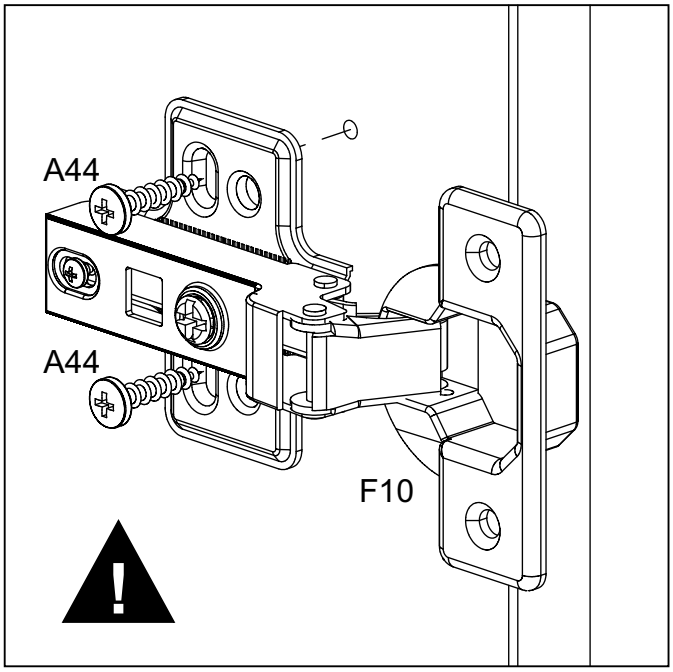

A44	3,5x14	12
F10		06


11)

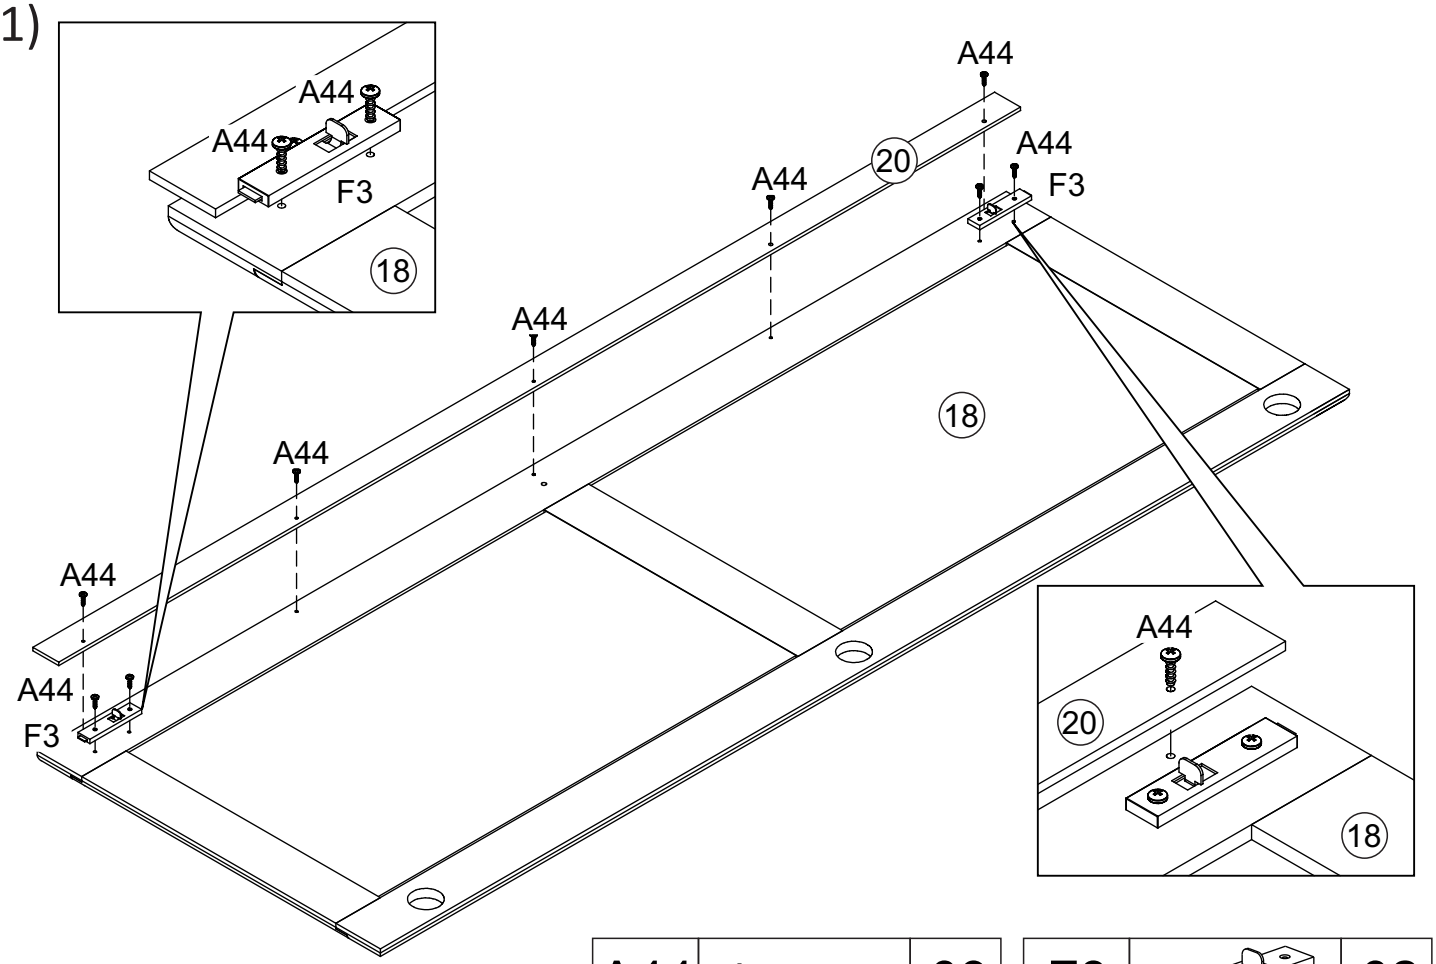

A44	3,5x14	09

F3	02


12)

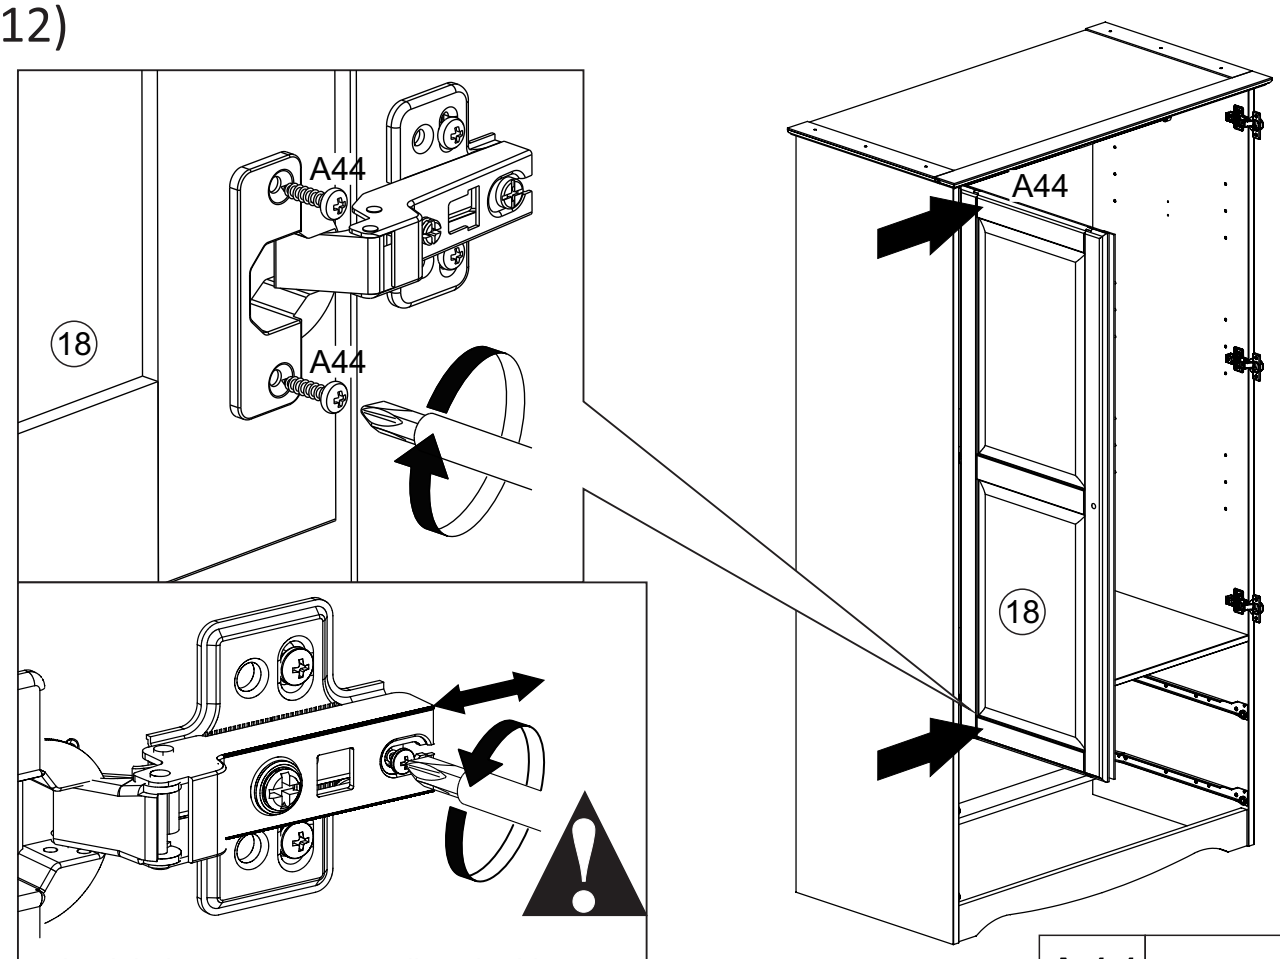



It might be necessary to adjust the hinges (F10) before hanging the doors.

A44	3,5x14	06

13)

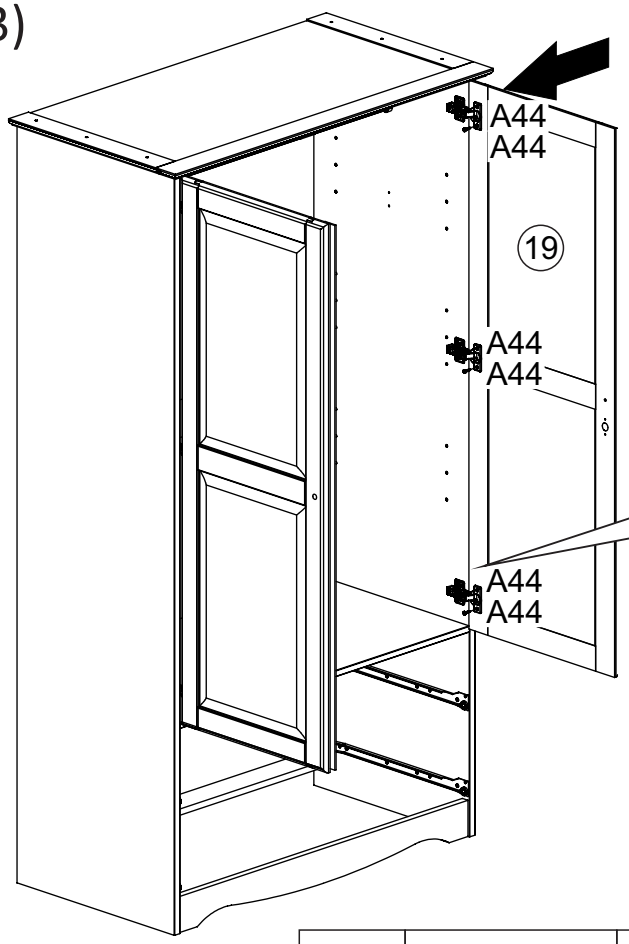

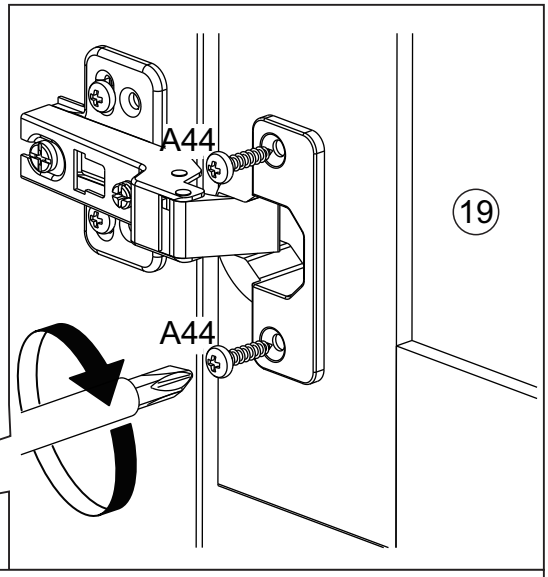


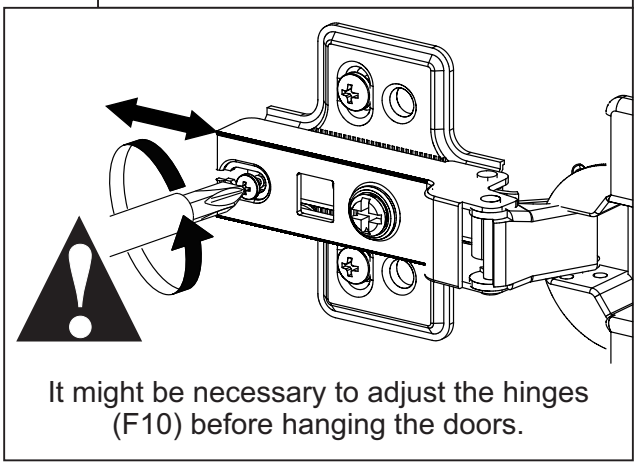



It might be necessary to adjust the hinges (F10) before hanging the doors.

A44	3,5x14	06

14)

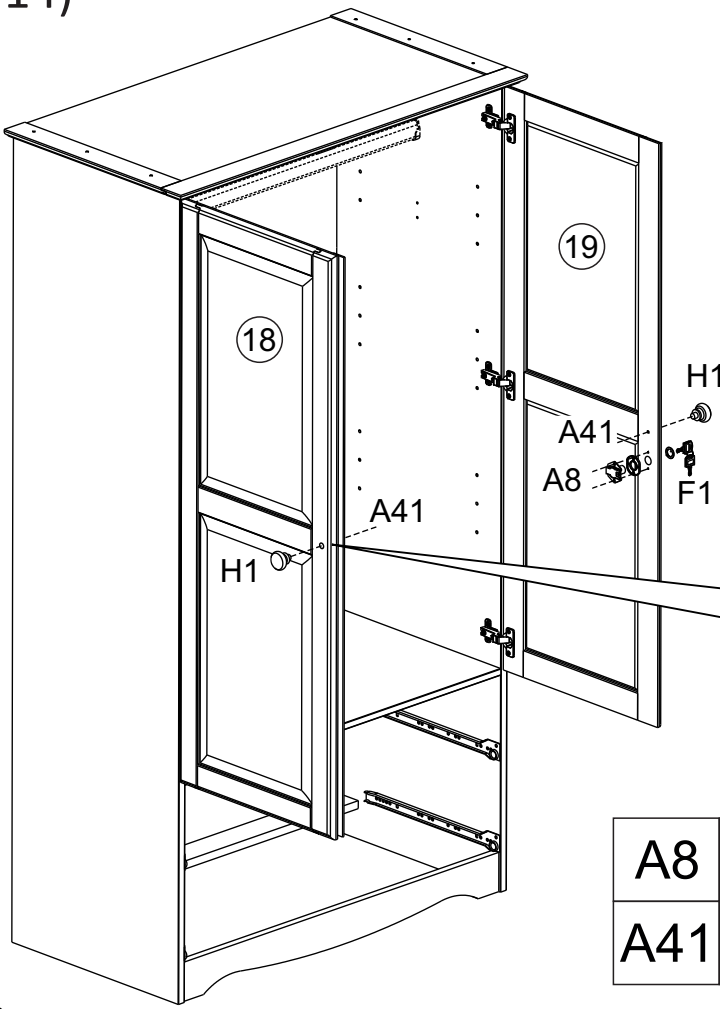

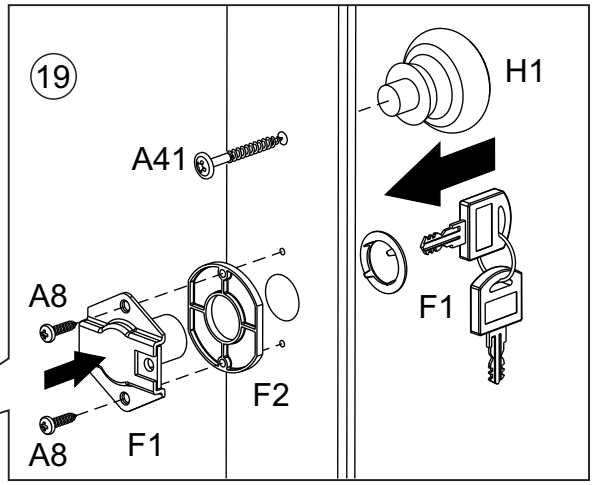


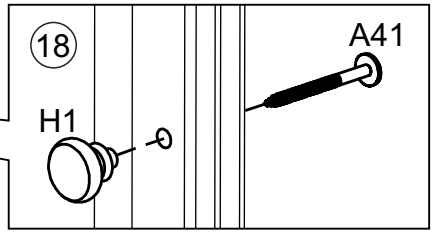



A8	3,0x20	02
A41	4,0x30	02


F1		01
F2		01
H1		02


15) HINGE ADJUSTMENT GUIDE.

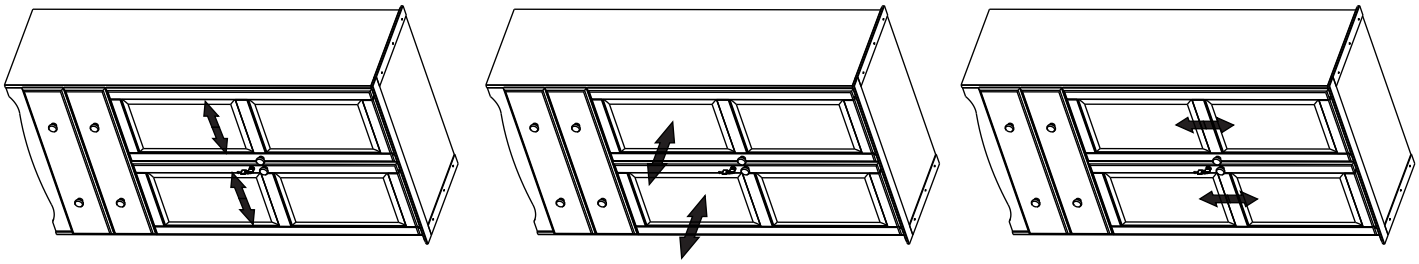


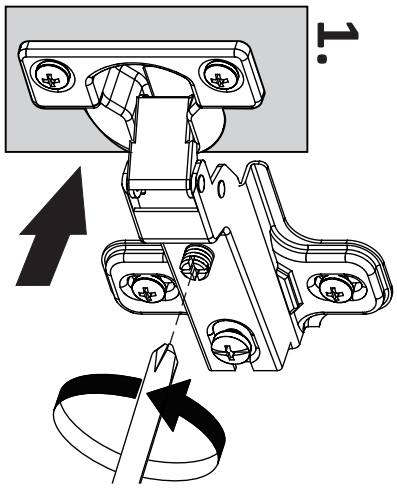


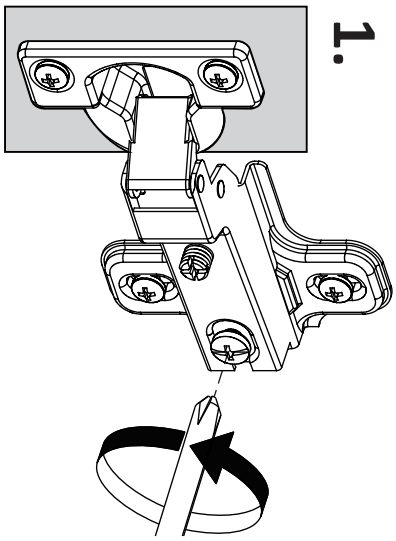


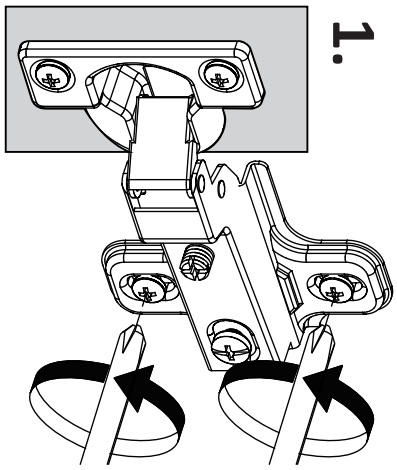


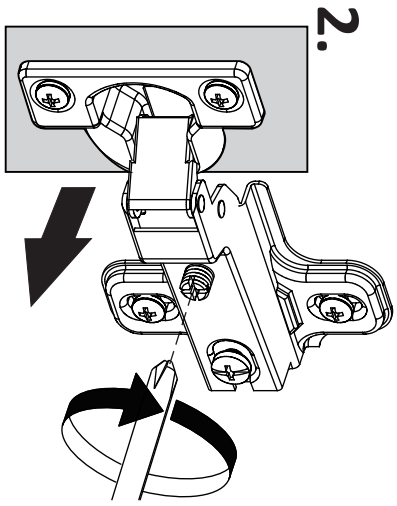

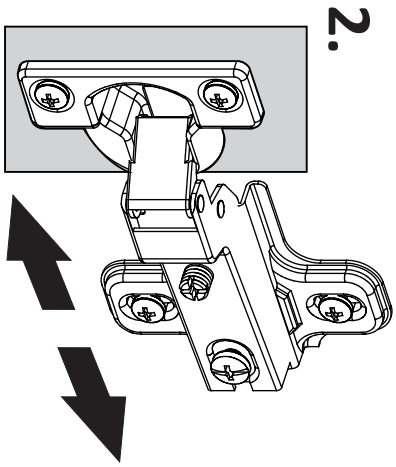


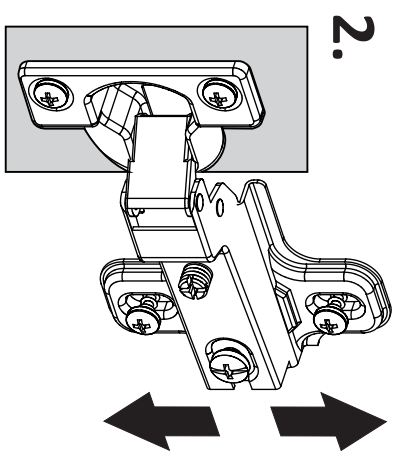


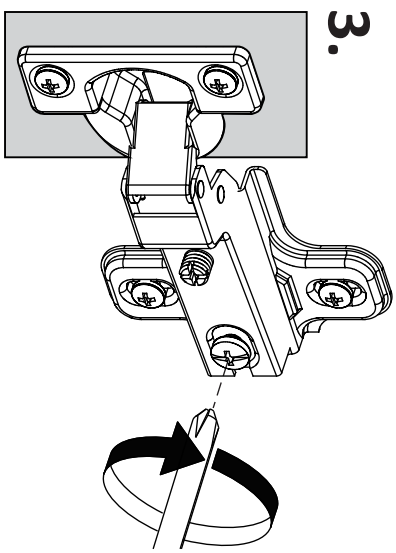


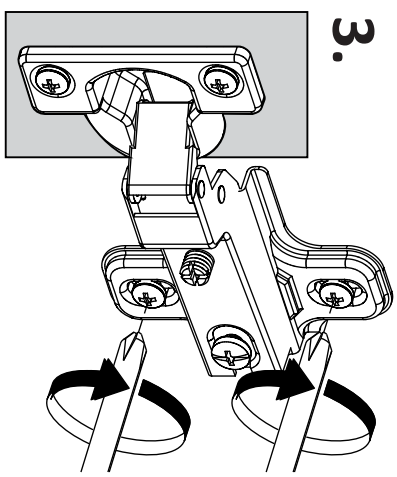



16) 2x

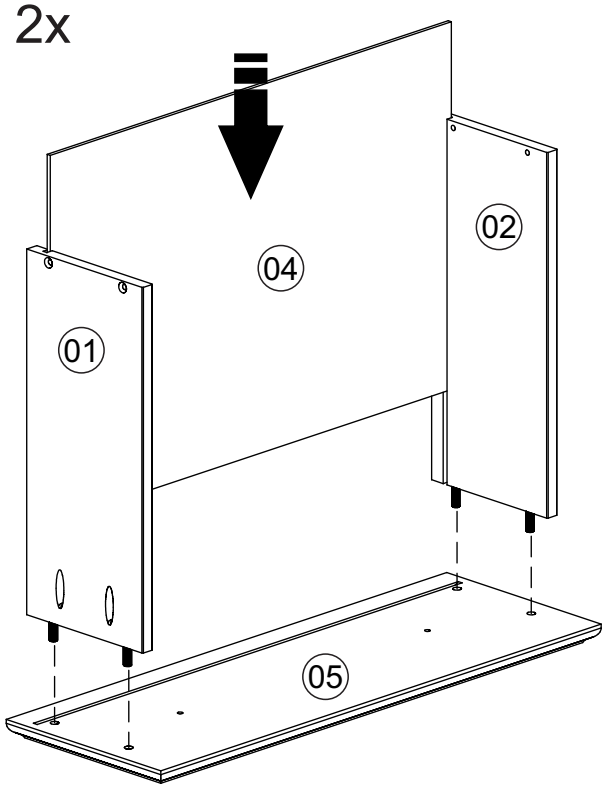

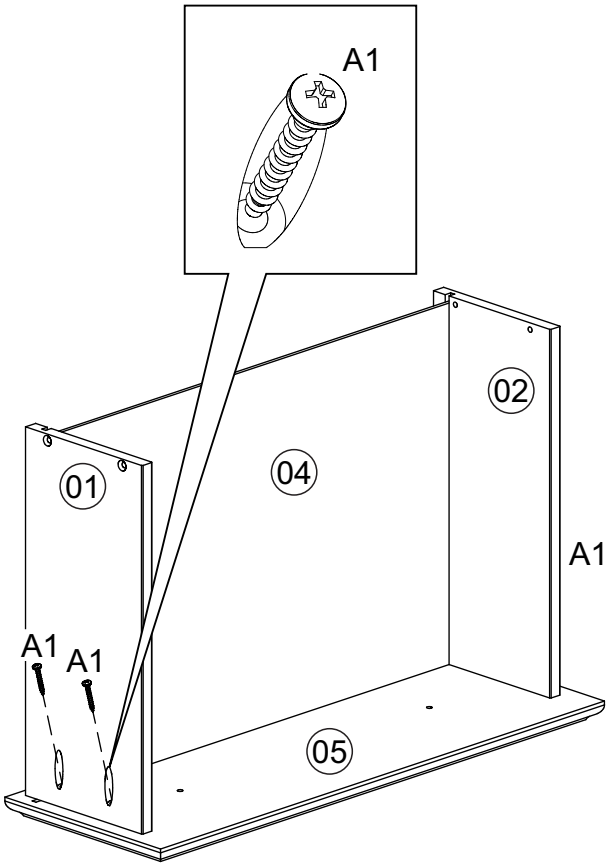

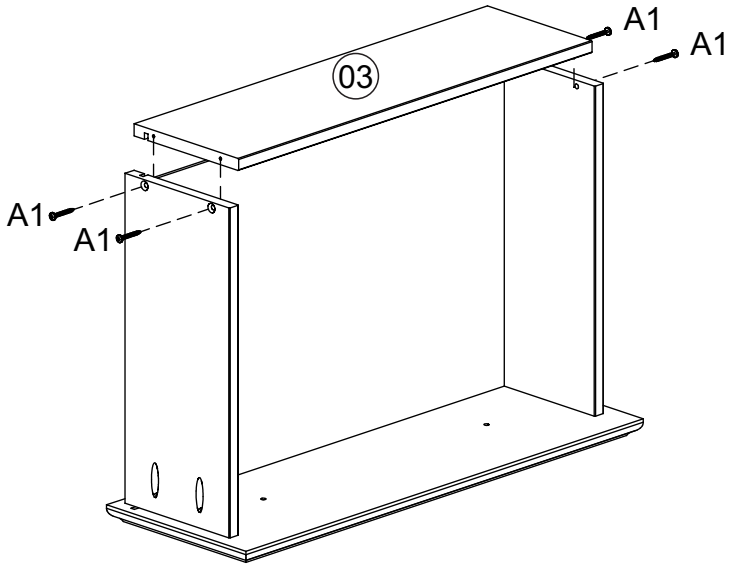


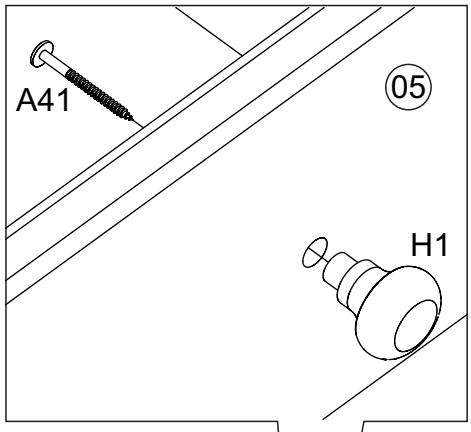


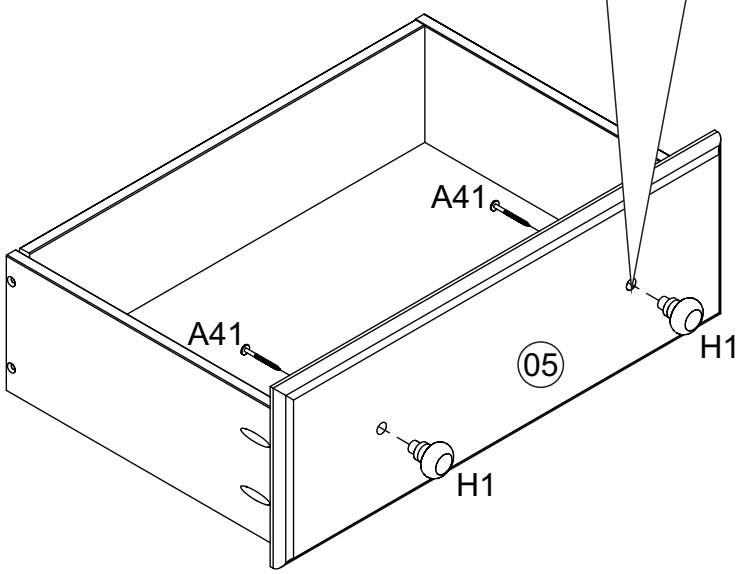


A1	4,0x30	16
A41	4,0x30	04
H1		04

17) 2x

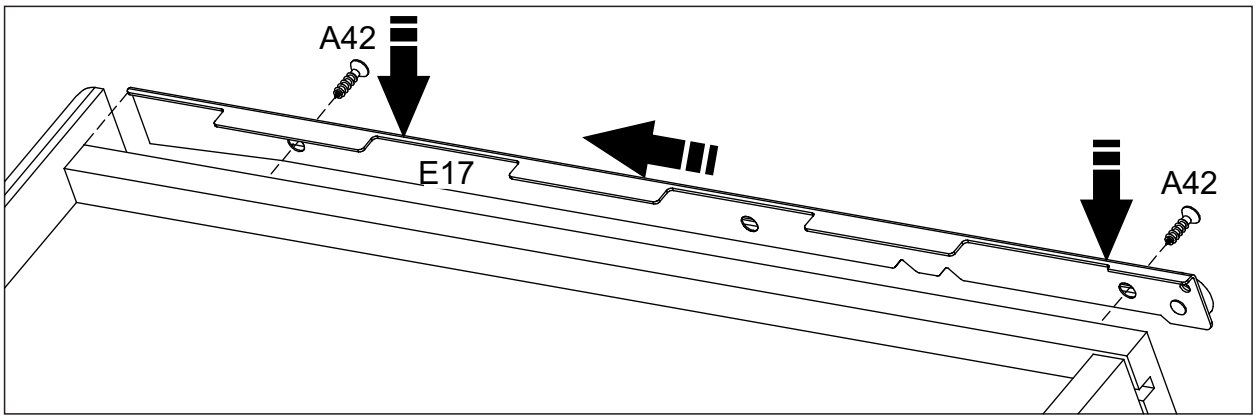


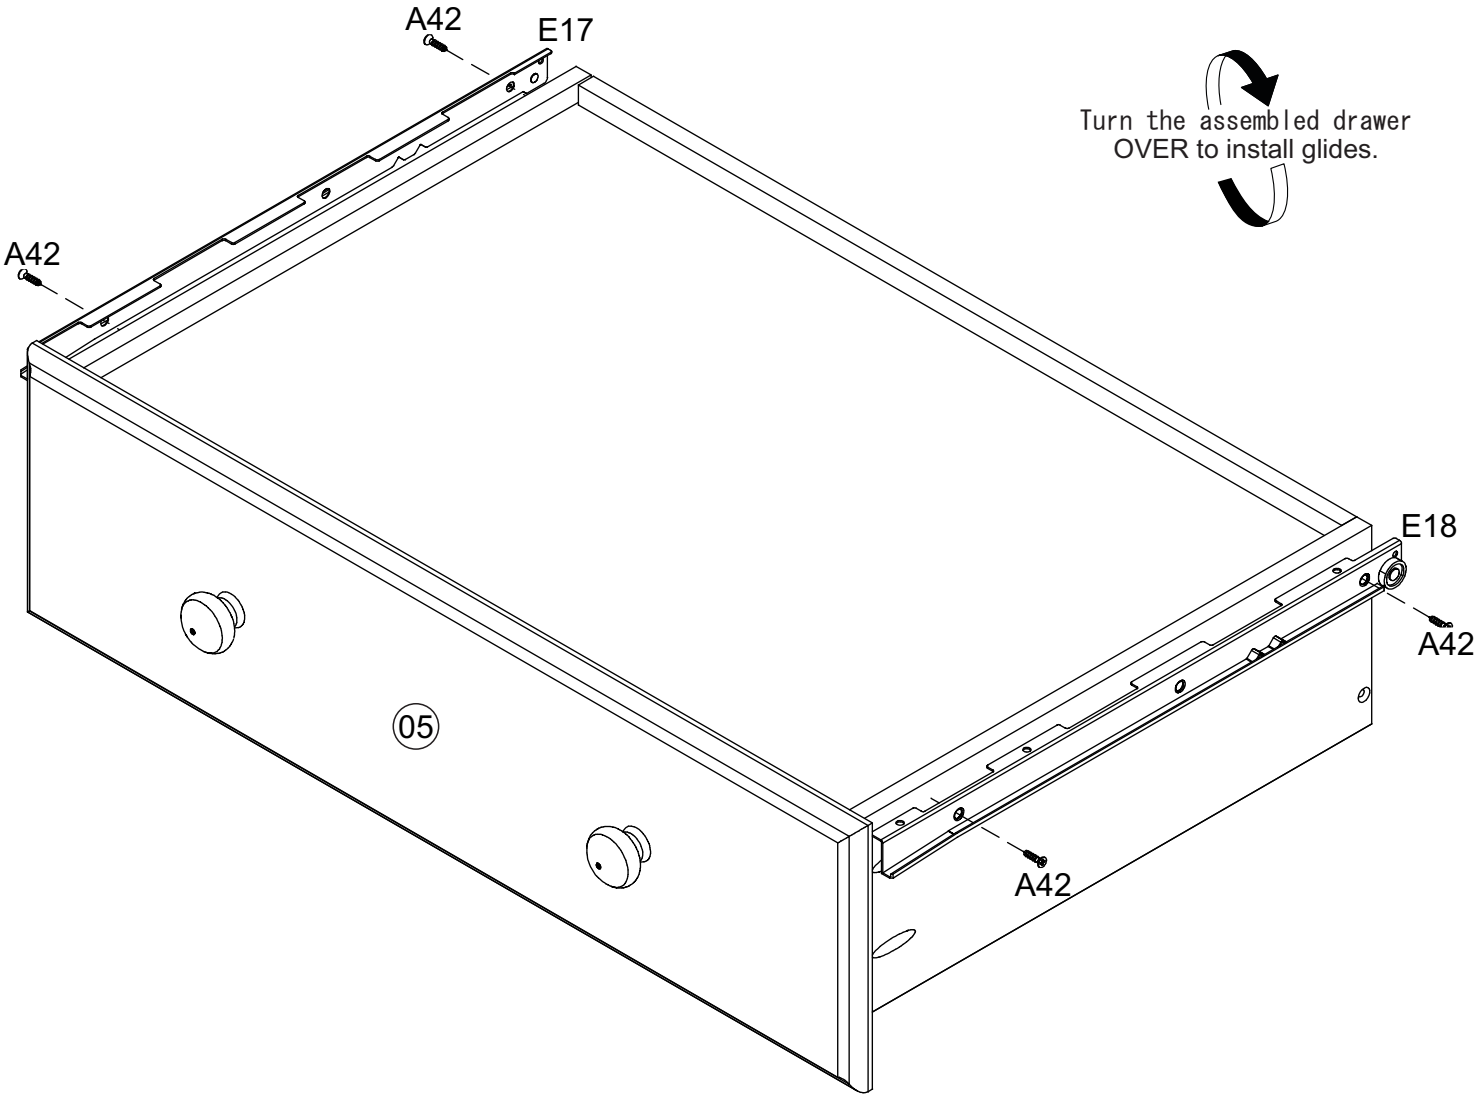

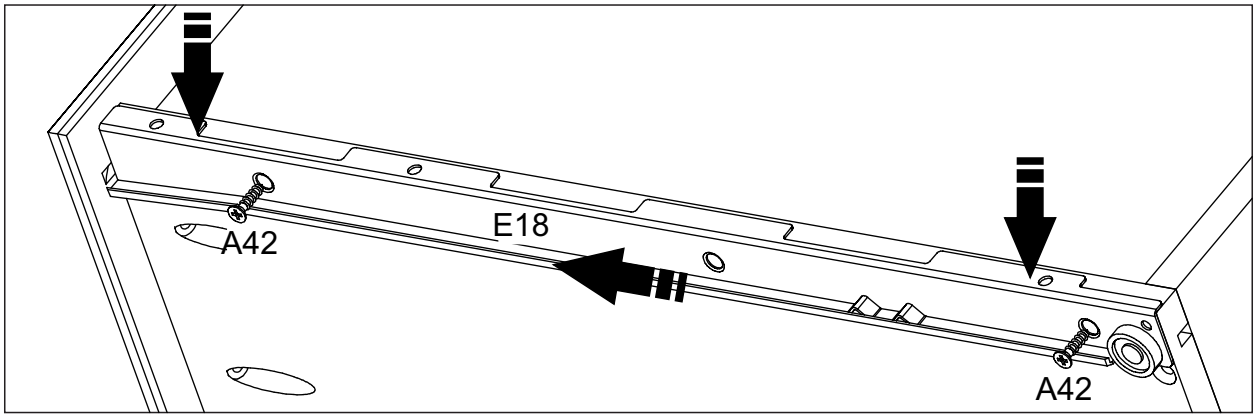

A42	4,0x14	08
E17	Drawer RIGHT 450mm - 17 ¾"	02
E18	Drawer LEFT 450mm - 17 ¾"	02


18)

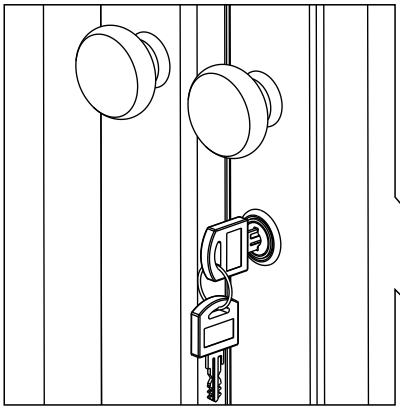


Place the labeled drawer at the top.

19)

FURNITURE TIPOVER PREVENTION KIT INSTALLATION

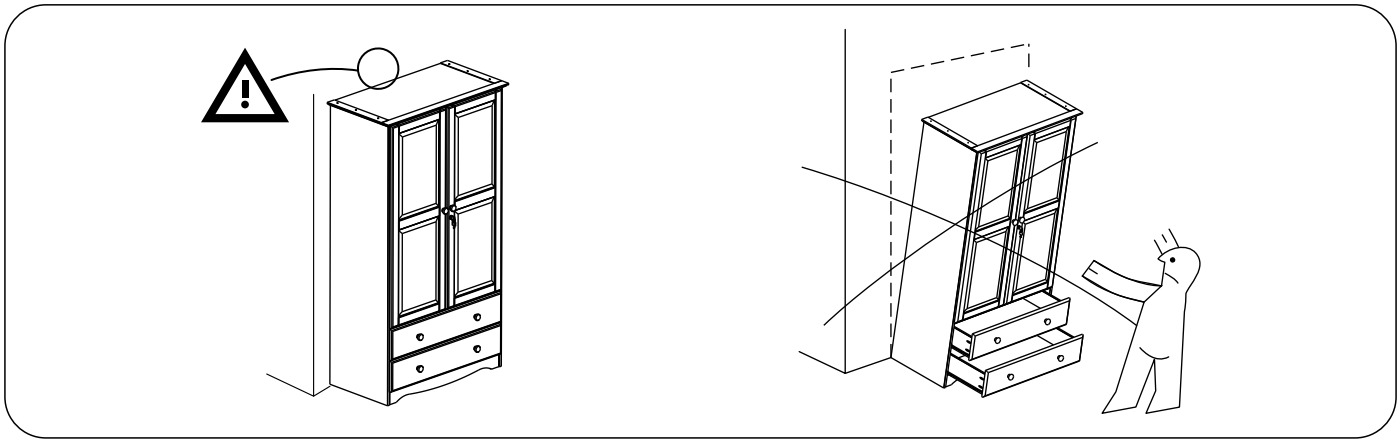

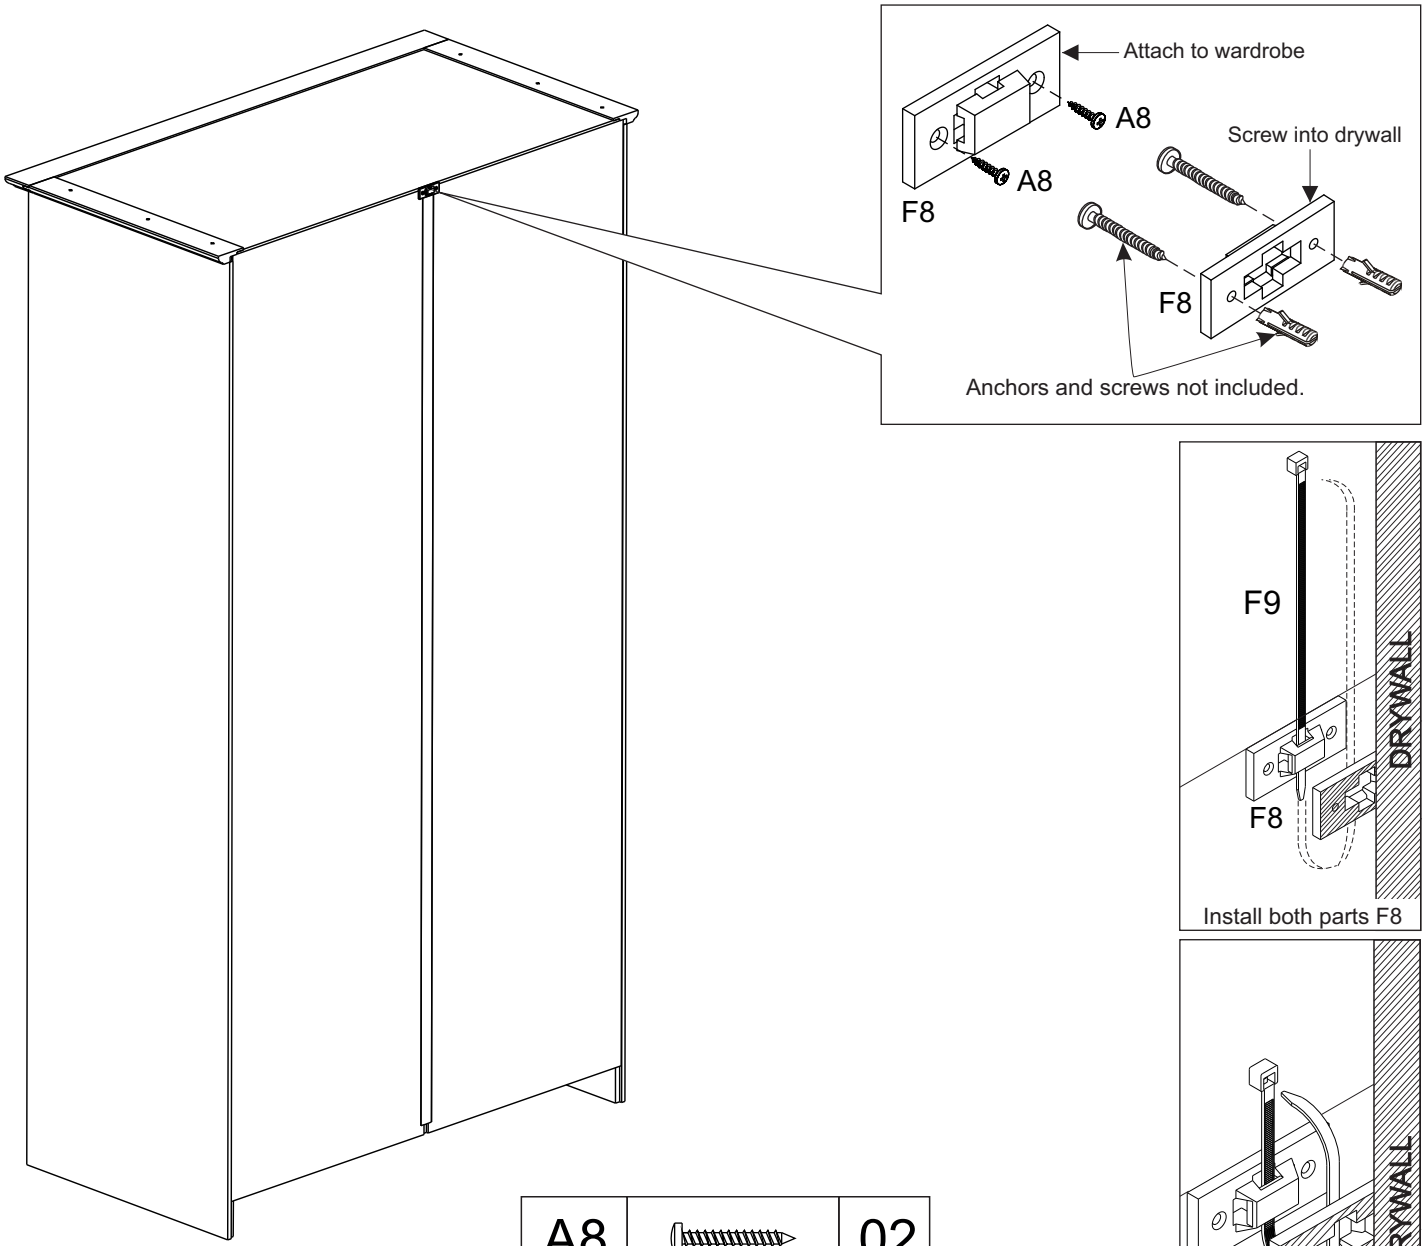

A8	3,0x20	02
F8		02
F9		01