

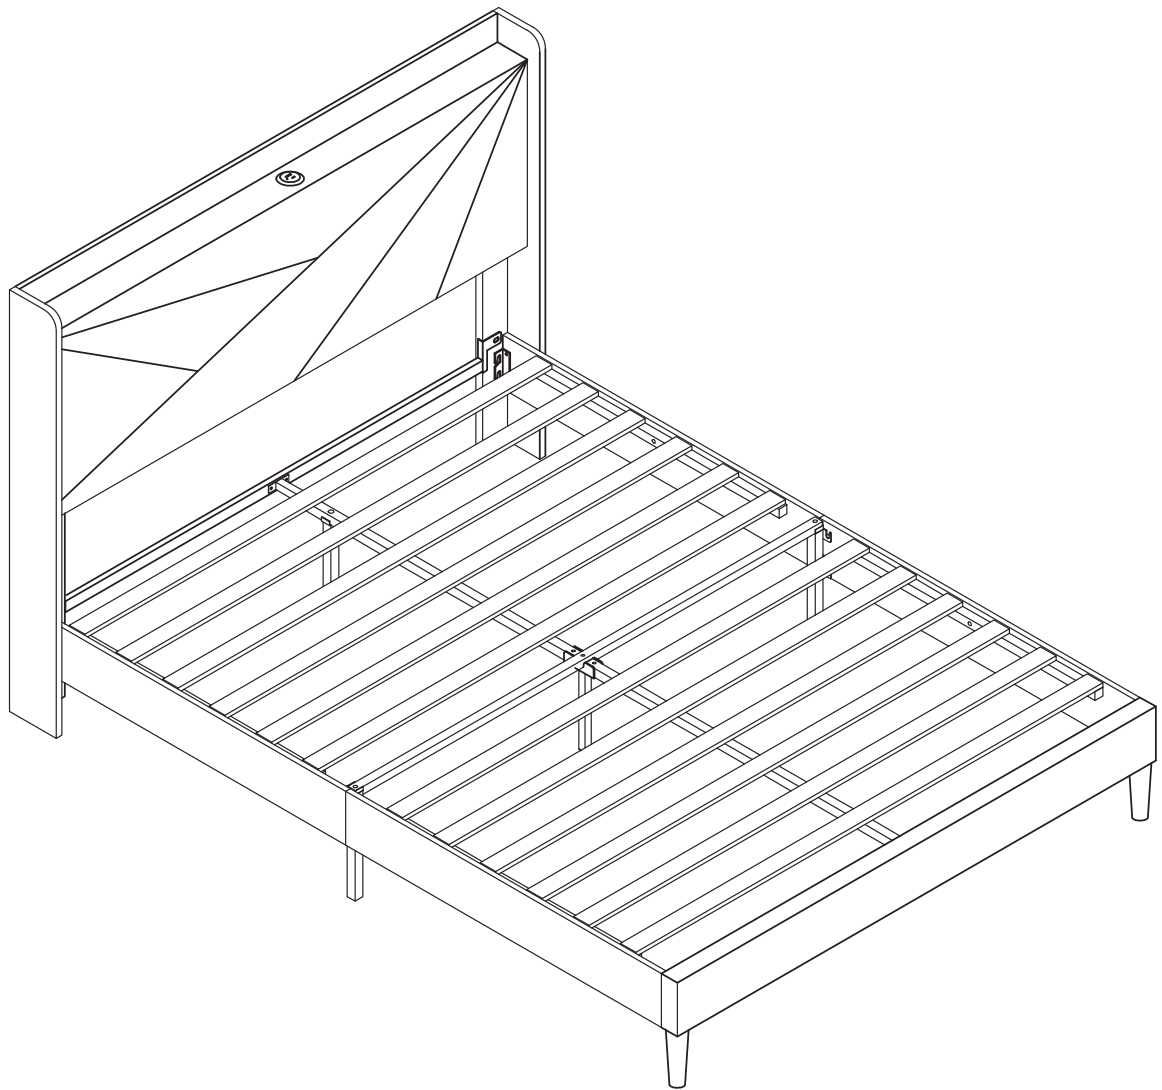
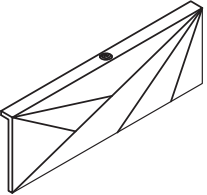
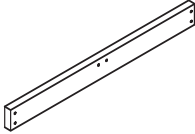
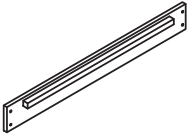
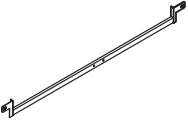


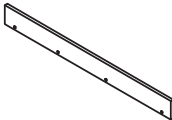
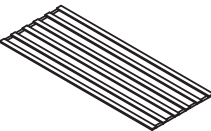





Parts List

					
1 .1pc	2 .1pc	3 .2pcs	4 .1pc	5 .1pc	6 .4pcs
					
7 .1pc	8 .1pc	9 .1pc	10 .1pc	13 .2pcs	14 .1pc
					
15 .2pcs	16 .6pcs	17 .1pc	18 .2pcs	19 .1pc	
					
M6*35 A.4pcs	M8*18 B.42pcs	M8*35 C.5pcs	M8*45 D.5pcs	M8 F.1pc	L .2pcs
					
R .2pcs					

- 1** Install part ① and part ③ together with 4 screws D.

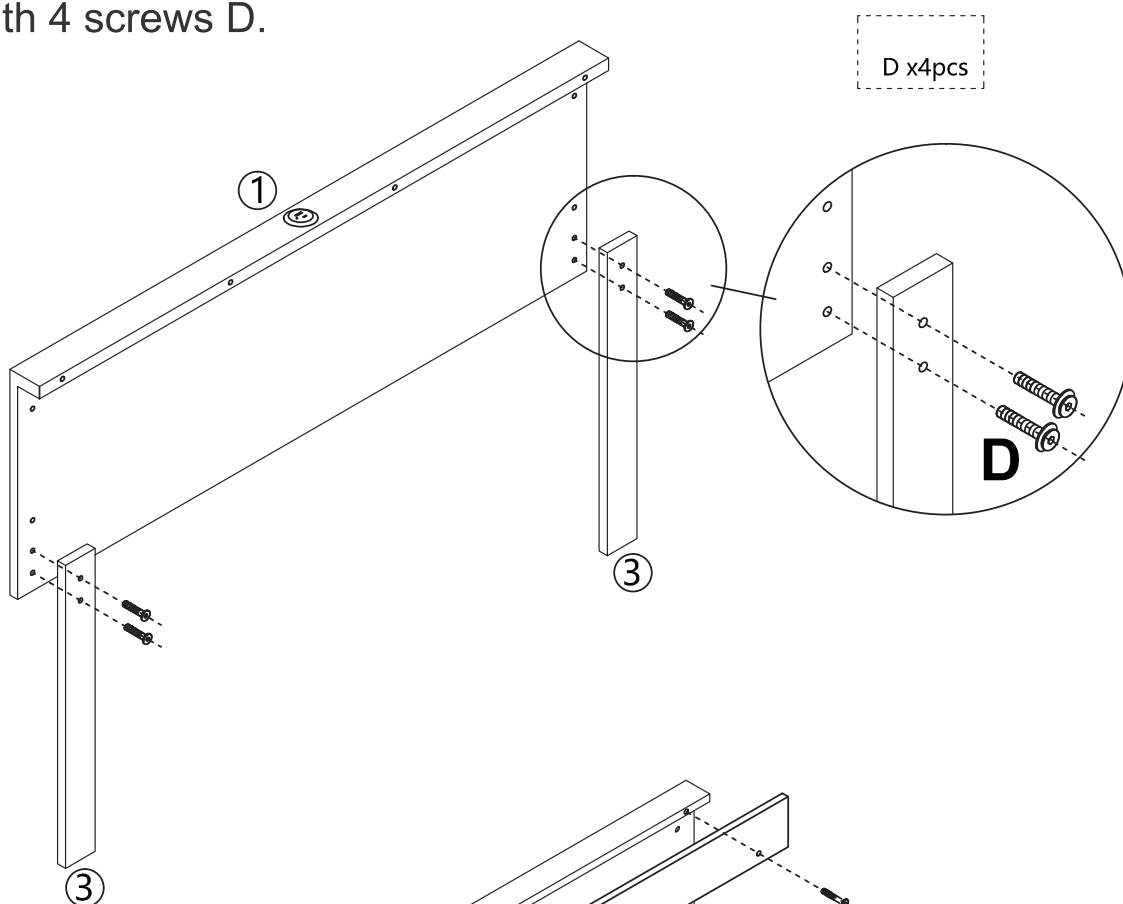

2

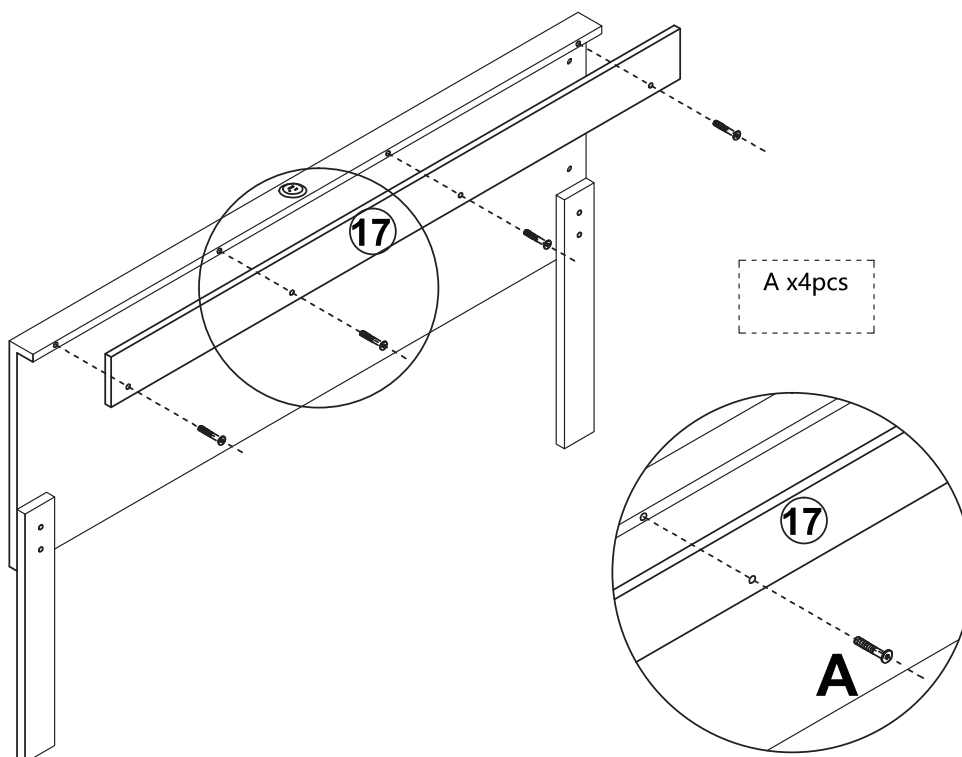


Install part ① and part ⑱ together with 4 screws A.


3

Place two parts ⑥ together, install part L with 2 screws B on one end, and also install part R on the other end, then install part ⑬ and part ⑥ together with 4 screws B.

Note: The left two parts ⑥ are also installed in this way, and after installation, two side bed boards will be finished.

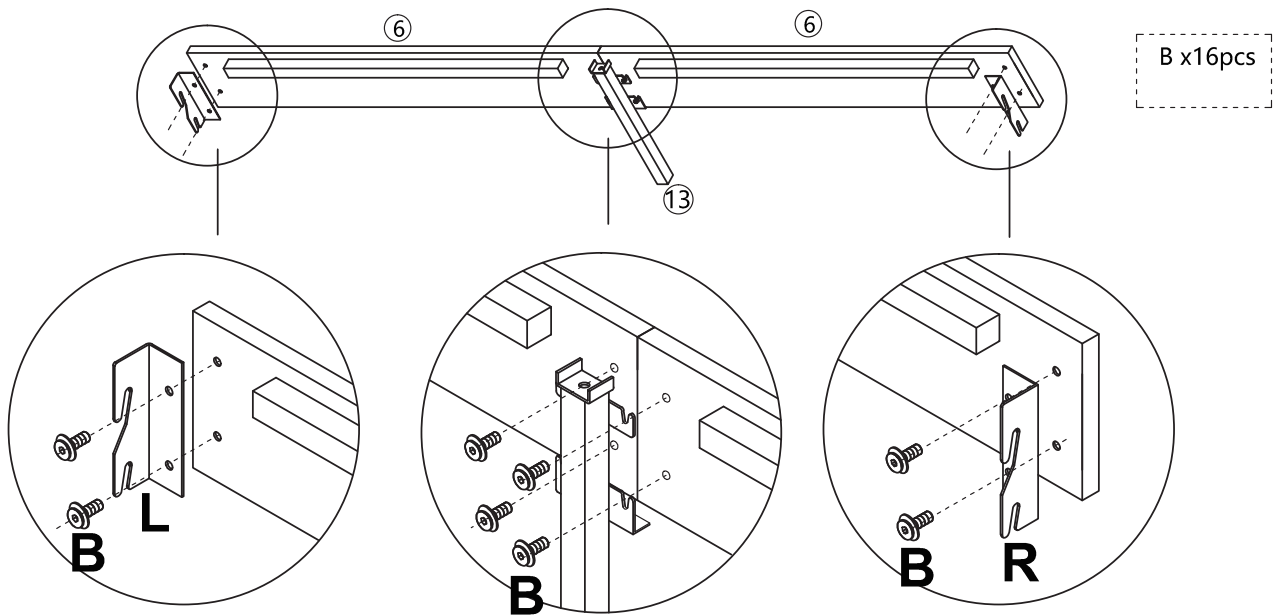

4

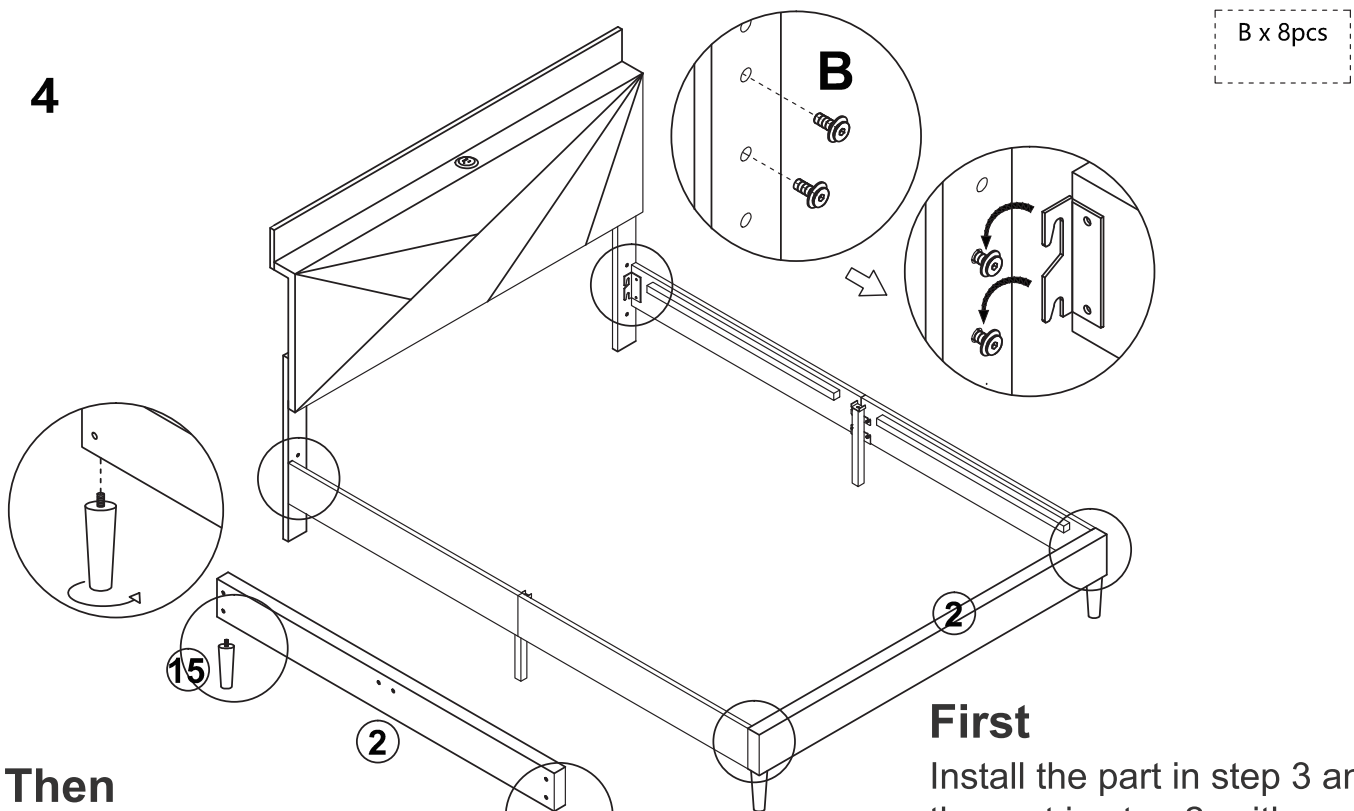

Then


Fix the part ② to the tail of the bed frame with part ⑮.

First


Install the part in step 3 and the part in step 2 with part G and screws B.

Install part ④ and ⑤ on two sides of the headboard with screws B.

5

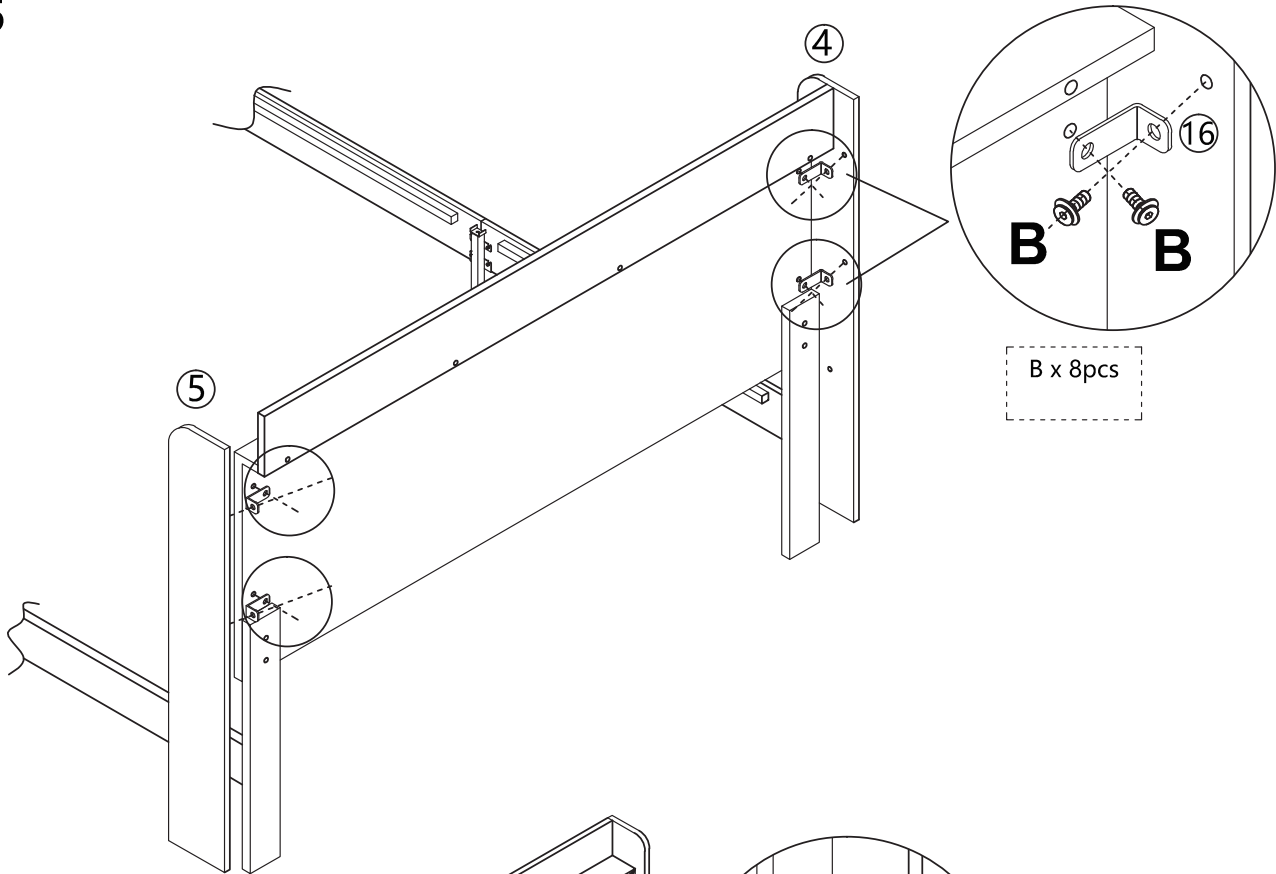


6

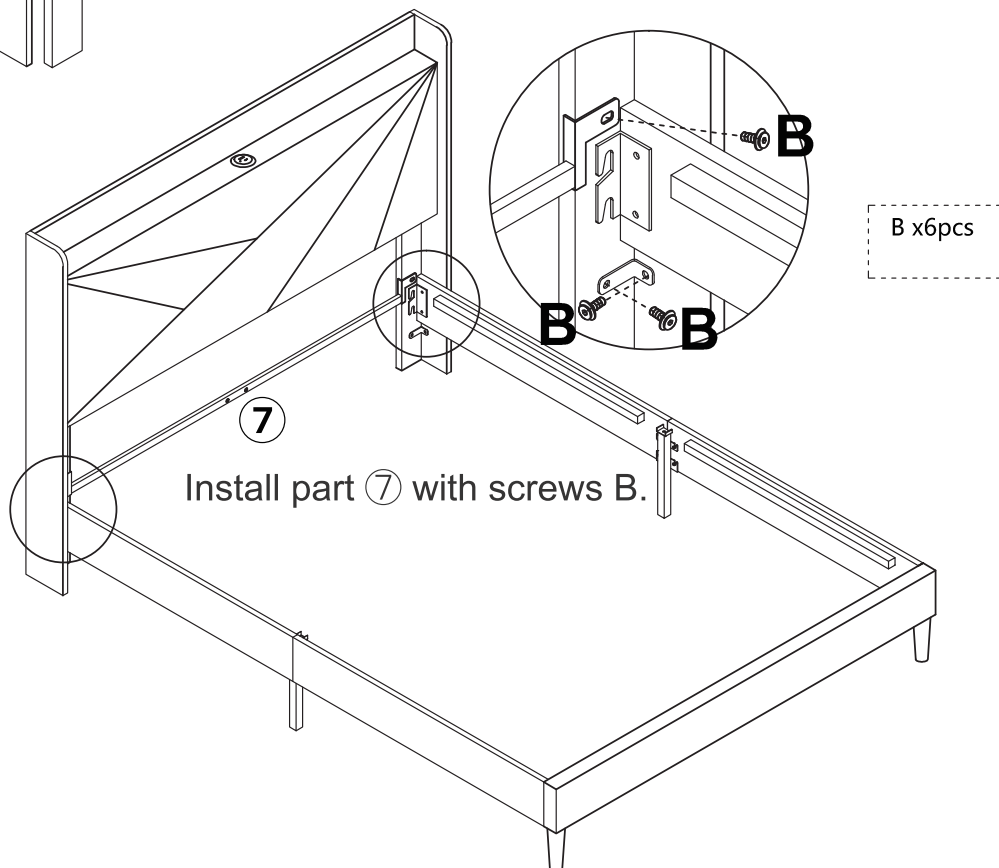

7


Place part ⑨ and part ⑩ together, install part ⑭ with 2 screws C, and install part ⑰ with 1 screws C.

C x 3pcs

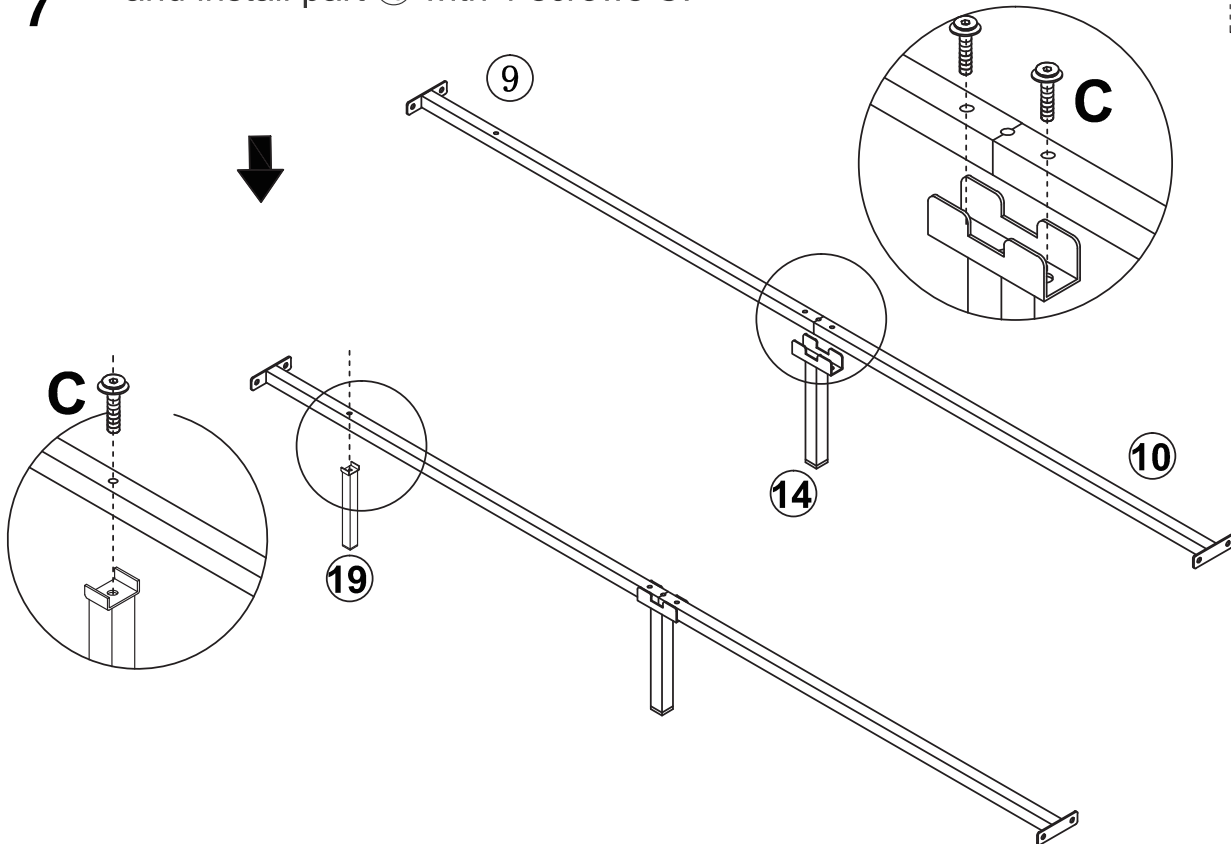

8

B x 4pcs

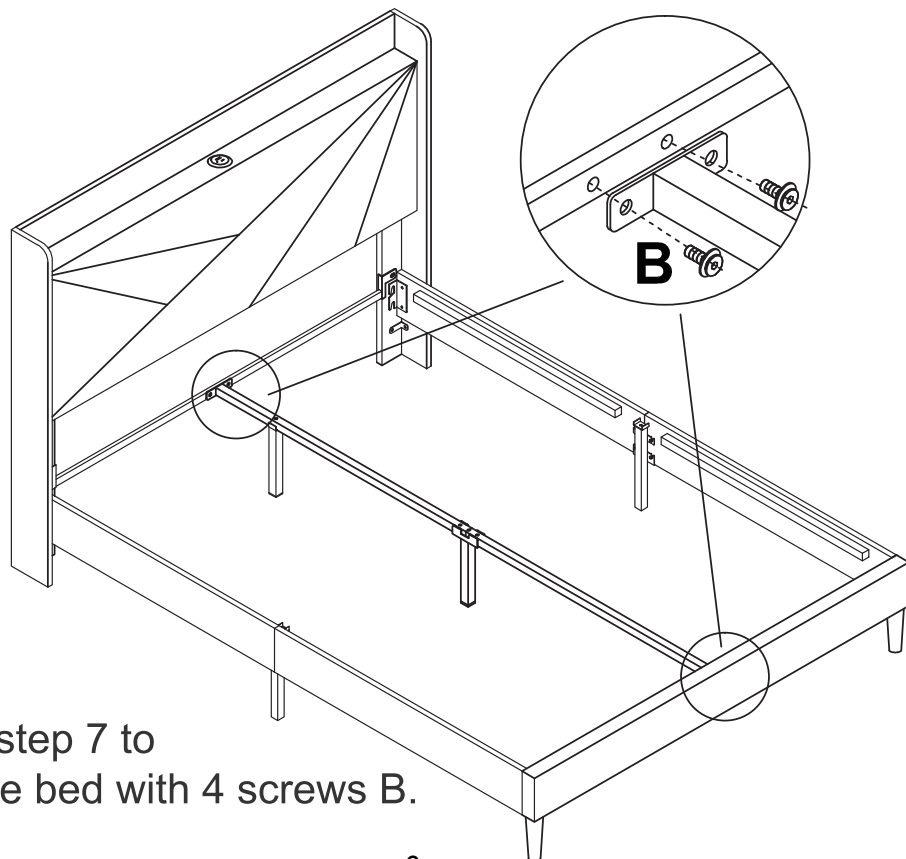


Fix the part in step 7 to the frame of the bed with 4 screws B.

9

Fix part ⑧ to the frame of the bed with screws C and D.

Note: Install the two ends of part ⑧ with screws c, and the middle with screws D.

C x 2pcs
D x 1pc

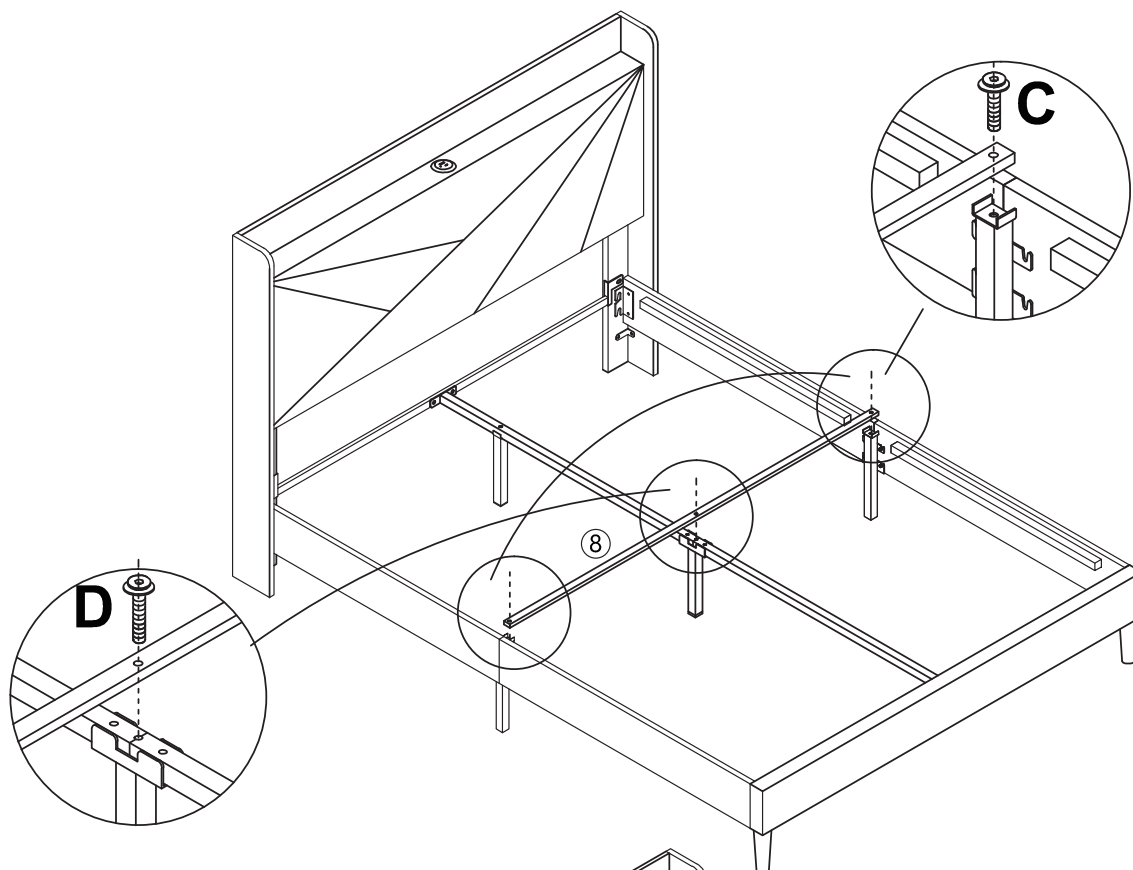

10

Note: The socket includes USB and type C interfaces. Please connect the plug on the back to the power source when using it.

