



# ASSEMBLY INSTRUCTIONS

## SOFA 106" - CUSHION COVER


① TOP

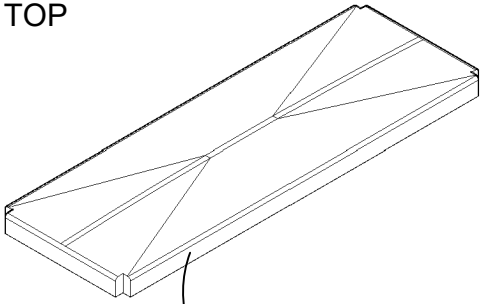


② BOTTOM

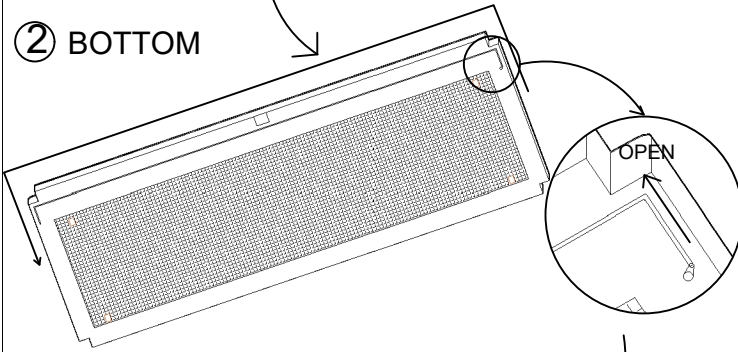

③ PUT IN BACK FOAM CORE

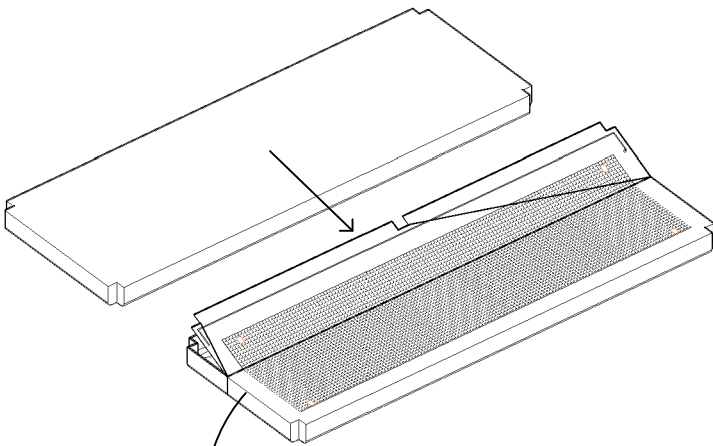


④ CLOSE

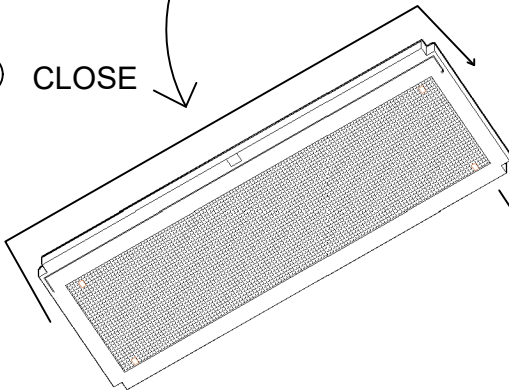


PILLOW COVER


①

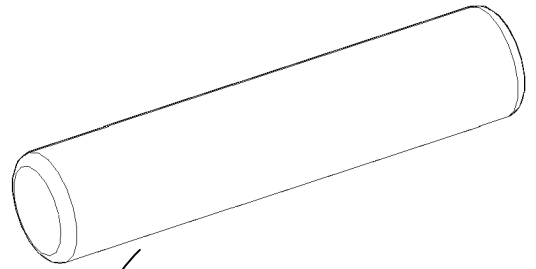

②

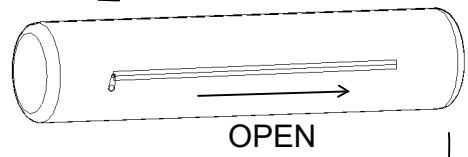

③ PUT IN PILLOW FOAM CORE

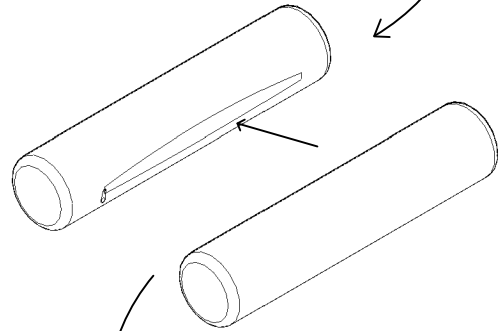

④

