
ASSEMBLY INSTRUCTIONS

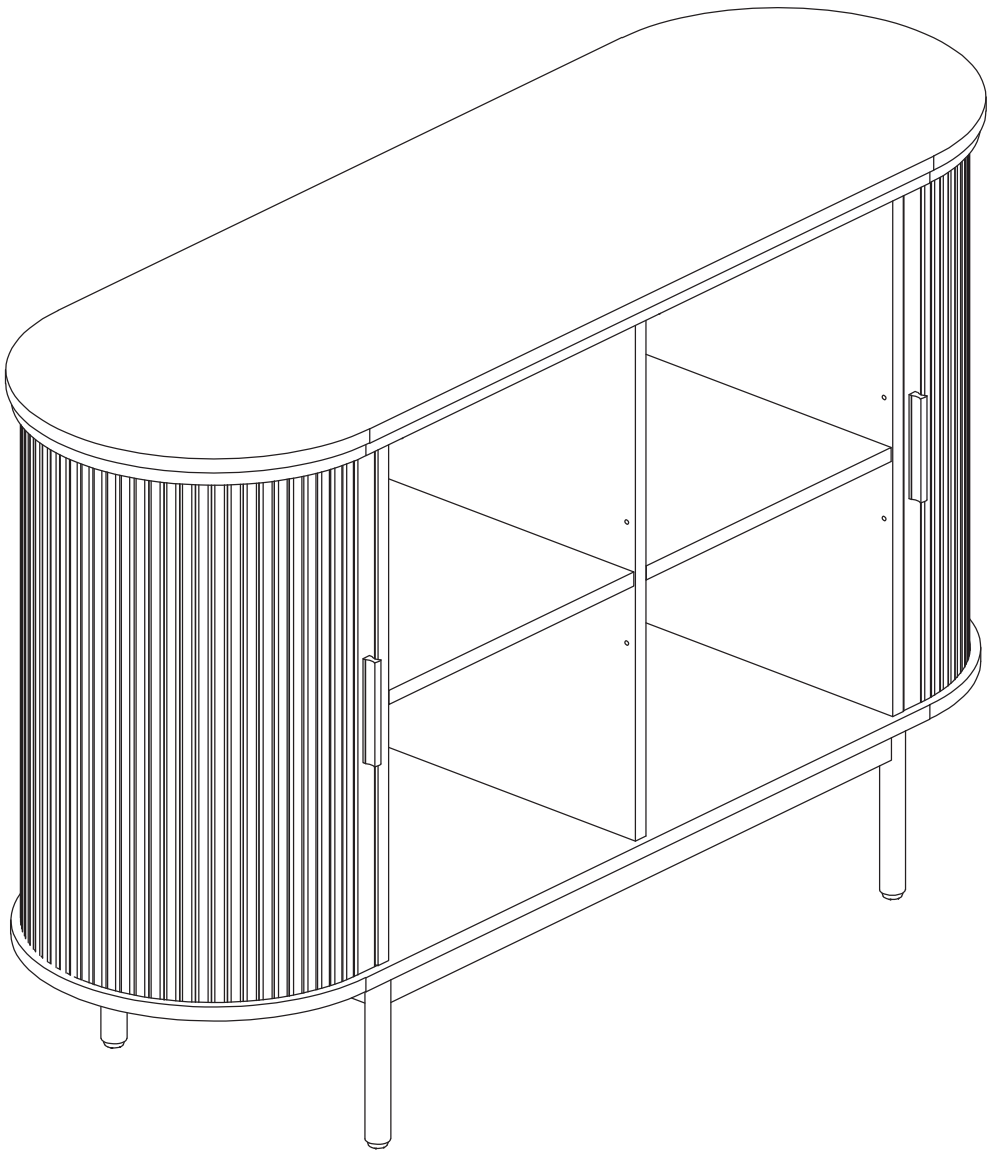

Before You Start

1.Read through each step carefully and follow the proper order.

2.Separate and count all your parts and hardware.




3.Give yourself enough room for the assembly process.

4.Assembly this product on the empty carton or carpet to avoid scratching.


5.Two people are recommended for ease in the assembly of this product.

6.Keep all small parts of this product away from children. They may cause serious injury.

7.Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer.

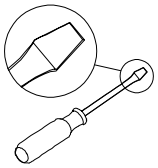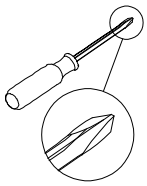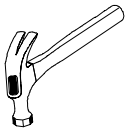8.Power tools should not be used to assemble this product.

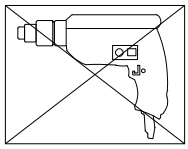


HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS

1.Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.


2.Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.

3.Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.




4.Use the sticker to conceal the Cam.

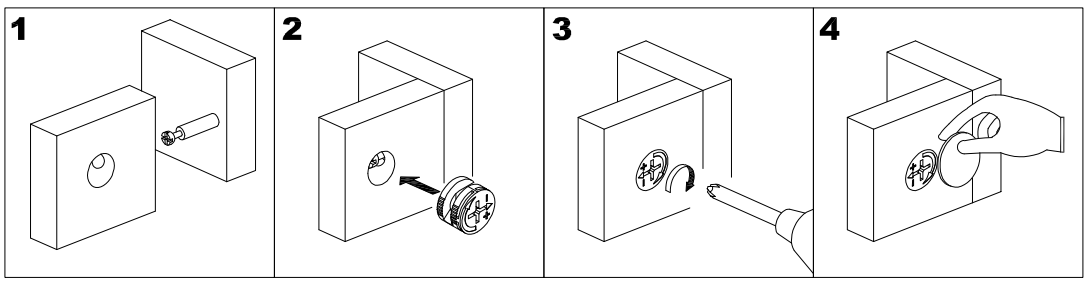


PARTS LIST

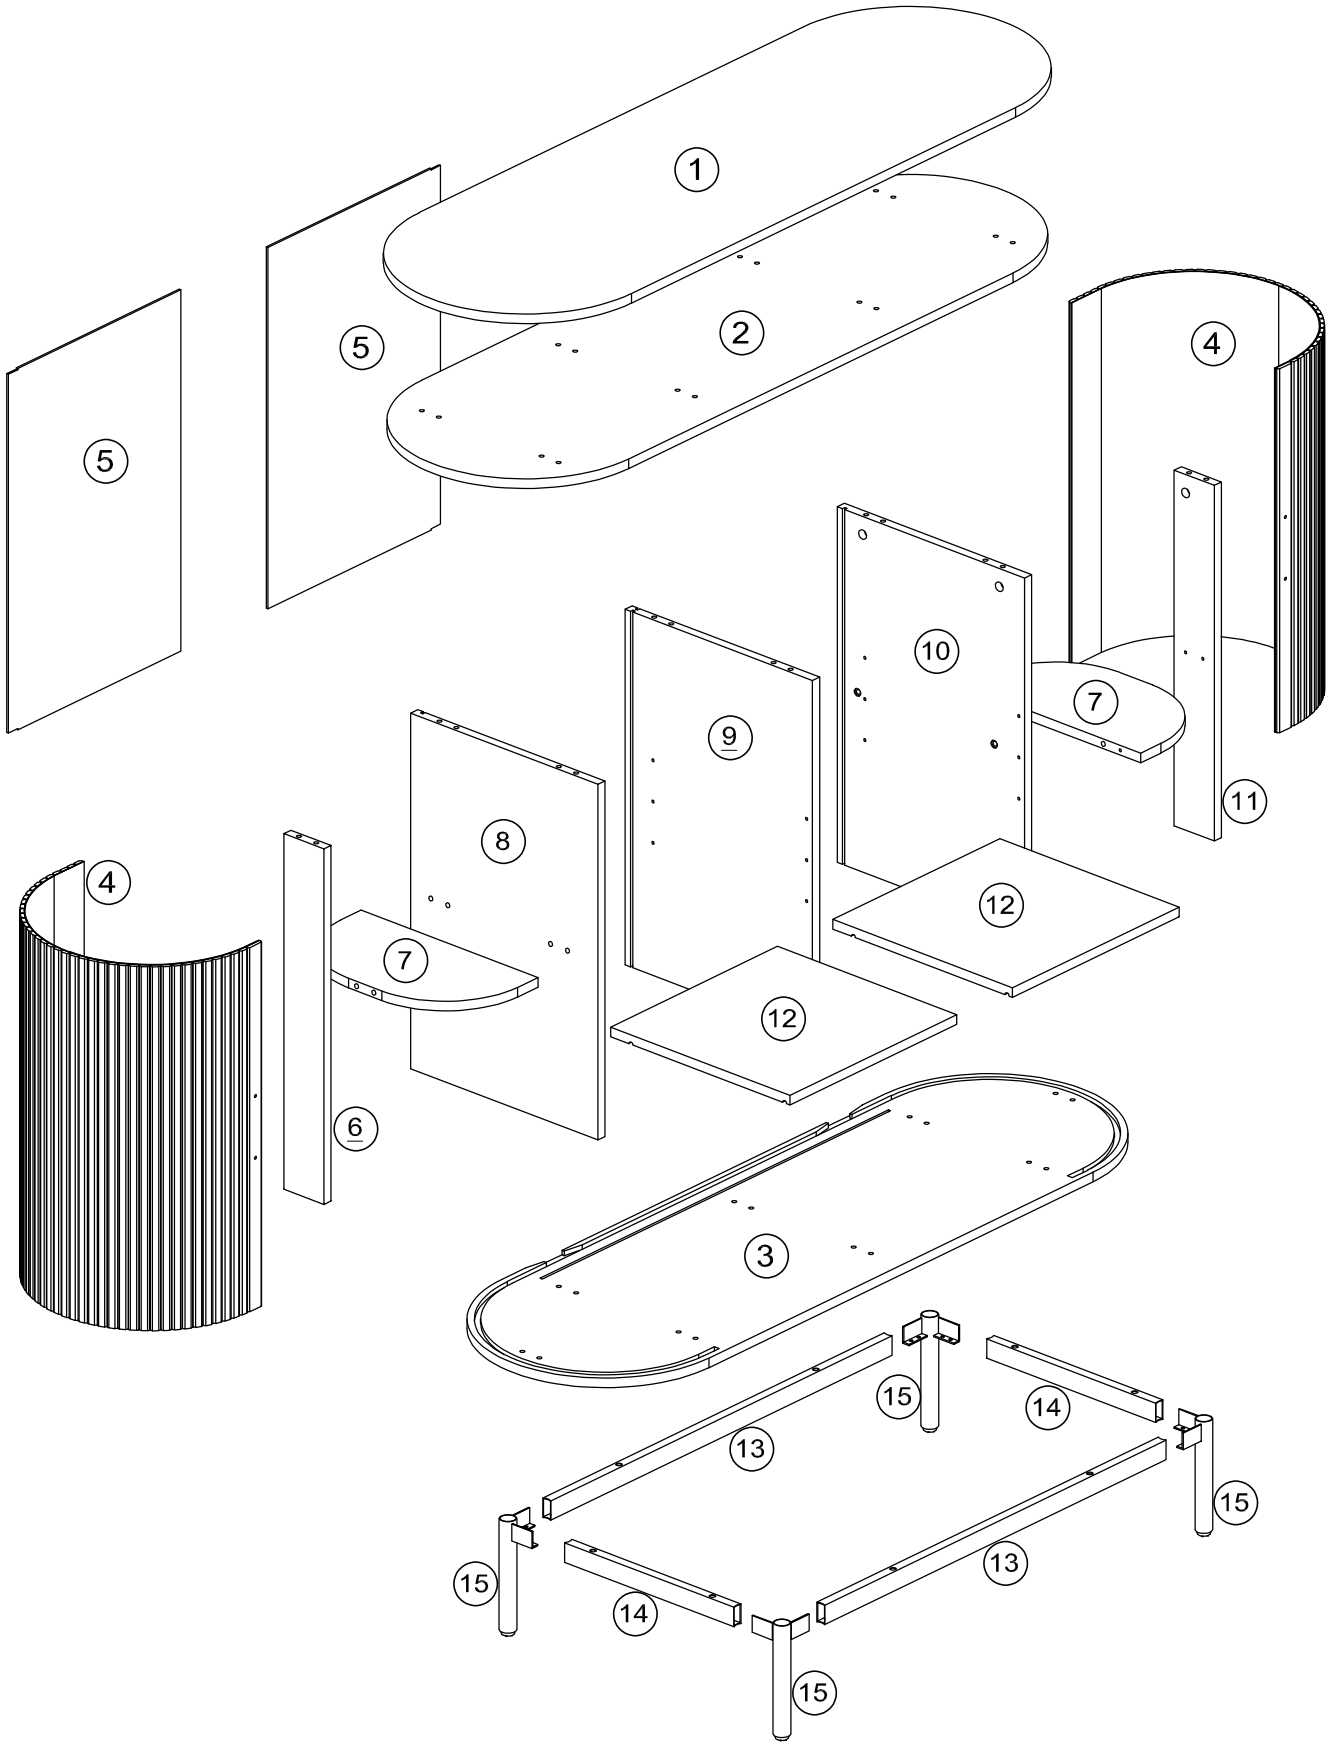


HARDWARE LIST


A		Ø6x35mm	Cam bolt	12	pcs
B		Ø15x11mm	Cam lock	12	pcs
C		Ø30mm	Cam cover	12	pcs
D		Ø8x30mm	Wooden dowel	20	pcs
E		Ø8x20mm	Short wooden dowel	8	pcs
F		Ø6x13mm	Bolt	16	pcs
G		Ø6x22mm	Bolt	8	pcs
H		Ø6x40mm	Bolt	8	pcs
I			Plastic wedge	12	pcs
J		Ø3x17mm	Flat-head screw	12	pcs
K		Ø6x50mm	Screw	12	pcs
L		Ø5x16mm	Shelf support	8	pcs
M		Ø4x10mm	Handle bolt	4	pcs
N			Handle	2	pcs
O			Tipping restraint hardware	2	pcs
P		M 4	Hex key	1	pcs


STEP 1

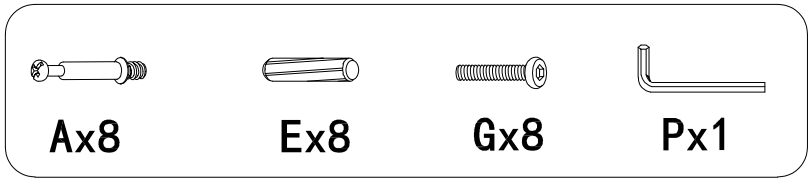


An assistance is required with this step.

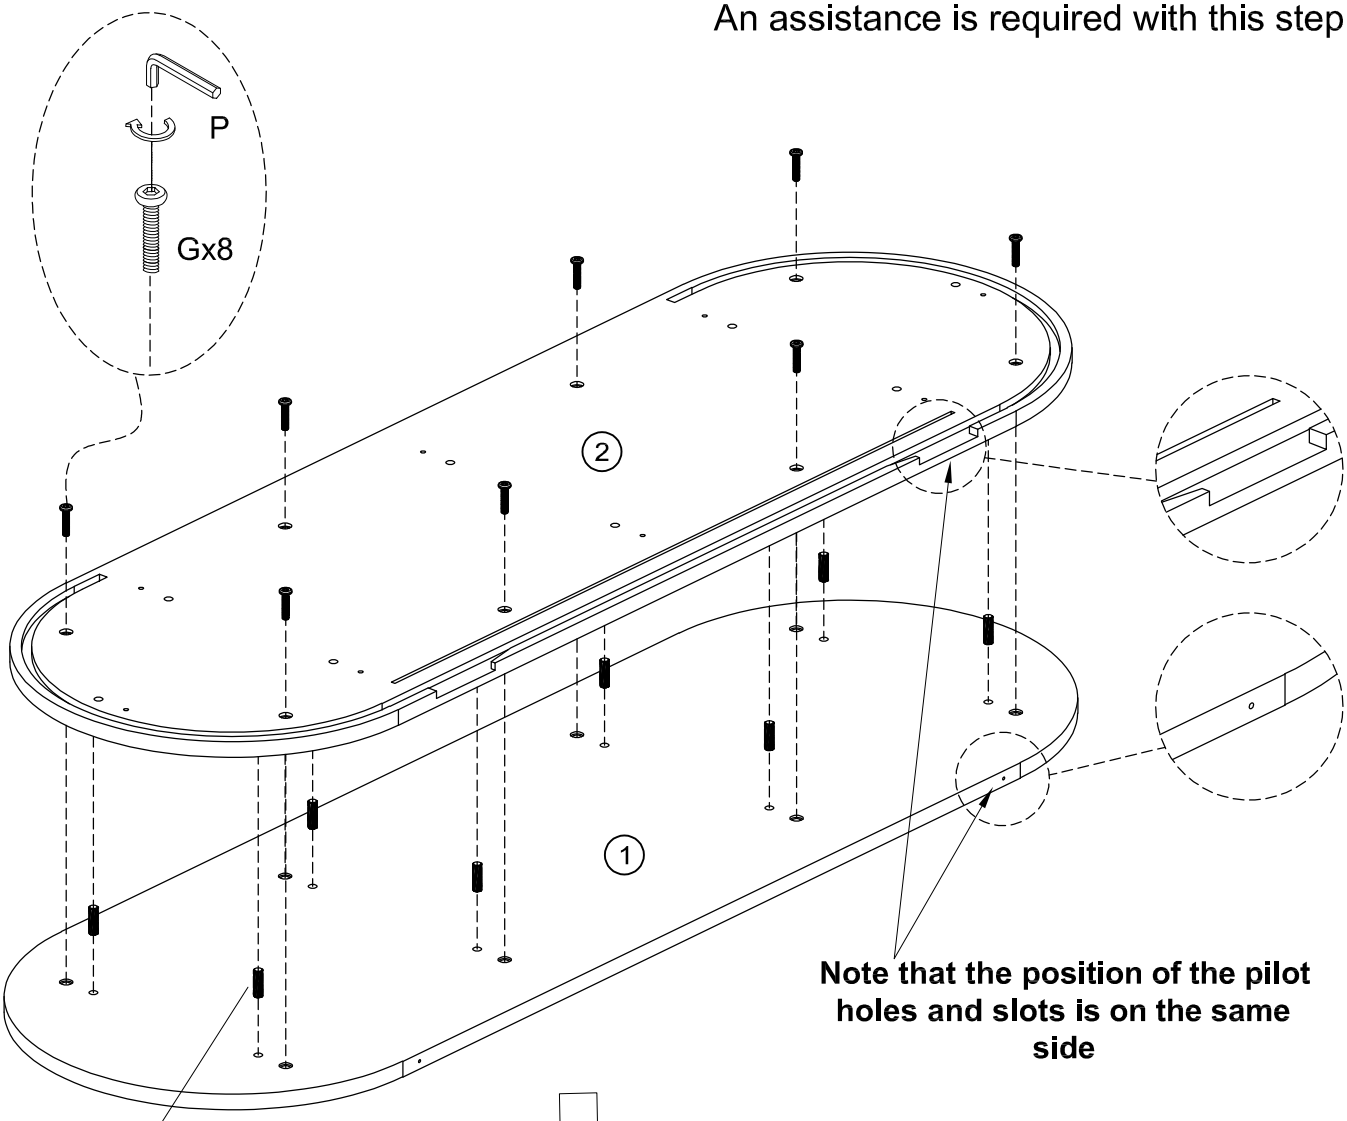

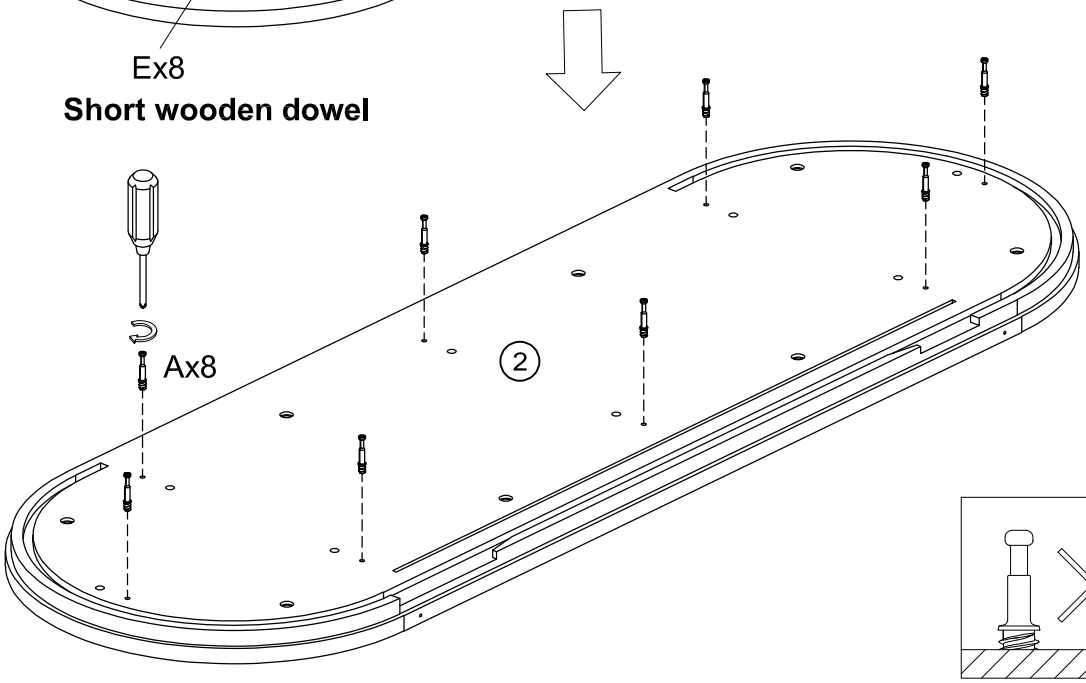


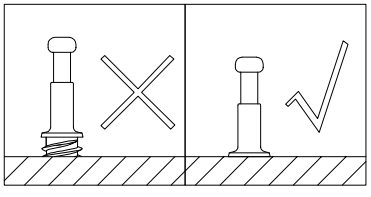


STEP 2

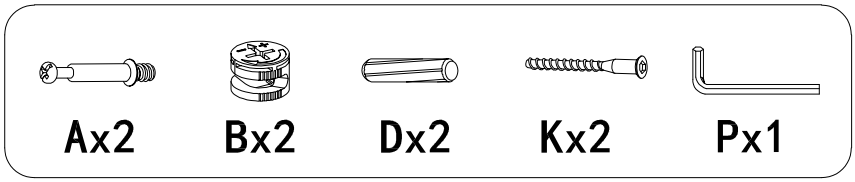


An assistance is required with this step.

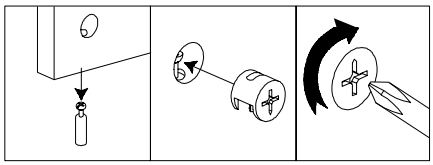


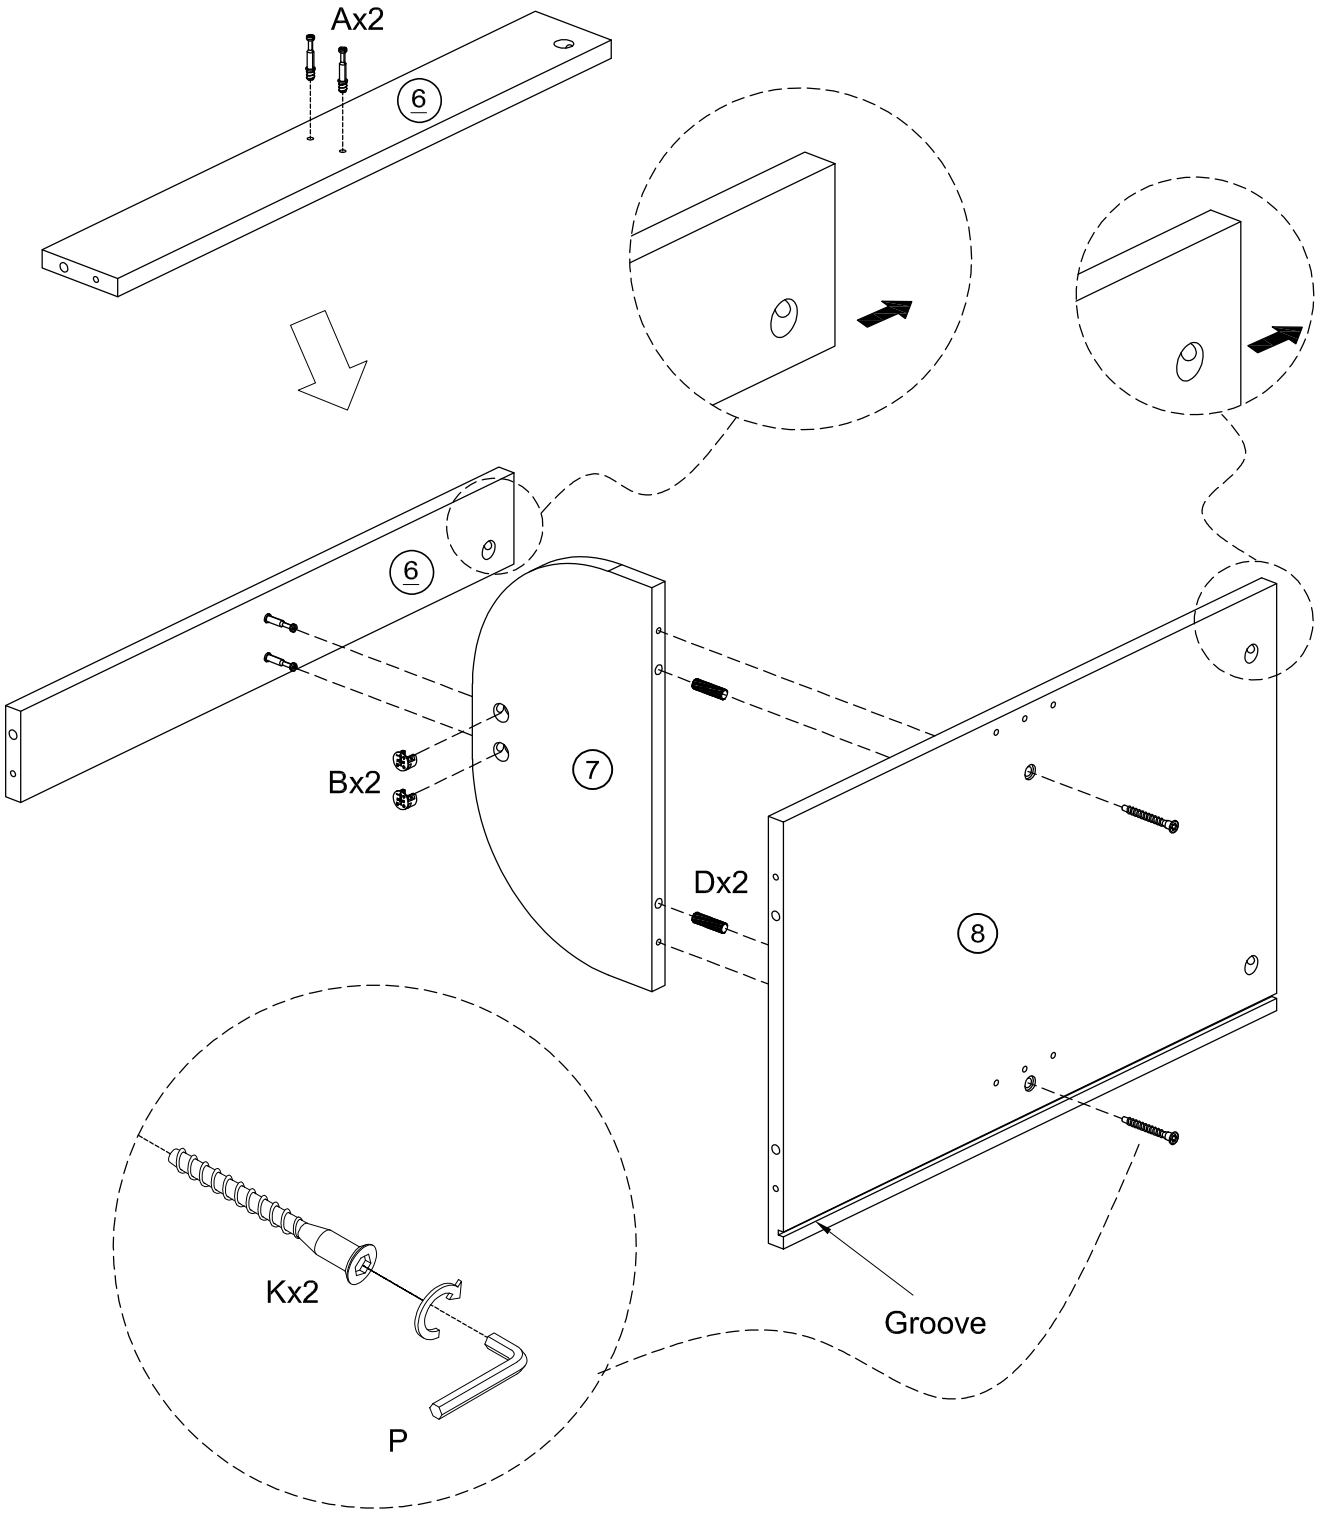


STEP 3

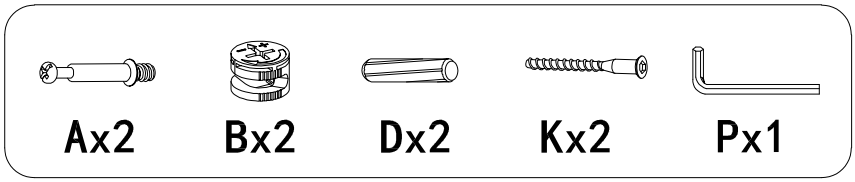


An assistance is required with this step.

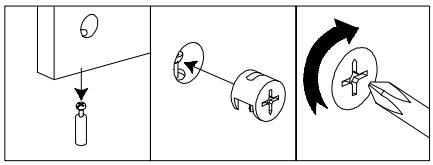


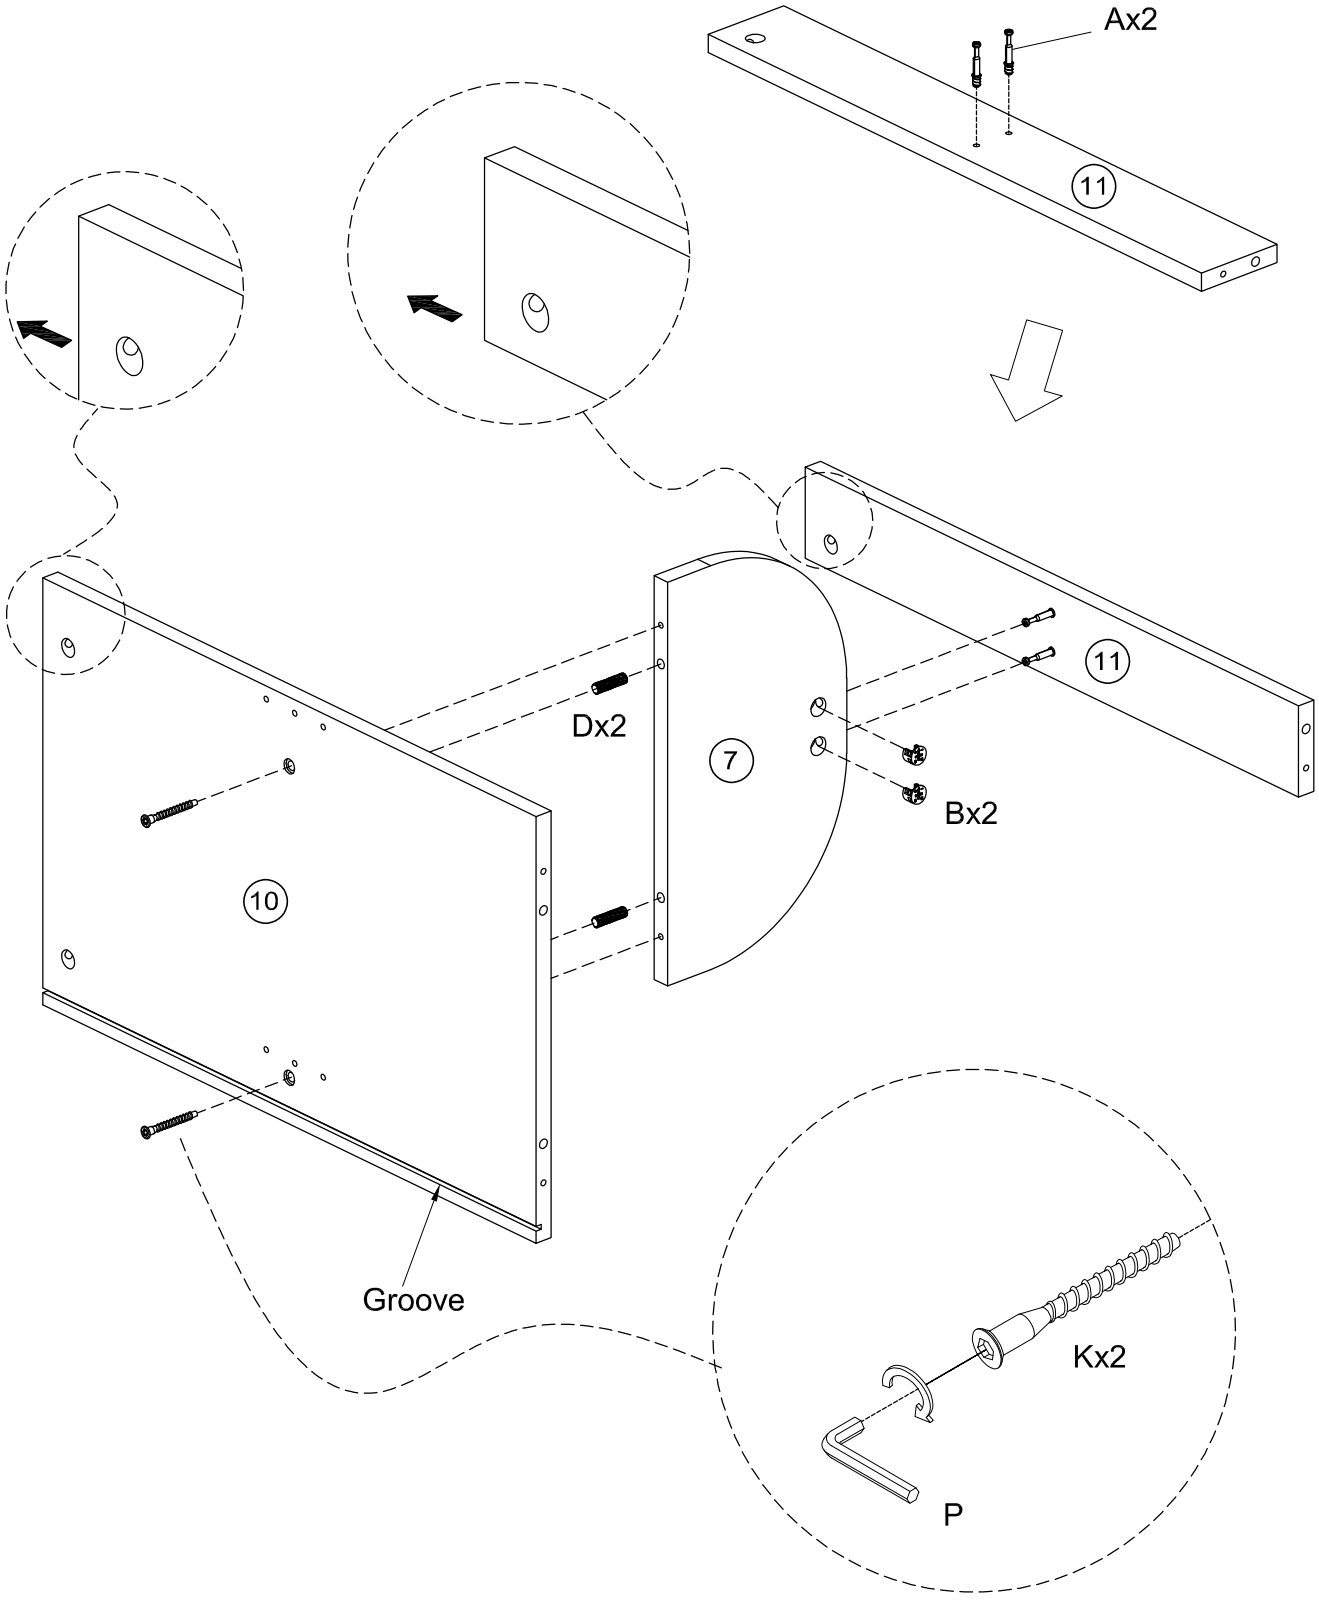


STEP 4

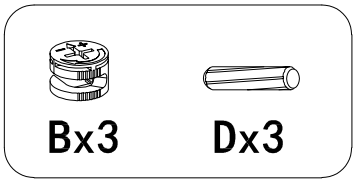


An assistance is required with this step.

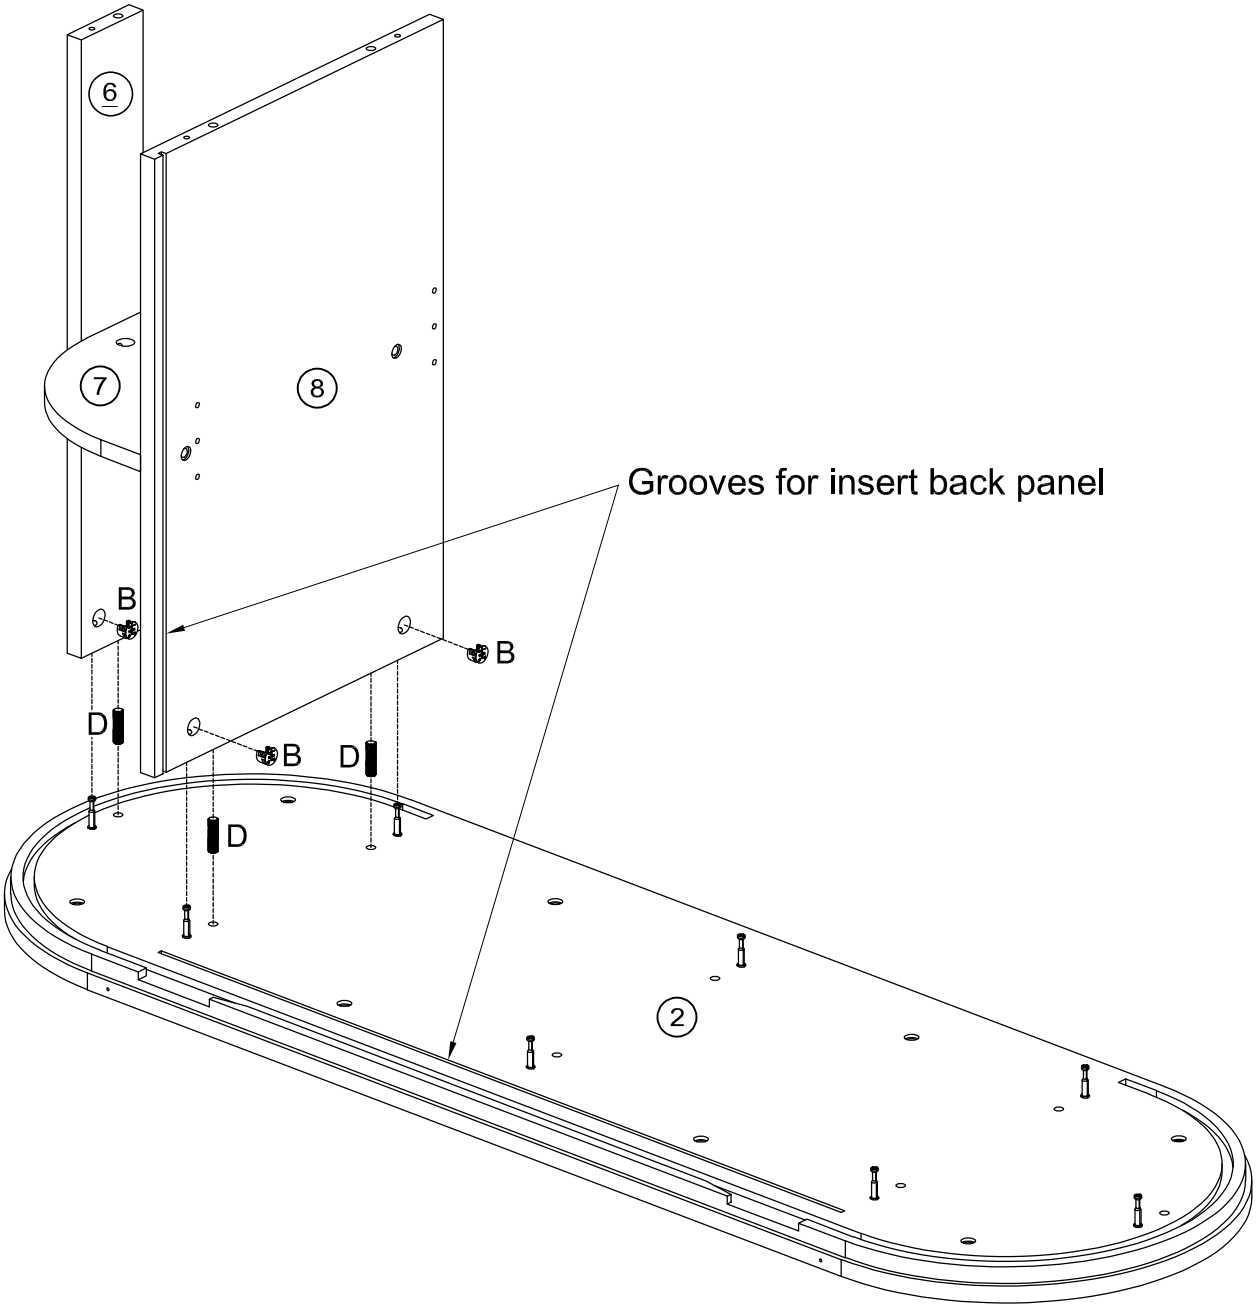


STEP 5

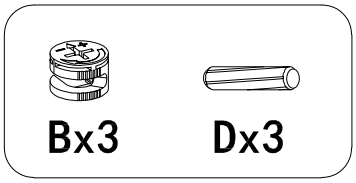


An assistance is required with this step.

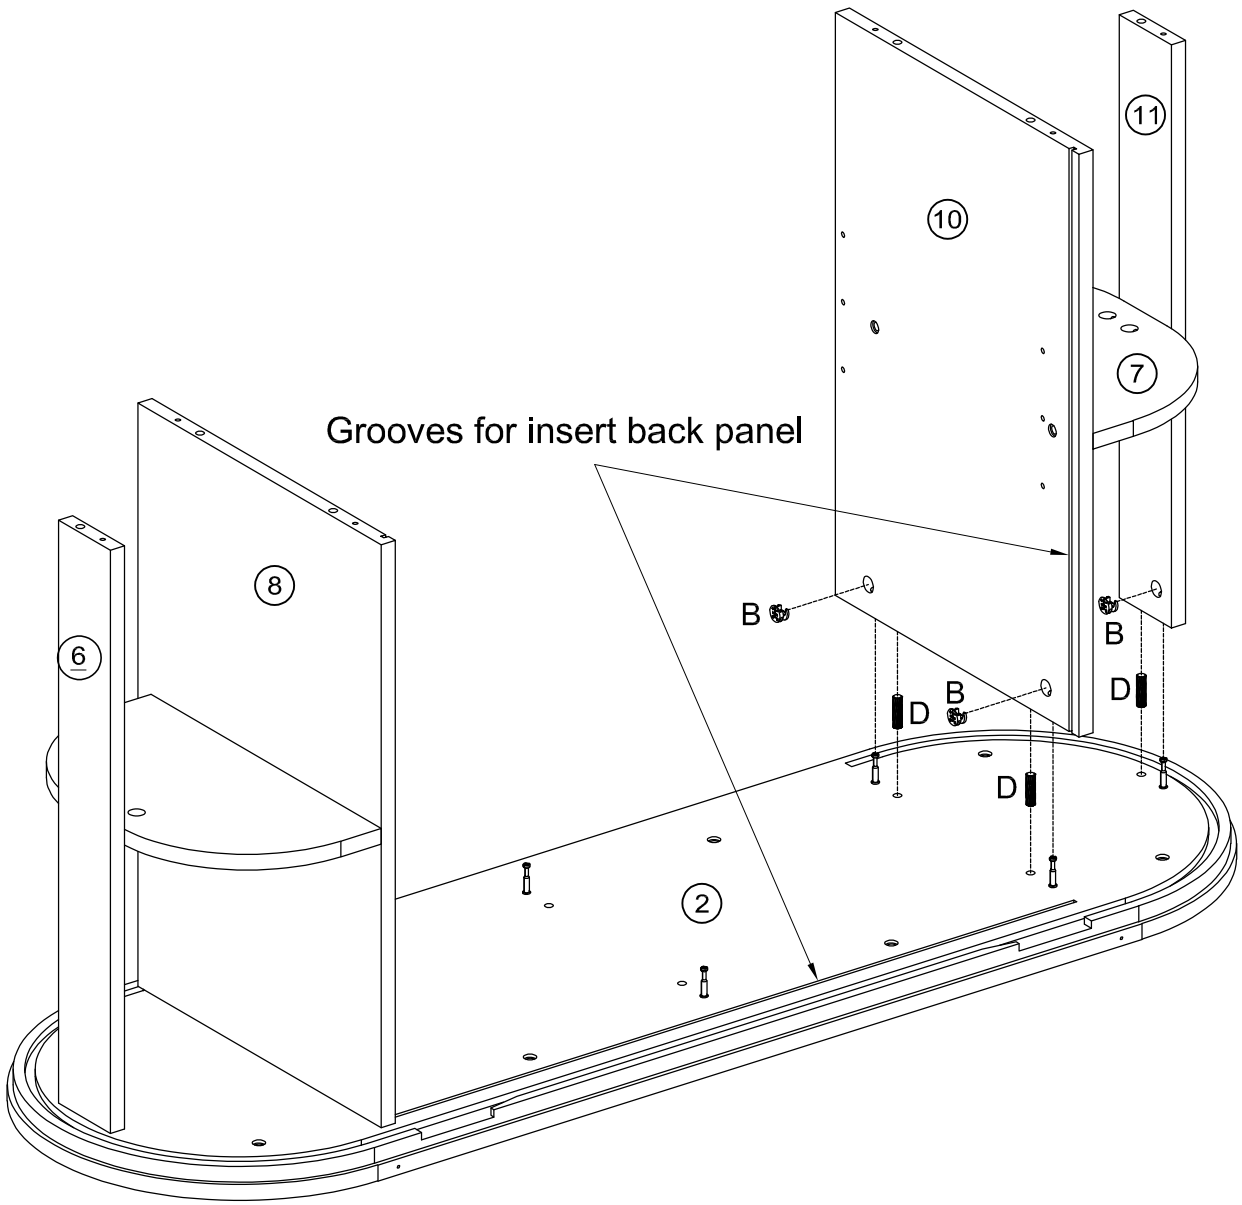


STEP 6

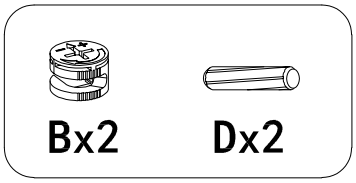


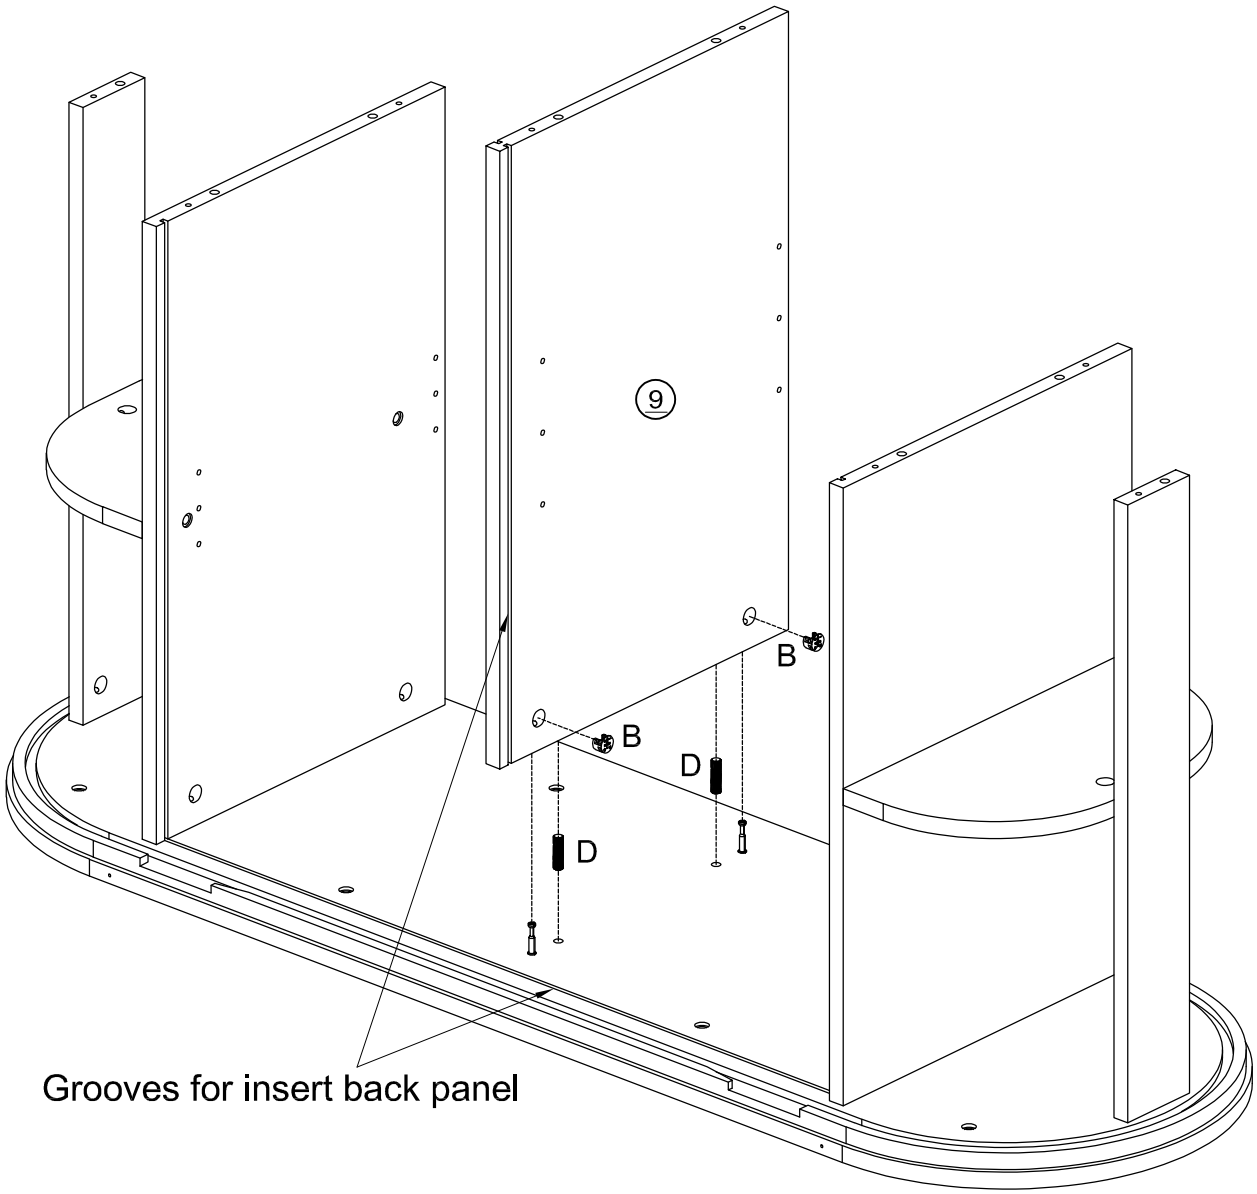


STEP 7

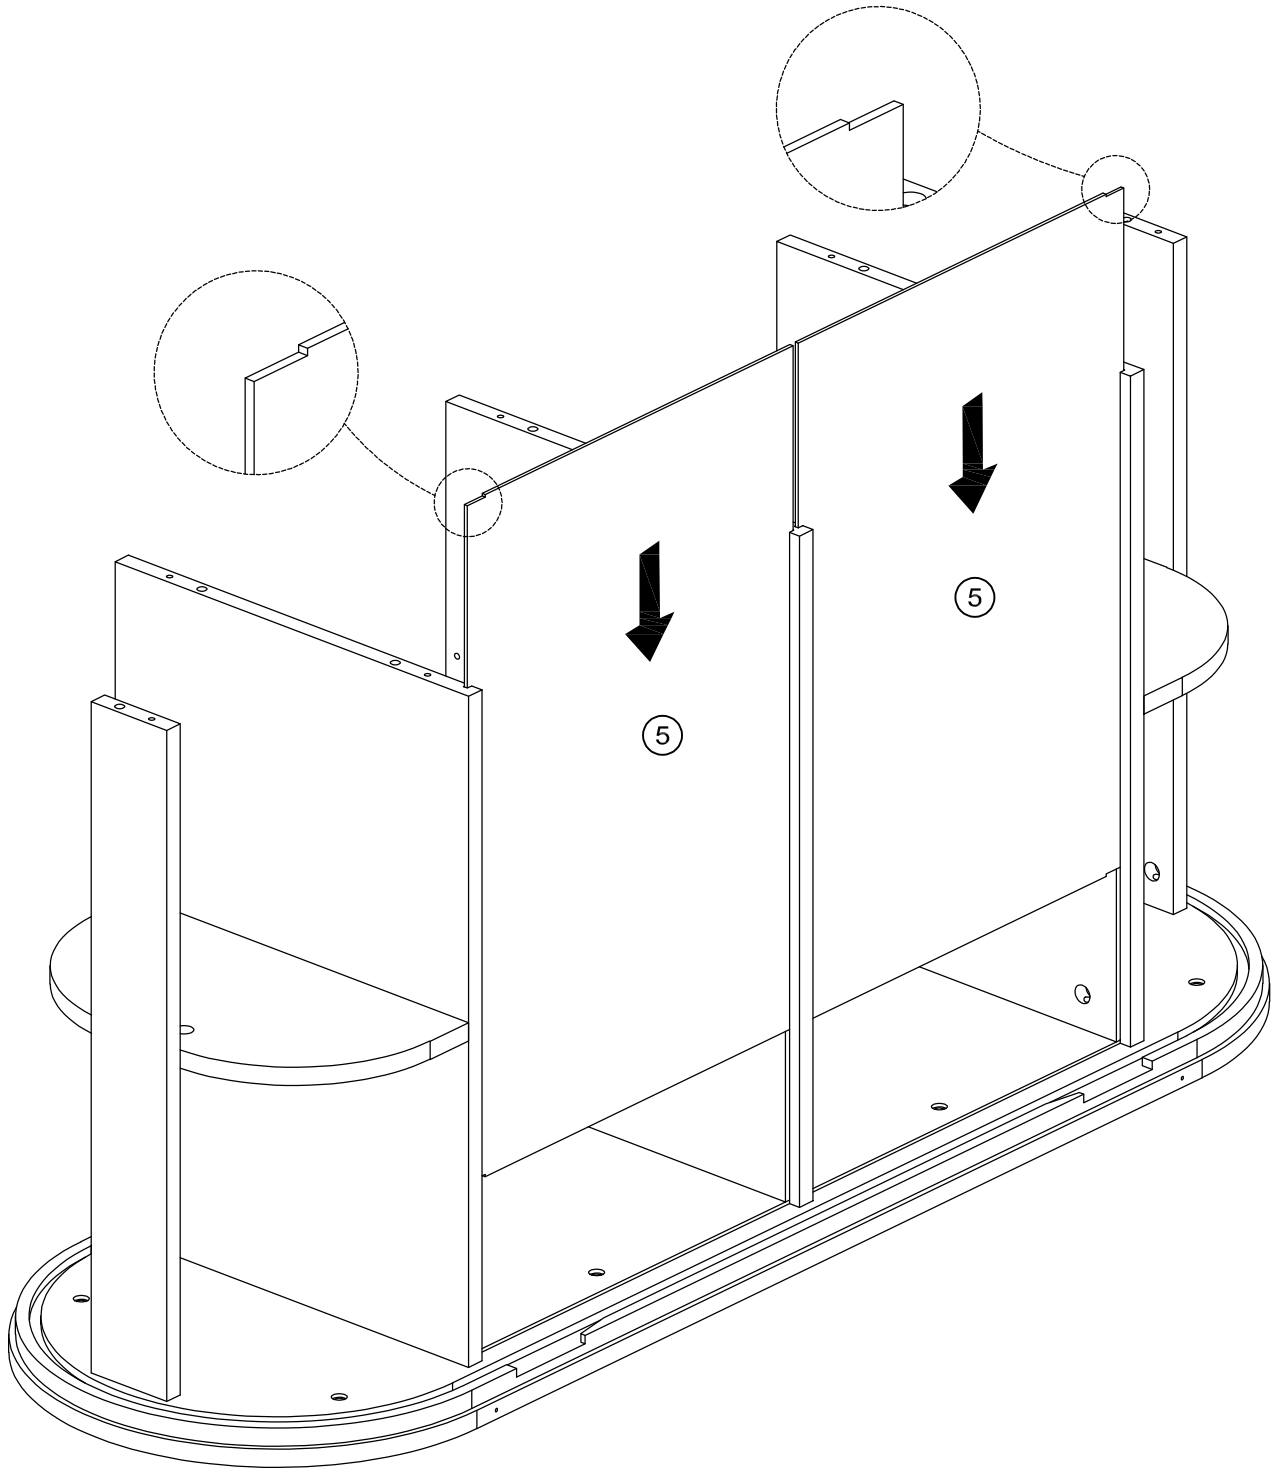


STEP 8

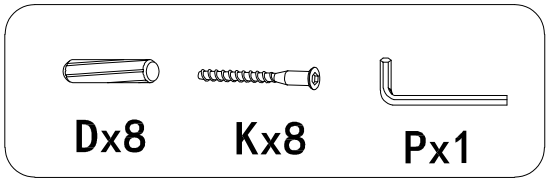


An assistance is required with this step.

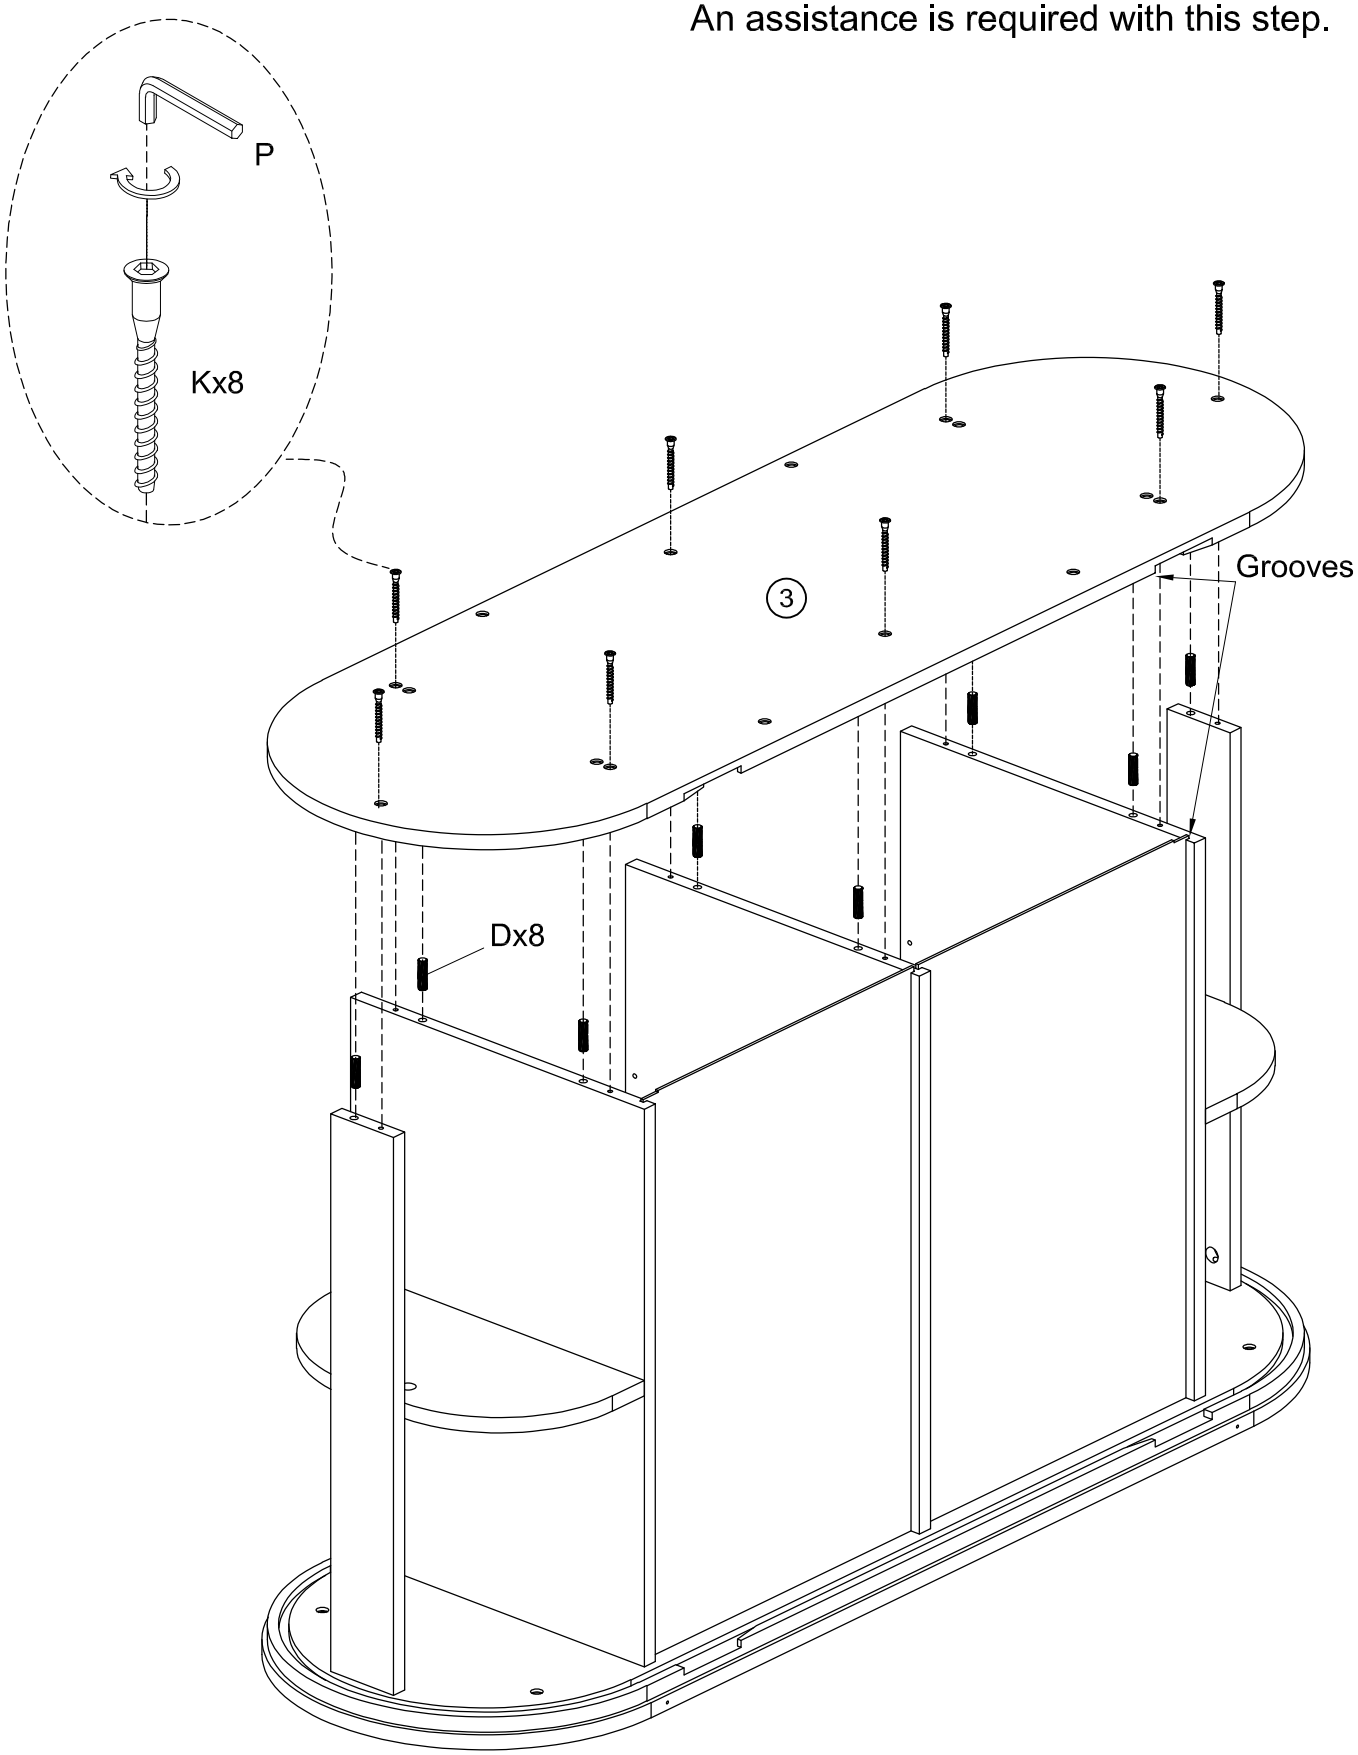


STEP 9

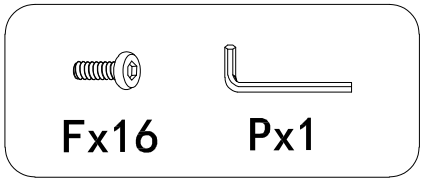


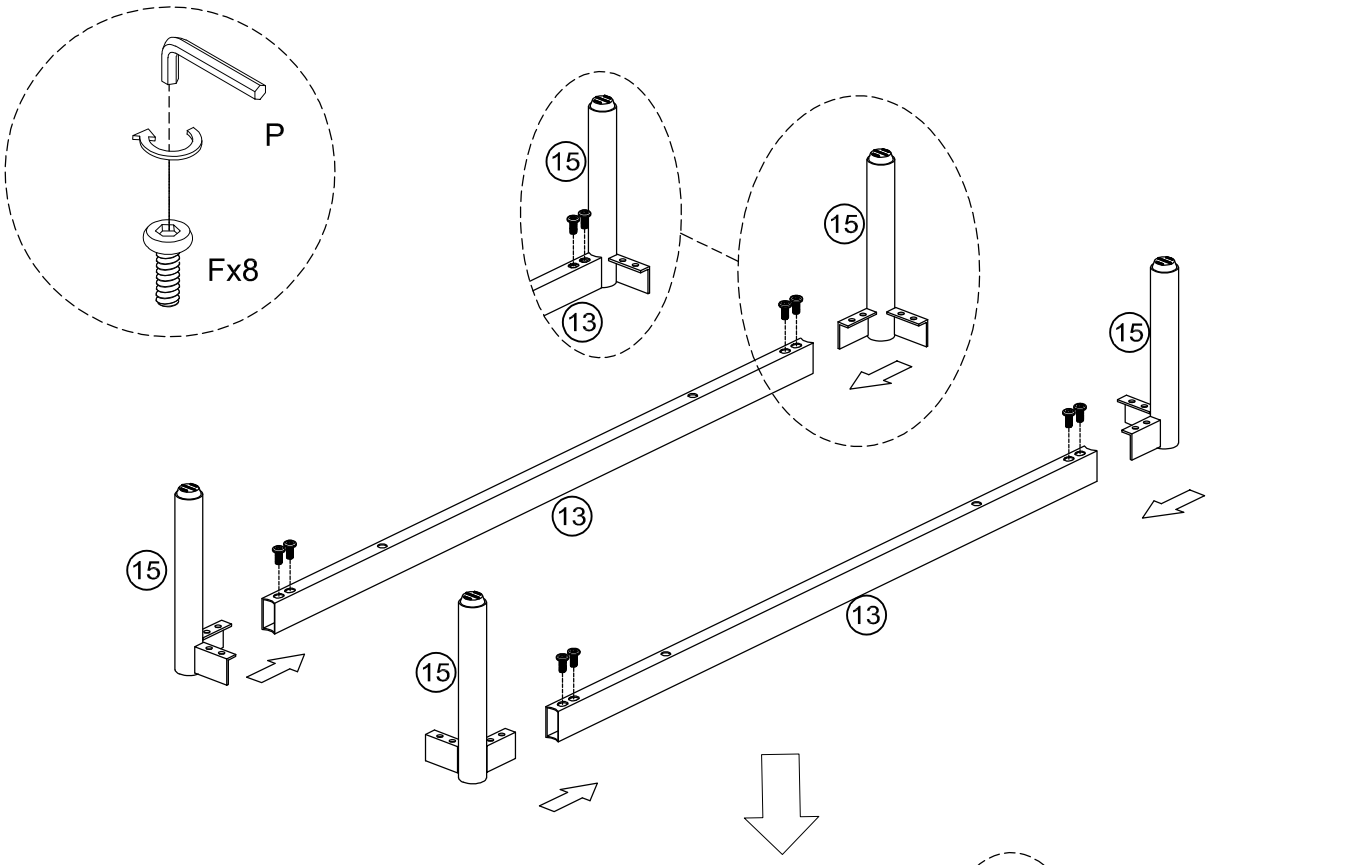


Note: Do Not fully tighten the bolts.

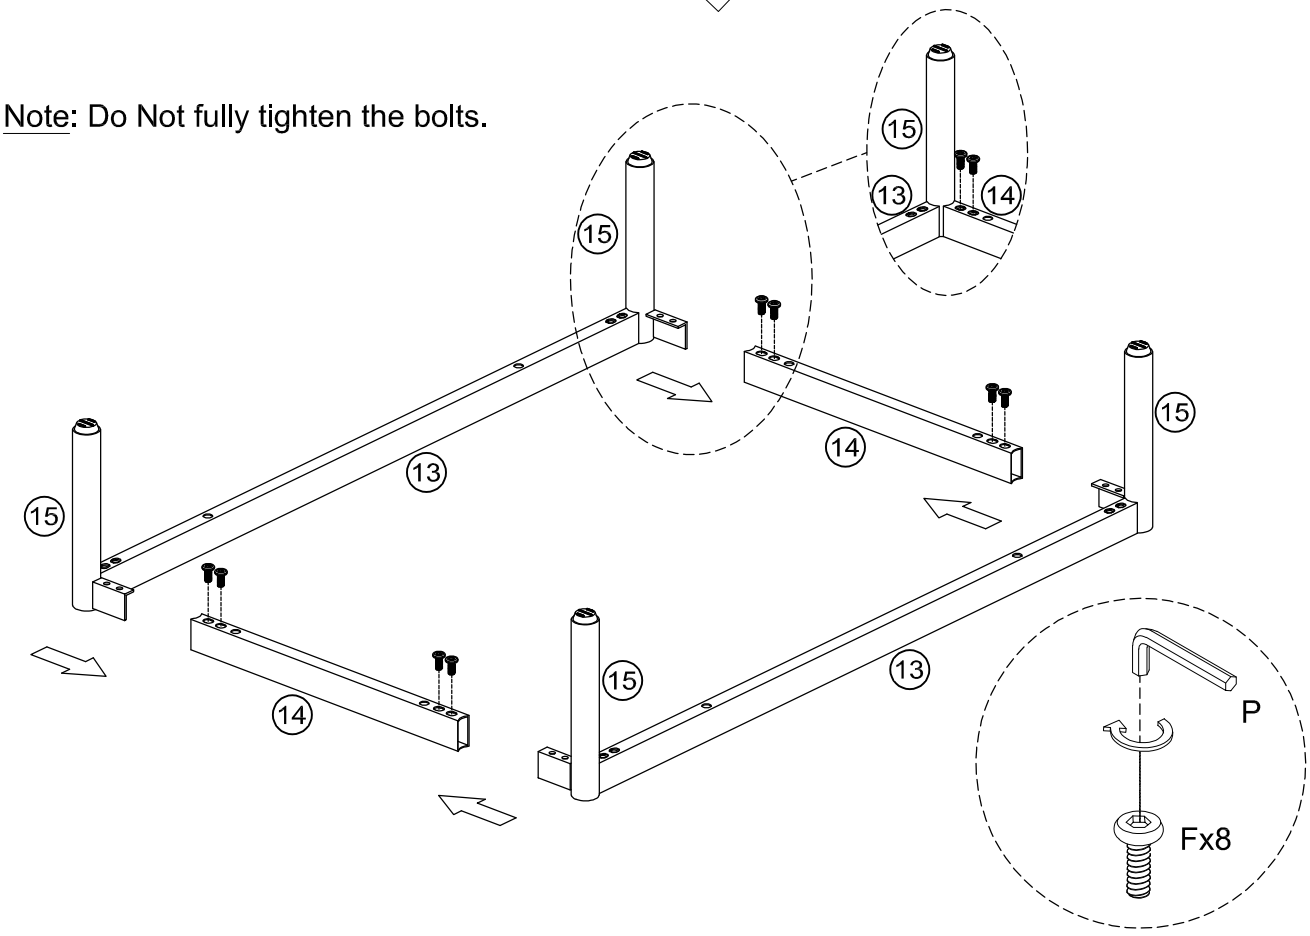

STEP 10

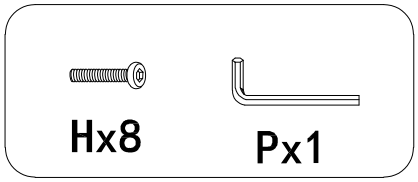


An assistance is required with this step.

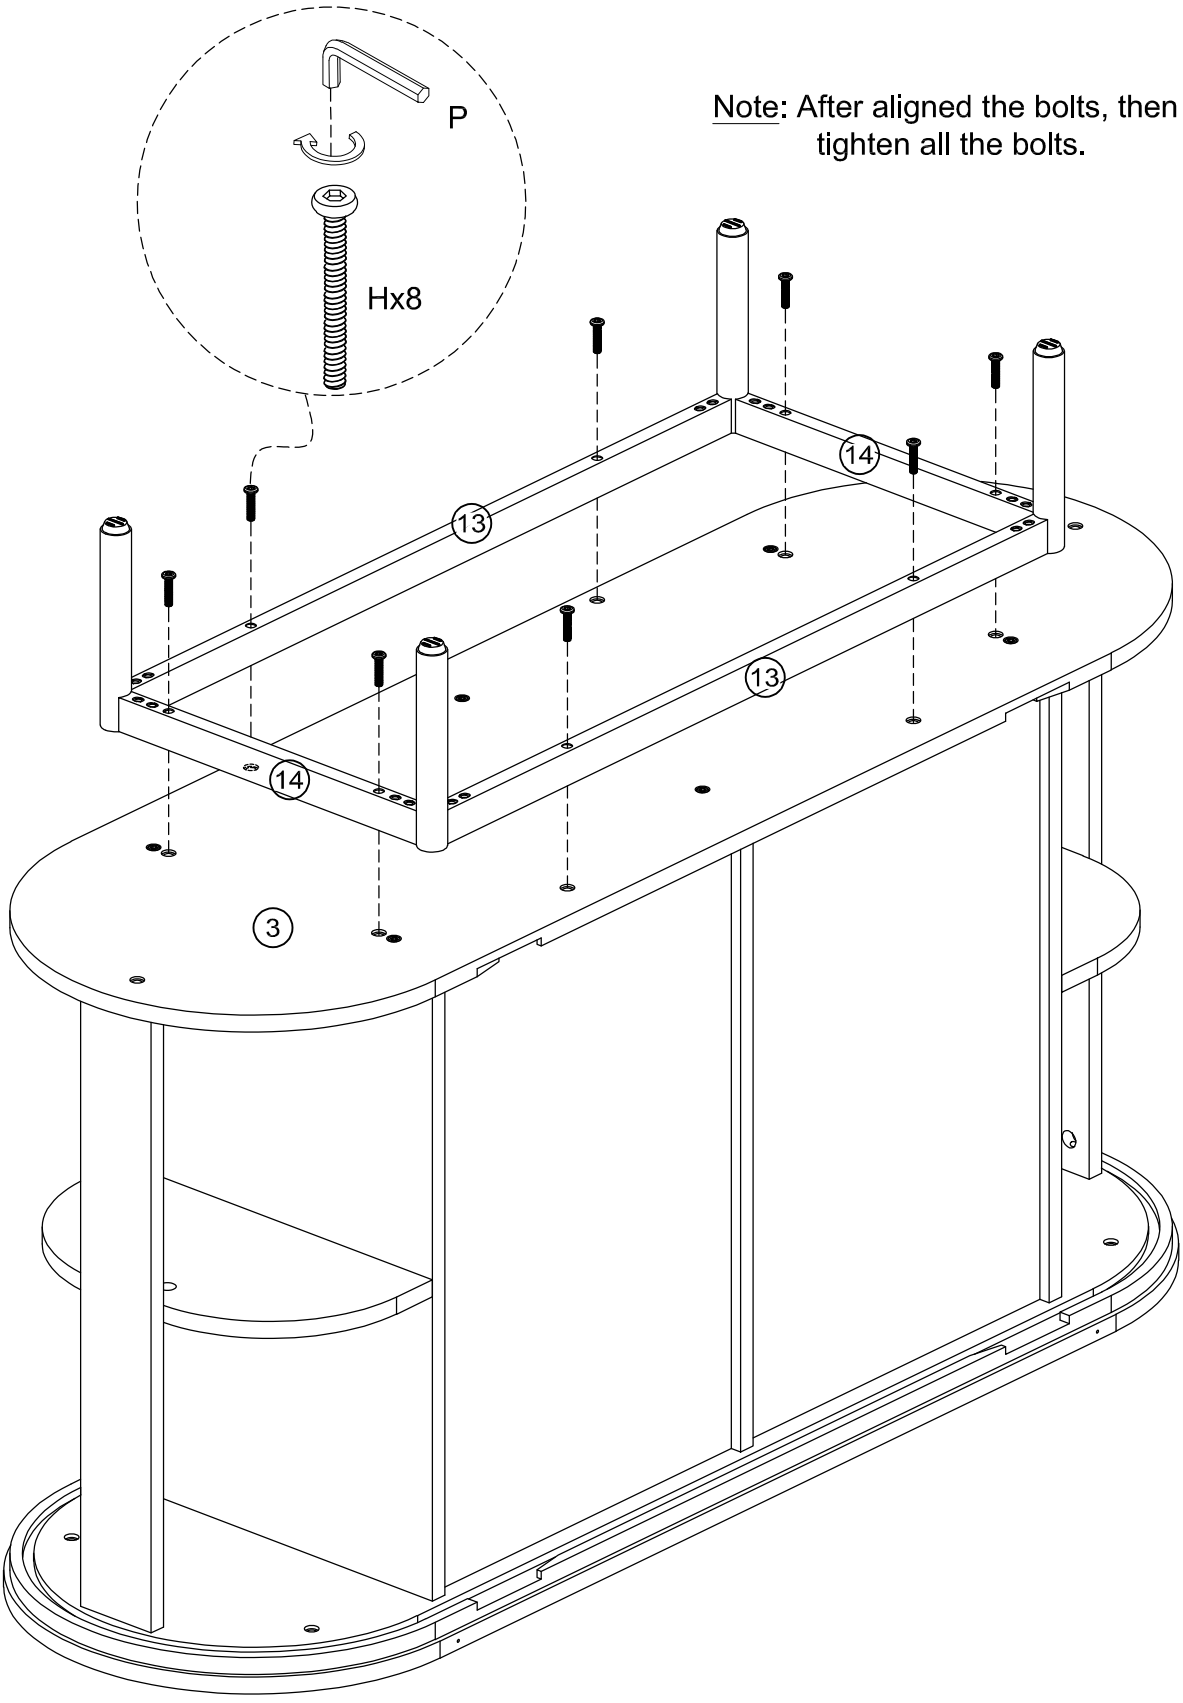


Note: After aligned the bolts, then tighten all the bolts.


STEP 11


I x12 J x12

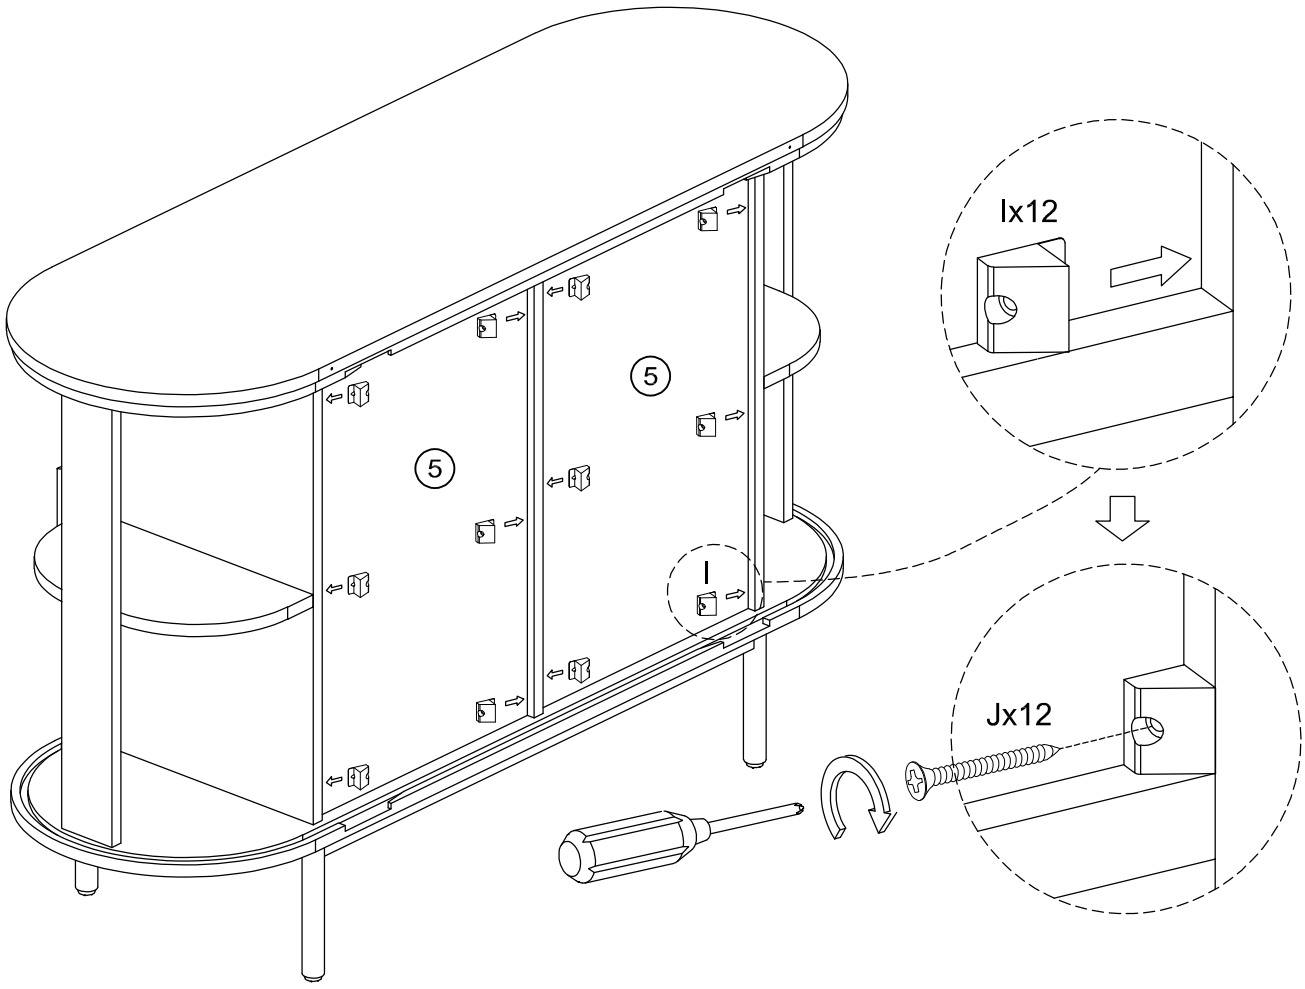


STEP 12

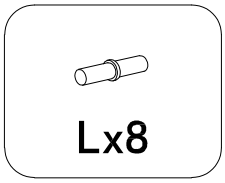


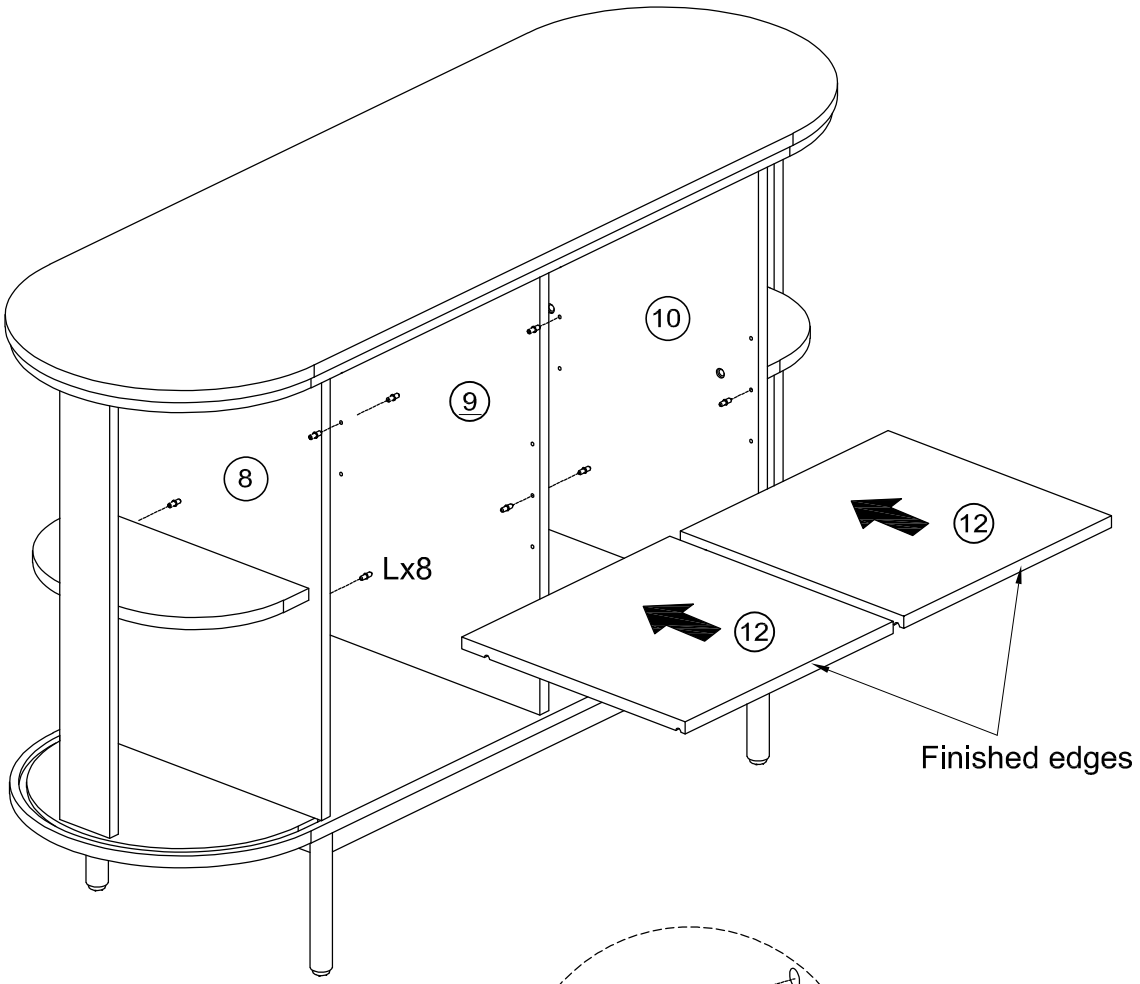


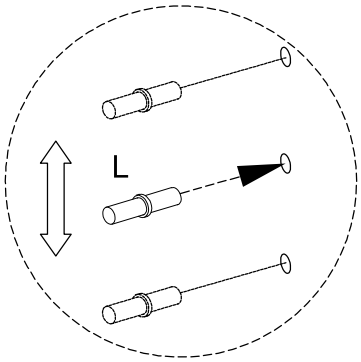

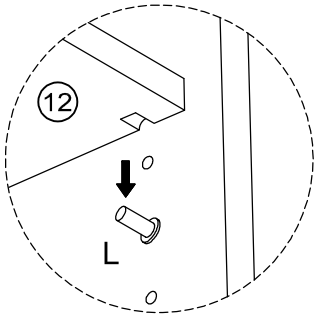


STEP 13

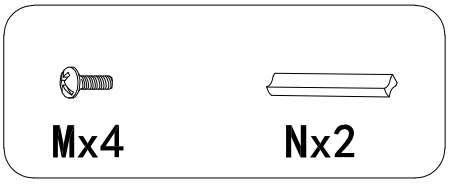

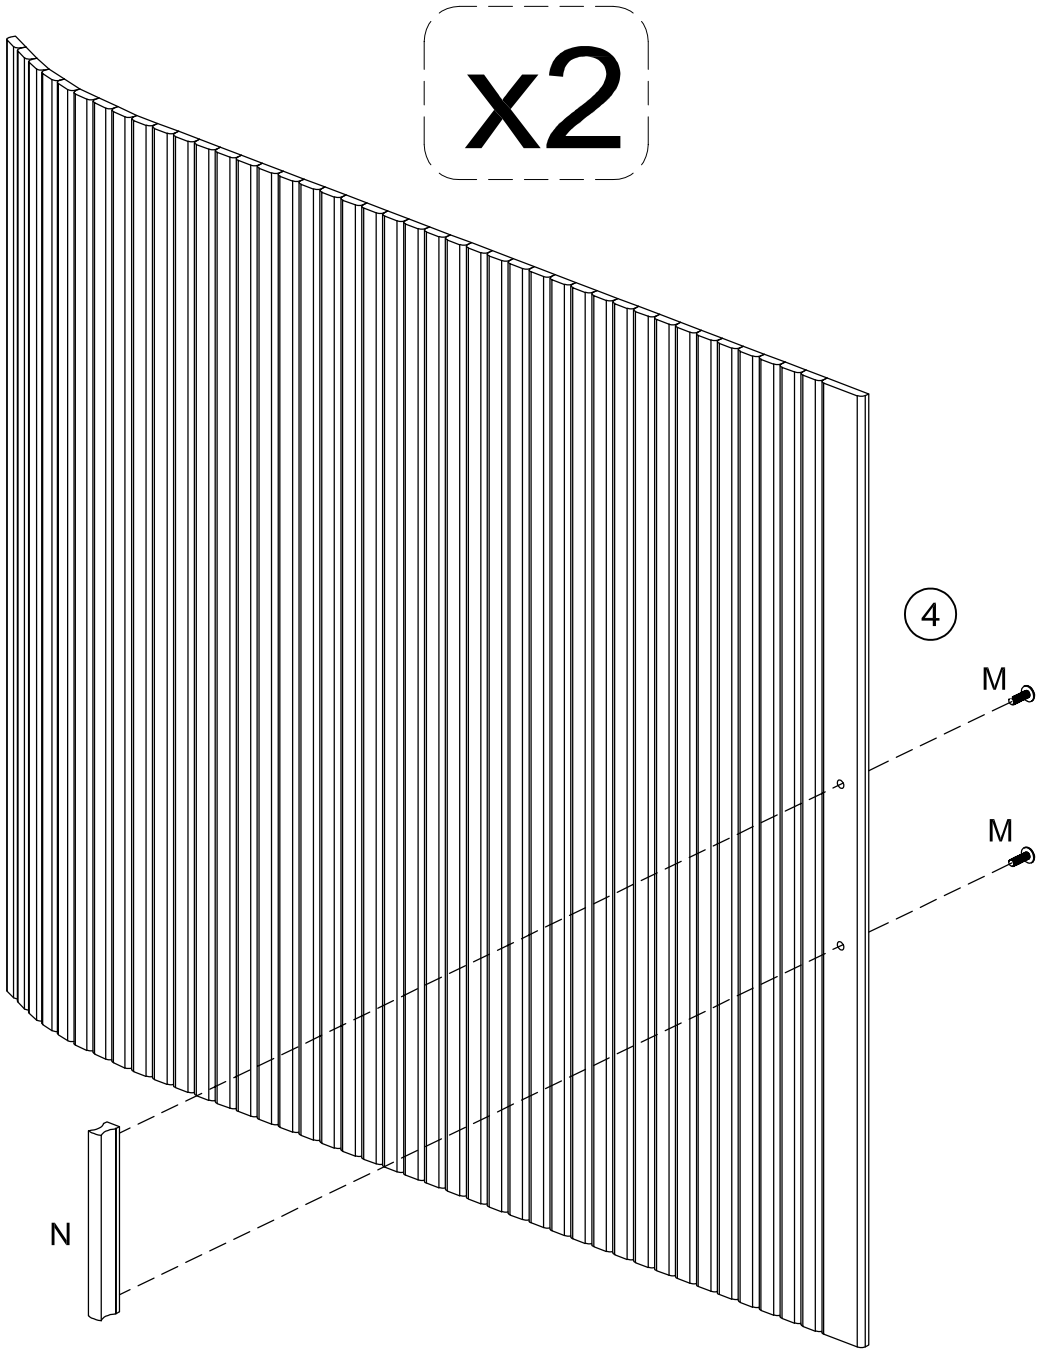


STEP 14

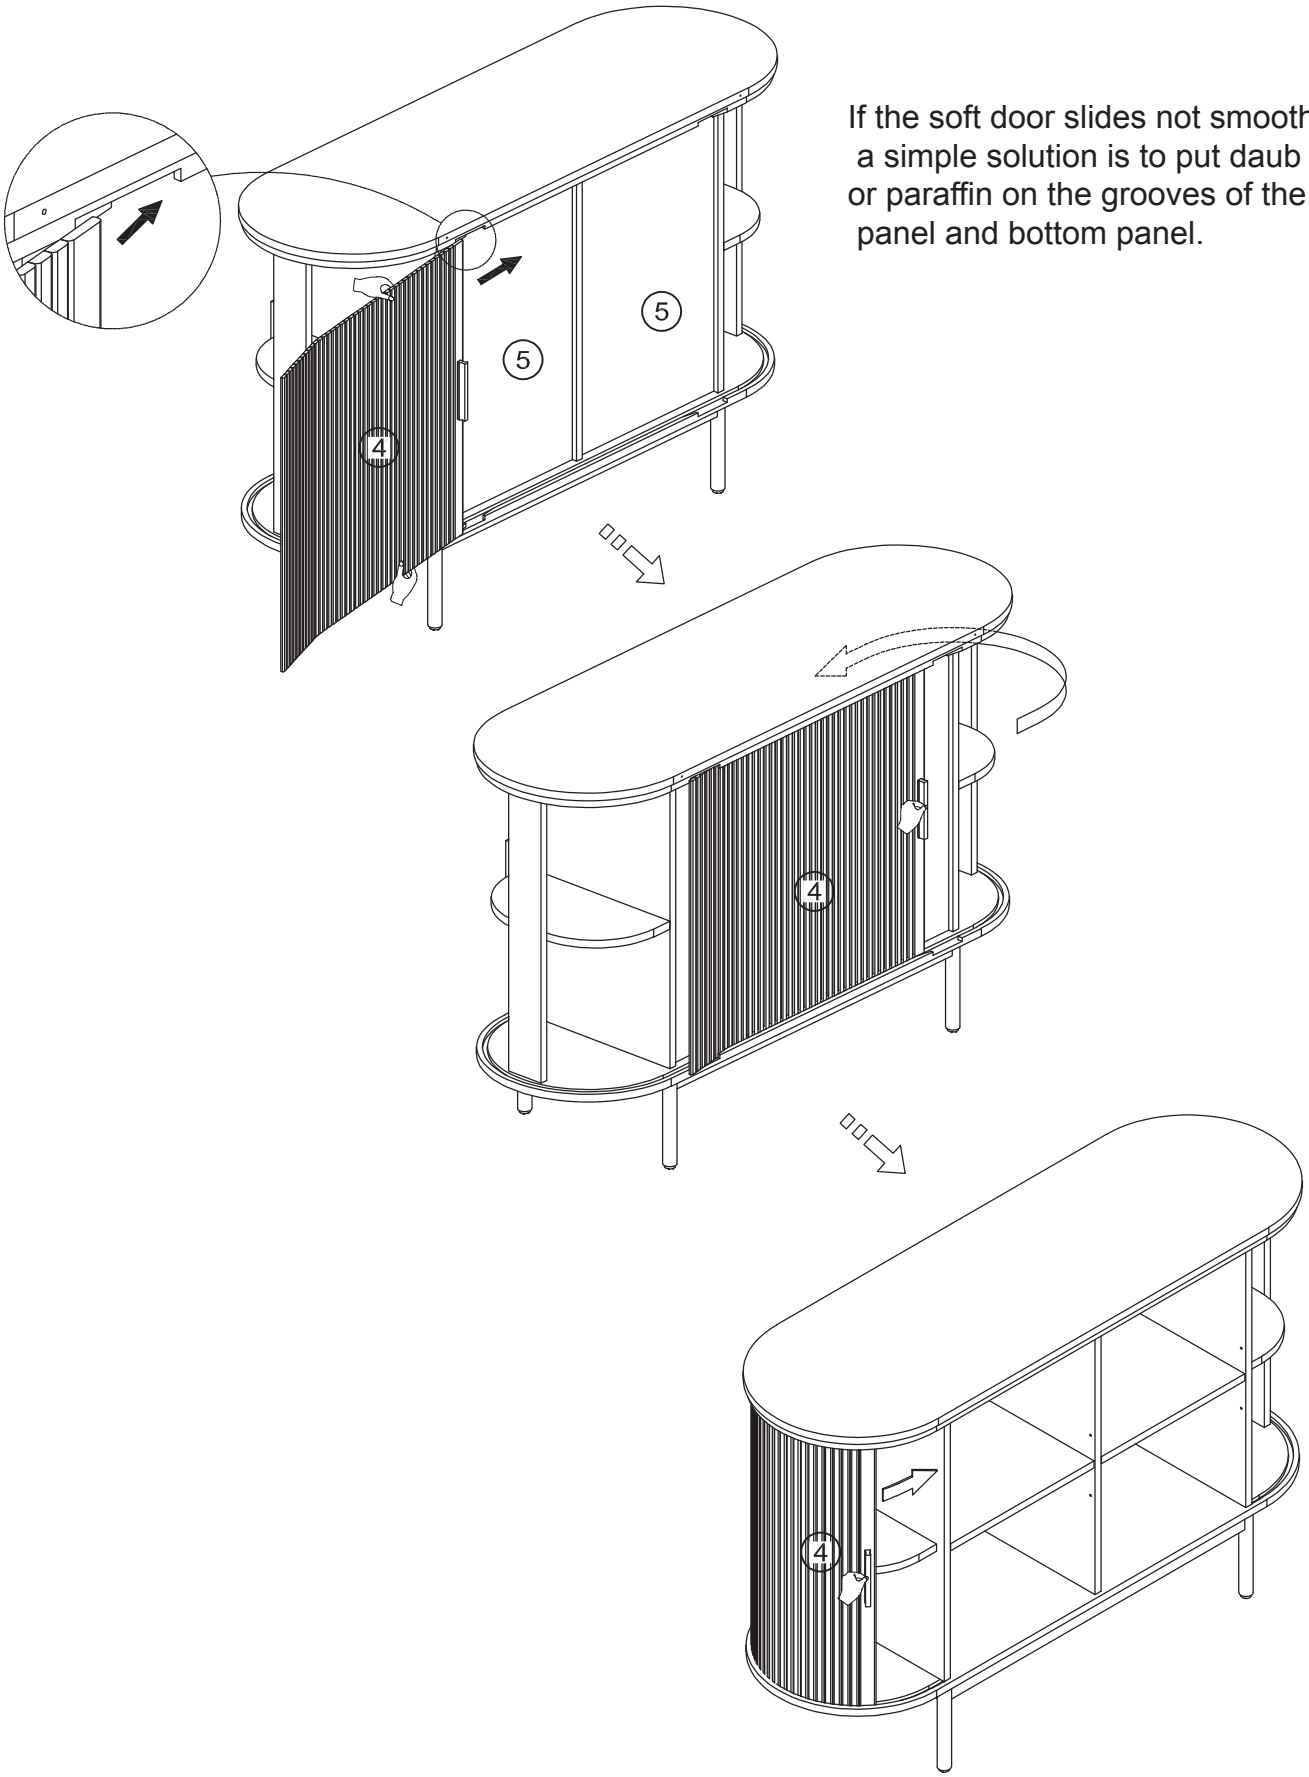


If the soft door slides not smoothly, a simple solution is to put daub wax or paraffin on the grooves of the top panel and bottom panel.

STEP 15

If the soft door slides not smoothly,
a simple solution is to put daub wax
or paraffin on the grooves of the top
panel and bottom panel.

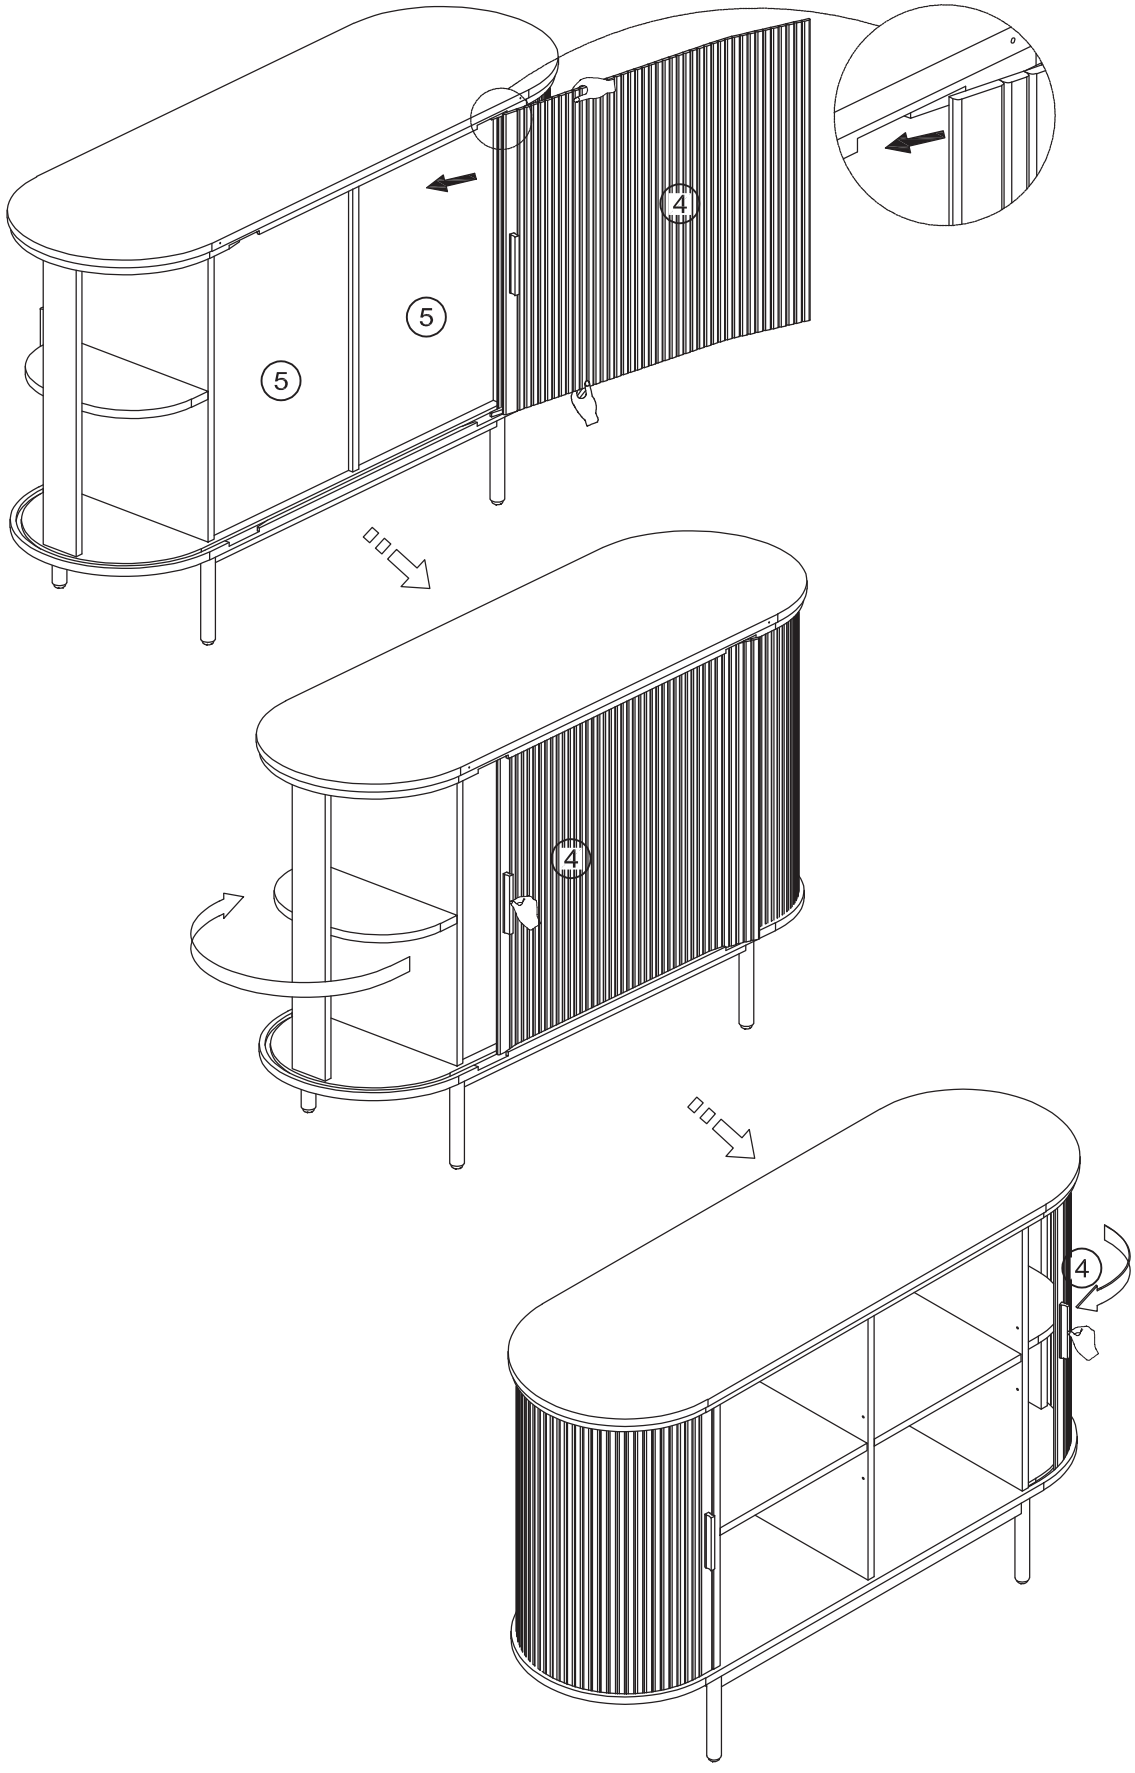



STEP 16

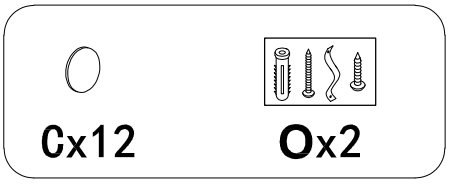


WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over, we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

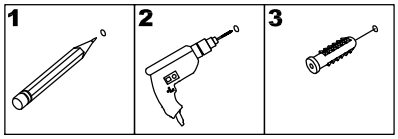

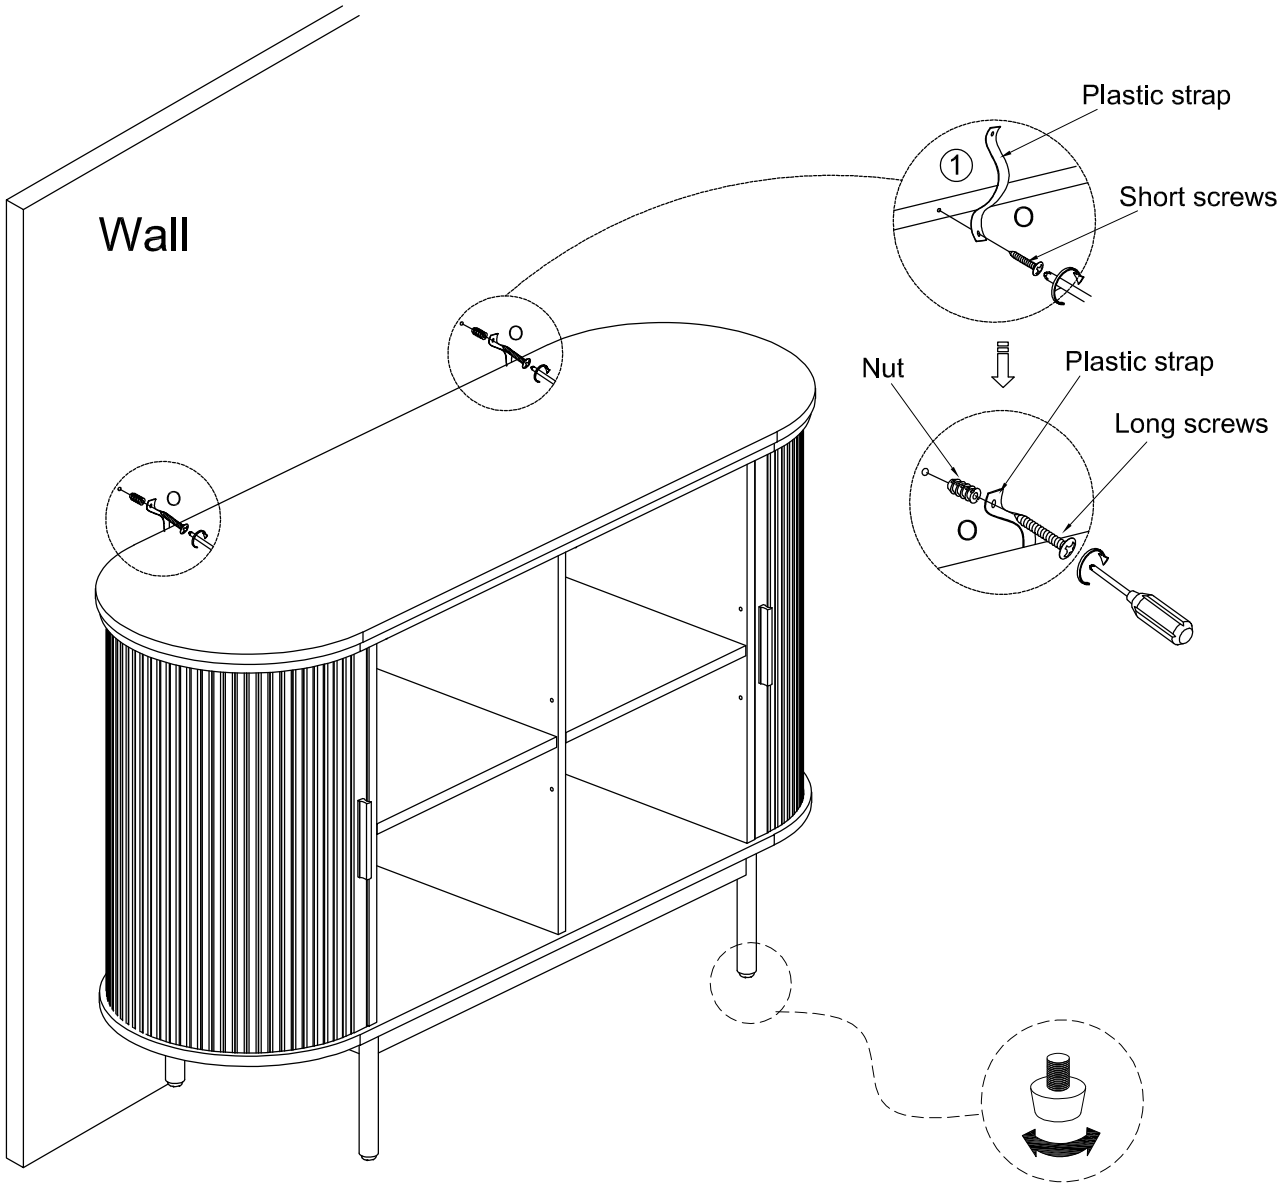

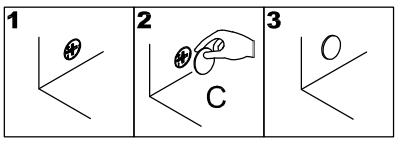

Use stickers(C) to conceal cam locks(B)

If the ground is uneven, adjust the foot levelers by rotating them to your preferred height.

Final Assembly