


















Installation & Assembly

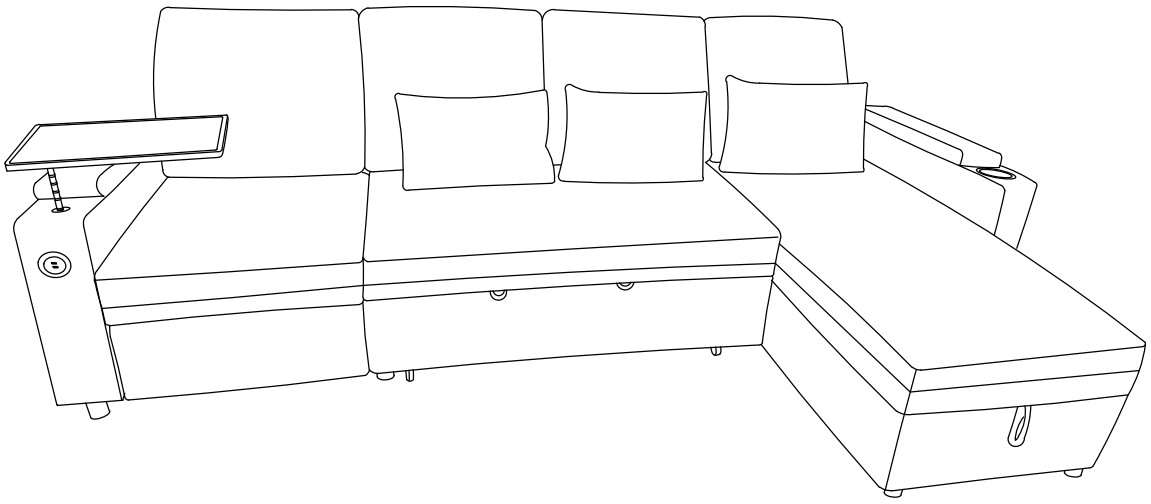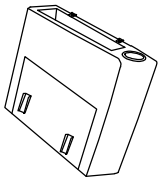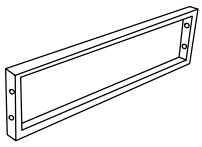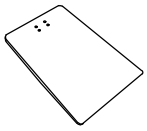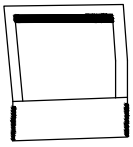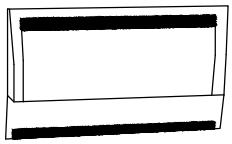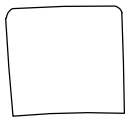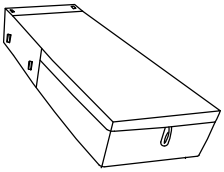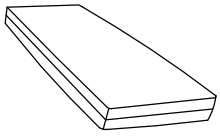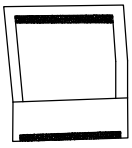


ASSEMBLY INSTRUCTION

A  x1	B  x1	C  x1	D  x1	E  x1
F  x1	G  x1	H  x1	I  x1	J  x1
K  x1	L  x12	M  x4	N  M6*35 x4	O  M6*16 x12
P  M6*12 x4	Q  x1	R  x1	S  x1	T  x1
U  x4	V  x3	W  x1	X  x1	Y  x1
Z  x4	AA  x16	AB  x1	AC  x1	AD  x1


STEP1:

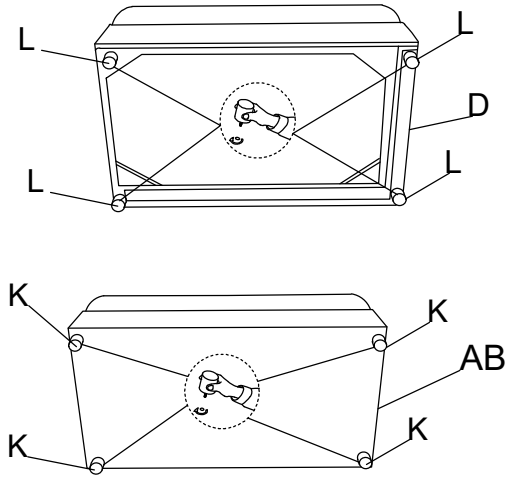


STEP2:

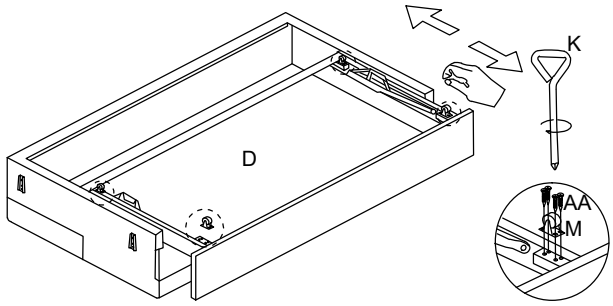


STEP3:

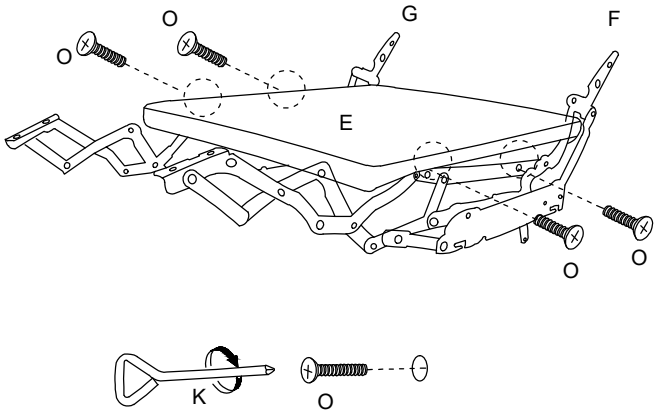

STEP4:

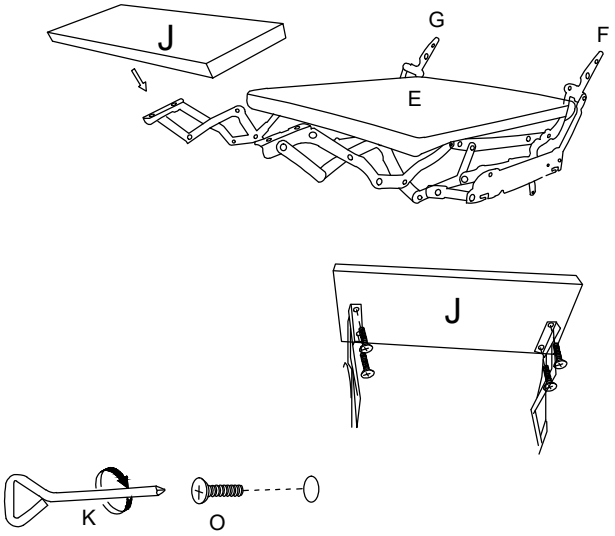


STEP5:

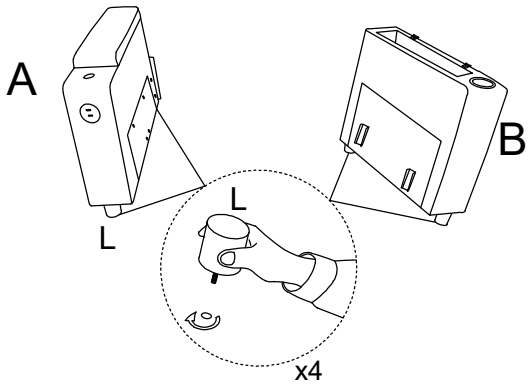


STEP6:

Screw the bolts pre-embedded in the handrail and seat frame **halfway**.

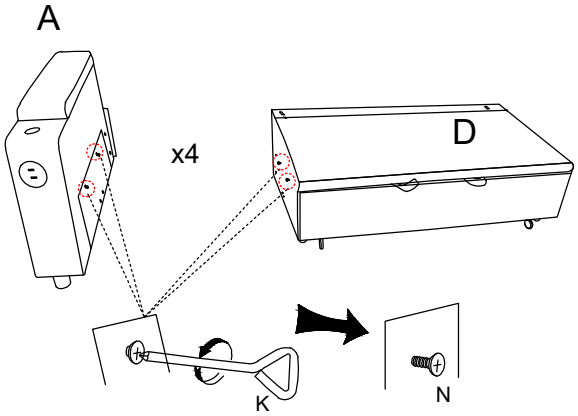

STEP7:


Insert the component assembled in Step 4 onto the screw **partially tightened** in Step 6.

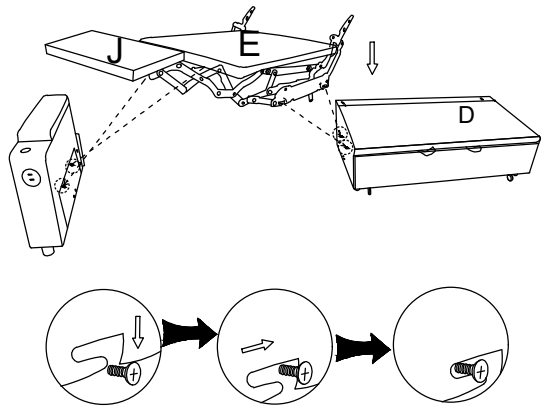


STEP8:

Flip the sofa forward so that the seat touches the ground.


Tighten the screw **partially tightened** in Step 6.

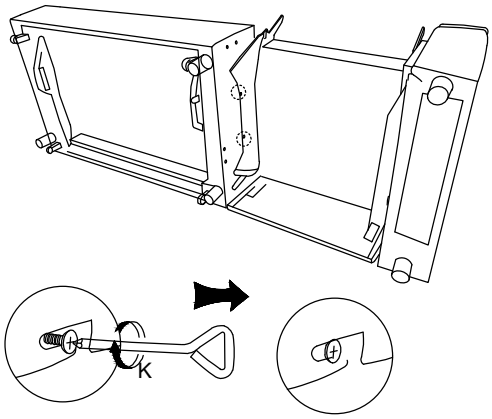

STEP9:

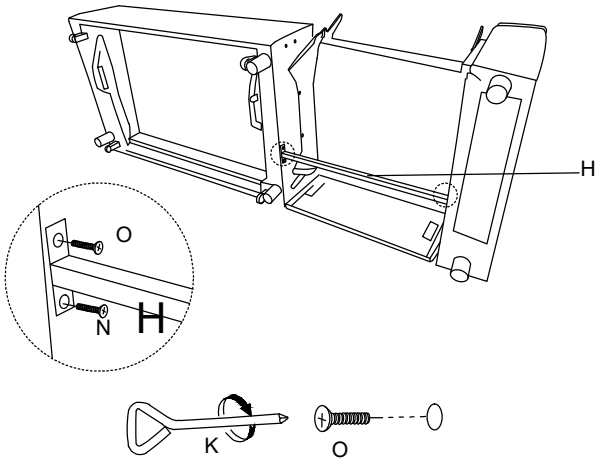


STEP10:

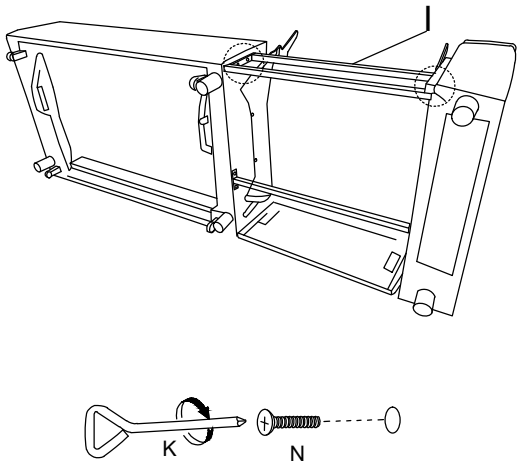


STEP11:

Tight Velcro.

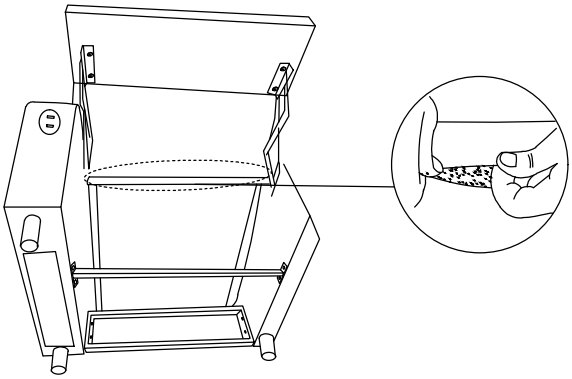


STEP12:

Insert the screen into the bracket until you hear a "click", then firmly attach the Velcro at the bottom.

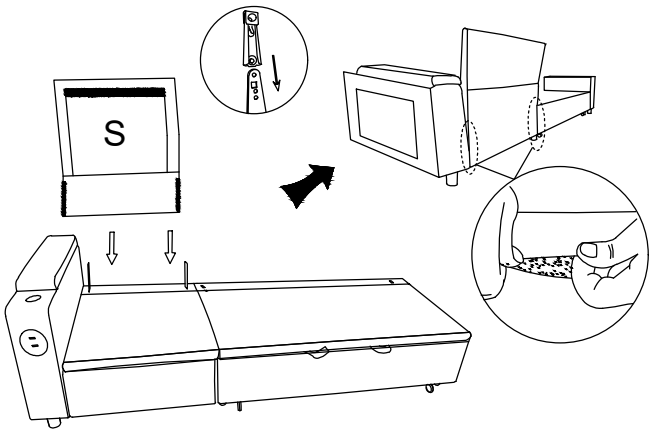


STEP13: Fold the connector into the shape shown in the figure, and then insert it into the holes behind the two seats and chaise body.

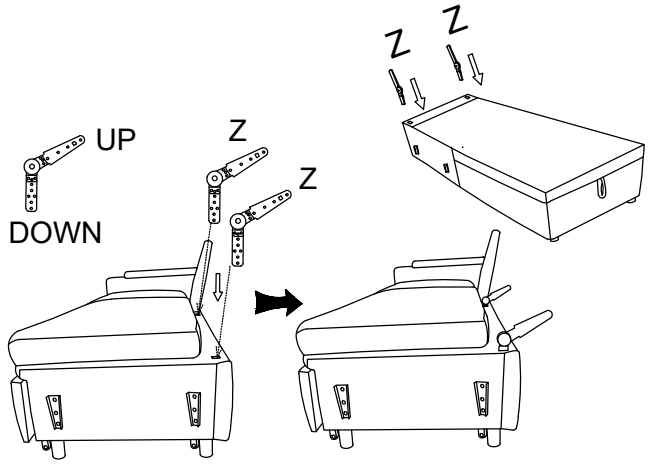


STEP14:

Insert the screen into the bracket until you hear a "click", then firmly attach the Velcro at the bottom.

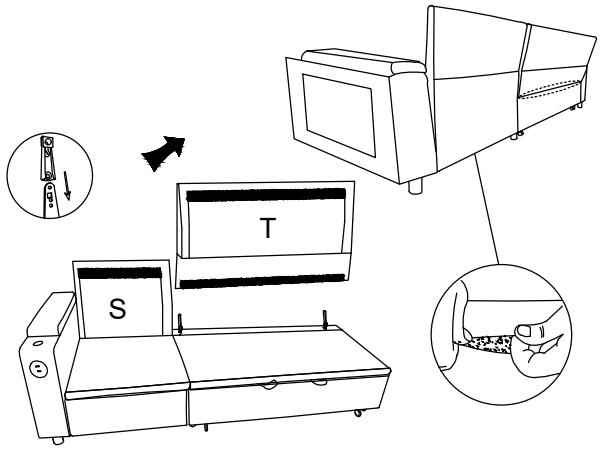


STEP15:


Insert the screen into the bracket until you hear a "click", then firmly attach the Velcro at the bottom.

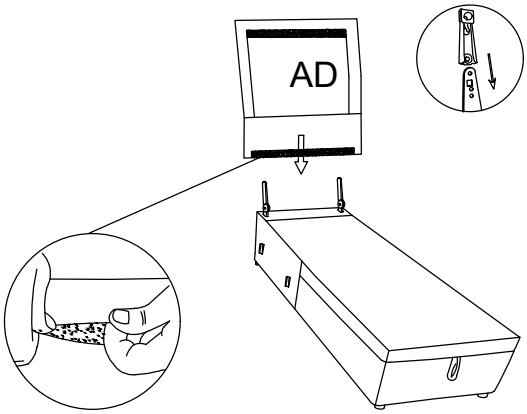


STEP16:

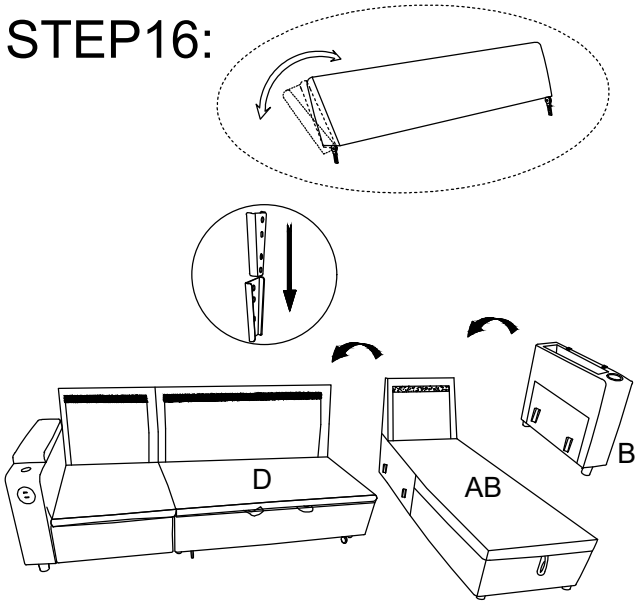


STEP17:

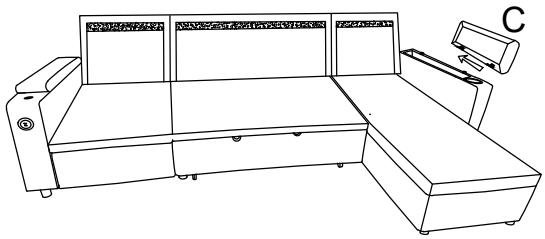


STEP18:

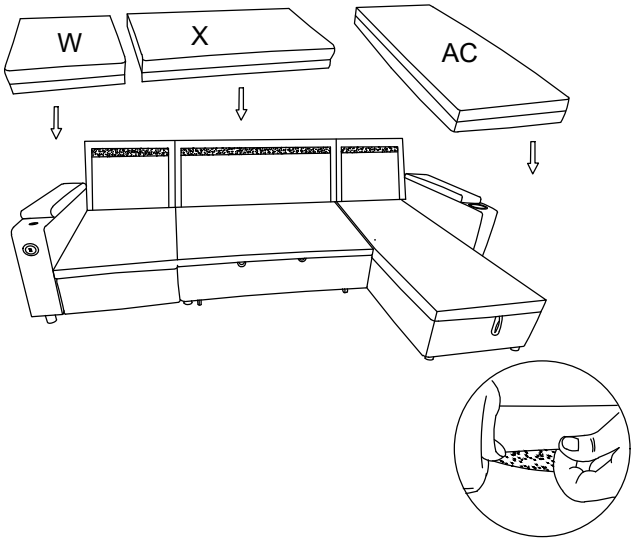


STEP19:

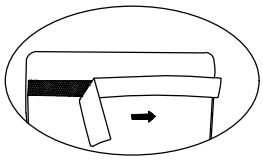


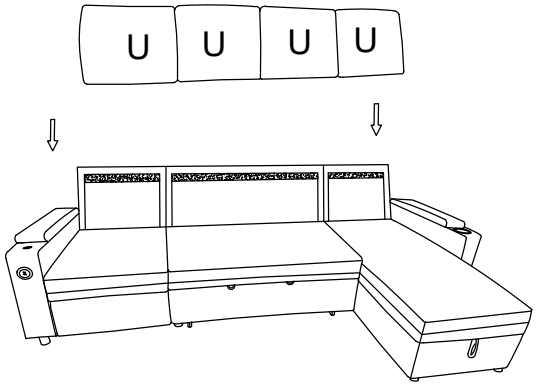


STEP20:

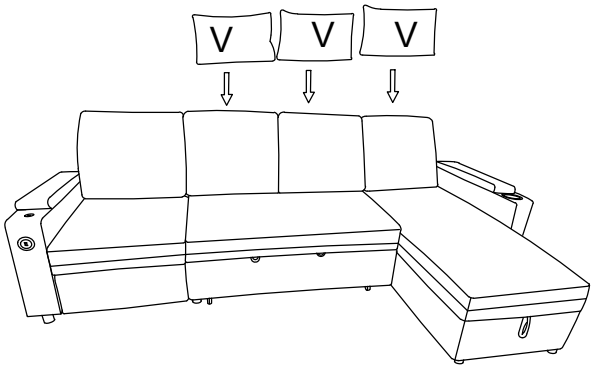


STEP21:

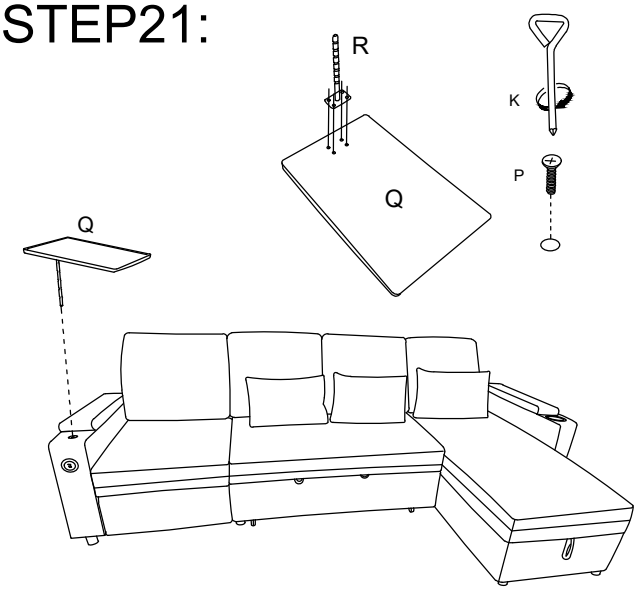

STEP22:

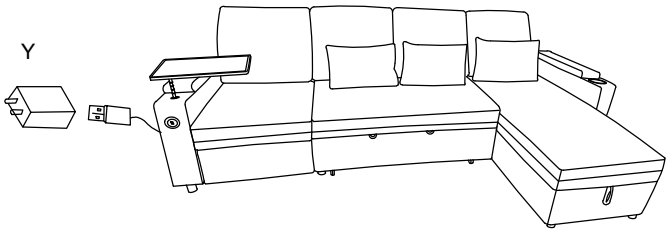

STEP23:

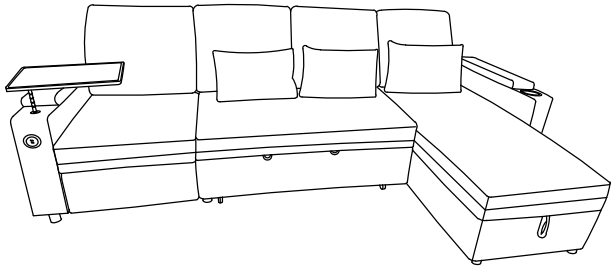

STEP24:

