


PRIVACY SCREENS

User Manual

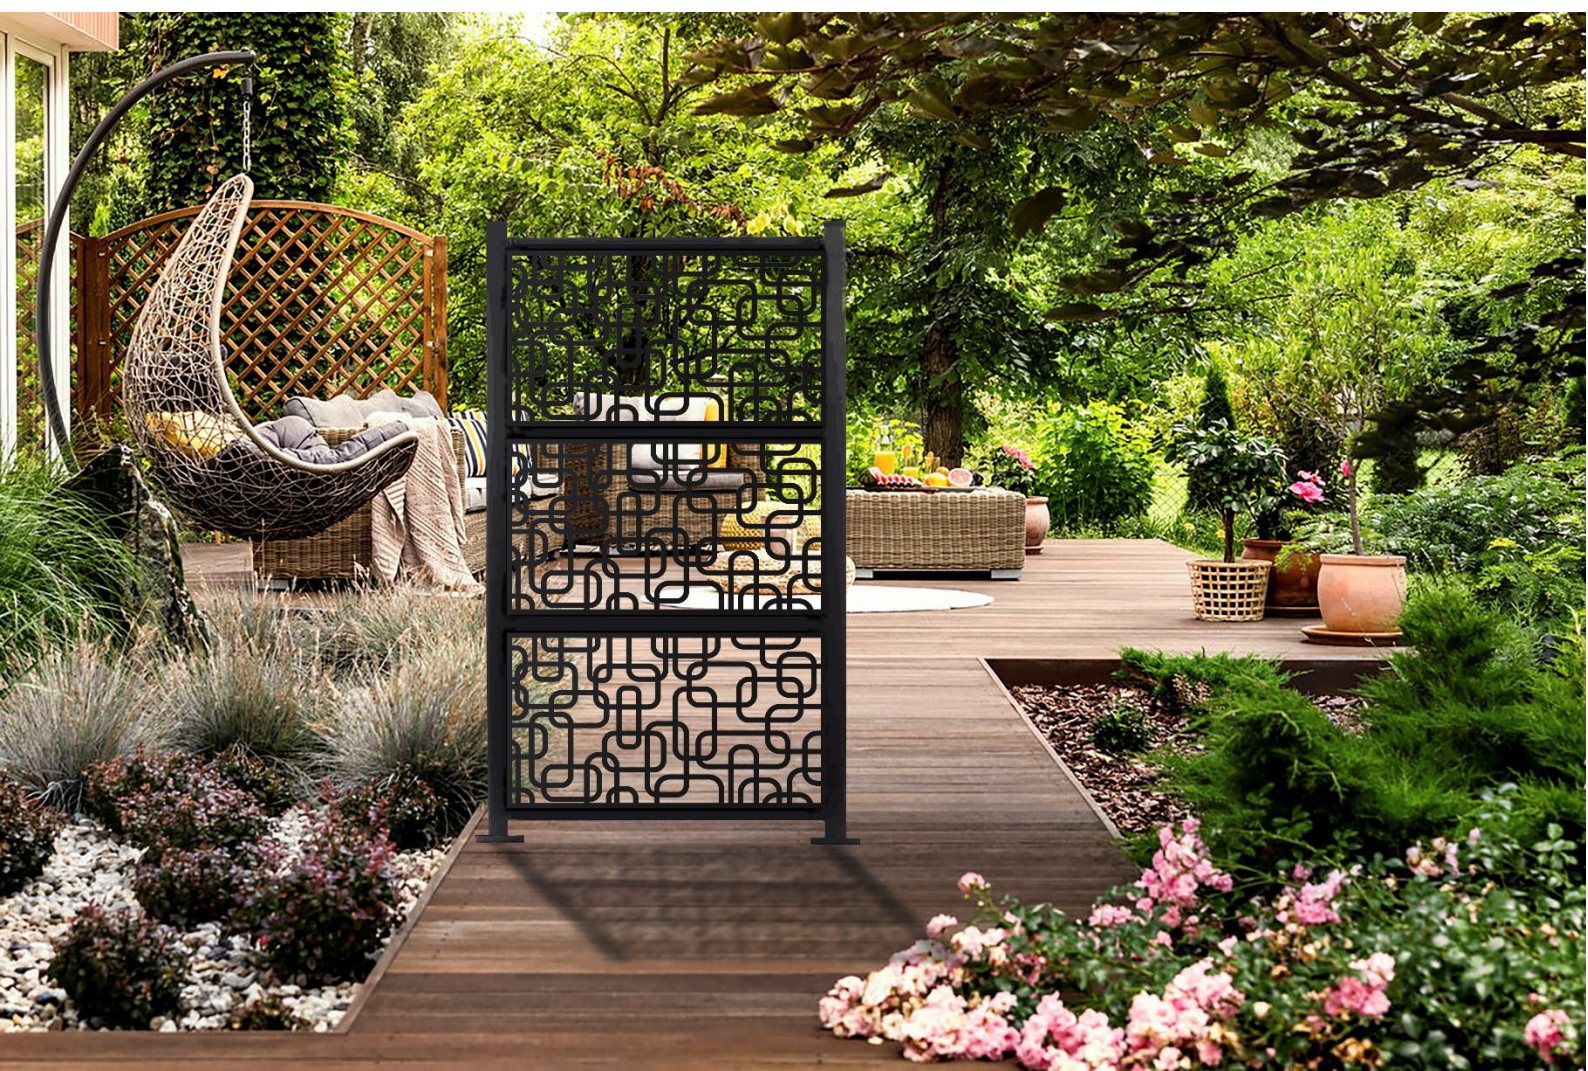

English

INTRODUCTION


Introducing the Highlander Home Inc. Screen assembly manual. In this manual, we will show you how to assemble your own Privacy Screen. Before beginning the assembly, make sure that there is ample room for installing and assembling your product. The amount of Base Shelf Trays with your assembly may also vary depending on the type of product purchased. In this manual, we offer the installation guideline of 3 different basic setups of privacy fence. You can use this as guideline to setup the privacy fence with your own configuration or customization.

Type 1 Horizontal 3 Stack Module Dimension: 4x6 feet	Type 2 Vertical 3 Stack Module Dimension: 6x4 feet	Type 3 Free Standing 3 Stack Stand (come with different Setup Hardware as Type 1 and 2)
 A black metal privacy screen with a white leaf pattern, consisting of three horizontal panels stacked vertically. It has a simple rectangular frame with a base and top rail.	 A black metal privacy screen with a white leaf pattern, consisting of three vertical panels stacked horizontally. It has a simple rectangular frame with a base and top rail.	 A black metal privacy screen with a white leaf pattern, consisting of three horizontal panels stacked vertically. It has a more complex frame with a base and top rail, and a side rail for stability.

PRIVACY SCREEN VARIANTS

There are unique patterns and variations for you to choose from for your ideal assembly of **the Privacy Screen**. Below are the available options that HighLander offers that suit your **desired** pattern and variation. We offer variety of patterns and configurations, for more information. Please visit www.youshouldhaveit.com or contact info@youshouldhaveit.com. We offer favorable discount if you purchase from our website.

TYPE 1

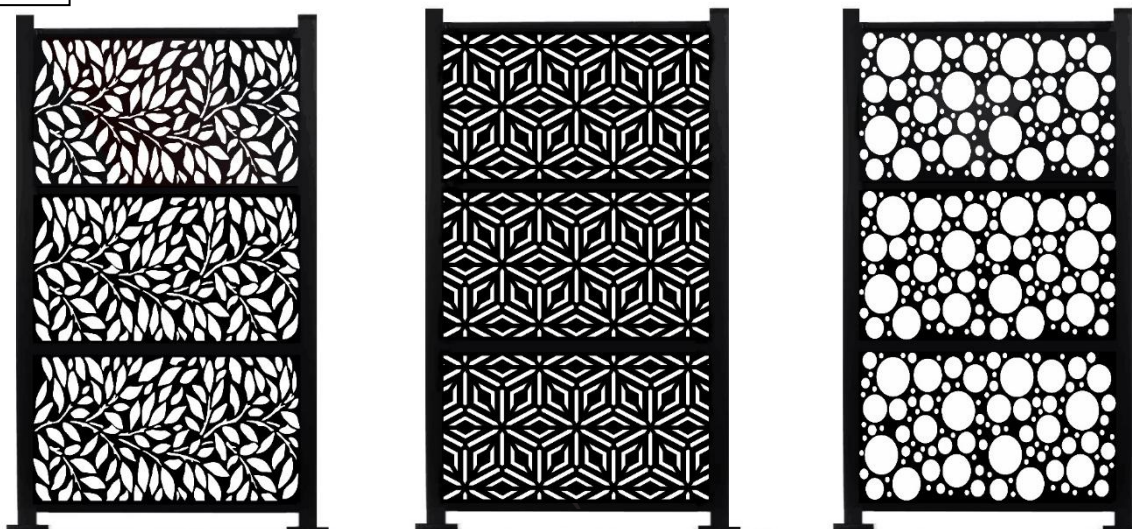

TYPE 2




TYPE 3



PARTS

Below is a breakdown of how the parts will come together for your final product, as detailed in a simplified exploded view below

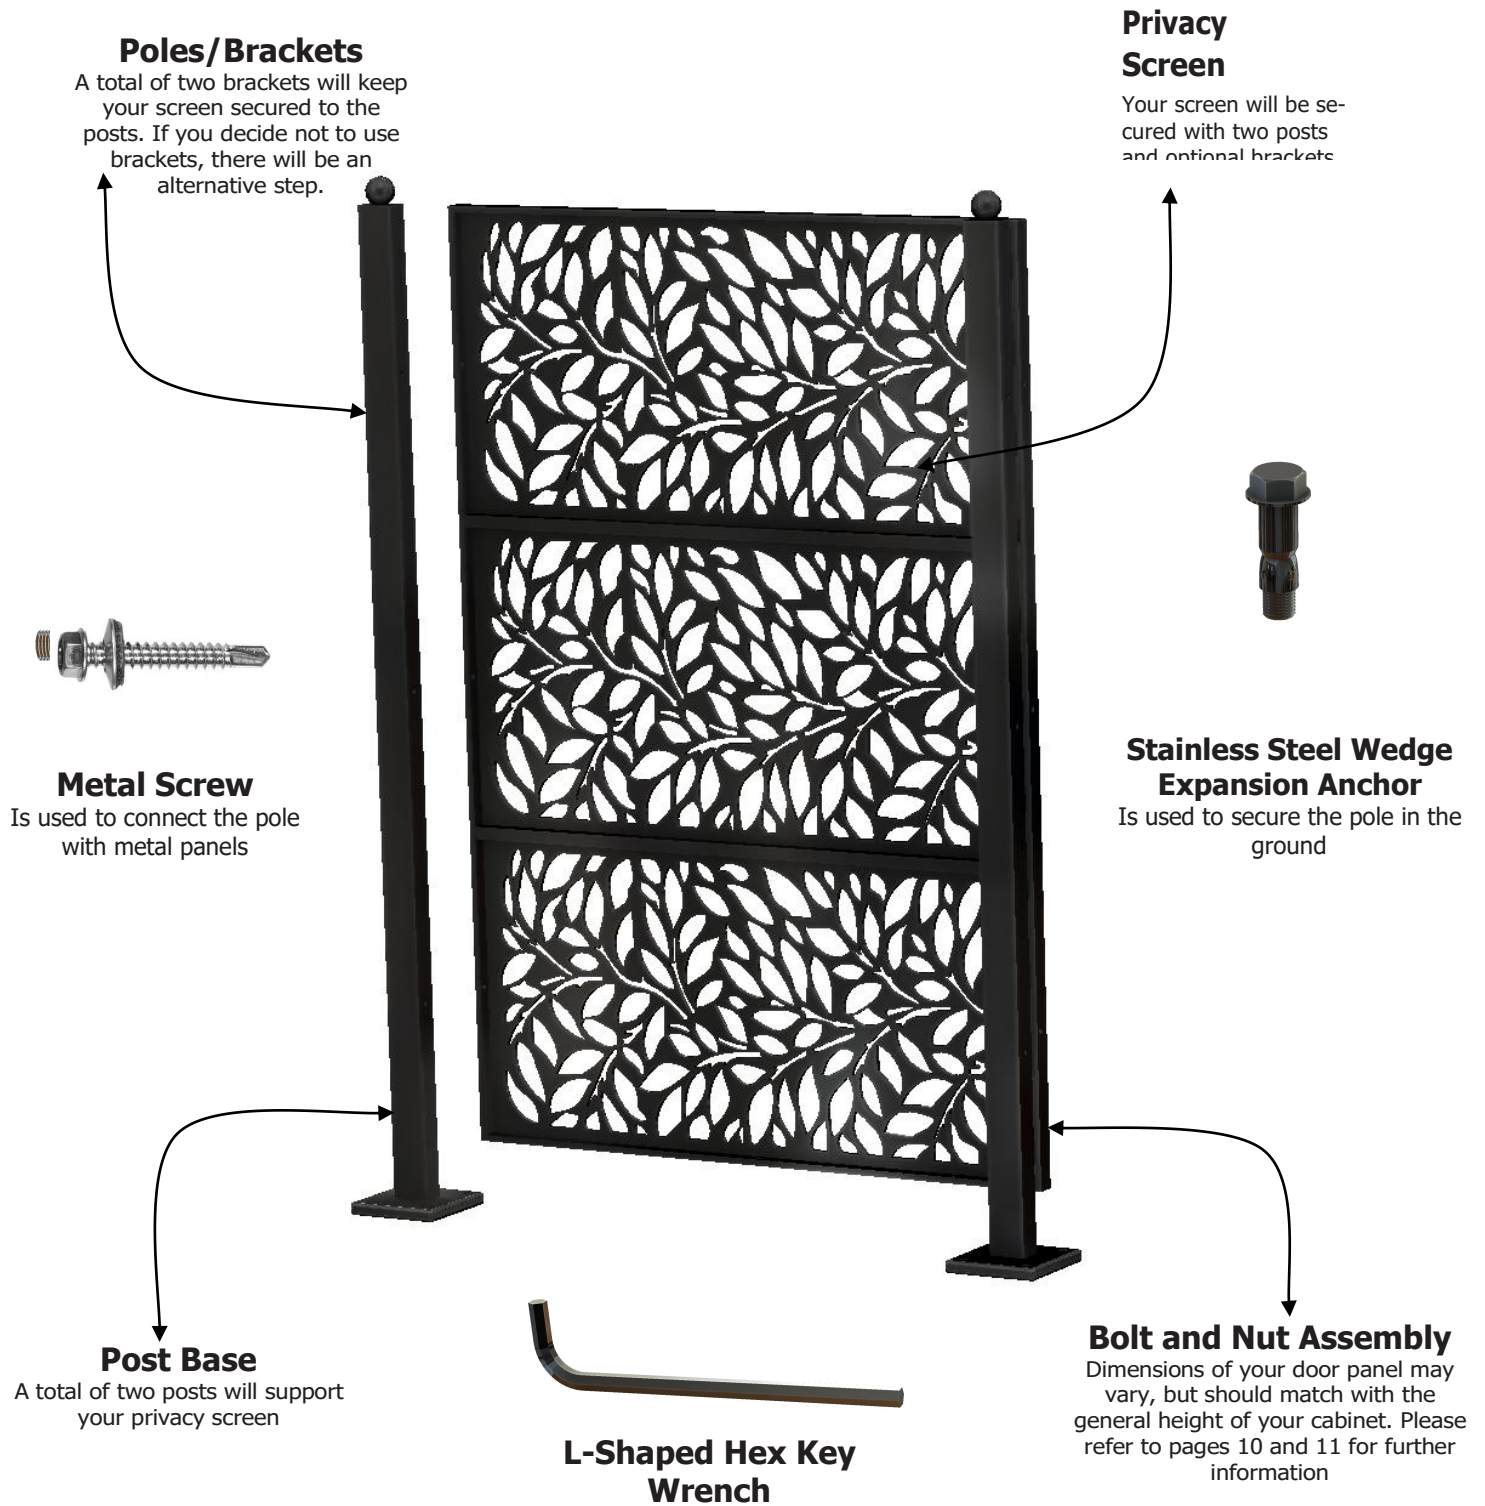

Type 1

Not all installs require posts. Highlander Privacy Screens are designed to also be mounted to custom pillars, framed in wood, or other surfaces. It's as easy as just face mounting them or building a frame for them to sit in.

HORIZONTAL 3 STACK MODULE



- The following pages will show how to install the privacy screen in Horizontal 3 stack module. If you wish to install the screen in Vertical stacking, please refer to page 10.

Scan to play installation Video for Horizontal 3 stack module

Or you can type in the following address to get the video

https://youtu.be/7_0kQTvgPtE

Note: the pole installation might be Different as we are transitioning to 2pc pole and base setting




INSTRUCTIONS

Step 1 - Choose a desired location and measure




1. Have adequate space for installation

Begin Step One by choosing a desired location and gather the required tools to assist you in measuring the **specifications and dimensions to set up your privacy screen** installation.

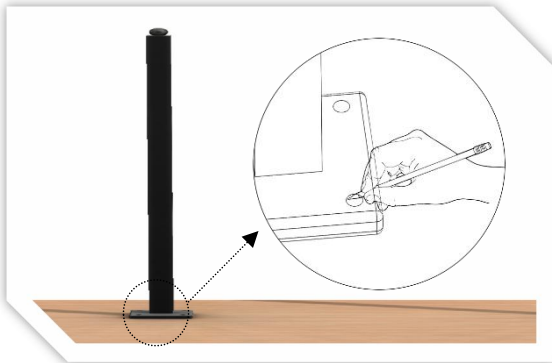

2. Mark Anchor Bolt spots and Install the post and secure at appropriate distance

Once your desired location has been determined, mount the post to the location and move on to next step.

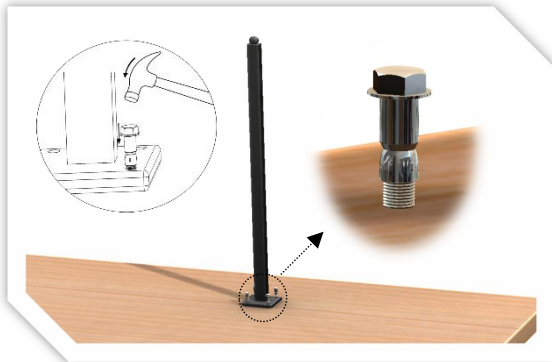


3. Secure the post

Drill the Hole to secure Anchor bolt. Drill Bit might not include. **Secure** post using a total of four Anchor bolts, two on each corner of the post, as shown.


INSTRUCTIONS

Step 2 - Install the brackets and privacy screen

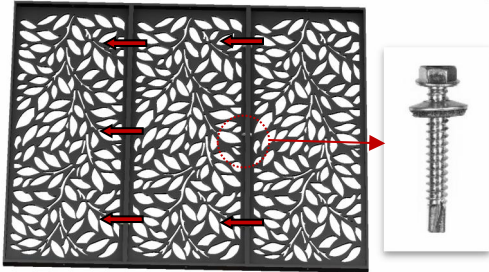


1. Connect metal panels with metal screws

Assemble all three screens with screw by aligning the **privacy screen into appropriate screw places so that it becomes flush with the each other** and have another person to keep the privacy screen intact.

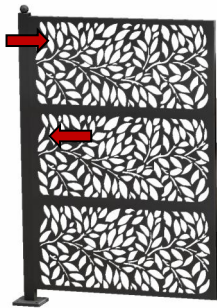

2. Connect the metal panels with Pre-setup pole using metal screws

Secure the privacy screen to the bracket using the metal screws. Tighten the hardware while holding the parts into place.

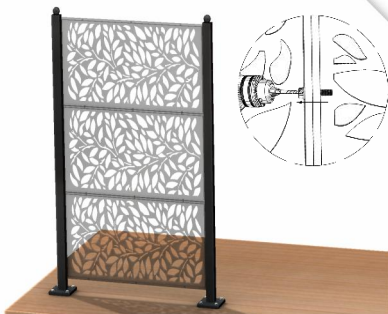

3. Backup the metal screws previously connected panels

Use drill bit to enlarge the holes, Reconnect the panels using screws and bolts. Tighten the bolt and nut using the L shape wrench, Setup another pole and connect the other end of the panel to pole.



4. Repeat the entire procedure for each additional privacy screen, if desired

For each additional privacy screen, simply repeat the entire procedure until the total amount of privacy screens installed **is sufficient**.

Type 2

Not all installs require posts. HighLander Privacy Screens are designed to also be mounted to custom pillars, framed in wood, or other surfaces. It's as easy as just face mounting them or building a frame for them to sit in.

VERTICAL 3 STACK MODULE



- The following pages will show how to install the privacy screen in Vertical 3 stack mode. If you wish to install the screen which can be relocated and anchored to the ground when necessary, please refer to page 13.

Scan to play installation Video for Vertical 3 stack module

Or you can type in the following address to get the video

<https://youtu.be/chC56q8gDoY>

Note: the pole installation might be Different as we are transitioning to 2pc pole and base setting




INSTRUCTIONS

Step 1 - Choose a desired location and measure




1. Have adequate space for installation

Begin Step One by choosing a desired location and gather the required tools to assist you in measuring the **specifications and dimensions to set up your privacy screen** installation.

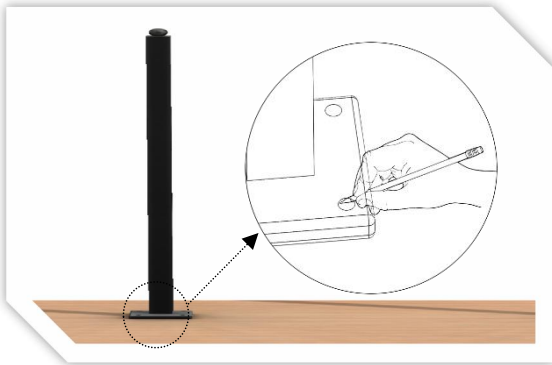

2. Mark Anchor Bolt spots and Install the post and secure at appropriate distance

Once your desired location has been determined, mount the post to the location and move on to next step.

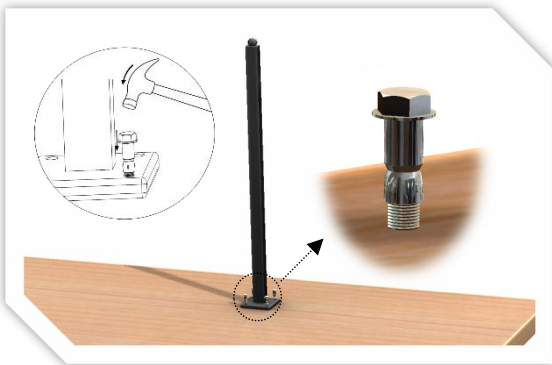


3. Secure the post

Drill the Hole to secure Anchor bolt. Drill Bit might not include. **Secure** post using a total of four Anchor bolts, two on each corner of the post, as shown.


INSTRUCTIONS

Step 2 - Install the privacy screen

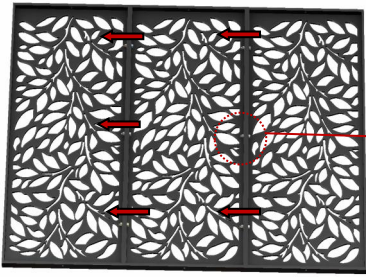

1. Connect metal panels with metal screws

Assemble all three screens with screw by aligning the **privacy screen into appropriate screw places so that it becomes flush with the each other** and have another person to keep the privacy screen intact.

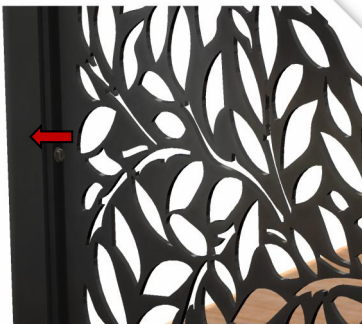

2. Connect the metal panels with Pre-setup pole using metal screws

Secure the privacy screen to the bracket using the metal screws. Tighten the hardware while holding the parts into place.



3. Backup the metal screws previously connected panels

Use drill bit to enlarge the holes, Reconnect the panels using screws and bolts. Tighten the bolt and nut using the L shape wrench, Setup another pole and connect the other end of the panel to pole.




4. Repeat the entire procedure for each additional privacy screen, if desired

For each additional privacy screen, simply repeat the entire procedure until the total amount of privacy screens installed **is sufficient**.

Type 3

This product is different from previous type 1 and 2. It comes with different installation hardware. It is free standing privacy fence. It can be relocated and anchored to the ground when necessary (anchor stake is not included)

3pcs Free Standing Privacy Fence Installation

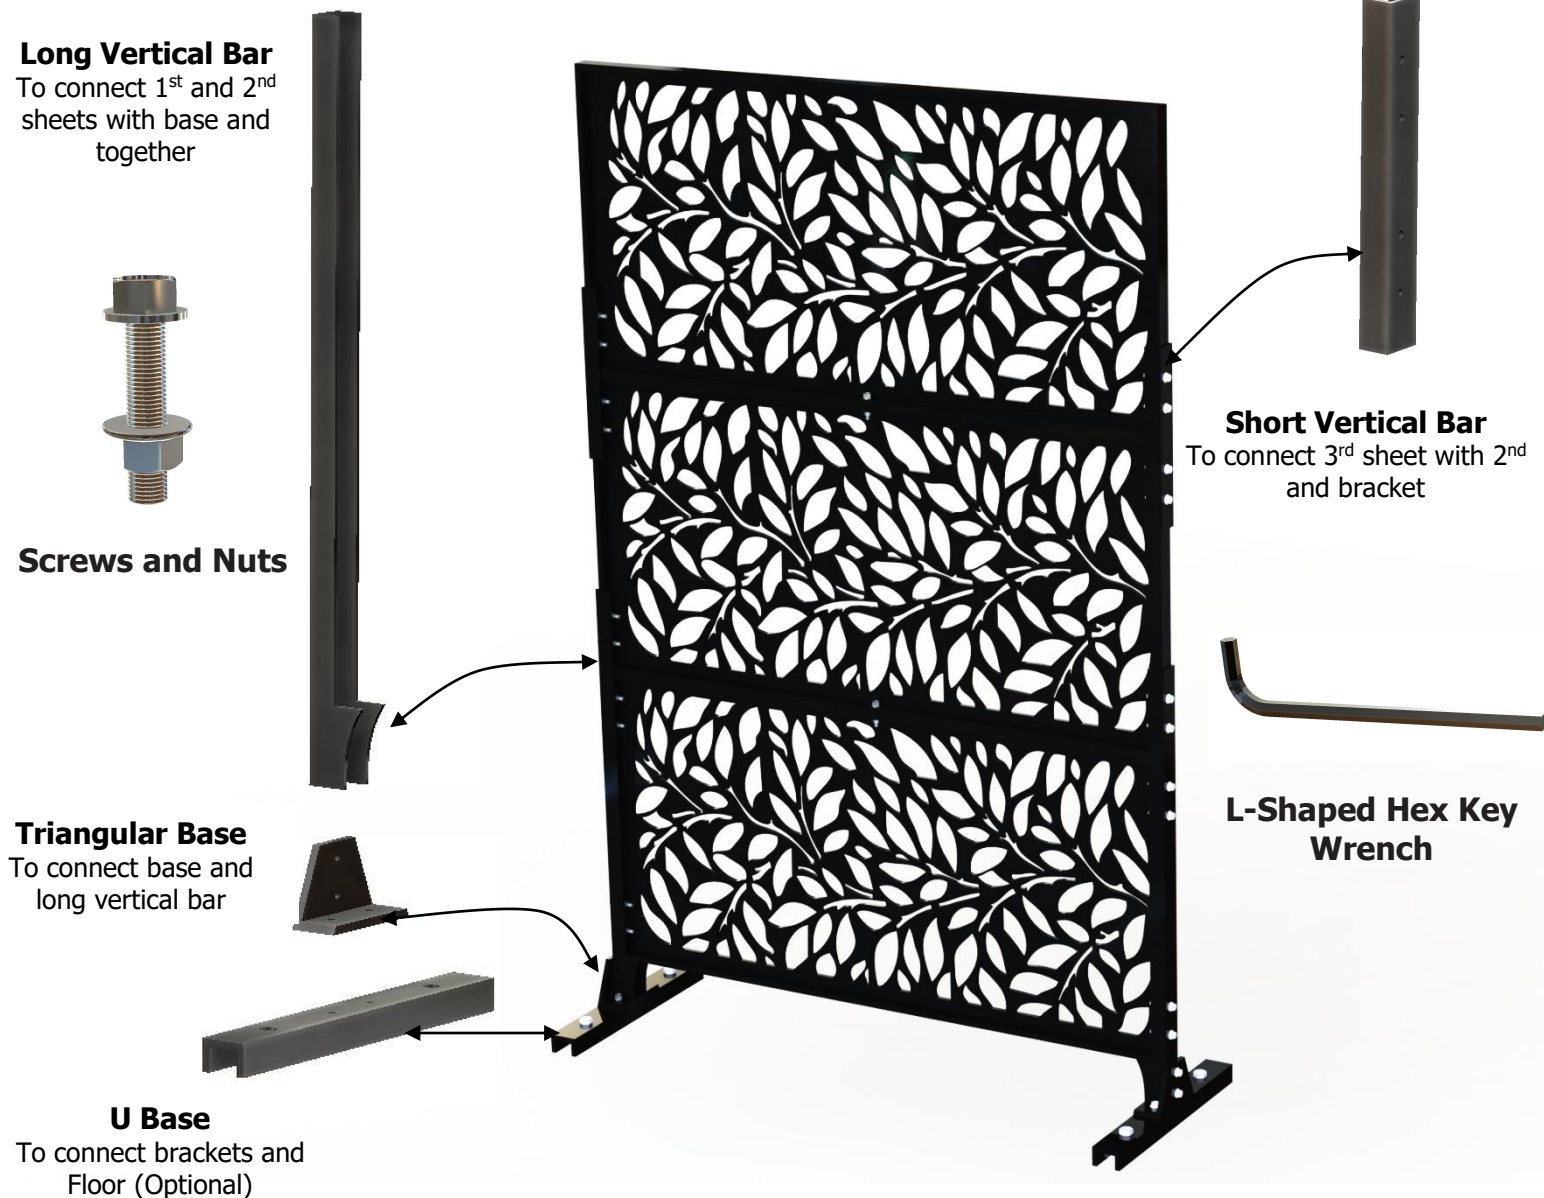

- The following pages will show how to install the privacy screen in 3pc free stand module. If you wish to install the screen with the provided single brackets, please refer to page 6

Scan to play installation Video for 3pc free stand module. Or you can type in the following address to get the video

<https://youtu.be/BLfNYnIJ8cAok>



INSTRUCTIONS

Step 1 - Choose a desired location and measure




1. Have adequate space for installation

Begin Step One by choosing a desired location and gather the required tools to assist you in measuring the **specifications and dimensions to set up your privacy screen** installation.




2. Install the posts Base and secure them (OPTIONAL)

Once your desired location has been determined, Place the posts to the location, mount (OPTIONAL) and install them at appropriate distance.

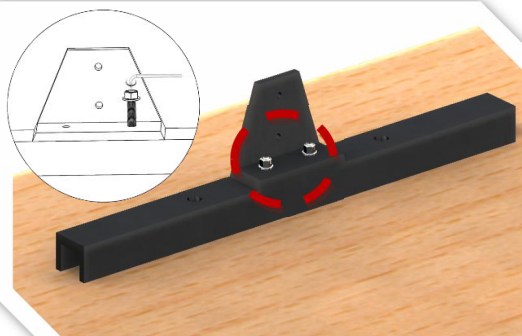

3. Secure the Base with triangular Part

Align the parts according to the holes and install Triangular part with the base using the L key, two on each corner of the post Bases, as shown. Take care not to over tighten the bolts.

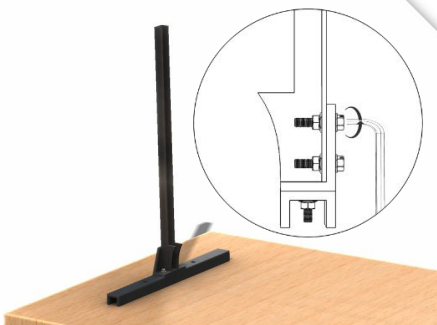

4. Install the Vertical Bracket and secure them

Locate the two Brackets and align them to the top of the triangular part. Secure the bracket to the posts base by Screws using the L key again.

INSTRUCTIONS

privacy screen

1. Locate the brackets and line up into place

Begin Step Two by locating the privacy screen to the inner sections of the post and line up the brackets to the holes, as shown. Have another person assist you and keep the screen intact.

2. Secure the privacy screen using screws

Secure the privacy screen using a total of ten screws, **five for each side. Tighten the screws using L key.**

3. Use the short bracket bar for 3rd sheet and repeat these steps for the remaining hardware

Add short expansion bars with installed panel Insert 3rd panel and secure with screws. Tighten the screws using the L key again. Repeat these steps for the remaining screws and sheets.

4. Repeat the entire procedure for each additional privacy screen, if desired

For each additional privacy screen, simply repeat the entire procedure until the total amount of privacy screens installed **is sufficient.**

Technical support

Get in touch with us and
we'd love to answer all
your questions or
comments. We have our
team ready to help with
anything you need.



www.youshouldhaveit.com



info@youshouldhaveit.com

There are unique patterns and variations for you to choose for your ideal assembly of the Privacy Screen. Below are the available options that Highlander offers that suit your desired pattern and variation. We offer variety of patterns and configurations. For more information, Please, visit

www.youshouldhaveit.com

Or contact information

info@youshouldhaveit.com

We offer favorable discount if you purchase from our website