

ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED:

Allen wrench (Provided, part # D)
Phillips Screwdriver (not provided)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS 1/2:

1. Turn the bar trolley back down on a clean soft surface.
2. Attach the Caster (G) into the bottom bolt hole of base unit using Bolt (A), Lock Washers (B) and Flat Washers (C), tighten with the Allen Wrench (D) as shown Figure 1.
3. Open drawer and the door for attaching the handles (F) using screw and screw driver as shown as shown Figure 2.



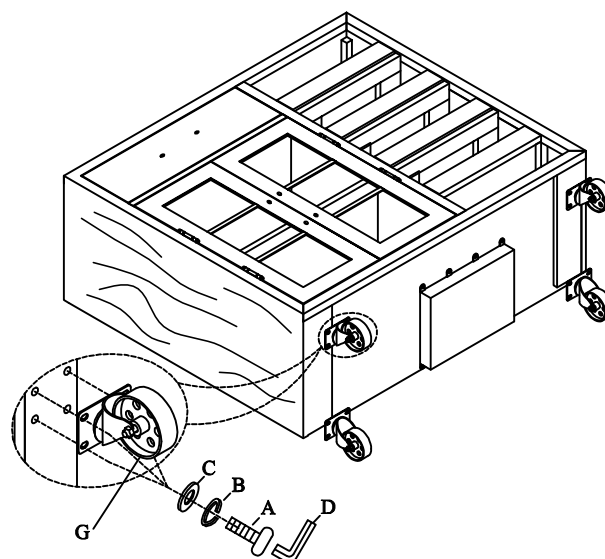


Fig.2



Thank you for purchasing furniture!

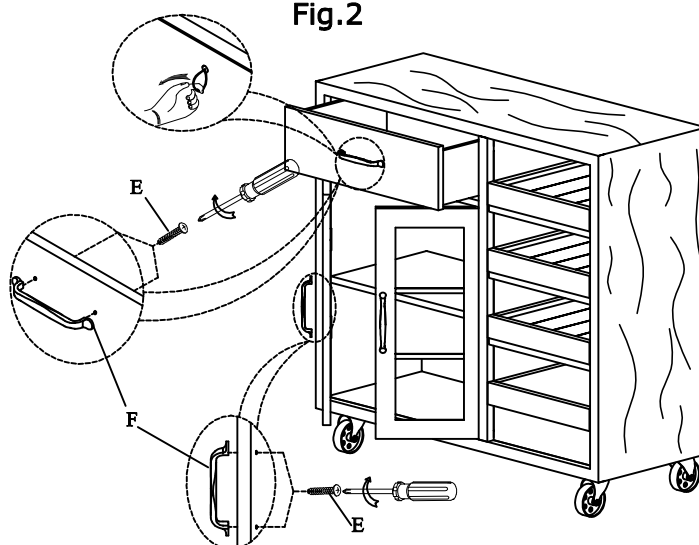

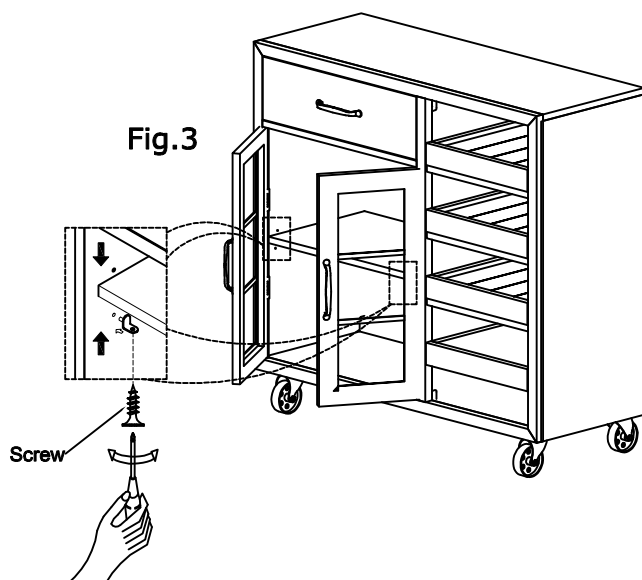





ASSEMBLY INSTRUCTIONS





INSTRUCTIONS 2/2:

4. Unscrew to adjust the shelves as shown Figure 3.

5. For the safe purpose, we recommend fixing of Anti-tip kit (H) as shown Figure 4.

No.	Hardware List		Q'ty
A		Bolt (Ø1/4"*5/8")	16pcs
B		Lock Washer (Ø1/4")	16pcs
C		Flat Washer(Ø1/4"x16mm)	16pcs
D		Allen Wrench	1pc
E		Bolt Ø5/32"*25	6pcs
F		Handle	3pcs
G		Caster	4pcs
H		Anti-Tip	1set

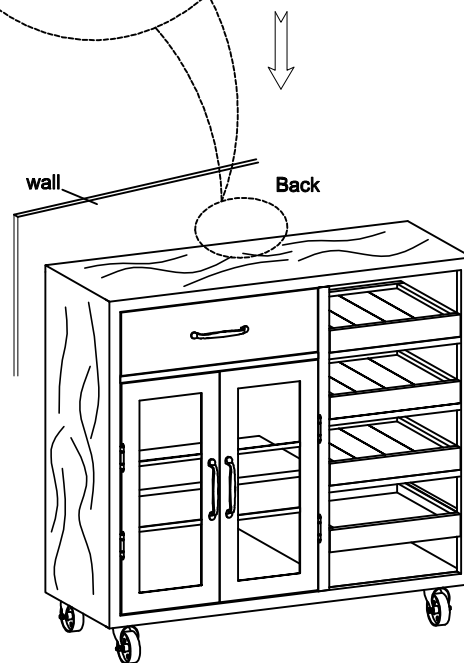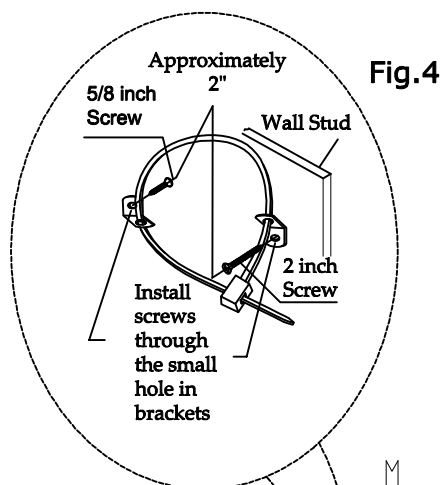

Thank you for purchasing furniture!