

DA0679

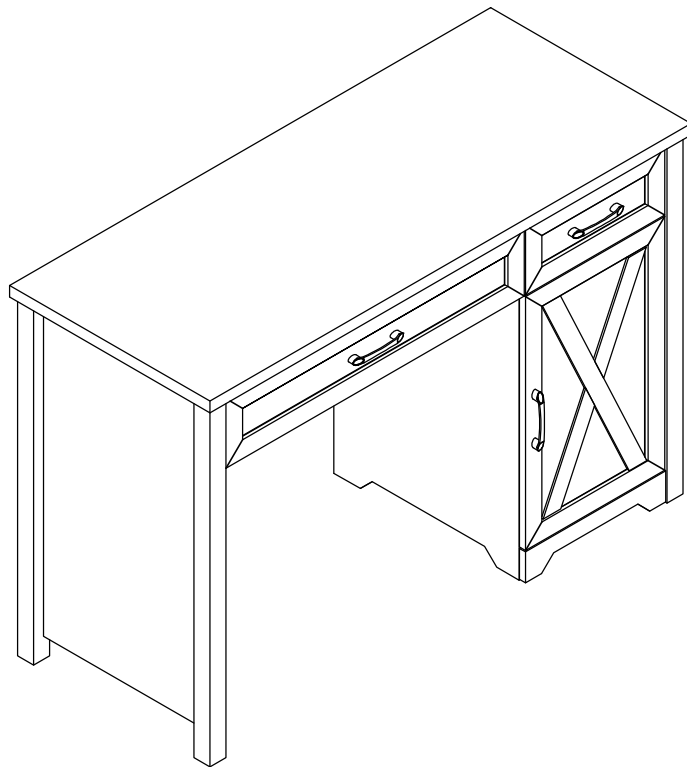


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

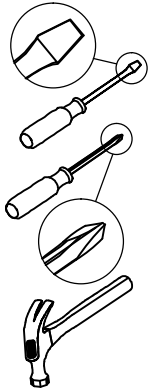

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification

Not actual size

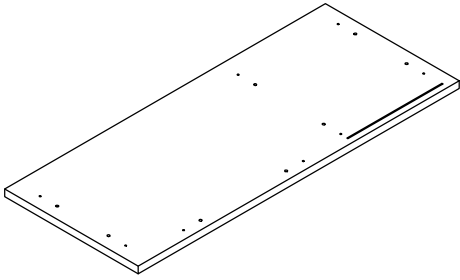


①

DESK TOP

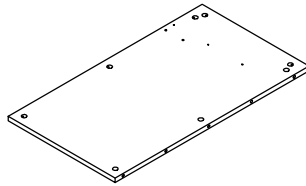


②

LEFT SIDE PANEL

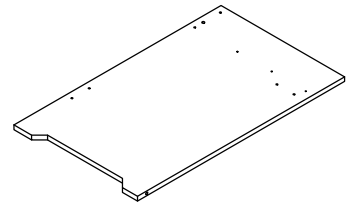


③

PARTITION PANEL

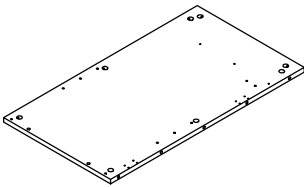


④

RIGHT SIDE PANEL

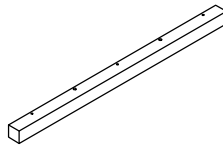


⑤

LEG

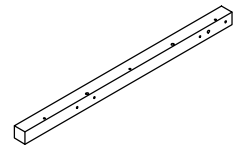


⑥

LEG

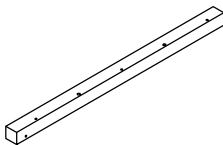


⑦

LEG

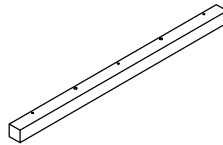

⑧

LEG

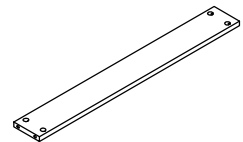


⑨

FRONT SLAT
Qty:2


Board Identification

Not actual size

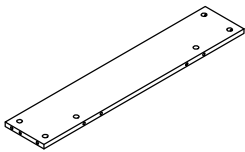


⑩

BACK SLAT




⑪

FRONT SLAT




⑫

BOTTOM FRONT RAIL

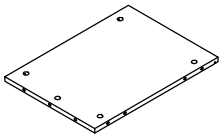


⑬

BOTTOM

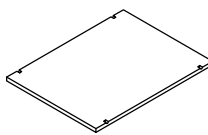


⑭

SHELF PANEL

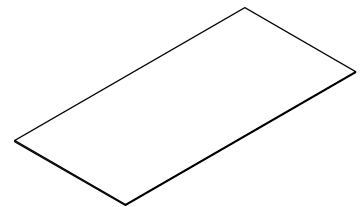


⑮

BACK PANEL

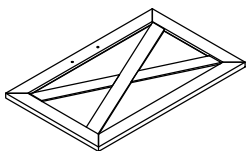


⑯

DOOR

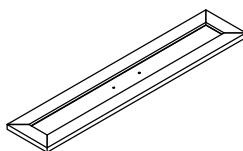

⑰

DRAWER FRONT PANEL




⑱

DRAWER FRONT PANEL


Board Identification

Not actual size




19

DRAWER LEFT SIDE PANEL
Qty:2




20

DRAWER RIGHT SIDE PANEL
Qty:2

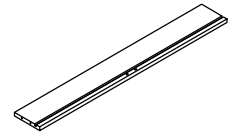


21

DRAWER BACK PANEL




22

DRAWER BACK PANEL




23

DRAWER BOTTOM SLAT

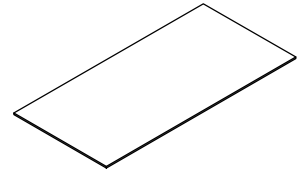

24

DRAWER BOTTOM PANEL




25


DRAWER BOTTOM PANEL

Board Identification

Not actual size

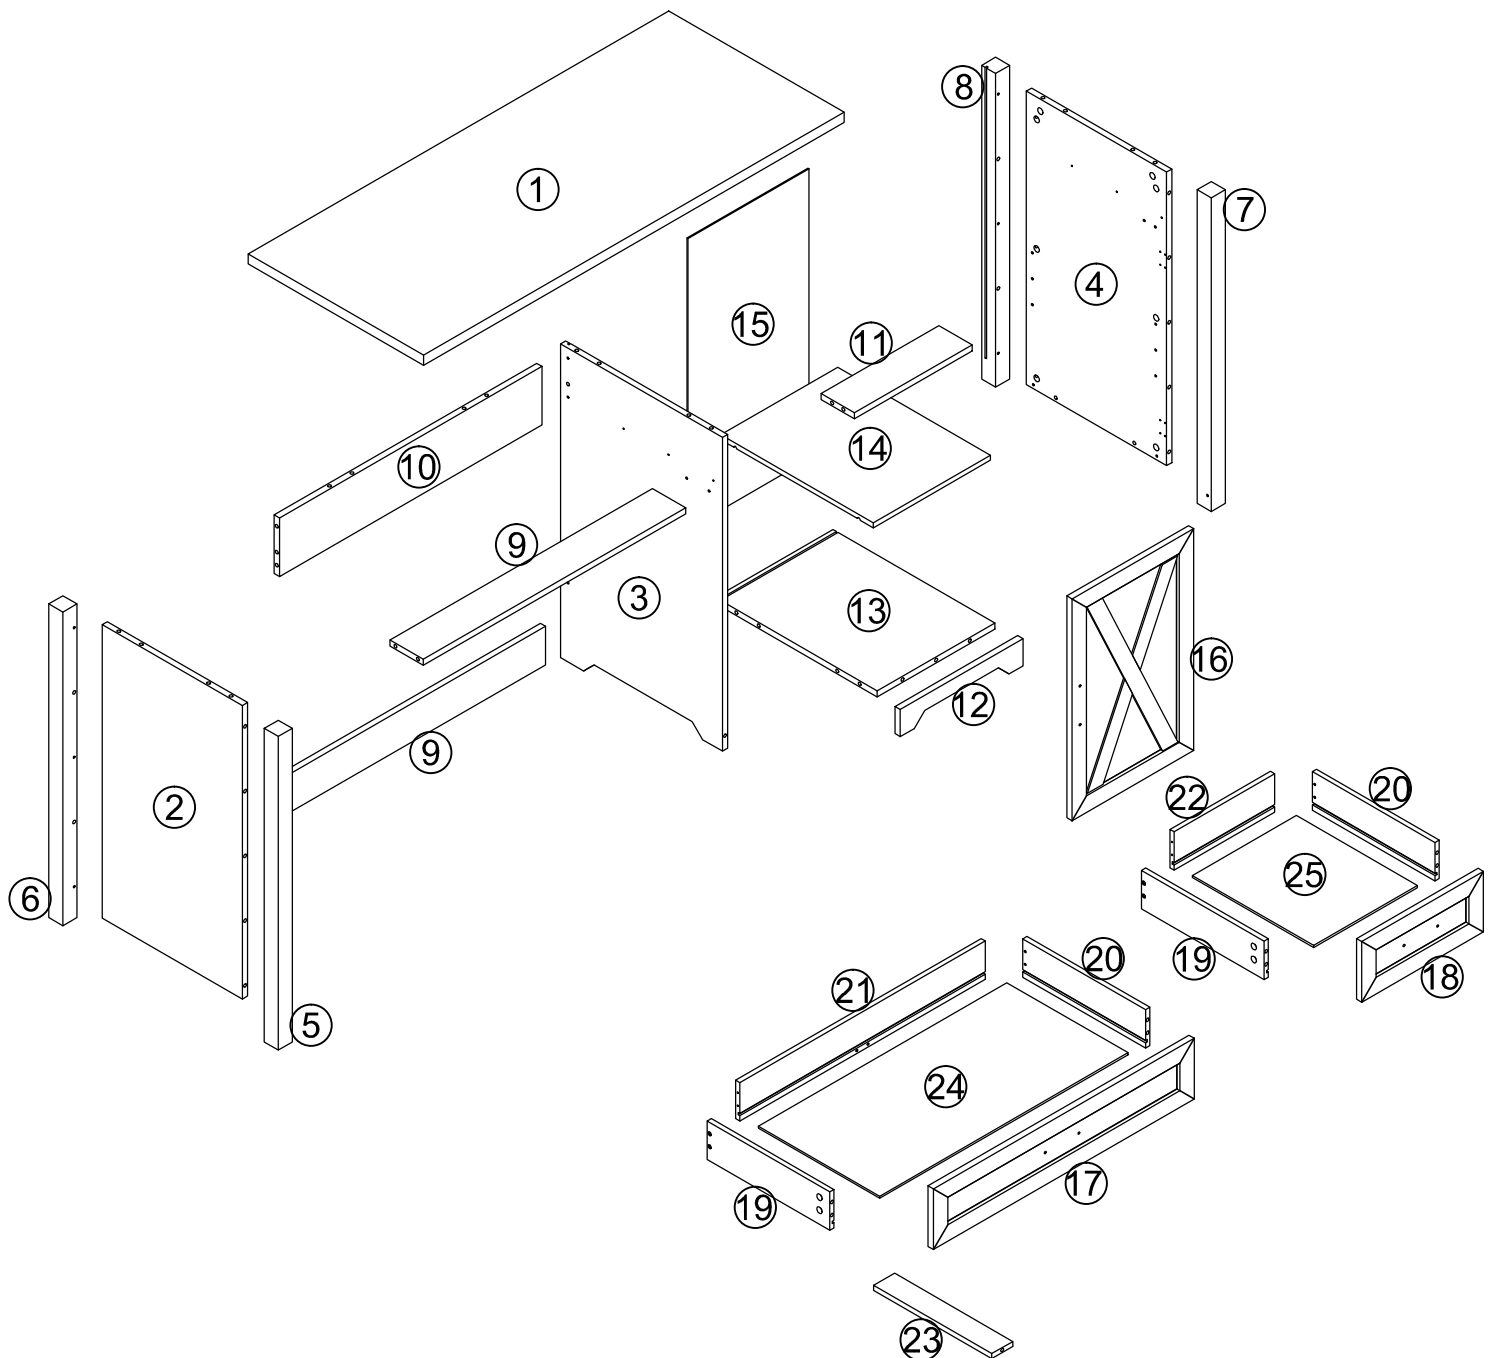


Part List

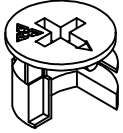

Ø15X9mm

(A) X52

CAM LOCK
spare: 3



ø6.5X35mm

(B) X52


CAM BOLT
spare: 3



ø8X30mm

(C) X24


WOOD DOWEL
spare: 2



ø4X35mm

(D) X10


SCREW
spare: 1



Ø3.5X14mm

(E) X36

SCREW
spare: 3

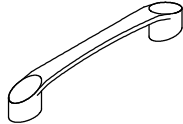

(F) X3

HANDLE



Ø4X18mm

(G) X2


SCREW
spare: 1



Ø4X6mm


(H) X4

SCREW
spare: 1



(I) X4


SHEIF SUPPORT
spare: 1



Ø35mm


(J) X2

HINGE

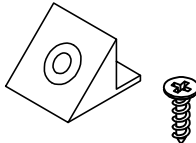

(K) X6

SCREW
spare: 1

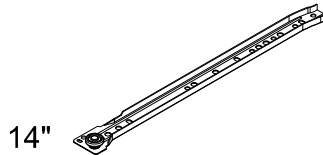


14"

L-CL

X2

LEFT CABINET MEMBER

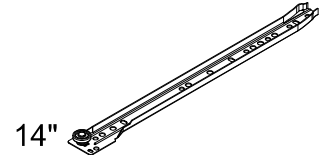


14"

L-CR

X2

RIGHT CABINET MEMBER

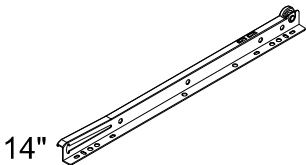


14"

L-DL

X2

LEFT DRAWER RUNNER

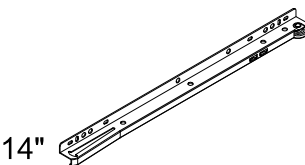


14"

L-DR

X2

RIGHT DRAWER RUNNER



38x38

(M) X4

PERFECT
spare: 1




Ø20mm

(N) X12

SCAM LOCK COVER
spare: 1


Part List

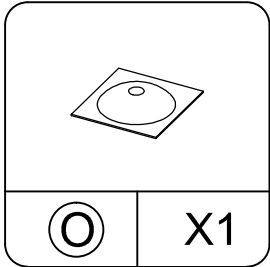














CUSHION
spare: 1

Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.















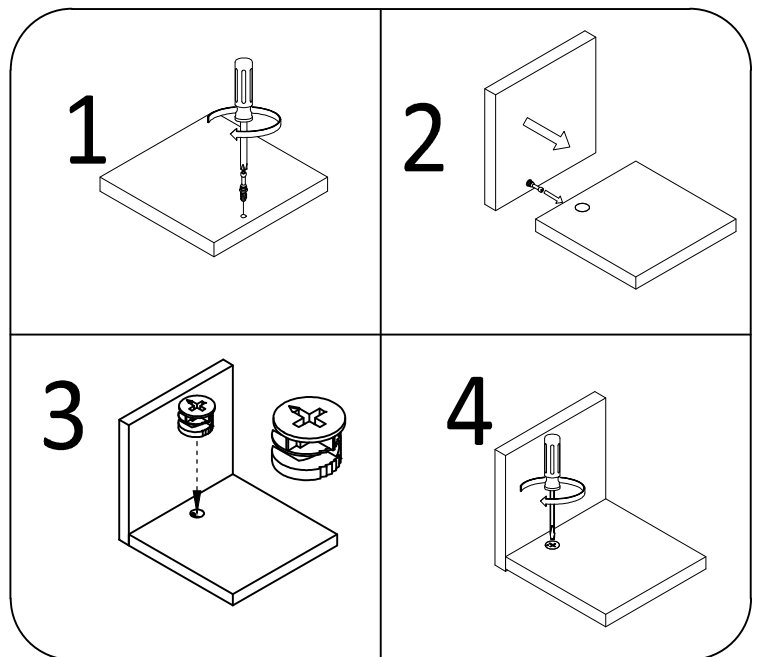


STEP1

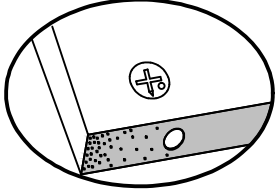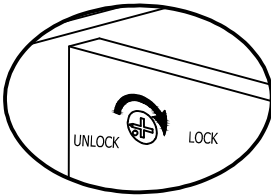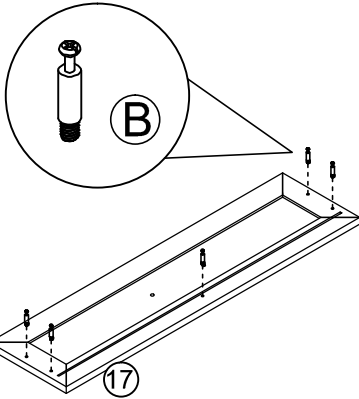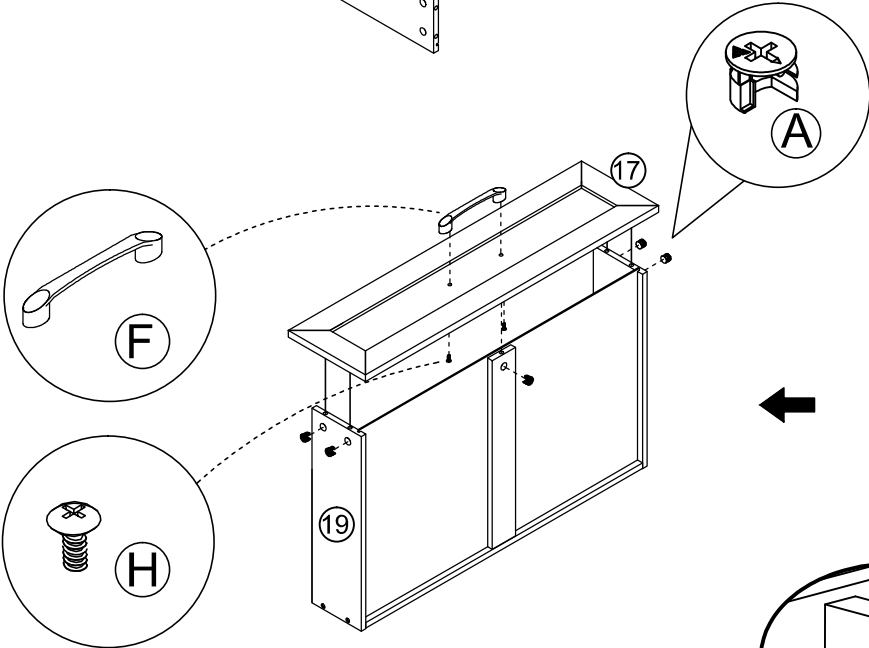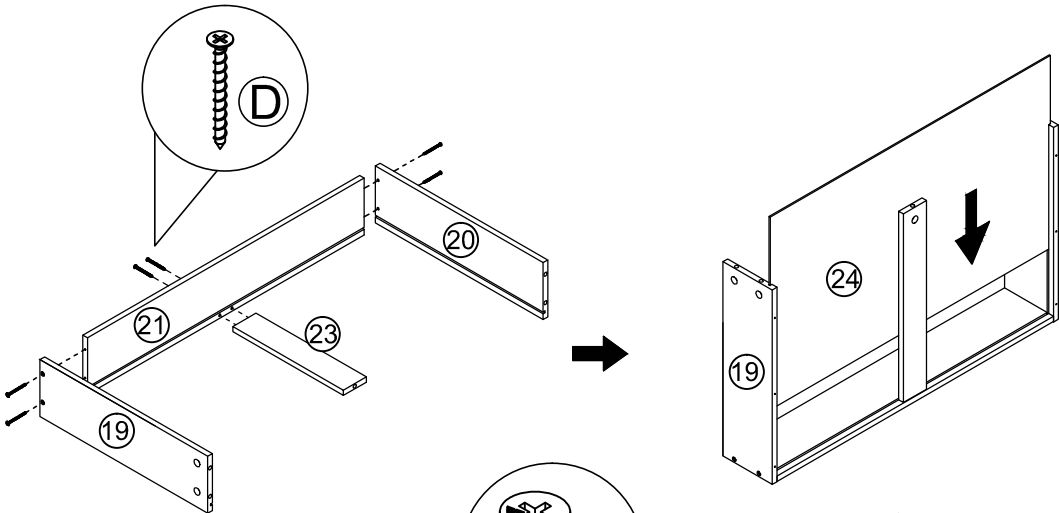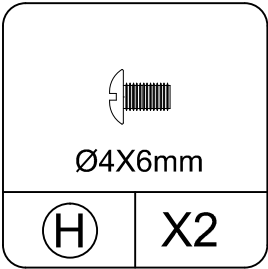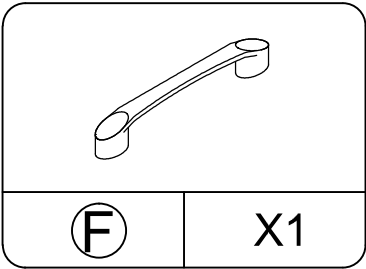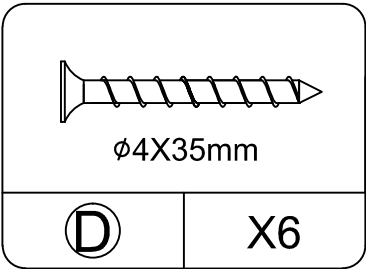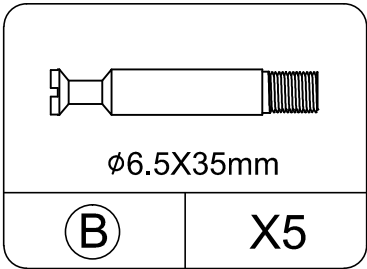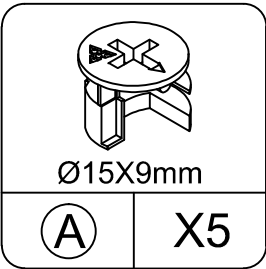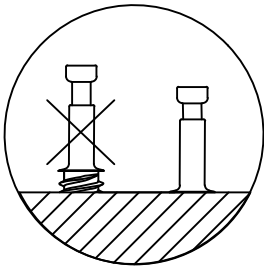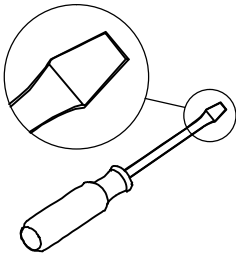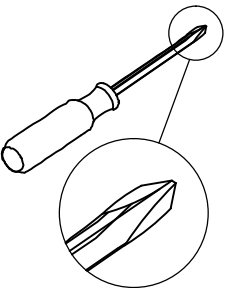








Proper orientation of CAM LOCK

STEP2

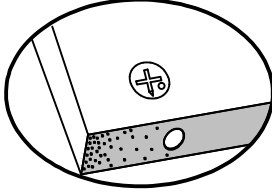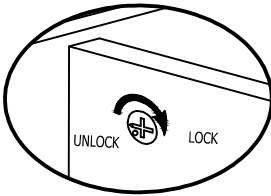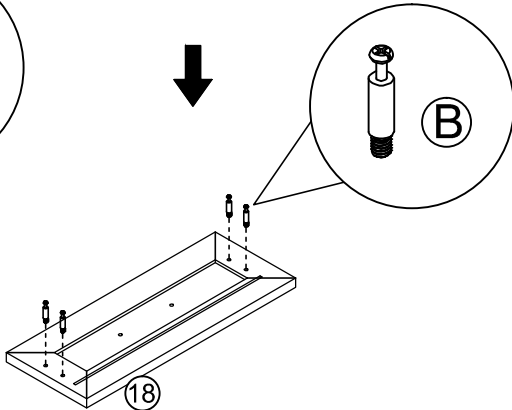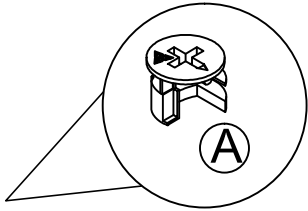
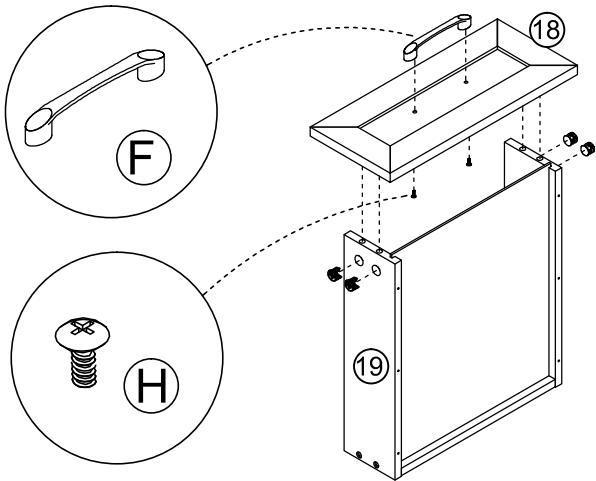
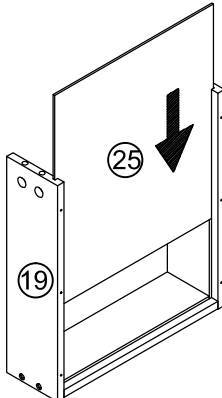
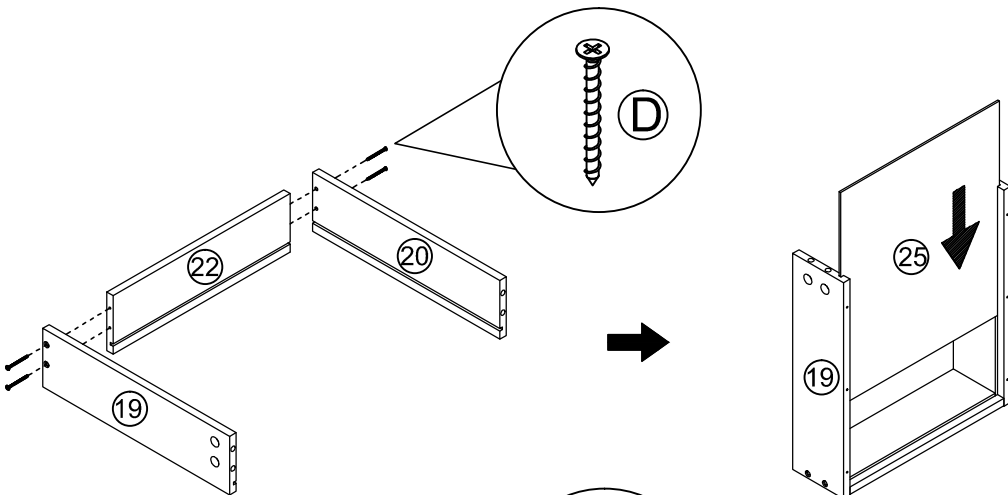
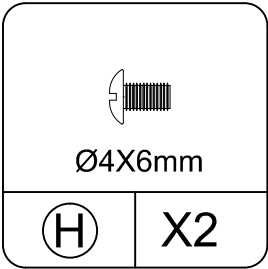
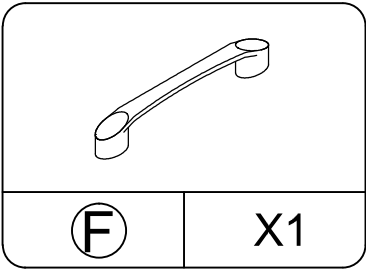
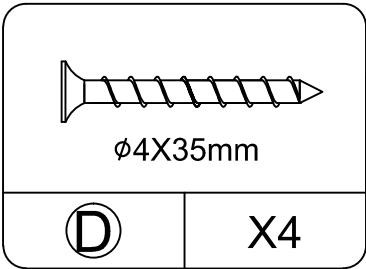
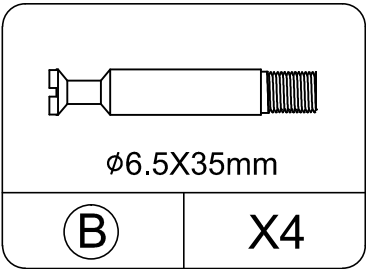
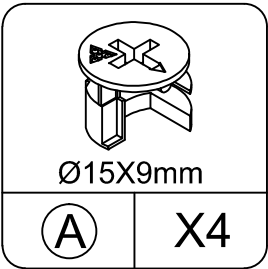
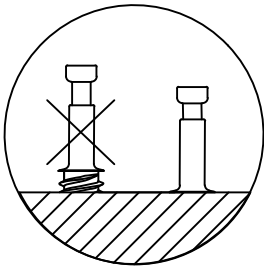
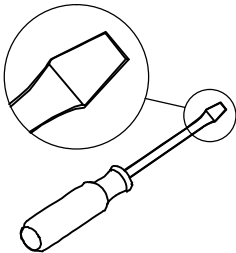
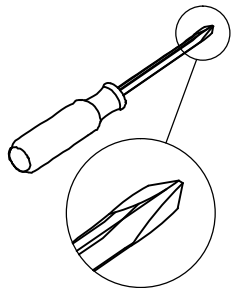


Proper orientation of CAM LOCK








STEP3

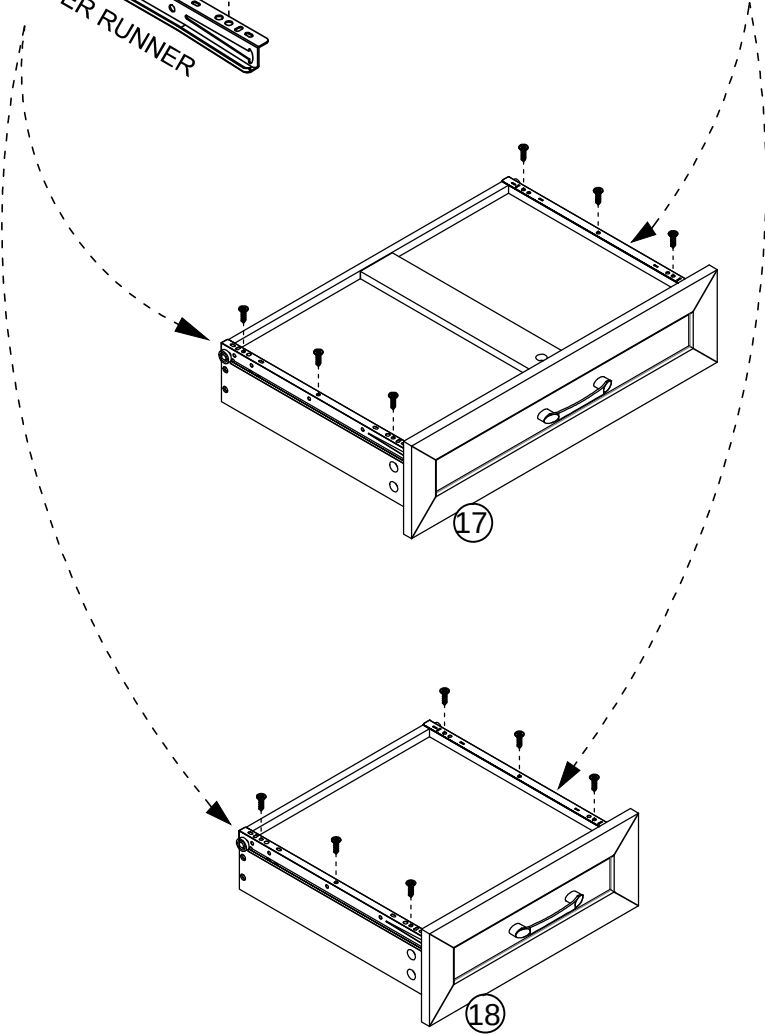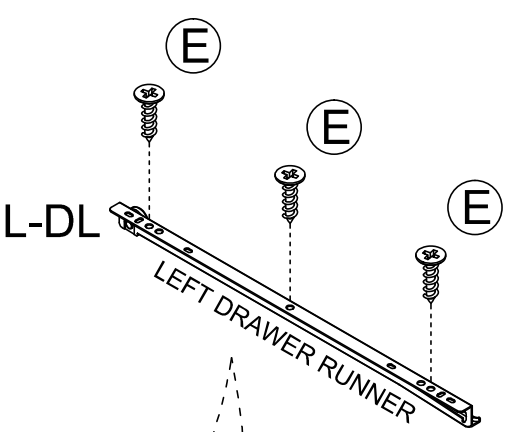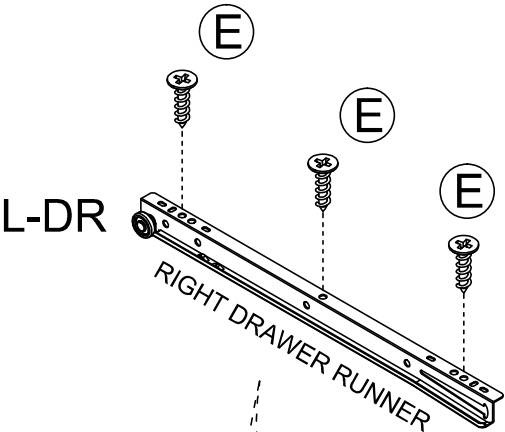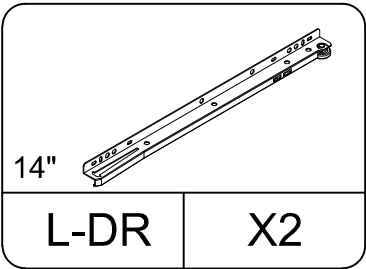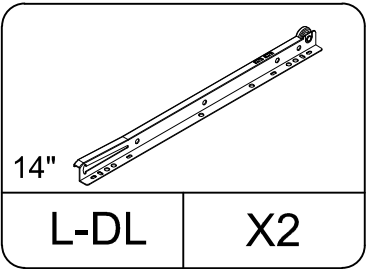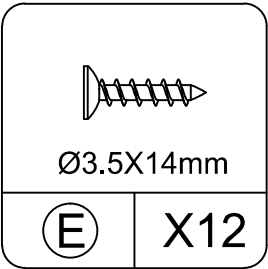
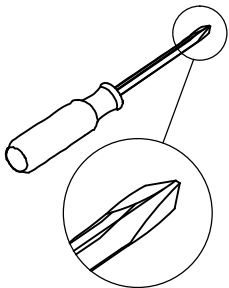



STEP4

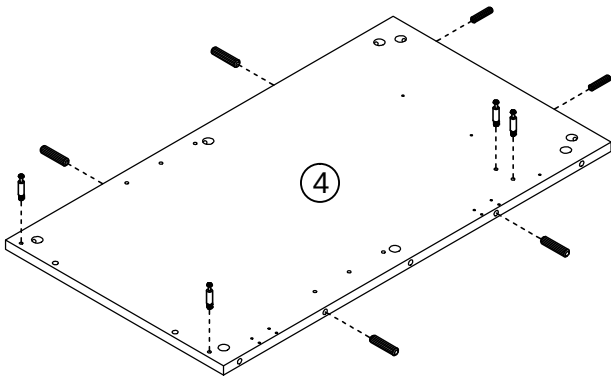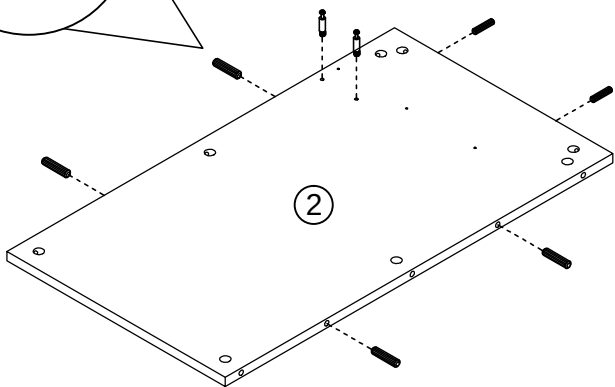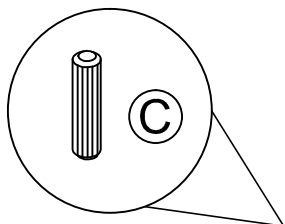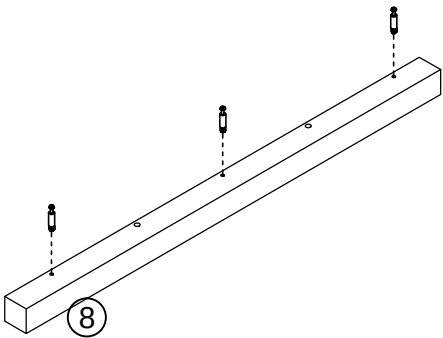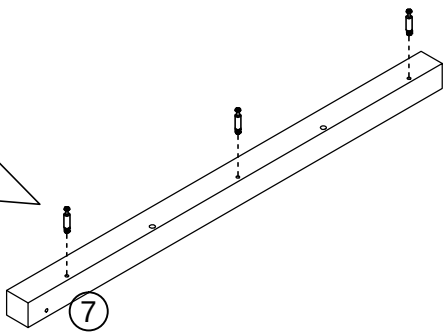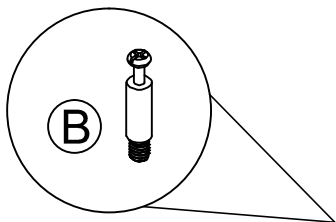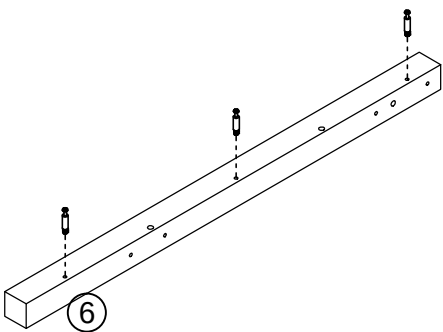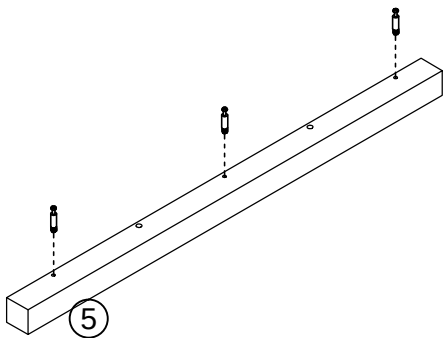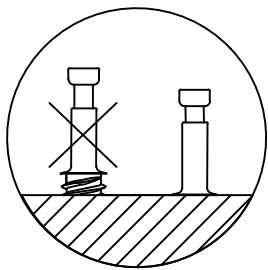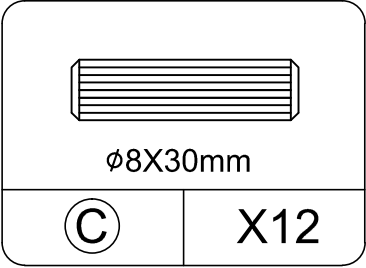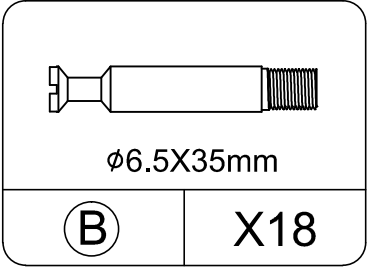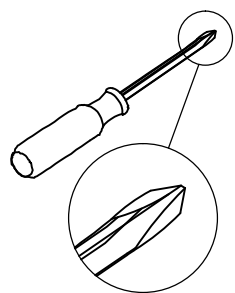

STEP5

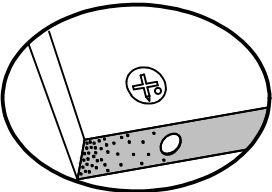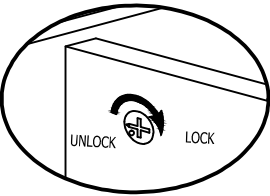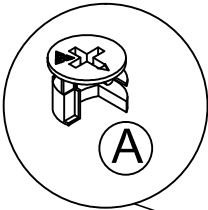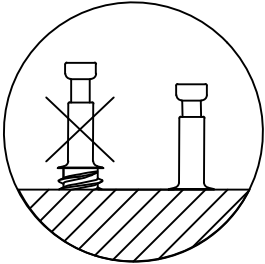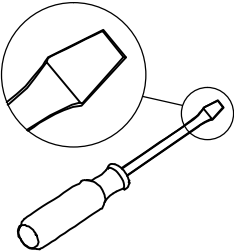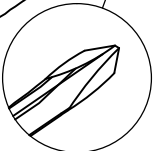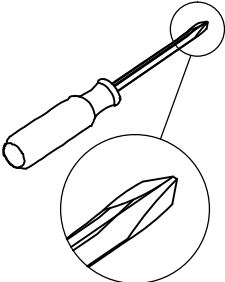



 Ø15X9mm	 Ø6.5X35mm	 38x38
(A) X12	(B) X5	(M) X4

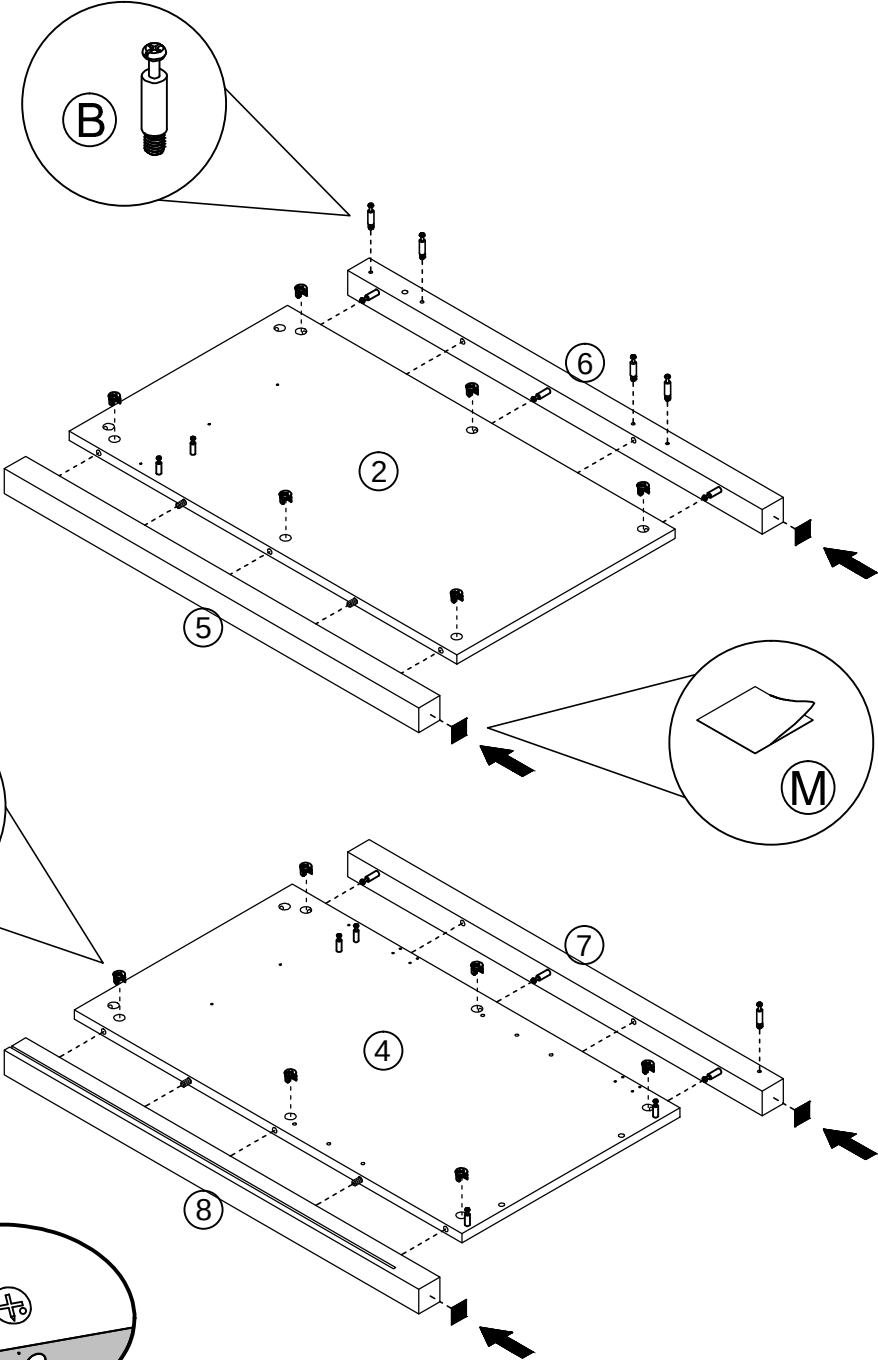



Proper orientation of CAM LOCK






STEP6

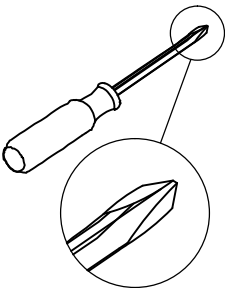

 Ø3.5X14mm	
(E)	X6







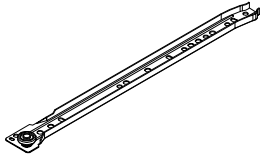
14" 	
L-CL	X1

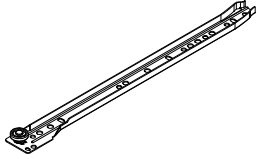14" 	
L-CR	X1

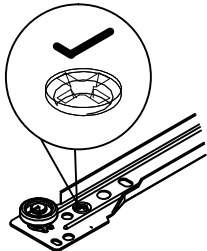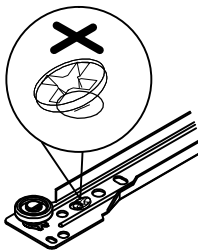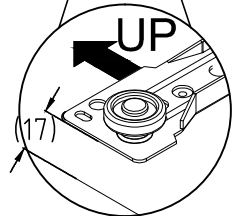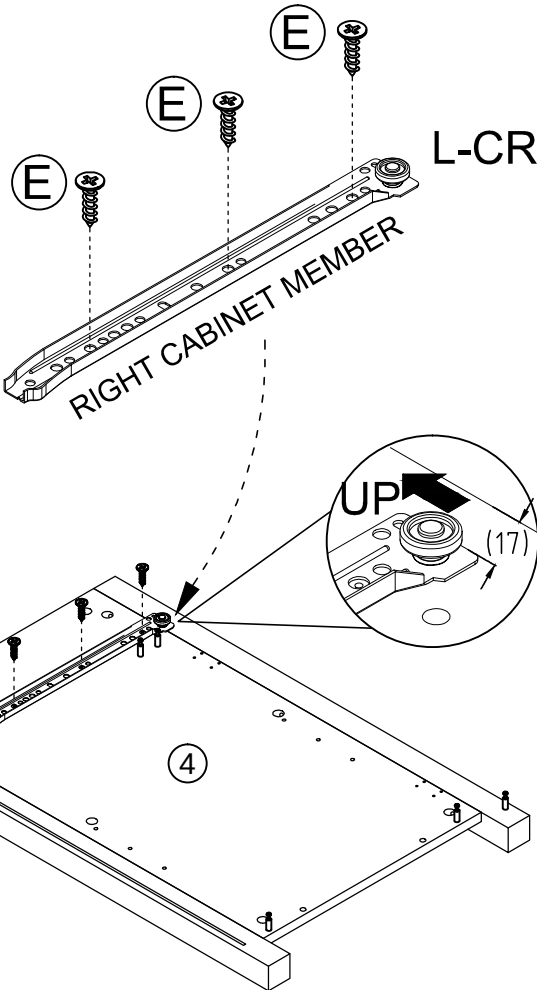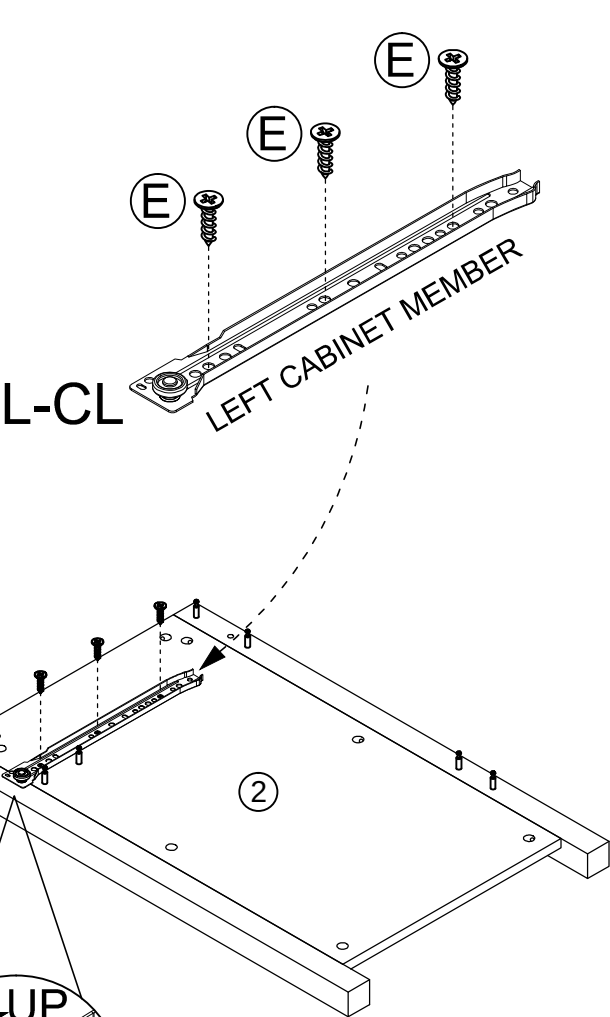









Please make sure that the screw is VERTICAL so as not to affect the sliding of the drawer.

STEP7

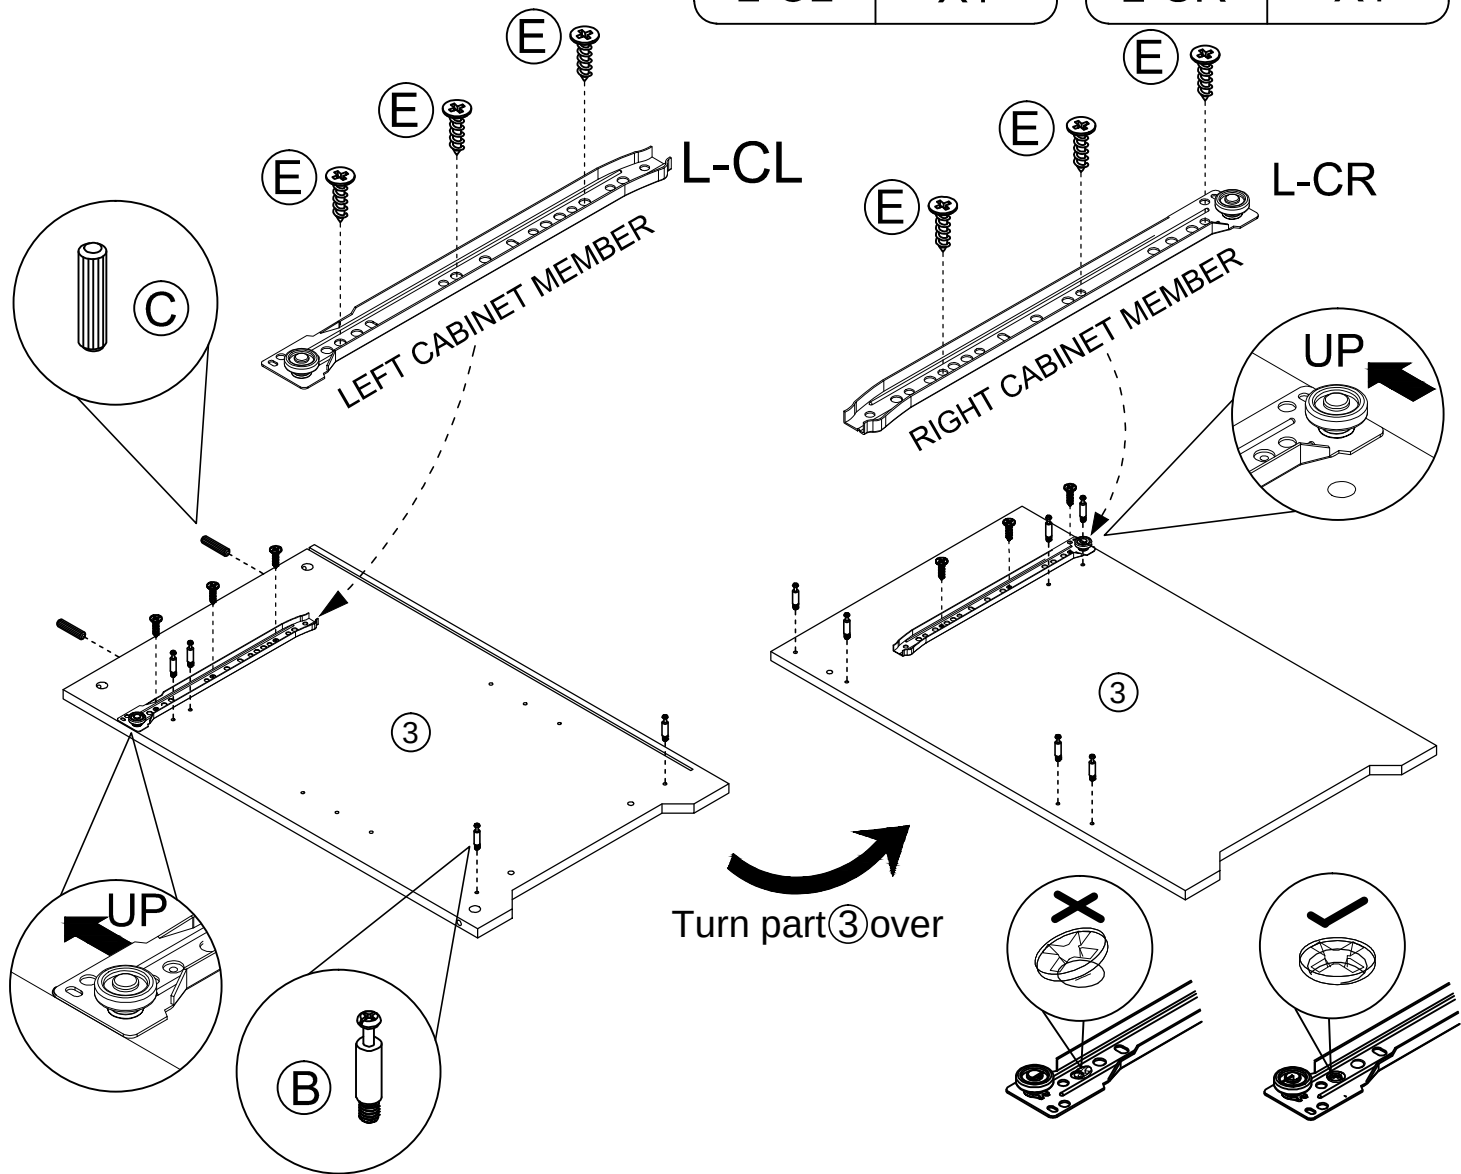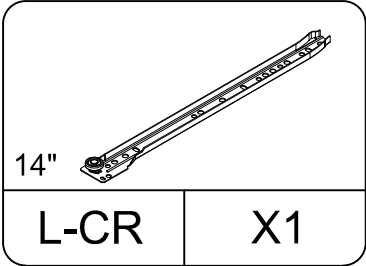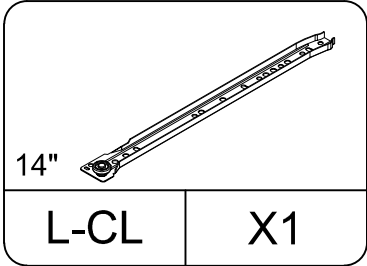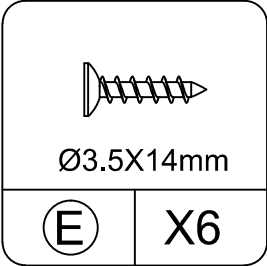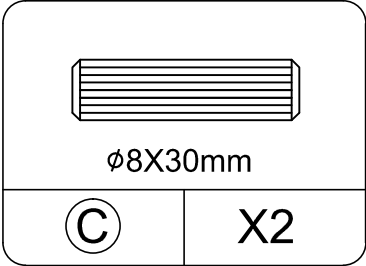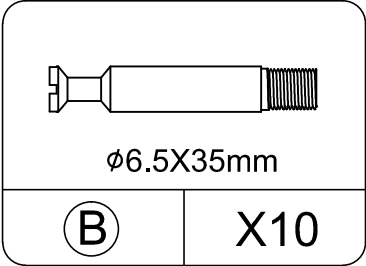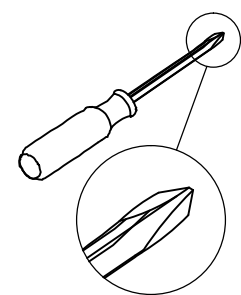







Please make sure that the screw is VERTICAL so as not to affect the sliding of the drawer.

STEP8

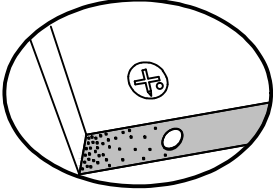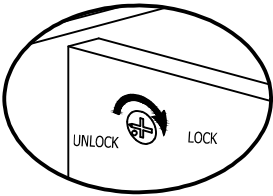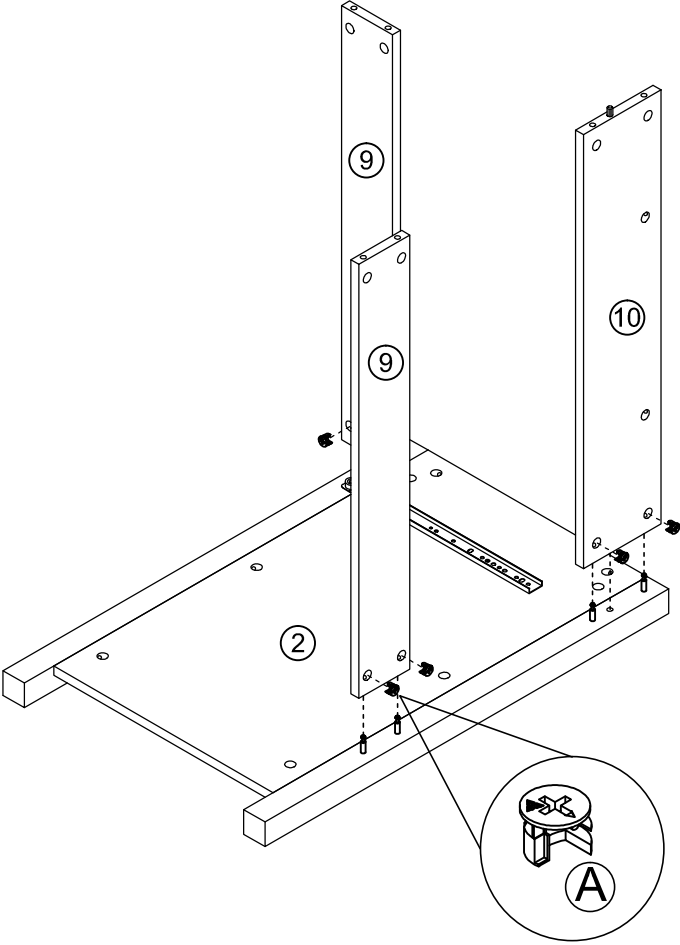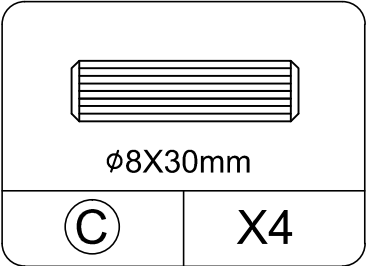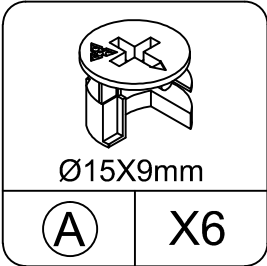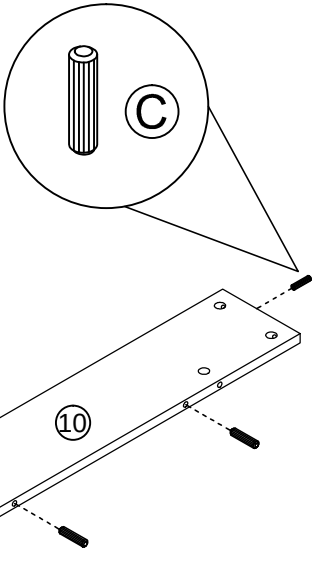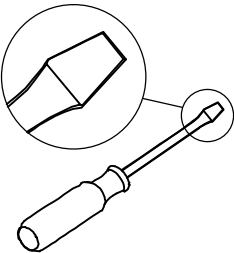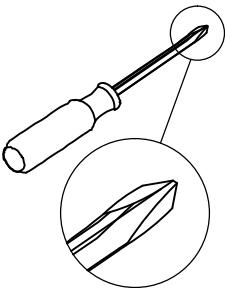


Proper orientation of CAM LOCK

STEP9

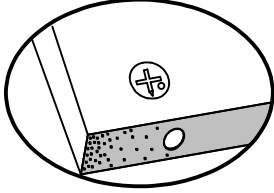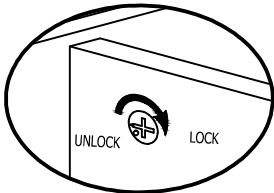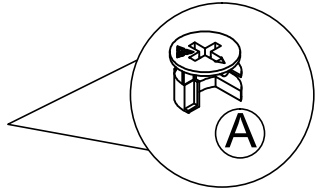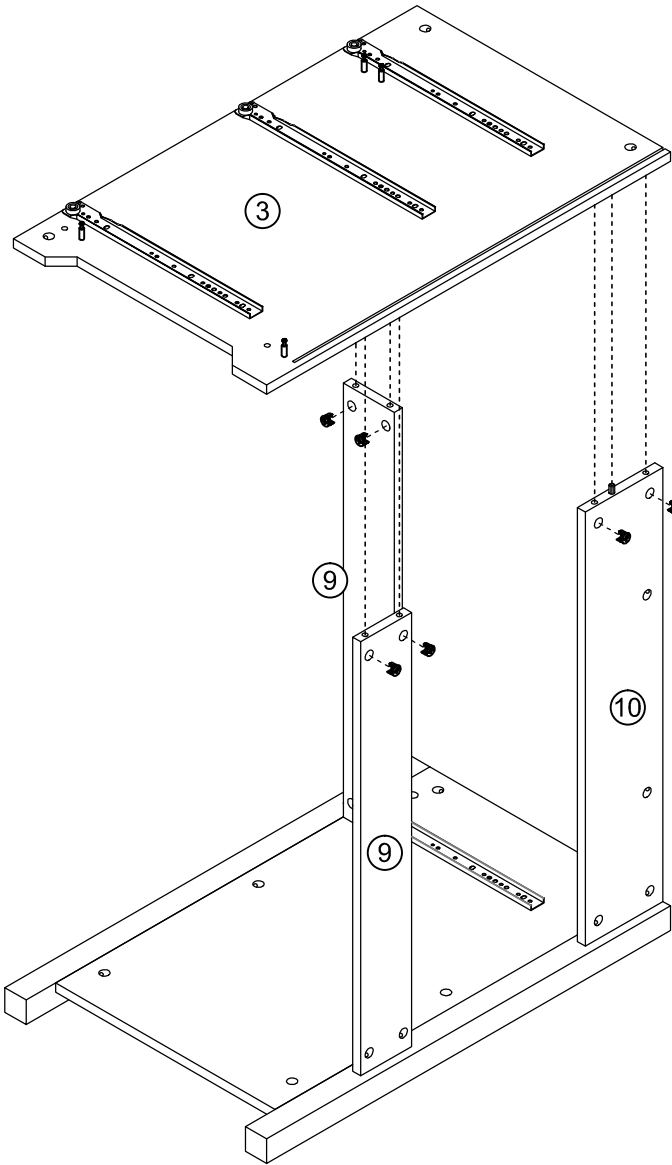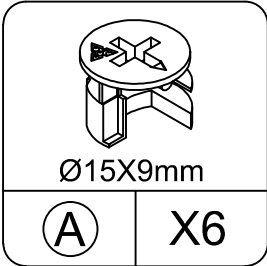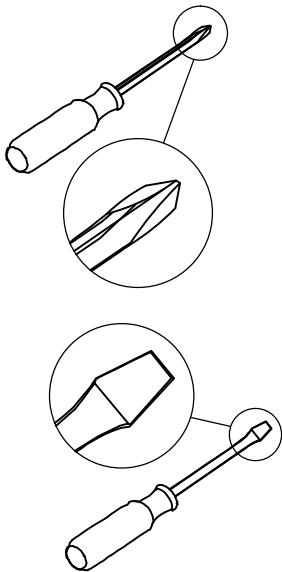


Proper orientation of CAM LOCK


STEP10

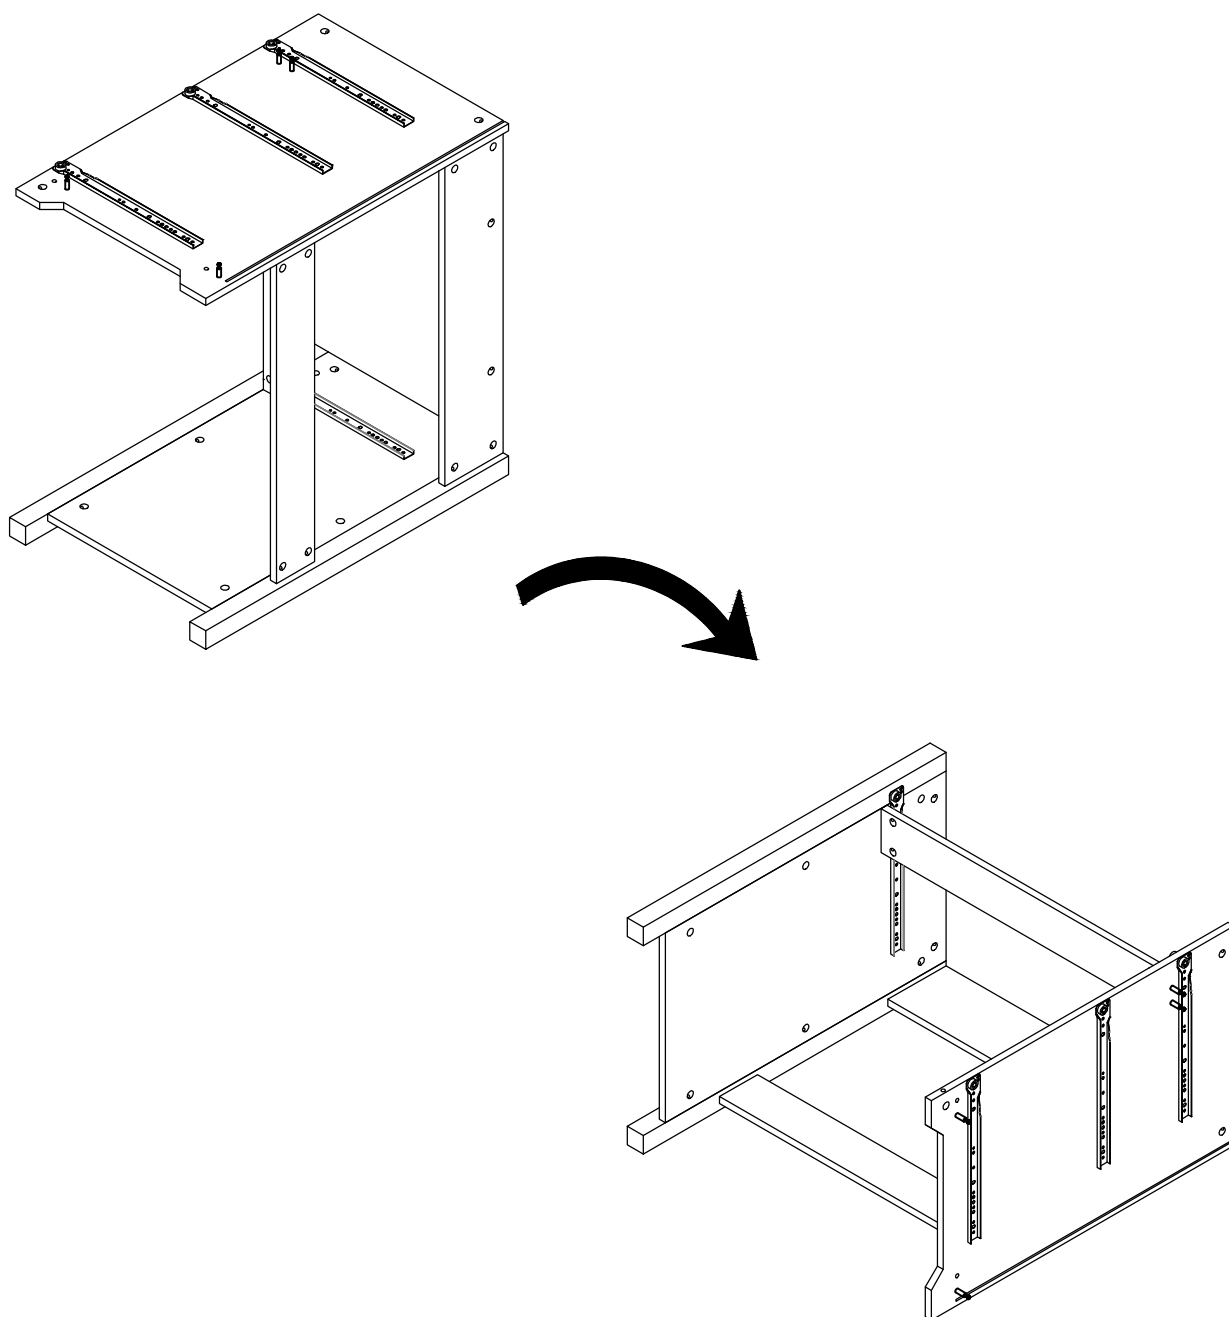





STEP11

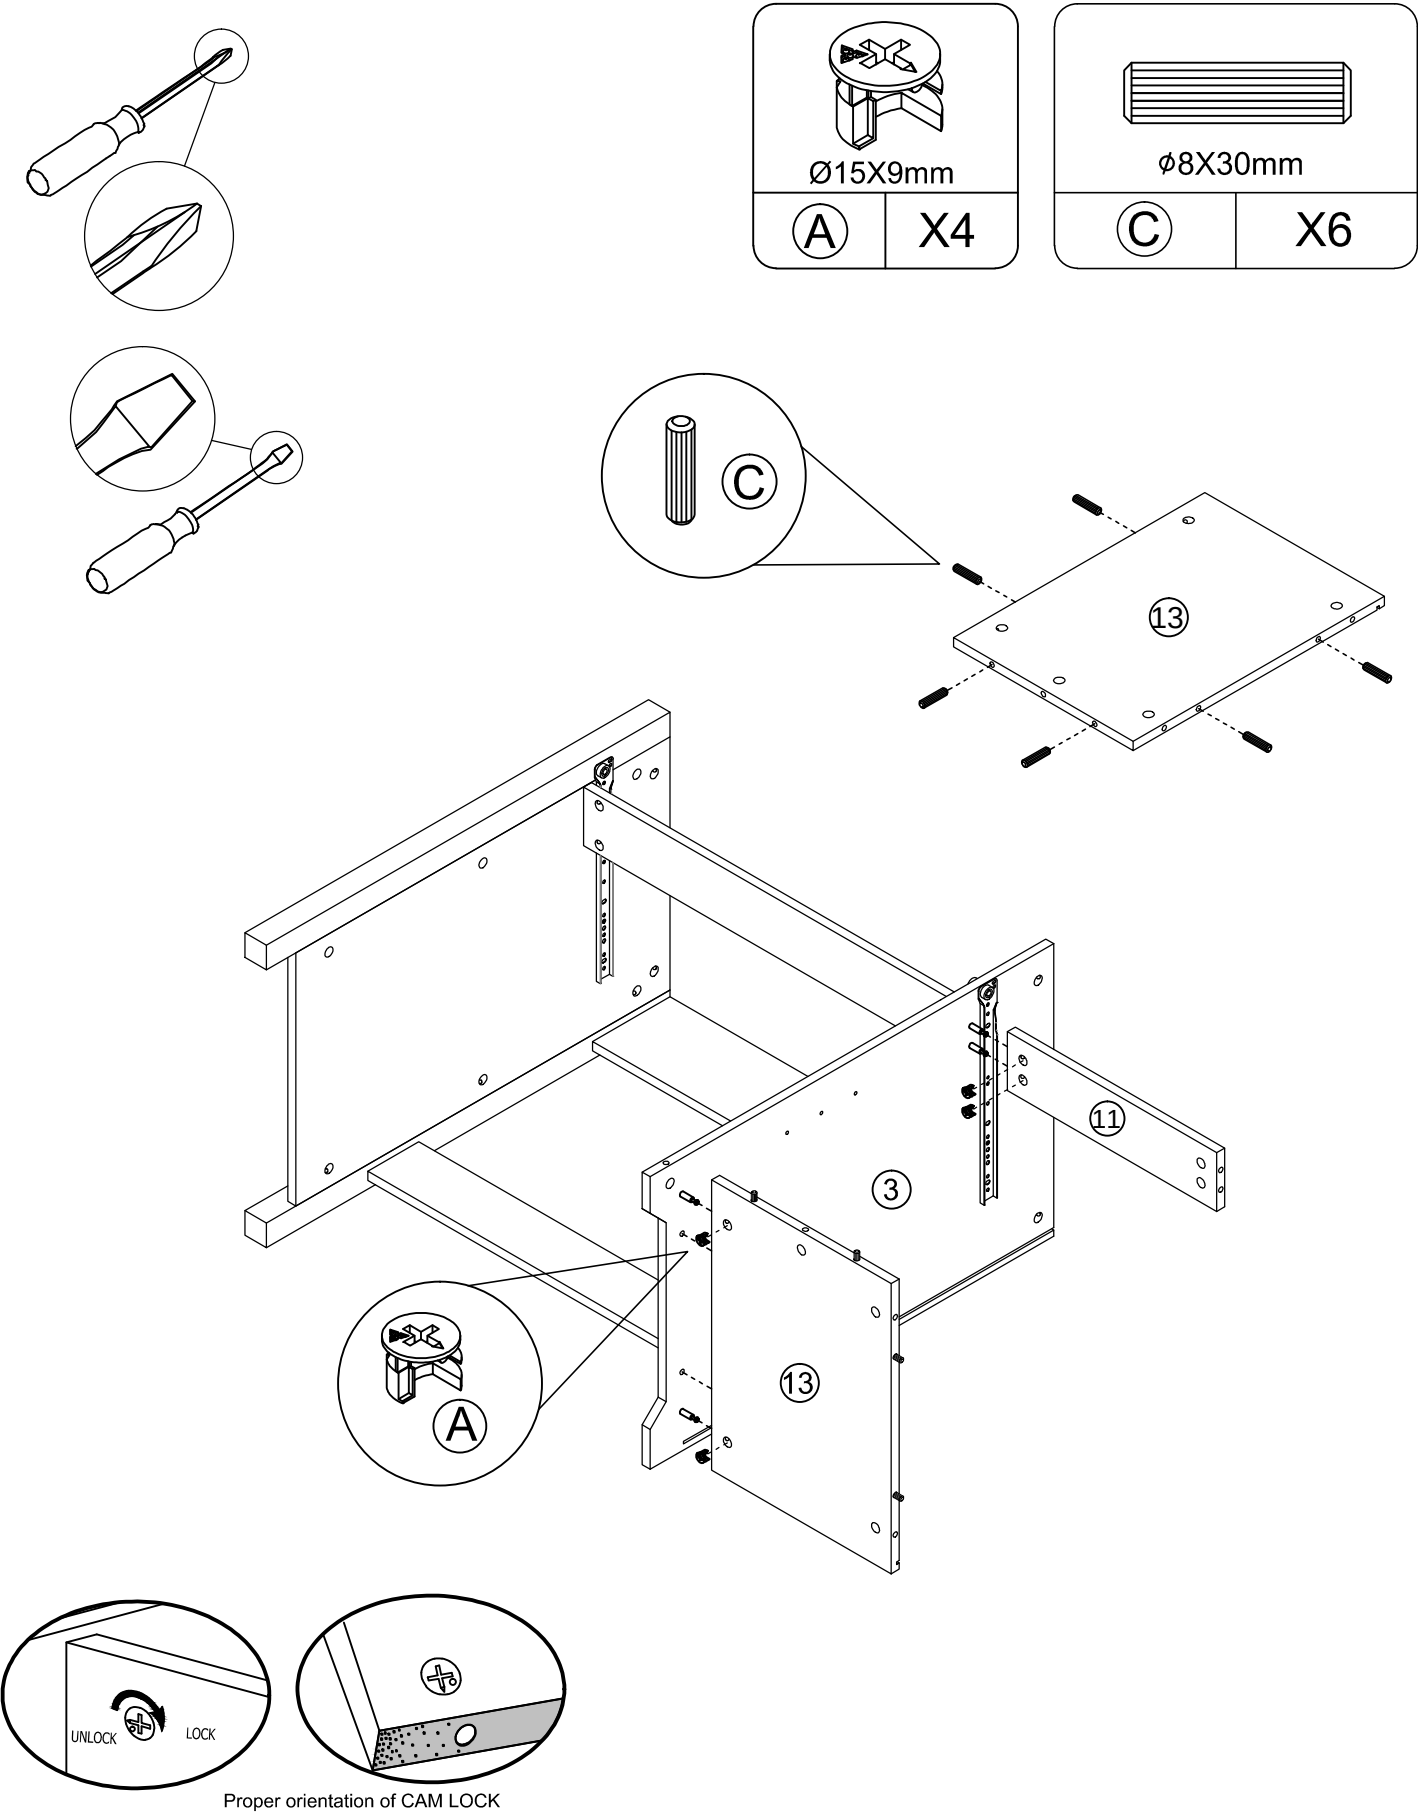

STEP12

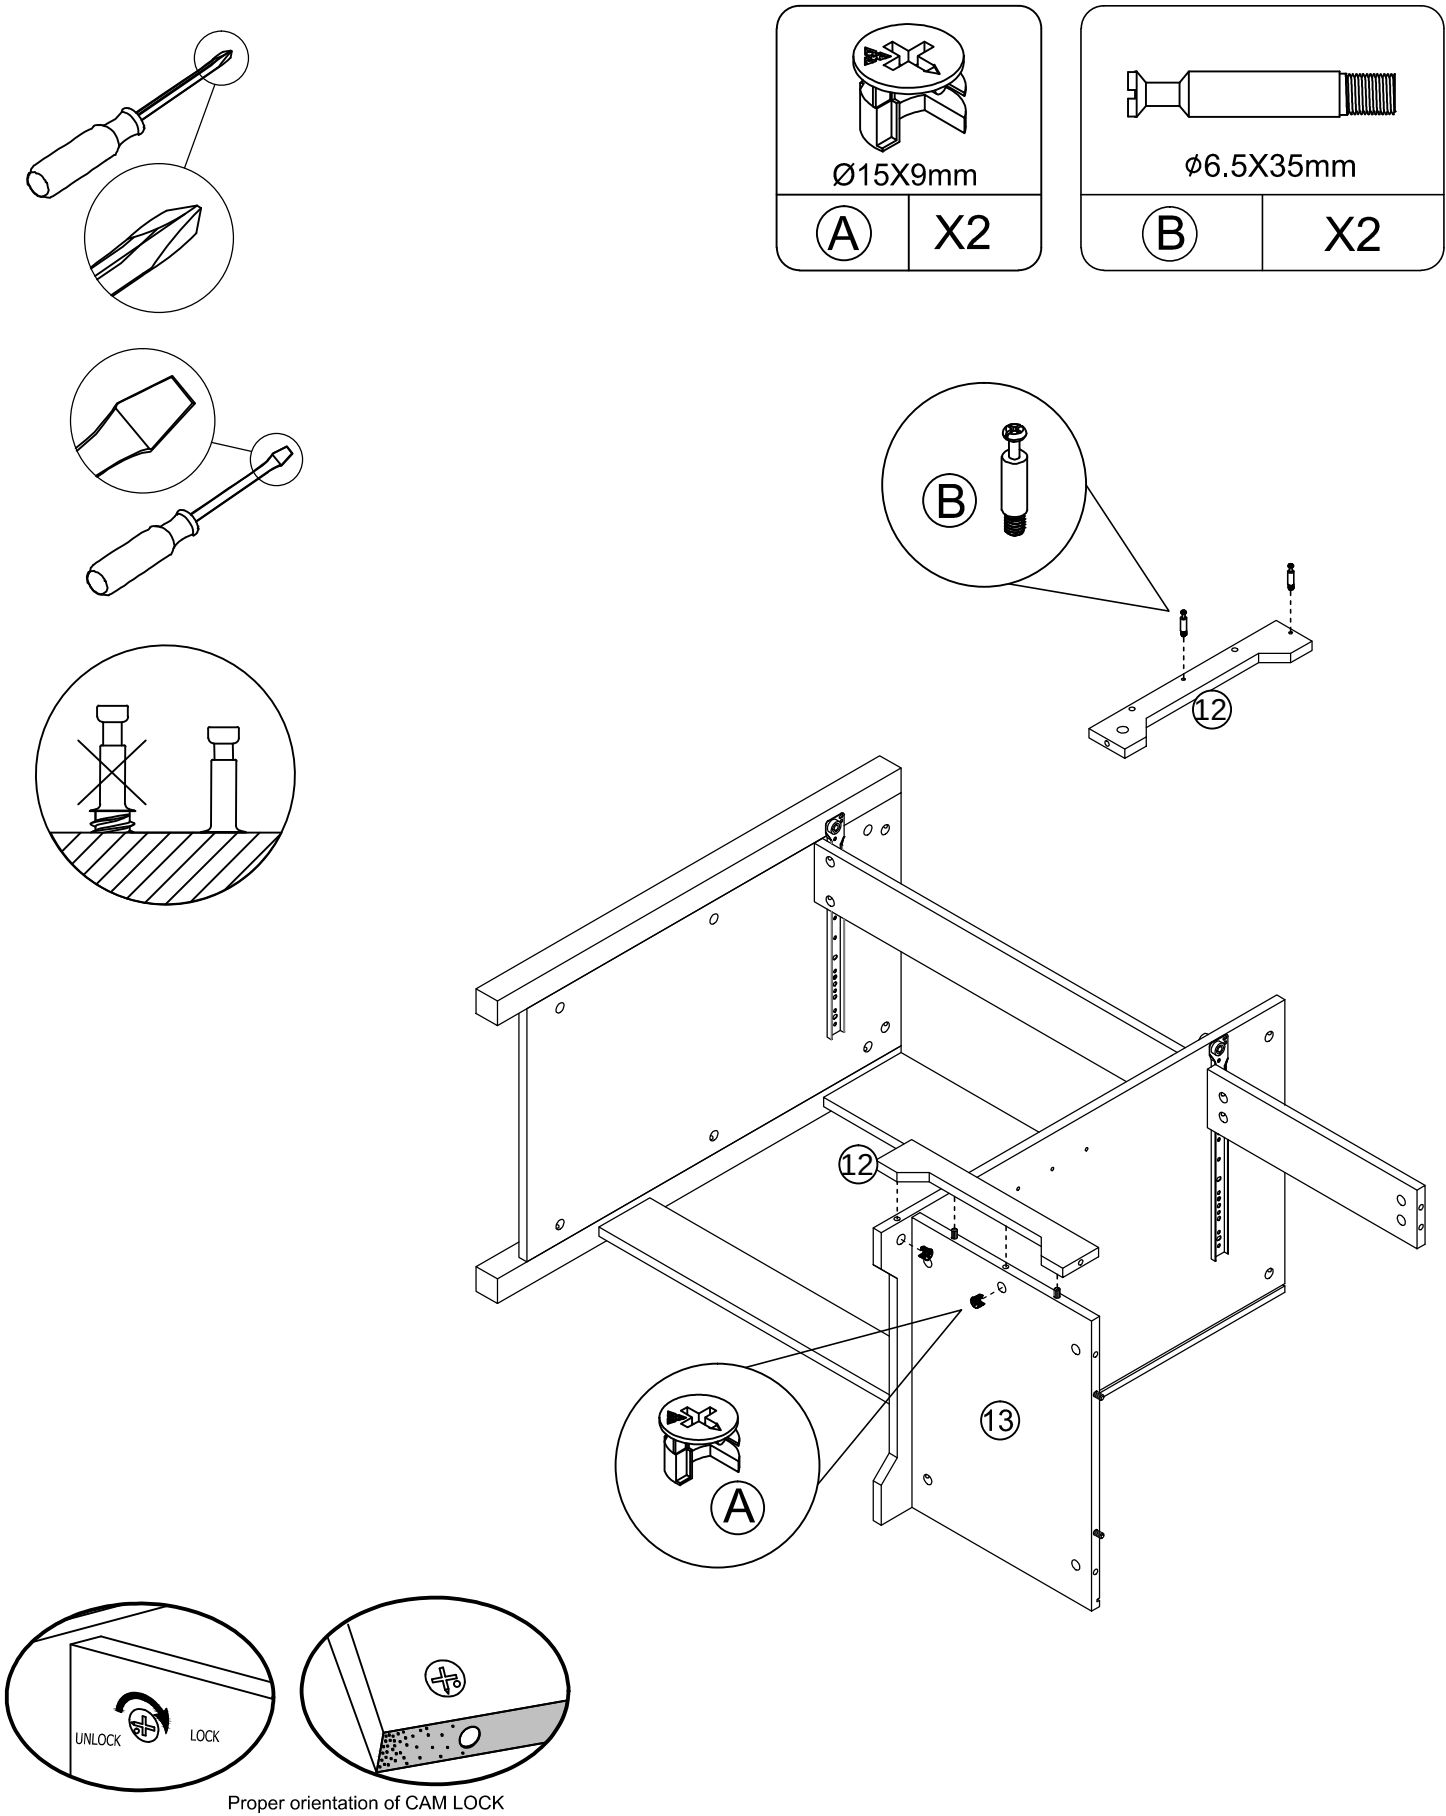


STEP13

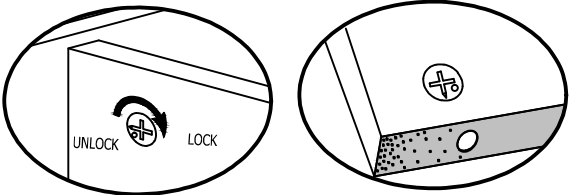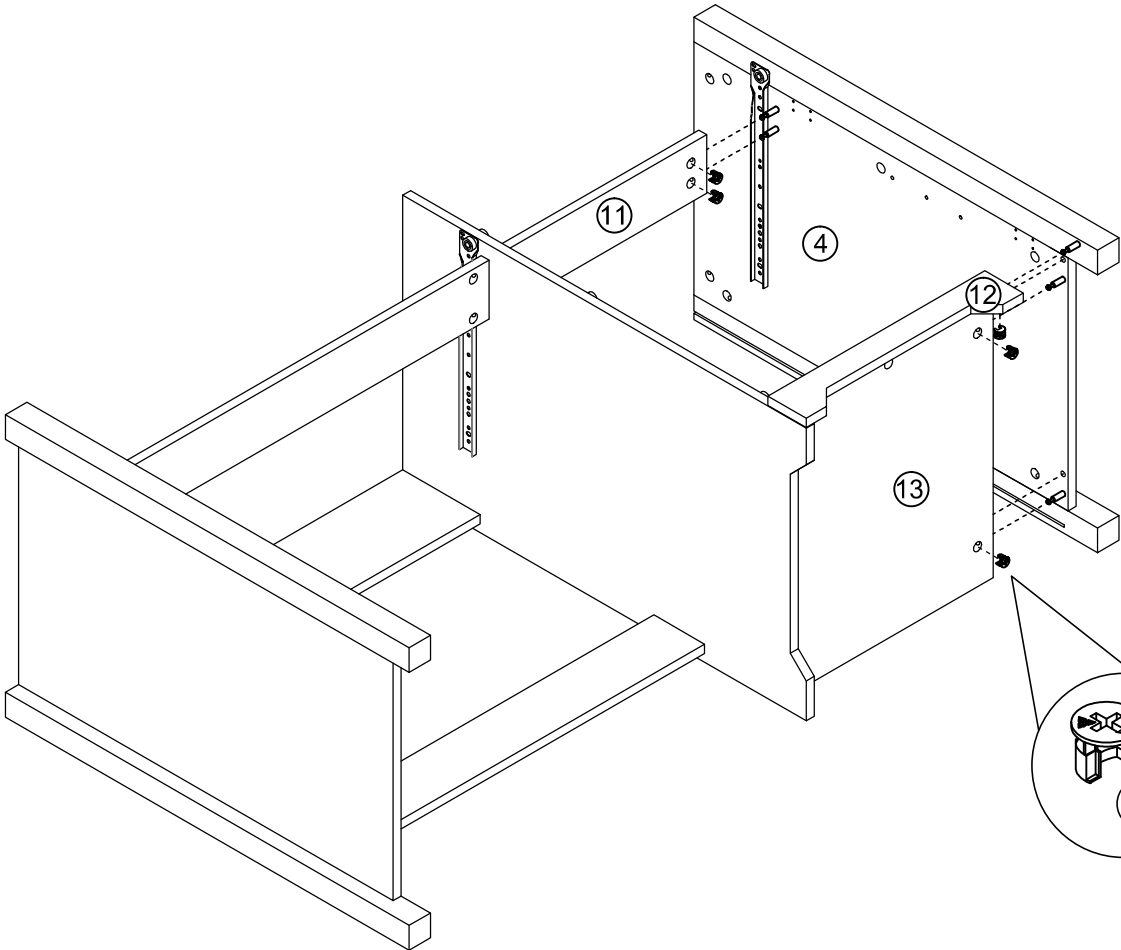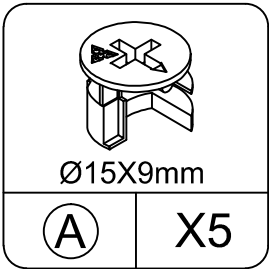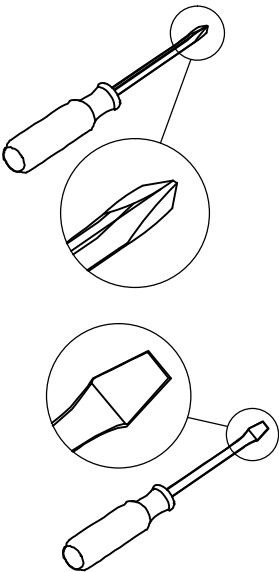


Proper orientation of CAM LOCK



STEP14

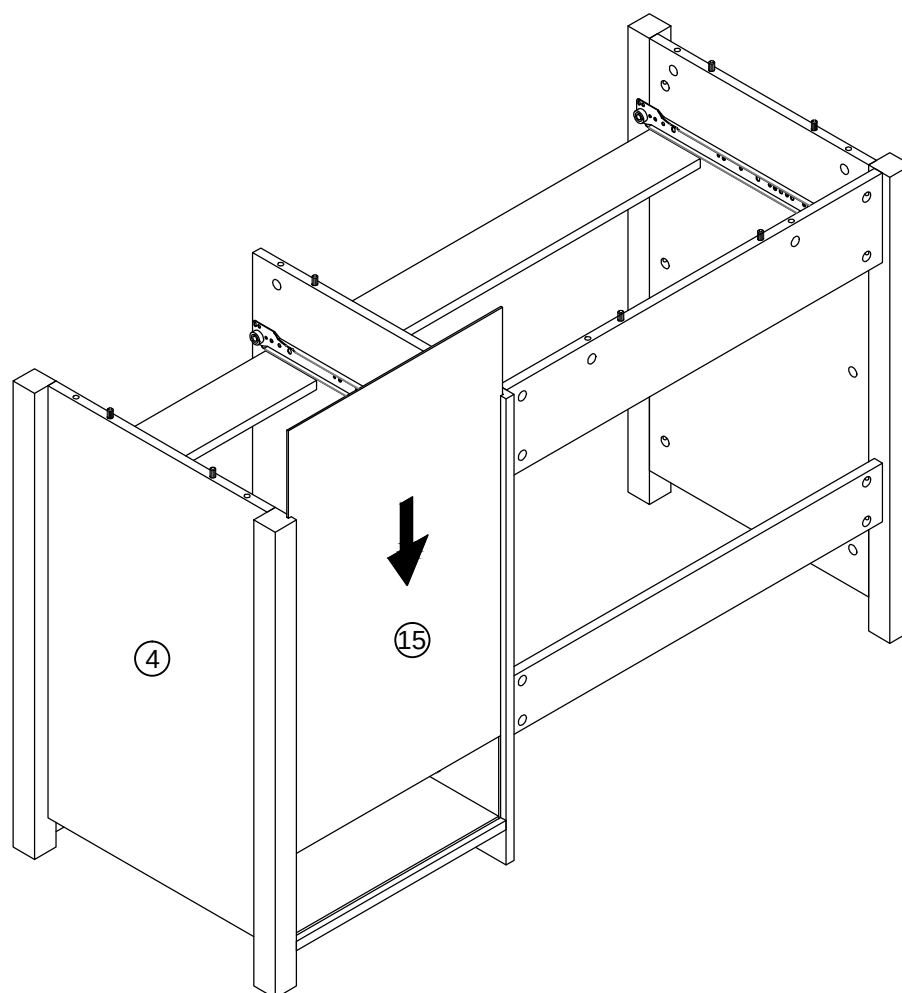









STEP15

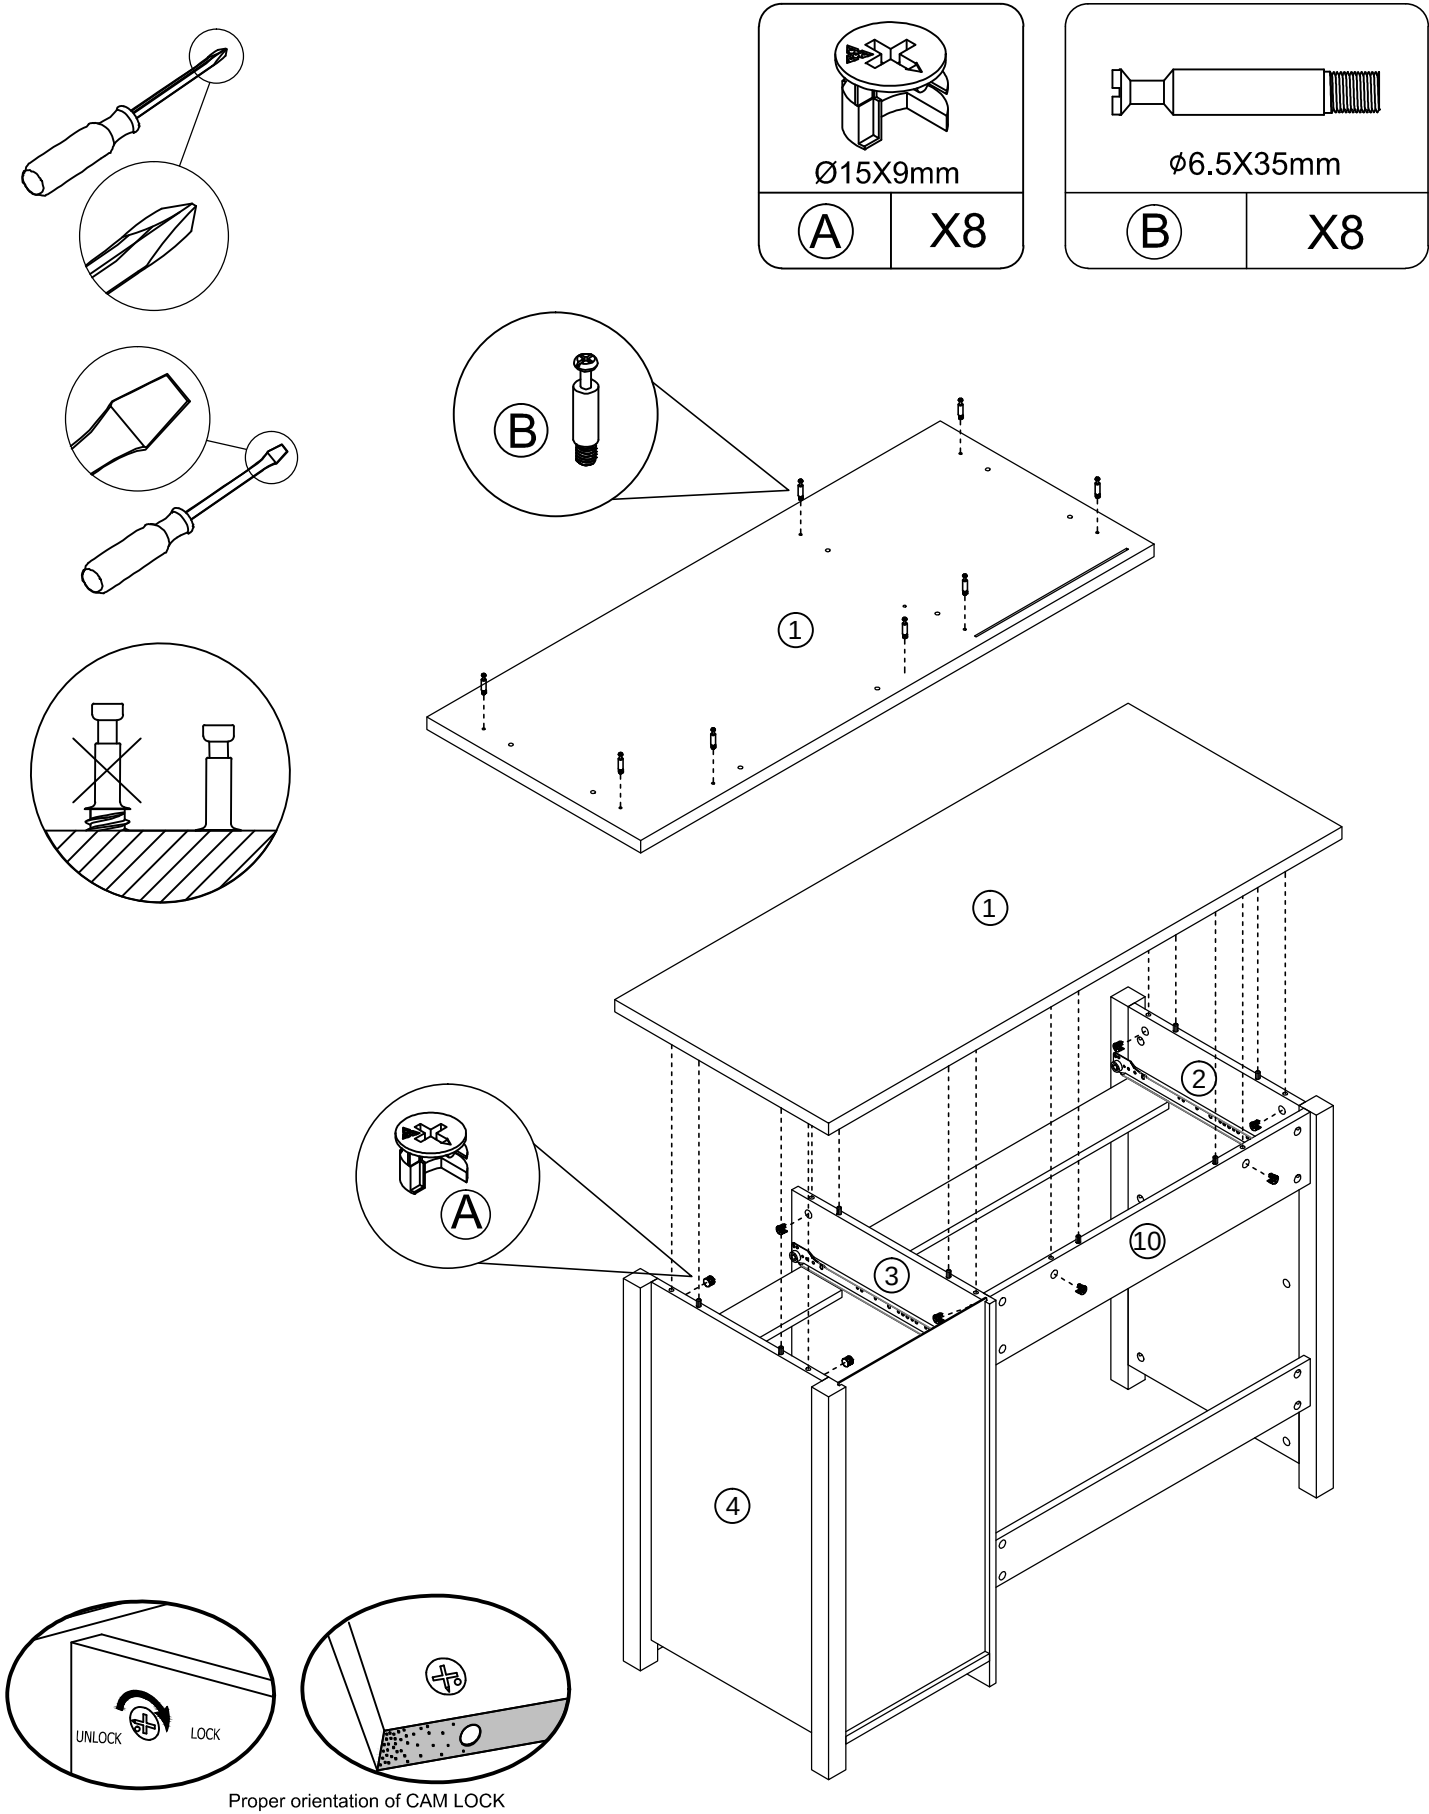



STEP16

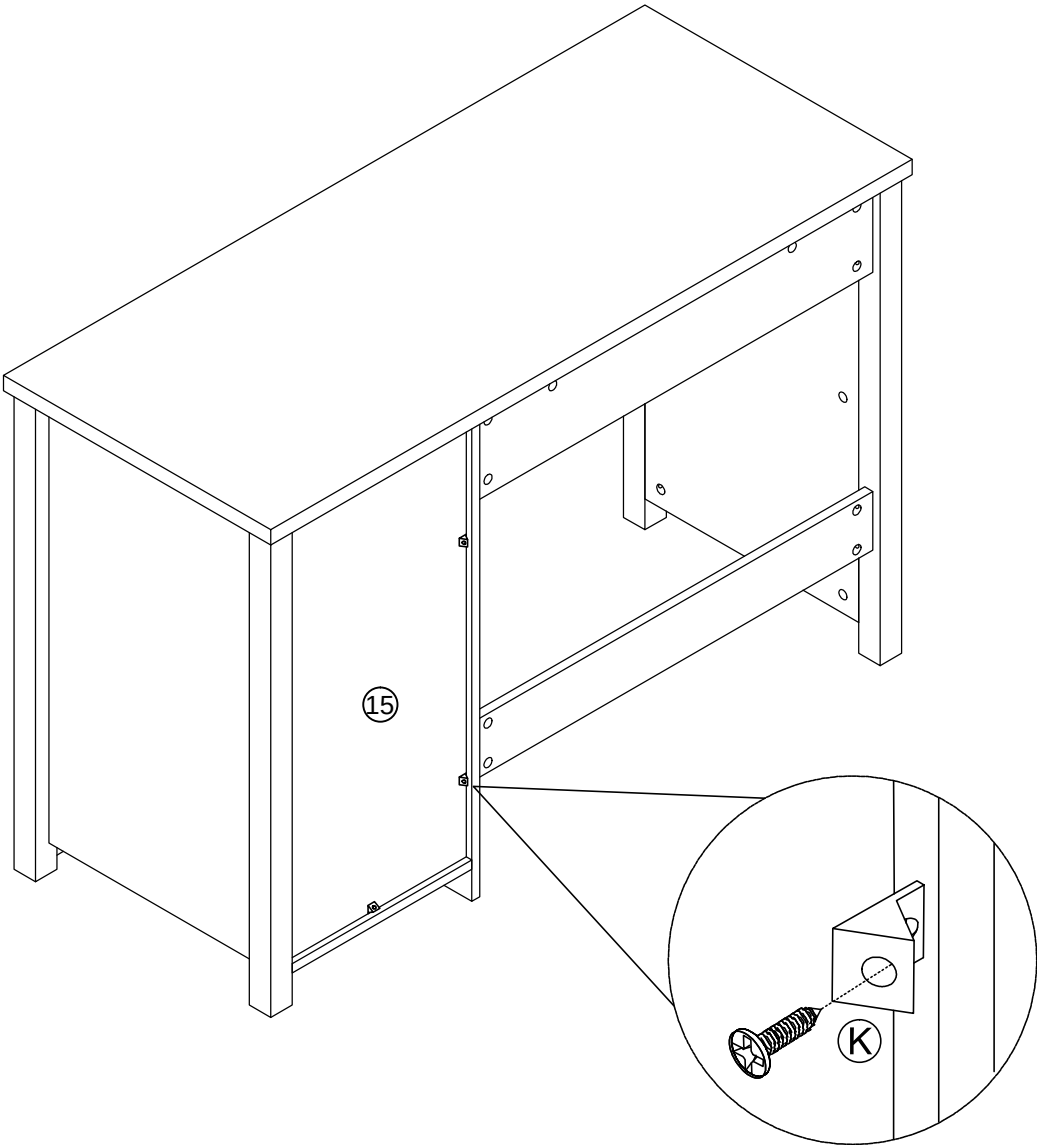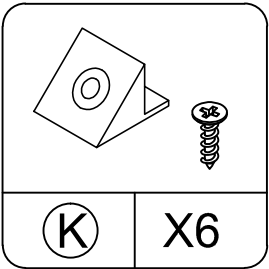


STEP17

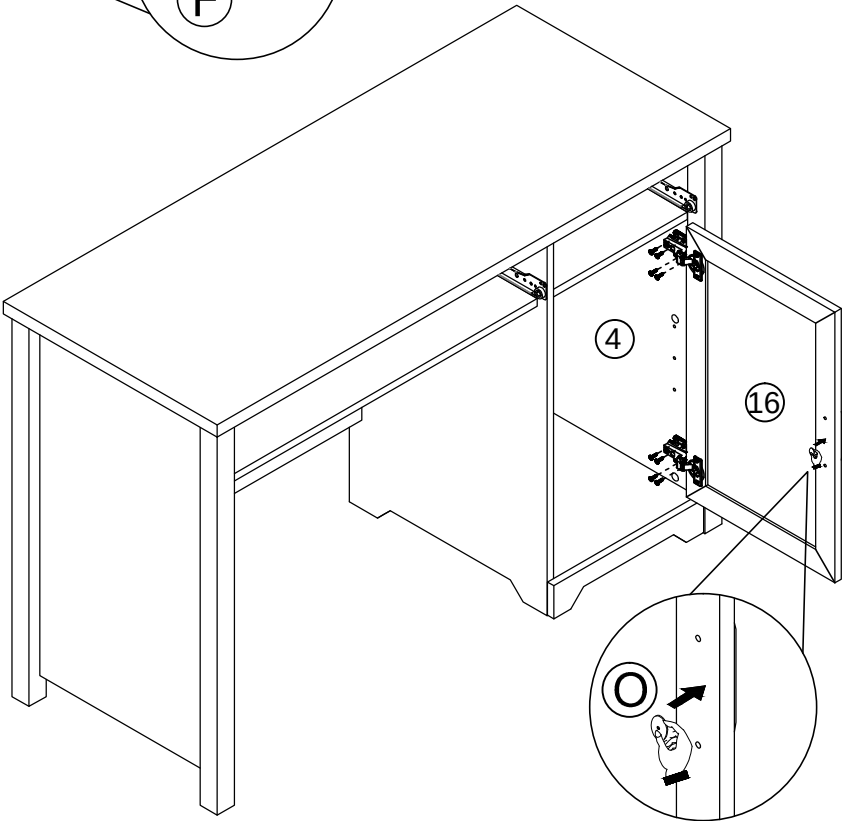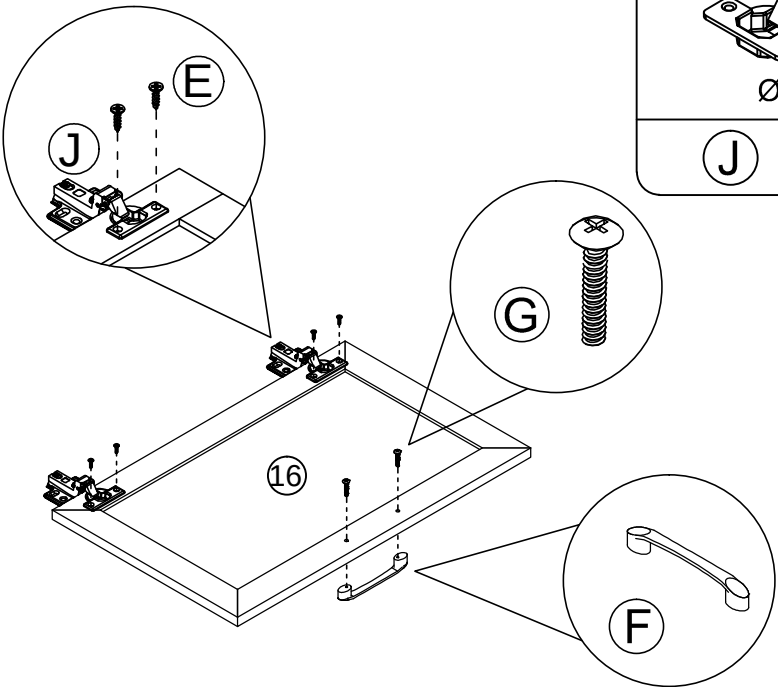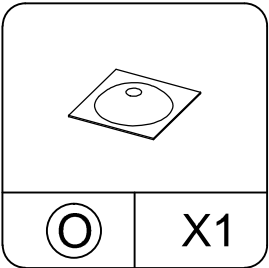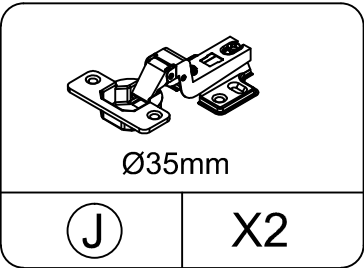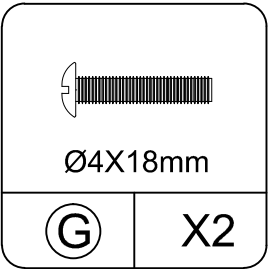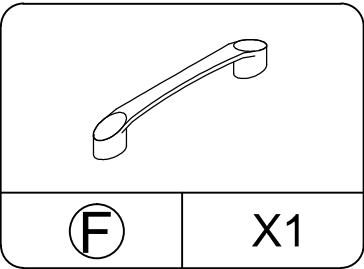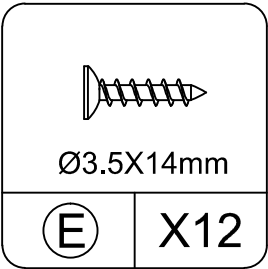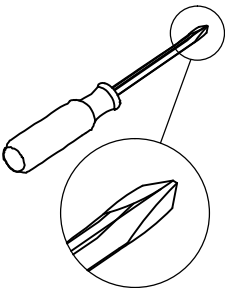


STEP18

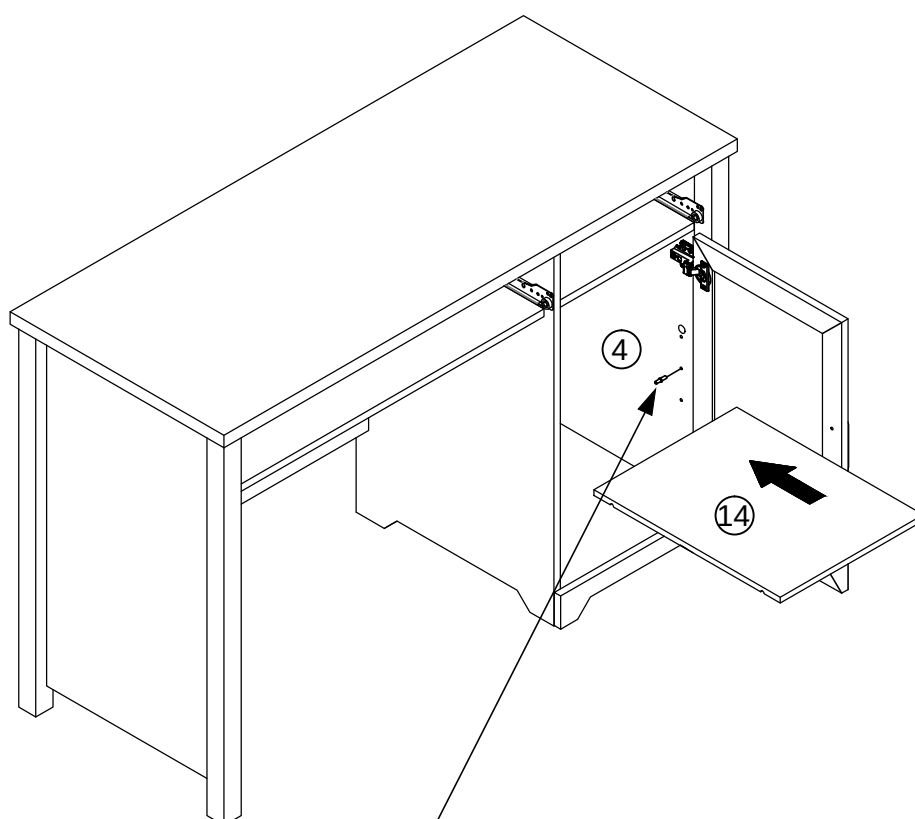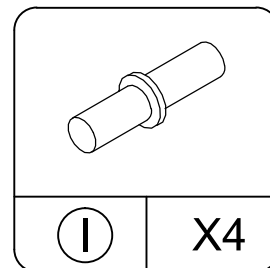

Step 1
Select the desired height
and put it in

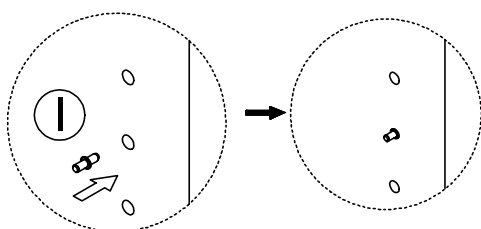

Step 2
Aim the board gaps down

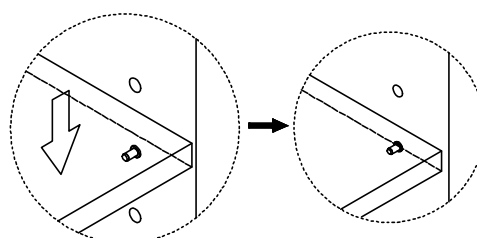

STEP19

