


# IMPORTANT INSTRUCTIONS AND OPERATING MANUAL

---

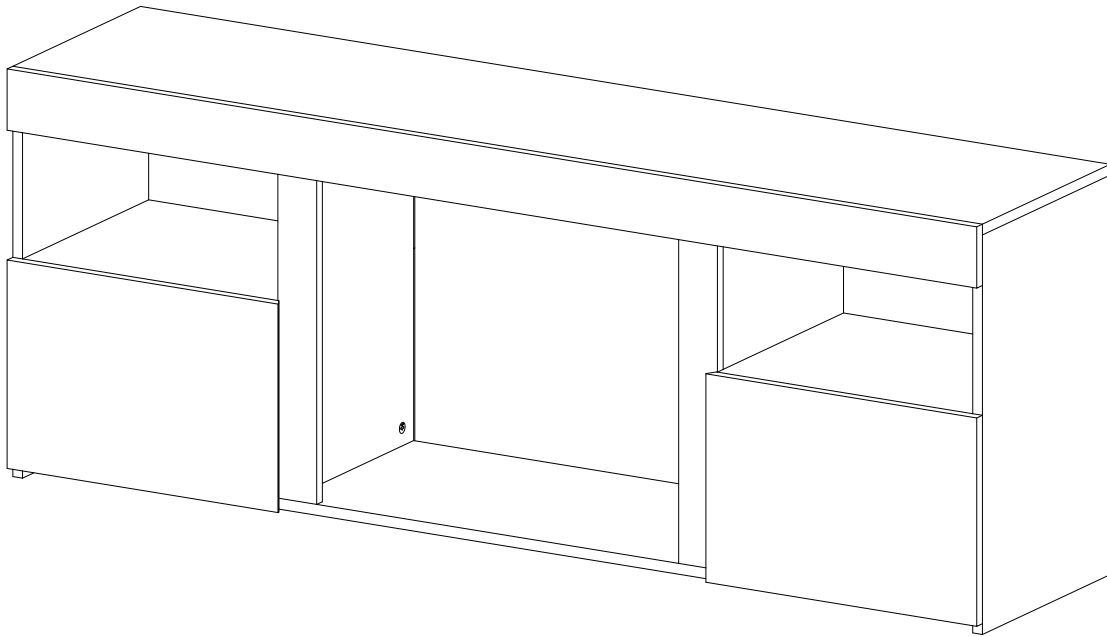

## ELECTRIC FIREPLACE


THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

---

Do Not Return This Product!  
Contact our customer service team for help first.

### **WARNING**

- Unit can tip over causing severe injury.
- Anchor unit to study on wall (if instructed to).
- Do Not allow children to climb on unit.
- Put heavy items on lower shelves or drawers.

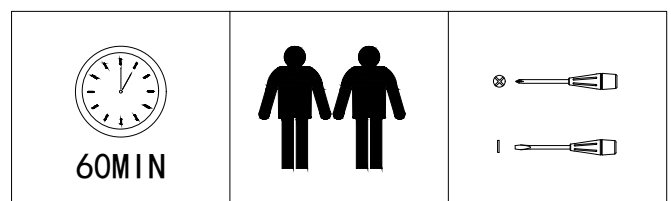

# Contact Us !

## DO NOT RETURN THIS PRODUCT!

Contact our friendly customer service team first for help.

DATED PROOF OF PURCHASE REQUIRED FOR WARRANTY SERVICE.

## [ Helpful Hints ]

PEOPLE NEEDED FOR ASSEMBLY: 2  
ESTIMATED ASSEMBLY TIME: 1 HOUR

-Open your item in the area you plan to keep it to avoid excessive heavy lifting.



-Identify, sort and count the parts before attempting assembly.



-Make sure to always face the point on the top of the Cam Lock towards the outer edge.



-Use all the nails provided for the back panel and spread them out equally.



-Back panel must be used to make sure your unit is sturdy.




-Do NOT use harsh chemicals or abrasive cleaners on this item.


-Never push, pull, or drag your furniture.




# PARTS LIST

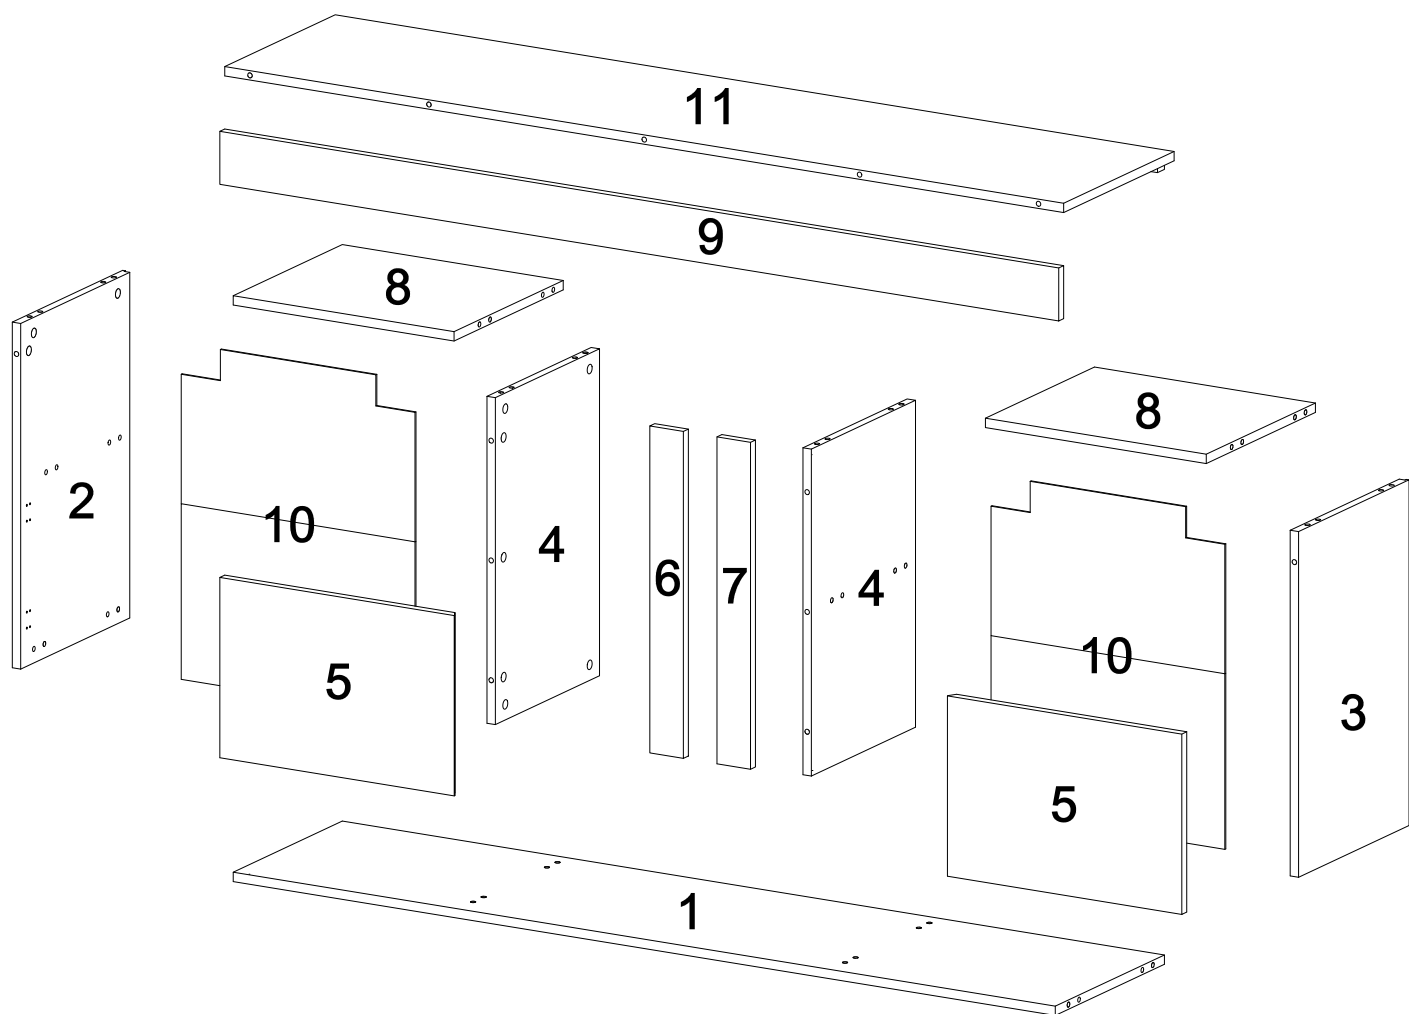


# HARDWARE LIST

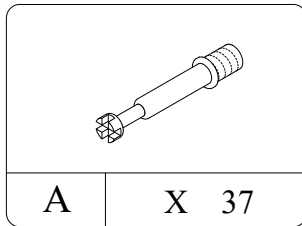



Ø6.5 x35mm

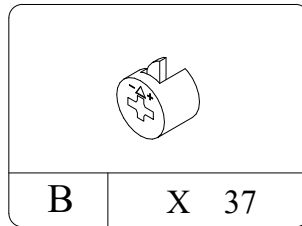


Ø15 x 12mm

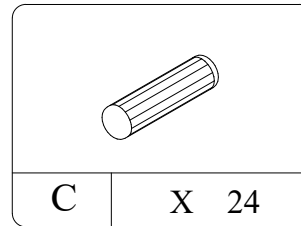

Ø8 x 30mm

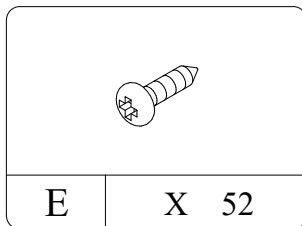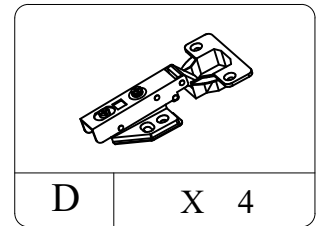


Ø3 x12mm

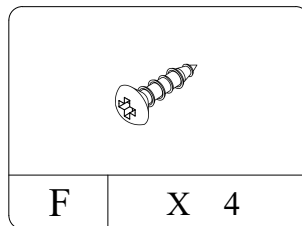

Ø4 x12.7mm

# DIMENSIONS


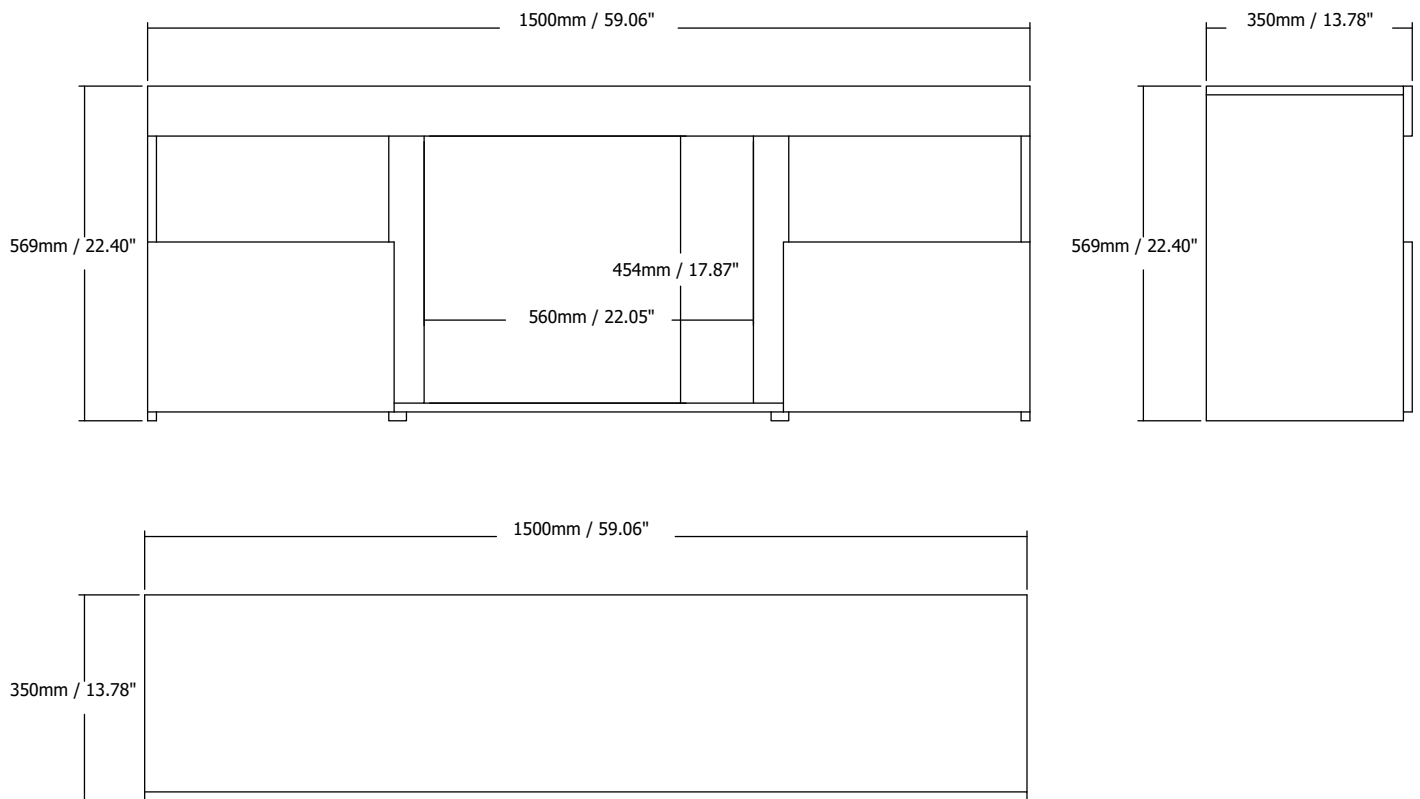


# ASSEMBLY

Before installing this fireplace, please read the following steps carefully.







## STEP 1:

Screw bolts (A) to panels (1)+(2)+(3)+(4)+(6)+(7)+(9)+(11).

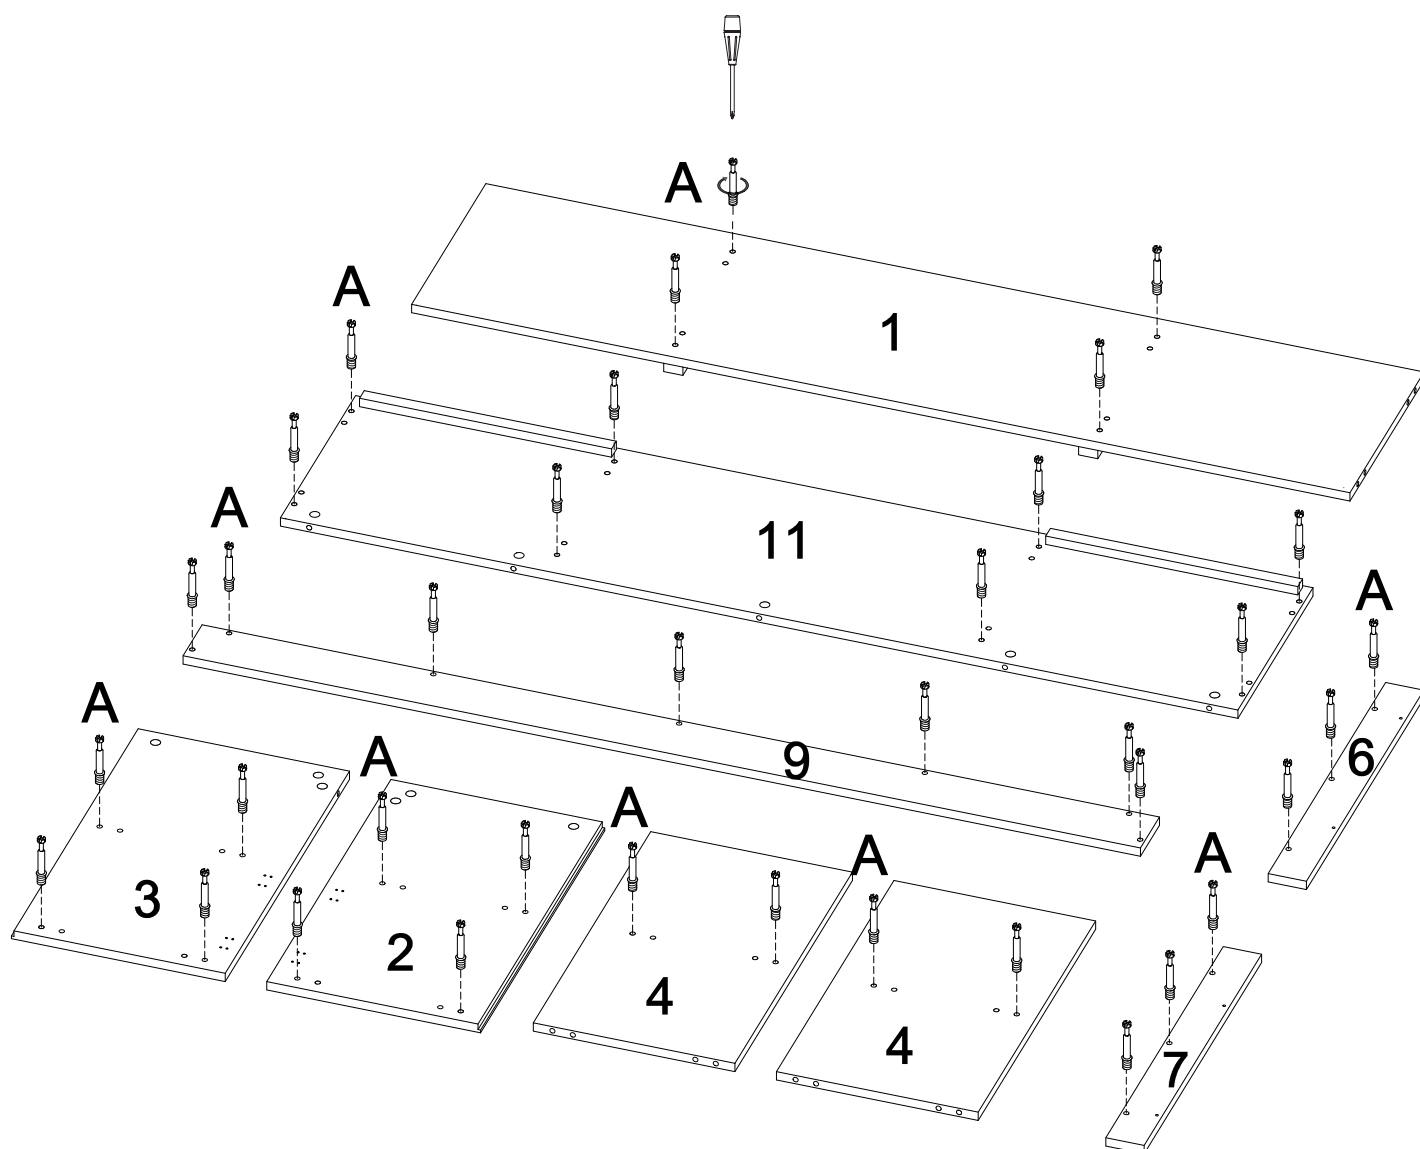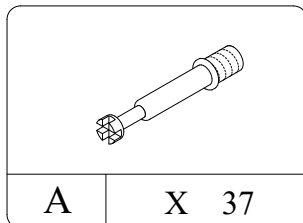



## STEP 2:

Join panels (6)(7) to panels (4) by inserting bolts (A). Lock them by inserting and securing excenter fittings (B).

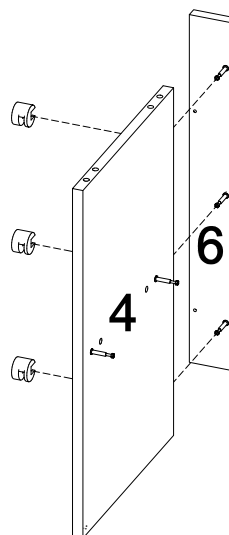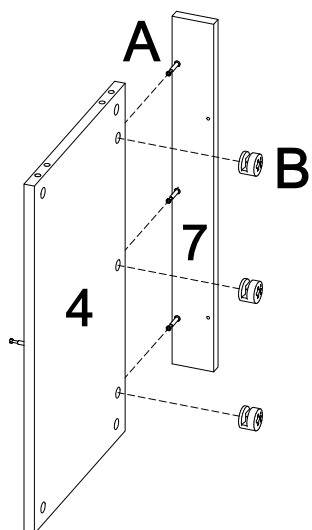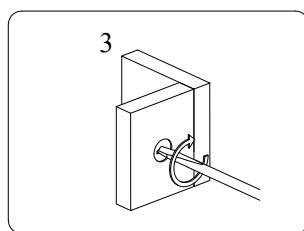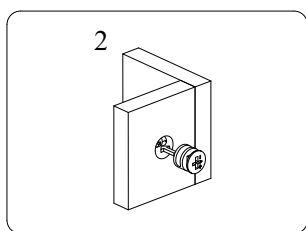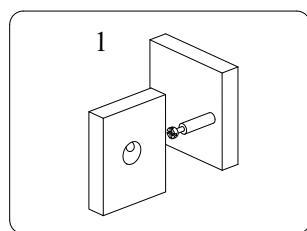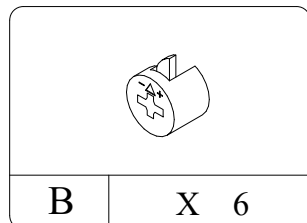



## STEP 3:

Join the panel (1) by inserting bolts (A) and dowels (C). Lock it by inserting and securing excenter fittings (B).

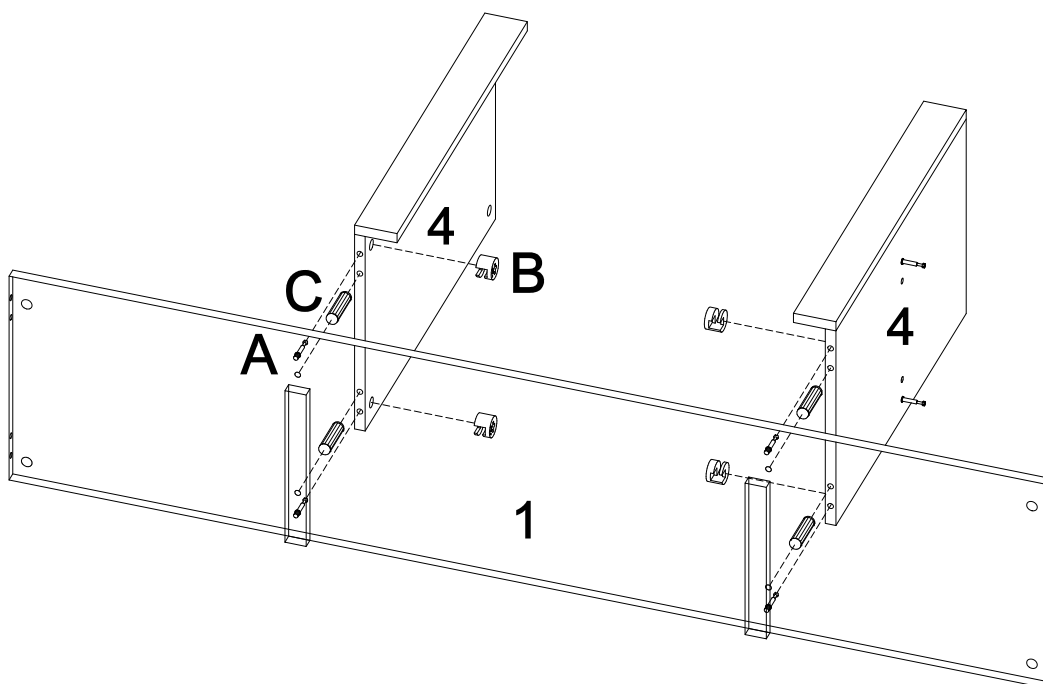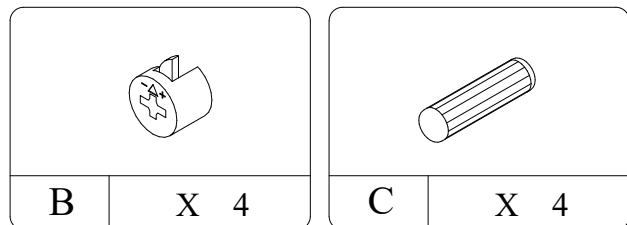



## STEP 4:

Join panels (8) by inserting bolts (A) and dowels (C). Lock them by inserting and securing excenter fittings (B).

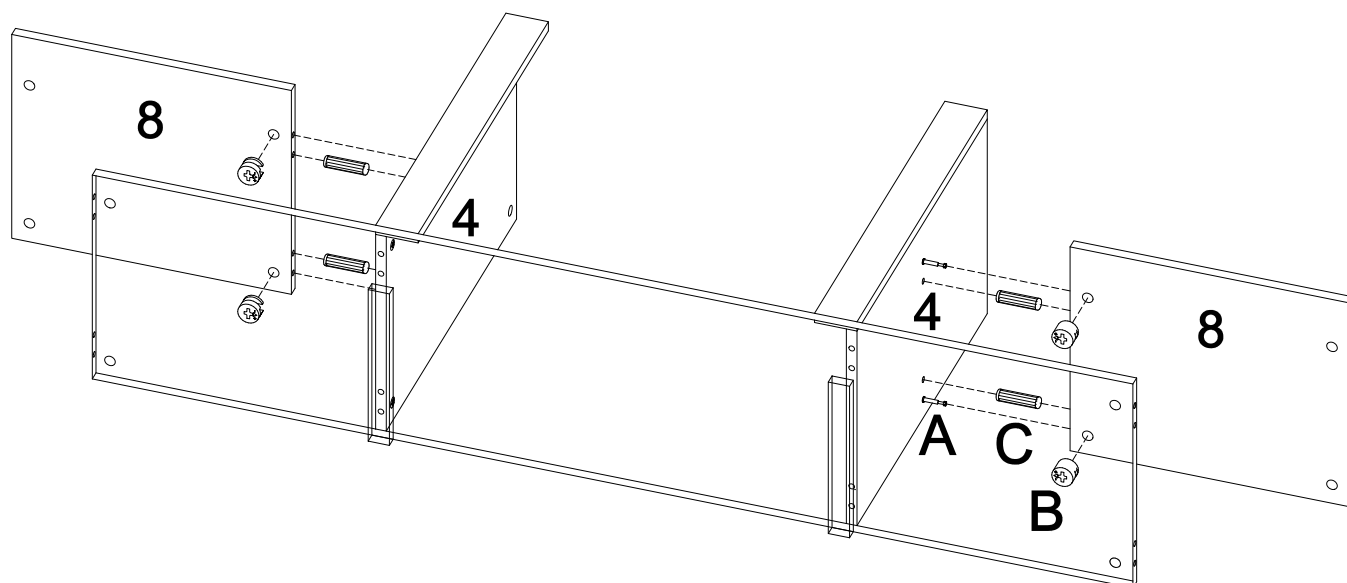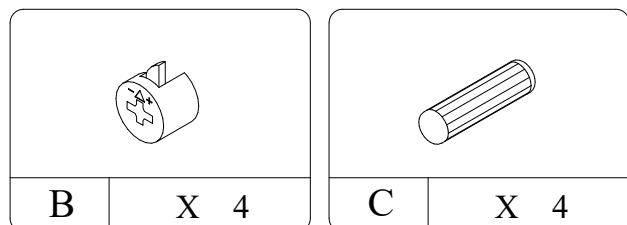



## STEP 5:

Join panels (2)+(3) by inserting bolts (A) and dowels (C). Lock them by inserting and securing excenter fittings (B).

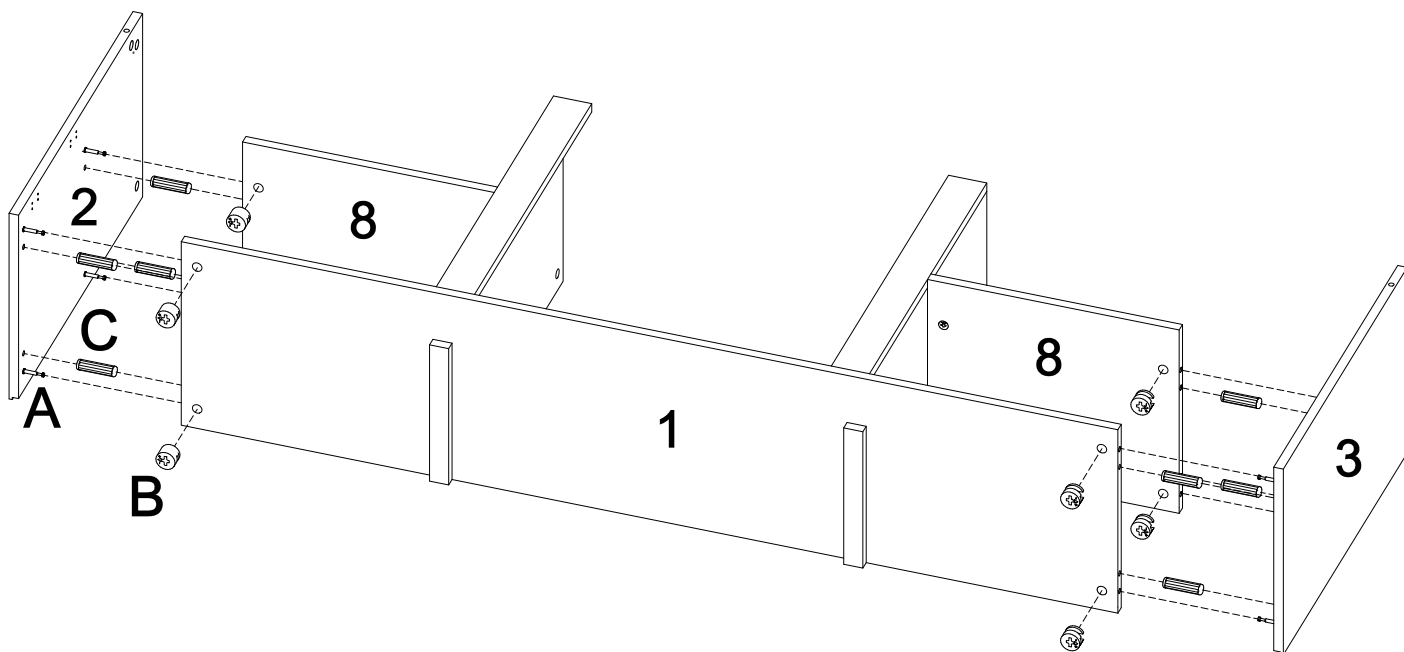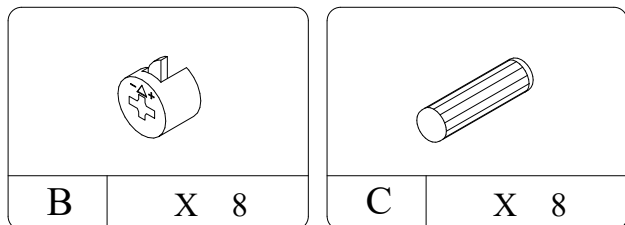



## STEP 6:

Join the panel (11) by inserting bolts (A) and dowels (C). Lock it by inserting and securing excenter fittings (B).

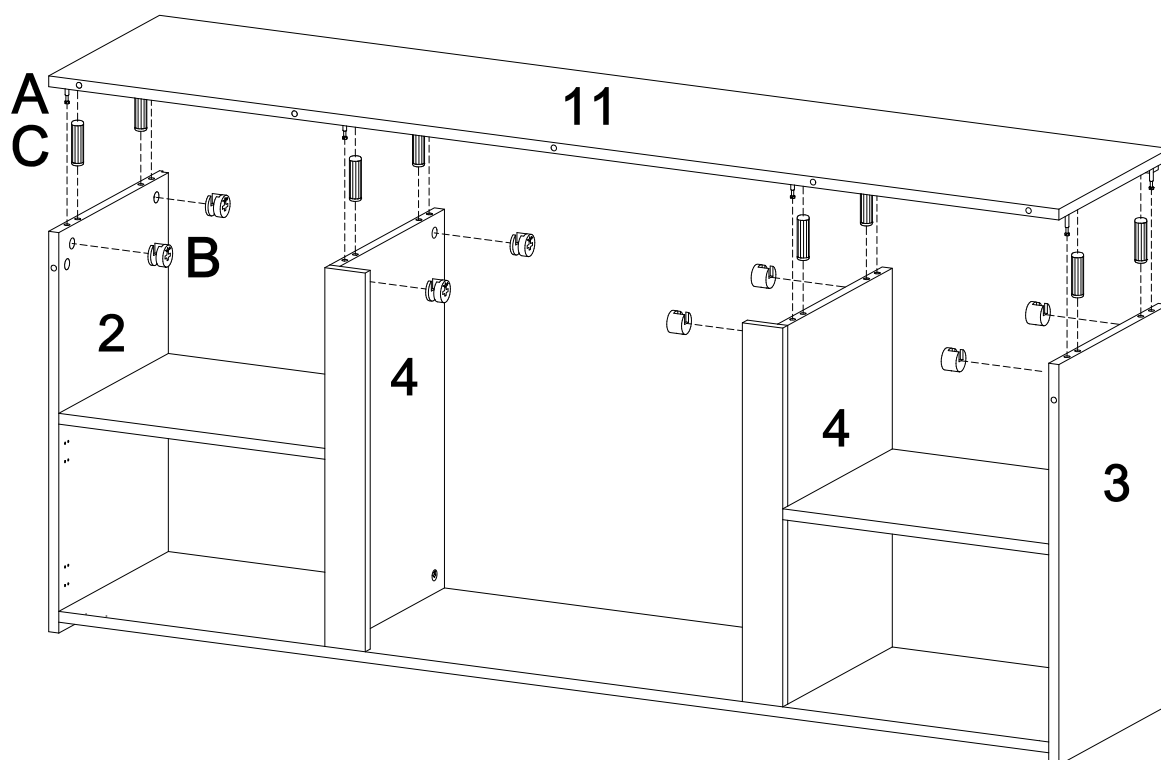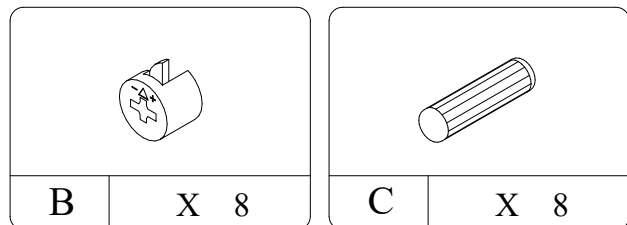

## STEP 7:

Join the panel (9) by inserting bolts (A). Lock it by inserting and securing excenter fittings (B).

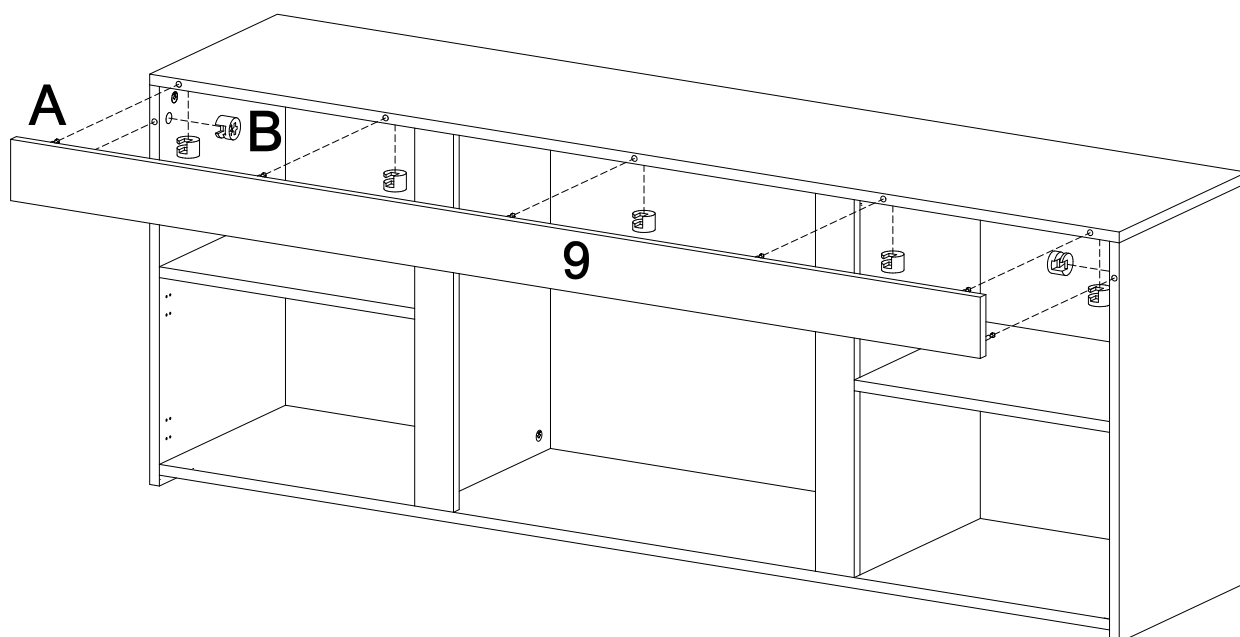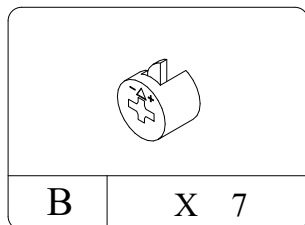


## STEP 8:

Join panels (10) by securing screws (E).





E

X 28

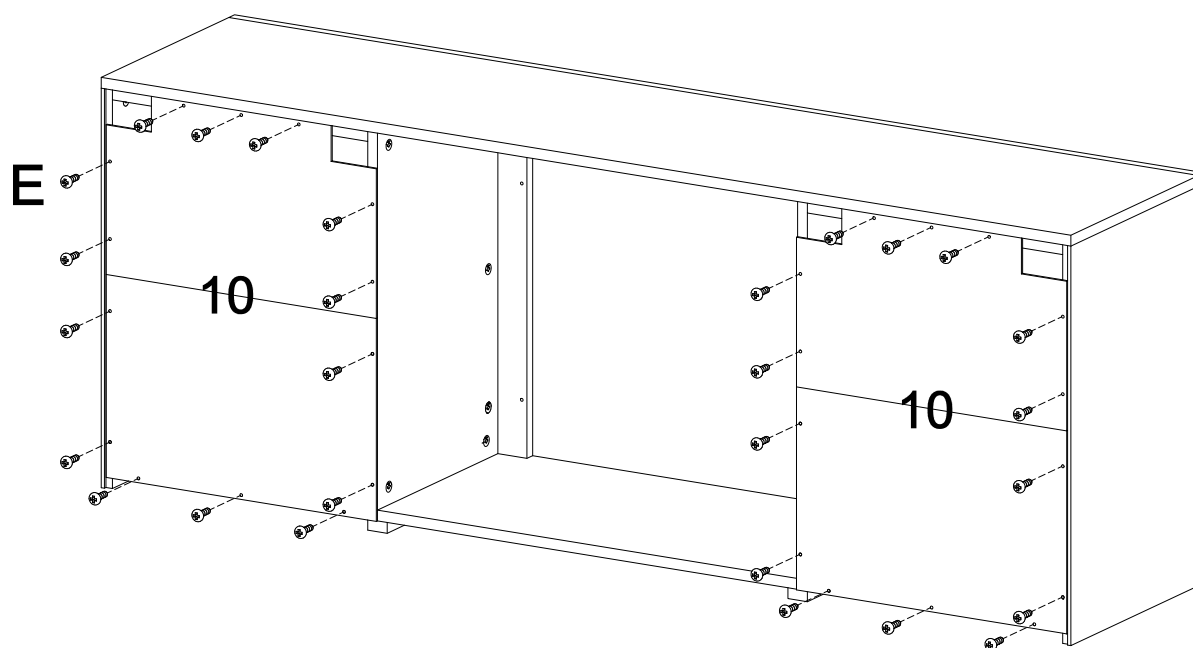

## STEP 9:




Attach hinges (D) to doors (5) by securing screws (E).

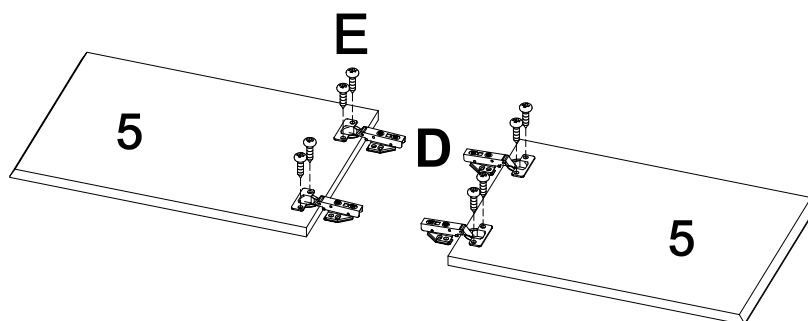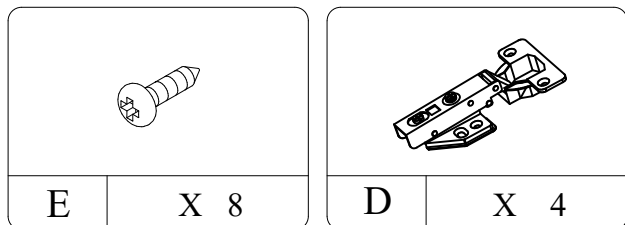

## STEP 10:

Join doors (5) by securing screws (E) through hinges (D).

Adjust the doors' position by loosening, moving, and tightening the hinges.

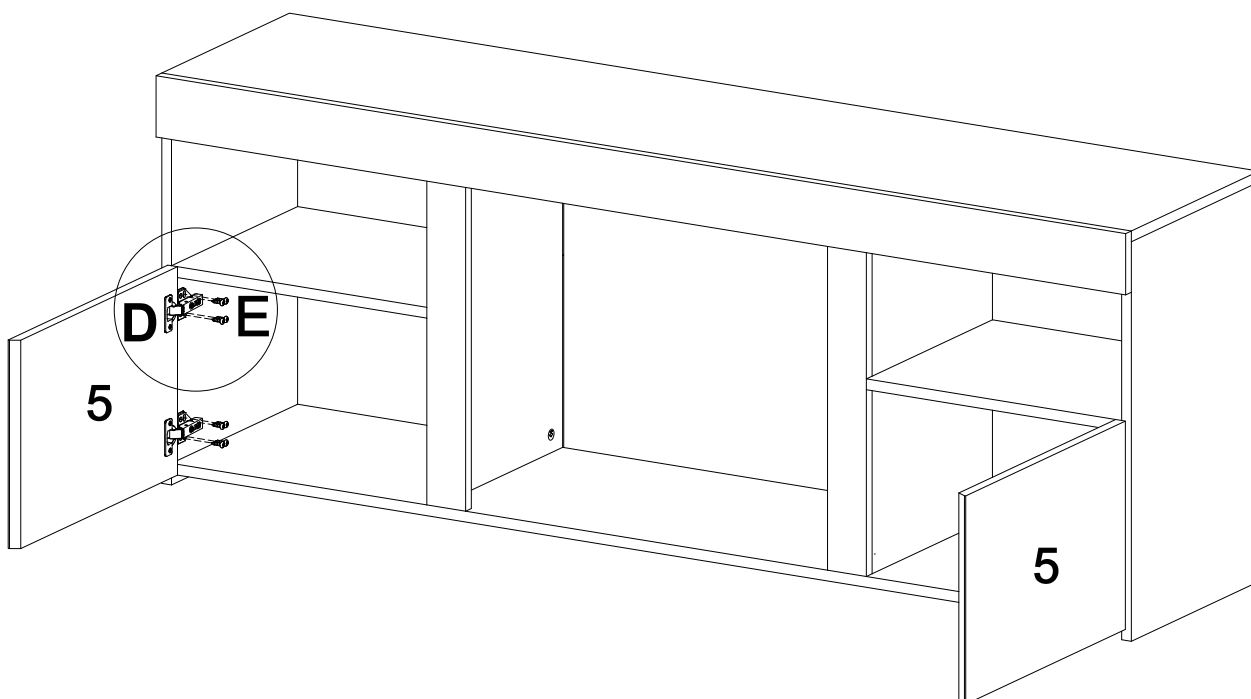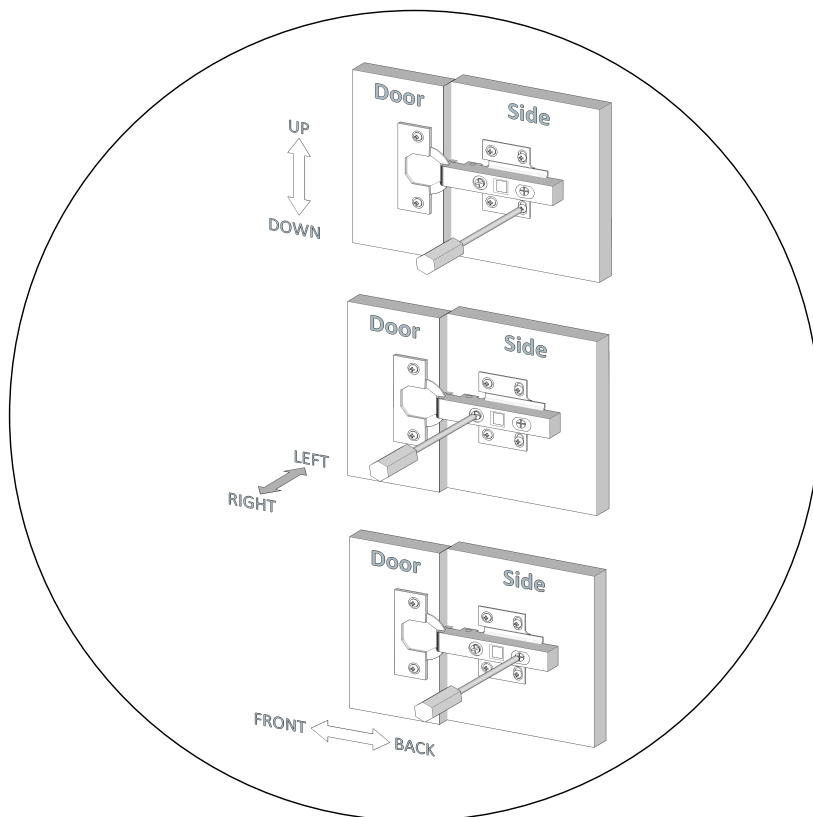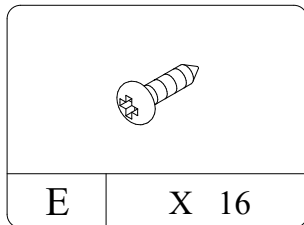

## STEP 11:

Install the firebox by securing screws (F).

