



INSTALLATION MANUAL


PART DESCRIPTIONS

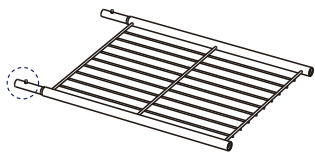

A Mesh Shelf①*3

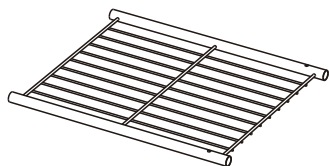


B Mesh Shelf②*3



C H-Shaped Frame*2




D Bottom Frame*2




E Top Frame*2




F Vertical Tube*4




G Toilet Paper Holder*1

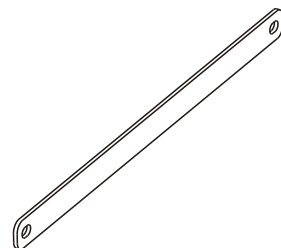


H Metal Rack*2

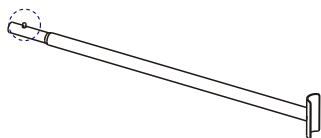


I Bottom Tube①*1



J Bottom Tube②*1



K M5 Screw*14




L Leveling Foot*4



M Hex Key*1



N Hook*5

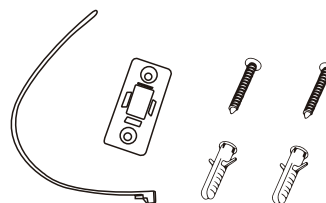

O Wall Anchor Strap Kit*2

GUARANTEE


If you have any queries regarding your product, please feel free to contact us. We will offer you a replacement or a FULL refund.



E-mail: support@kitsureus.com



INSTALLATION STEPS

STEP 1: Connect A and B to get a long mesh shelf, repeating 3 times. Connect I and J to get a long tube.

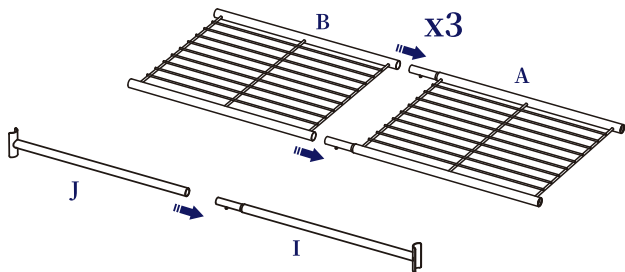


STEP 2: Attach 4 Ls to 2 Ds. Fasten the long tube (Step 1) to Ds with 2 Ks and M.

NOTES: 1. Make sure Ds' spring side faces inward.
2. If there is no gap between the wall and the water tank, pass the long tube underneath the tank, then connect both sides.
3. The long tube can be installed to the upper or lower screw hole of D based on the water supply valve's position.

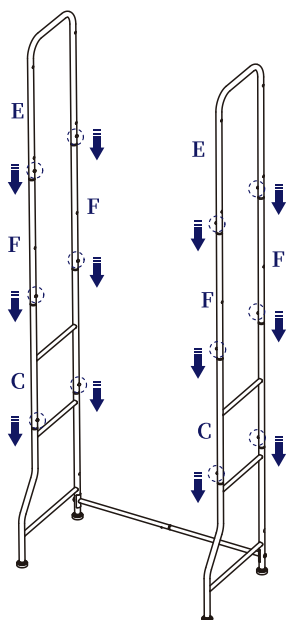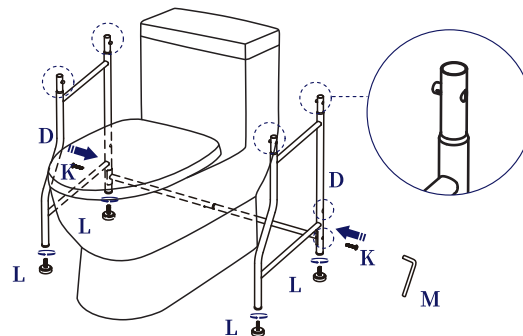

STEP 3: Insert 2 Cs, 4 Fs, and 2 Es in turns, as the picture shows.

NOTE: Make sure all spring buttons face inward.


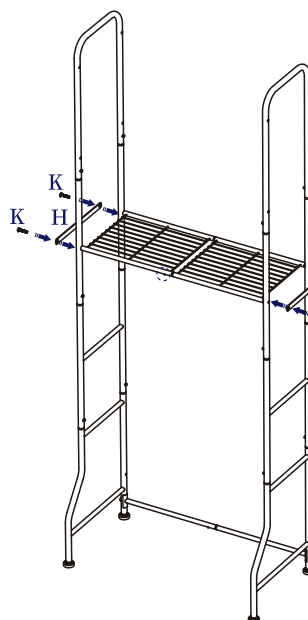


STEP 4: Fasten one long mesh shelf (Step 1) and 2 Hs to Fs with 4 Ks, as the picture shows.

NOTE: Make sure the mesh shelf's spring side faces down.

INSTRUCTIONS FOR WALL ANCHOR STRAP KIT

1. Mark and drill the drilling holes.
2. Hammer the drywall anchors.
3. Fix the bracket to the wall with screws.
4. Connect **Tube F (close to the wall)** and the bracket with the strap.

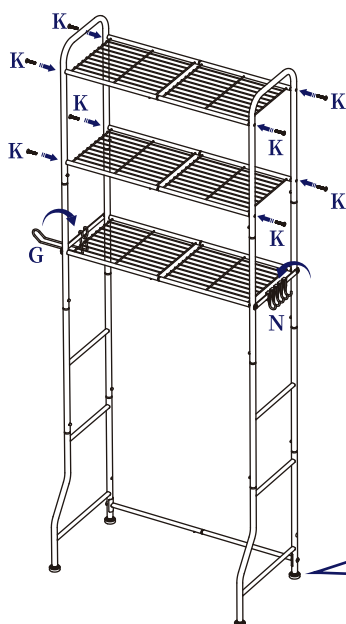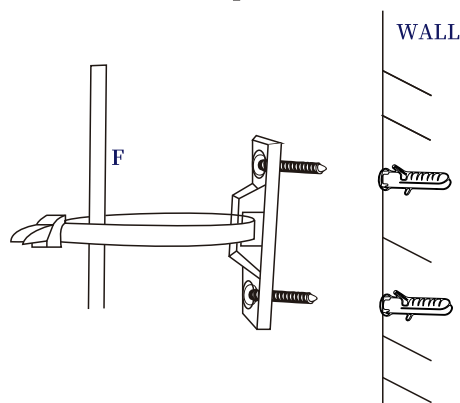

STEP 5: Attach 2 long mesh shelves (Step 1) to the assembled rack with 8 Ks. Hang G on H, and Ns anywhere as needed.

NOTES: 1. Tighten up all screws before use.
2. Adjust Ls to adapt to uneven floors if needed.