



ATTENTION


If there is any missing, please kindly send us messages to let us know the part number of missing part regarding to the first page of instructions.


Please also provide your full address, recipient name and contact phone number so that we can send replacement to you as soon as possible.

Children have died from furniture tipover. To reduce the risk of furniture tipover. ALWAYS install tipover restraint provided.



PART LIST

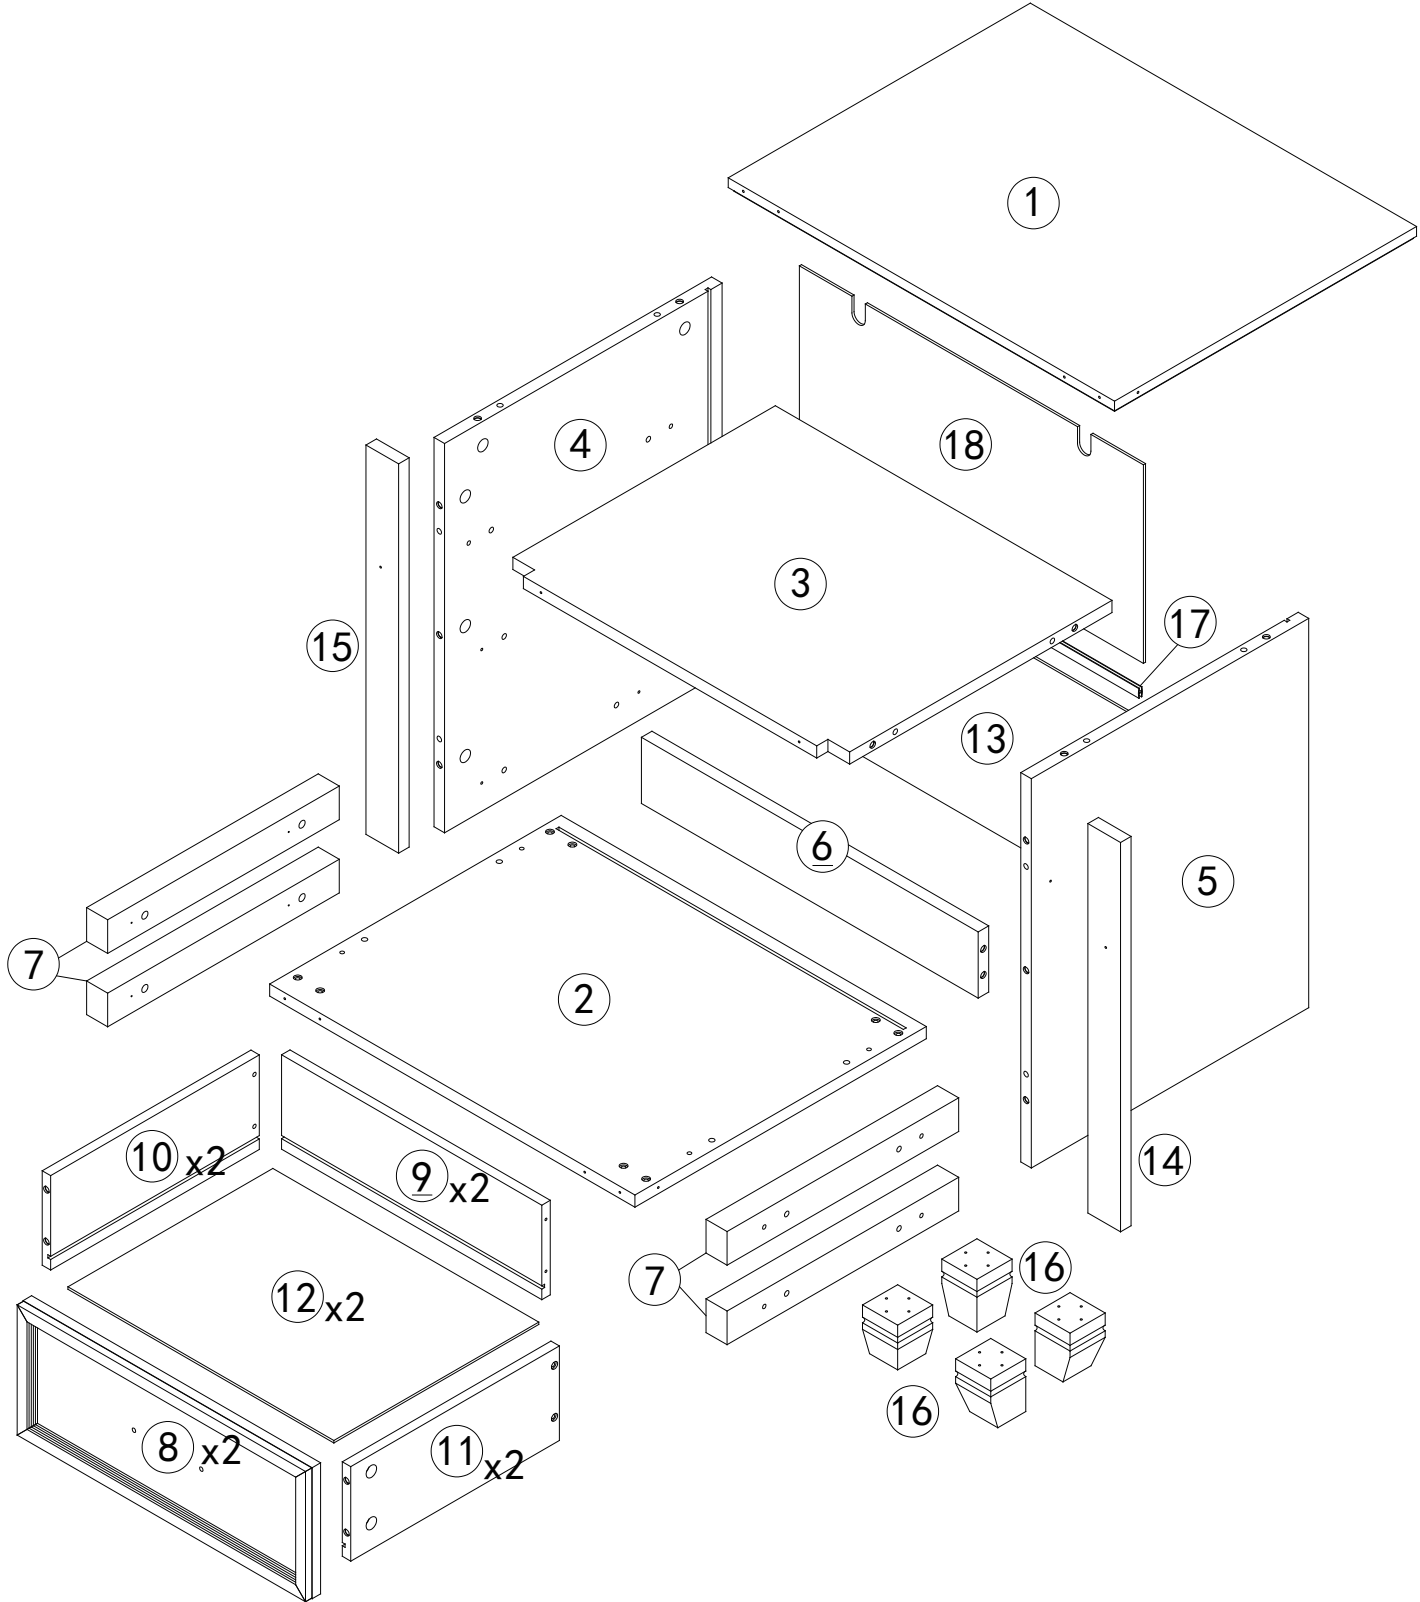



Ø6x35MM
Ax26+2


Ø15x10MM
Bx26+2


Ø6x30MM
Cx24+2



M4x40mm M4x12mm
Dx2



M3x12mm
Ex16+1



M4x35mm
Fx20+2



M4x12mm
Gx18+1



M4x16mm
Hx4



M3x16mm
Ix4


96mm
Jx2

















M90x61x10mm
Kx6


M4x35mm
Lx8


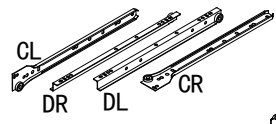

300mm
x2


Ø21x100MM
x1

PART LIST

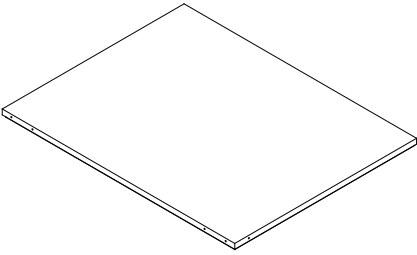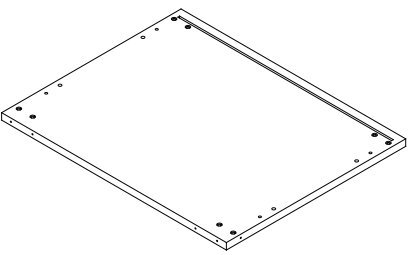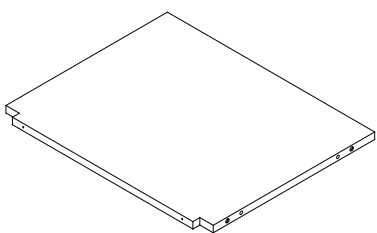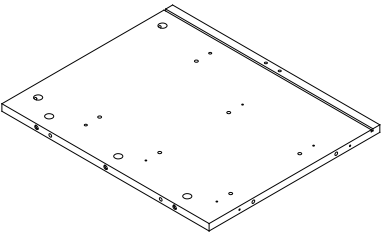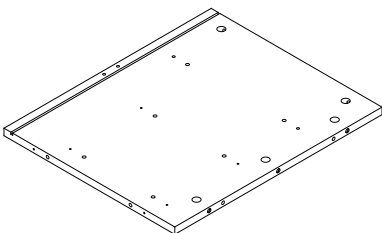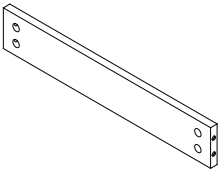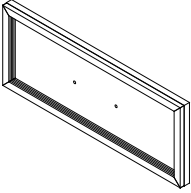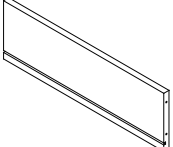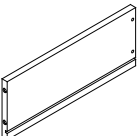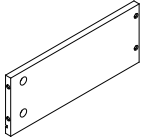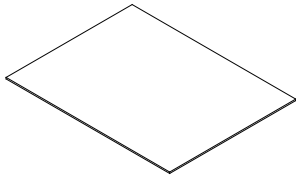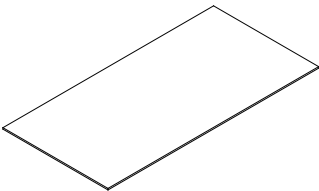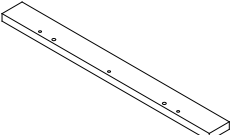
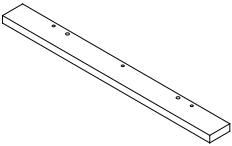
1  x1	2  x1	3  x1
4  x1	5  x1	6  x1
7  x4	8  x2	9  x2
10  x2	11  x2	12  x2
13  x1	14  x1	15  x1

PART LIST

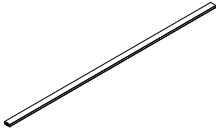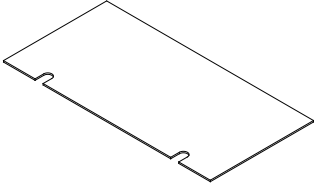
16	x4	17	x1	18	x1
					




X 2SET




CL



CR




DL




DR



D =




1



2




3

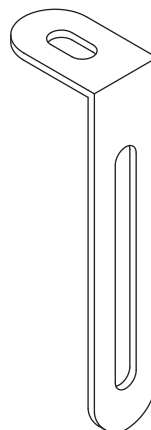

4


STEP1

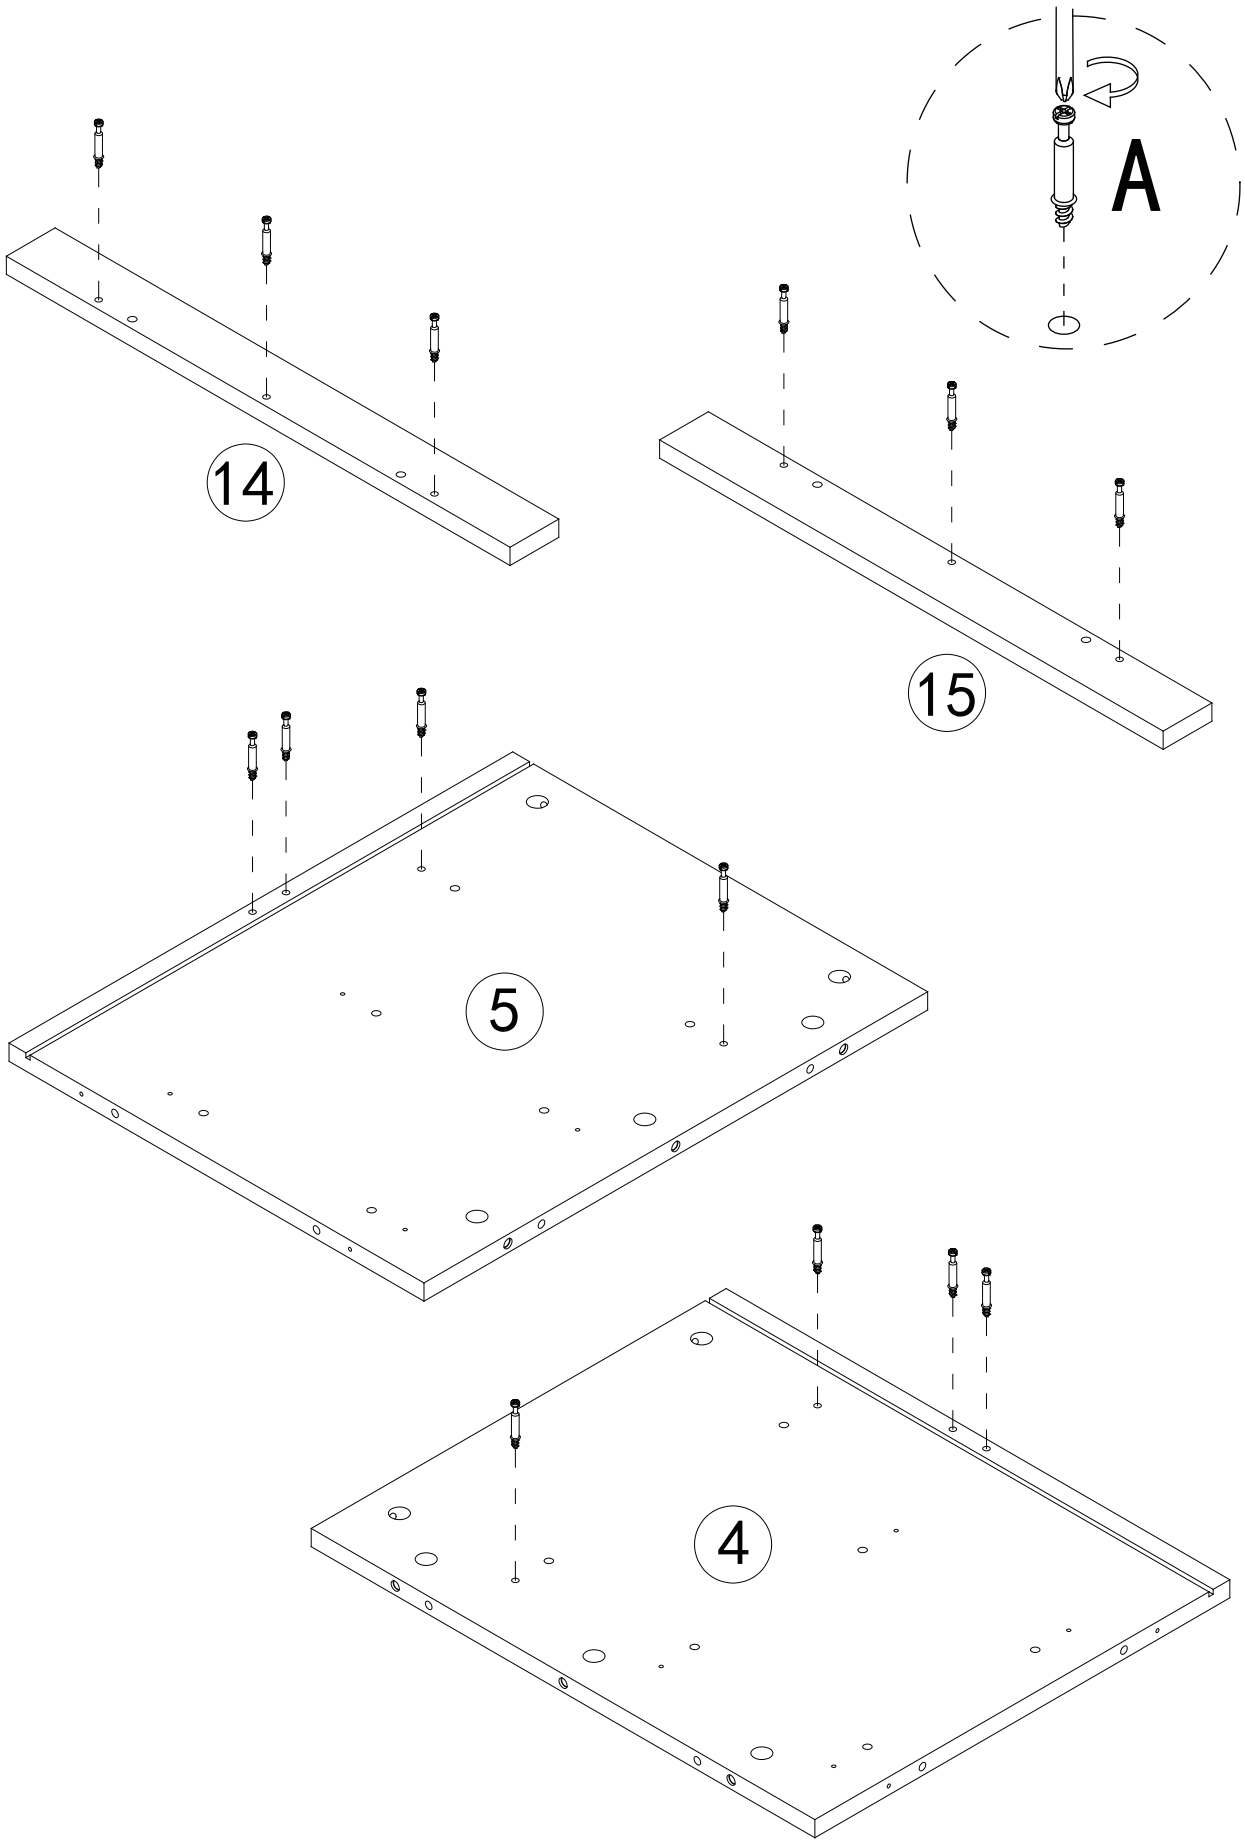


A		14pcs
---	---	-------

STEP2


Note that the foramen magnum is backward.

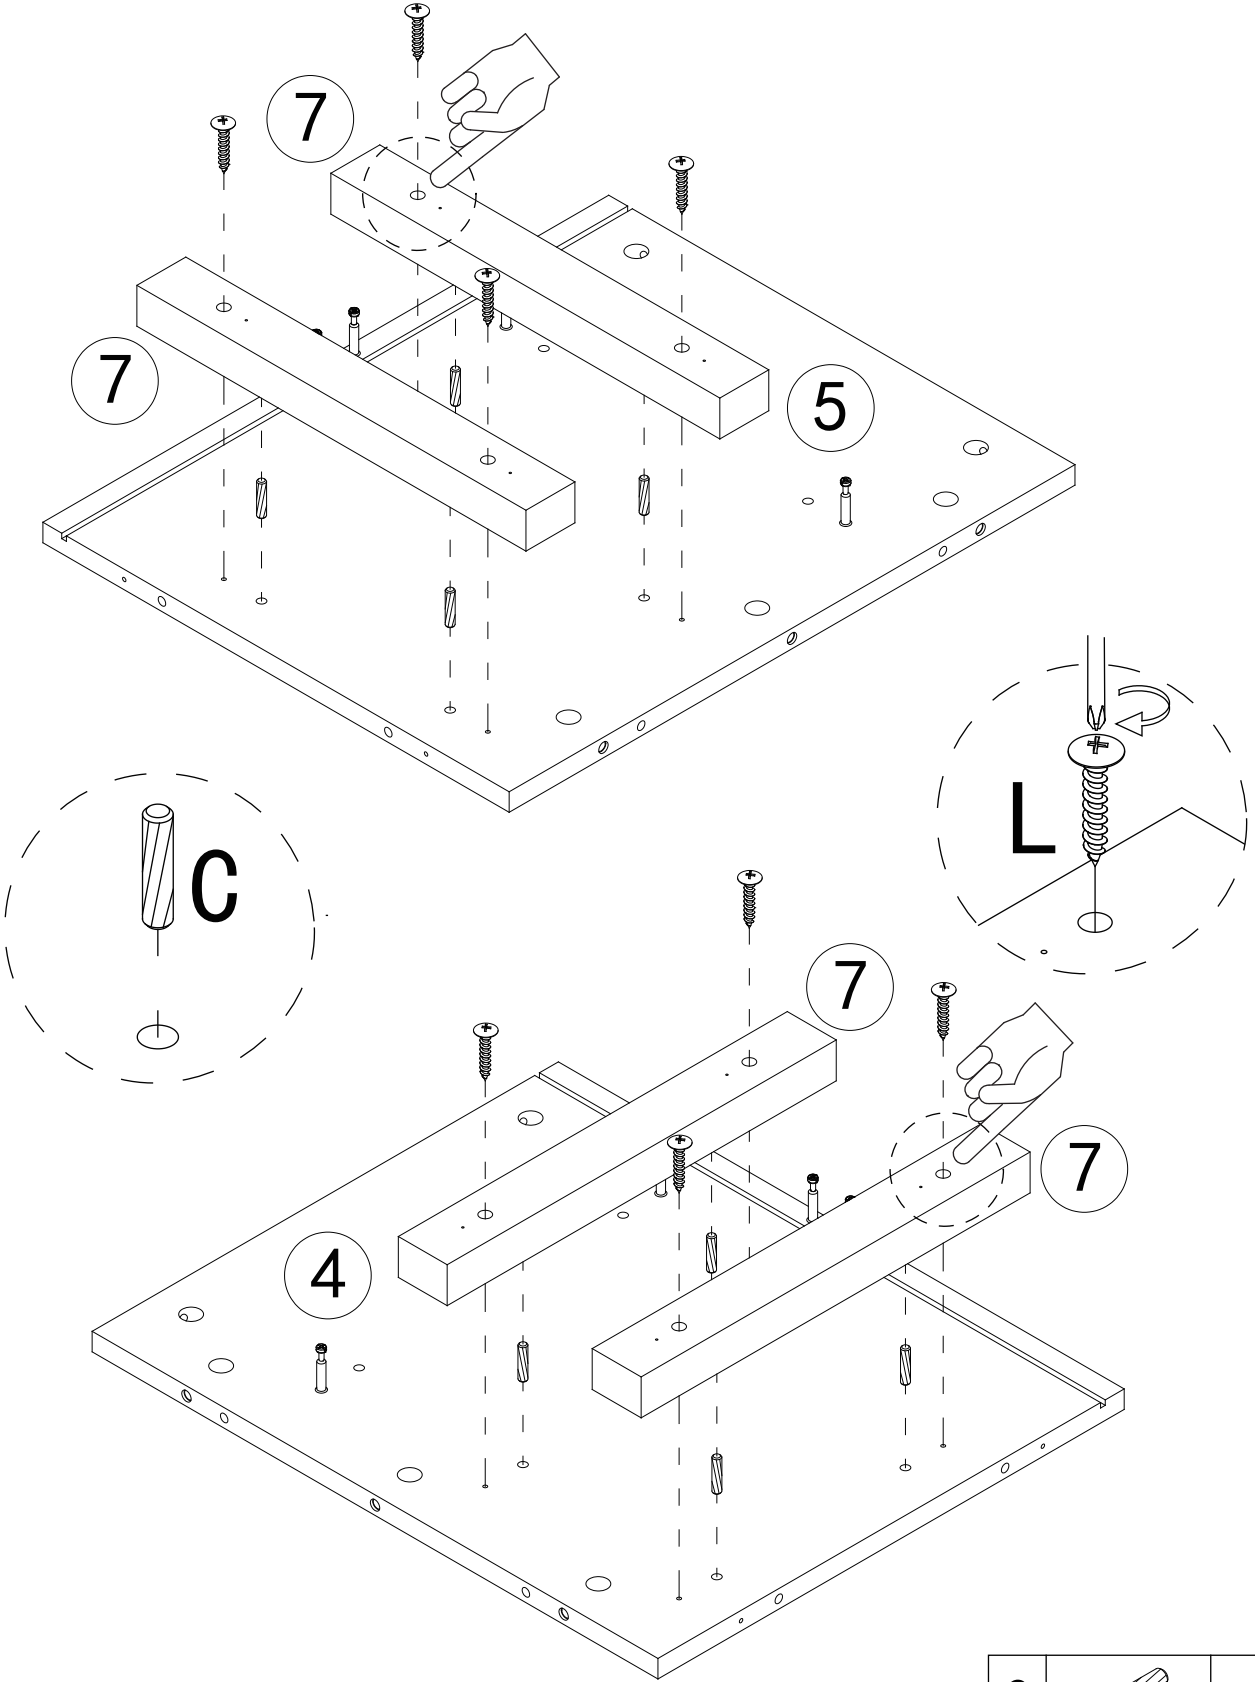

C		8pcs
L		8pcs

STEP3


Pay attention to the hole position.

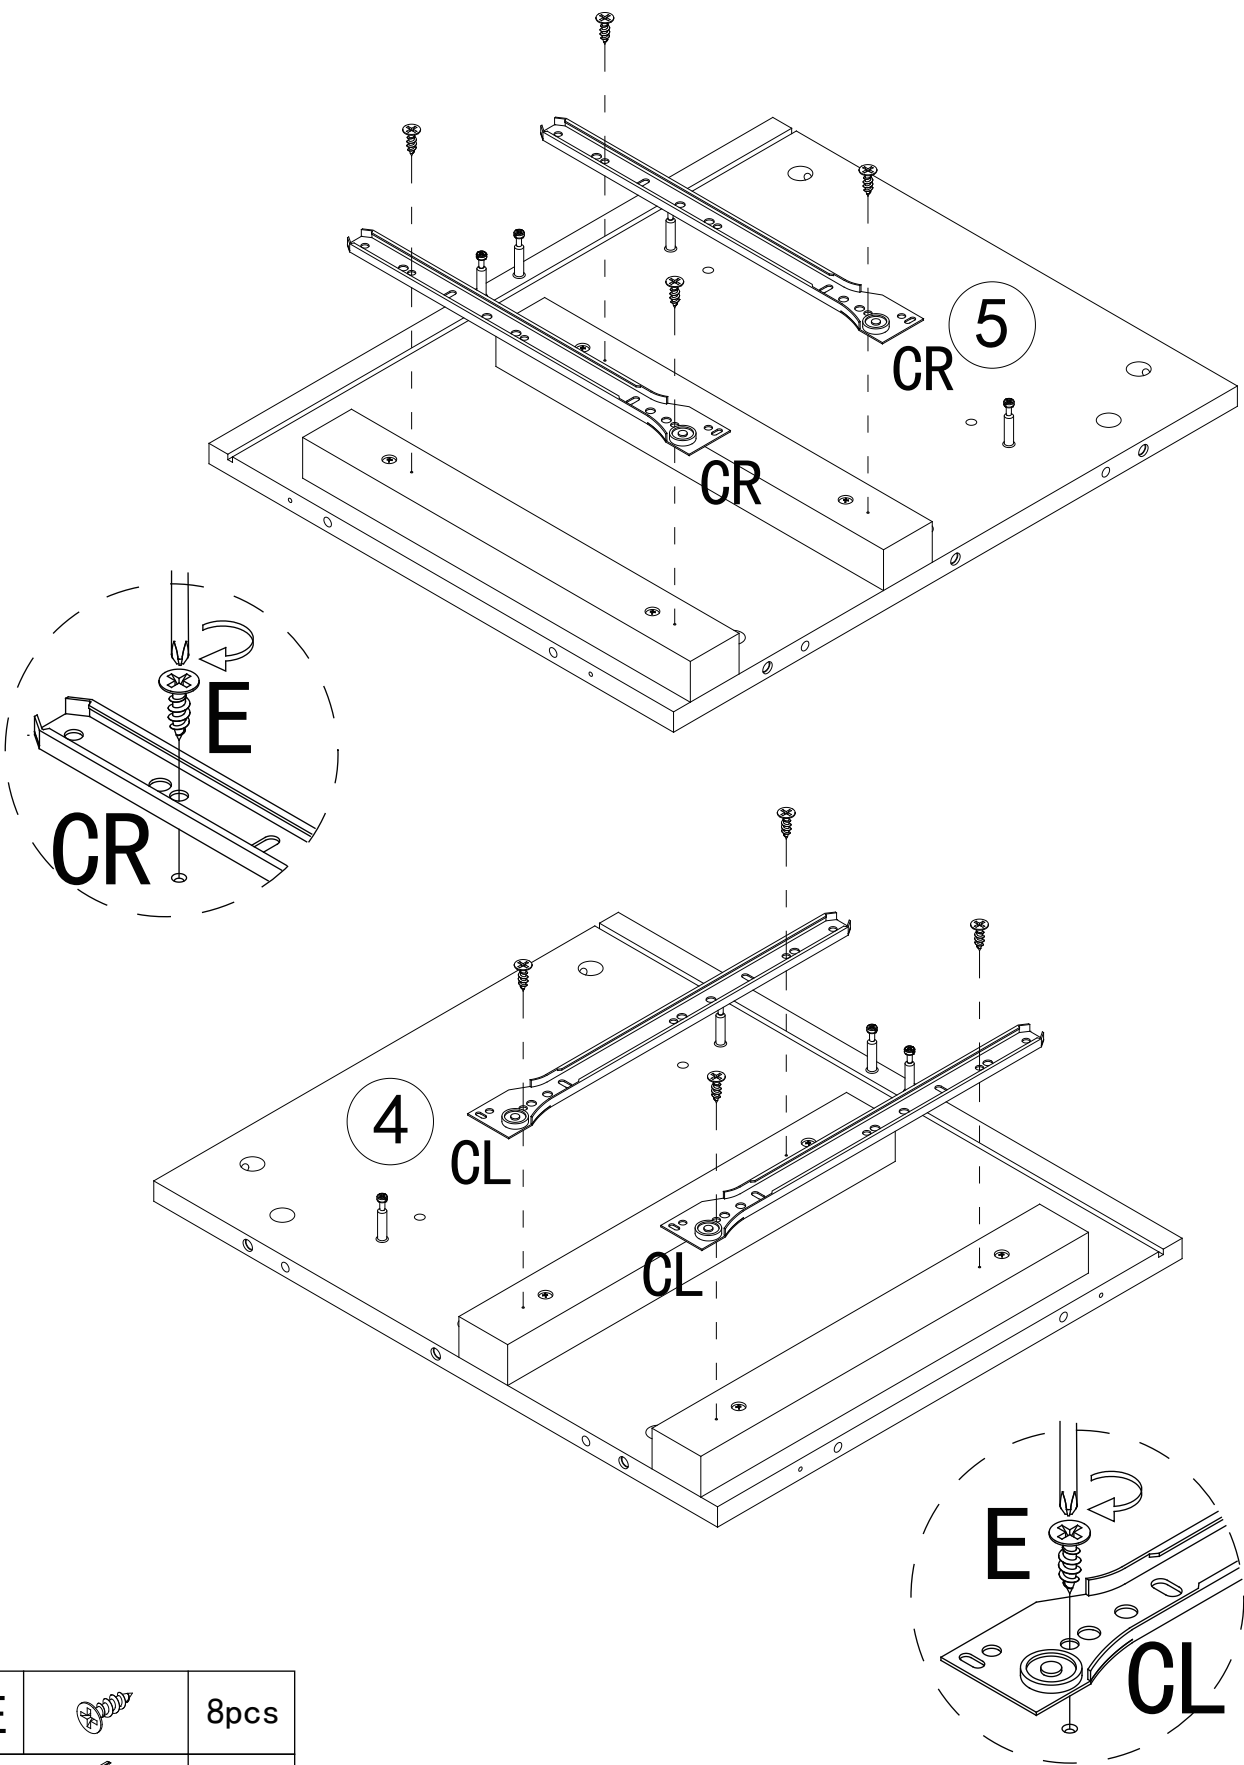




E		8pcs
CL		2pcs

STEP4

Pay attention to the hole position.


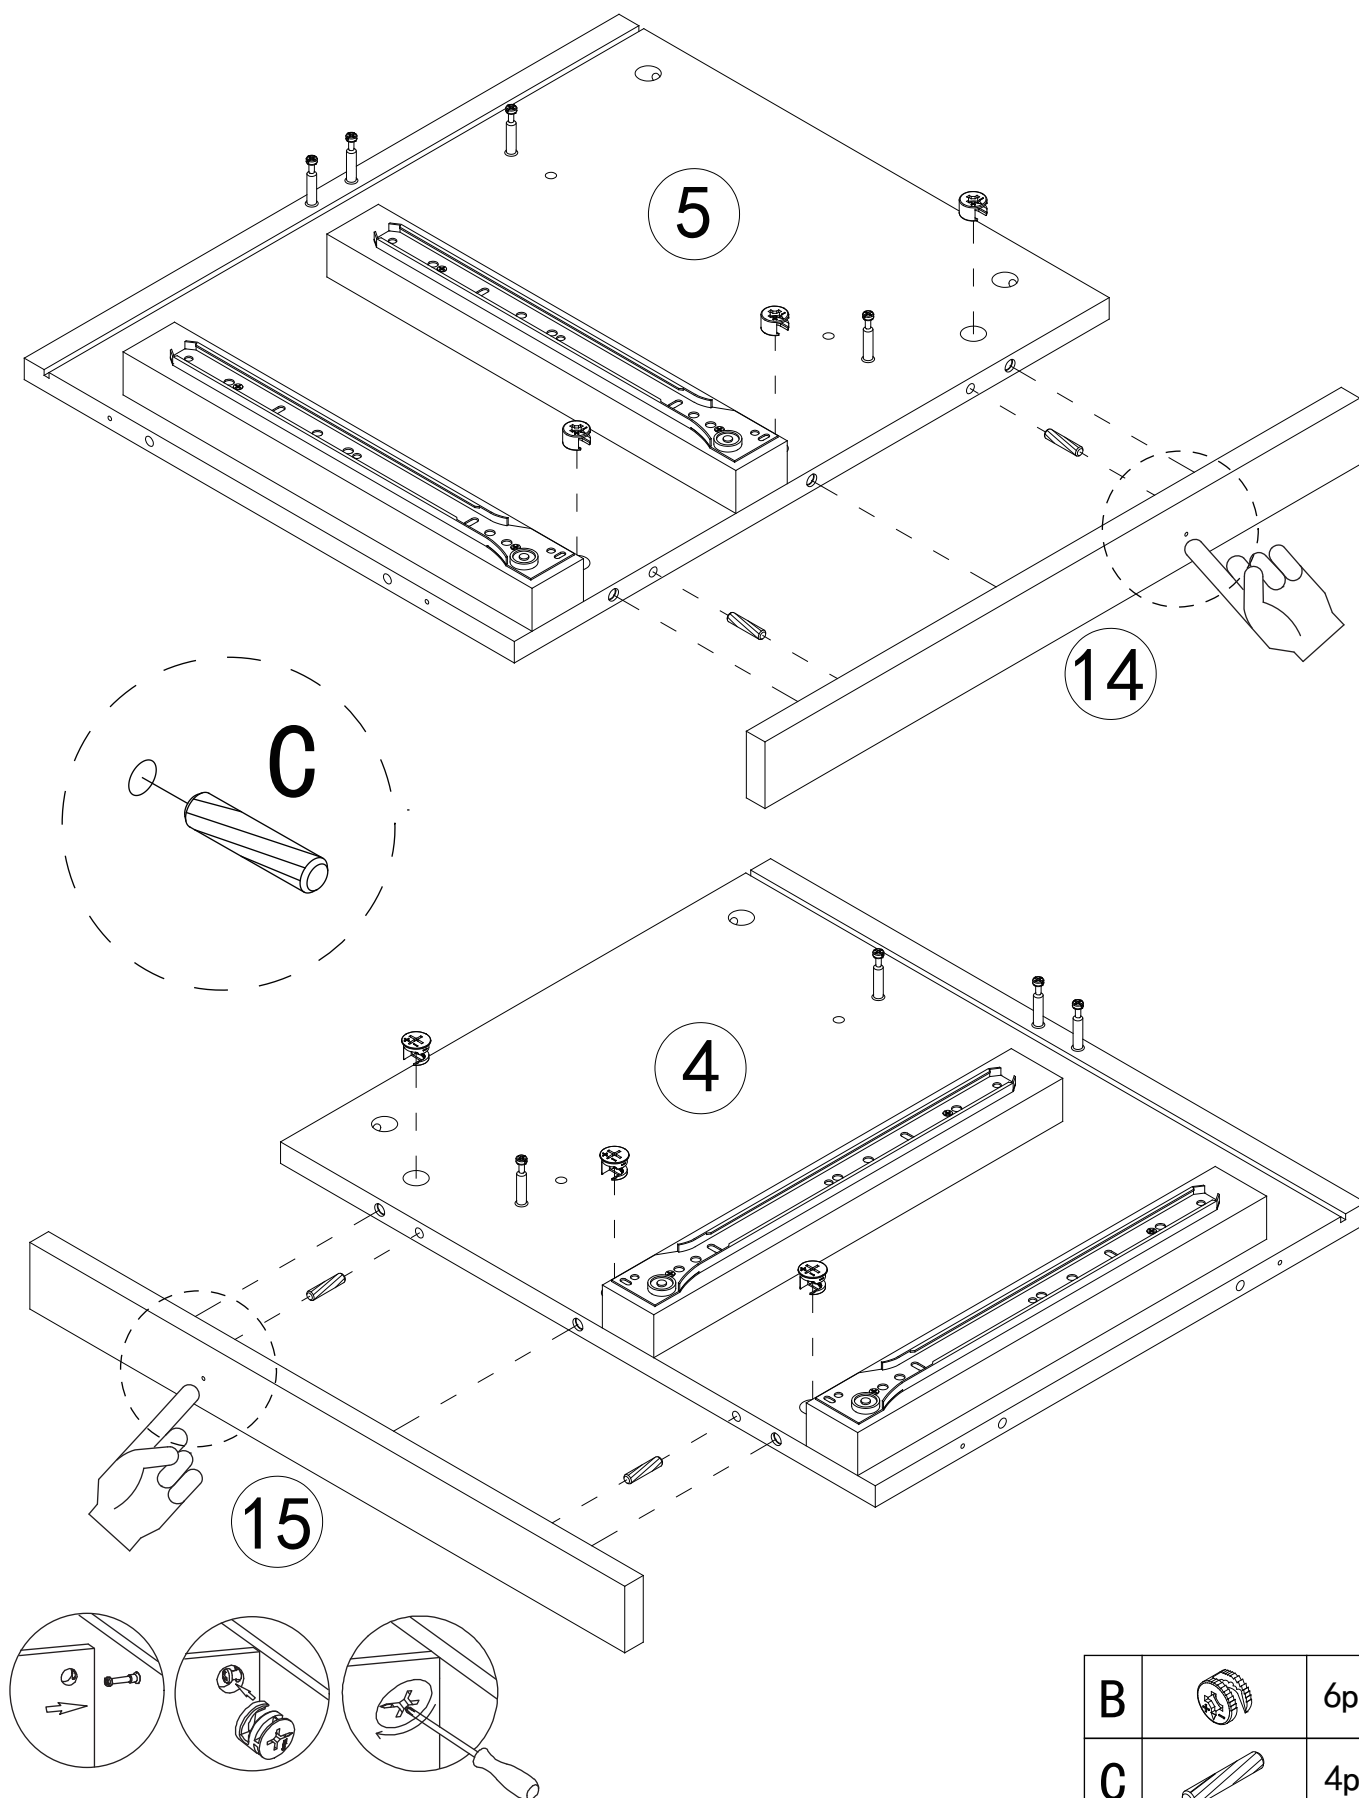


STEP5

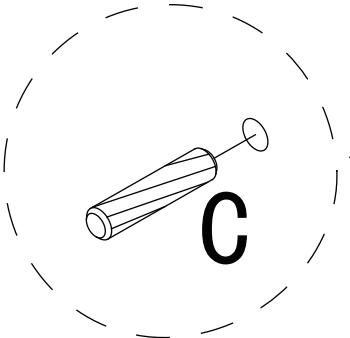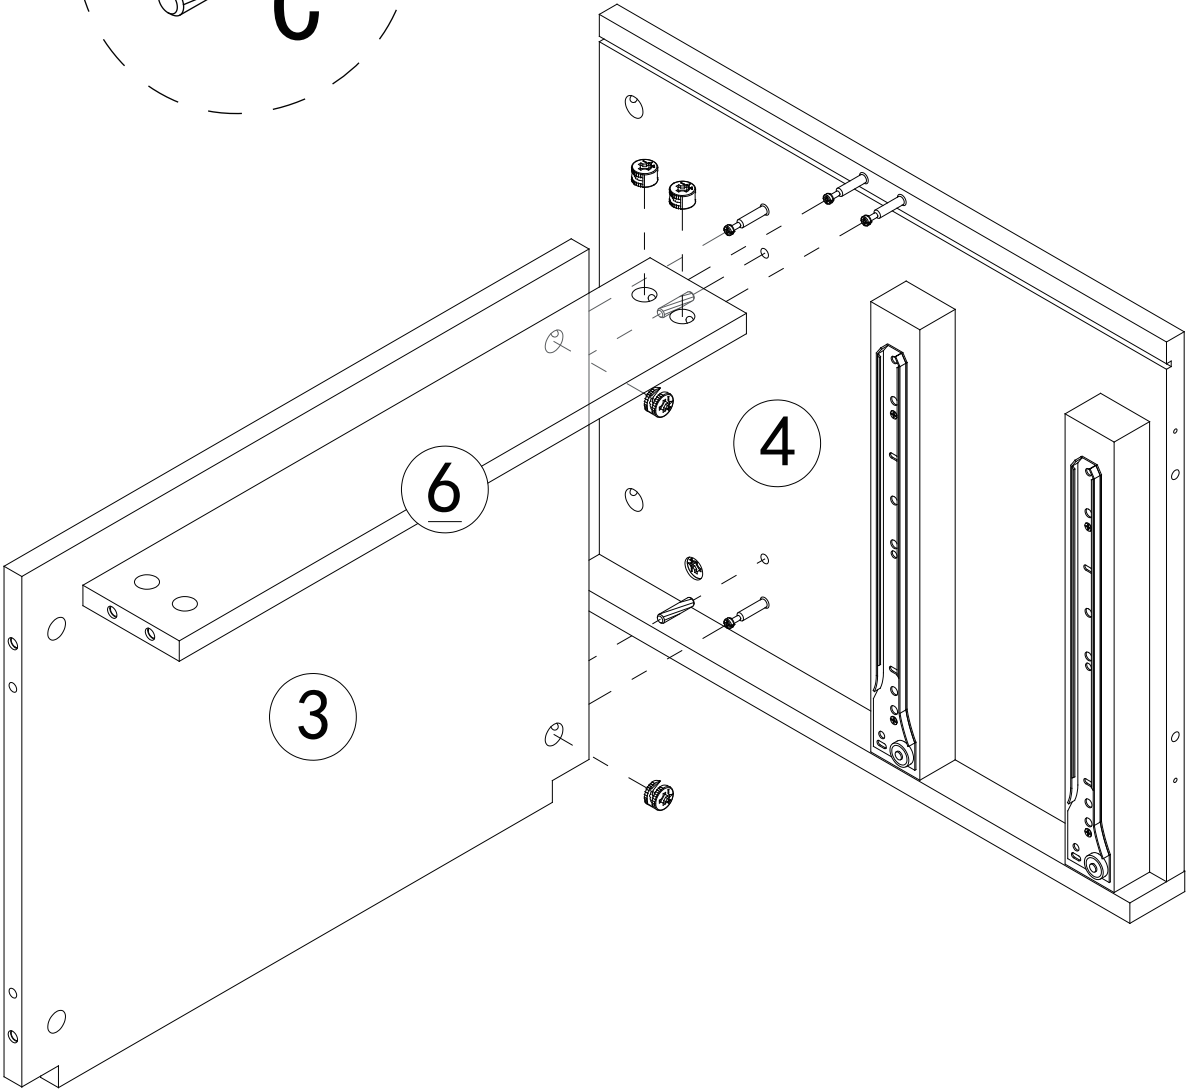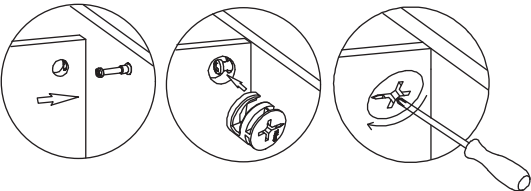

B		4pcs
C		2pcs


STEP6

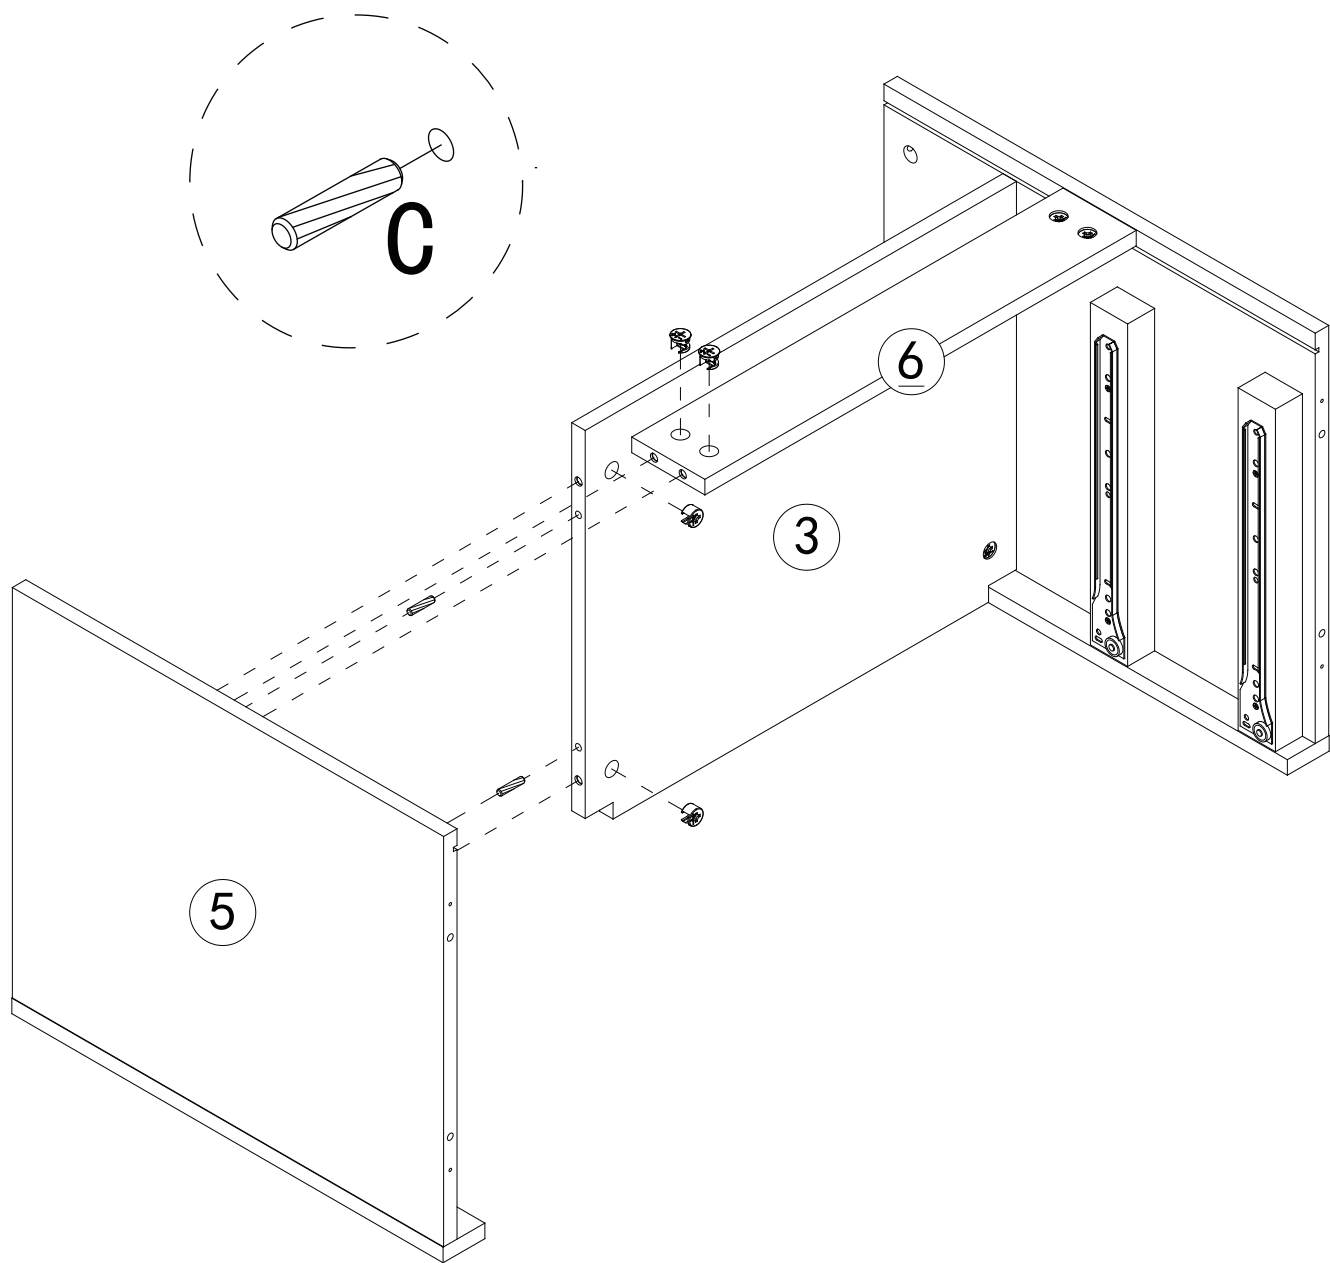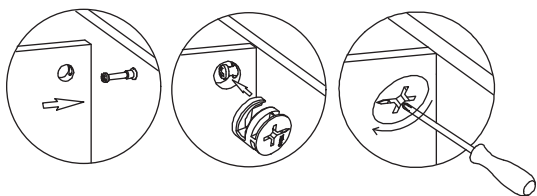

B		4pcs
C		2pcs


STEP7

Note: Put the anti-tip device D4 on the top, near the backside, and fix it with a screw D3.

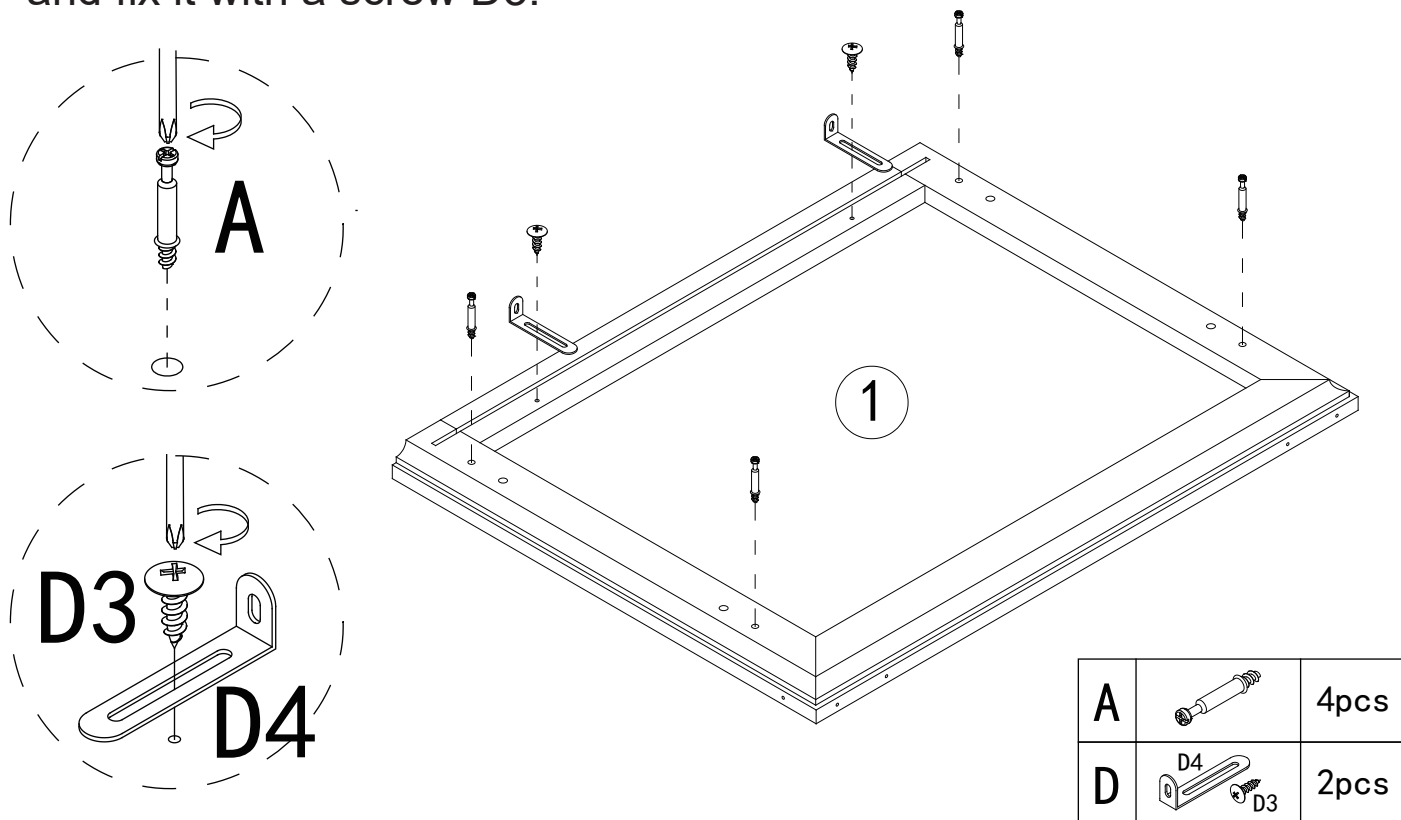


STEP8

Note that the straight edges of the four feet are facing outward.

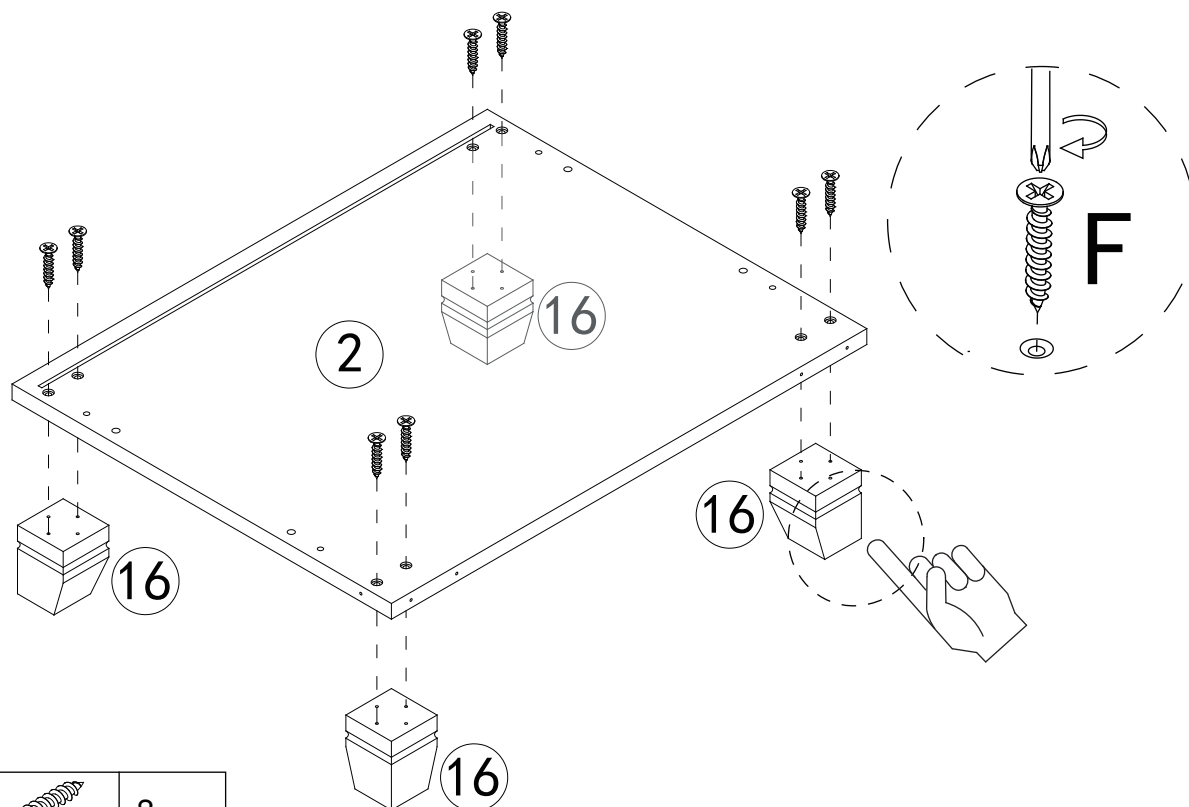


STEP9

Pay attention to the slot.

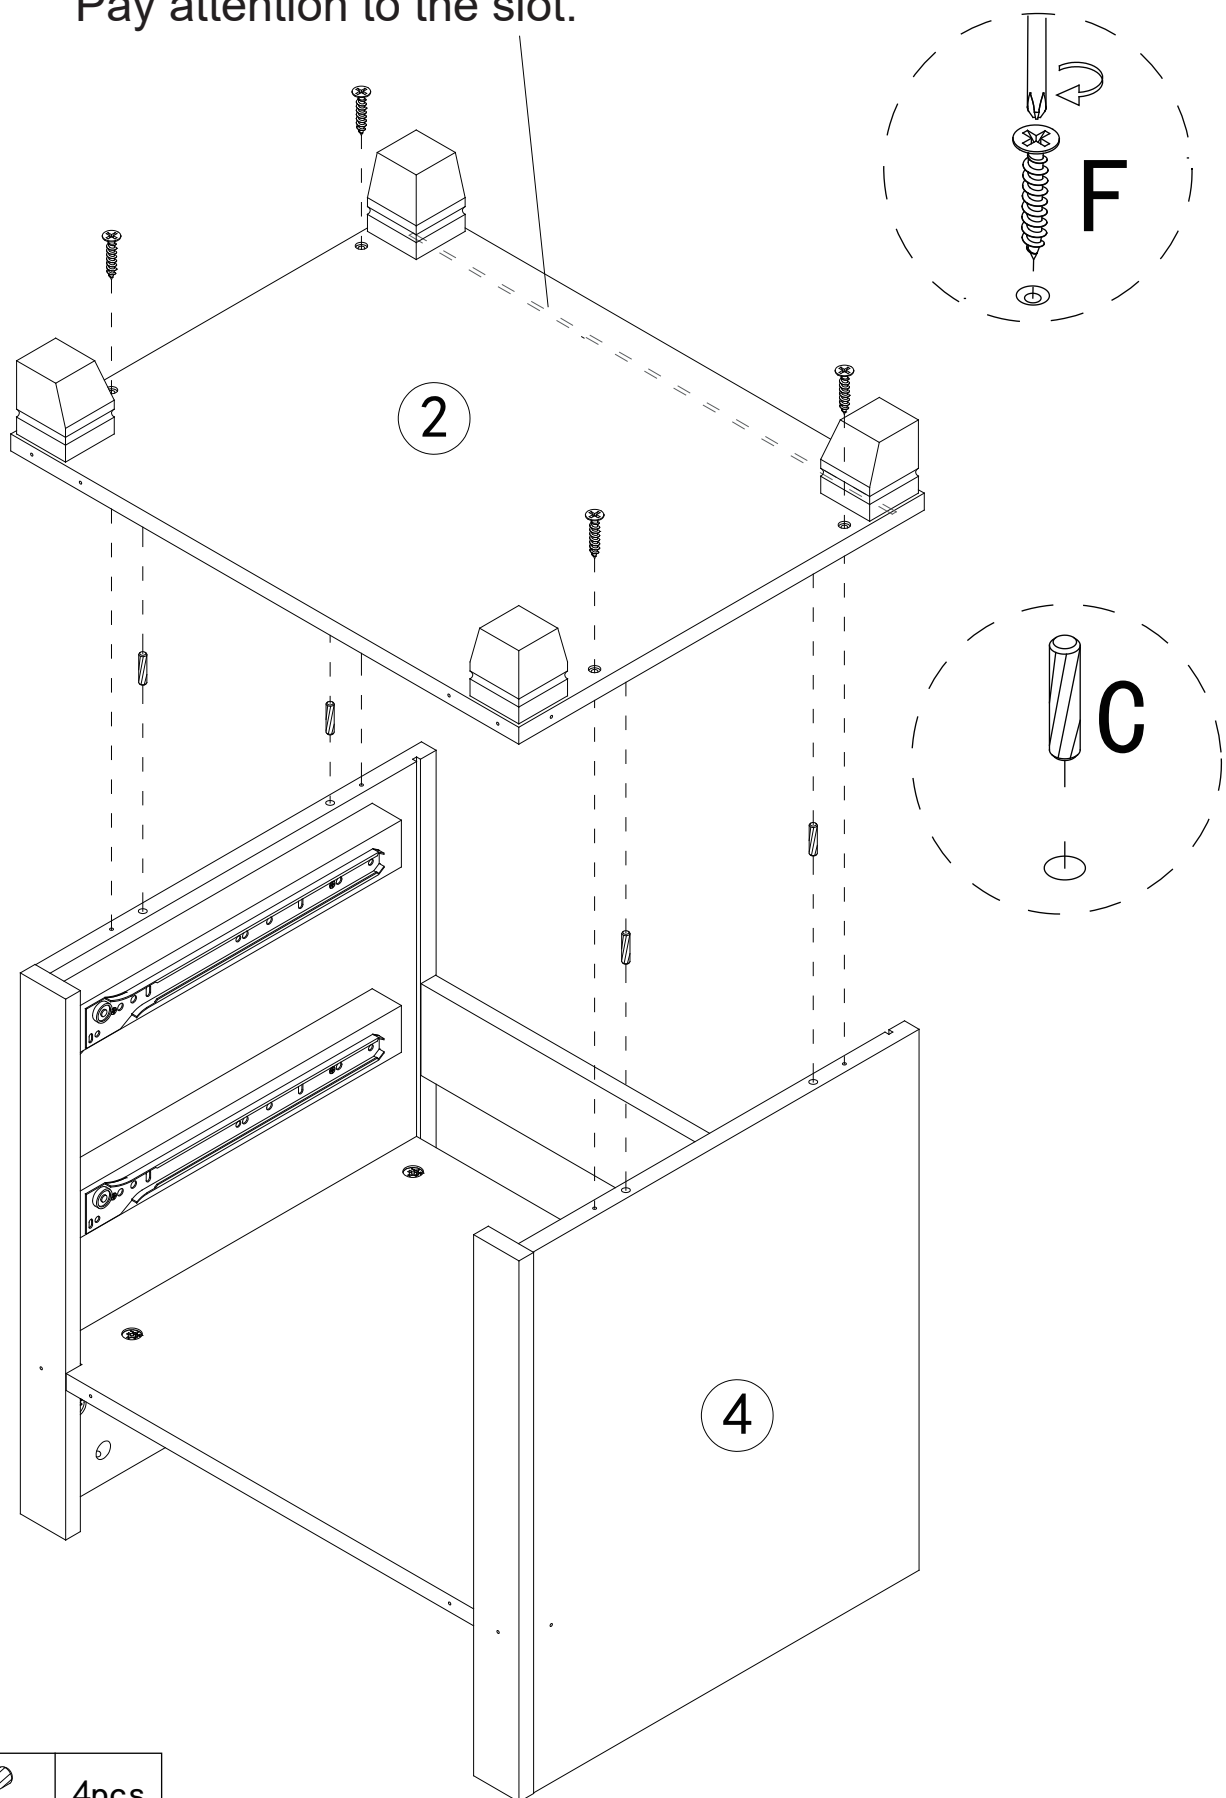



C		4pcs
F		4pcs

STEP10

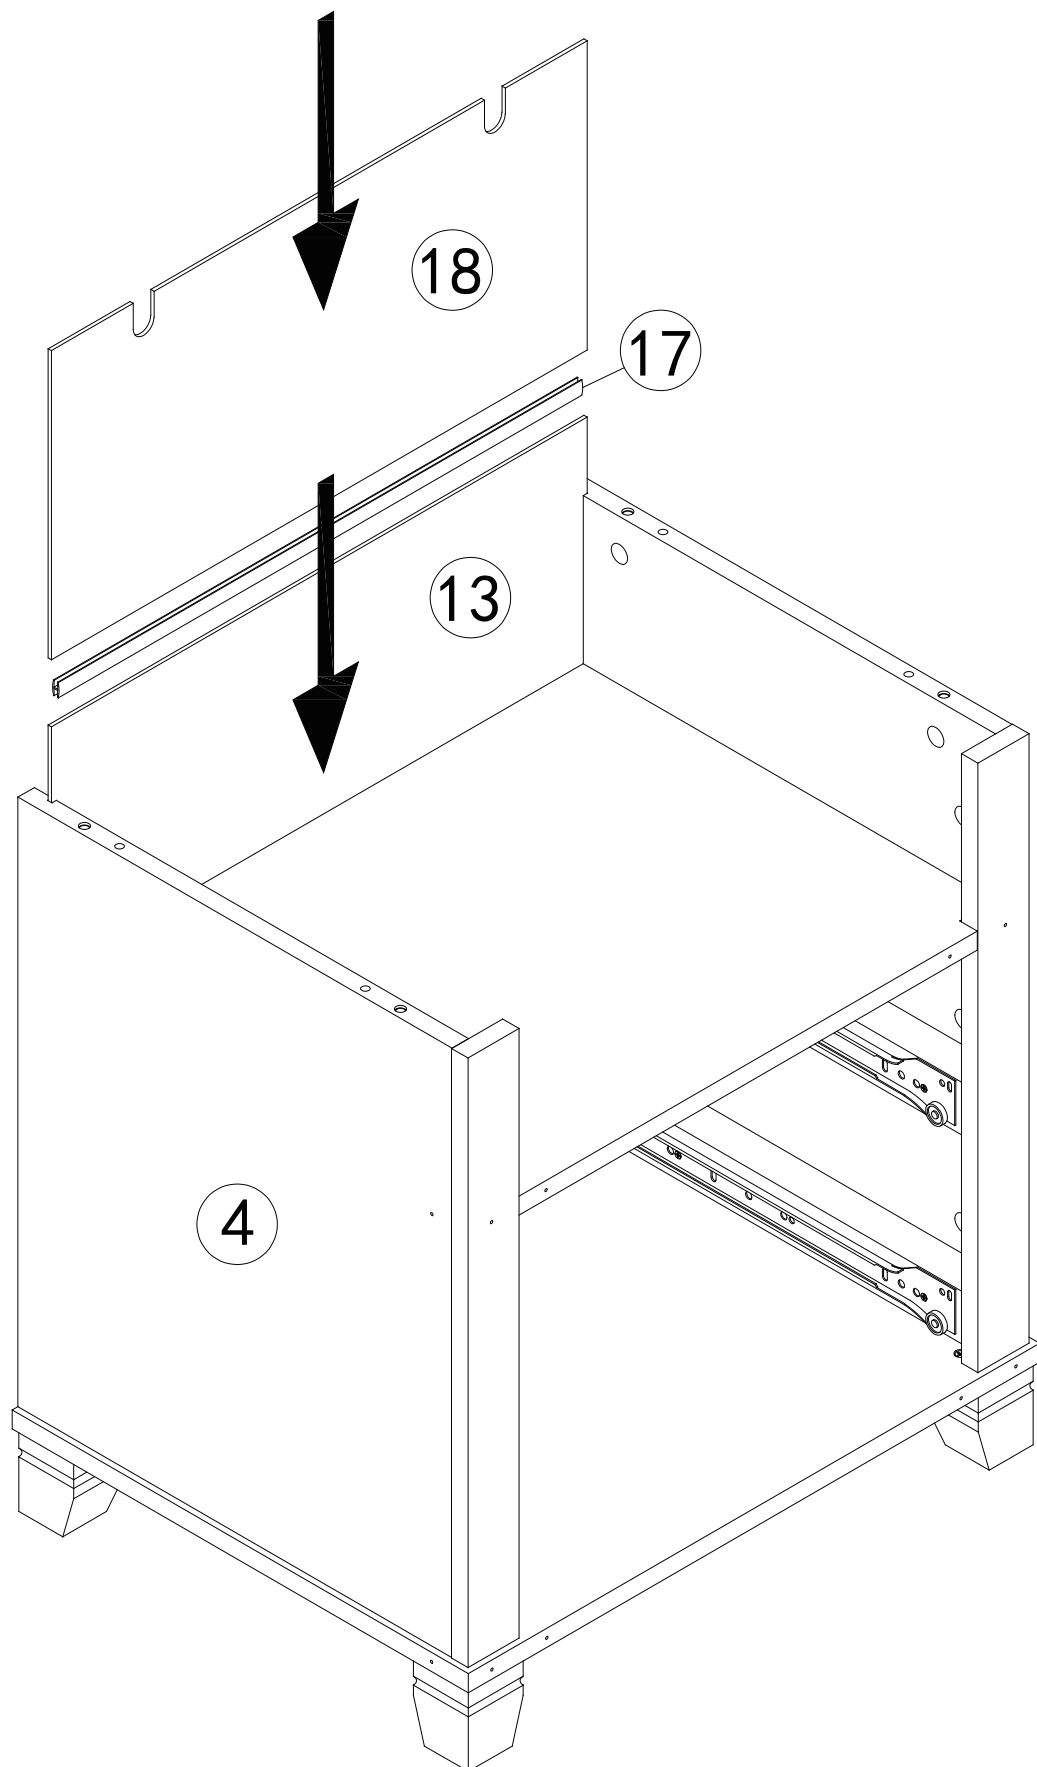


STEP11


Pay attention to the slot.

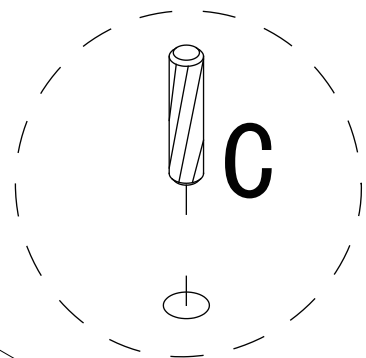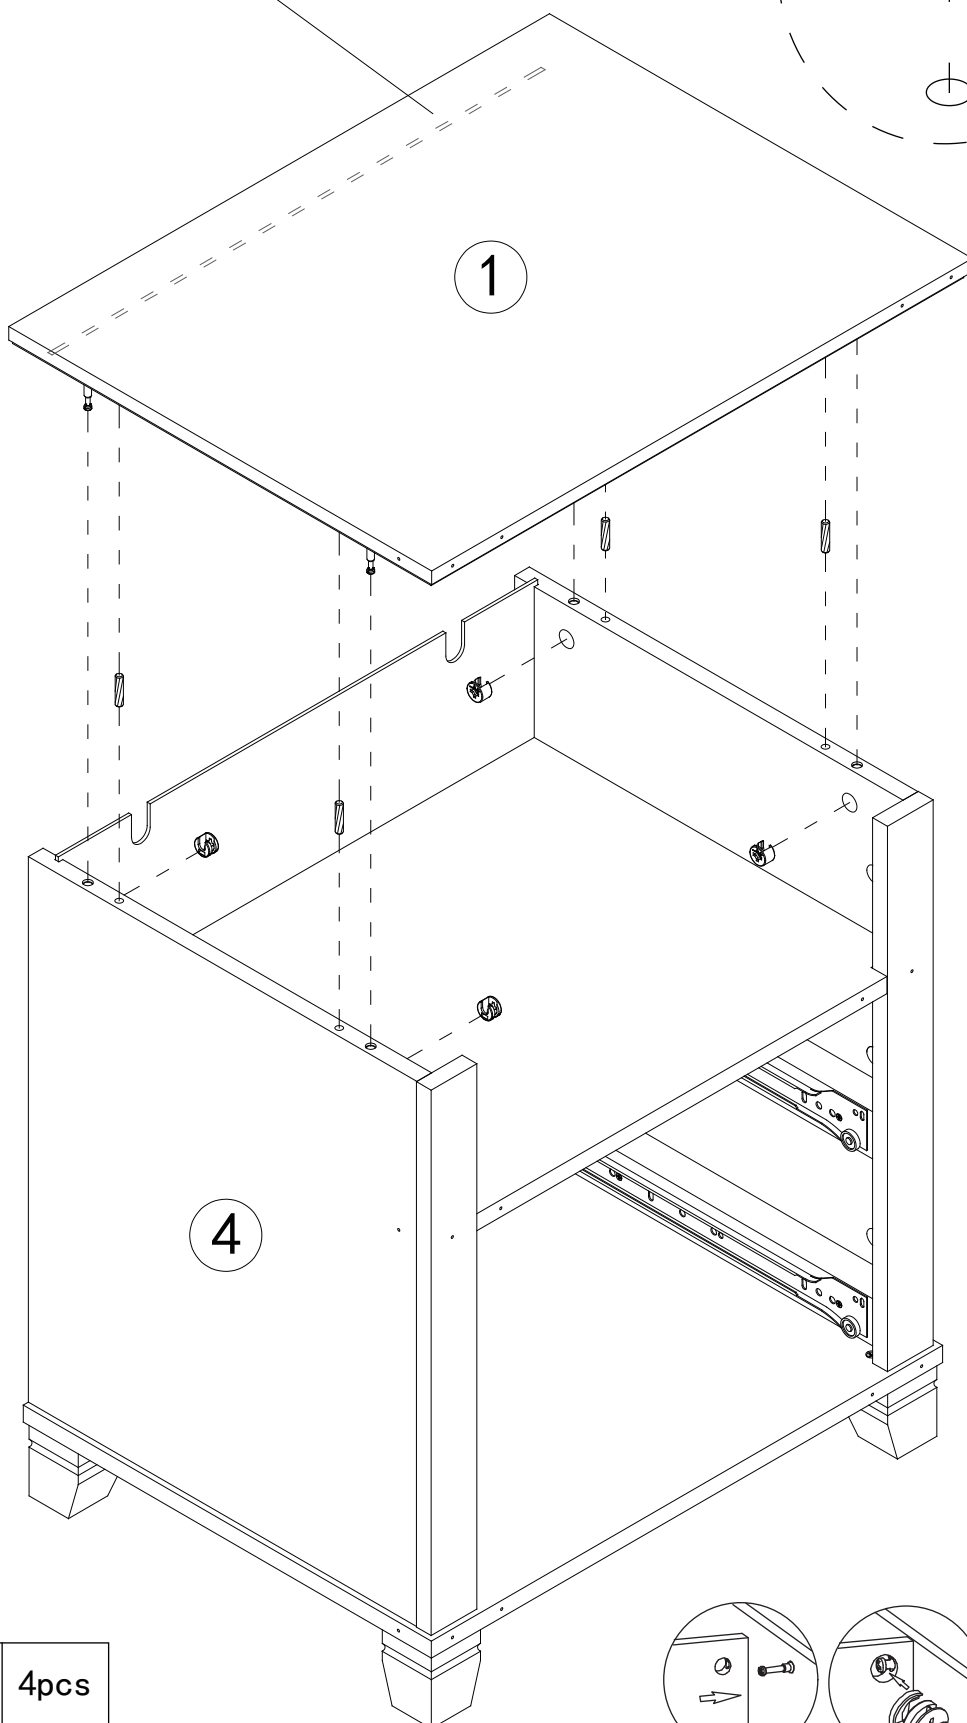

B		4pcs
C		4pcs

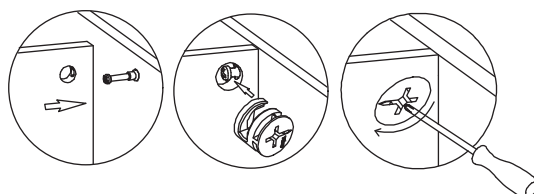


STEP12

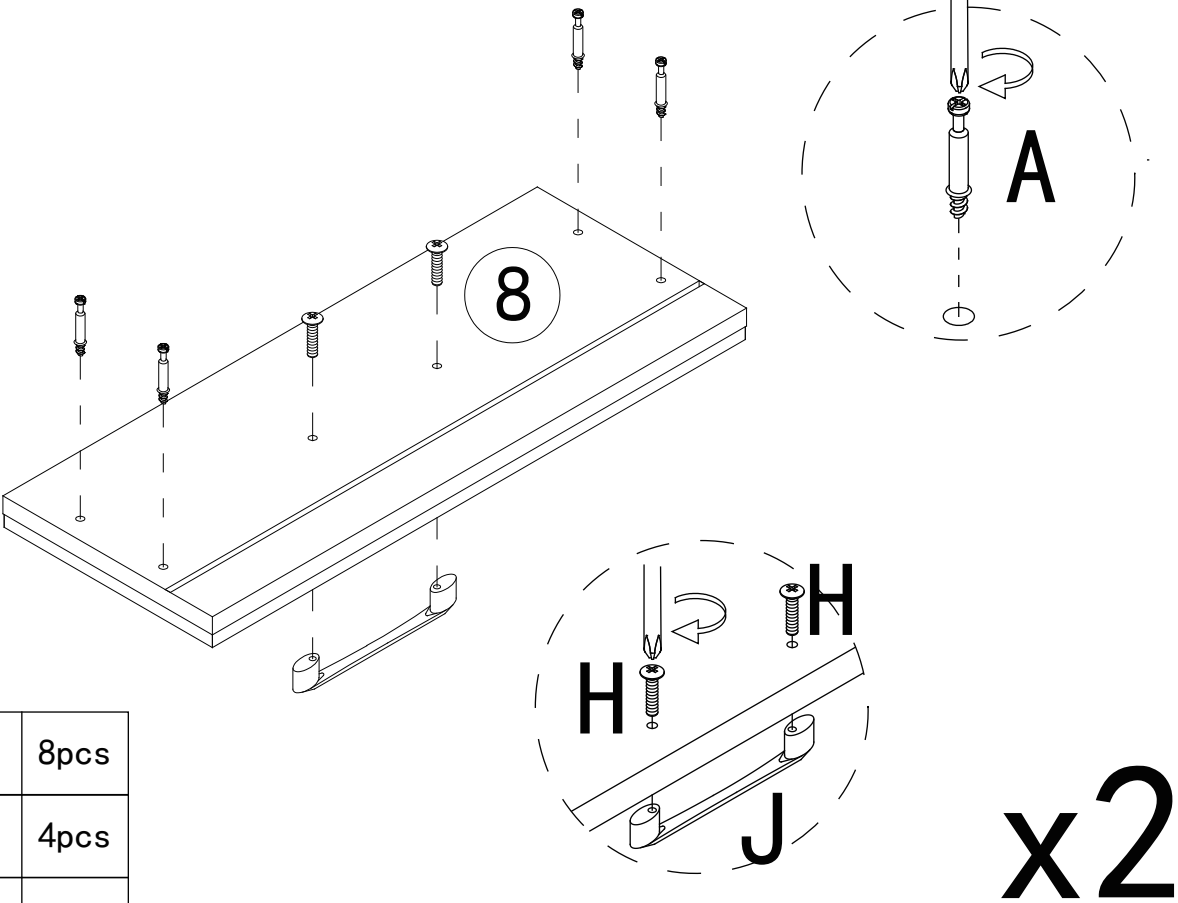

A		8pcs
H		4pcs
J		2pcs


STEP13

The side panels are flush with the bottom panel.

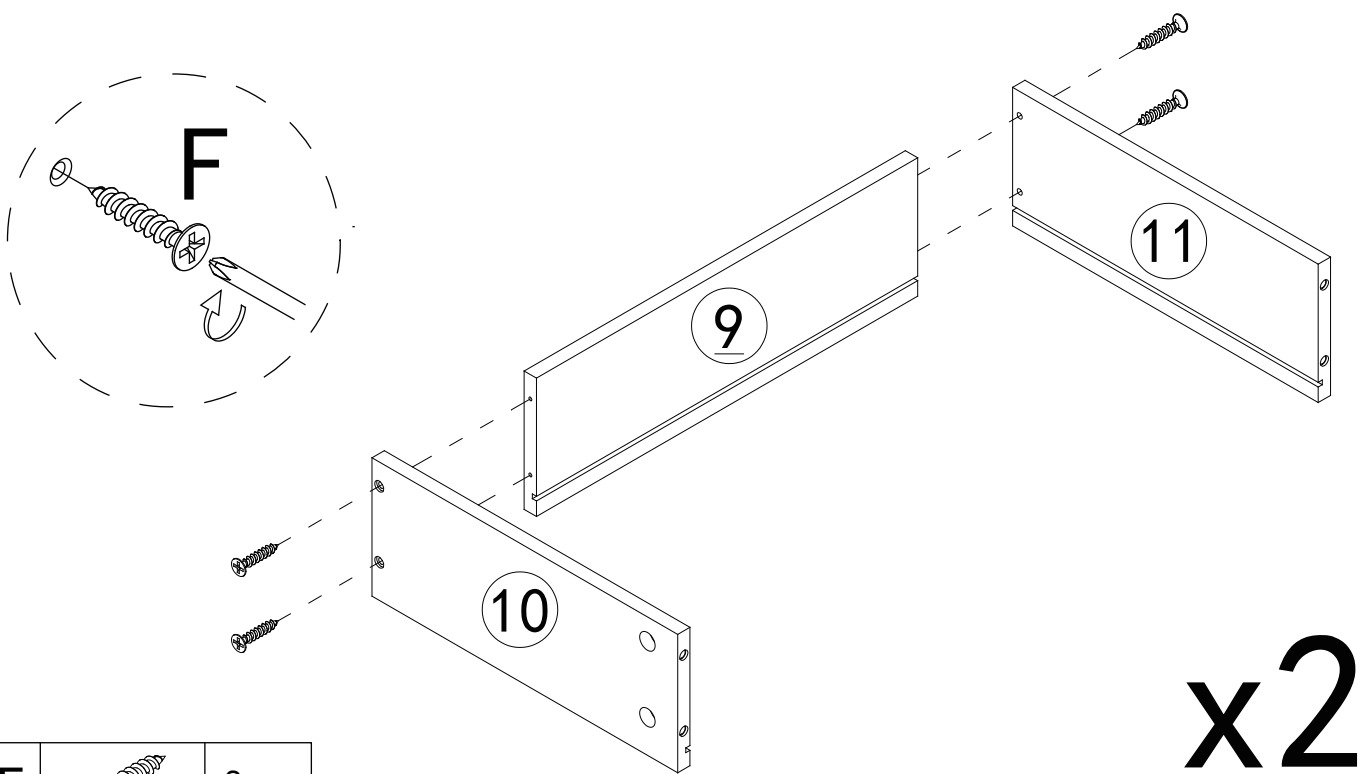


F		8pcs
---	---	------

STEP14

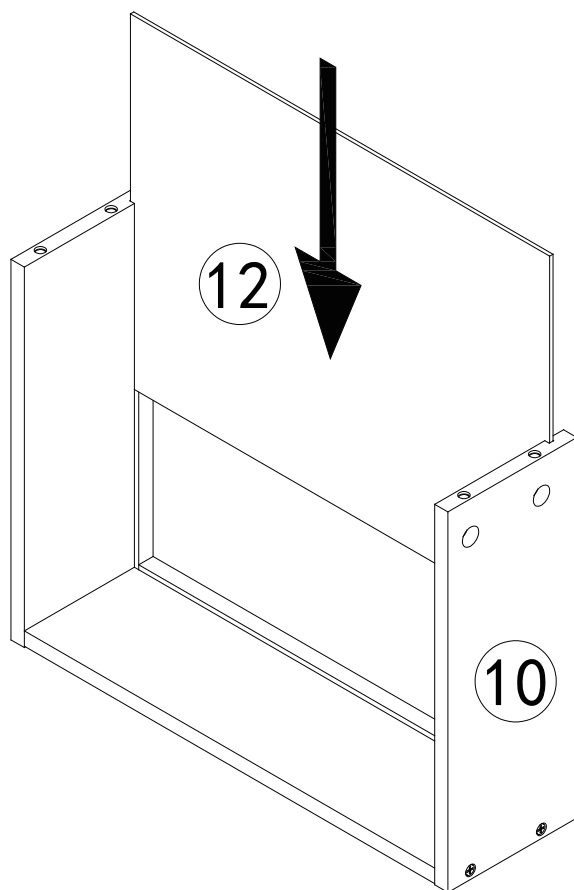

x2

STEP15

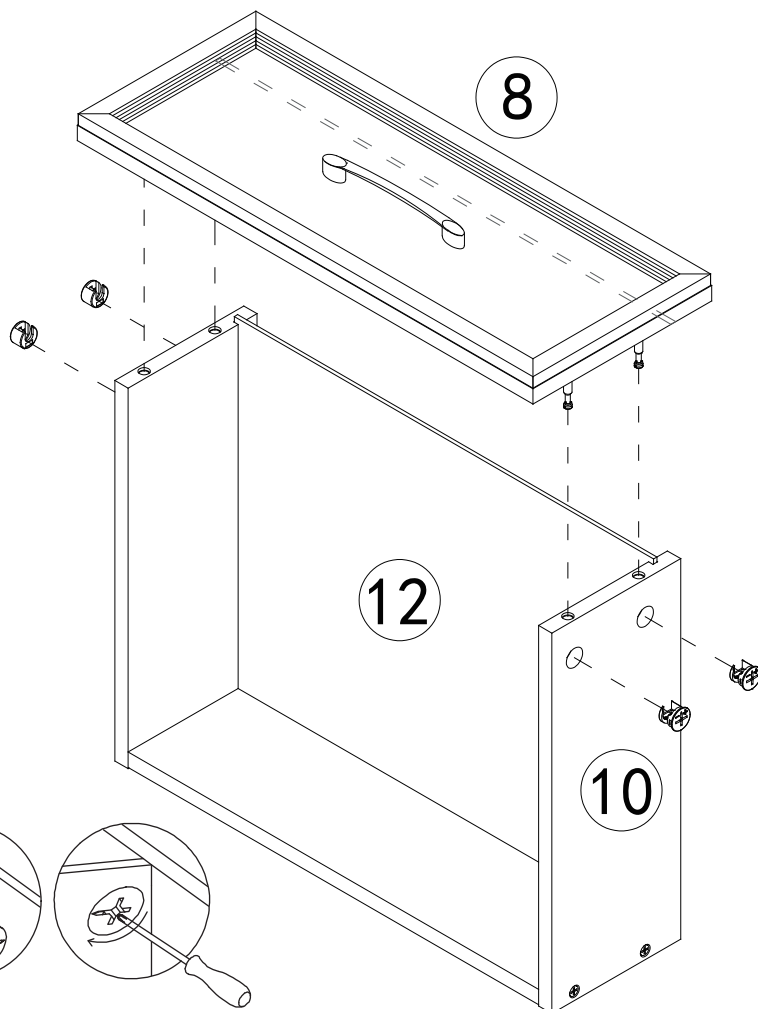

x2


B



8pcs

STEP16

Pay attention to the hole position.


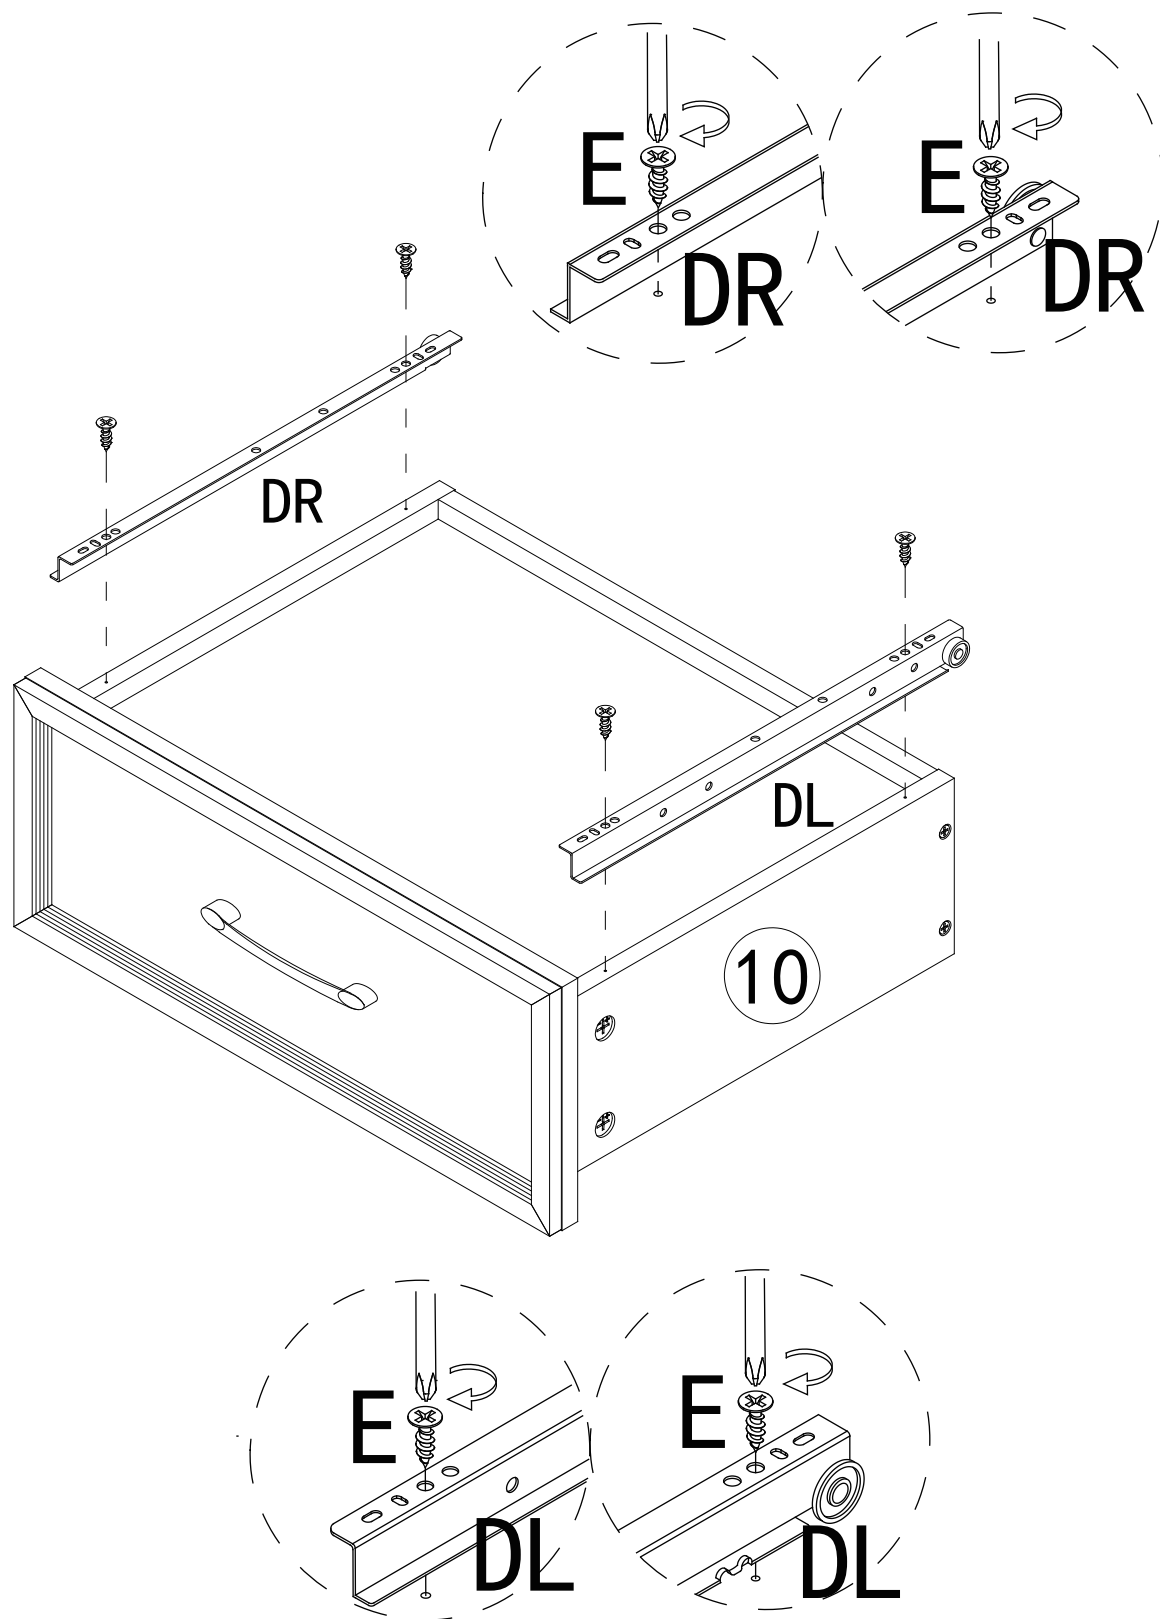


E		8pcs
DR		2pcs

x2



STEP17

Be sure to install back plate buckle to prevent the cabinet from shaking.

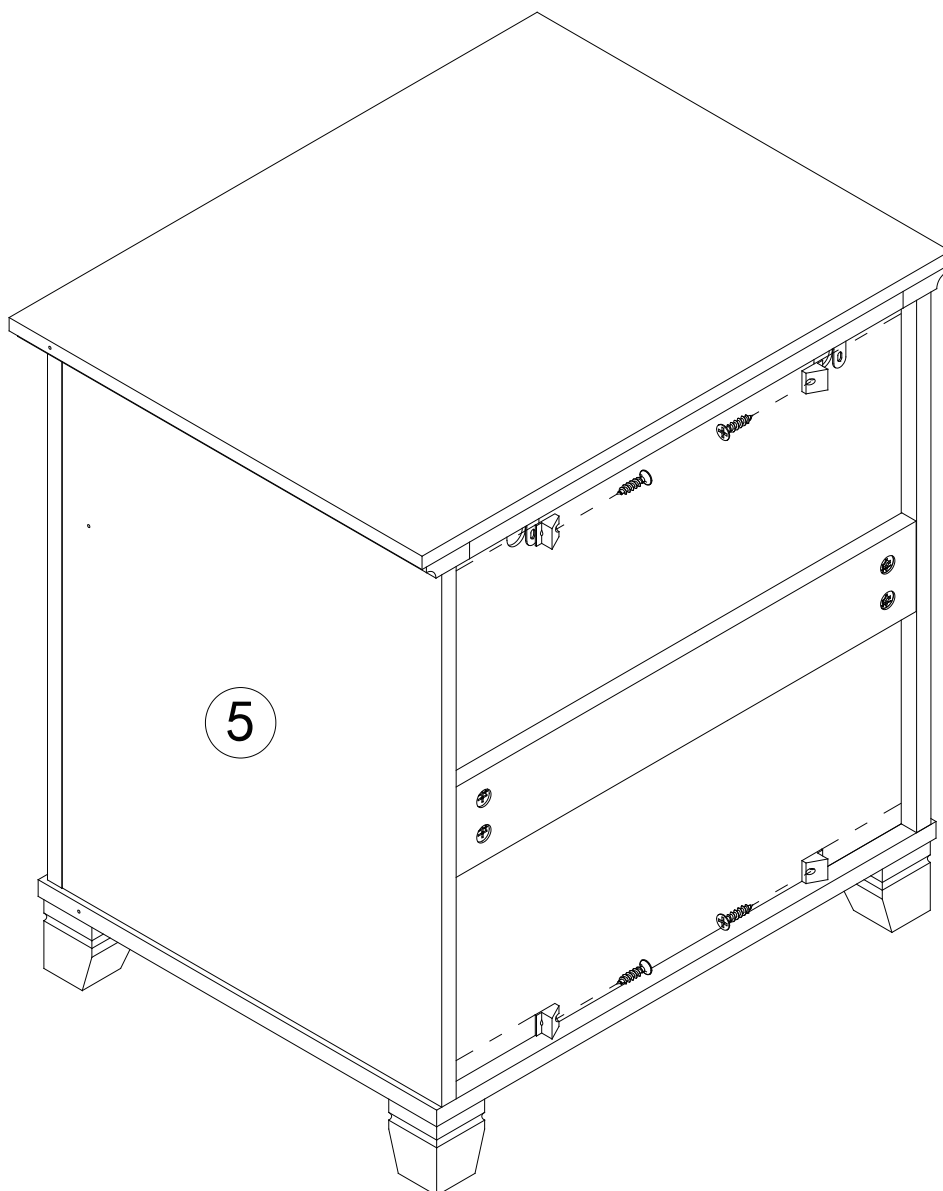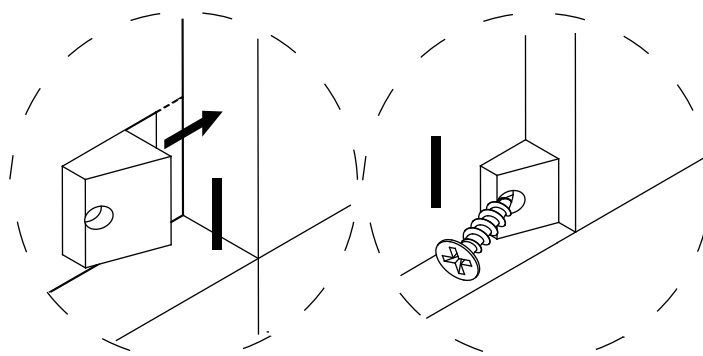

			4pcs
--	---	---	------

STEP18

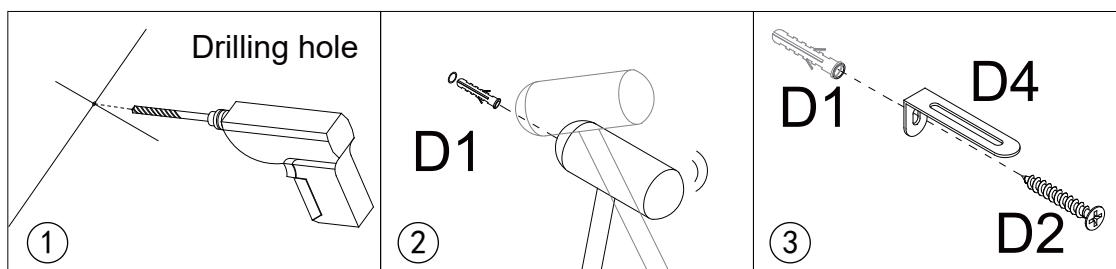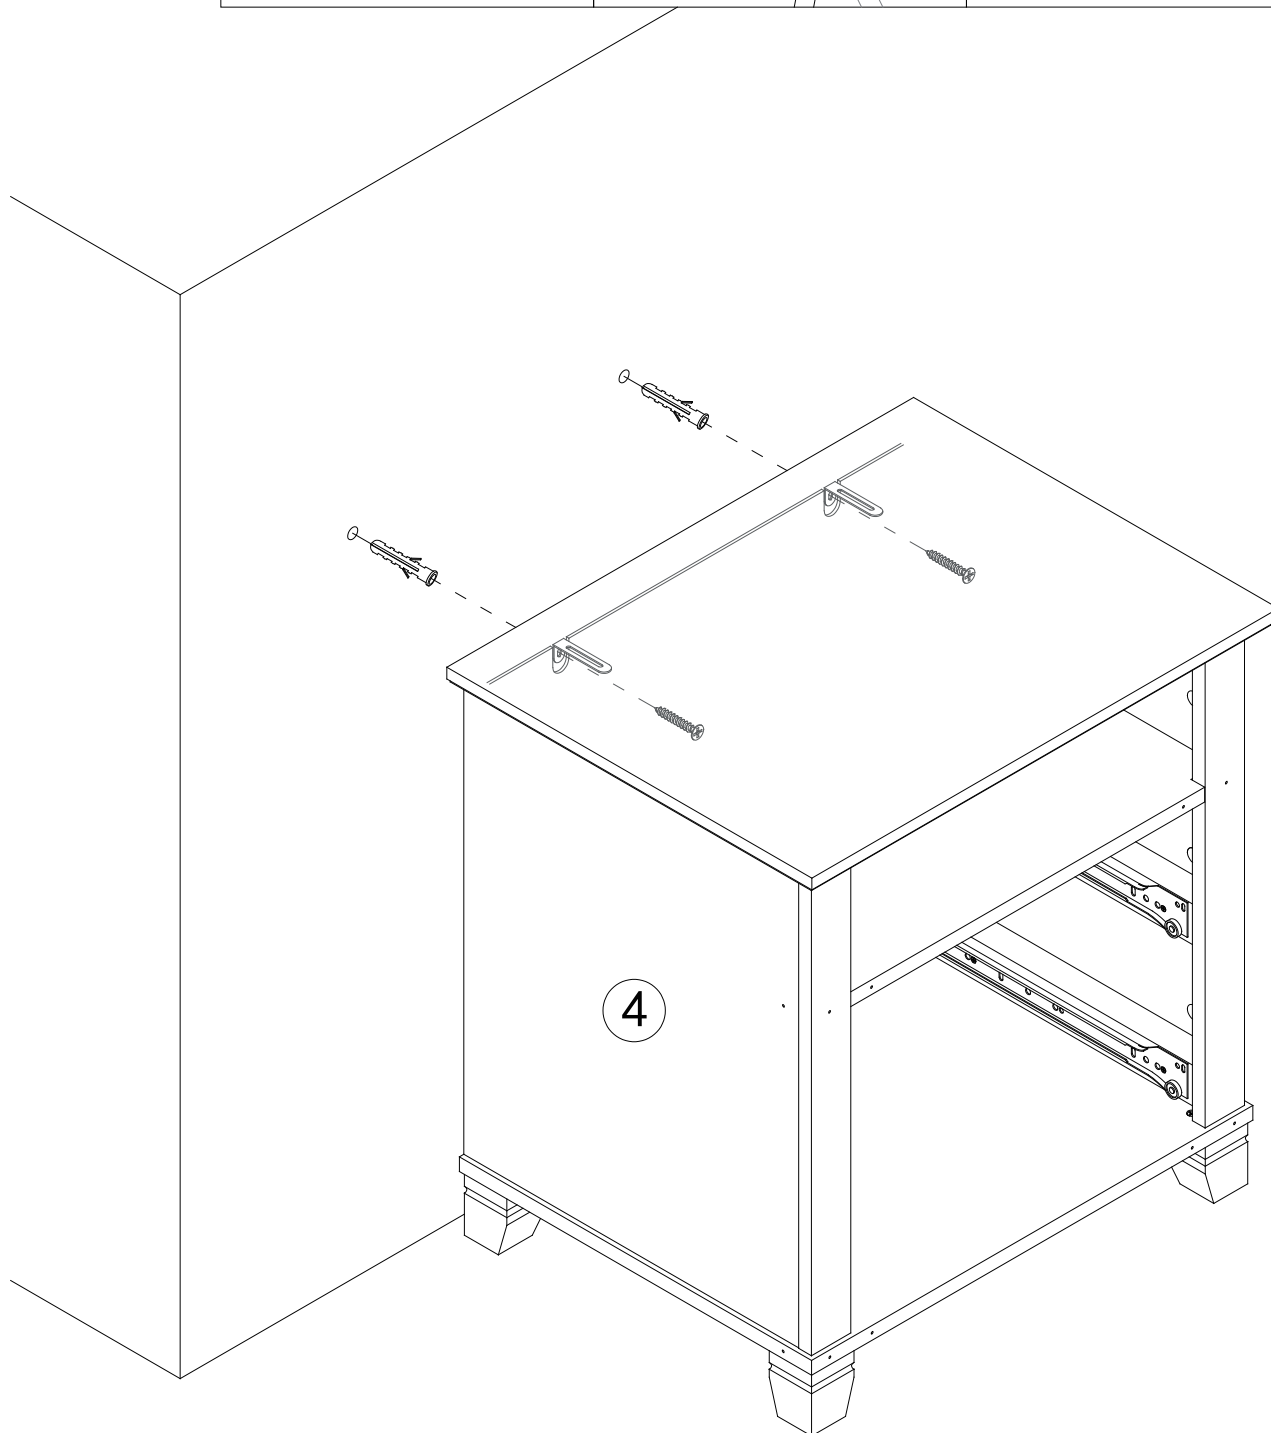



Drill a hole in the wall, then hammer the D1 into the wall with a hammer.

Note: Follow step


link D4 and D1 with a D2 using a screwdriver, and assembly it tightly.

D		2pcs
---	---	------


STEP19

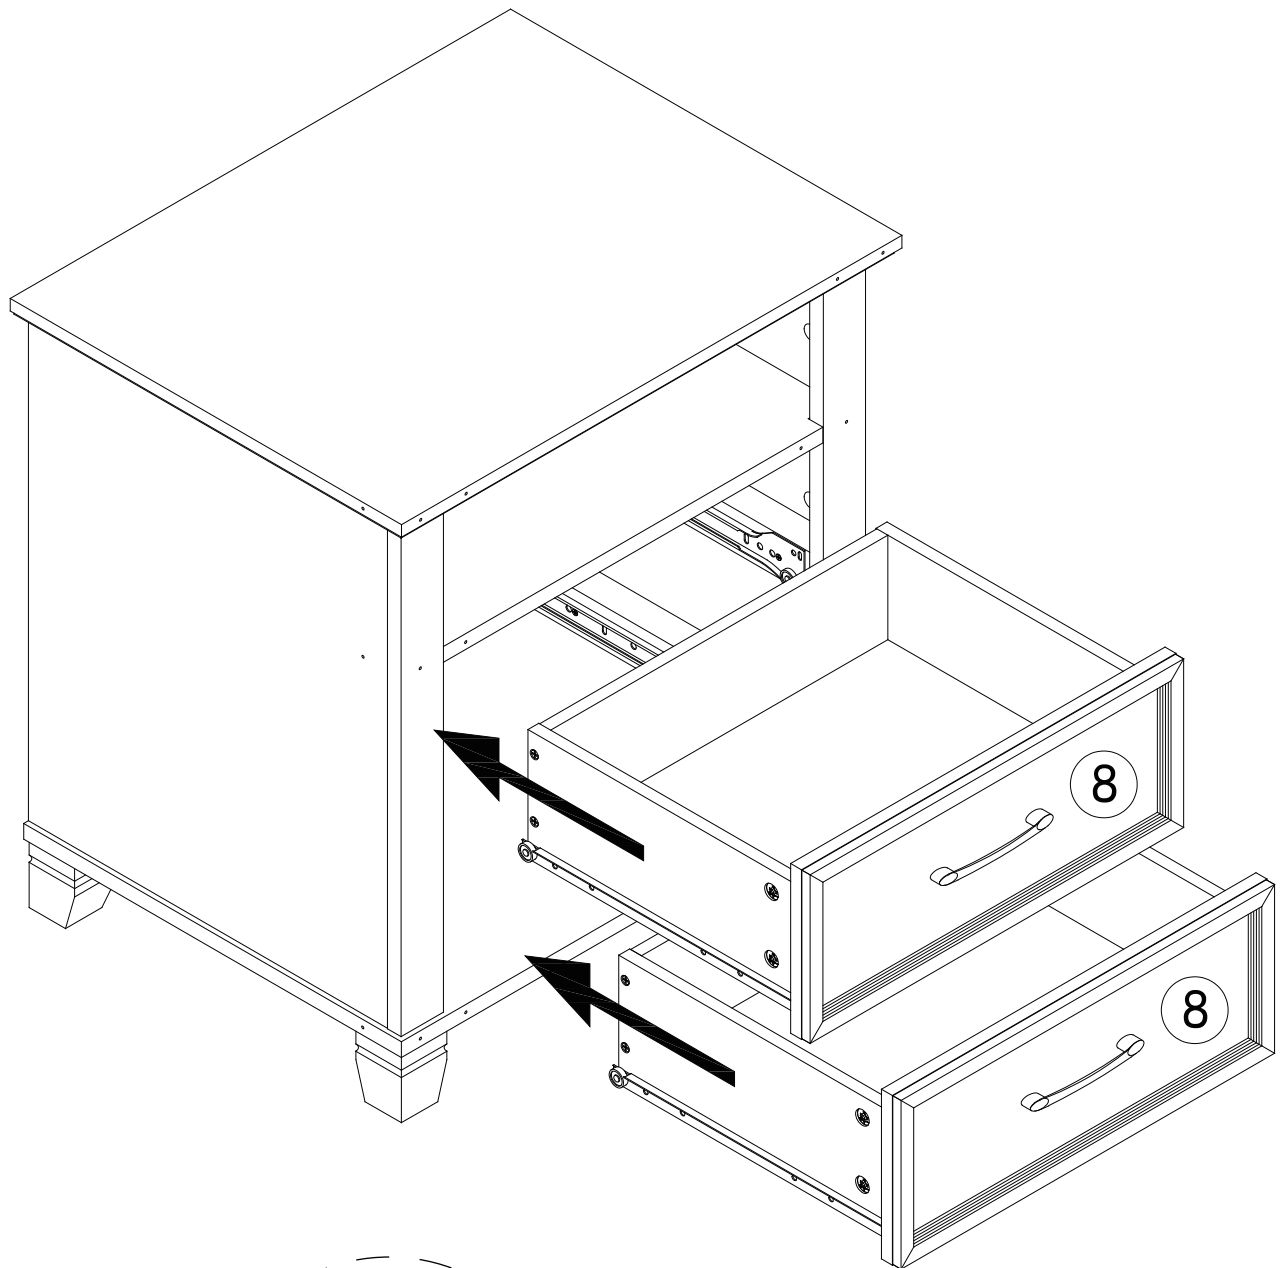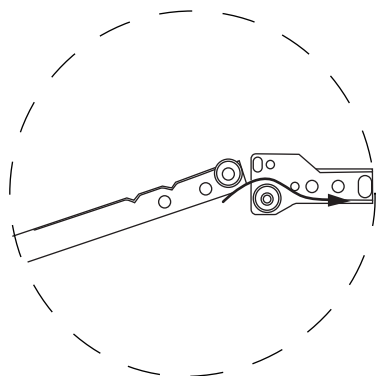

STEP20

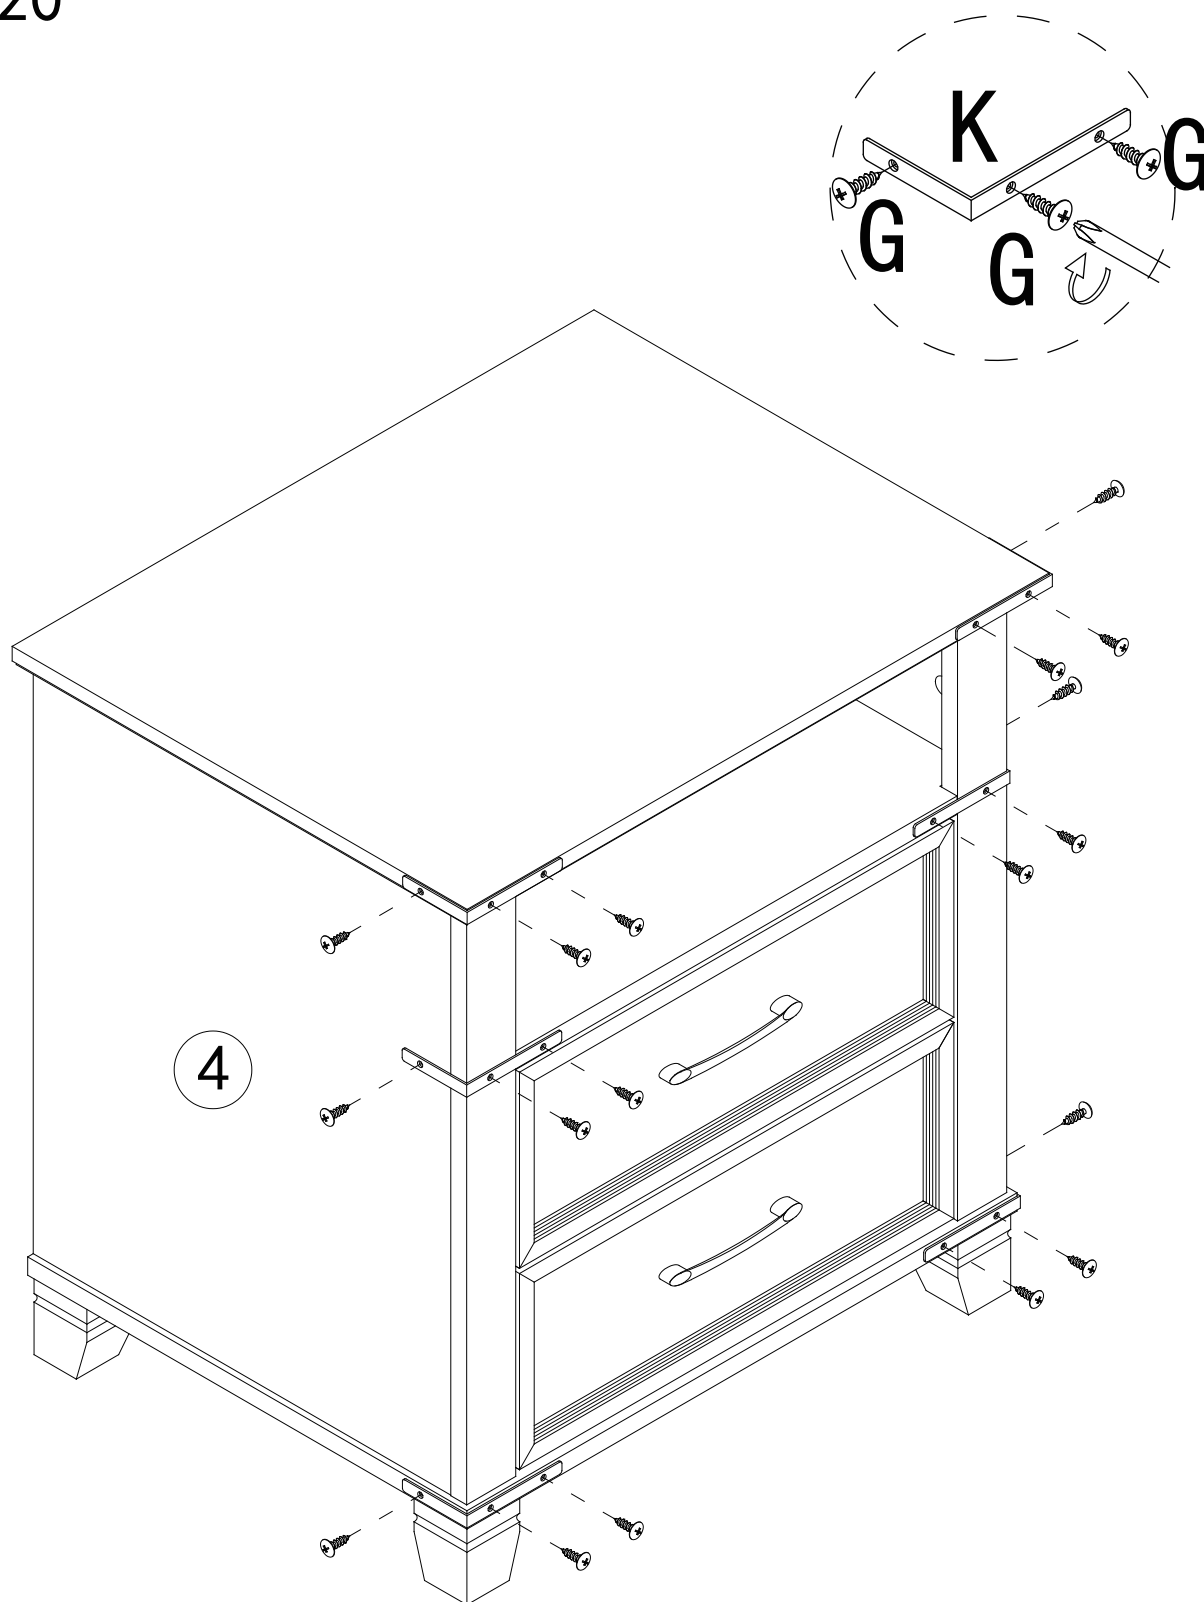

Instructions for use: The cabinet legs should be designed to avoid lateral stress. When moving, please lift vertically off the ground. Dragging may cause loose connectors, affecting stability and service life.

G		18pcs
K		6pcs