


ASSEMBLY INSTRUCTIONS

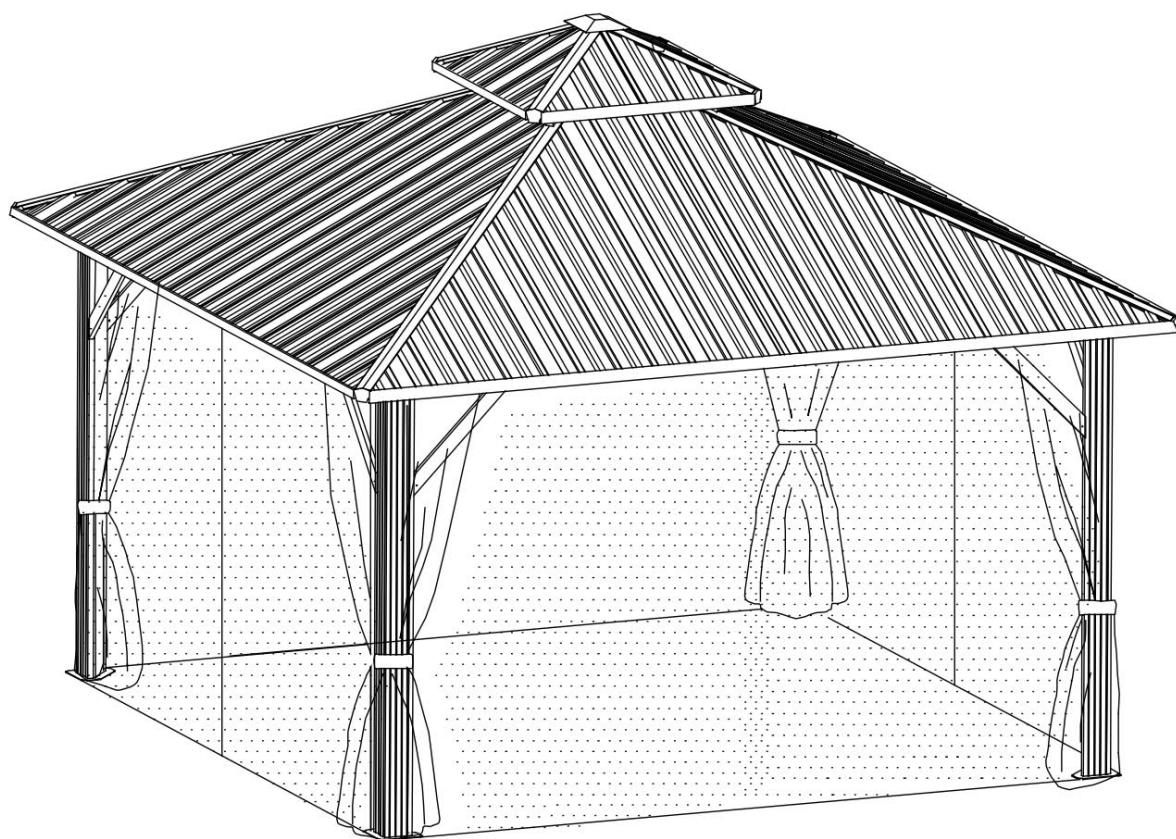


10X10 FT HARDTOP GAZEBO






1. Two or more people are required for assembly.
2. A ladder and electric drill may be necessary.
3. Do not erect the structure in heavy winds or inclement weather.
4. Do not leave up this unit for extended periods of time, as it is not a permanent structure or designed to withstand sustained wind or rain. It is a temporary, portable shelter that shields you from sunlight and rain. The screens also block flying insects.
5. Do not use candles, matches, or any open flames near the tent.
6. To better align the screws for practical situations, do not fully tighten screws initially.
7. Professional installation is highly recommended.

BOX 1

Item no.	Reference Image	Qty.
A		X4
V1		X2
V2		X2
E		X4
E1		X4
F1		X8
G1		X4
G3		X4
G5		X4
G6		X4




BOX 1

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
H		X4	Z		X56
H1		X4	Z1		X24
J		X4	Y		X92
K		X4	1	 M6X16mm	X144
K1		X4	2	 M6X23mm	X56
N		X12	3	 M6X25mm	X9
N1		X4	4	 ST4.8X12mm	X24
P		X4	5	 M6X10mm	X8
W		X4	6	 M6X42mm	X4
W1		X4	7	 M6X47mm	X24
W2		X4	8	 M6X15mm	X16
W3		X4	9		X12
U		X96	10	 M5X12mm	X20

BOX 1



Item no.	Reference Image	Qty.
⑪	 S4	X1
⑫		X1
⑬	 S6	X1


BOX 2

Item no.	Reference Image	Qty.
B		X4
B1		X4
T		X4
T1		X4
L		X1
M		X1


BOX 3

Item no.	Reference Image	Qty.
S		X4
Sa		X4
Q1		X4
Q2		X4
Q3		X4
Q4		X4
Q5		X4
Q6		X4

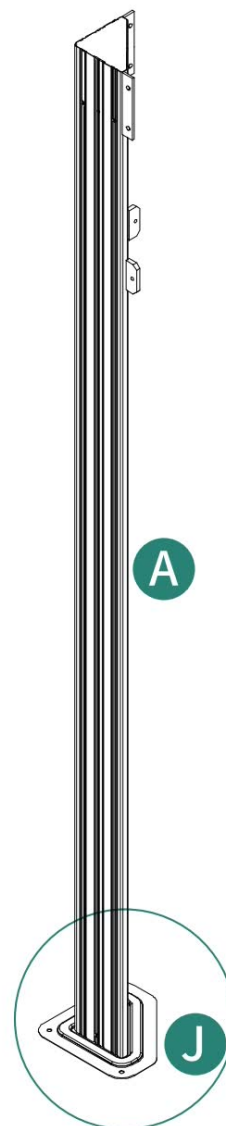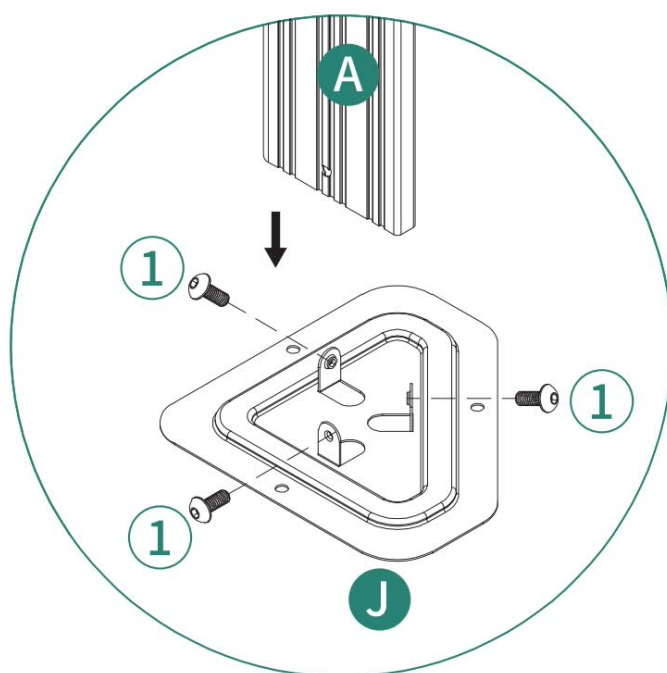


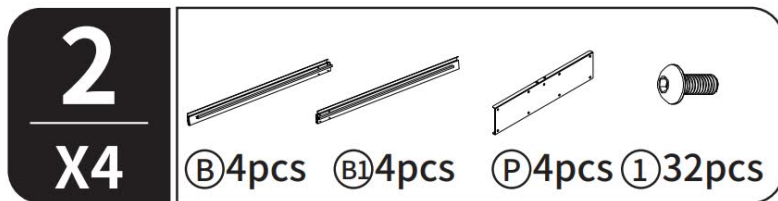


When connecting B and B1 via P, make sure that 1 holes on part P (as shown in the picture) should be facing upwards. Do not install it upside down.

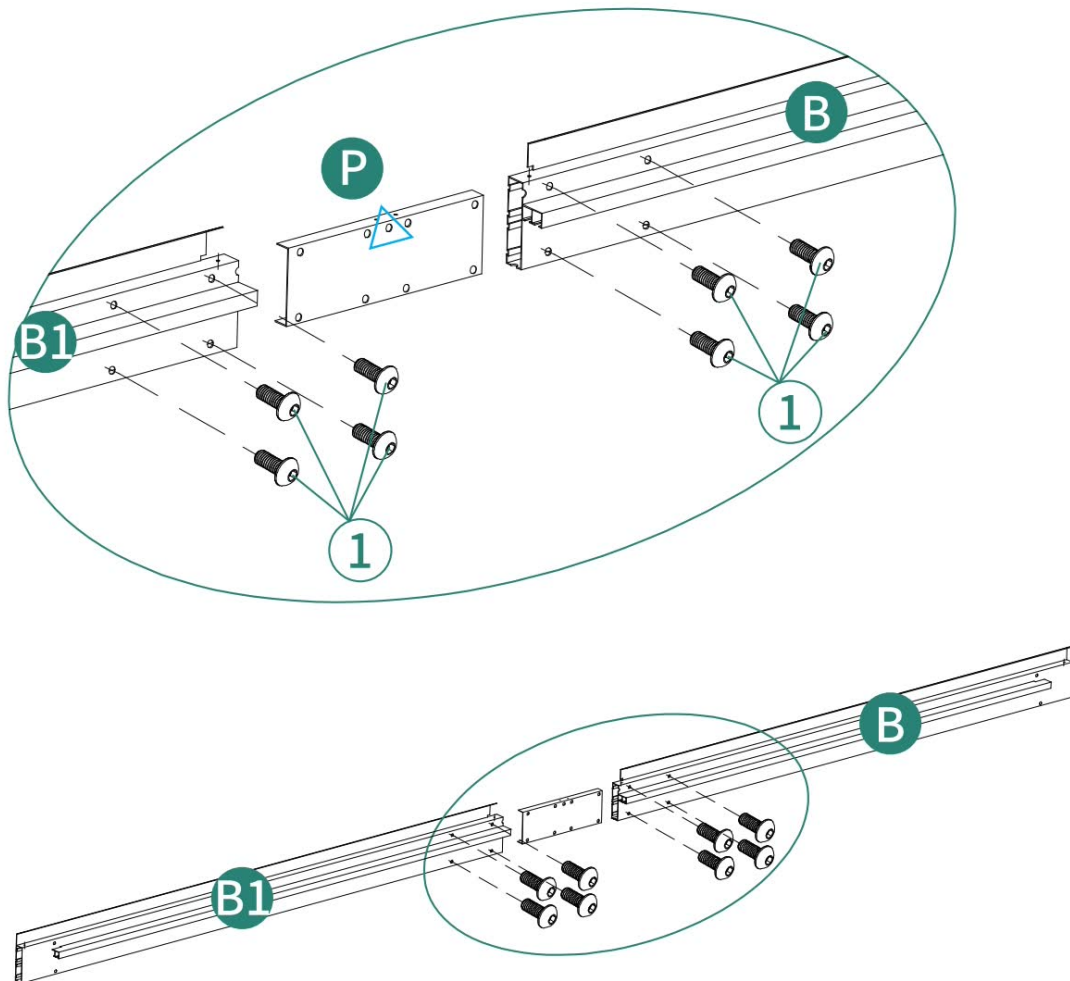

3



U96pcs

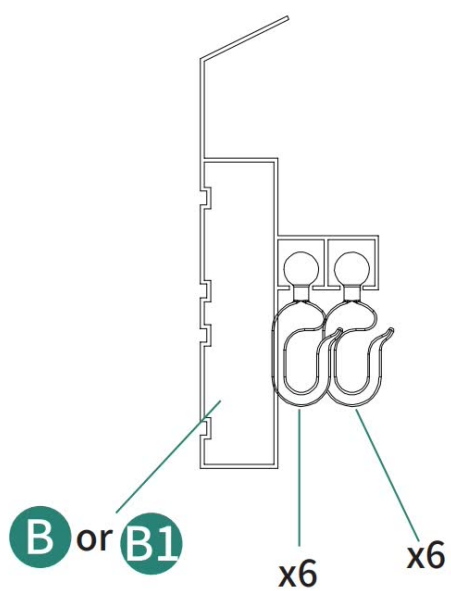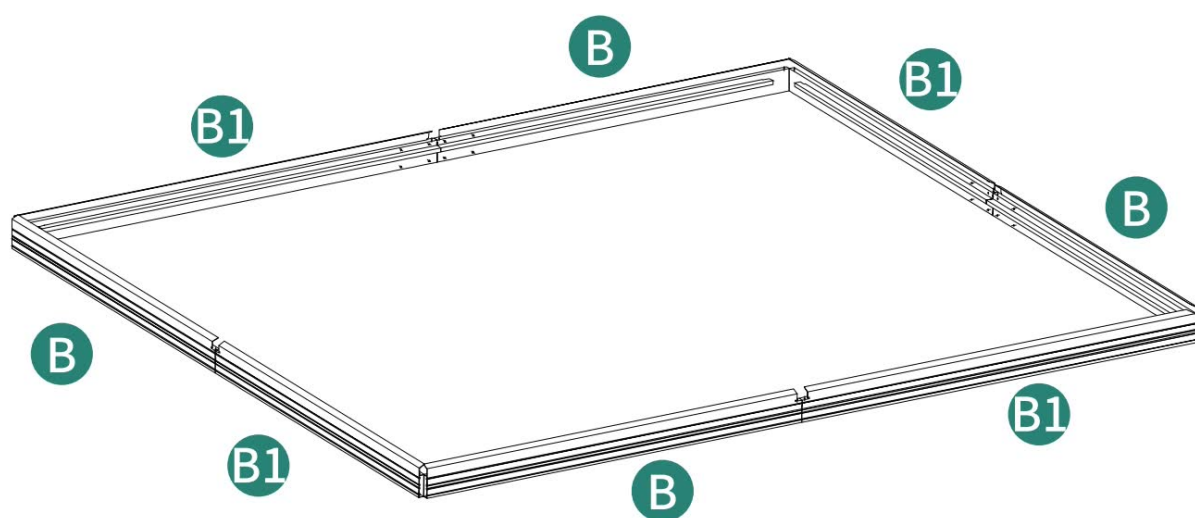


4



①16pcs ⑧16pcs

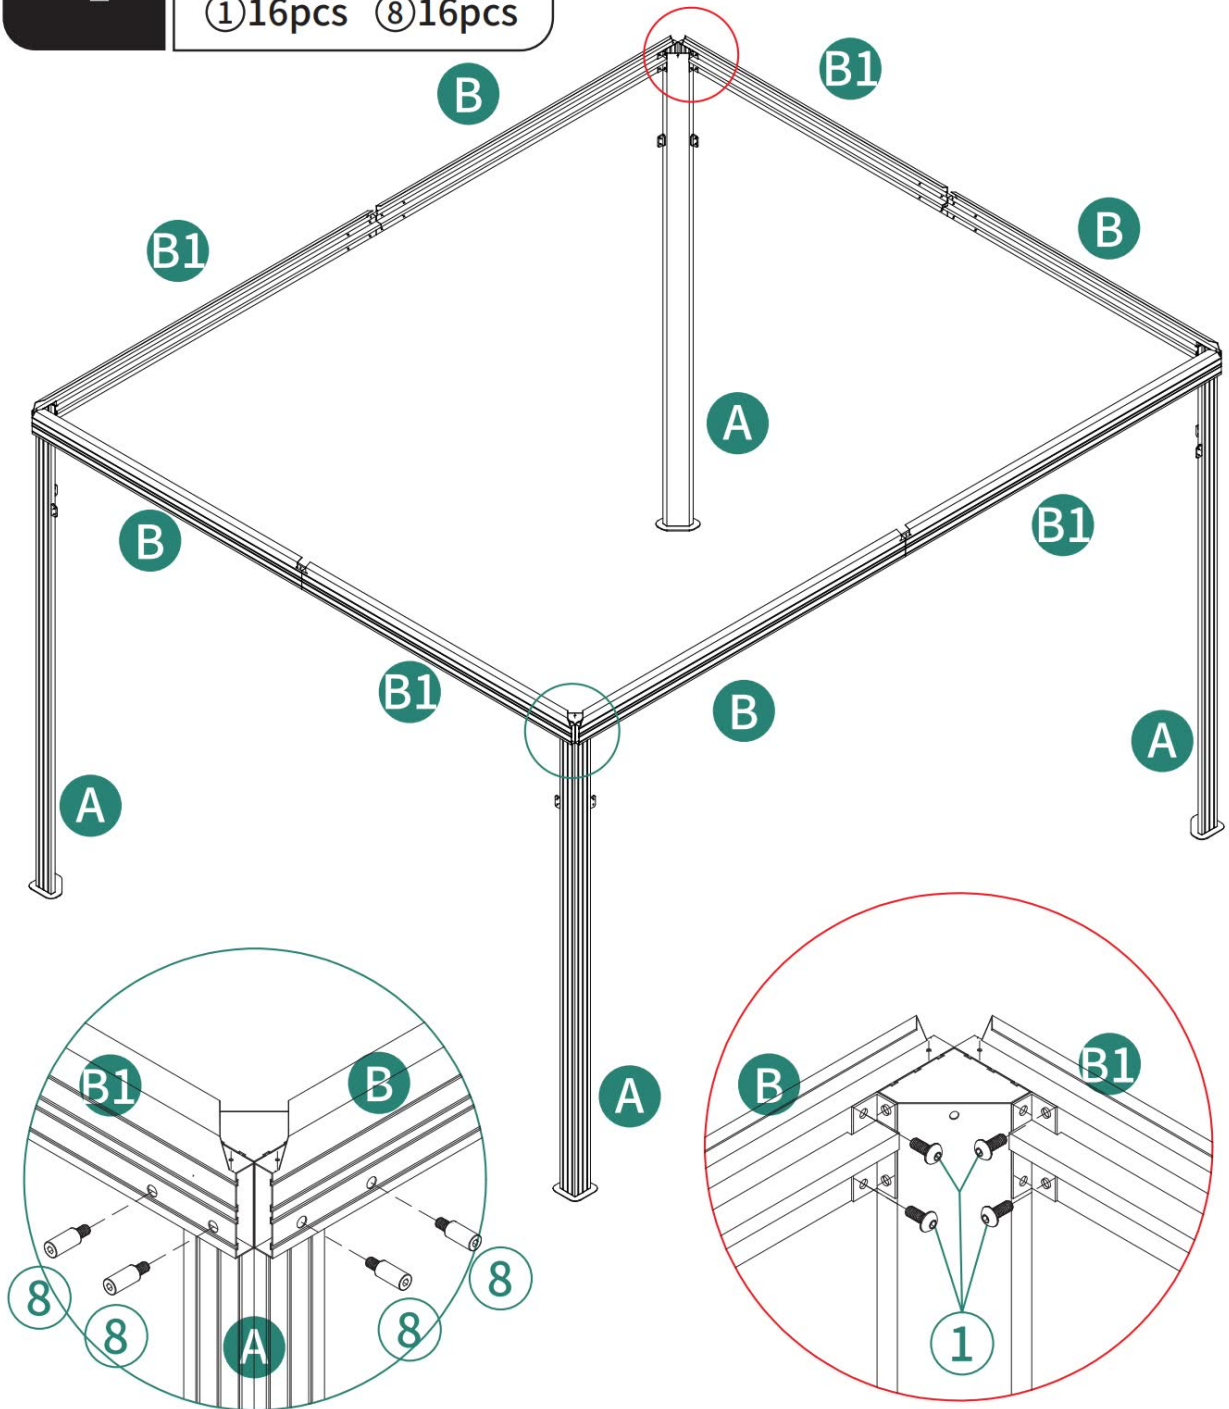

5

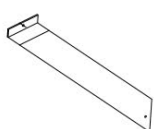


Ⓜ 4pcs



Ⓜ 4pcs



① 16pcs

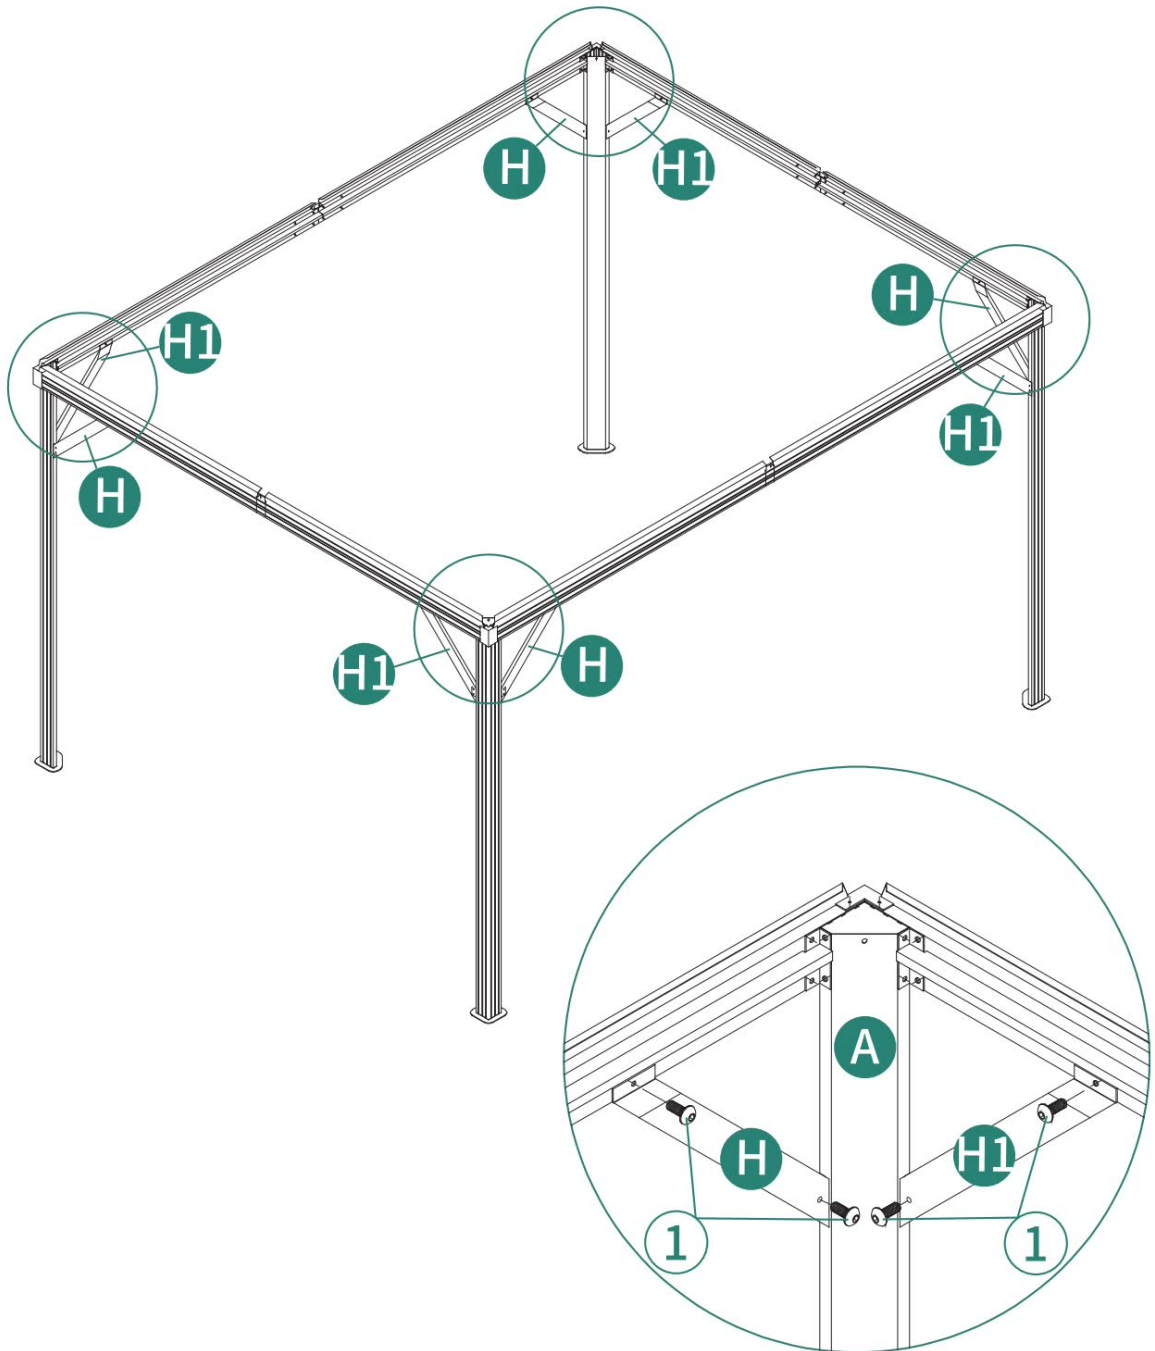

6



Ⓚ4pcs




Ⓚ14pcs



④24pcs



⑩4pcs

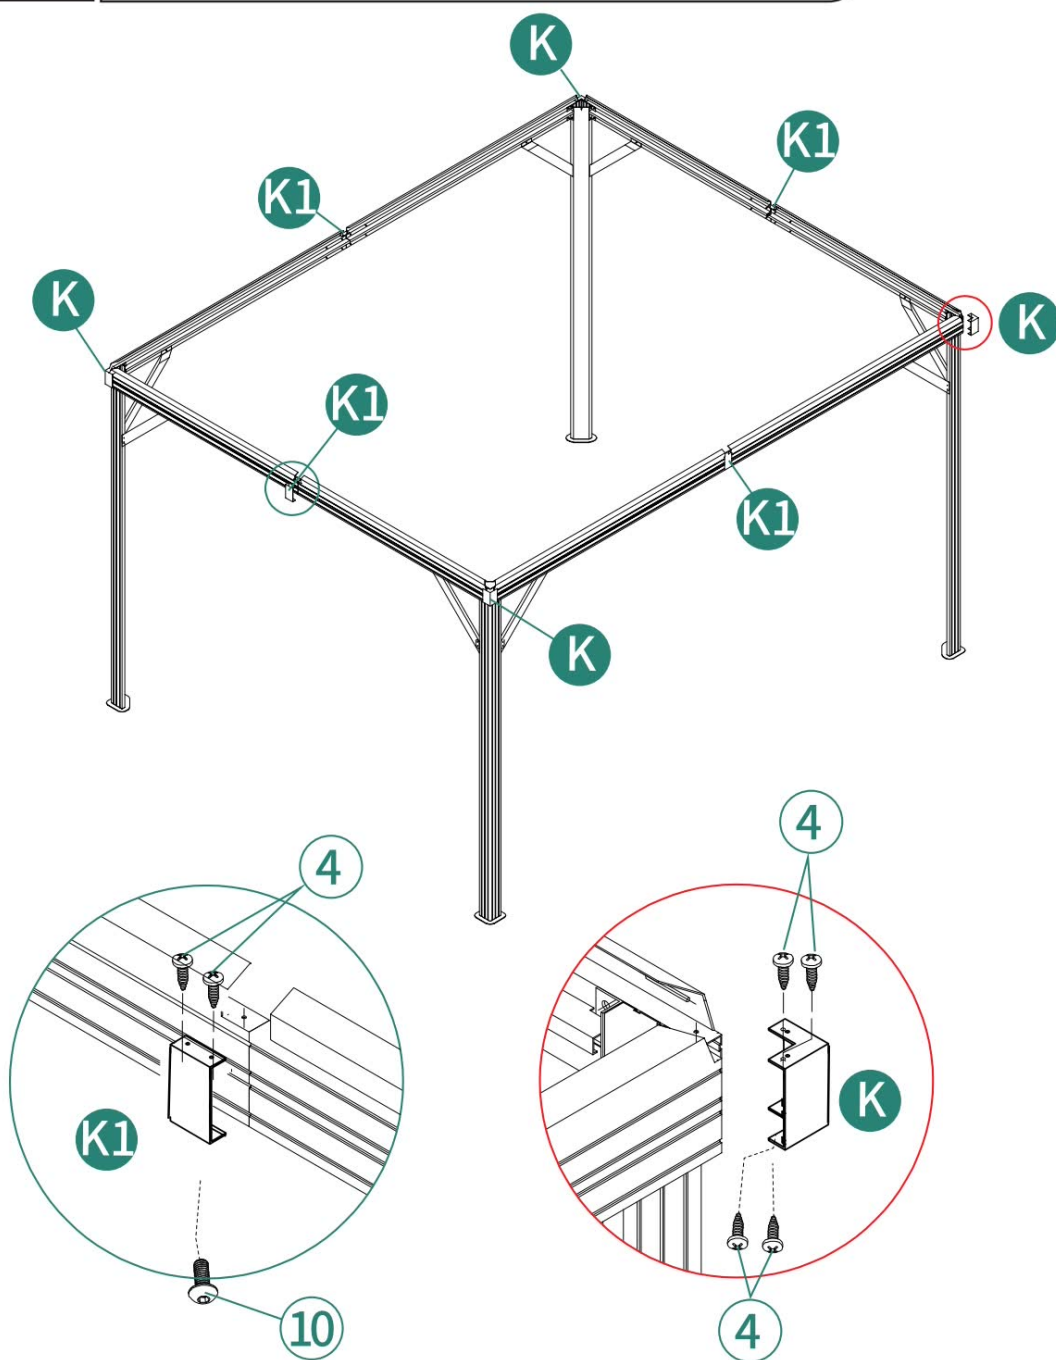

7

X4





E


4pcs

W3


4pcs

10

8pcs

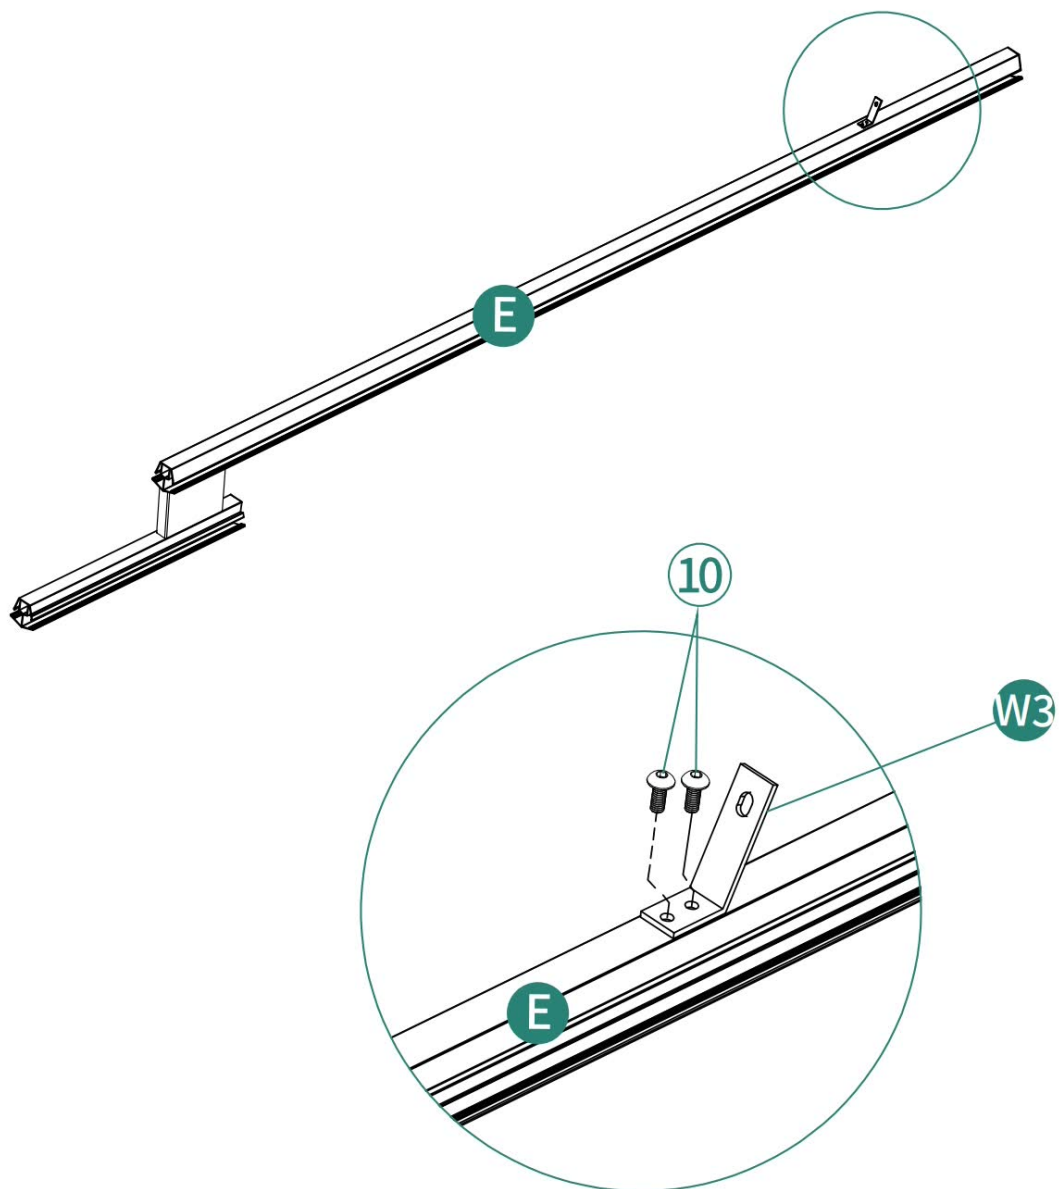


8





L 1pc

1 8pcs

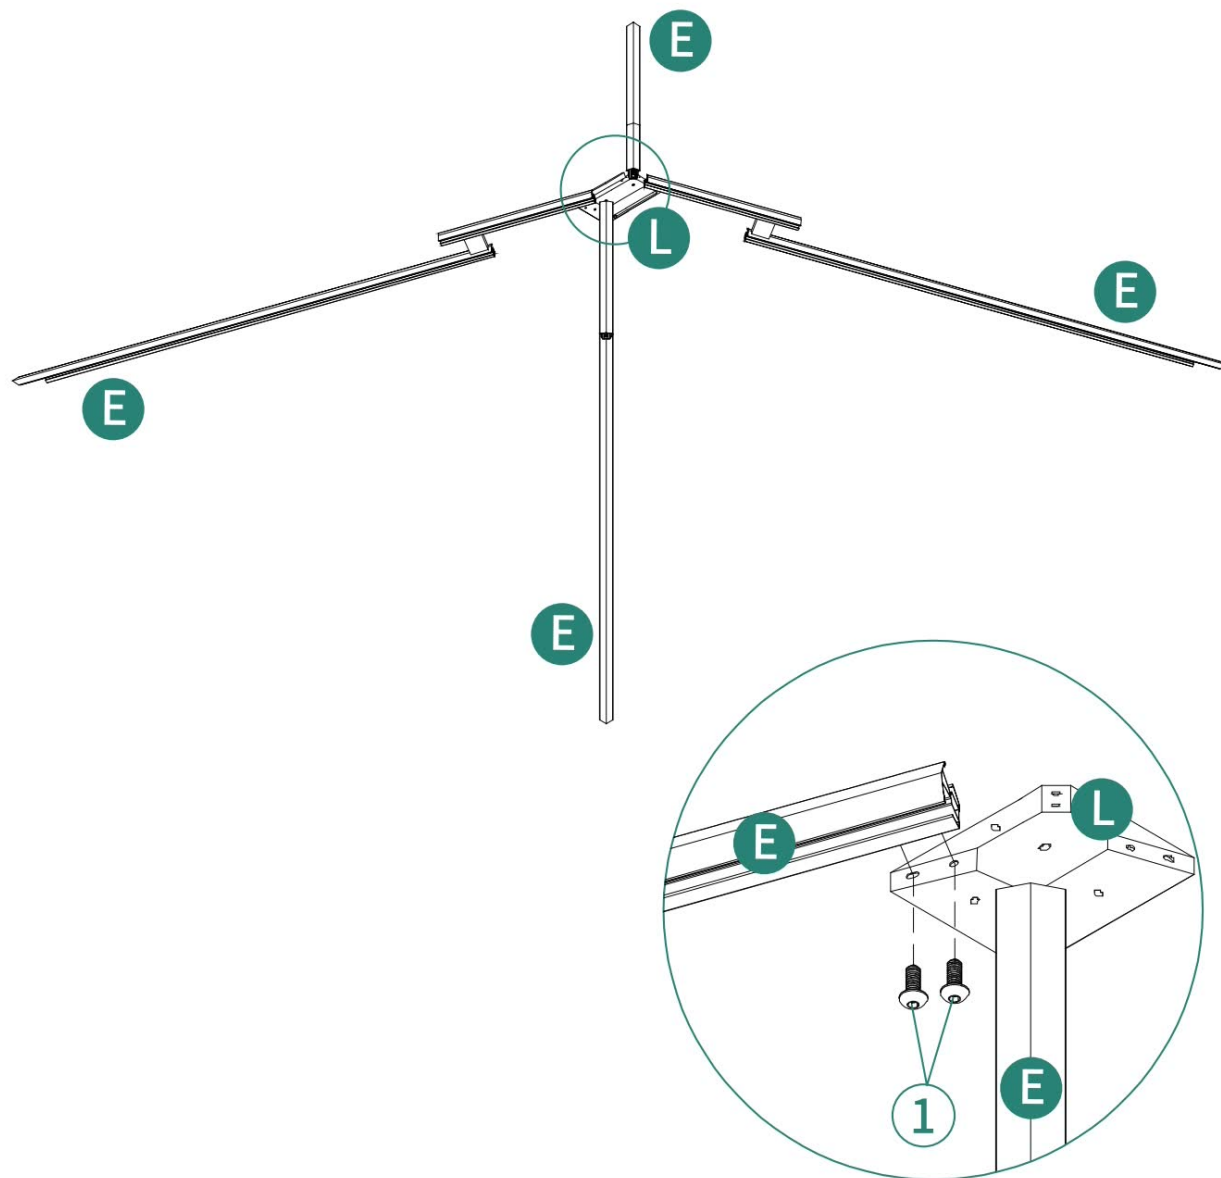

9


①4pcs

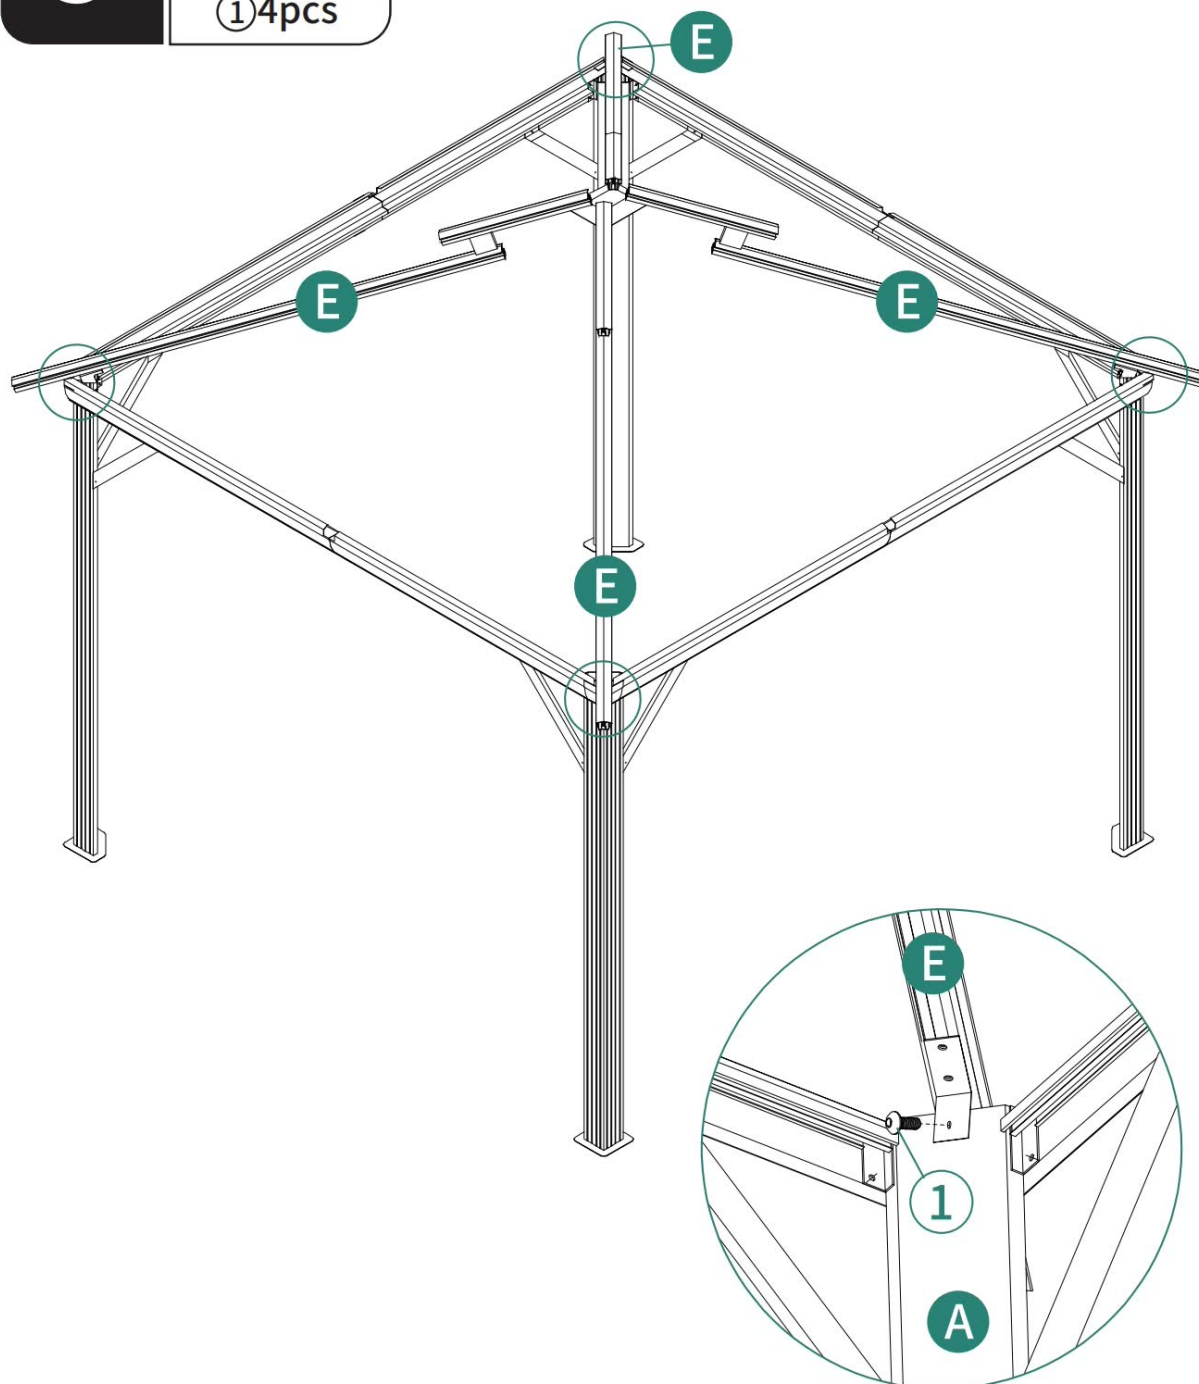

10

X4




E14pcs



W24pcs




108pcs

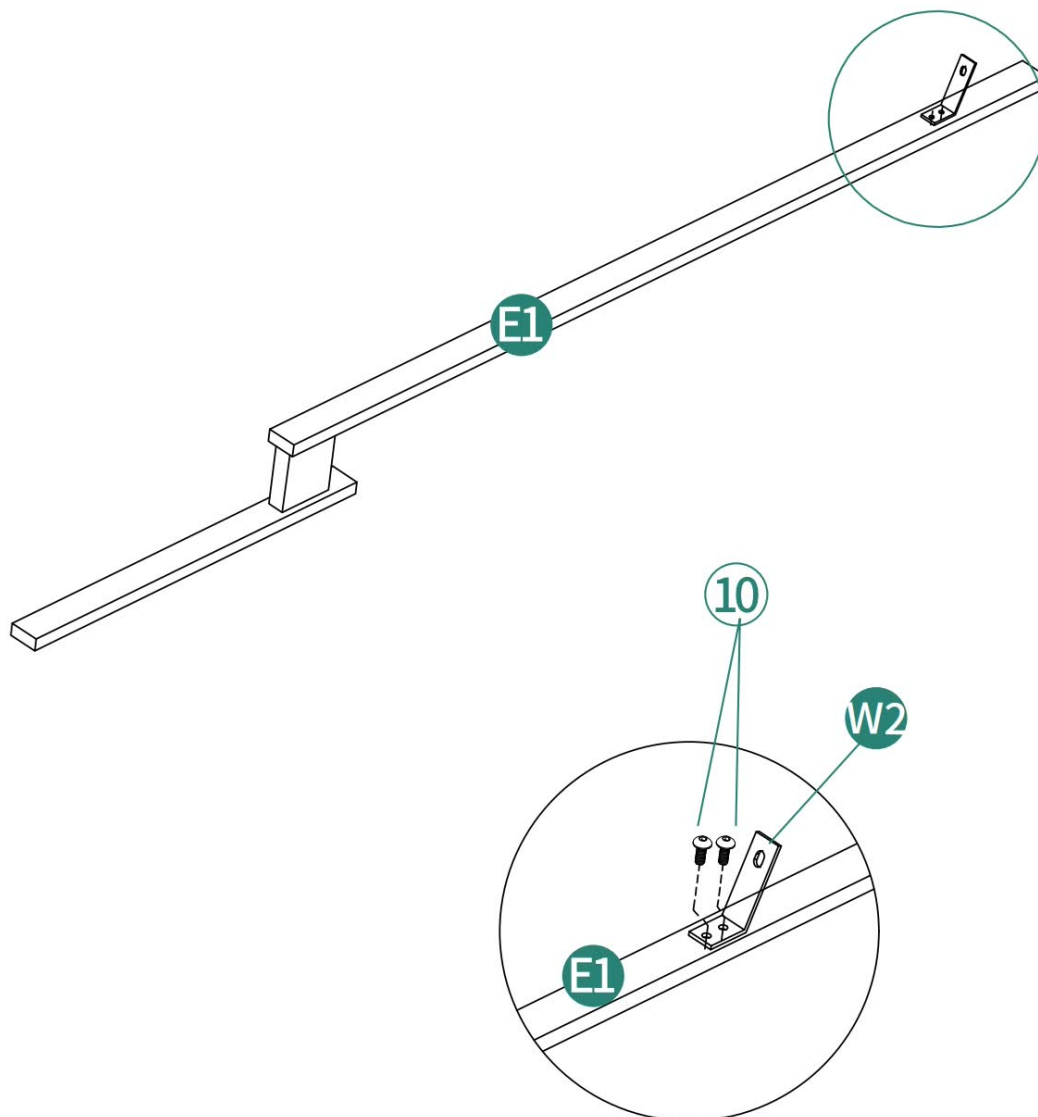

11



①8pcs


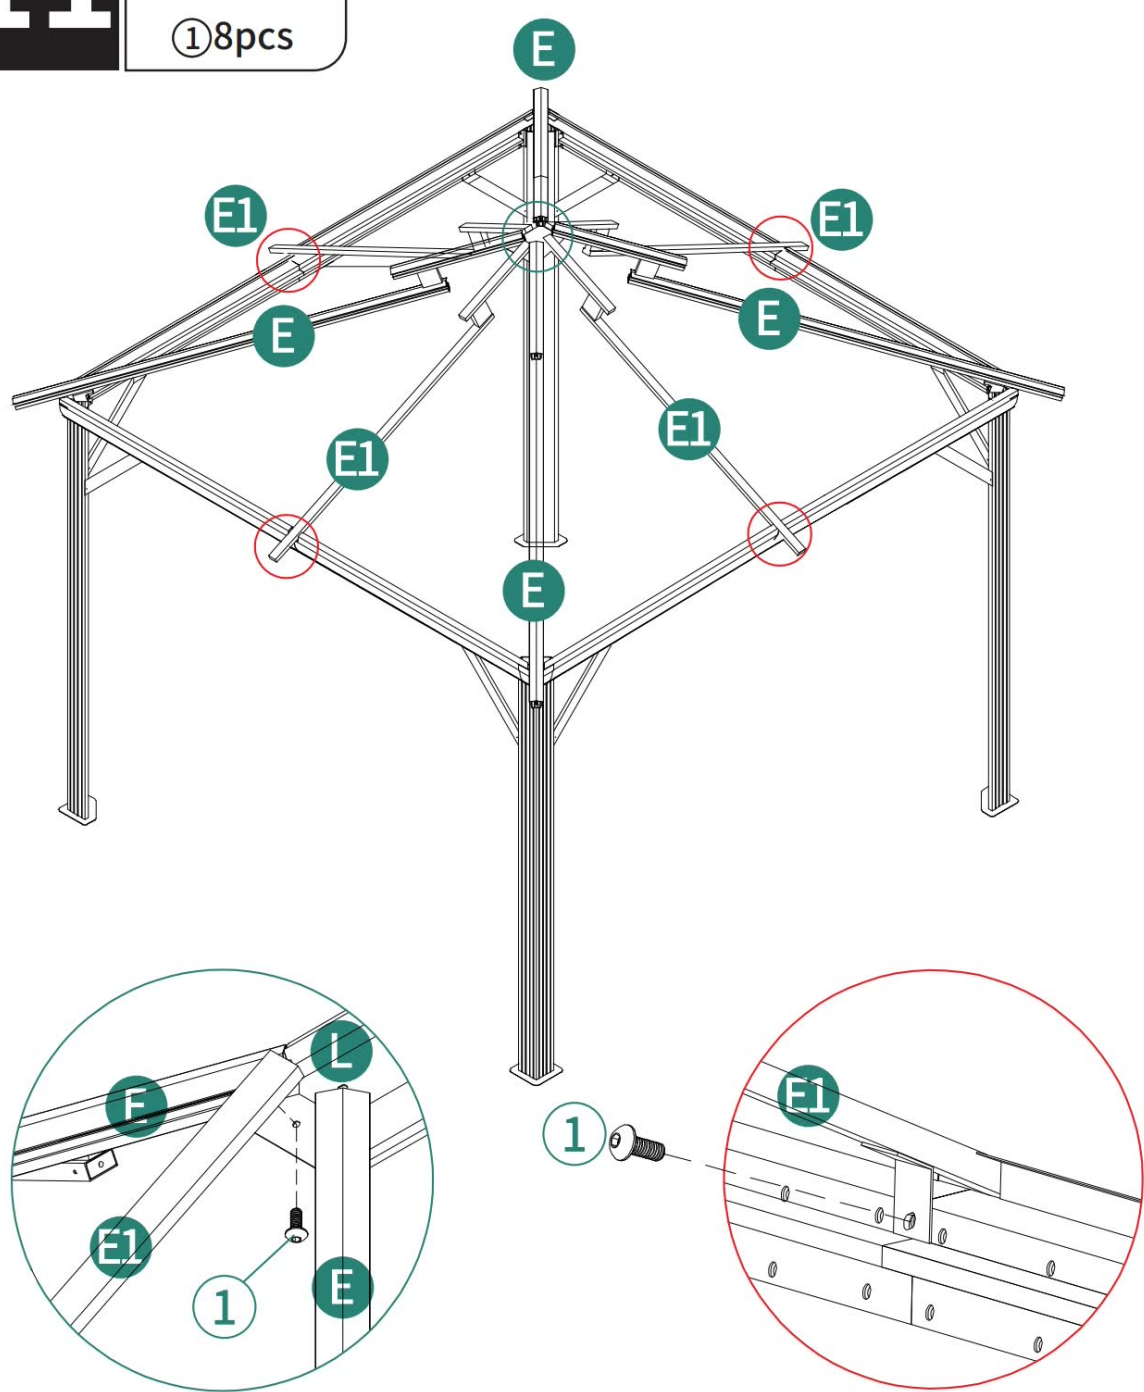




12





Ⓜ1pc

③1pc

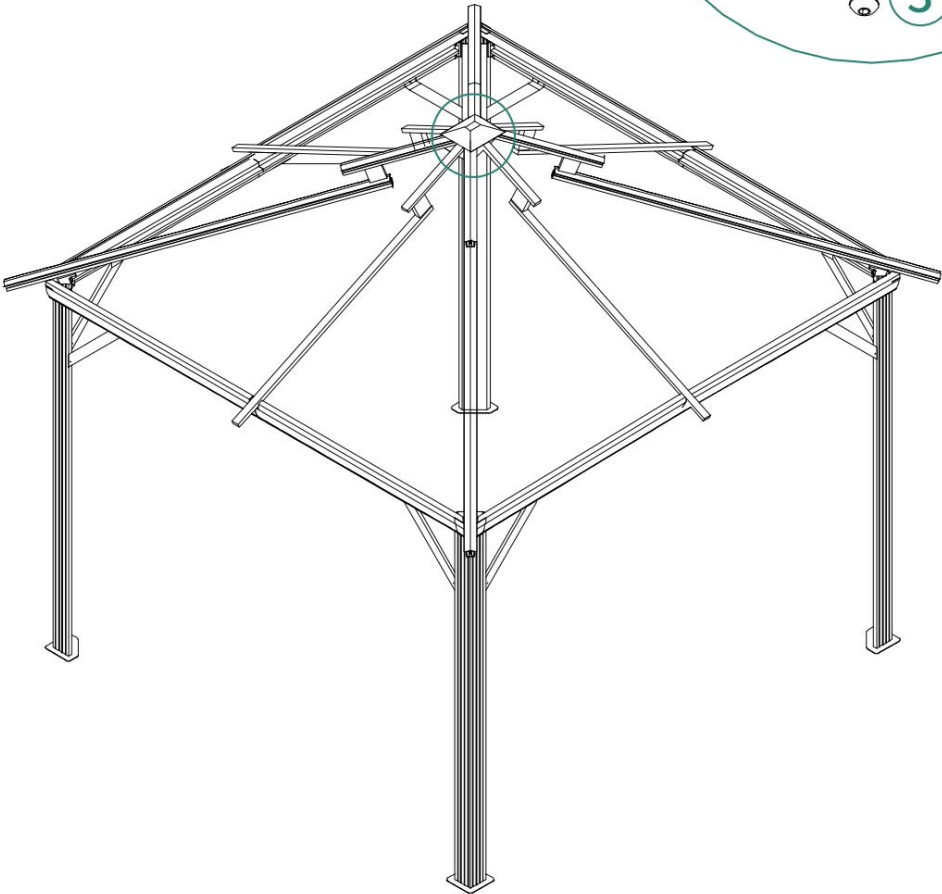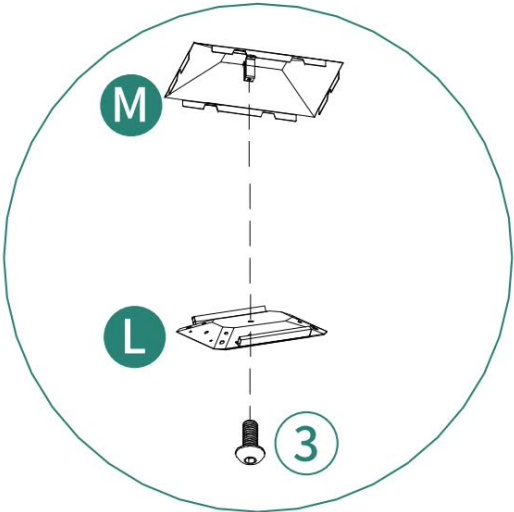

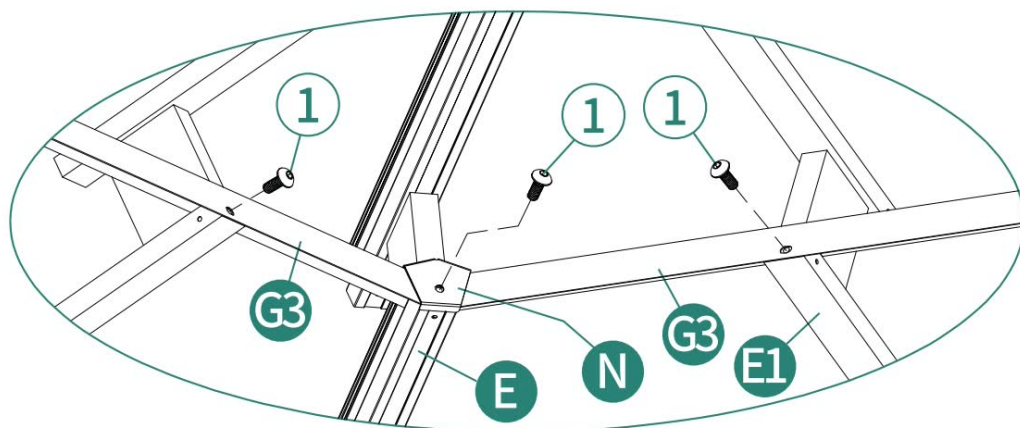
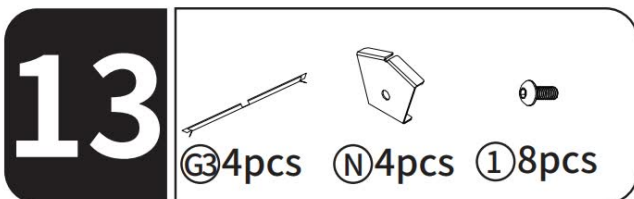


Do not tighten the screw 1 before completing step 18.
It's view from the bottom inside gazebo.

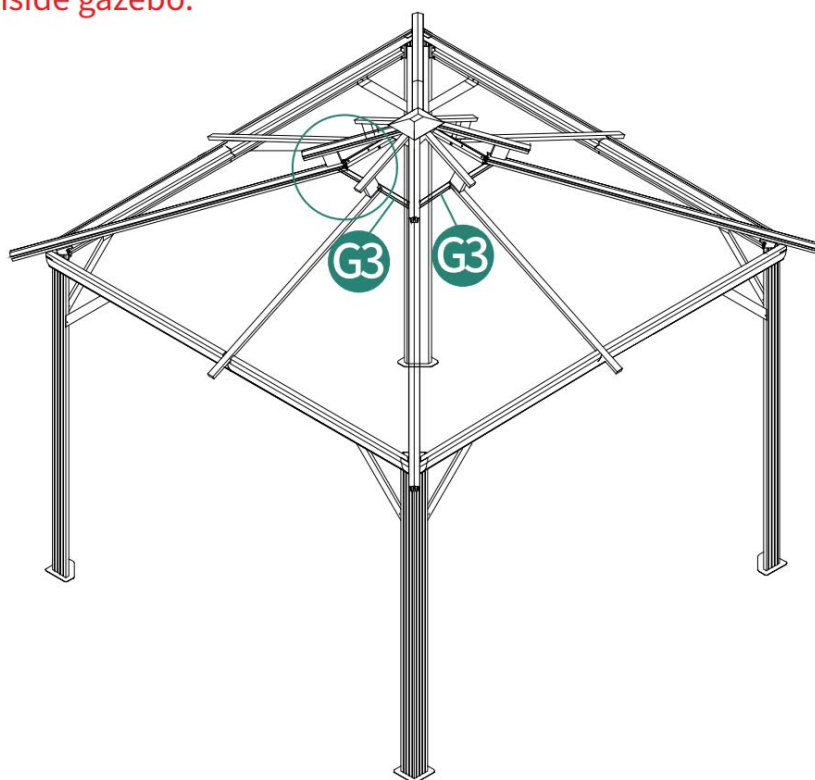


14


X4

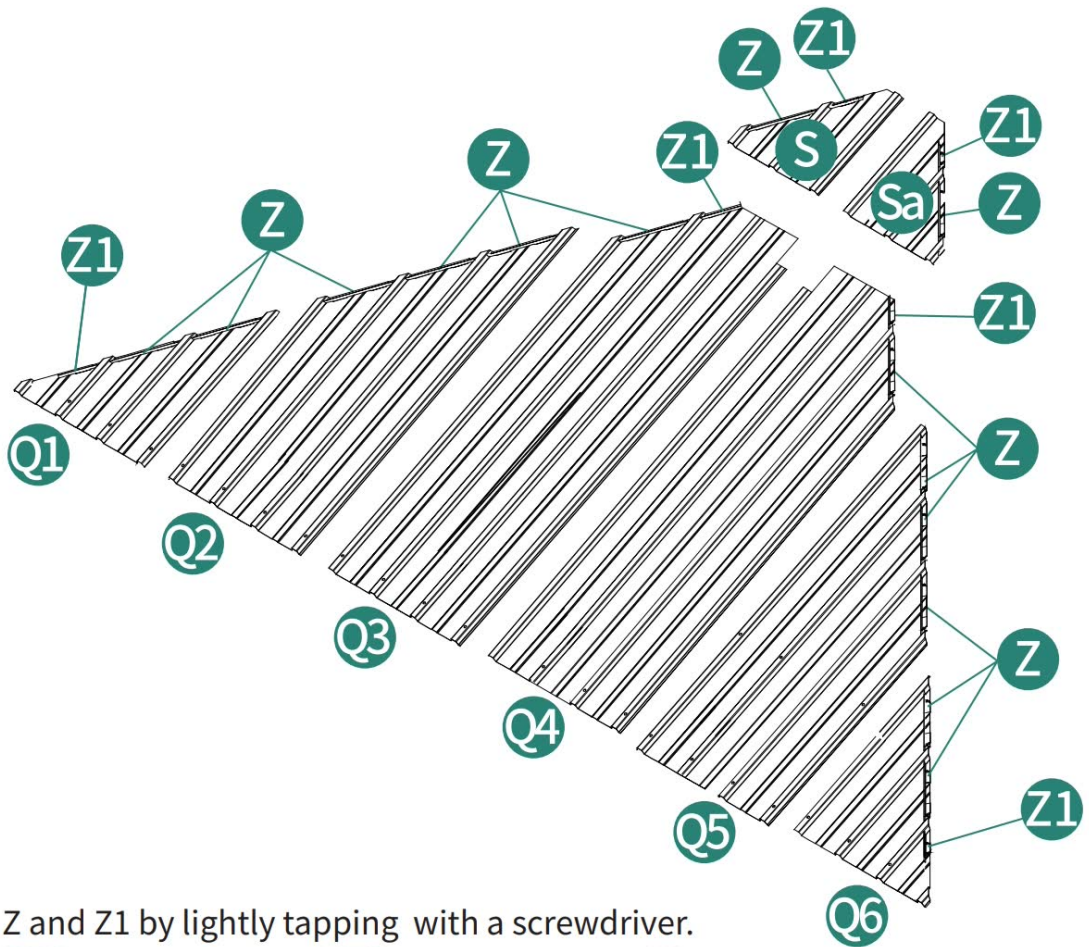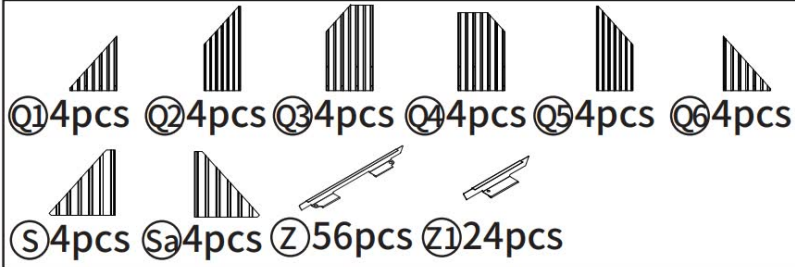

Attach Z and Z1 by lightly tapping with a screwdriver.

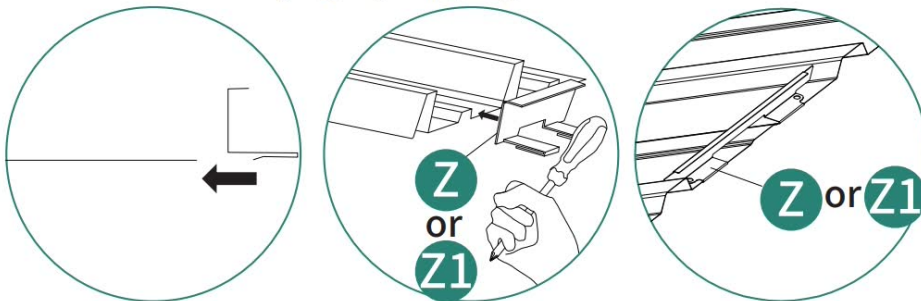

15

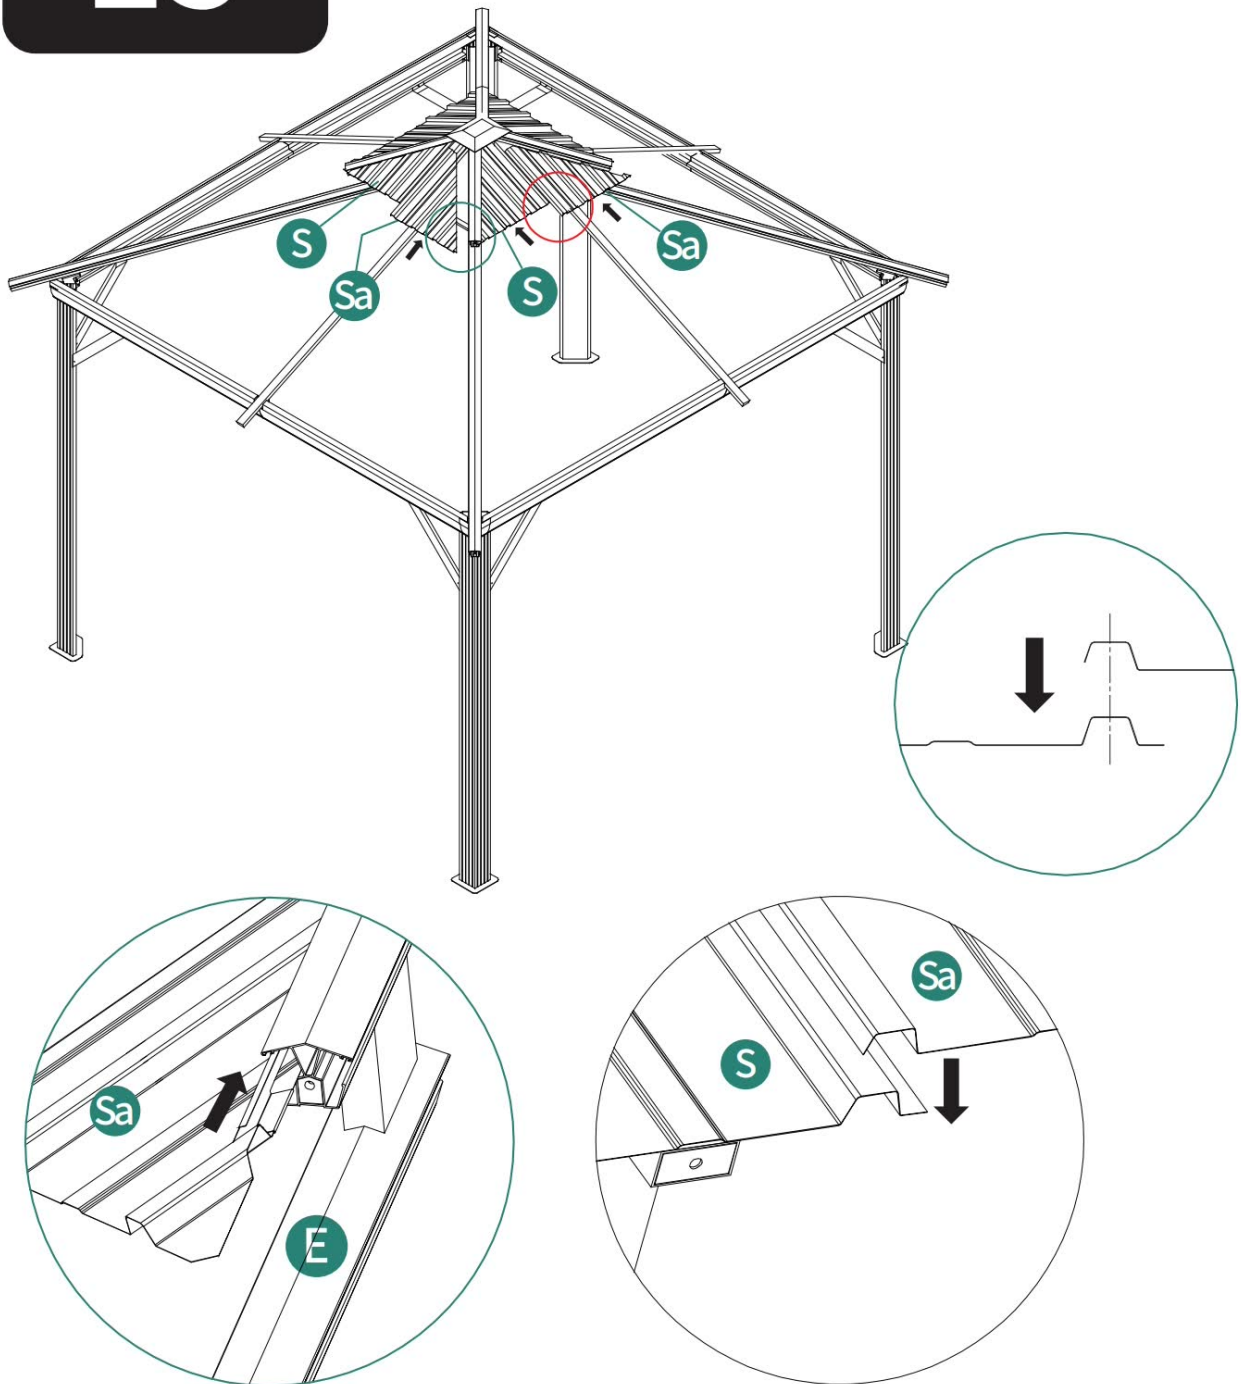

16







G1 4pcs



N 4pcs




1 8pcs

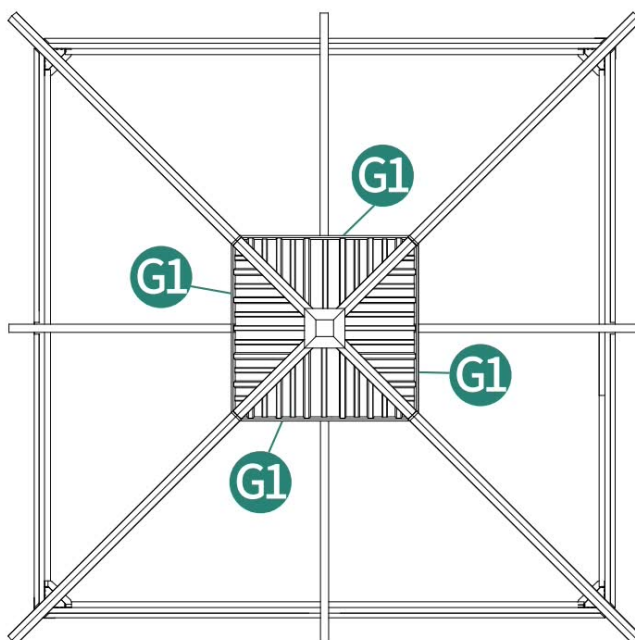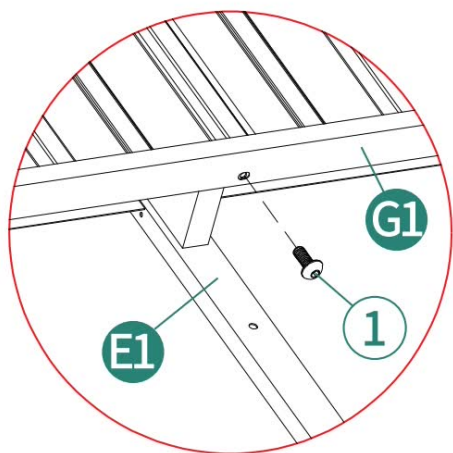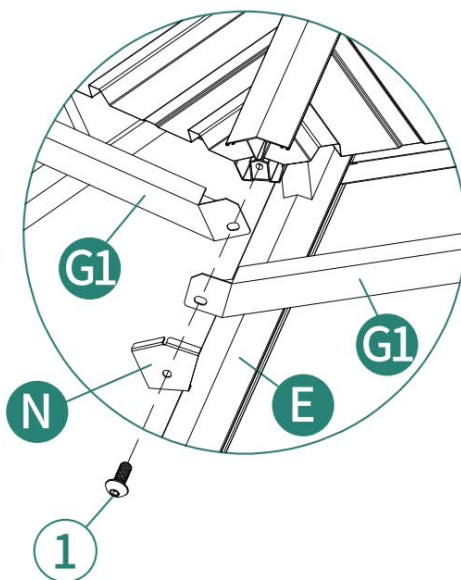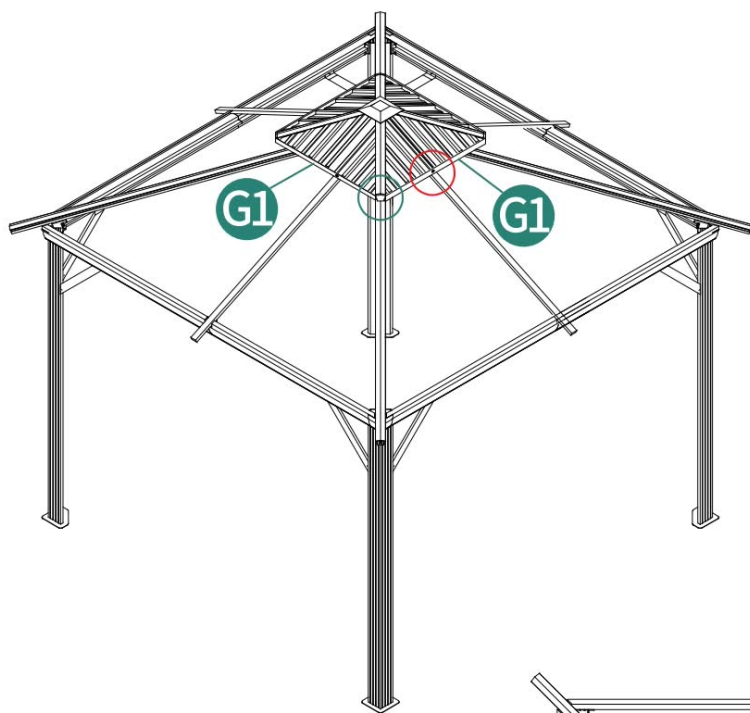

17



F1 8pcs







W 4pcs




W1 4pcs



1 24pcs

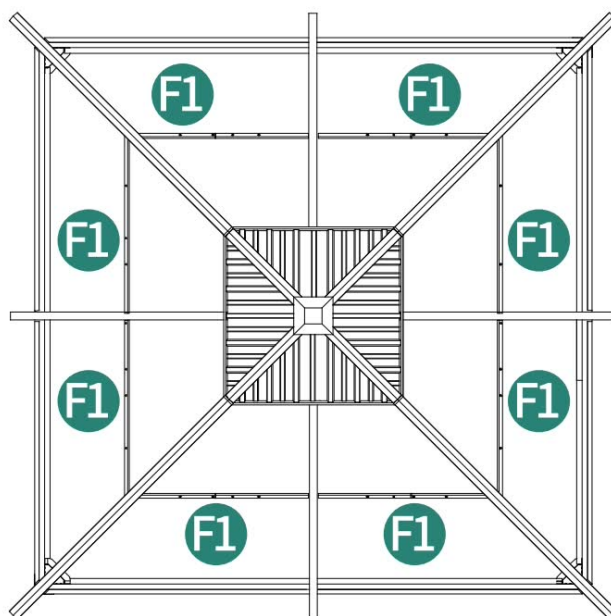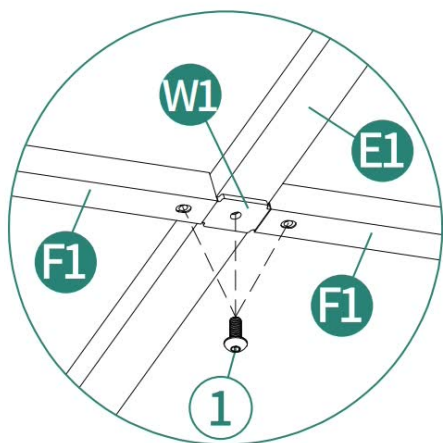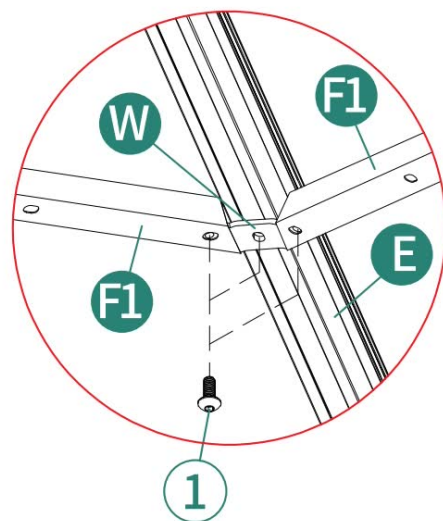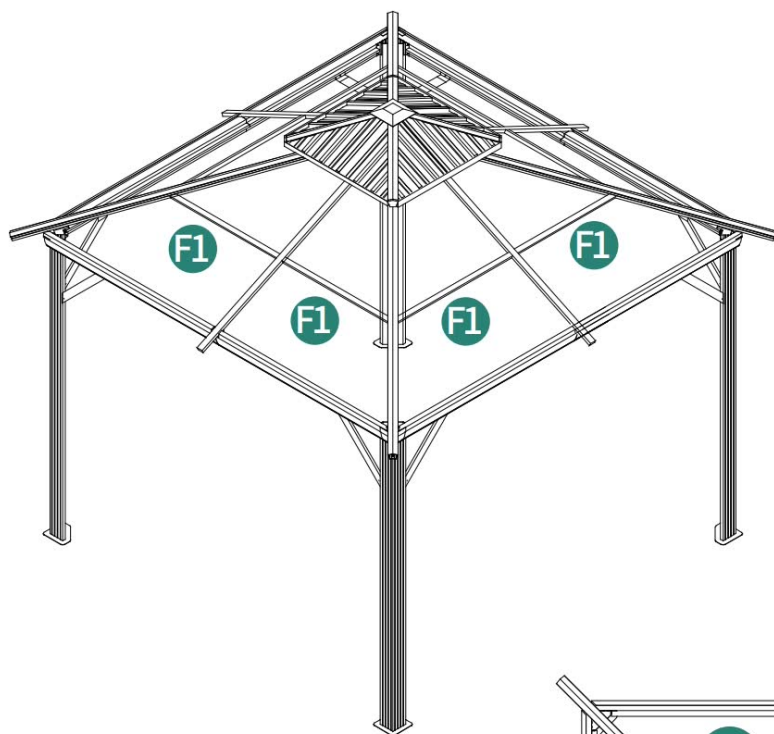

18




Ⓥ1 4pcs




Ⓥ2 4pcs



⑤ 8pcs

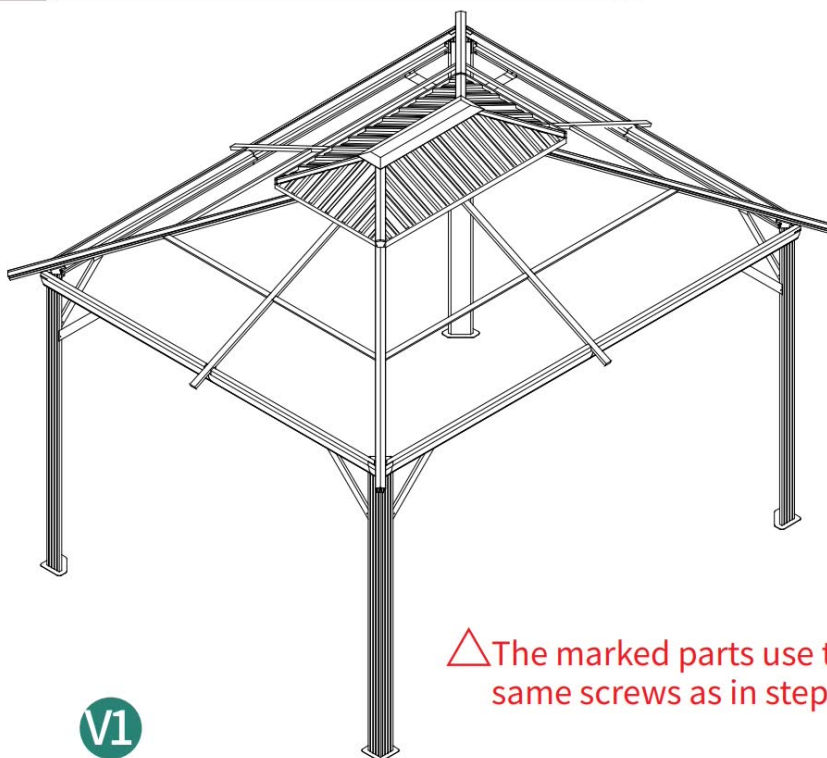


△ The marked parts use the same screws as in step 13.

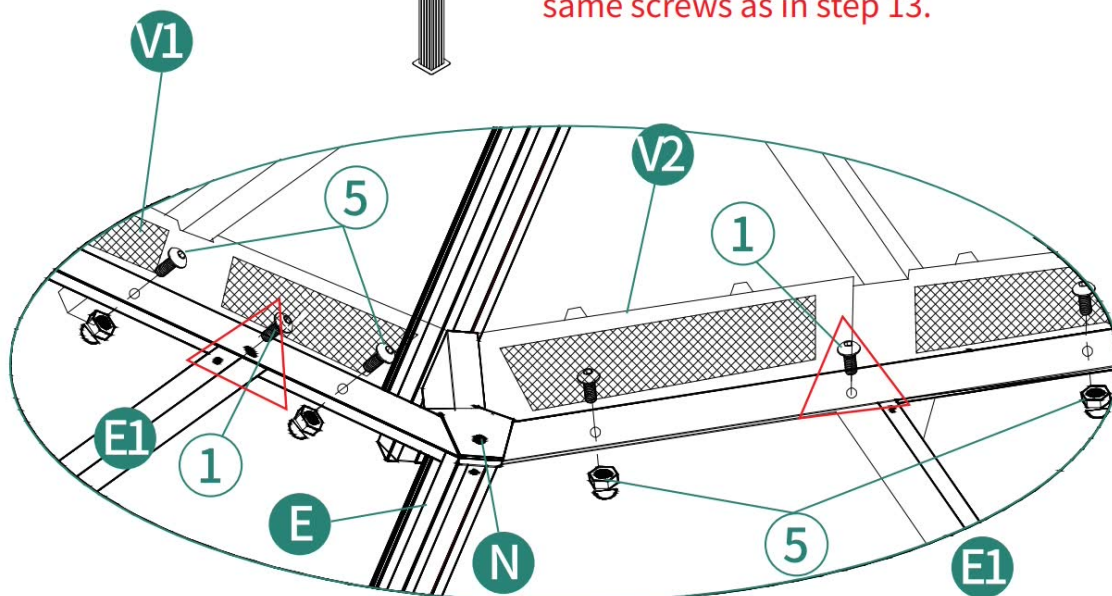


It's view from the bottom inside gazebo.

19

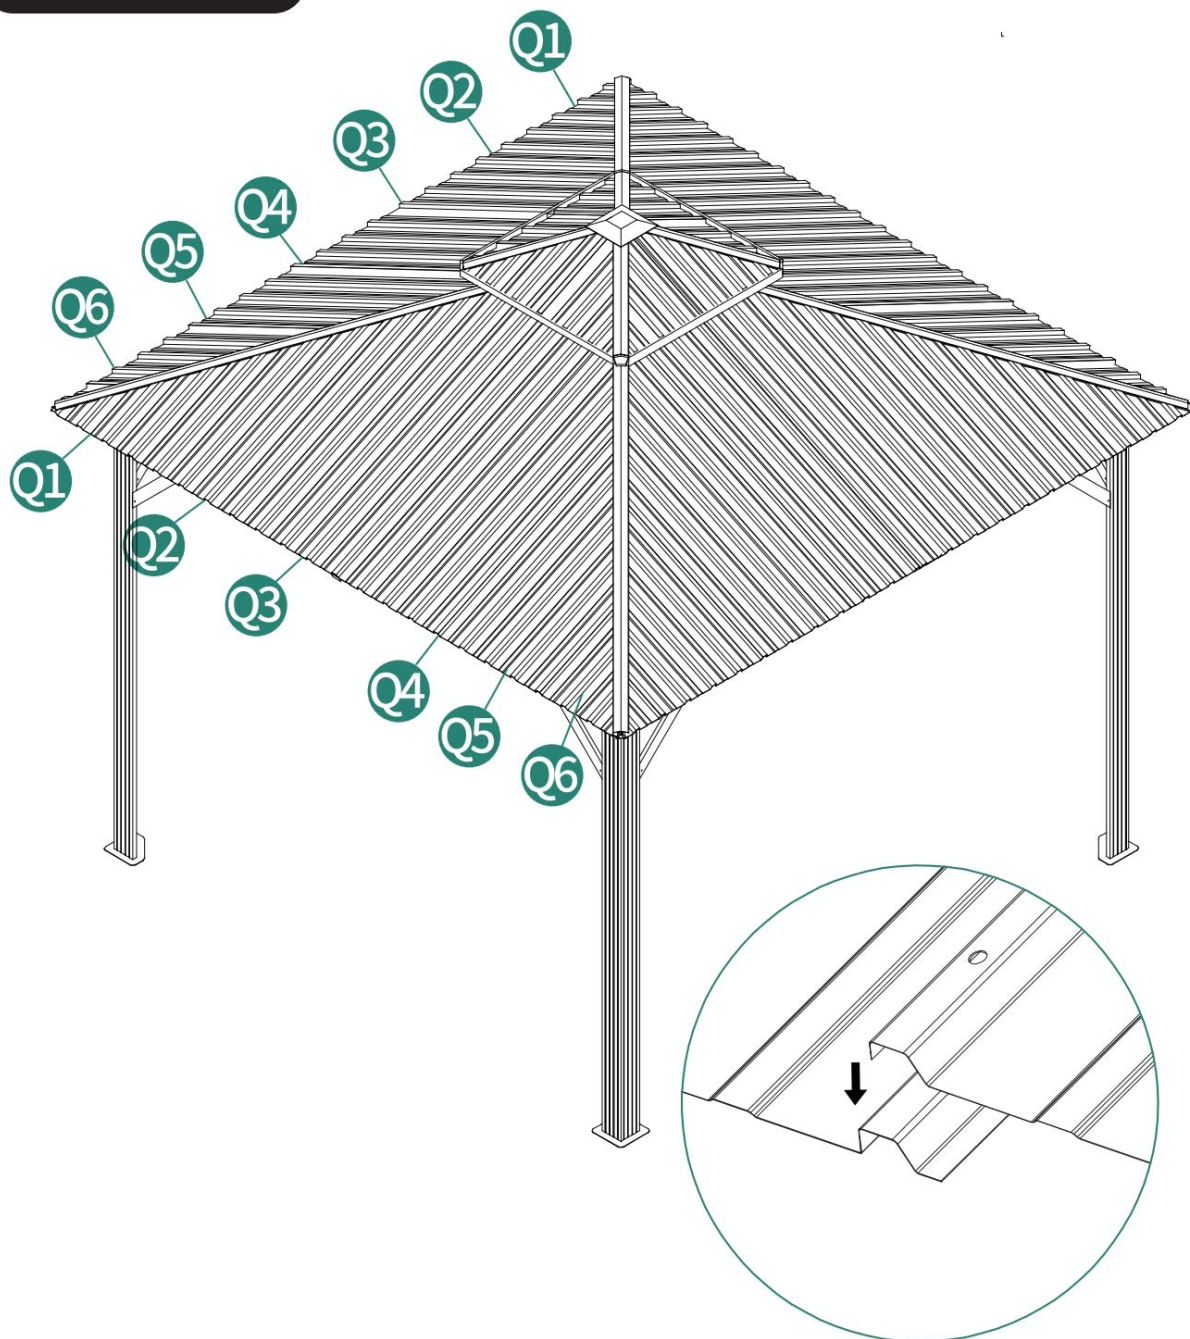

20

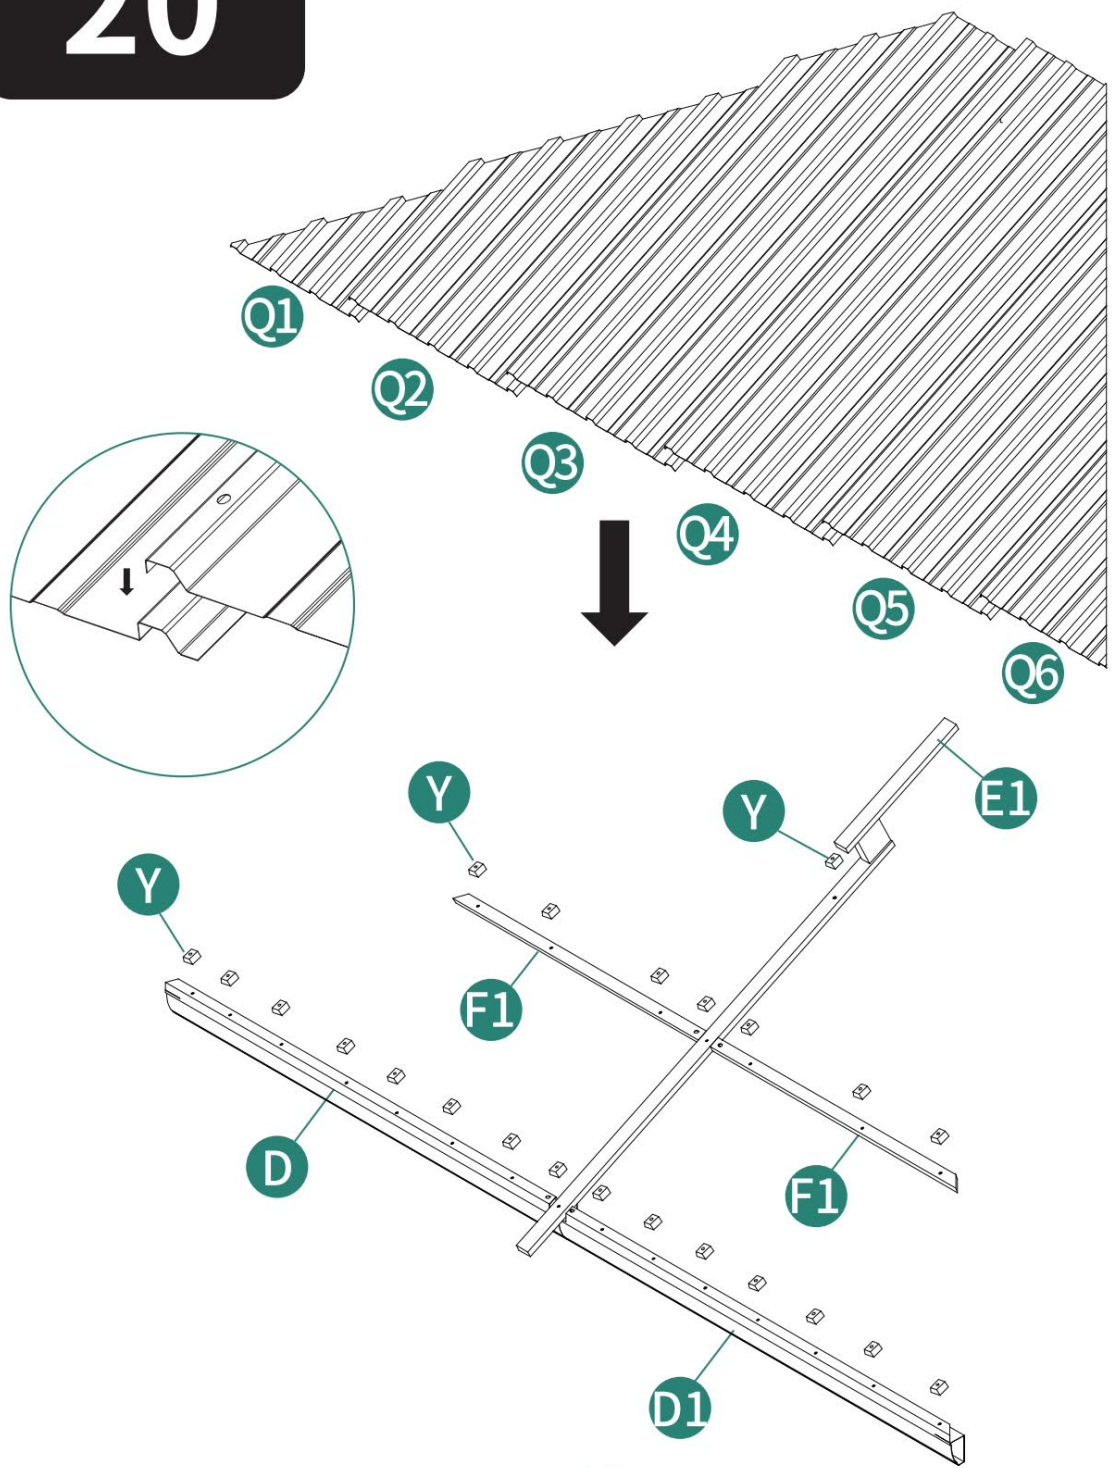

21



① 92pcs



② 56pcs




③ 8pcs



⑥ 4pcs



⑦ 24pcs

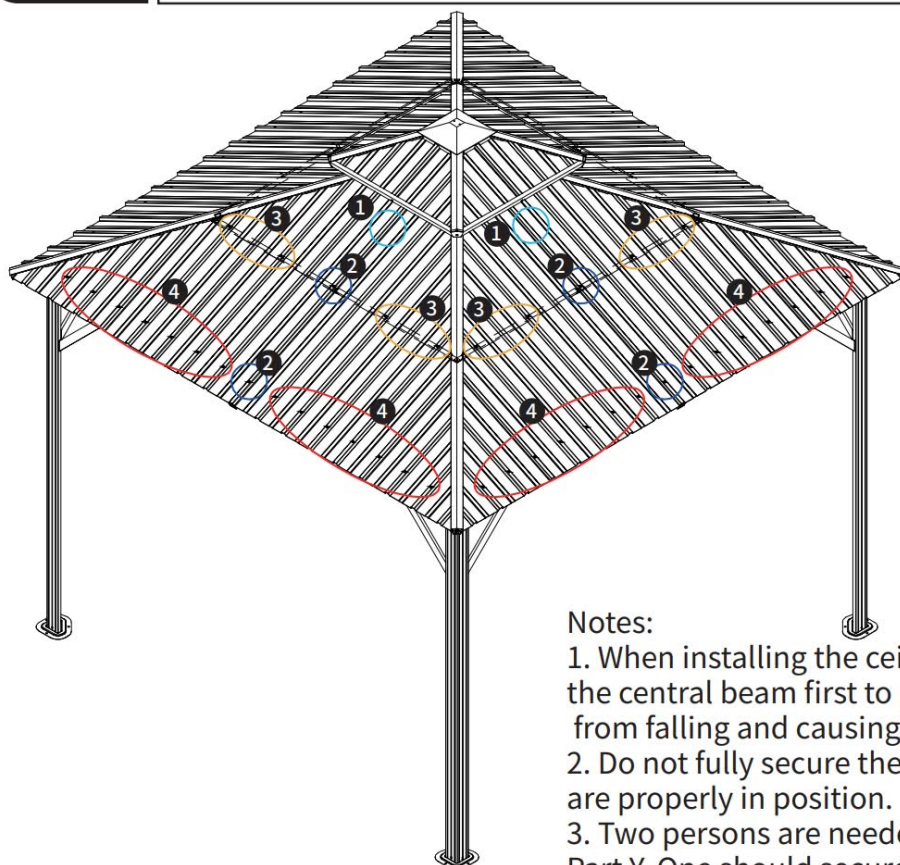


Notes:

1. When installing the ceiling, fix the screws on the central beam first to prevent the iron sheet from falling and causing injury.

2. Do not fully secure the screw until all screws are properly in position.

3. Two persons are needed when installing Part Y. One should secure Part Y's position from inside the gazebo, while the other inserts screws into Part Y from outside the gazebo.

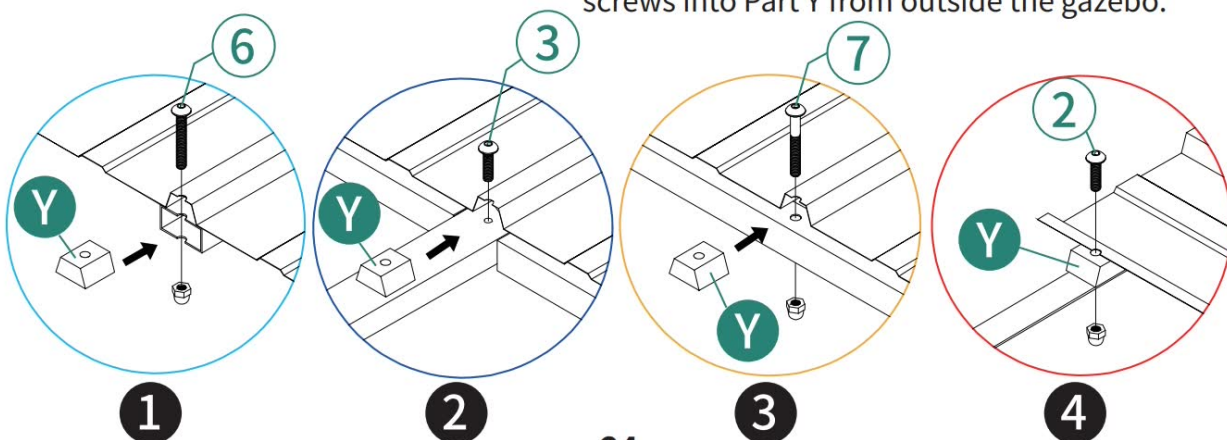



22












G5 4pcs
G6 4pcs
N 4pcs
N1 4pcs
1 8pcs

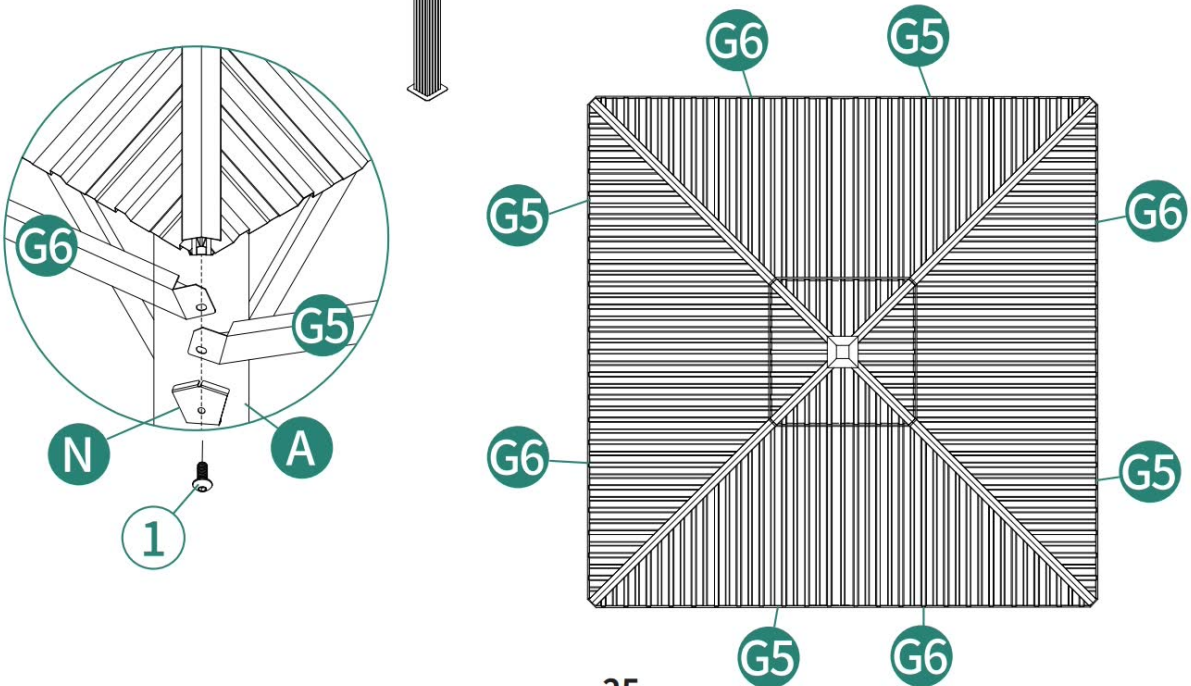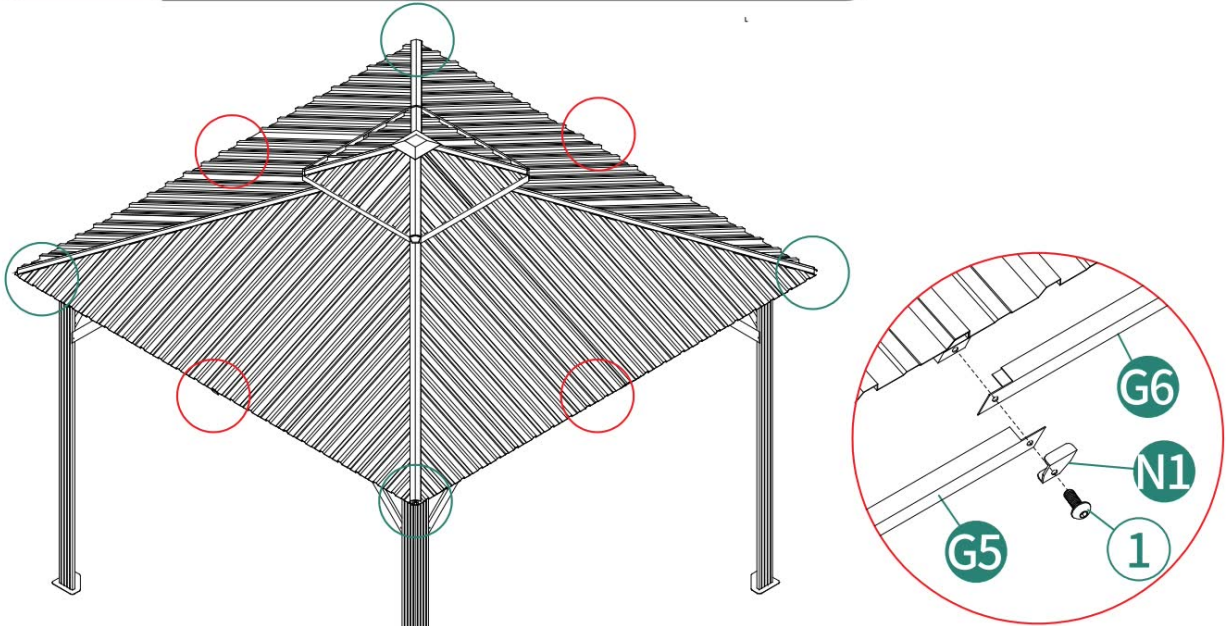


23



Ⓣ4pcs

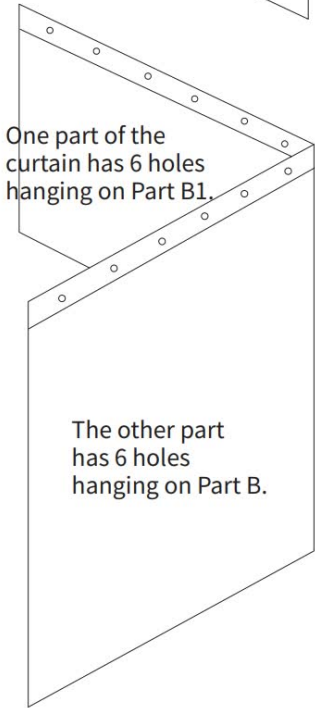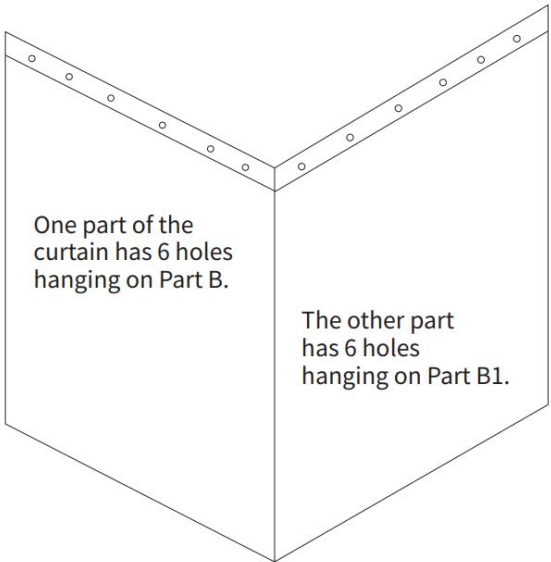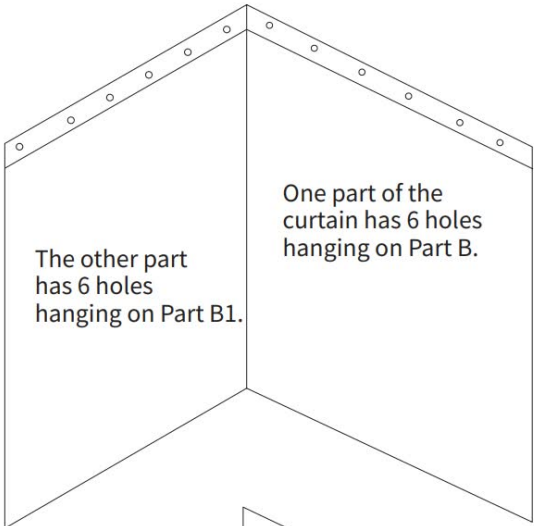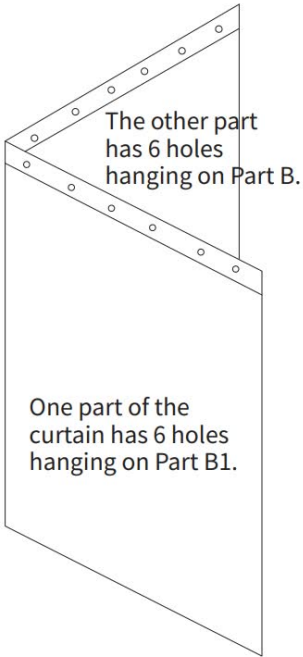


24




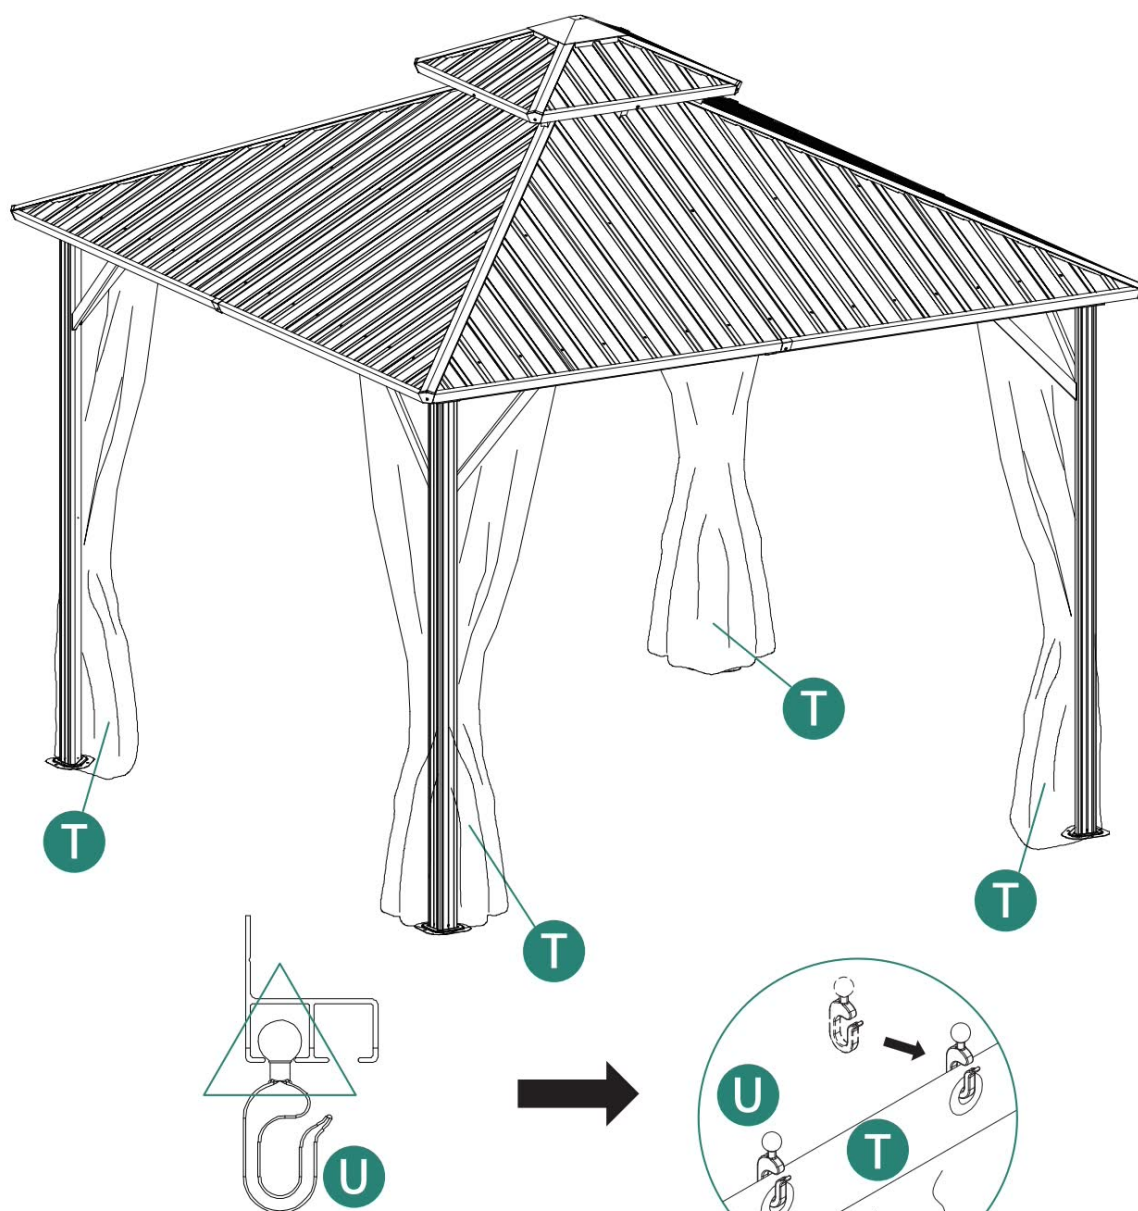


Pay attention to the sidewall curtain's installation position.



25




①14pcs

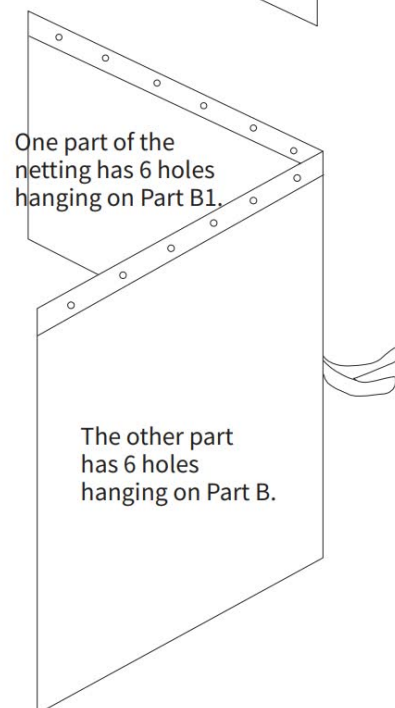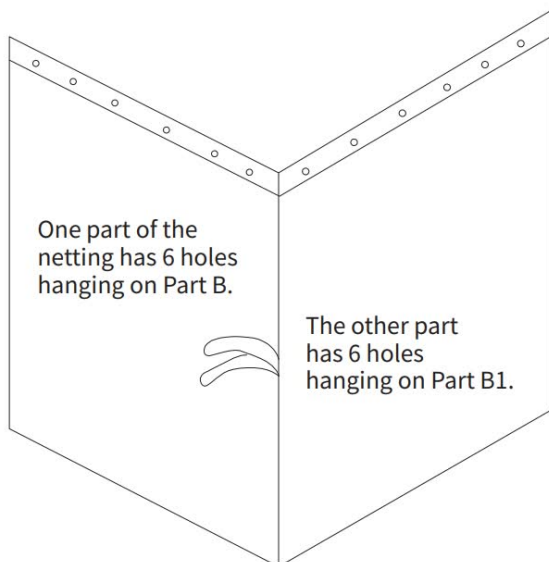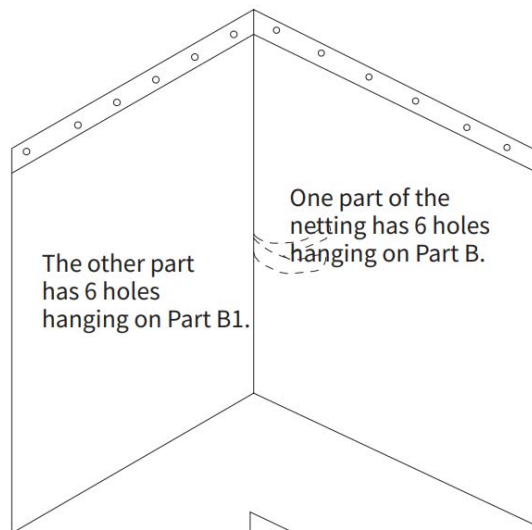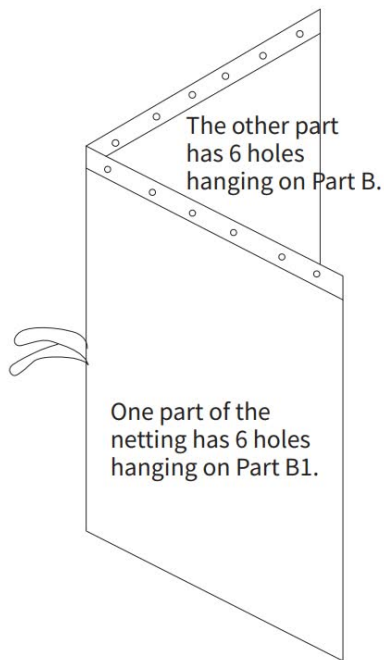



26

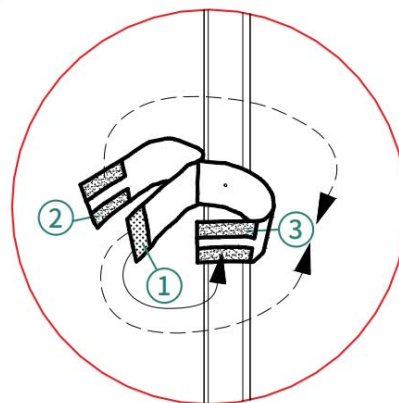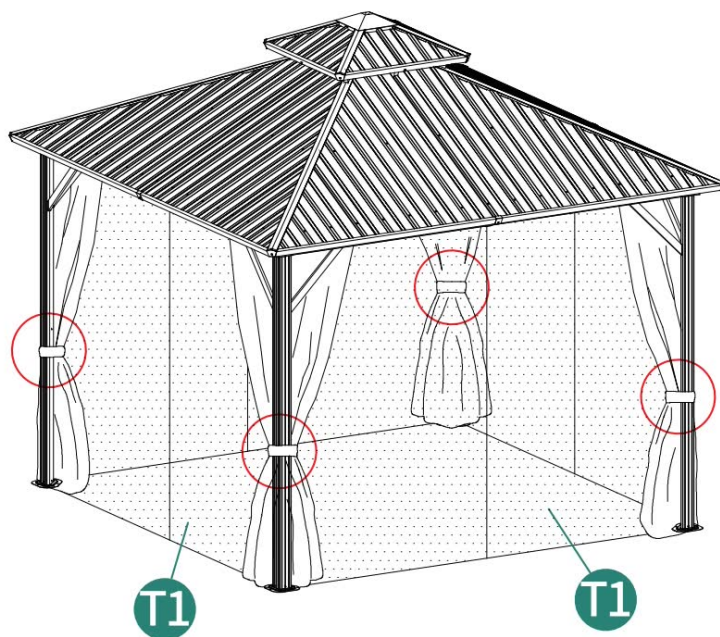

Note:
 Attach 1 to 2 to secure parts T1 and T (curtains) together.
 Attach 1 to 3 to secure the back curtain (T).
 Attach 1 to 3 to secure the front netting (T1).

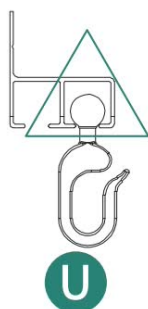

Pay attention to the sidewall netting's installation position.

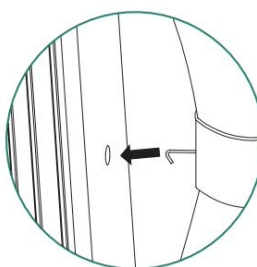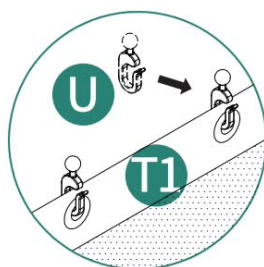


Hang the hook attached to the netting on Part A.

27



⑨12pcs

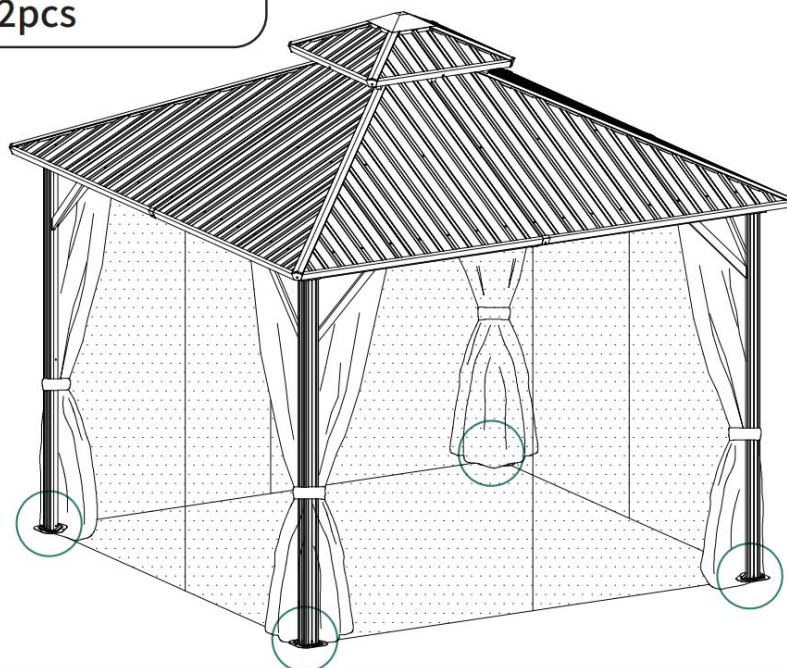

To improve wind resistance, **be sure to complete this installation step. If expansion screws or ground nails are not installed, strong winds may topple the gazebo.**

Expansion screws are essential for stability on cement surfaces, and ground nails are for grassy surfaces. All are included in the accessories package.

