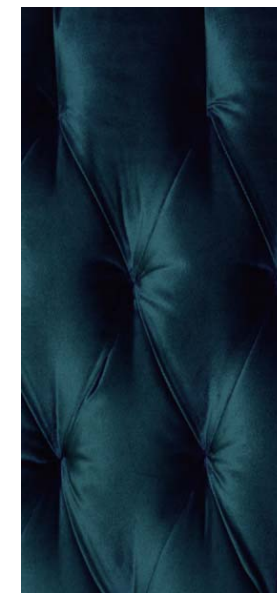


MIMO

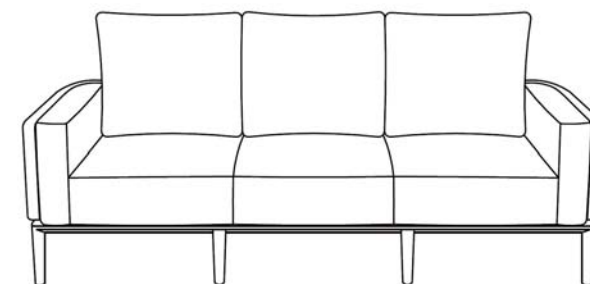
Easy Living, Beautiful Home

For more information, please visit our website:

mimo-living.com



MIMO



MIMO-AUREL-3SS

INSTRUCTION MANUAL

Hello! Please read these important attentions...

Please put a thick carpet on the ground to protect the furniture finish and corners. During the installation process, **DON' T** fasten screws tight 100% at a time.

MIMO

FORM FOR REPLACING MISSING OR DAMAGED PIECES.

Please email to : Help@mimo-living.com

Model # of product : _____
Ordered by: _____
Ordered No: _____
Delivery date: _____

Were the boxes good when delivery to you Yes / No
Upon receiving the product,were all the parts intact Yes / No


Name : _____
Address : _____

Tel : _____


**If the product is found damaged after assembly, please provide
photo of the entire furniture set and all damaged areas.**

Part#	Qty	Description	Missing/Damaged
			M / D
			M / D
			M / D
			M / D





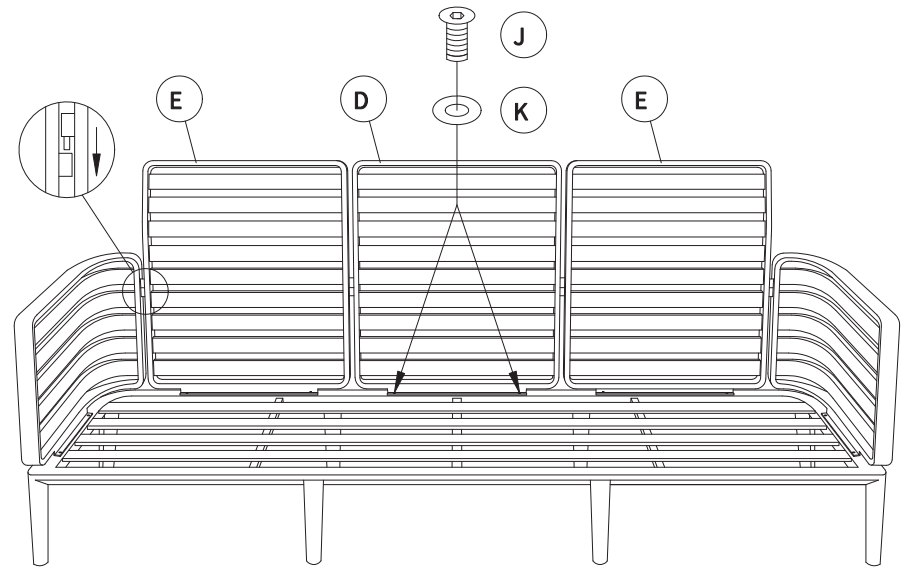
Assembly Instructions






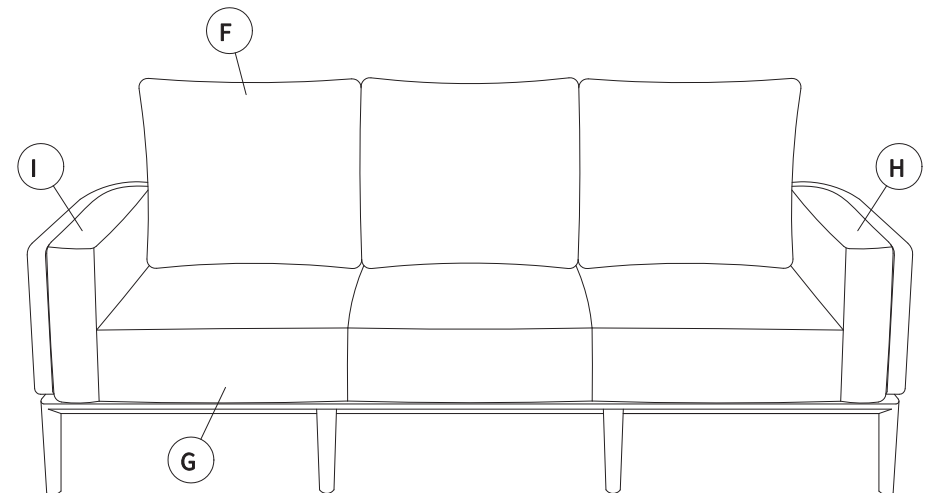Step 2: Insert 1/4"x18mm bolt(J) and washer(K) through the holes in the back frame(D&E) and the seat frame(C). Repeat for the rest holes in the frame.




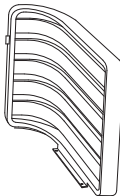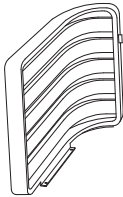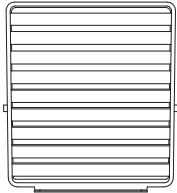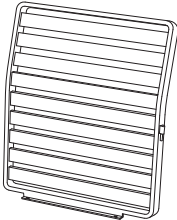
Step 3: Tighten all the bolts completely. Your chair should be ready for use.

Assembly Instructions			
No.	COMPONENT	DESCRIPTION	QTY
A		LEFT ARMREST	1
B		RIGHT ARMREST	1
C		SEAT FRAME	1
D		BACK FRAME 1	1
E		BACK FRAME 2	2

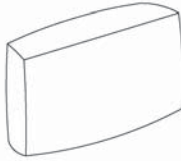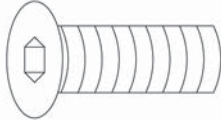Assembly Instructions			
No.	COMPONENT	DESCRIPTION	QTY
F		BACK CUSHION	3
G		SEAT CUSHION	3
H		LEFT ARMREST CUSHION	1
I		RIGHT ARMREST CUSHION	1
J		1/4"x18 mm BOLT	10
K		Ø6.5x1.0 mm WASHER	10
L		HEX BOLT DRIVER	1

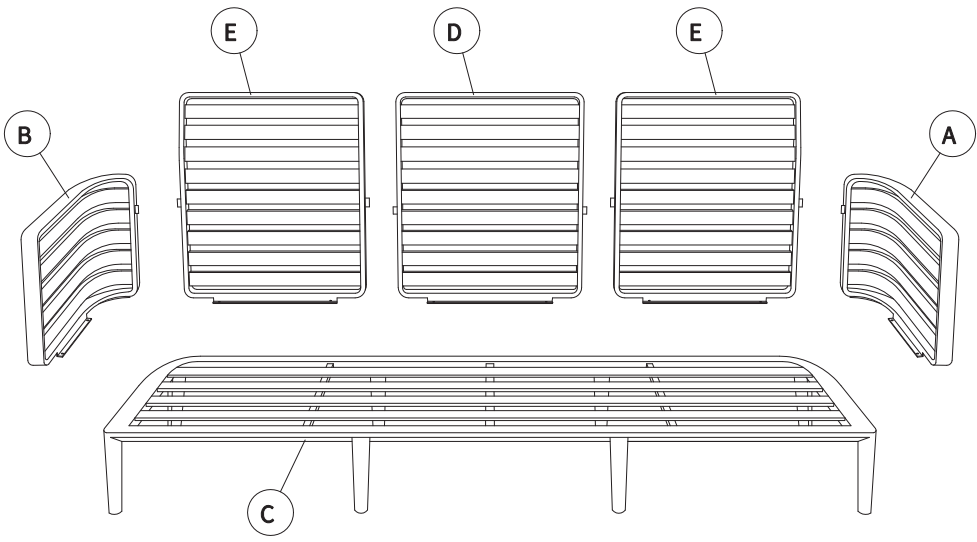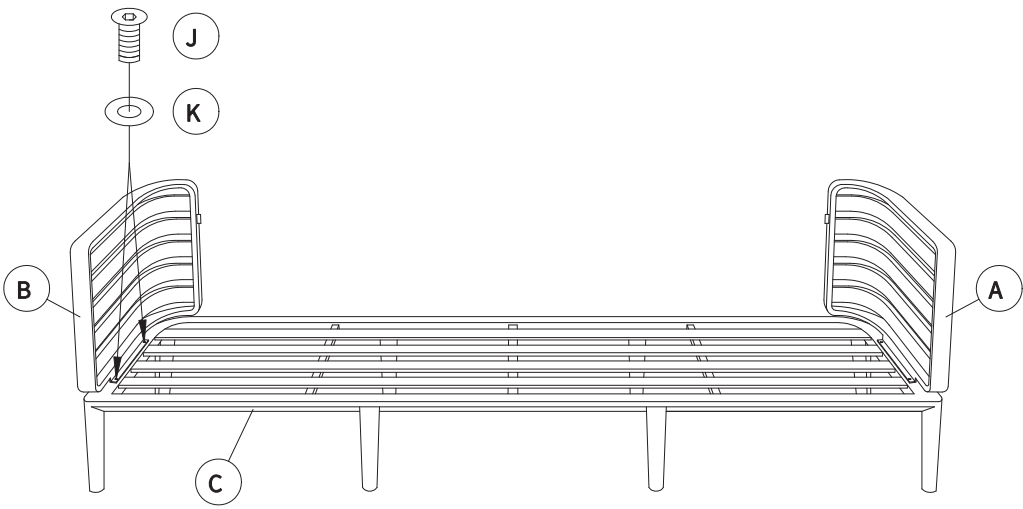Assembly Instructions





Step 1: Insert 1/4"x18mm bolt(J) and washer(K) through the holes in the left & right armrest(A&B) and the seat frame(C). Repeat for the rest holes in the frame.