































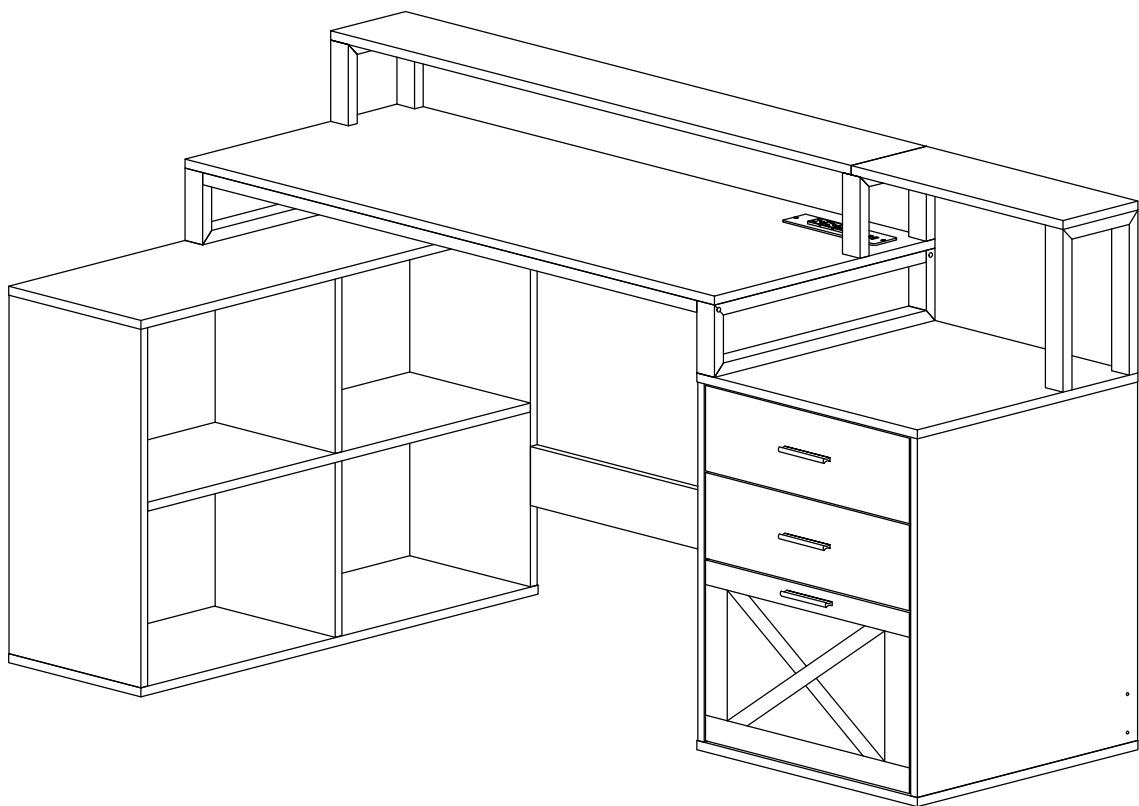














COMPUTER DESK

Notice:

1. Follow the installation instructions. Please confirm all accessories are present before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only after all pieces are correctly assembled.
3. If you encounter any problems during installation, please contact our customer service.

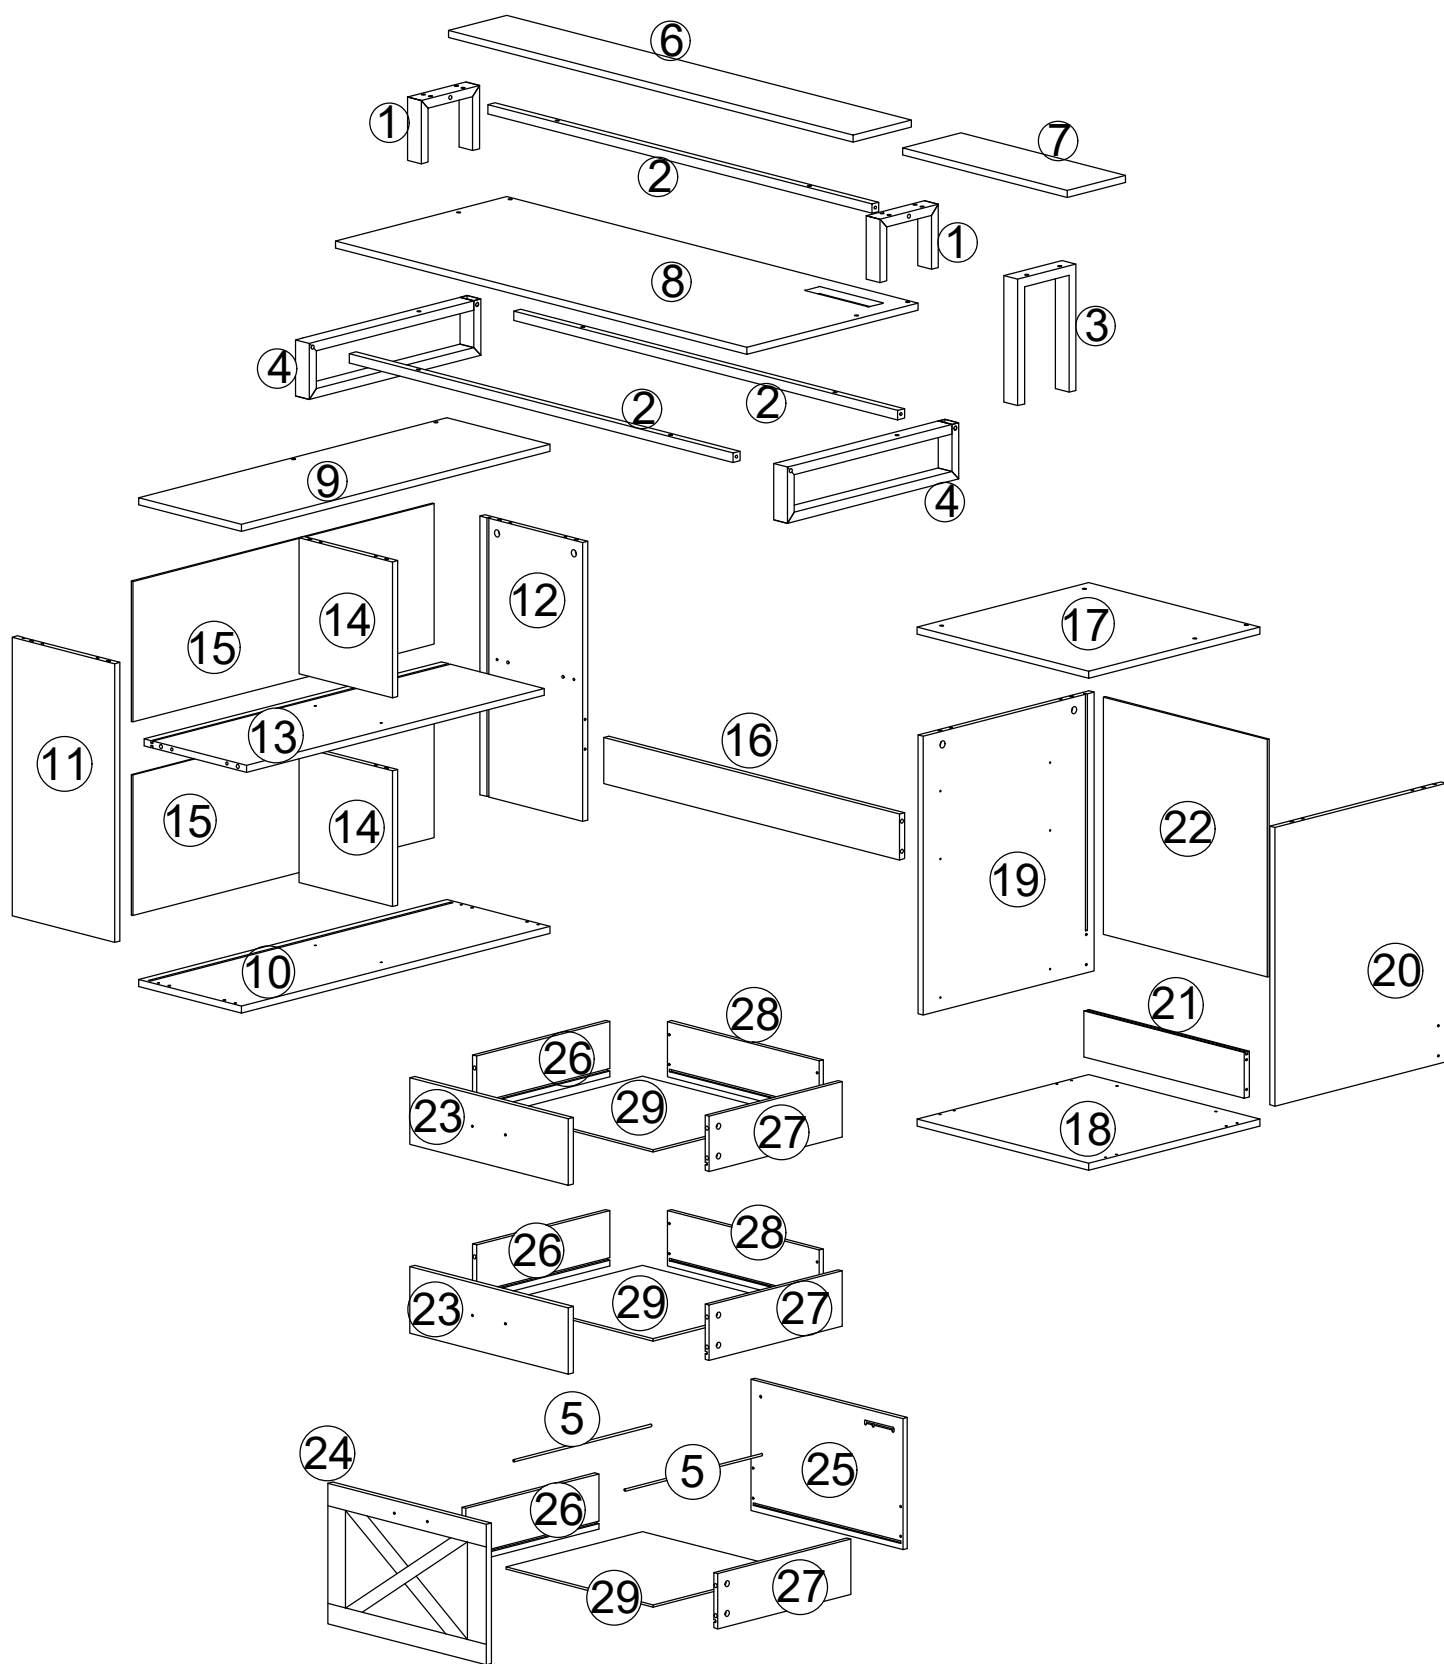


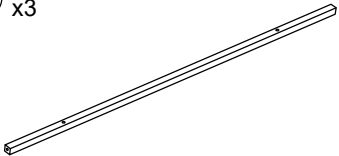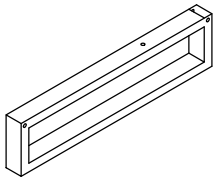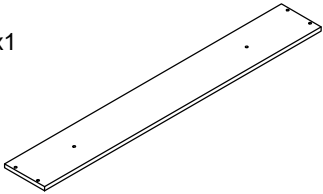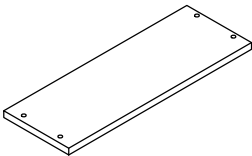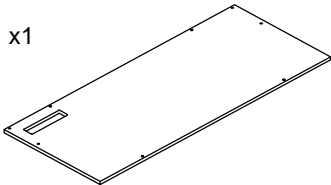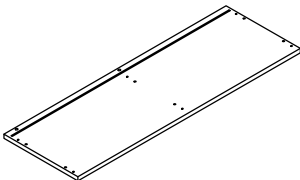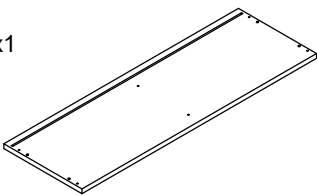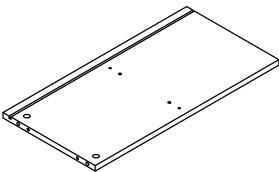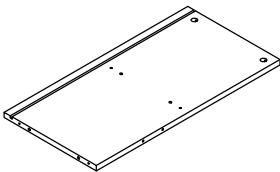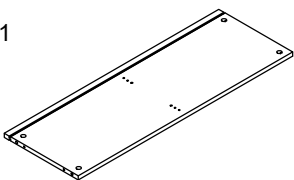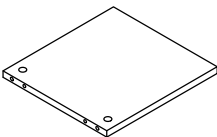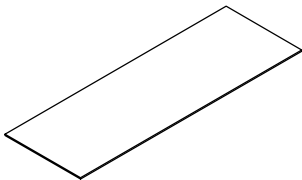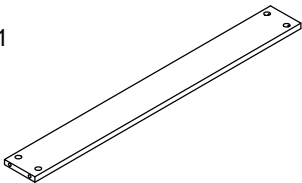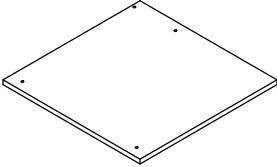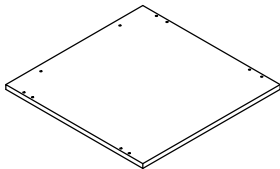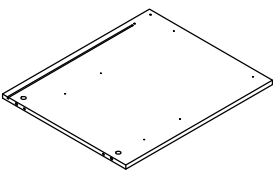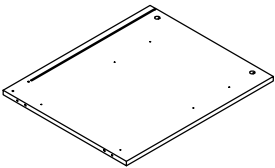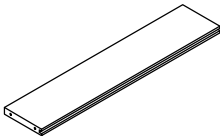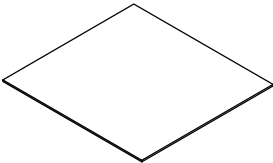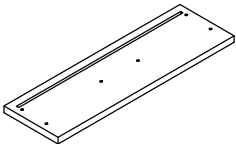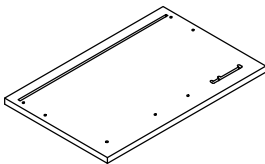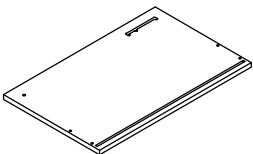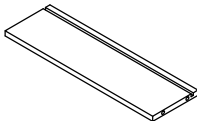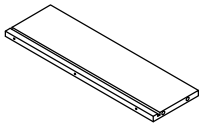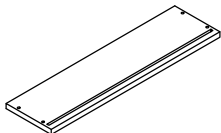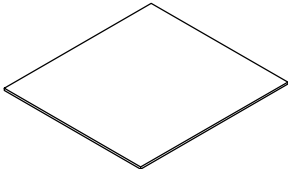① x2 	② x3 	③ x1 
④ x2 	⑤ x2 	⑥ x1 
⑦ x1 	⑧ x1 	⑨ x1 
⑩ x1 	⑪ x1 	⑫ x1 
⑬ x1 	⑭ x2 	⑮ x2 
⑯ x1 	⑰ x1 	⑱ x1 
⑲ x1 	⑳ x1 	㉑ x1 
㉒ x1 	㉓ x2 	㉔ x1 
㉕ x1 	㉖ x3 	㉗ x3 
㉘ x2 	㉙ x3 	

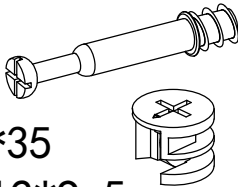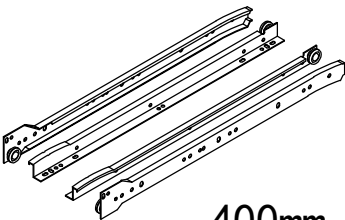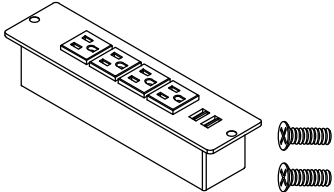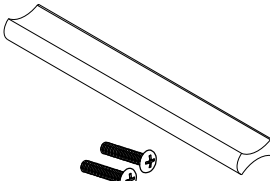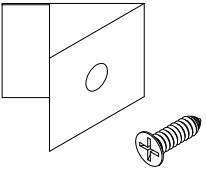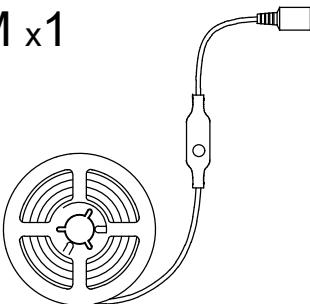
A x30+2  ø5*40	B x8+1  M6*60	C x4+1  M6*35	D x18+2  M6*28
E x24+2  ø6*35	F x32+3  6*35 ø12*9.5	G x1  6.4mm	H x3  400mm
I x31+4  3.5*12	J x1  M4*10=2	K x3  M4*18=6	L x12+2  3.0*14
M x1 	N x10  3.0*12	TOOL  3x57 4x57	

Don't confuse left and right hardware.

CL+DL

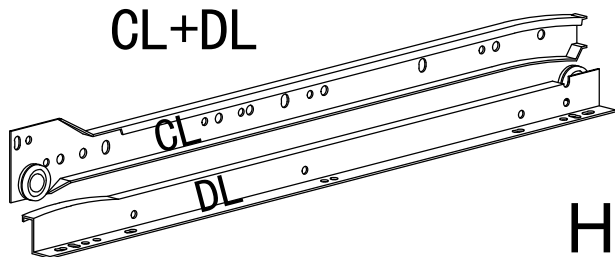


CR+DR

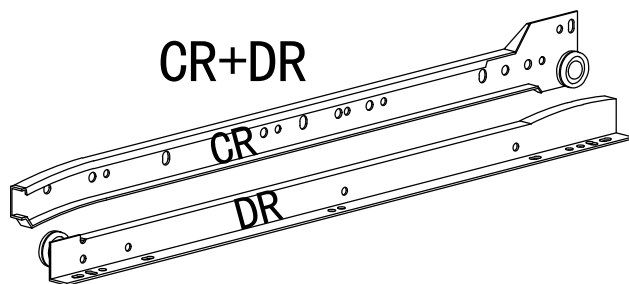


H x3

Attention

Be sure to use the proper screws to avoid damaging the parts

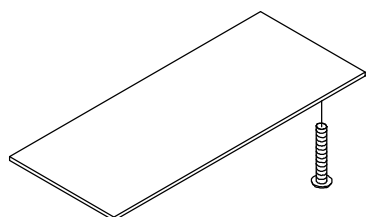


example

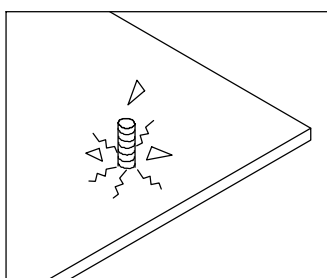

×


Wrong screws can cause the plank to crack


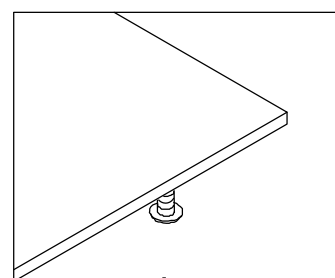


✓


The right screw is the right size


STEP 1

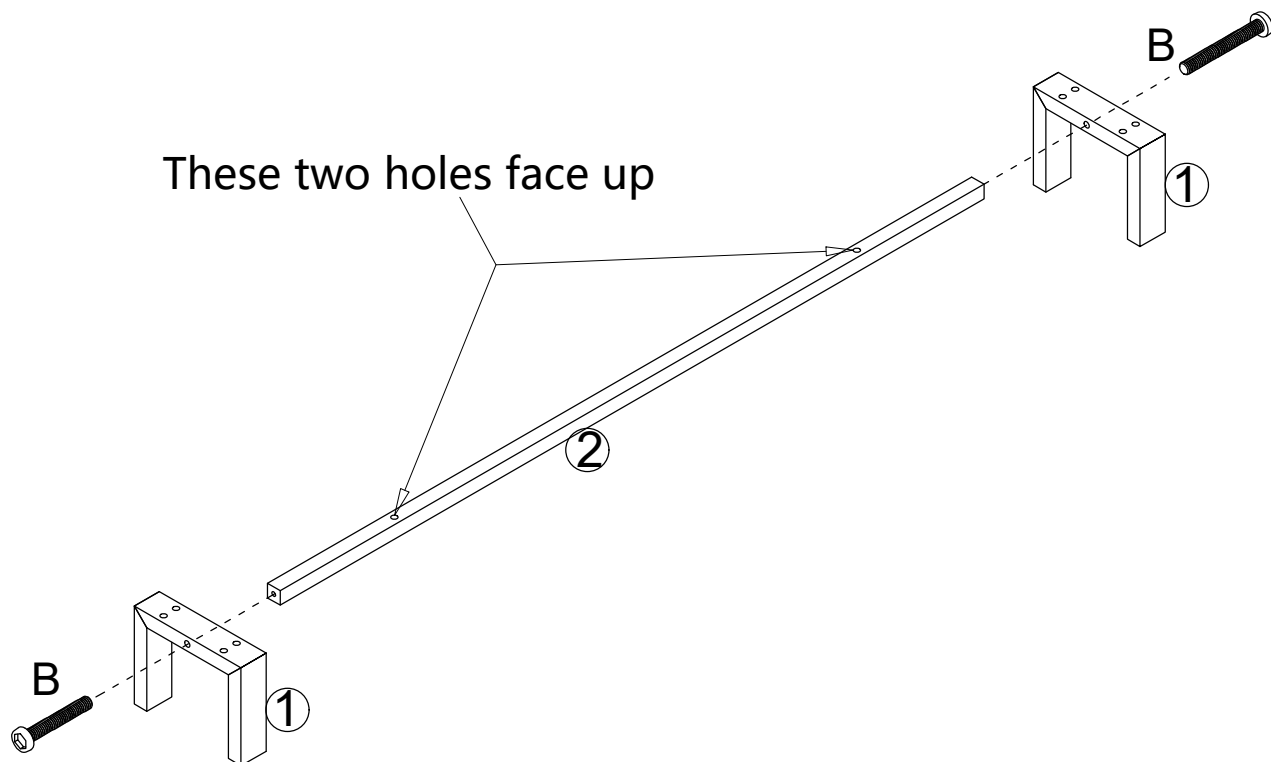


		4mm
B		x2

STEP 2

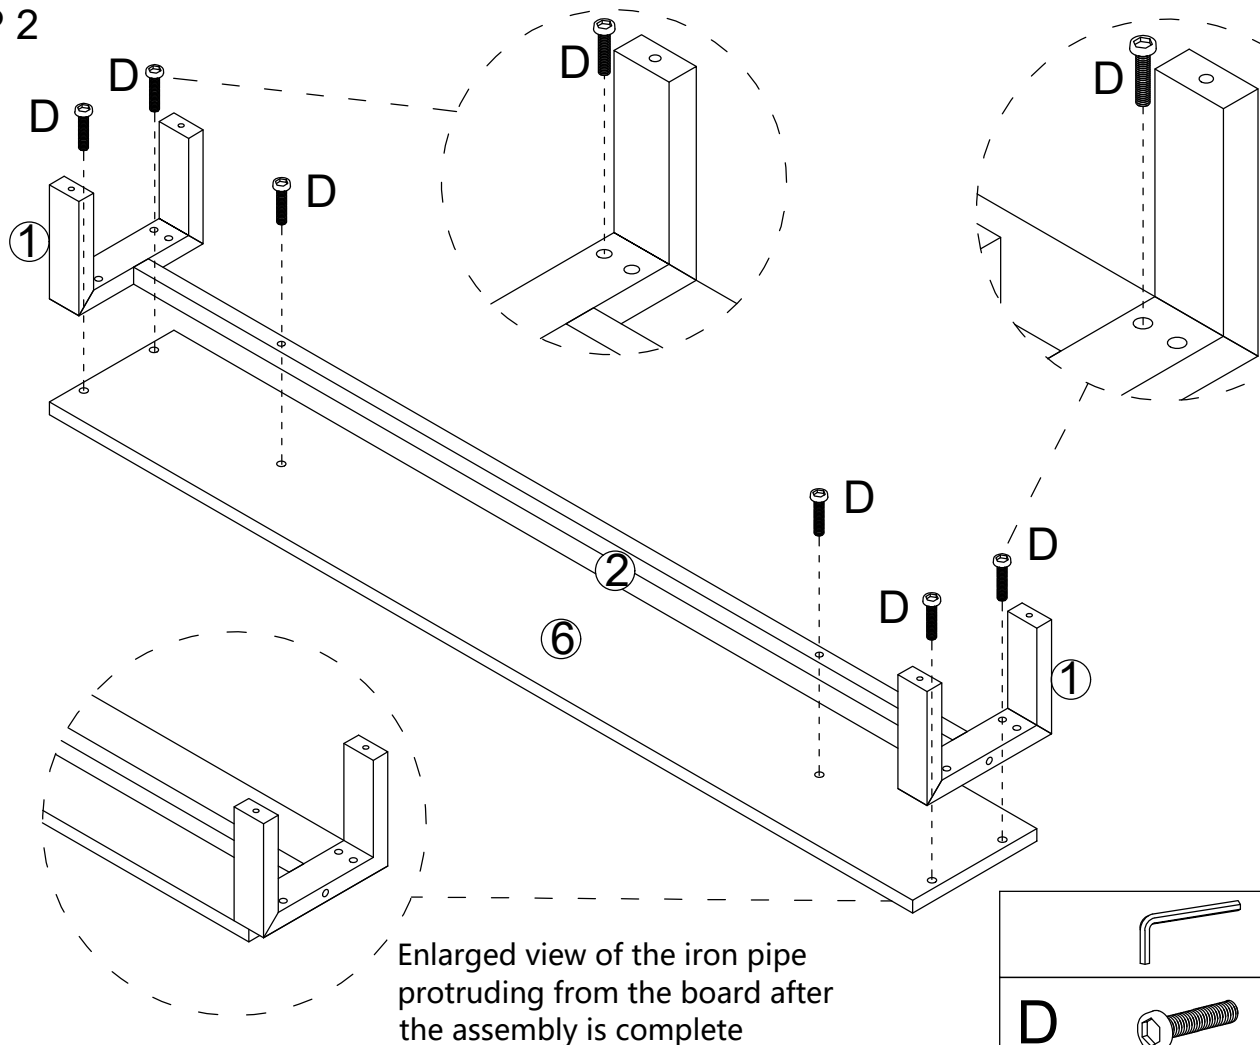


		4mm
D		x6

STEP 3

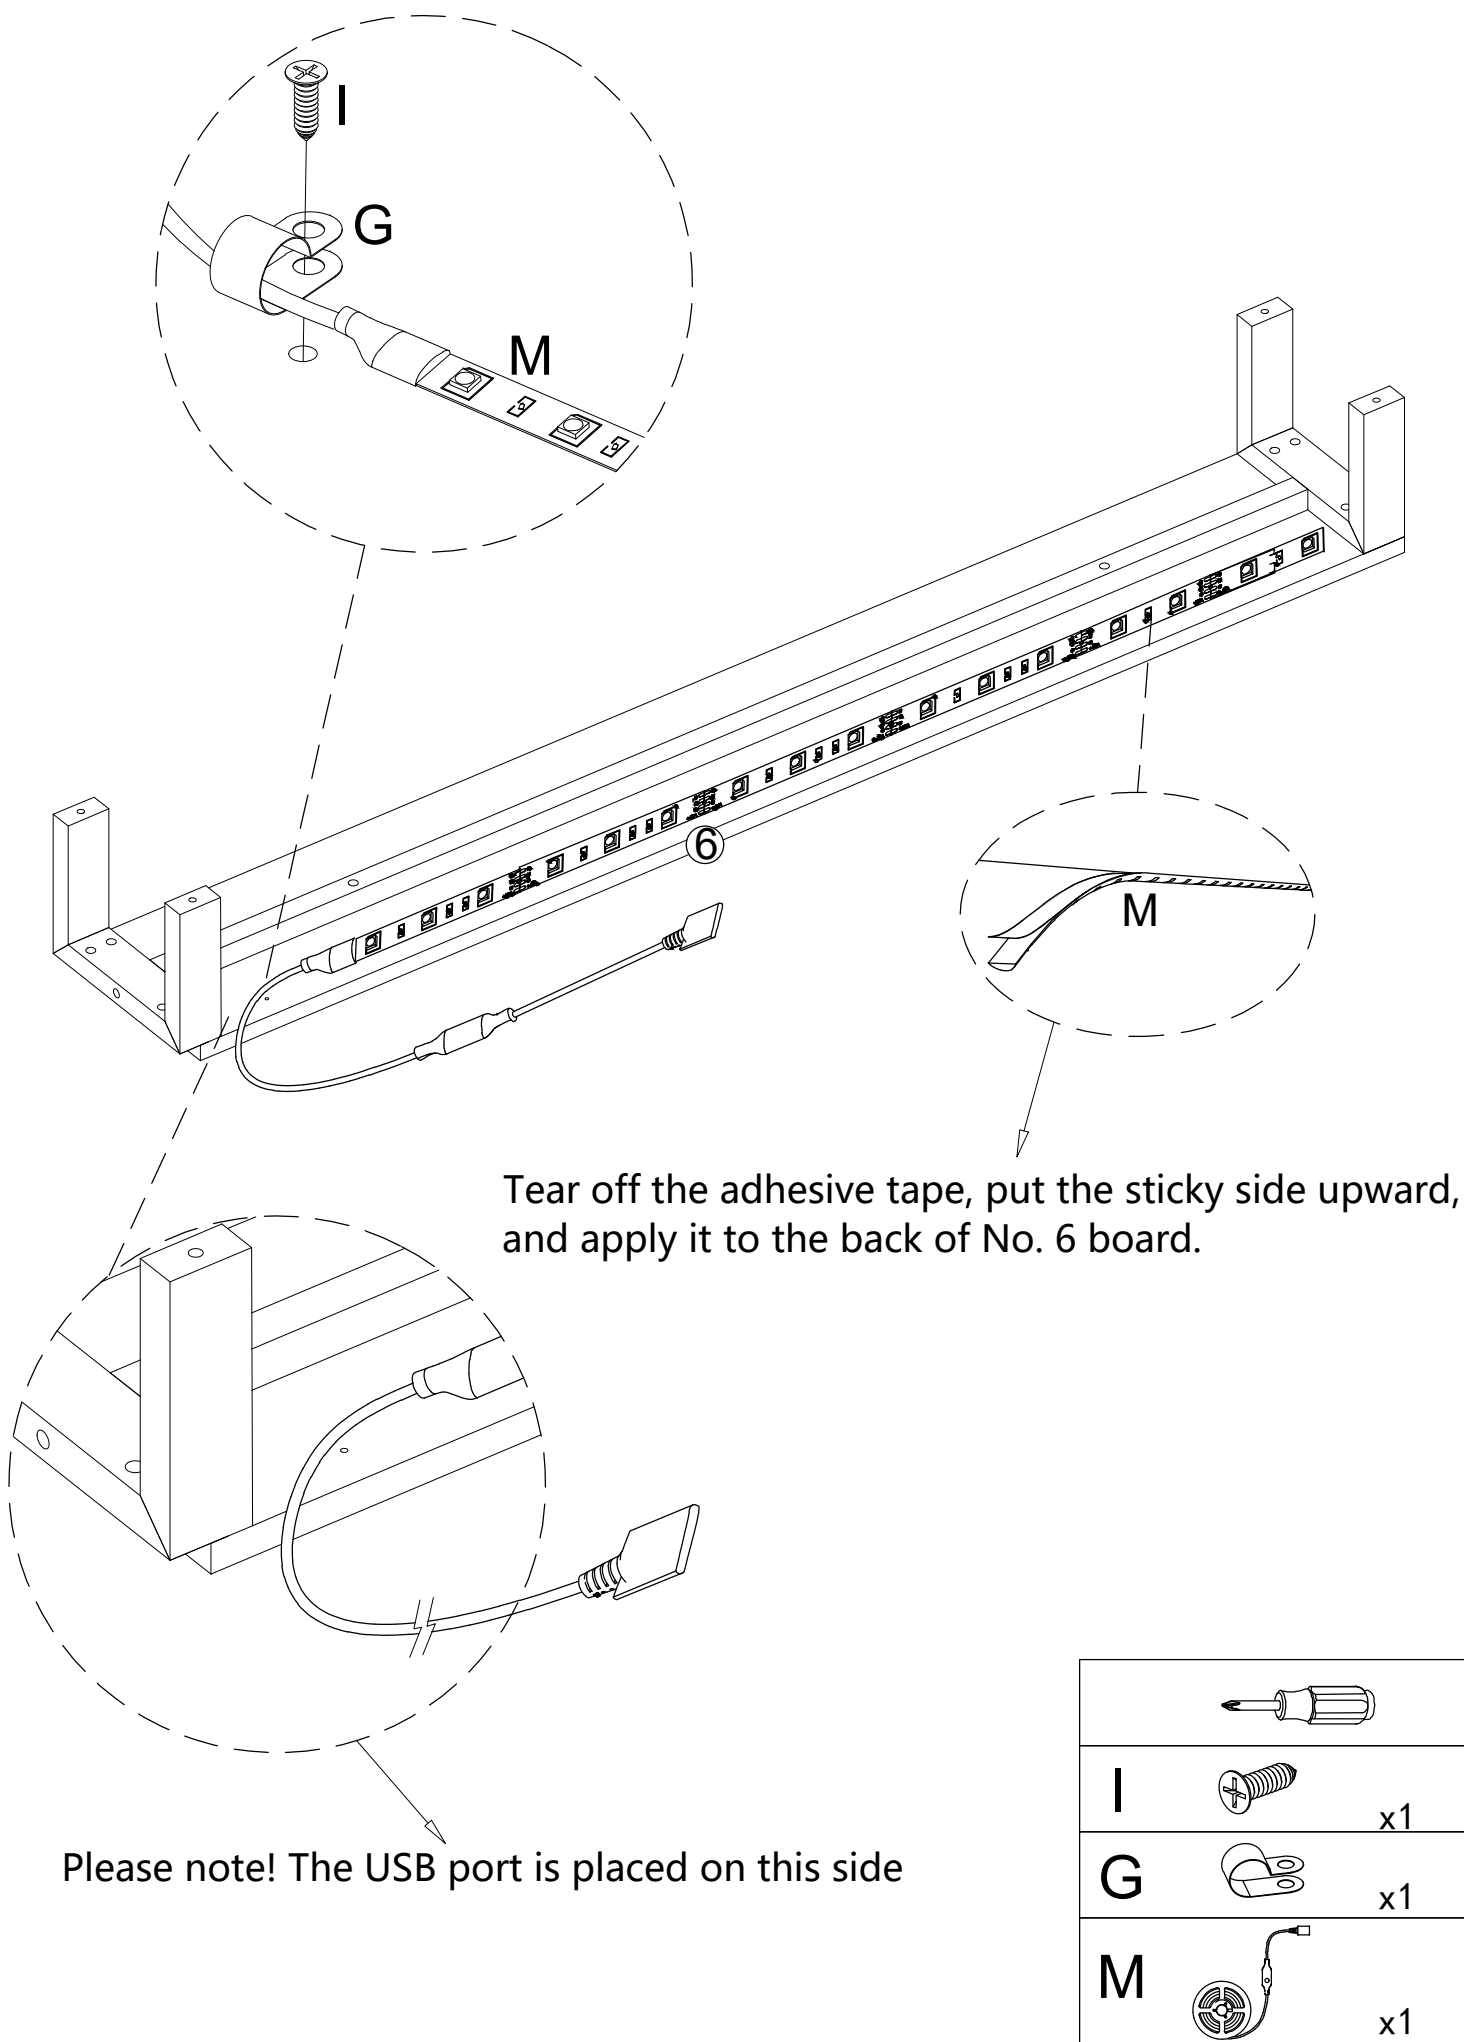


STEP 4

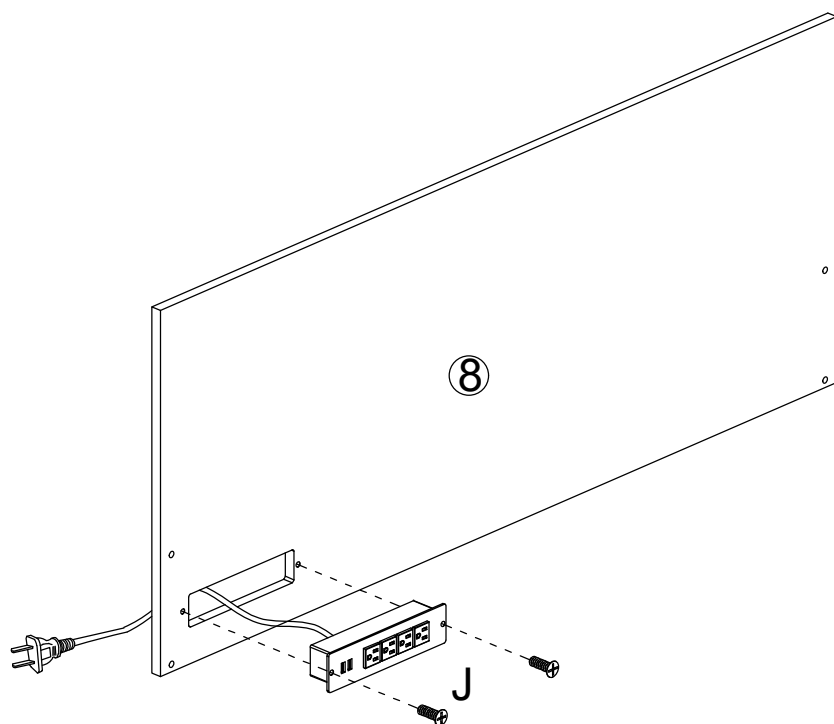

J		x1
J		x2

STEP 5


The iron pipe protrudes on the same side as the electrical outlet

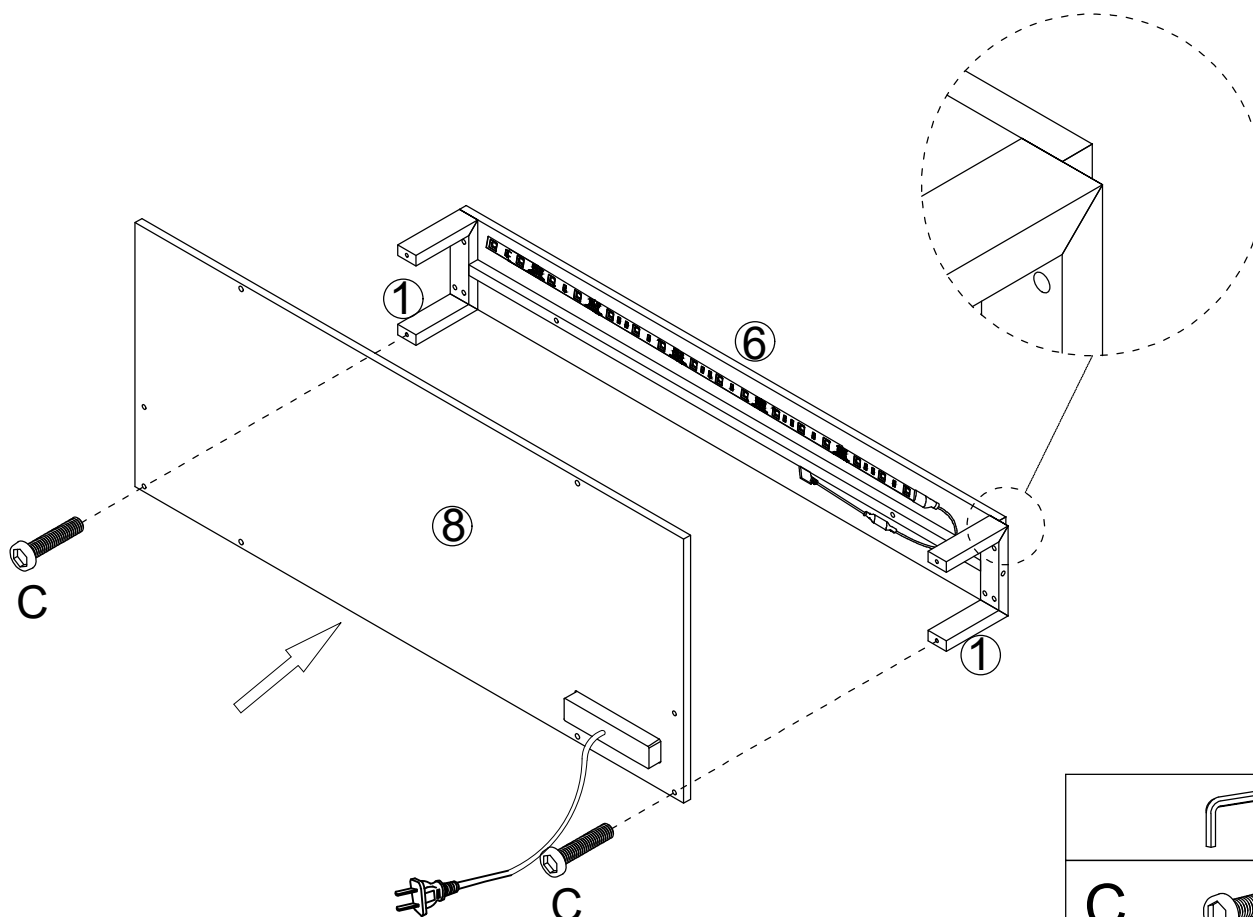

		4mm
C		x2


STEP 6


Note: Two #4 fittings with short side holes on the same side

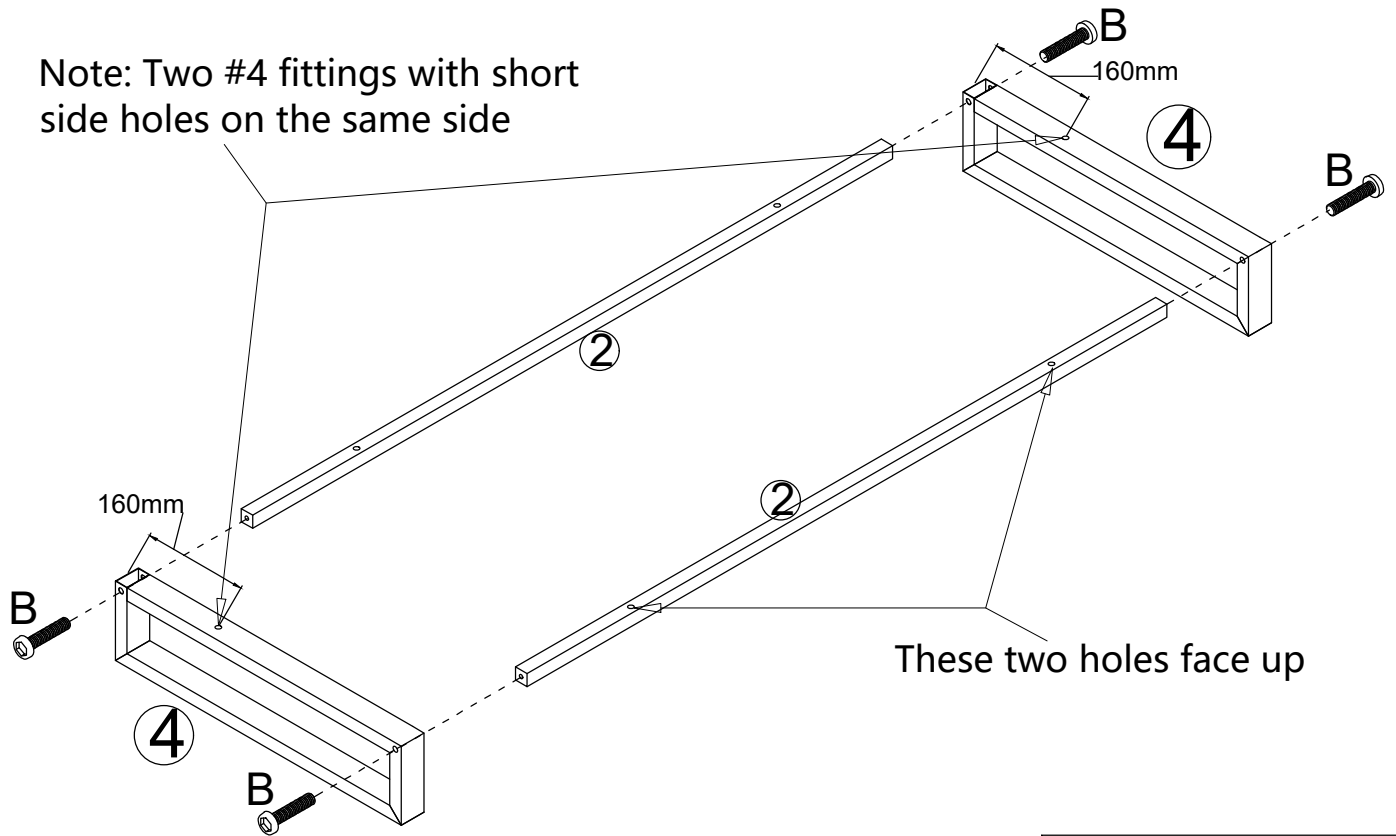


		4mm
B		x4

STEP 7

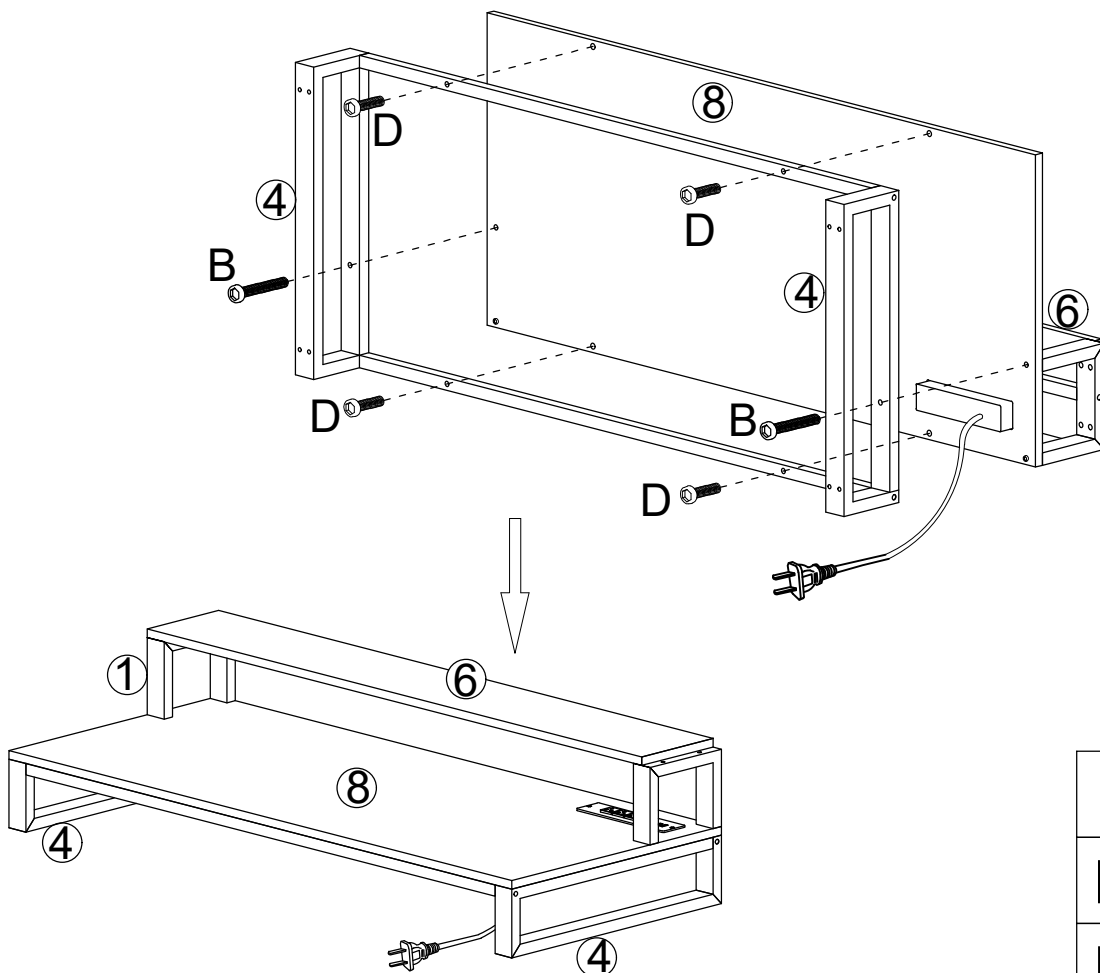


		4mm
D		x4
B		x2




STEP 8

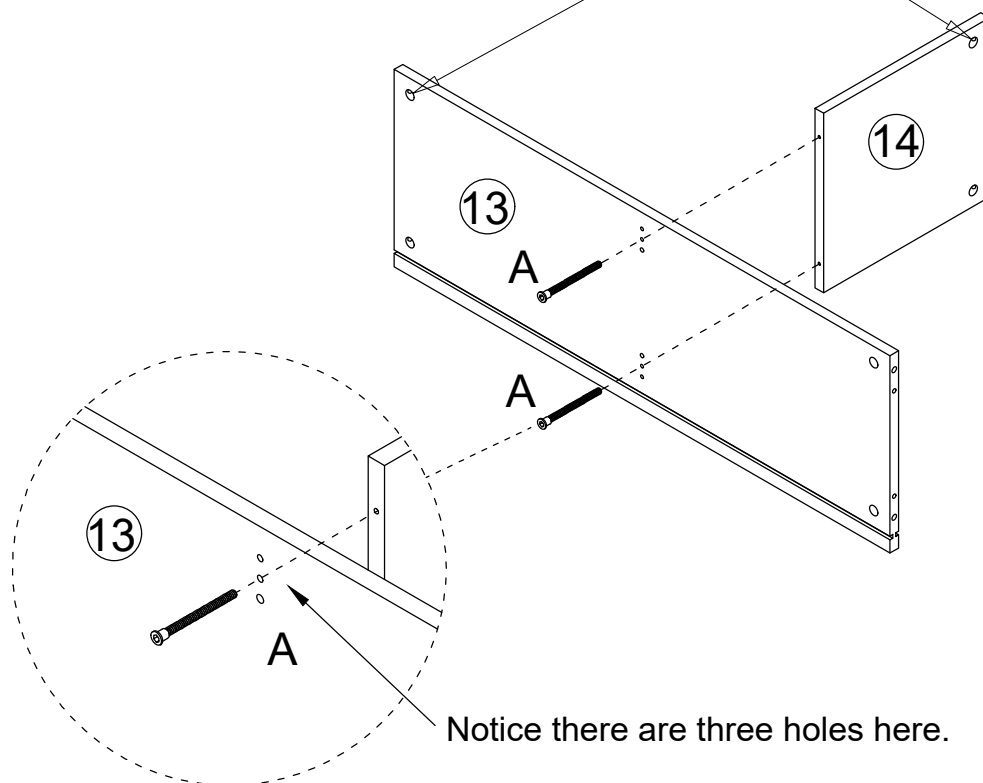

		3mm
A		x2

STEP 9


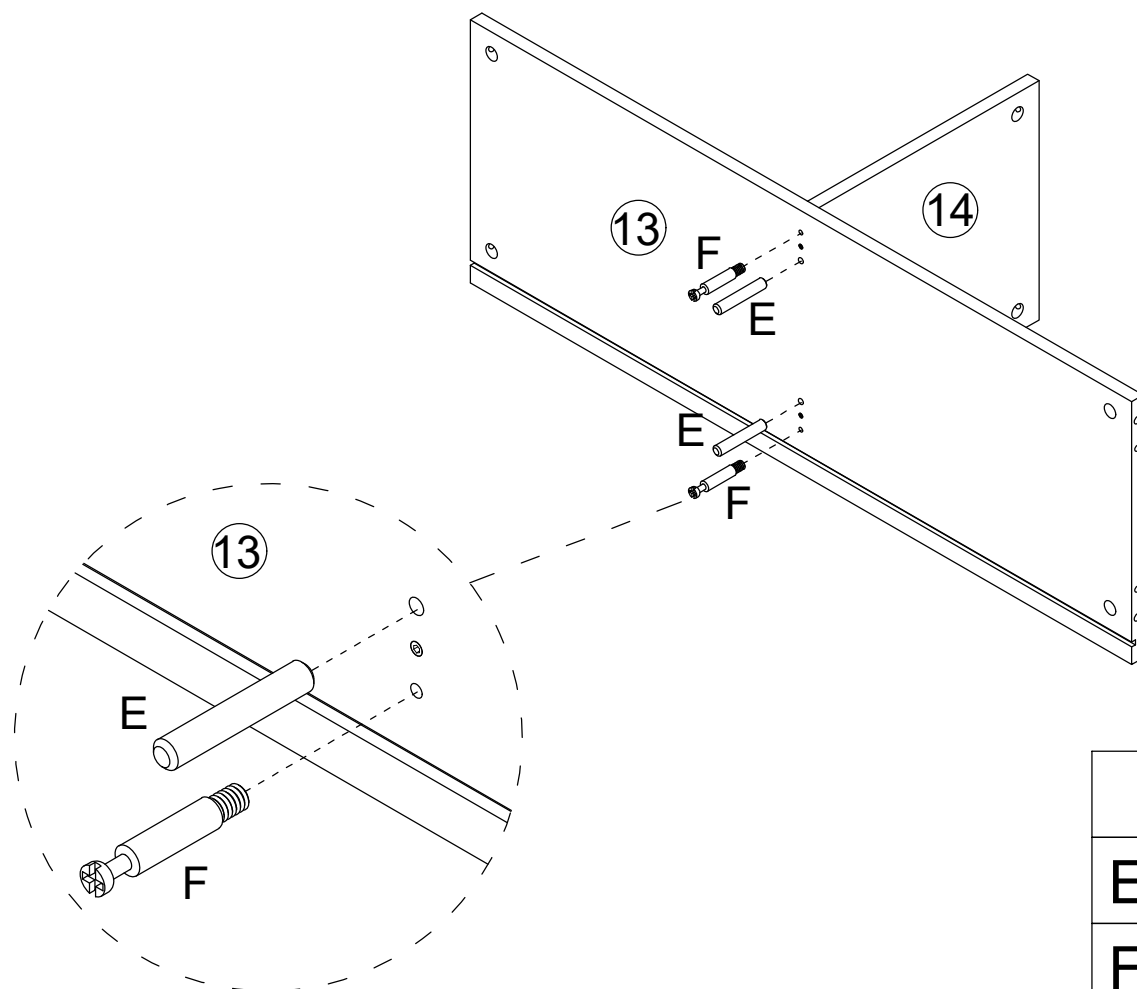


		
E		x2
F		x2

STEP 10



Pay attention to the orientation of the holes

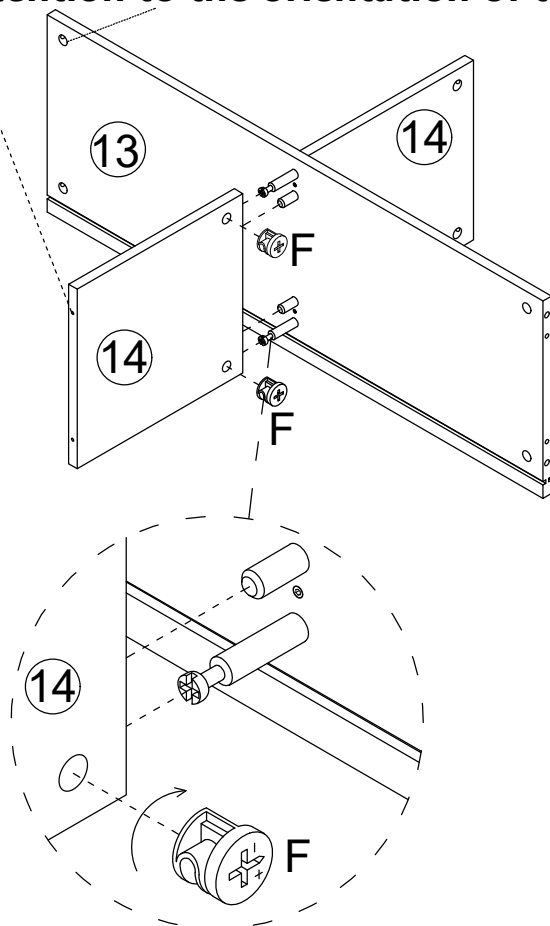


F




x2

STEP 11

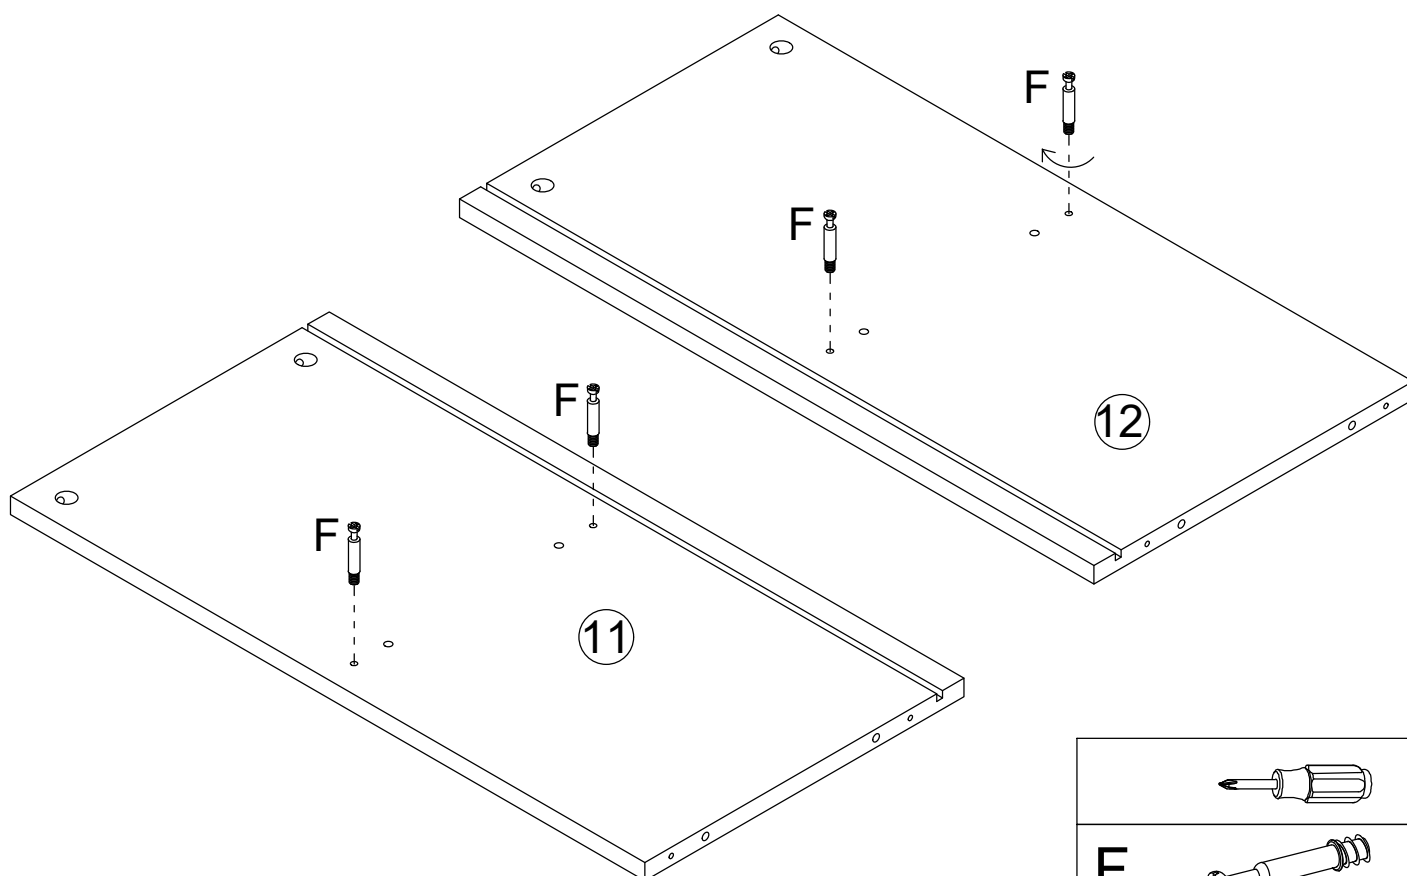


F




x4

STEP 12


Attention! This hole is on the upper side

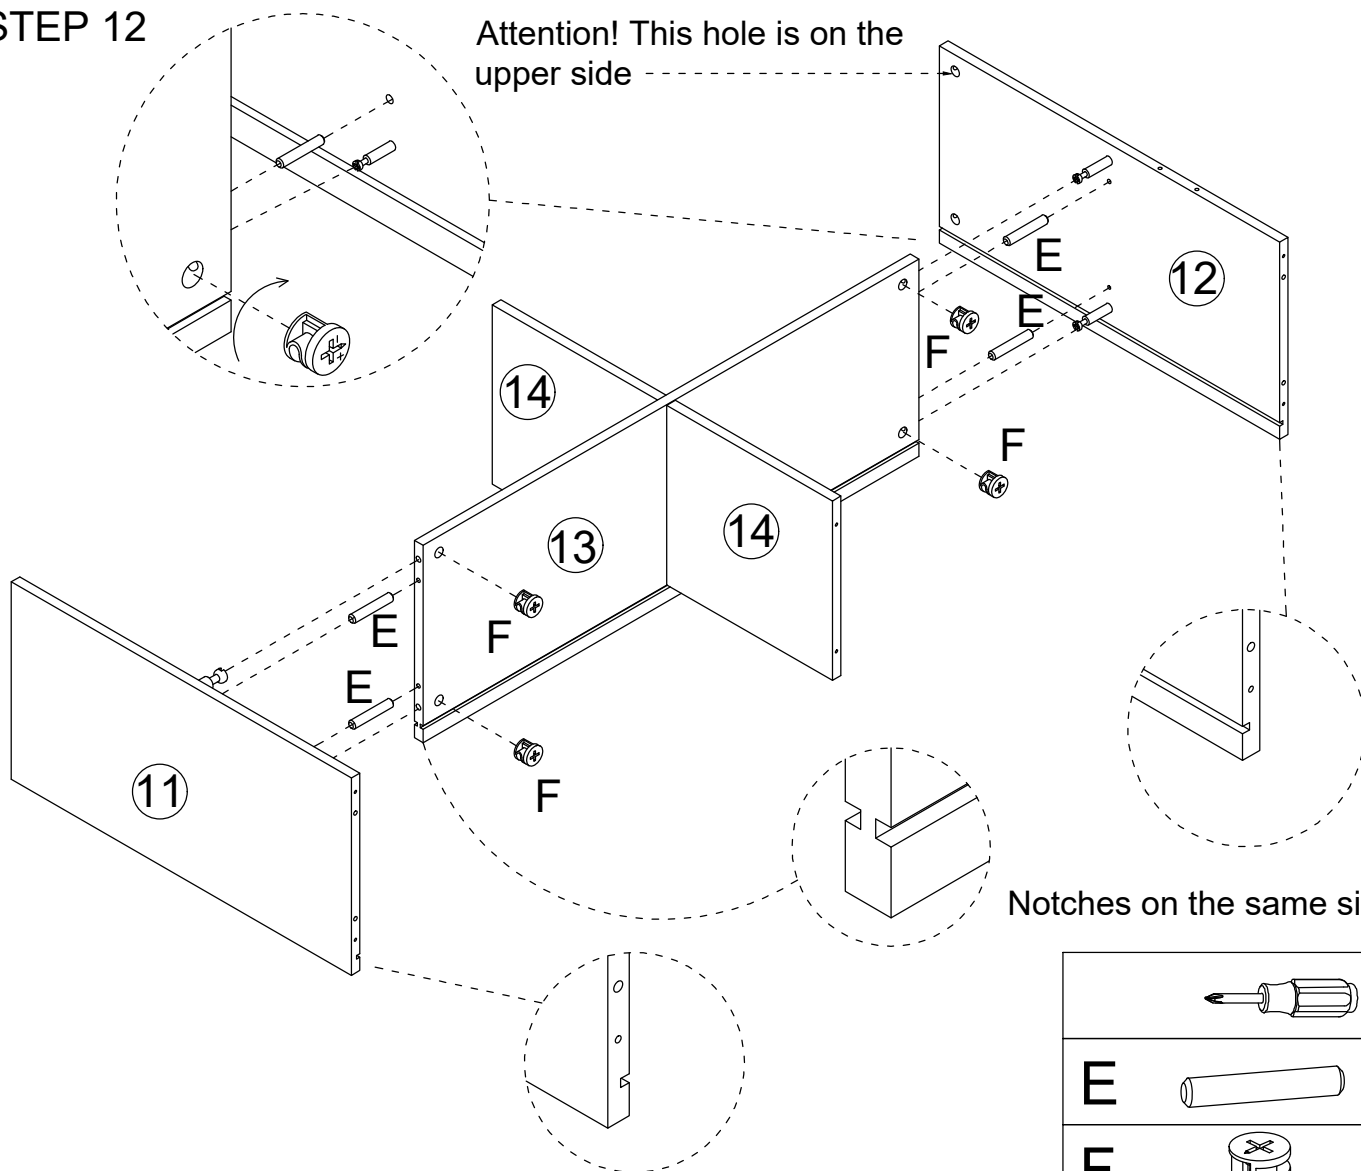

STEP 13

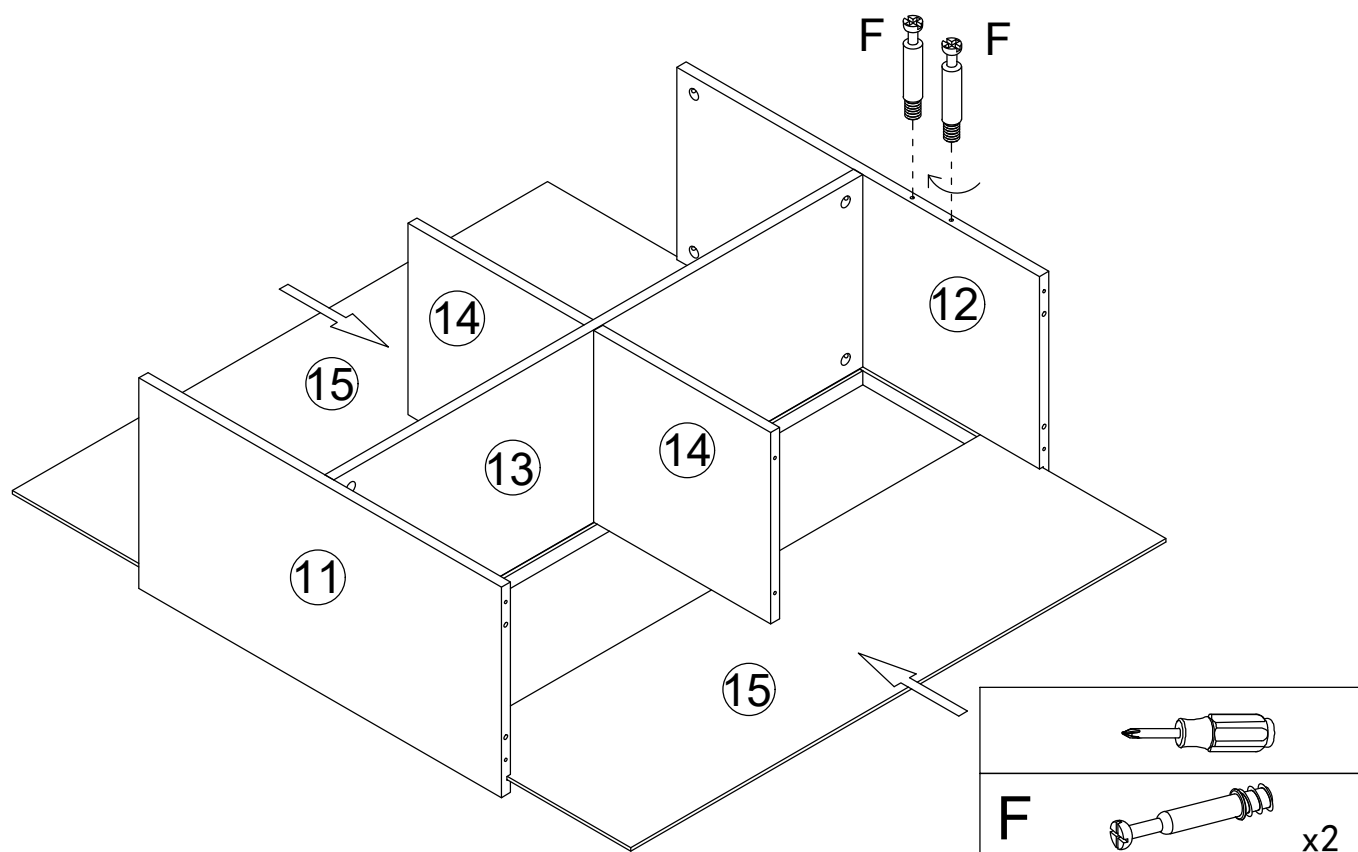

STEP 14

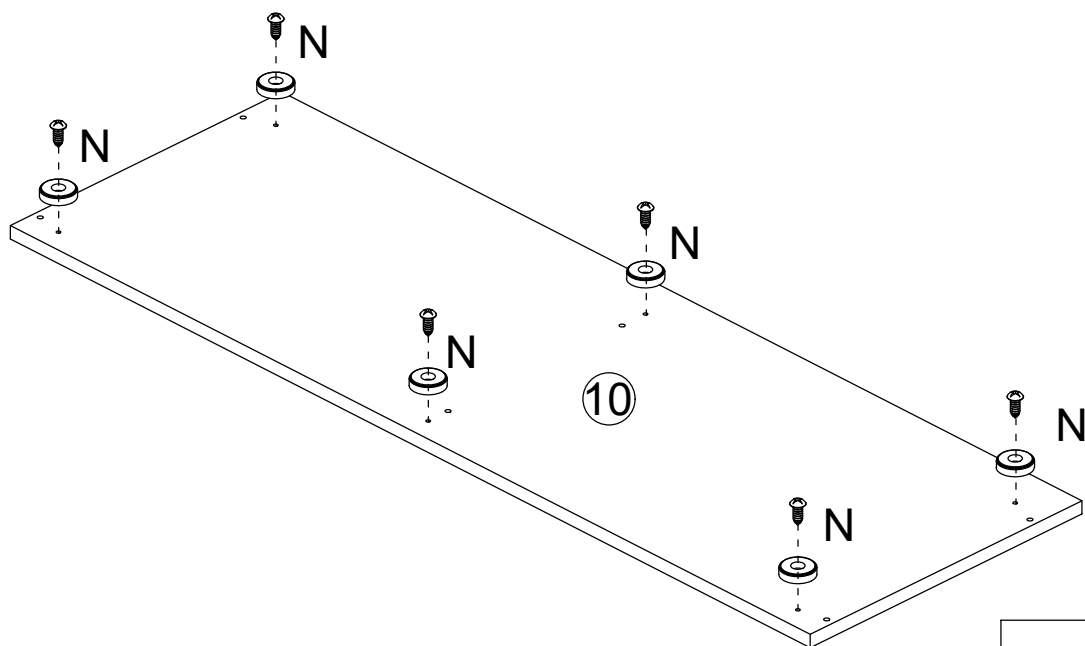


N



x6

STEP 15

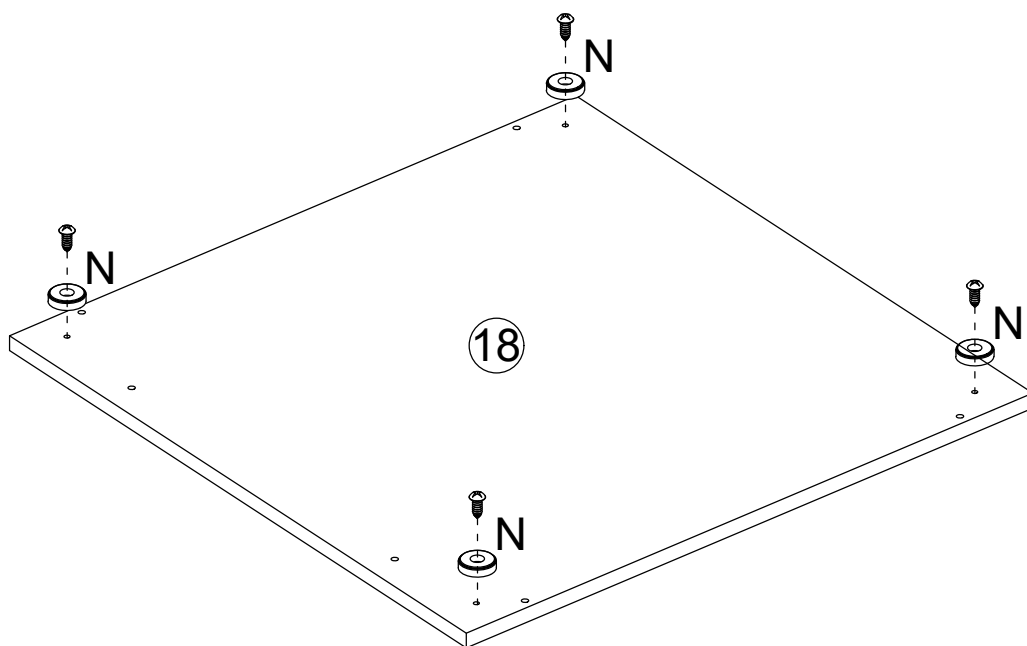


N




x4


STEP 16

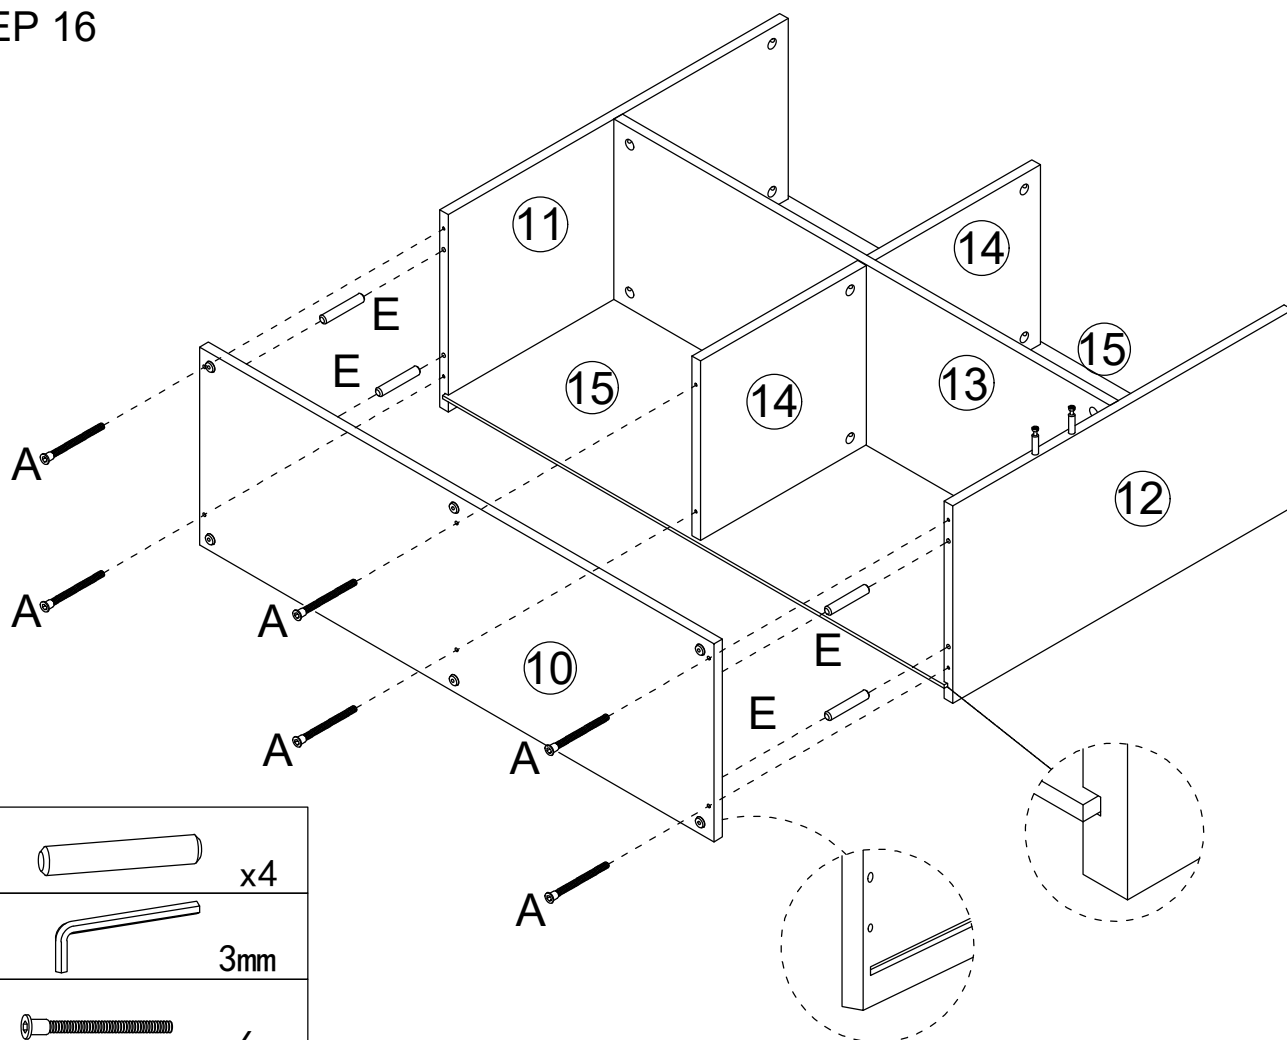


STEP 17

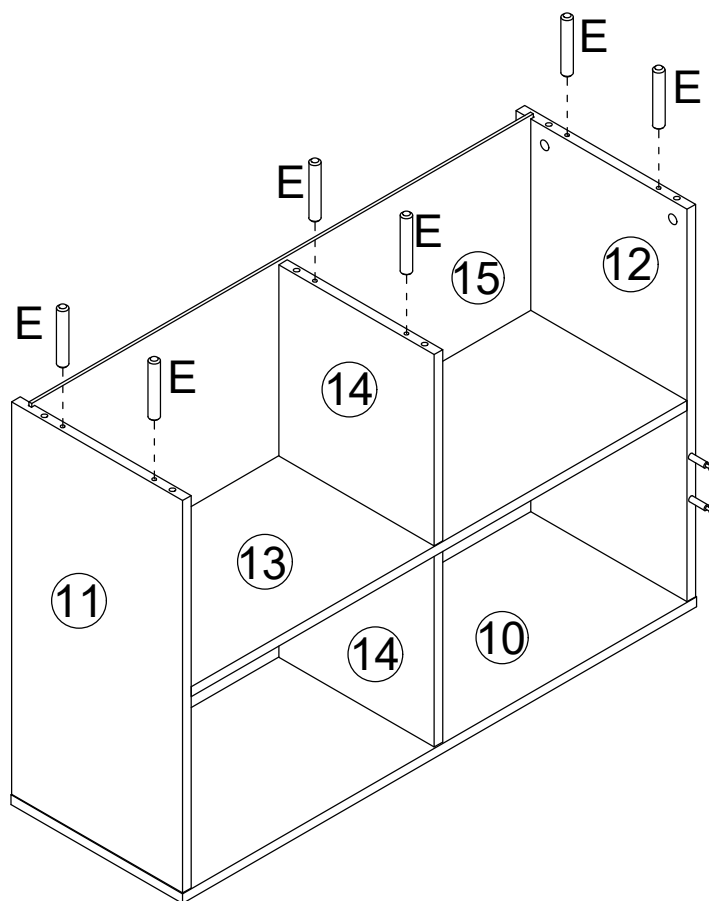

STEP 18

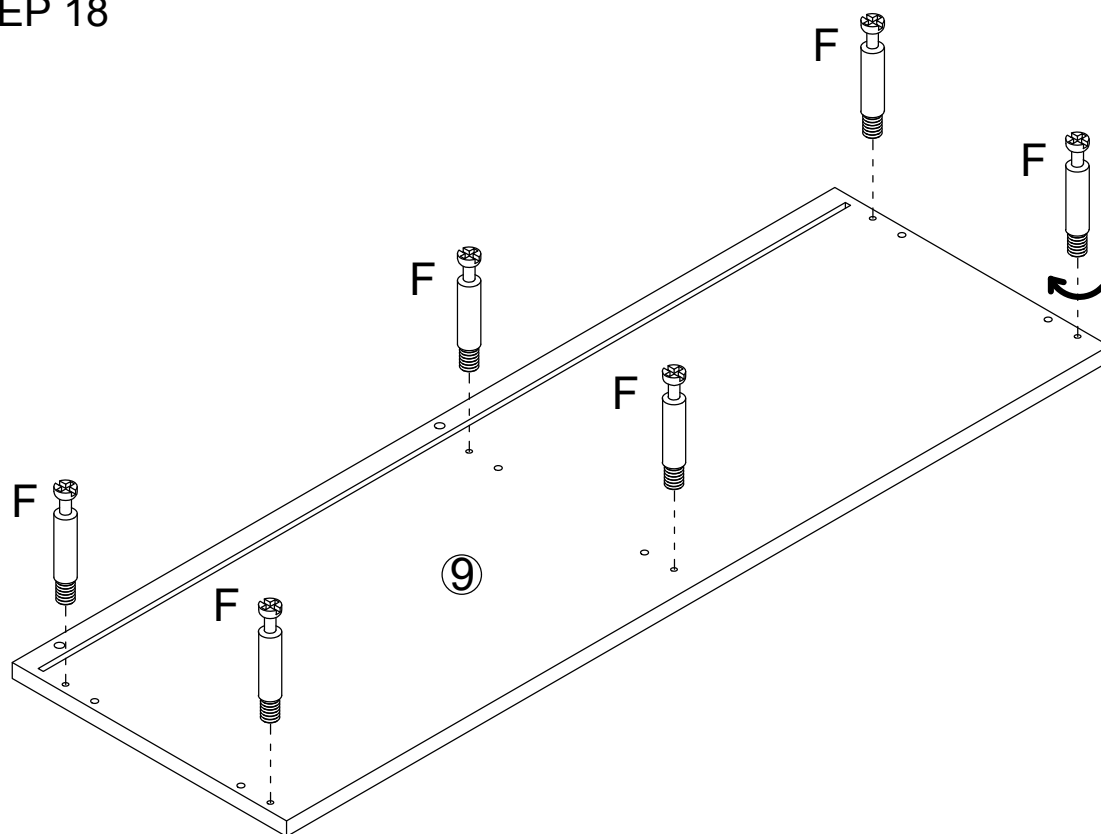


F



x6

STEP 19

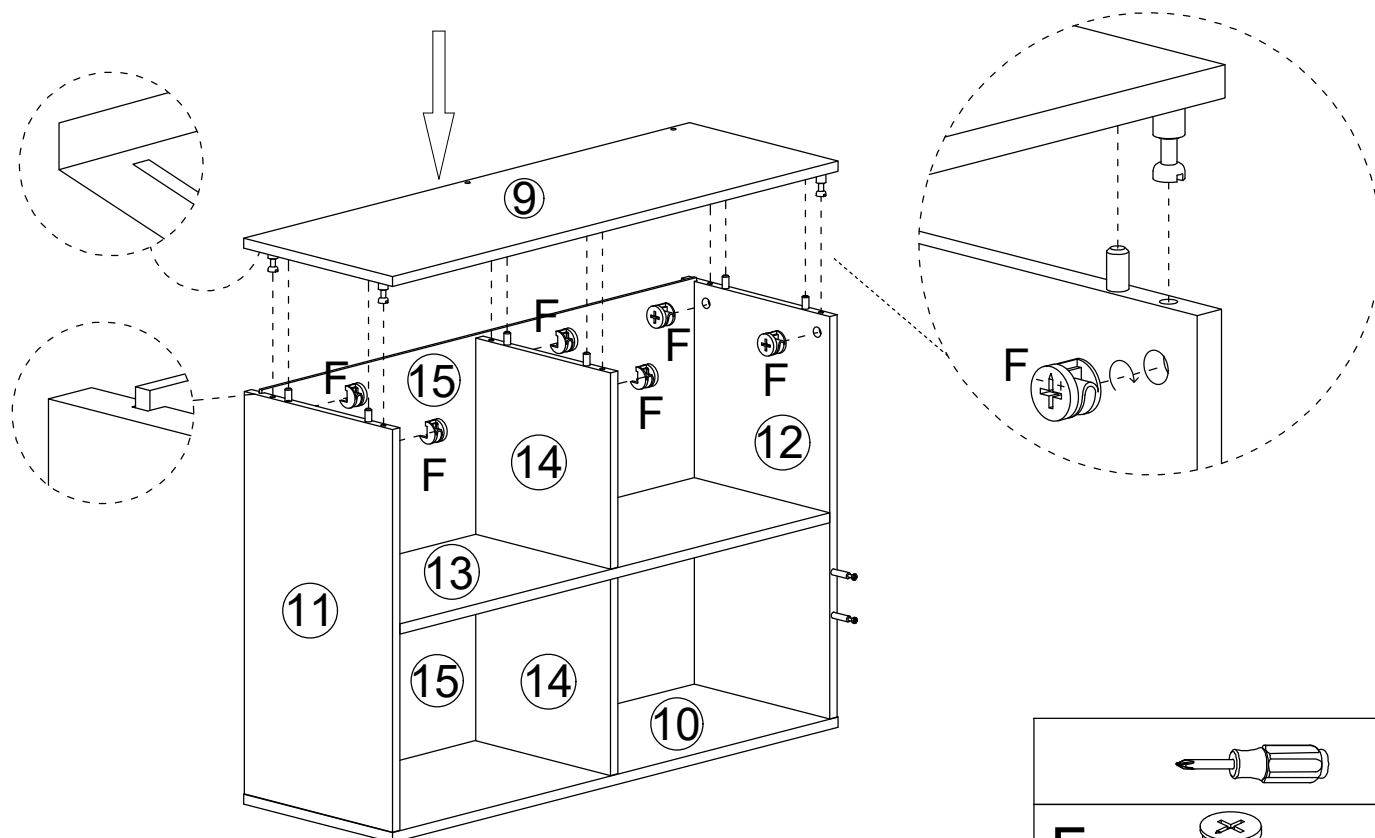




F



x6


STEP 20

The notch is in the back.

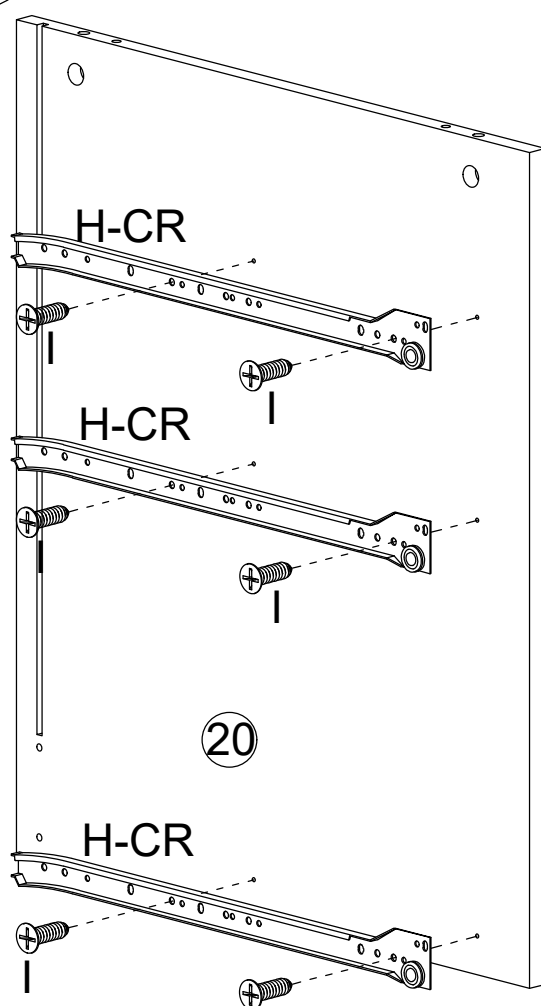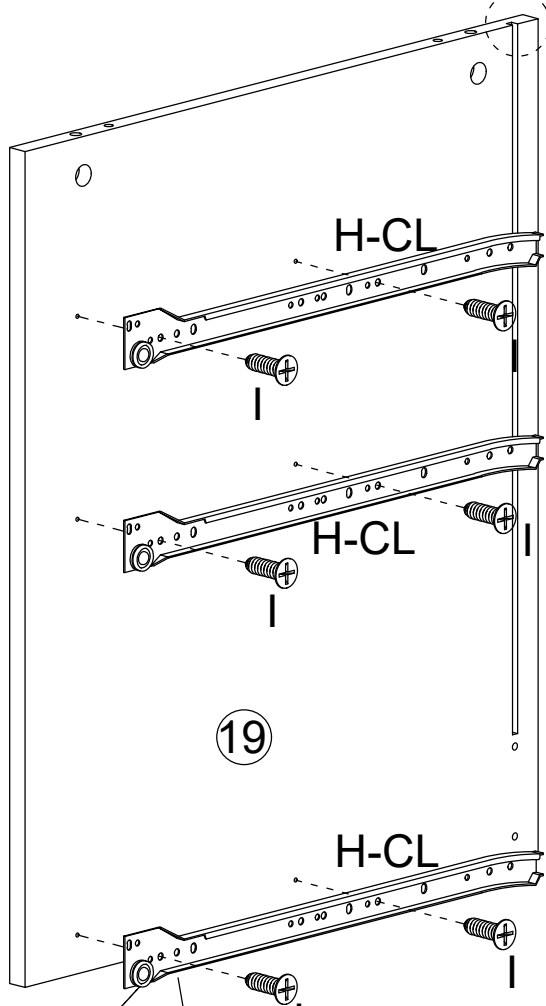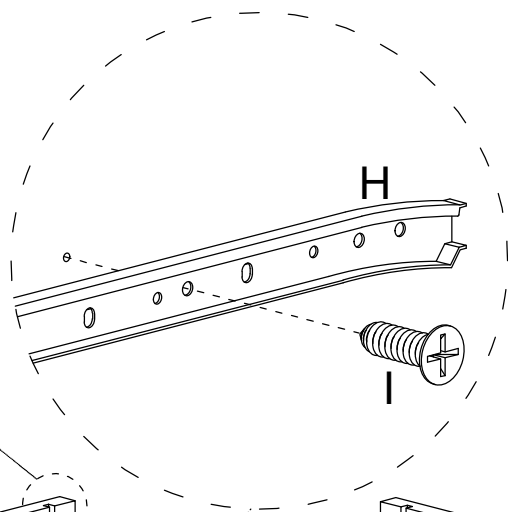


Wheels in front.

The marking is visible on the steel stamp of the slide.

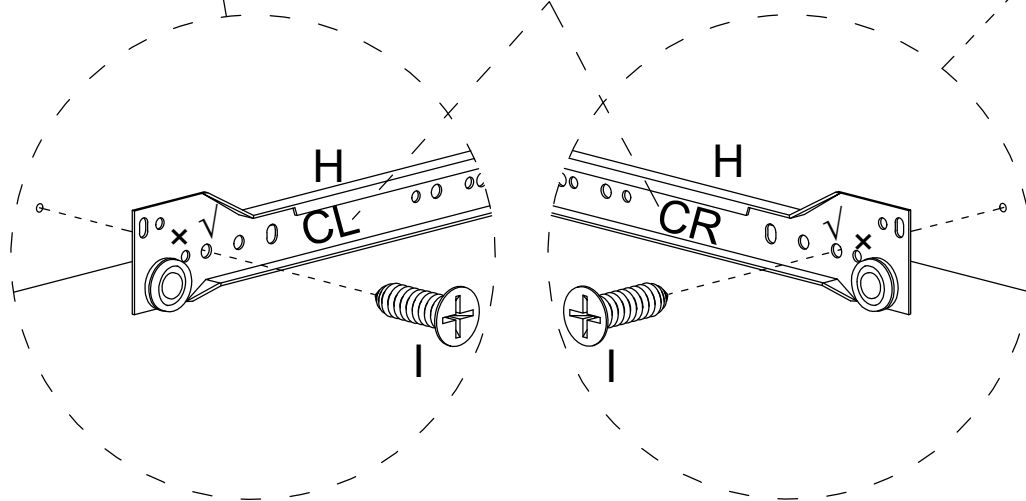


I		x12
H		x3


STEP 21

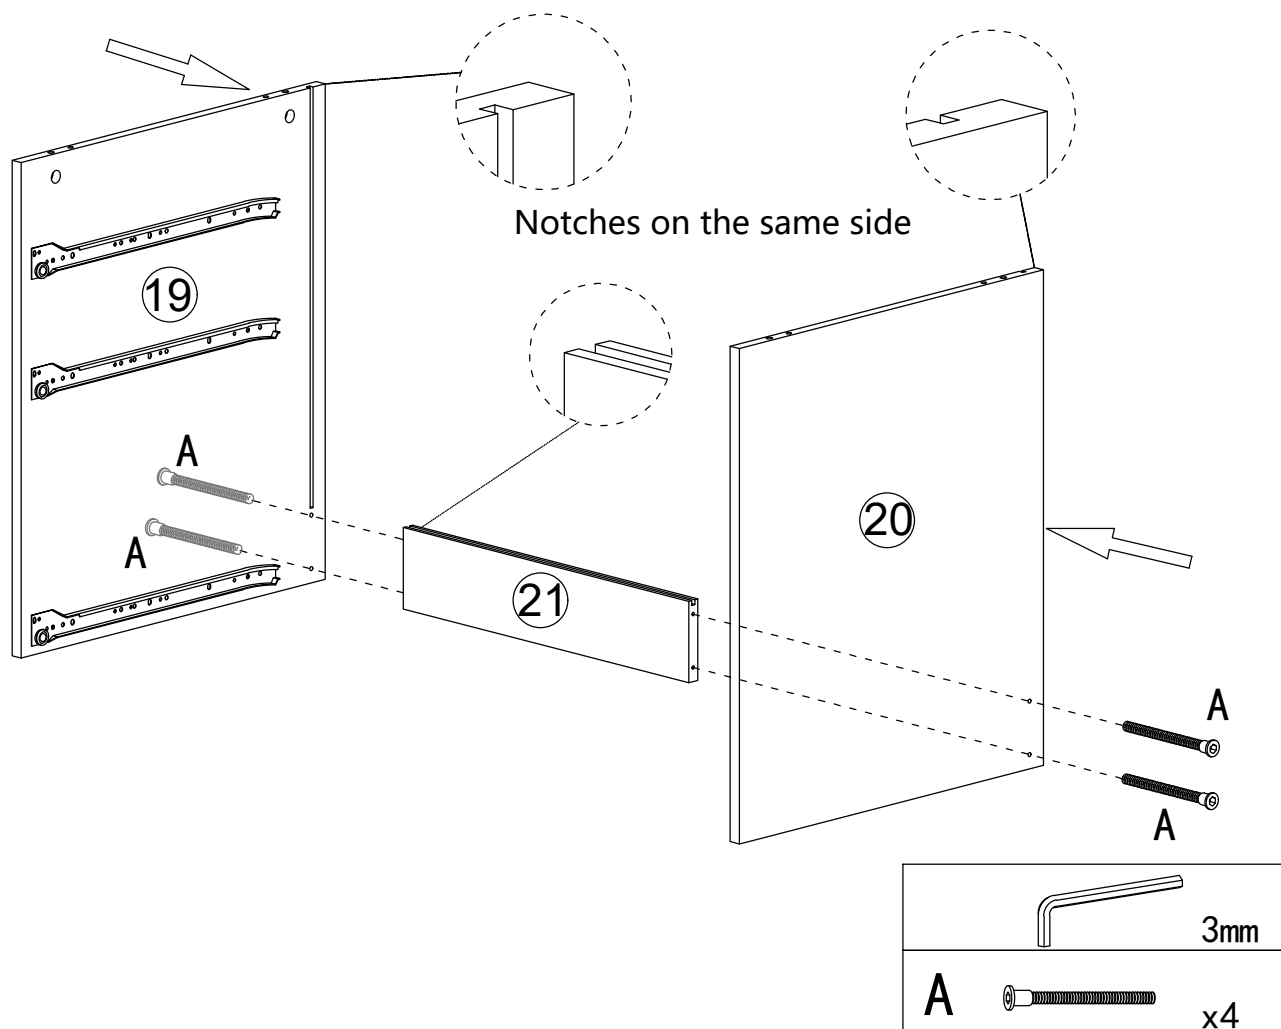


STEP 22

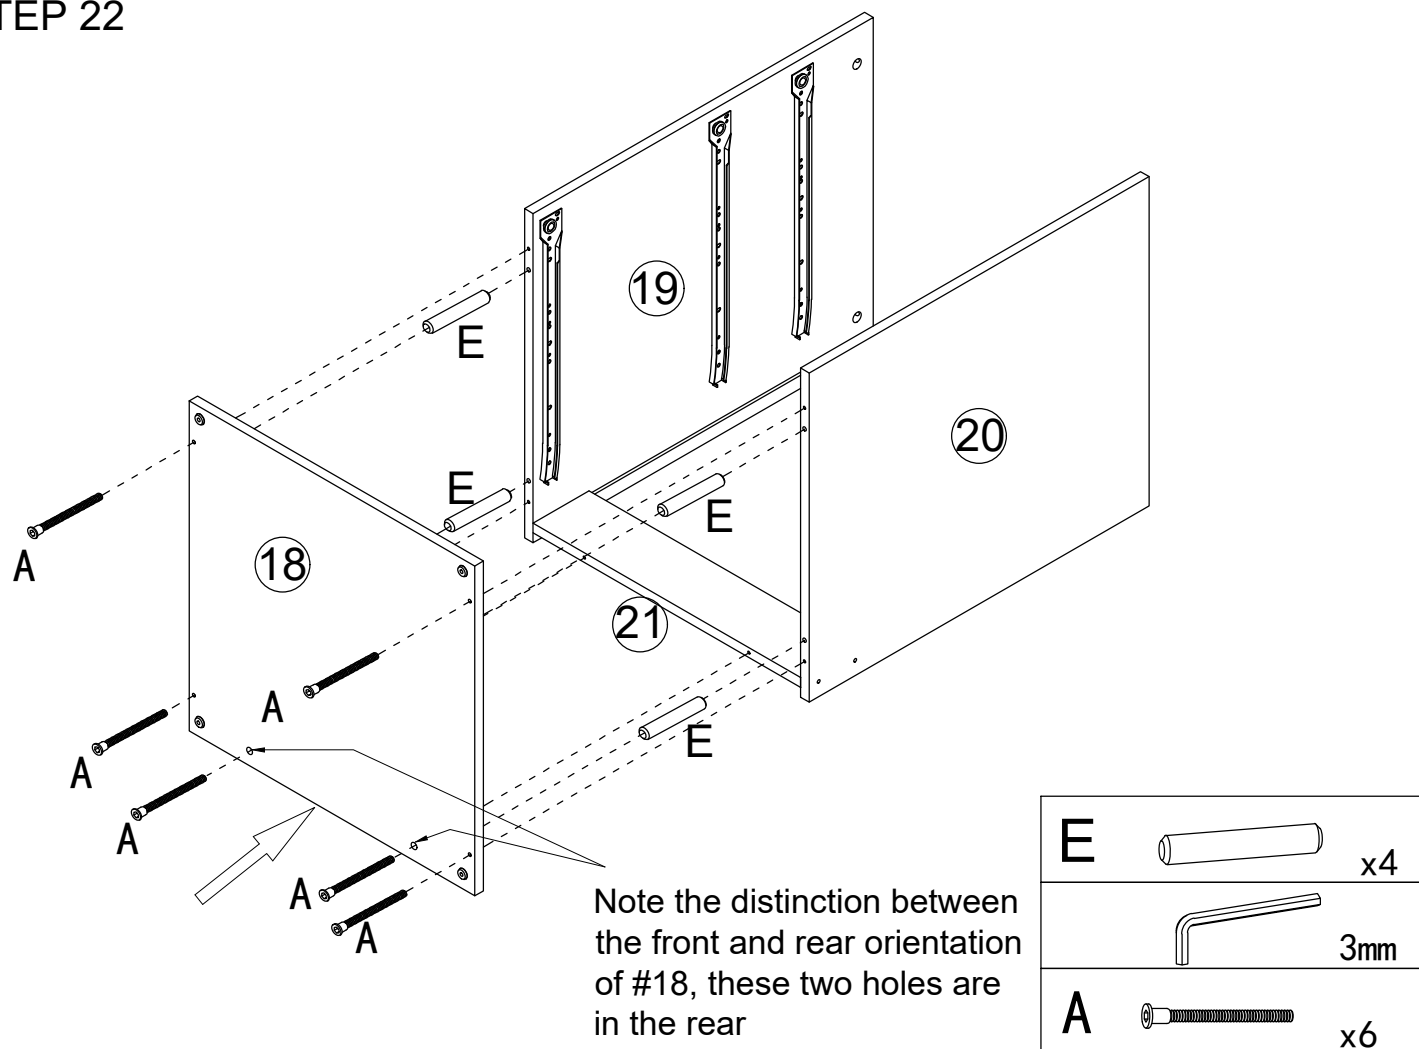


STEP 23

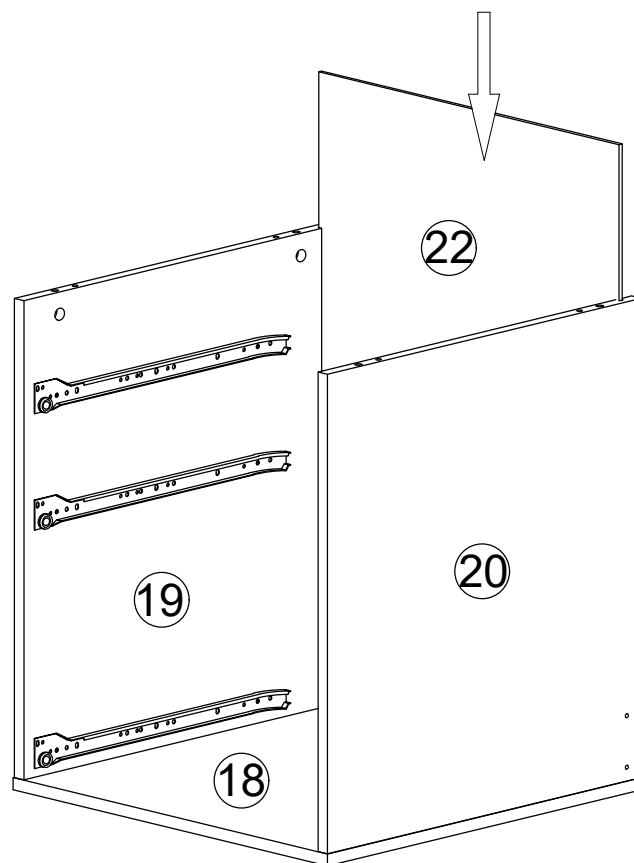

STEP 24


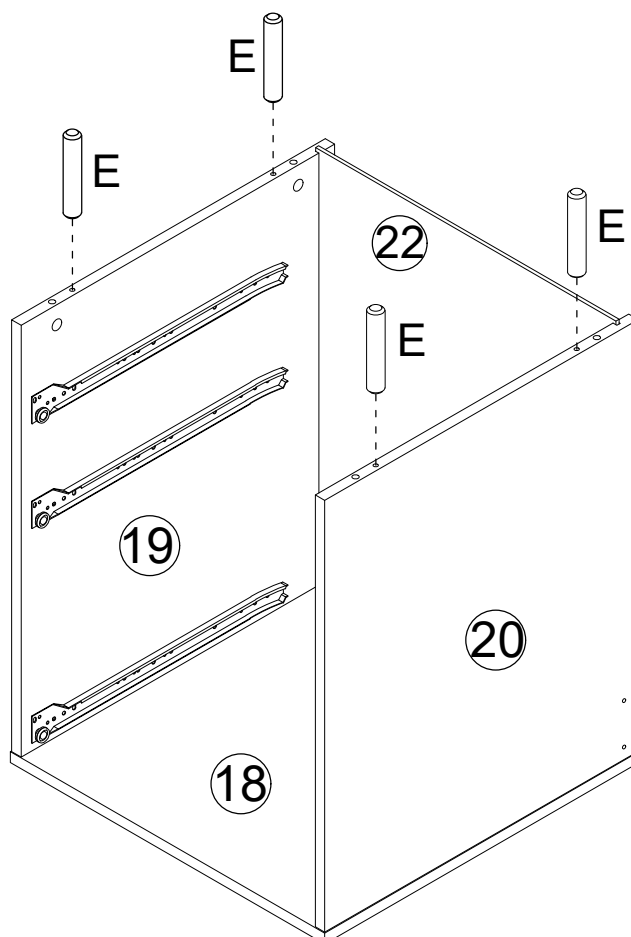


E






x4



STEP 25

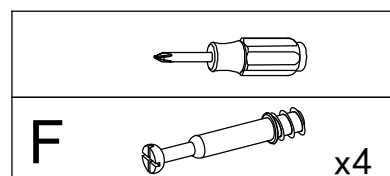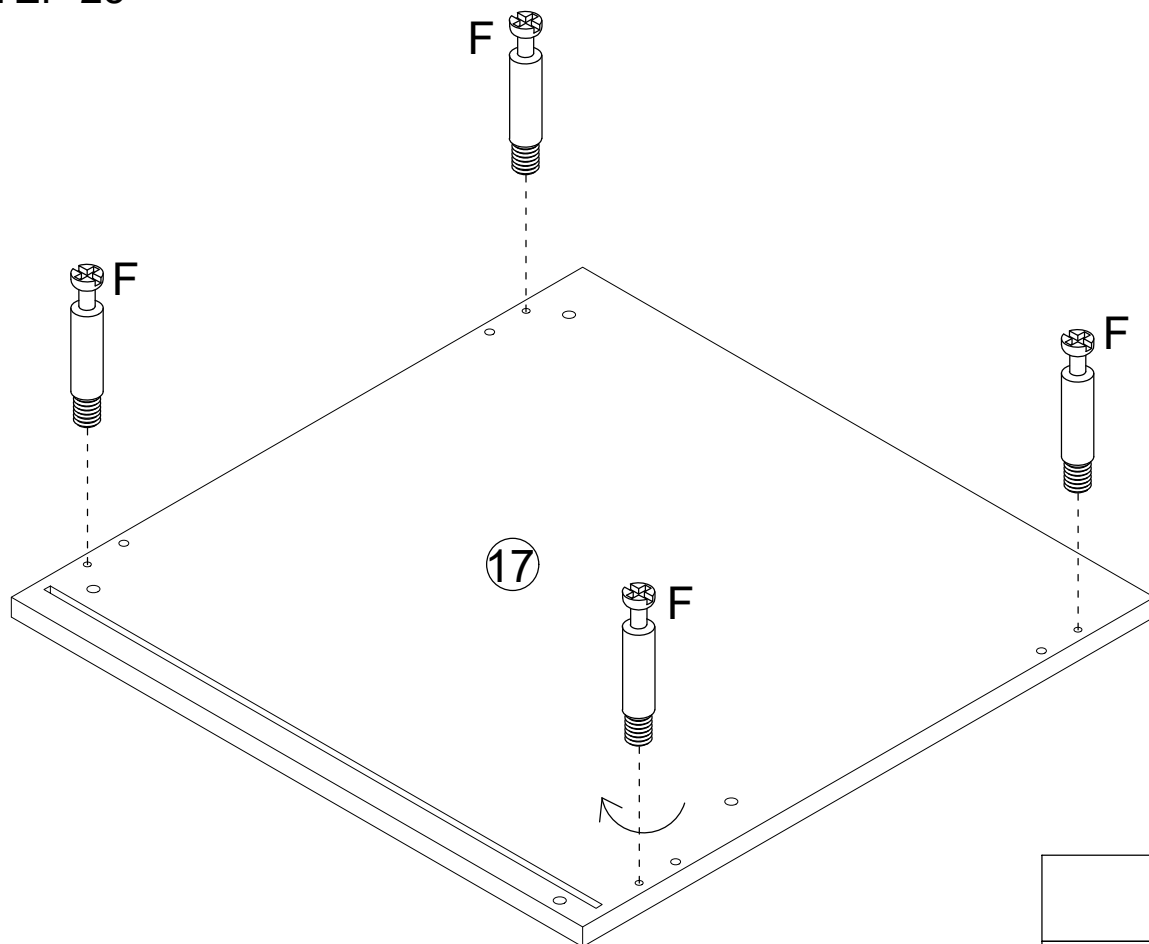



STEP 26

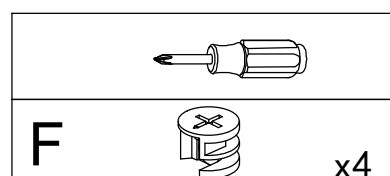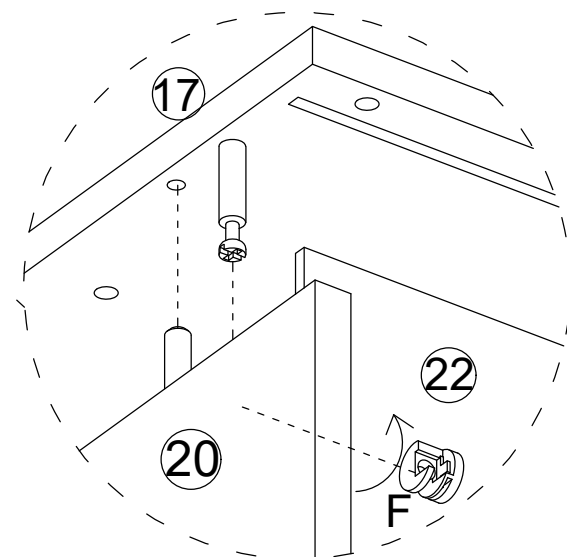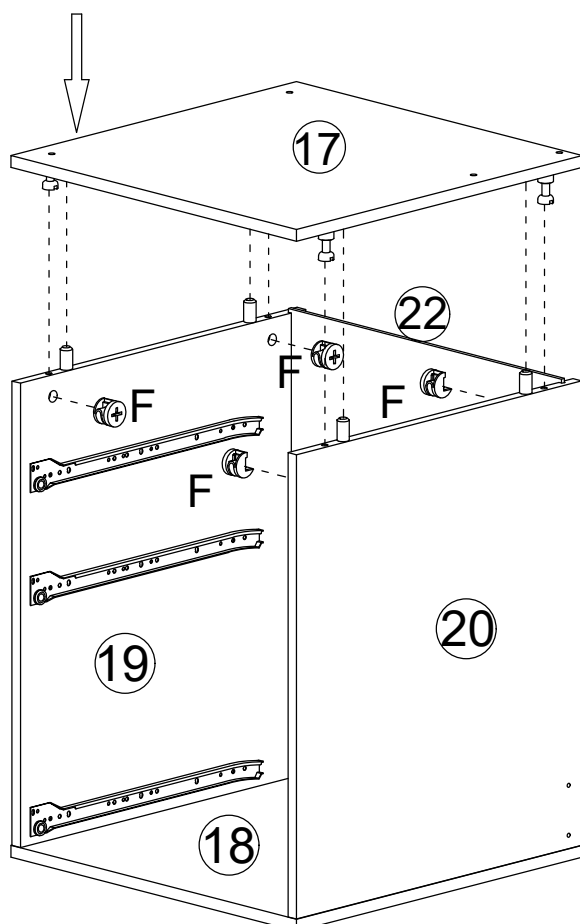




STEP 27

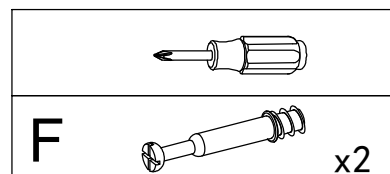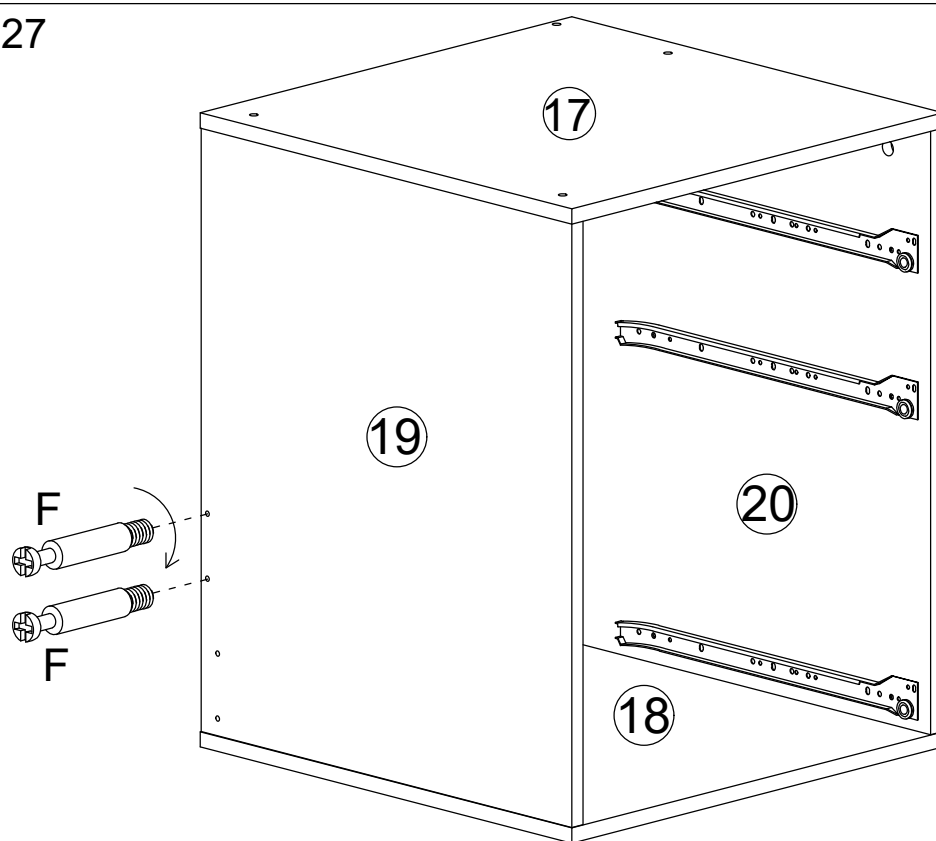





STEP 28

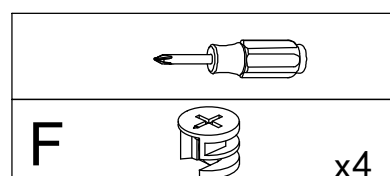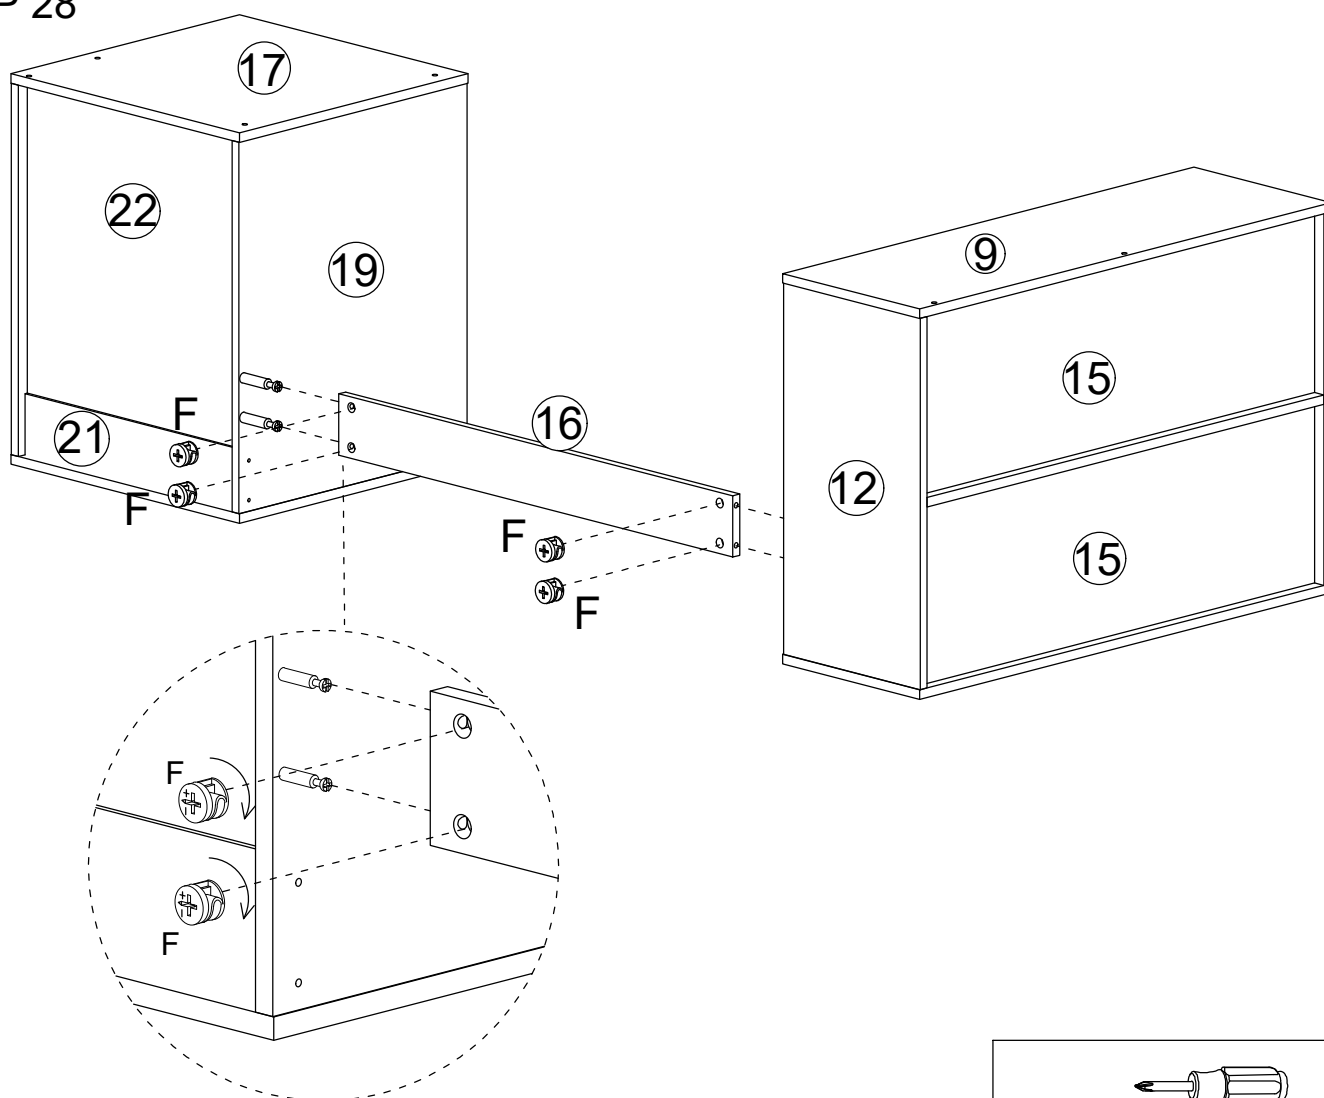


STEP 29

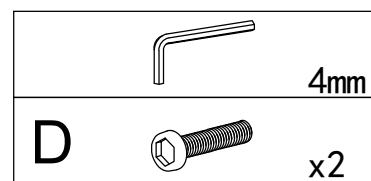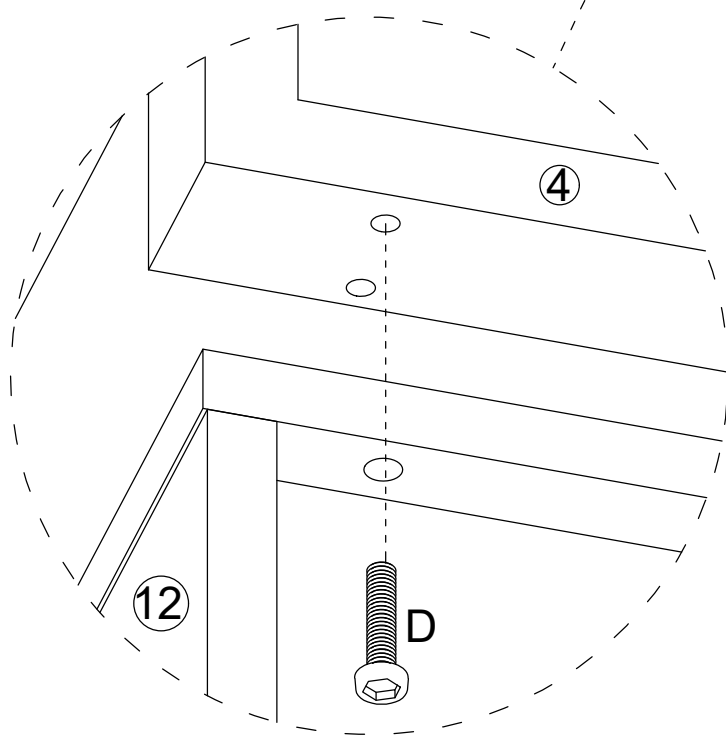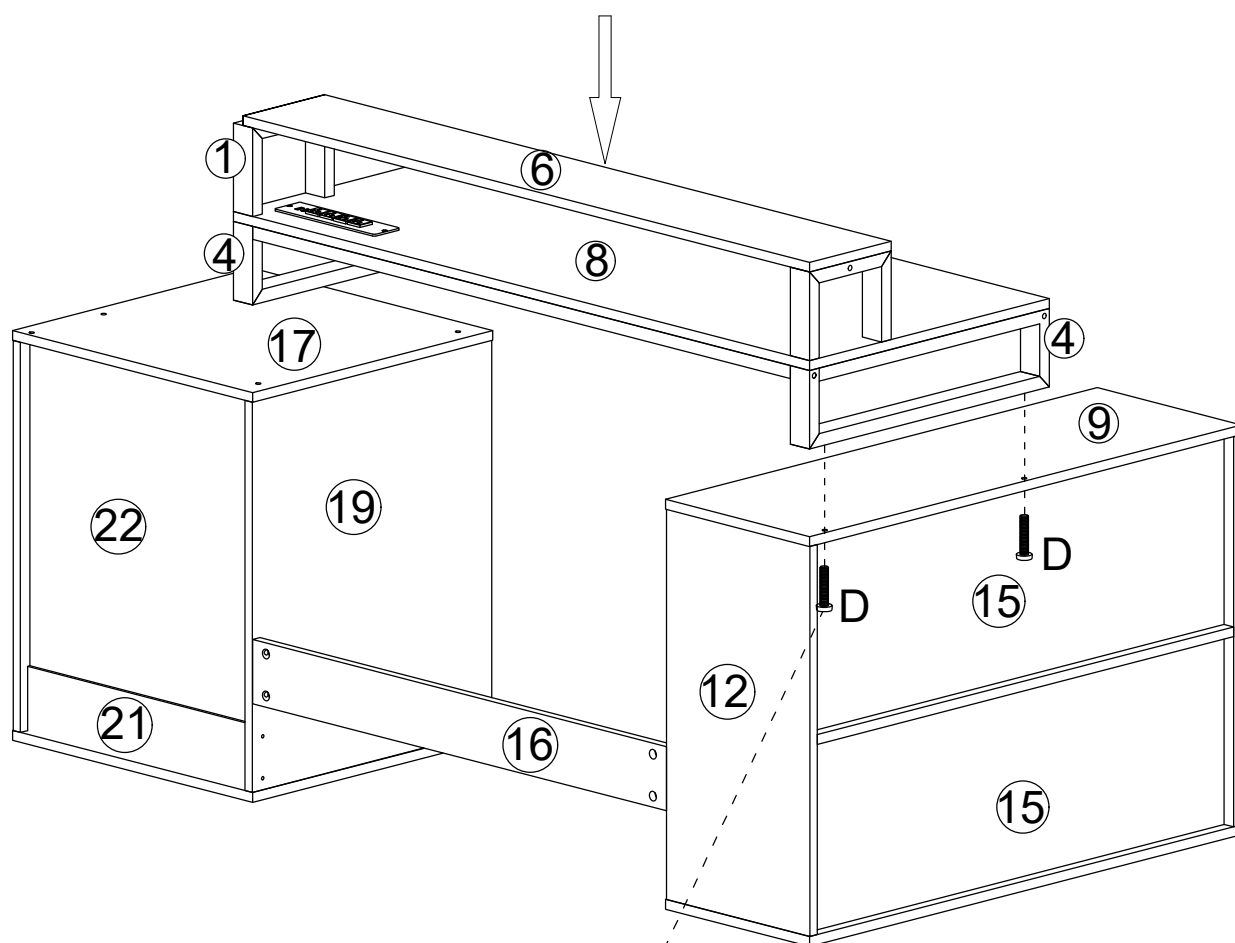

STEP 30

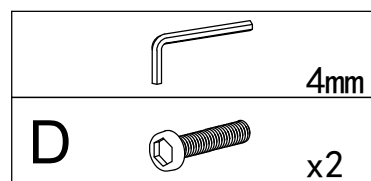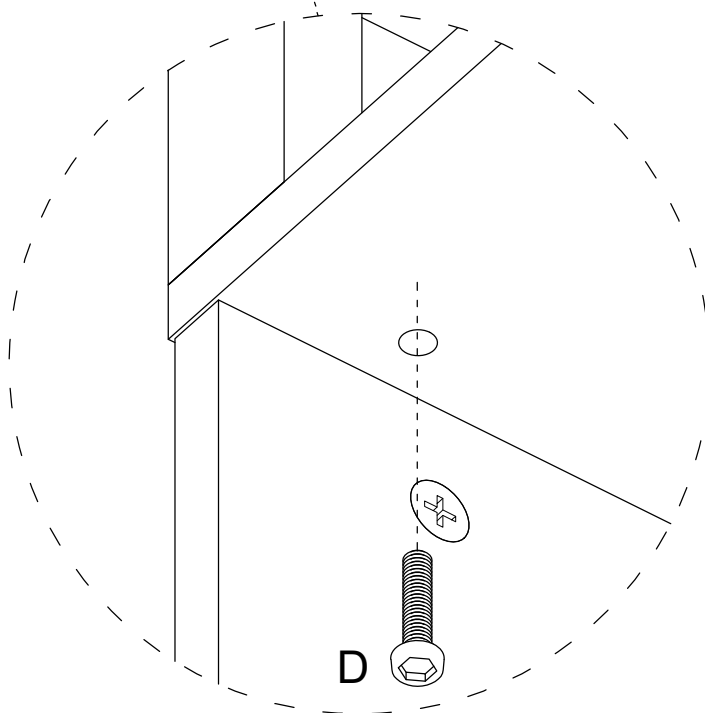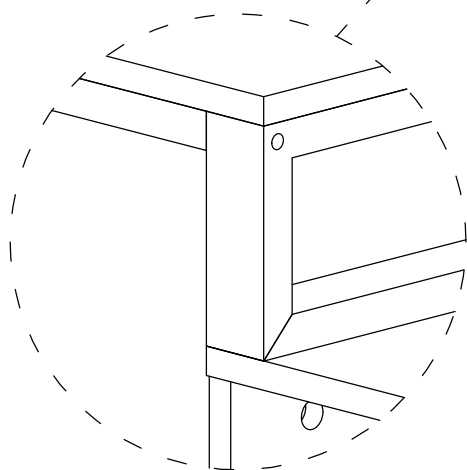
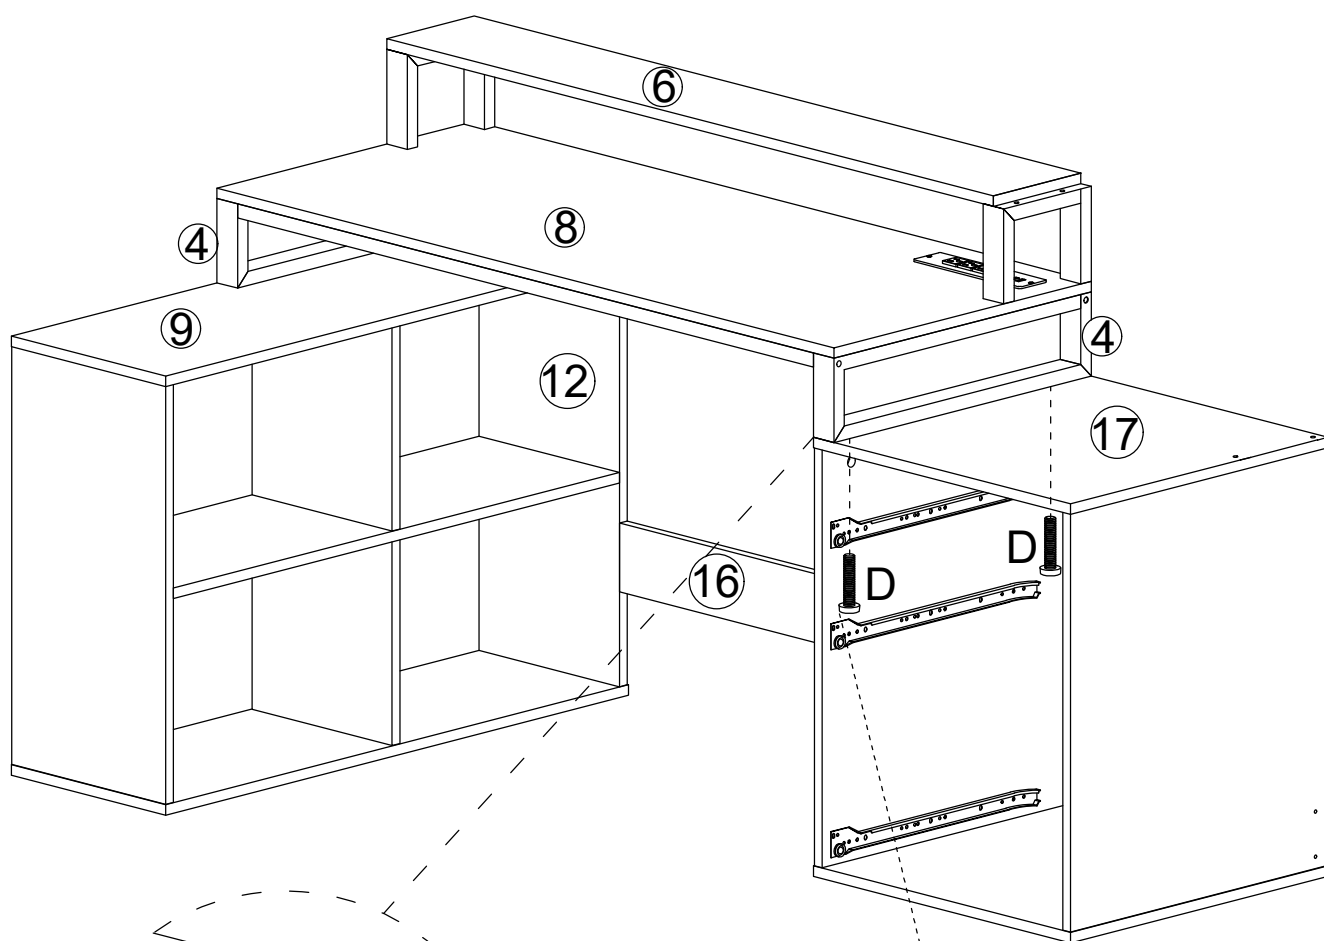


STEP 31



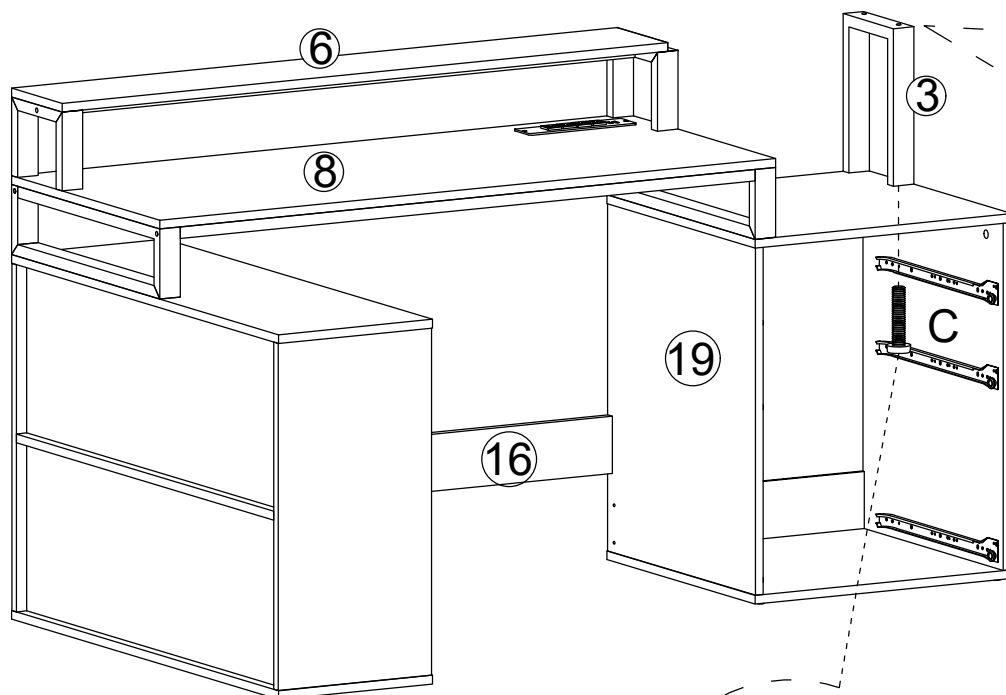


1cm



Please note: the hole for the #3 iron pipe is on the far right side

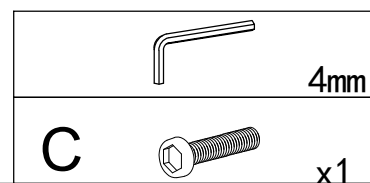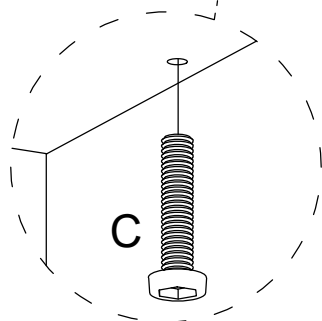



STEP 32

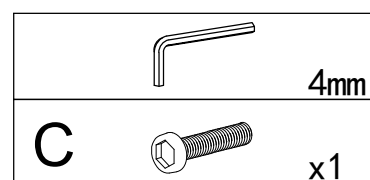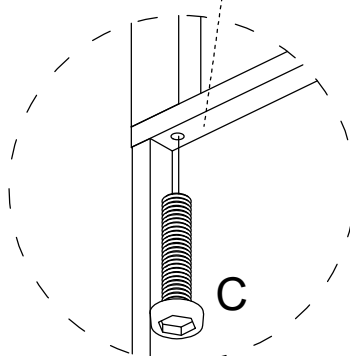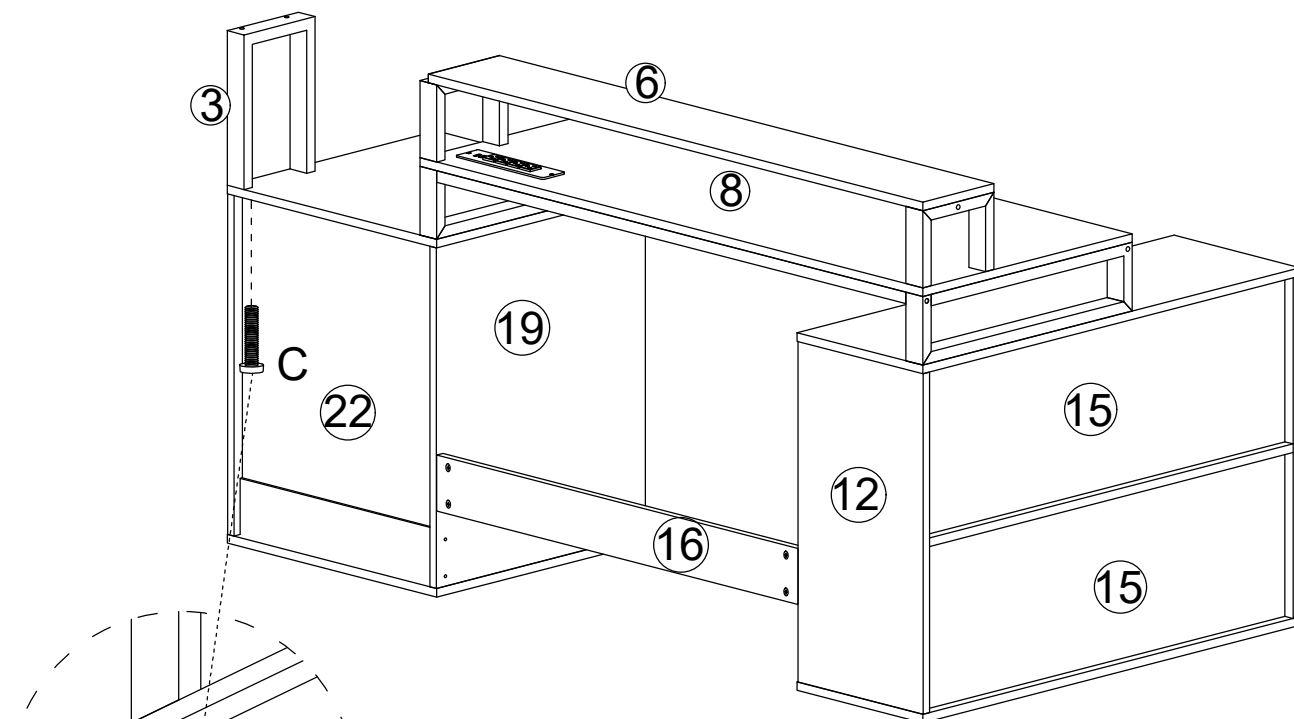


STEP 33

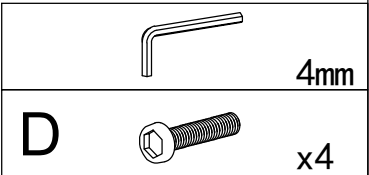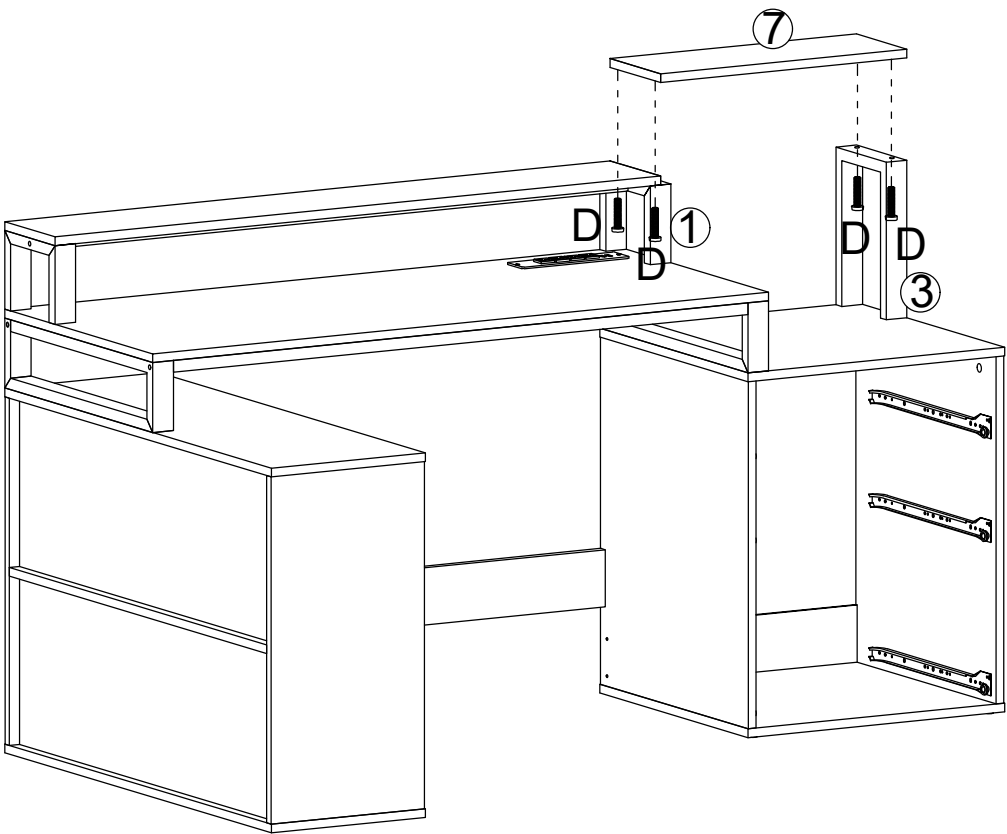


STEP 34

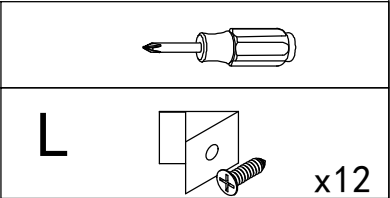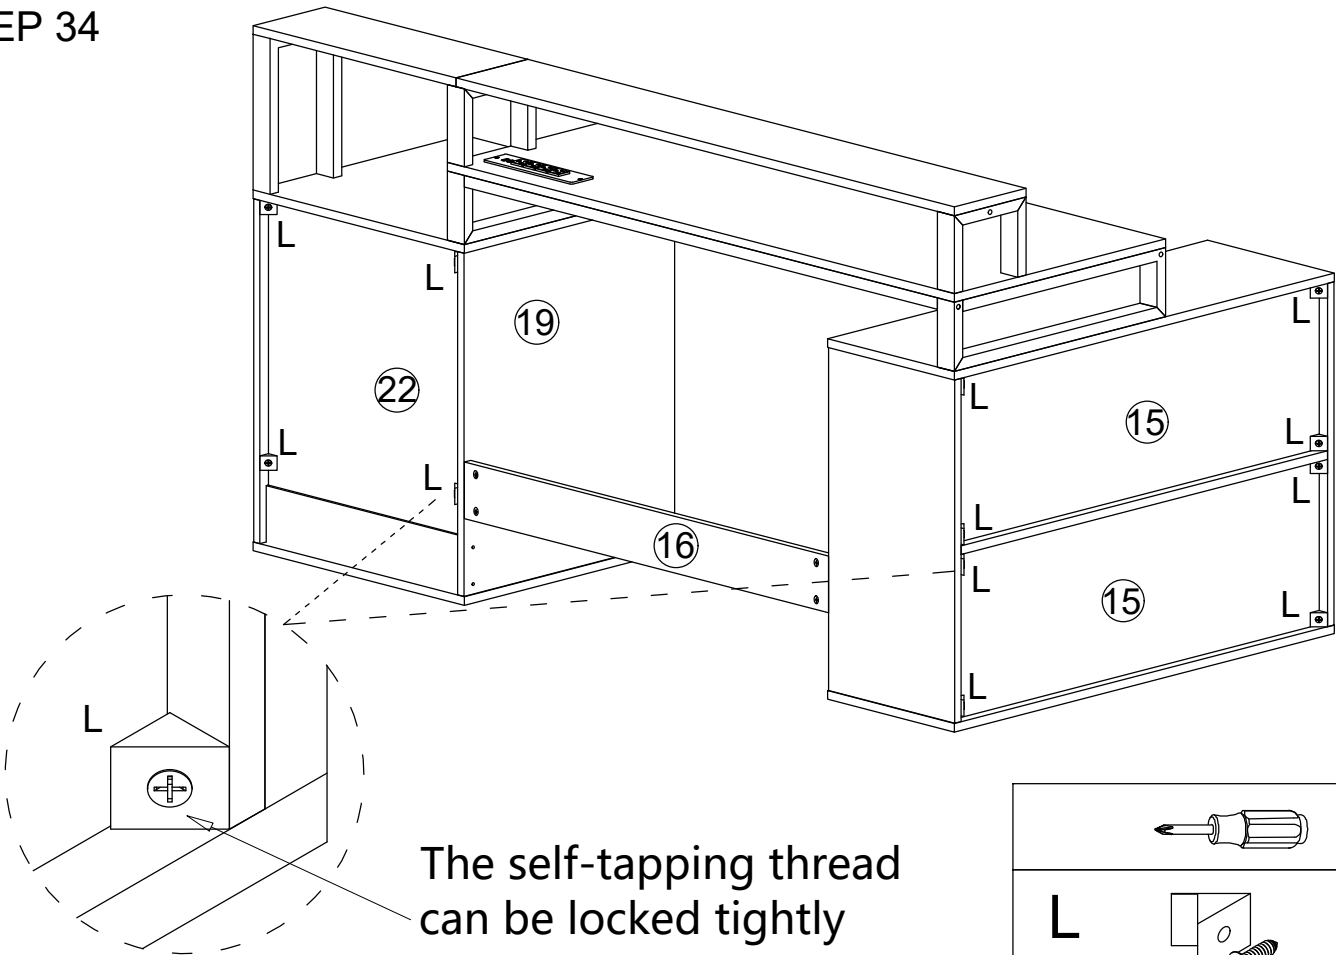


Steps 32 through 37 are the two-drawer installation

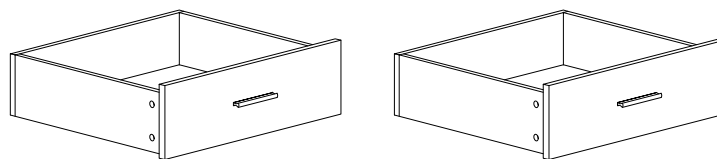


STEP 35

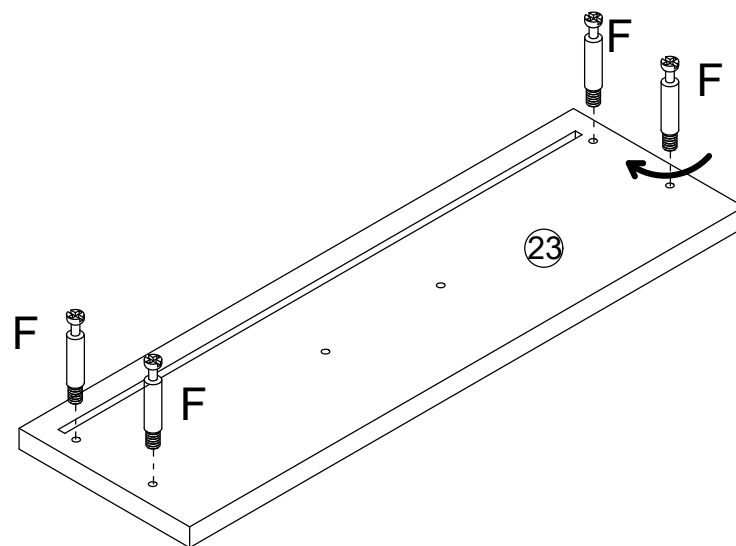


x2

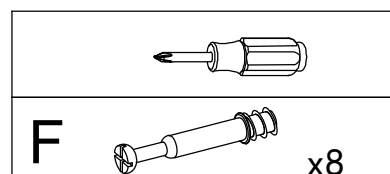


STEP 36

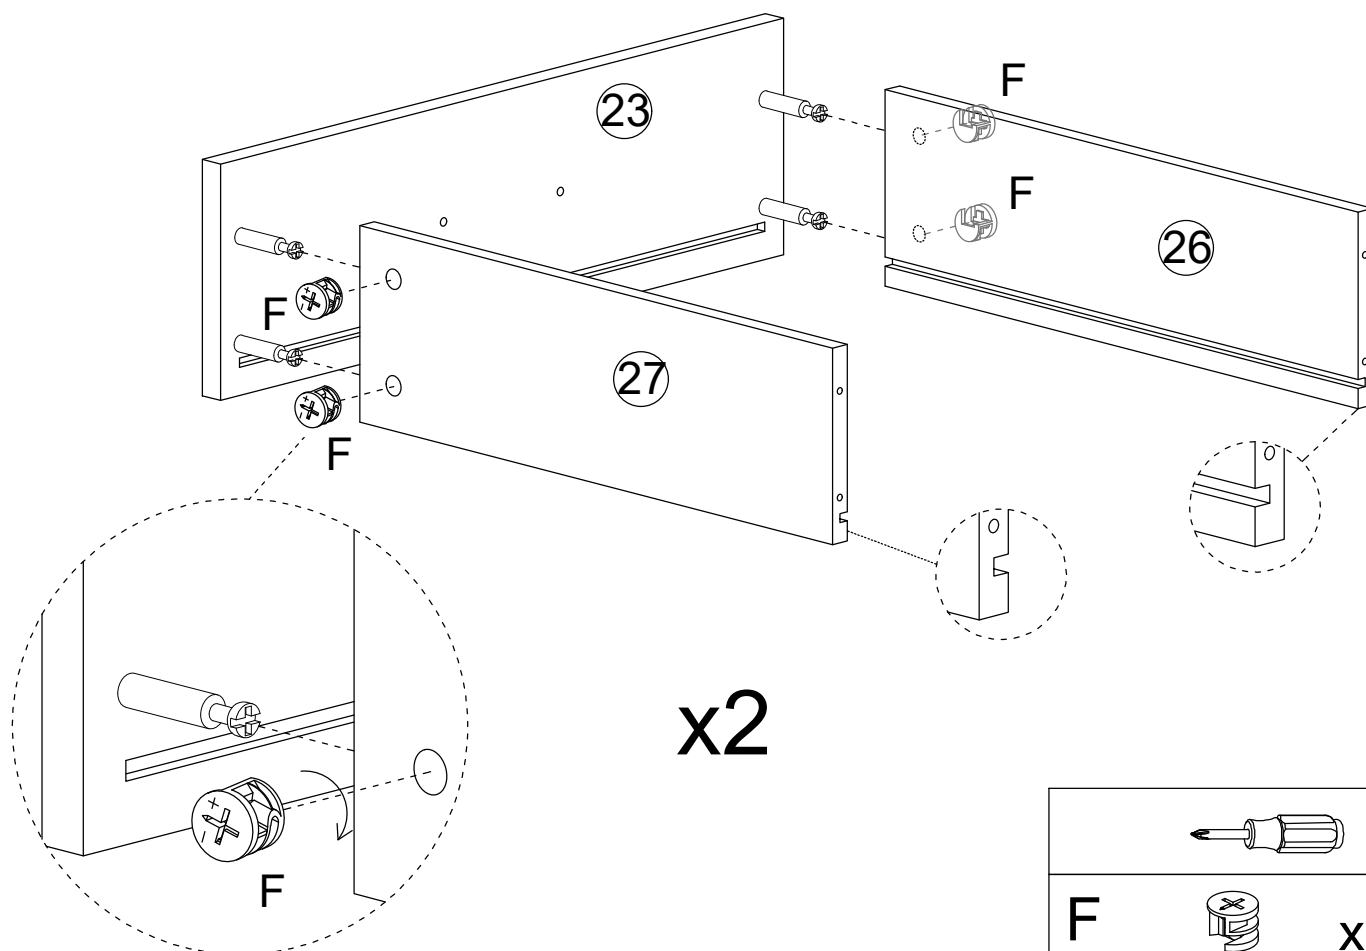

x2

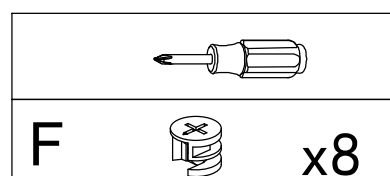


STEP 37

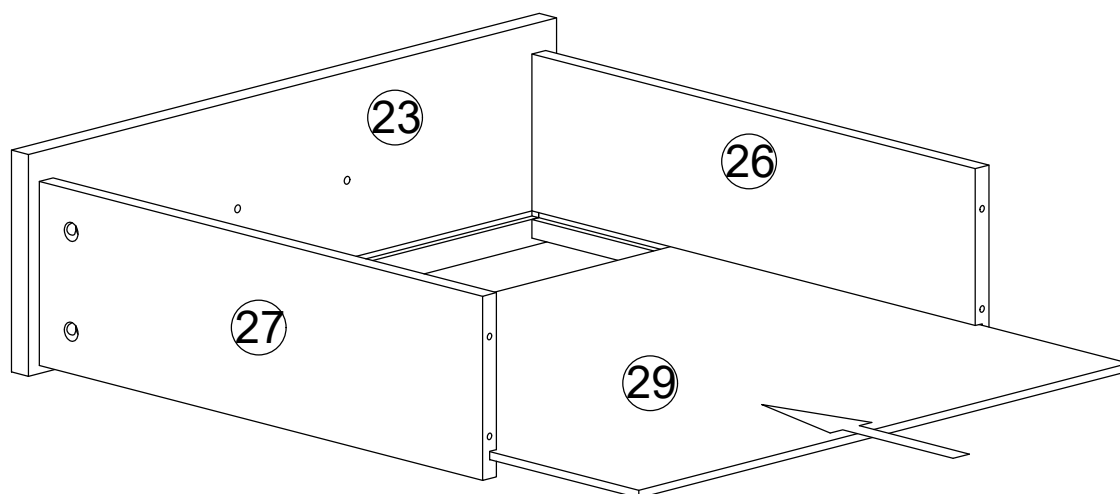


x2



STEP 38

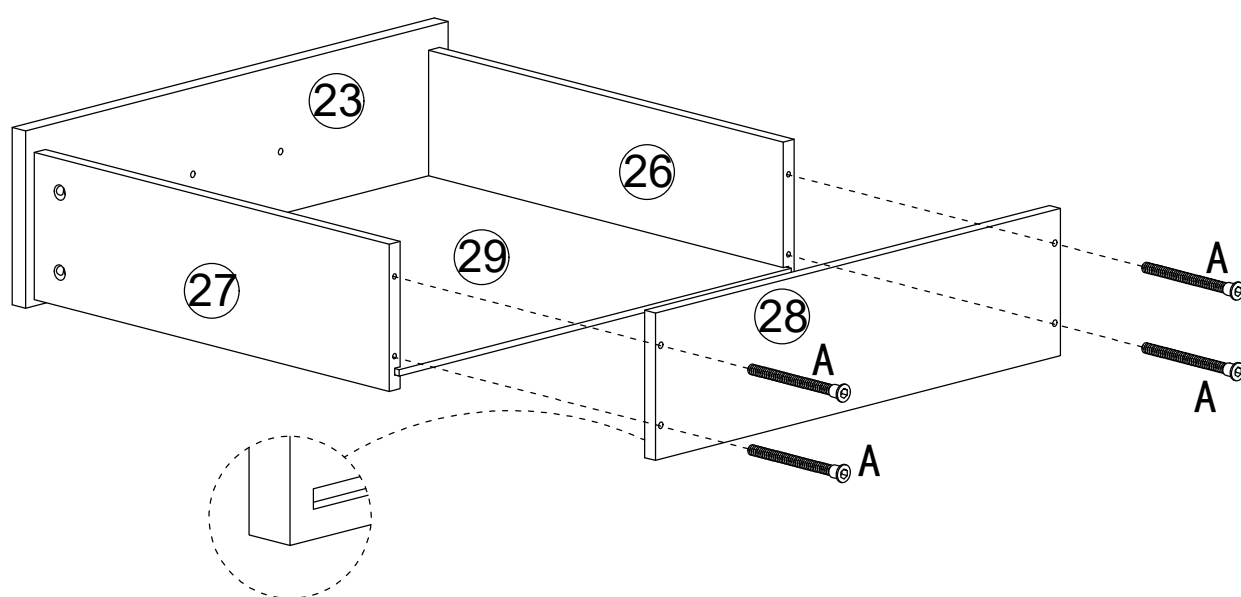


x2

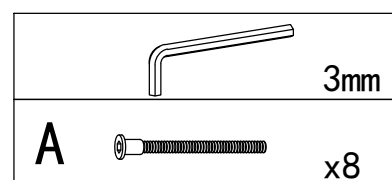



STEP 39

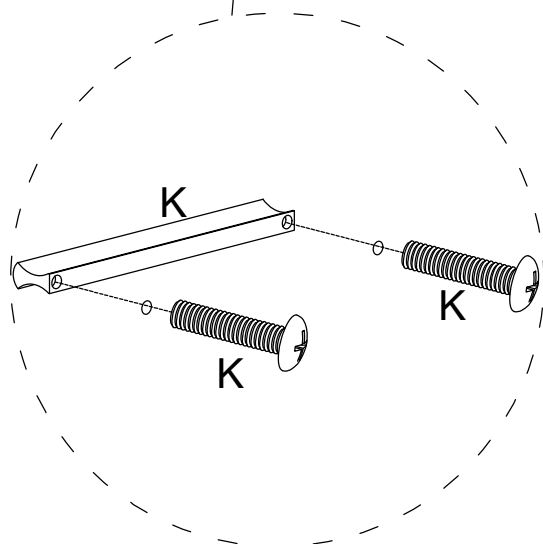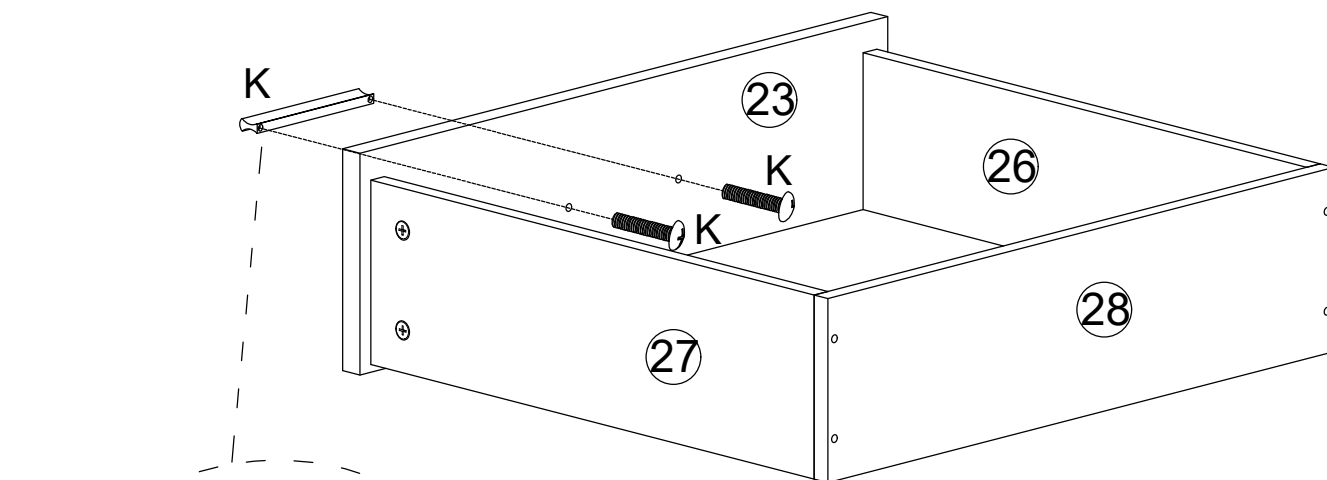


x2

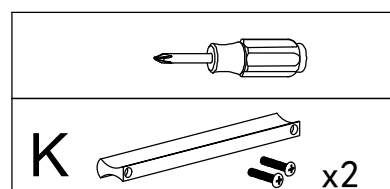



STEP 40

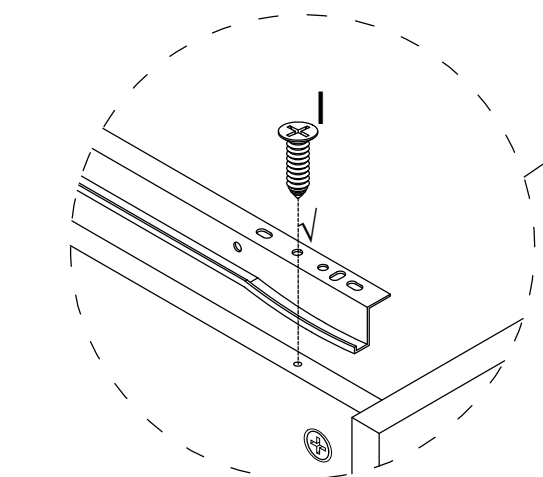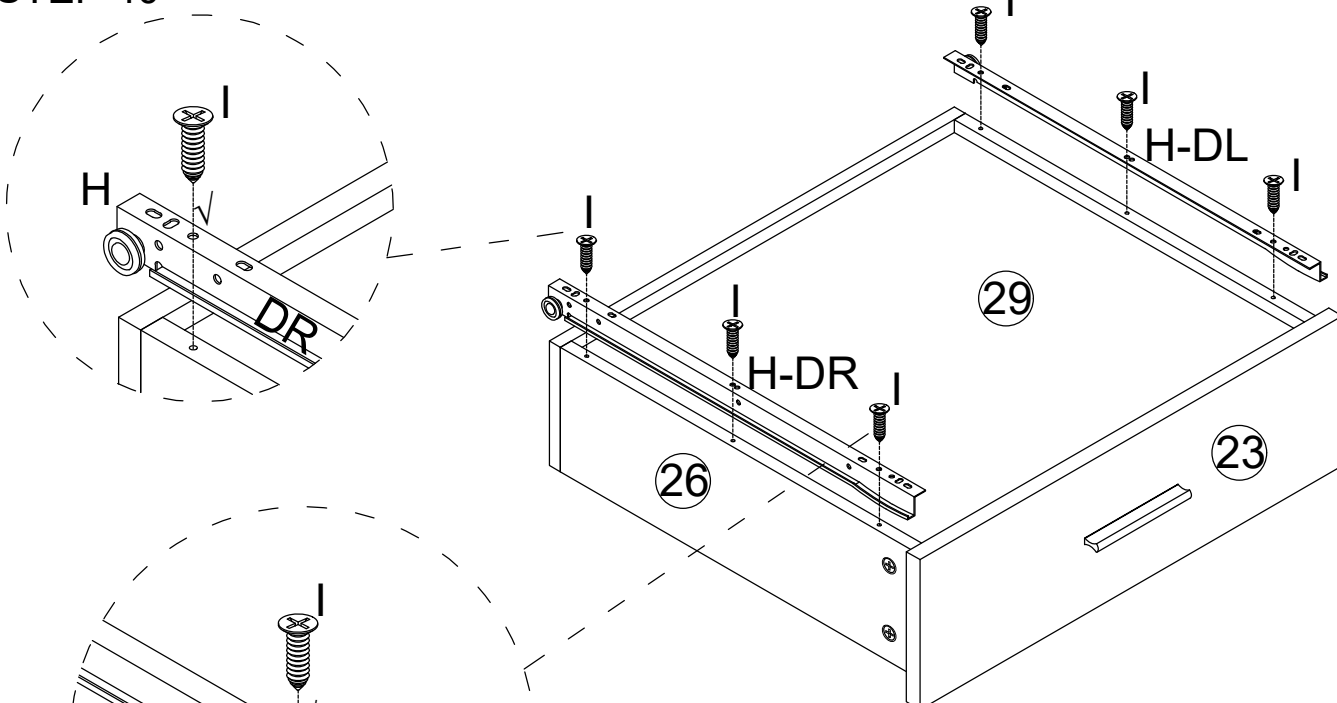




x2

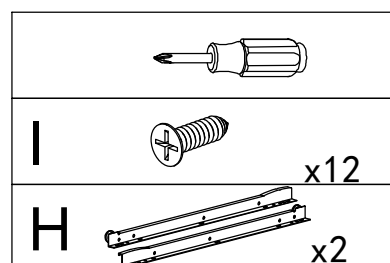


STEP 41

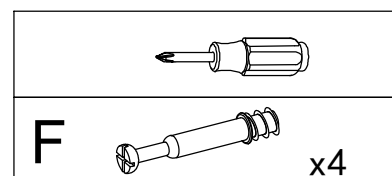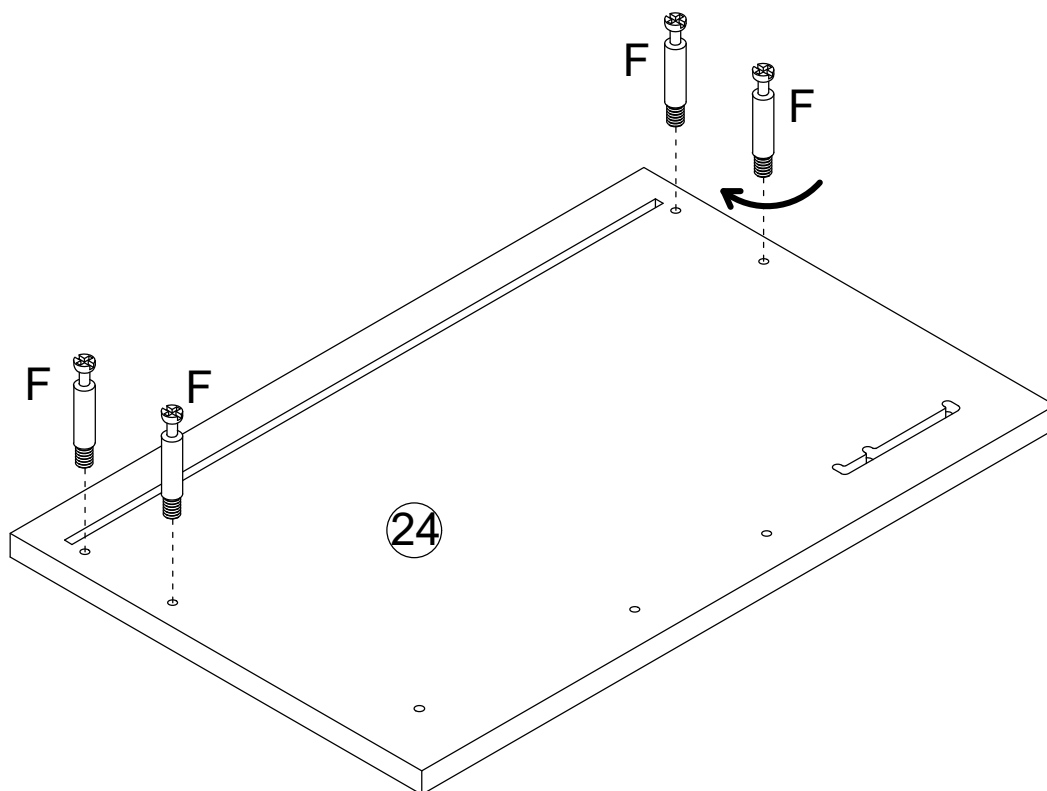


STEP 42

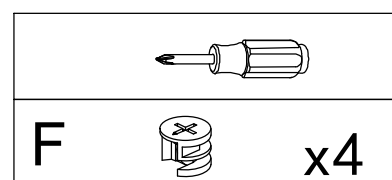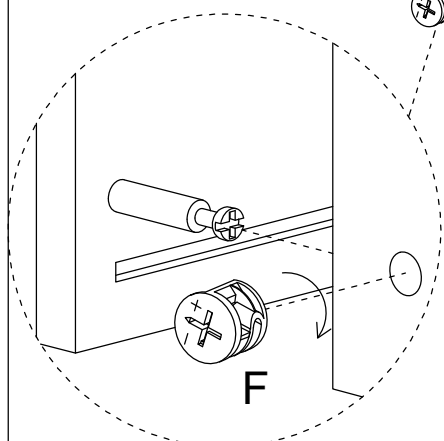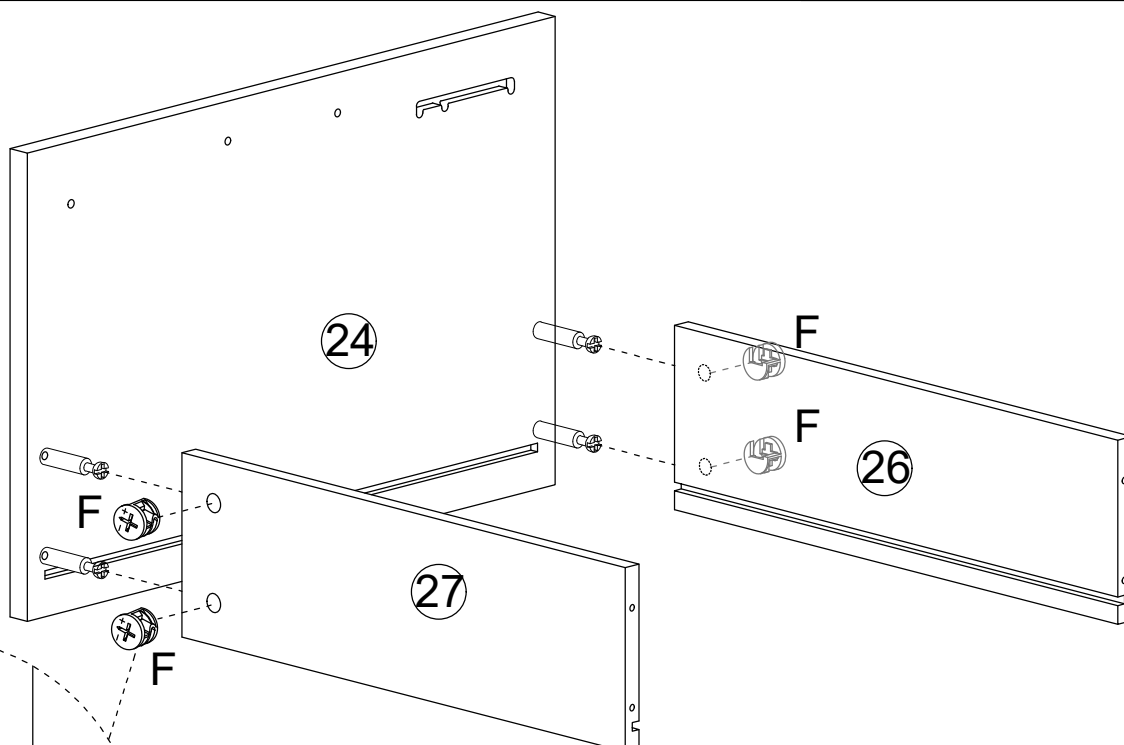


STEP 43

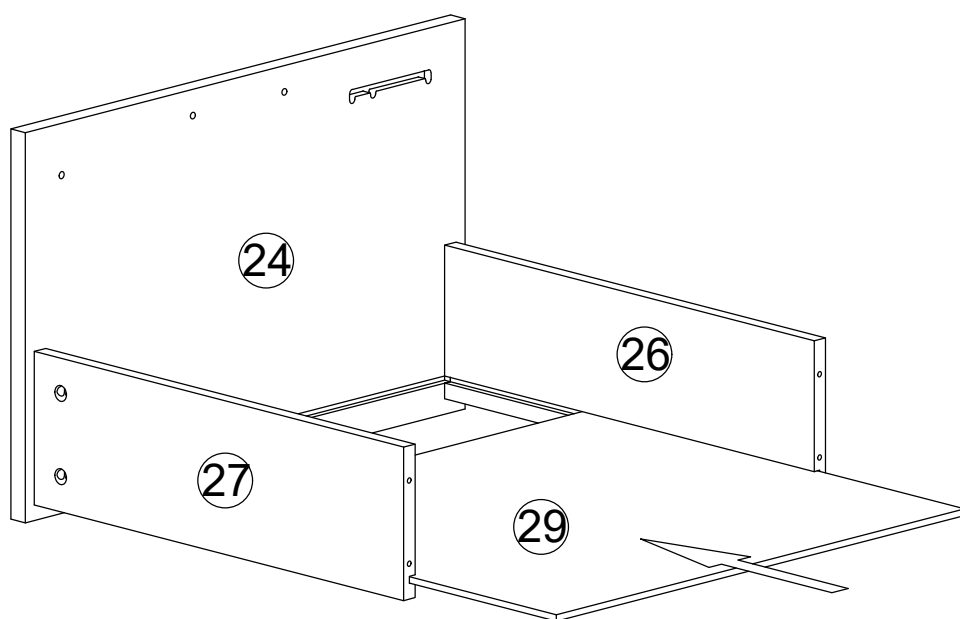


STEP 44

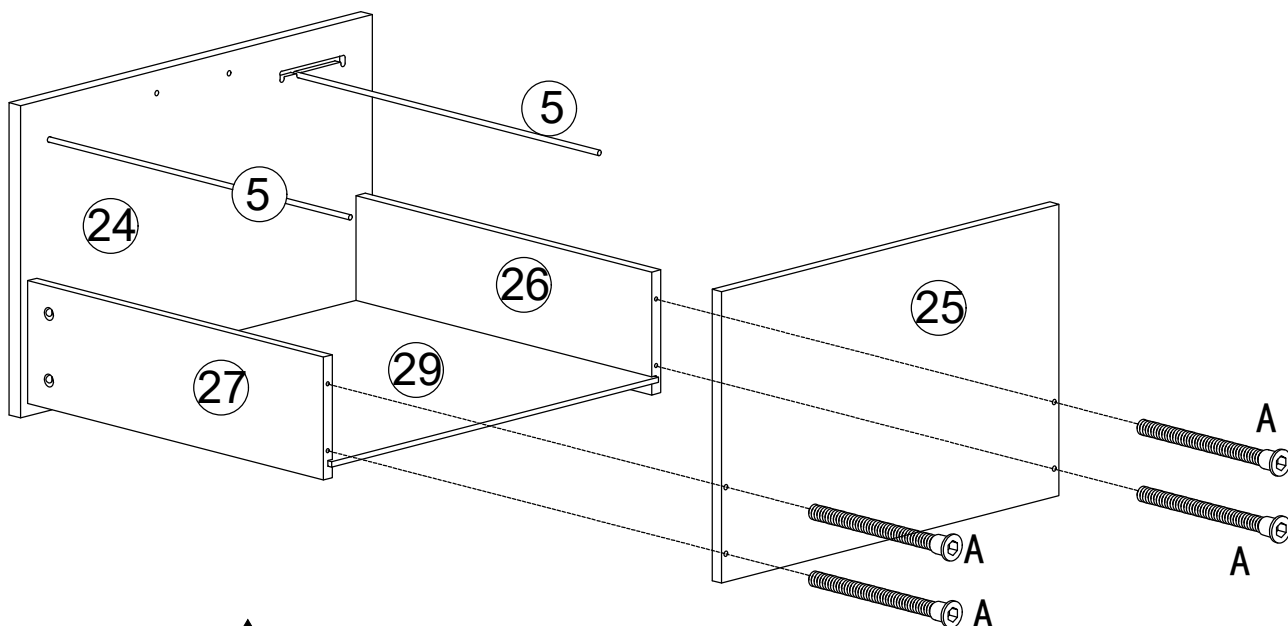


Put in the accessory "5" first

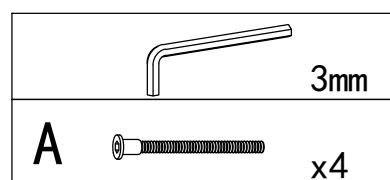

STEP 45


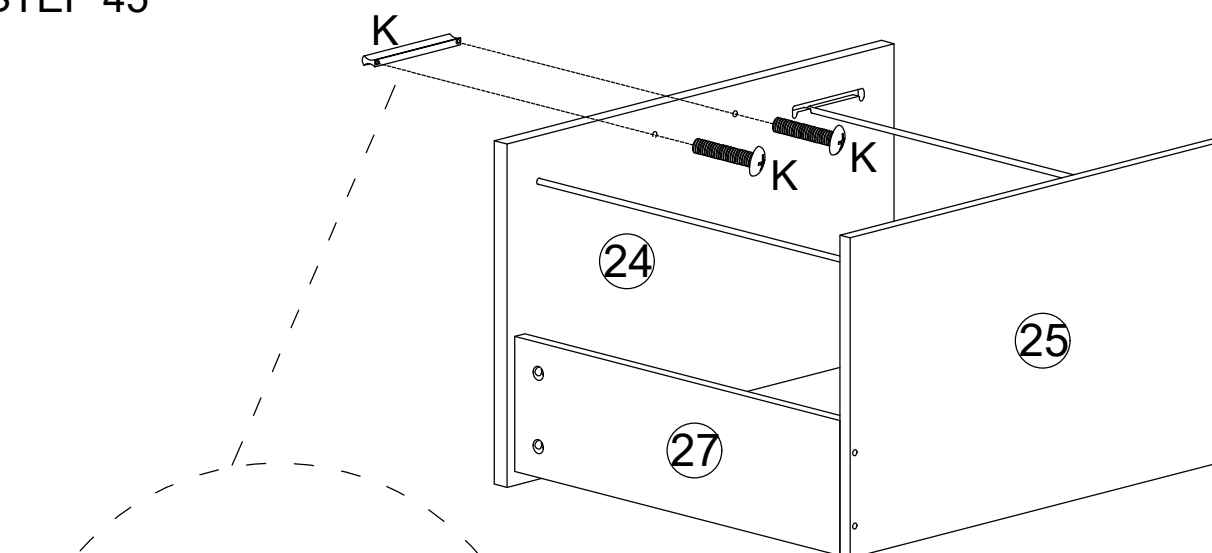


K



x1

STEP 46

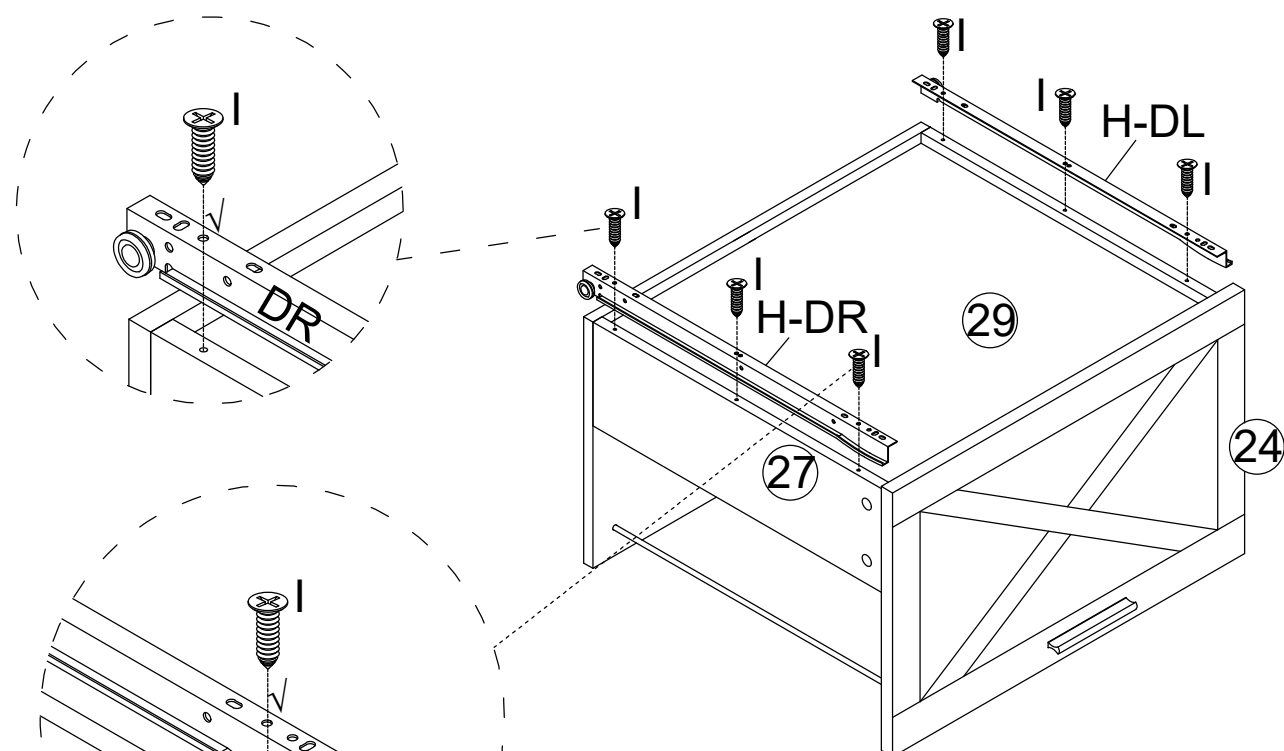


I





x6

H



x1

STEP 47

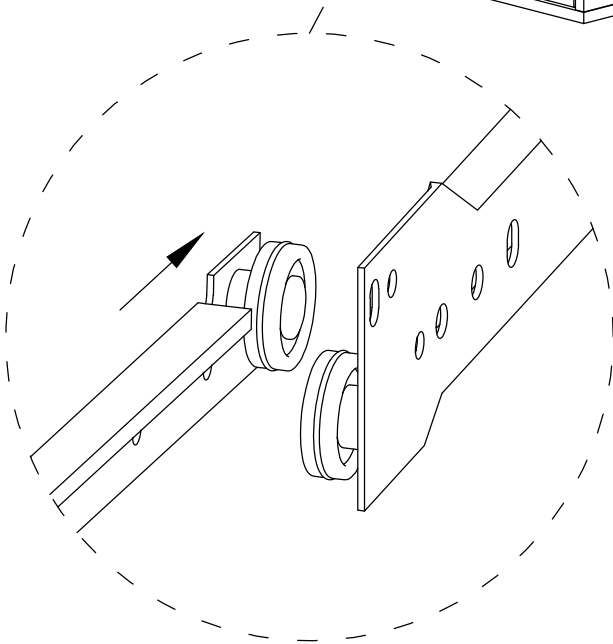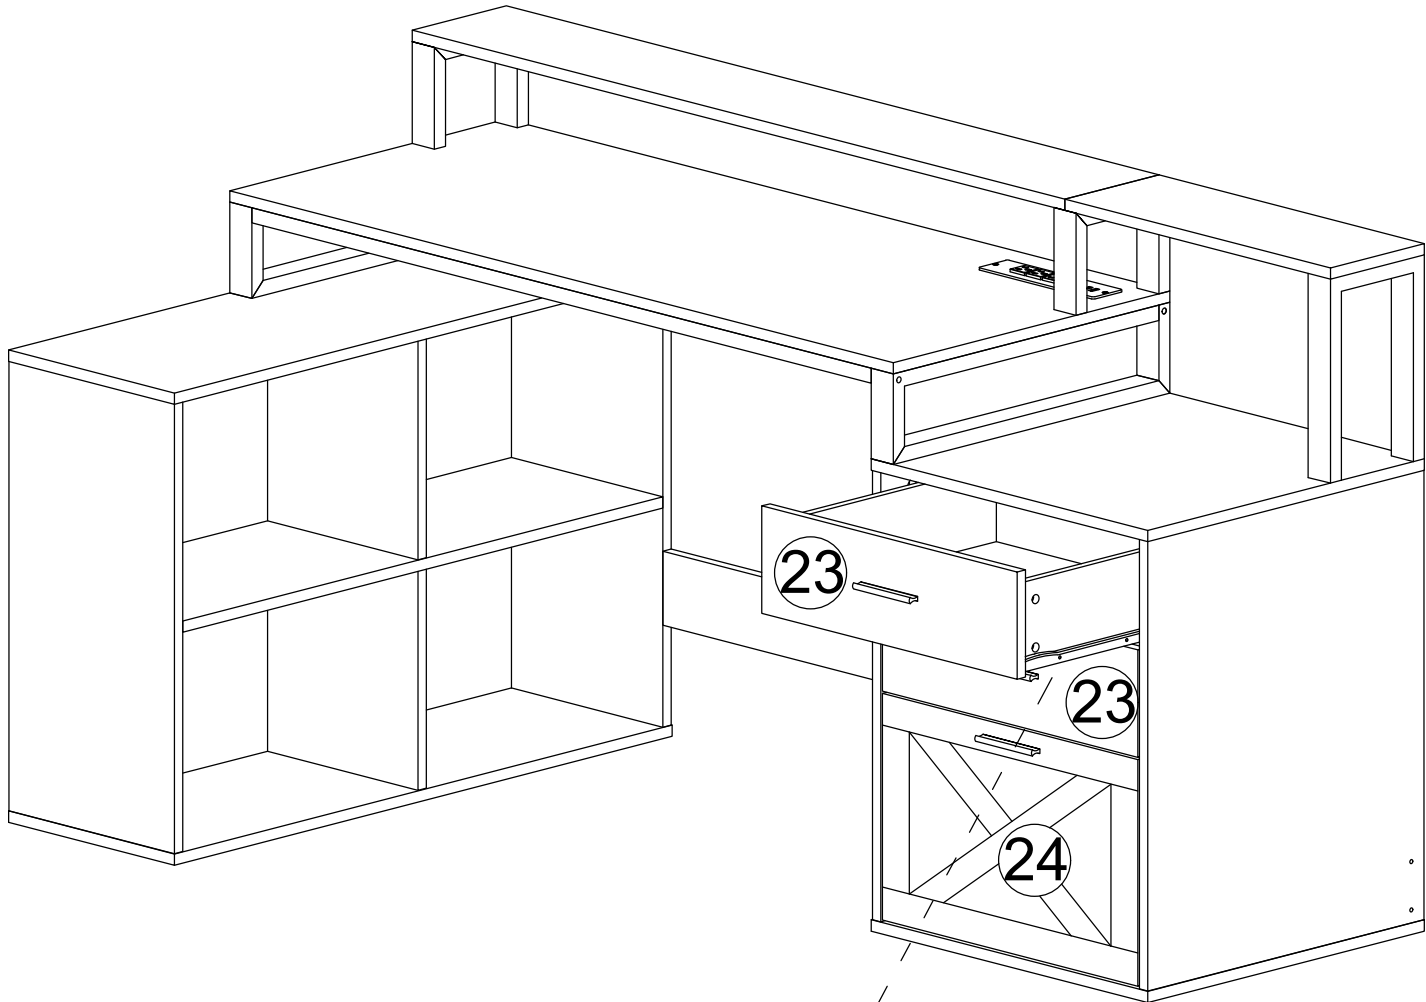

Installation Completed