COMPUTER DESK

ASSEMBLY INSTRUCTION





ASSEMBLY INSTRUCTION


ASSEMBLY INSTRUCTION			
ASSEMBLY TIPS: 1.Remove hardware from box and sort by size. 2.Please check to see that all hardware and parts are present prior to start of assembly. 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.			
 Warning !! 1.Don't attempt to repair or modify parts that are broken or defective.Please contact the store immediately. 2.This product is for home use only and not intended for commercial establishment. 			
PARTS IDENTIFICATION:			
A LEG	2PCS	H DESK FRONT SUPPORT	1PC
		I DESK BACK SUPPORT	1PC
B COMPUTER DESK LEG-RIGHT	1PC	J BOTTOM SUPPORT	2PC
C DESK LEG-LEFT	1PC	K COMPUTER BACK SUPPORT	1PC
D KEYBOARD	1PC	L TURNBUCKLE	4PCS
E ANGLE IRON LEFT	1PC	M WIRE-LARGE	a 4PCS
F ANGLE IRON RIGHT	1PC	N WIRE	4PCS
G COMPUTER FRONT SUPPORT	1PC	O CONNECT SUPPORT LARGE	1PC

ASSEMBLY INSTRUCTION

ASSEMBLY INSTRUCTION

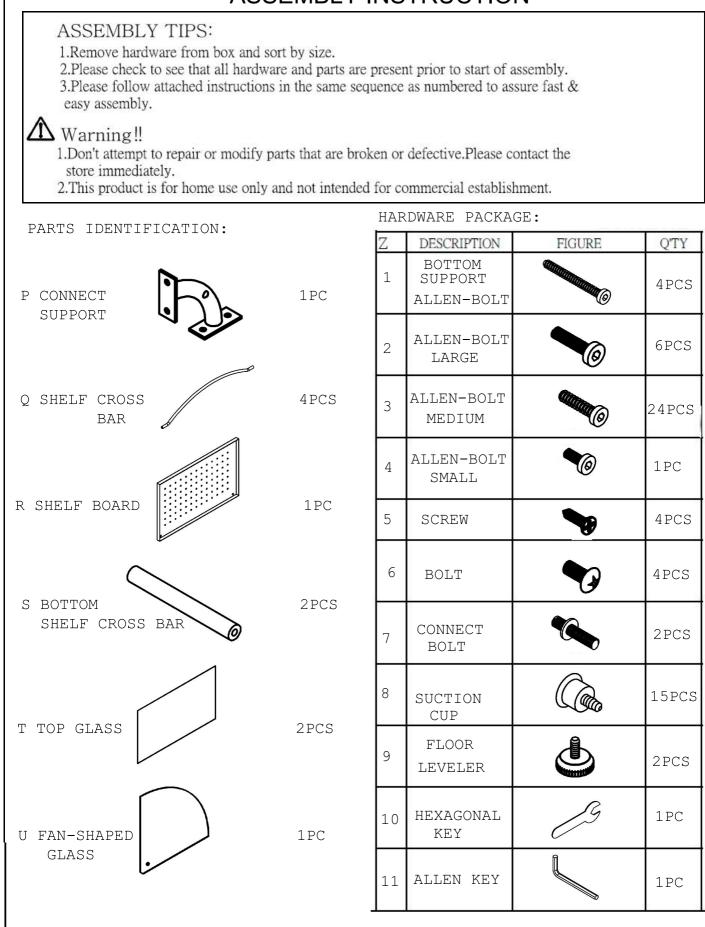

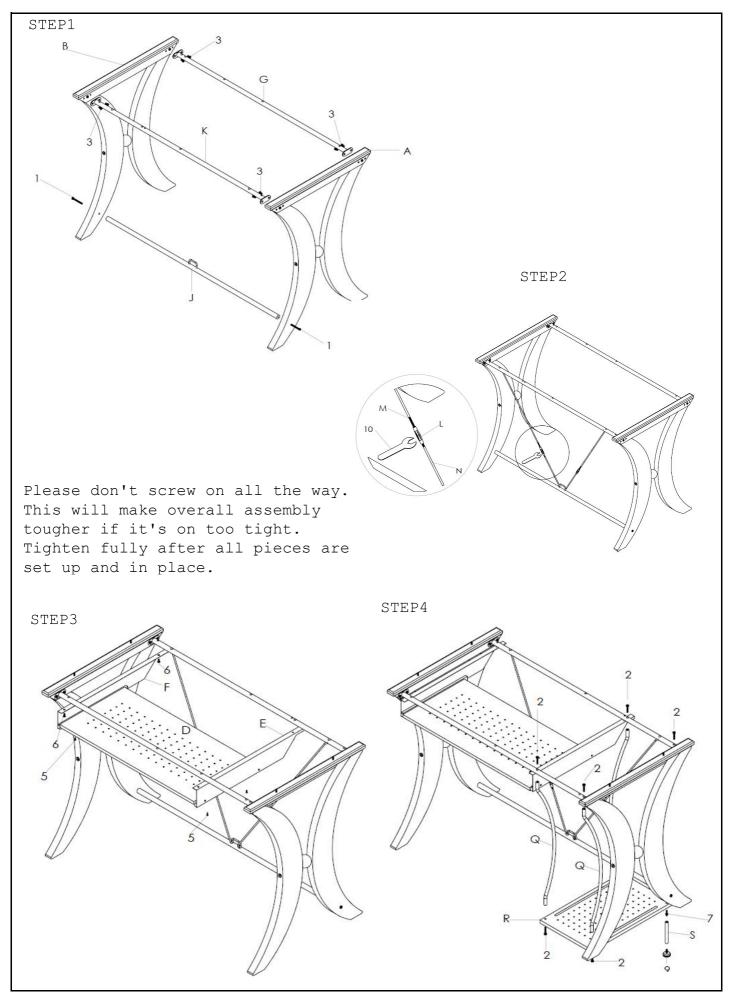

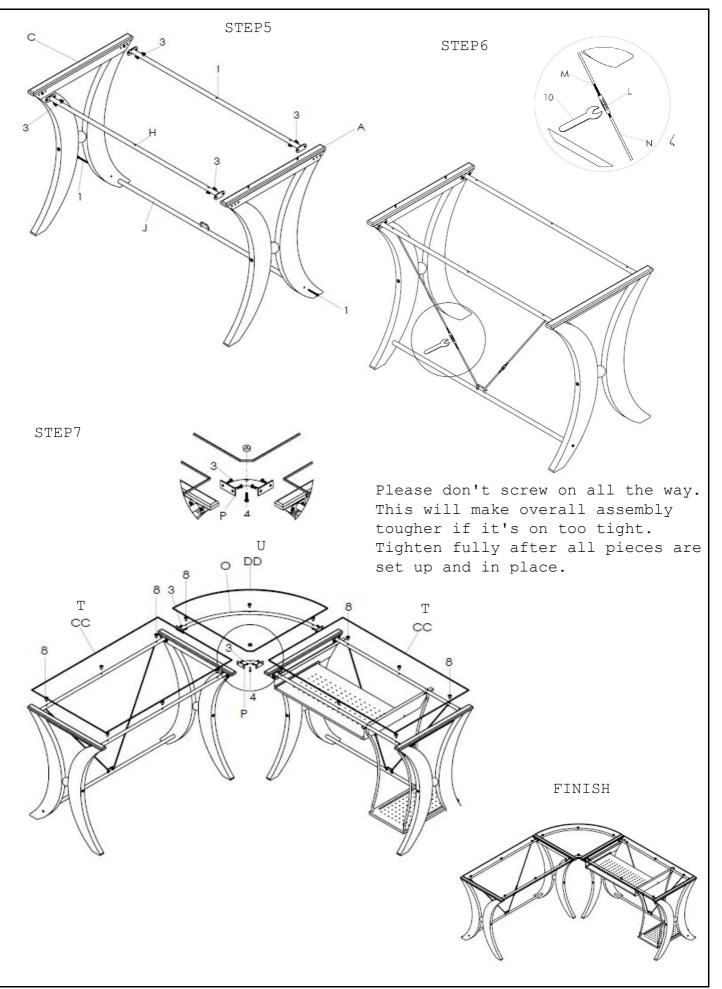

- STEP1:Use BACK SUPPORT(K)to assemble LEG(A) and RIGHT LEG(B) using ALLEN BOLT-MEDIUM(3).Attach FRONT SUPPORT(G) using ALLEN BOLT-MEDIUM(3). Attach BOTTOM SUPPORT(J) to (A) and (B) using BOTTOM ALLEN BOLT(1).
- STEP2:Connect WIRE(N) and WIRE-LARGE(M) by TURNBUCKLE(L) then screw on(K) and(J) by HEXAGONAL KEY(10)
- STEP3:Screw ANGLE IRON LEFT(E) and ANGLE IRON RIGHT(F) on(G) and(K) by BOLT(6) on KEYBOARD(D) by screw(5).
- STEP4:SHELF CROSS BAR on(G) and(K) by ALLEN BOLT-LARGE(2).Assemble SHELF BOARD(R) by ALLEN BOLT-LARGE(2) and CONNECT BOLT(7), then screw BOTTOM SHELF SUPPORT(S) and FLOOR LEVELER(9).
- STEP5:Use BACK SUPPORT(I)to assemble LEG(A) and LEFT LEG(C) using ALLEN BOLT-MEDIUM(3).Attach FRONT SUPPORT(H) using ALLEN BOLT-MEDIUM(3). Attach BOTTOM SUPPORT(J)to(A) and(B) using BOTTOM ALLEN BOLT(1).
- STEP6:Connect WIRE(N) and WIRE-LARGE(M) by TURNBUCKLE(L) then screw on(I) and(J) by HEXAGONAL KEY(10)
- STEP7:Connect two desk with CONNECT SUPPORT-LARGE(0) and CONNECT SUPPORT(P)
 by ALLEN BOLT-MEDIUM(3).
 Insert SUCTION CUP(8) into(G.H.I.K.O), then place TOP GLASS(T)
 and the FAN-SHAPED GLASS(U), Screw the CONNECT SUPPORT(P)
 by ALLEN BOLT-SMALL(4).

Tighten all hardware.

PAGE 6 OF 6