

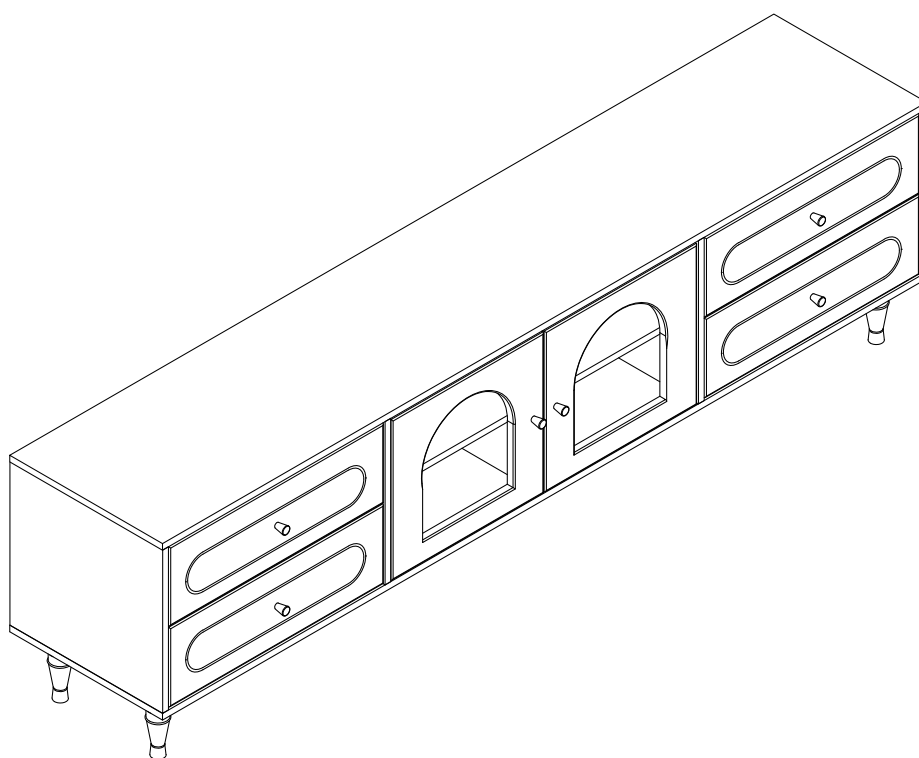
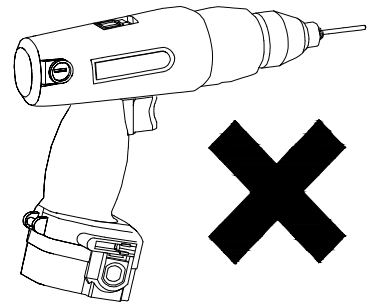


Assembly Instructions

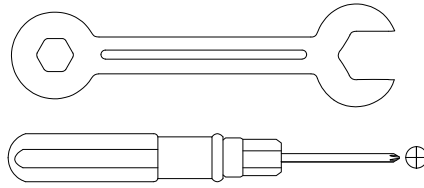


TV cabinet

The beginning of installation may feel confusing and painful, but it will get better.

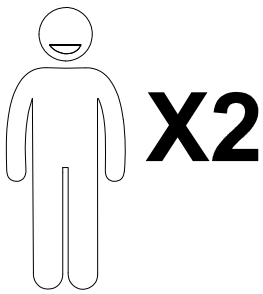



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

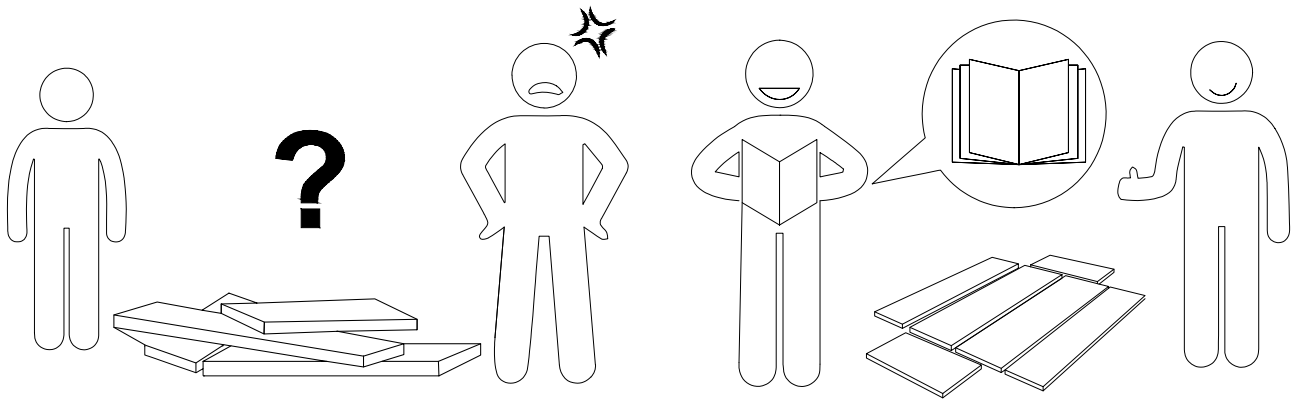

AVOID SCRATCHES

In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.













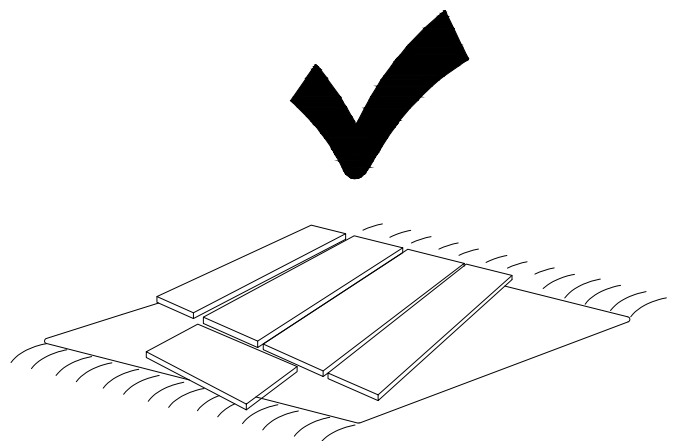
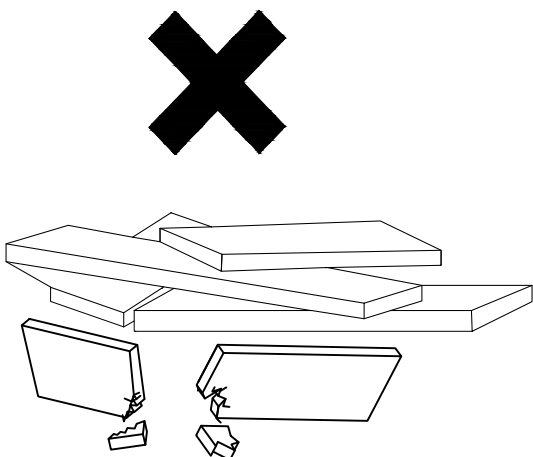


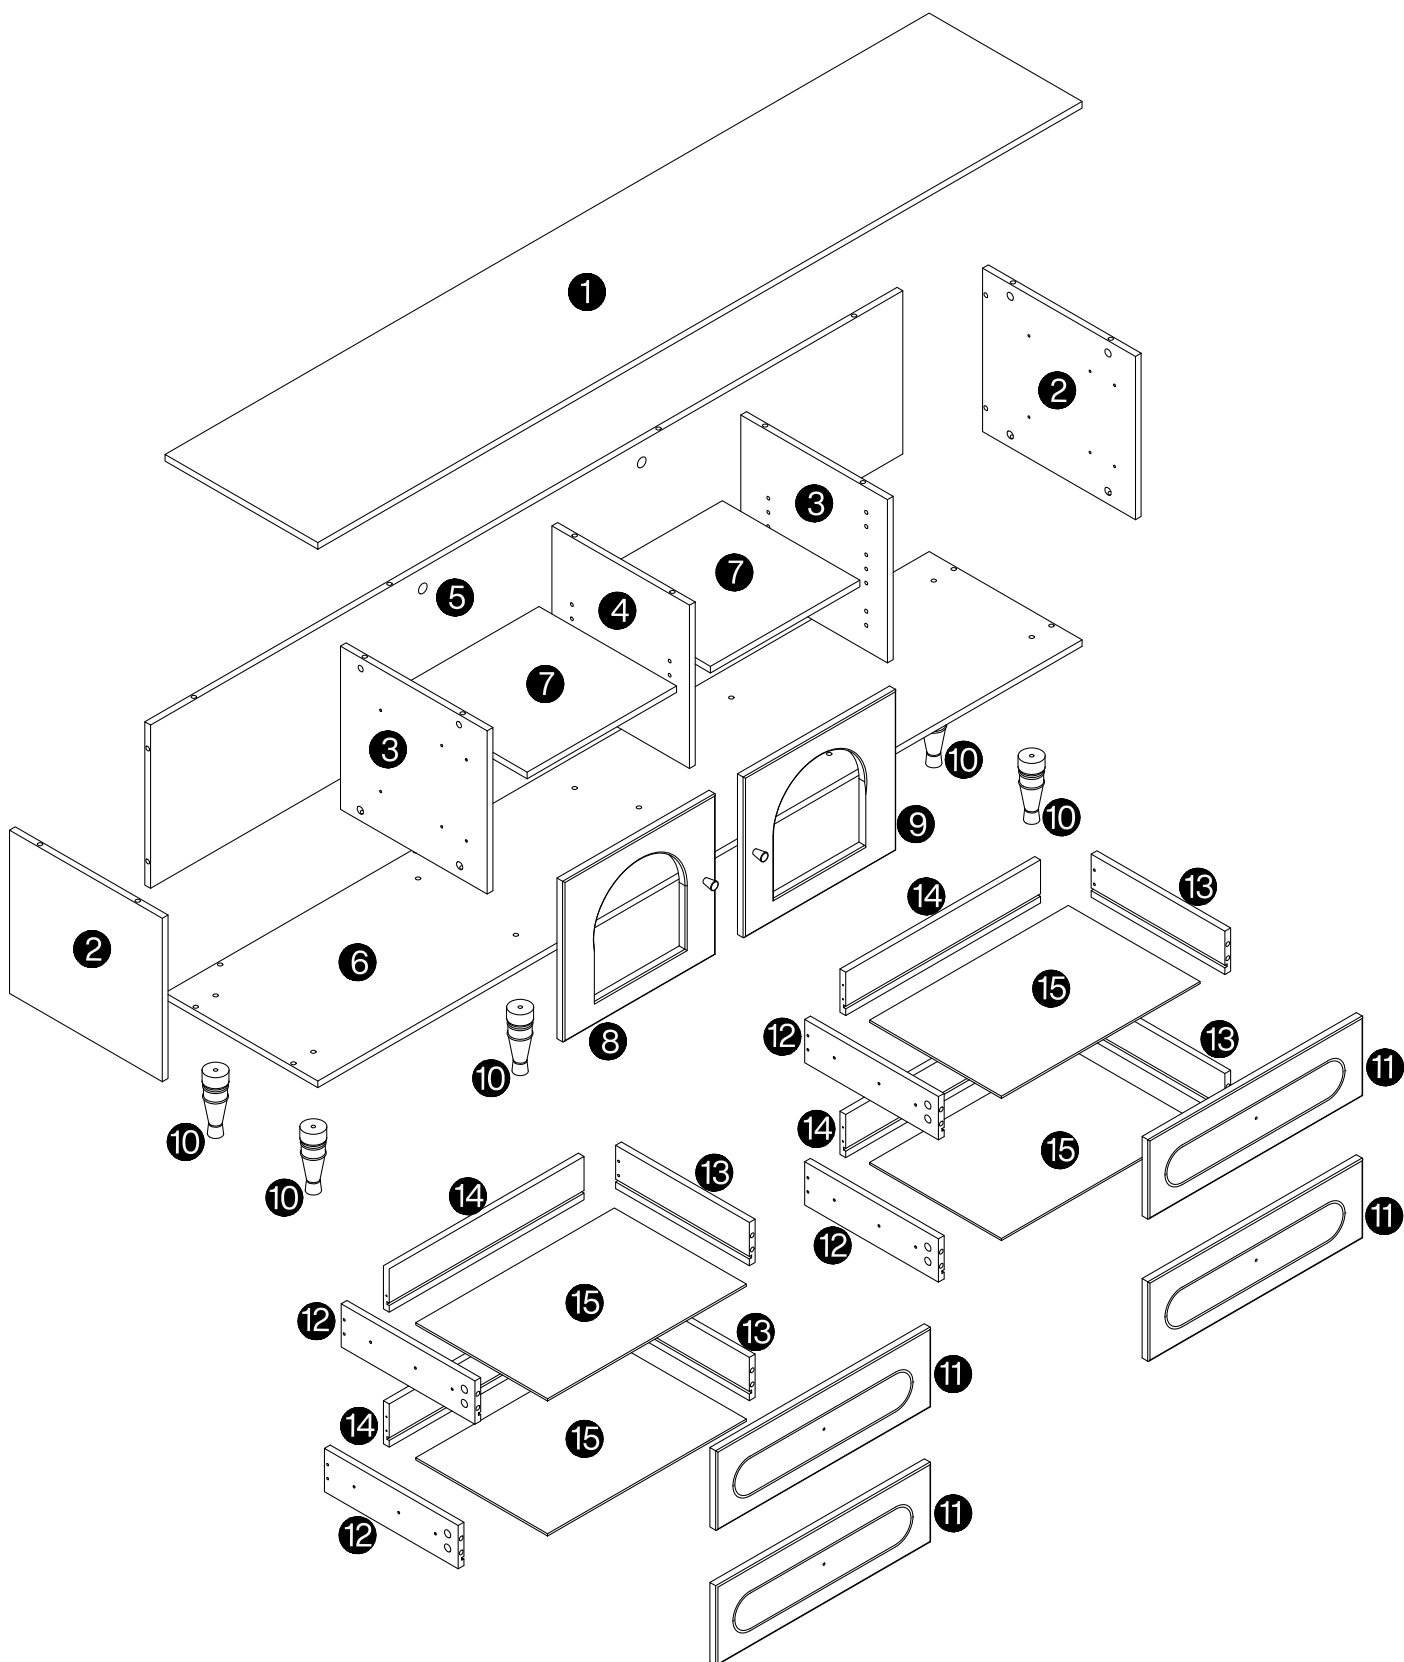





⚠ Caution






Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.


Parts List

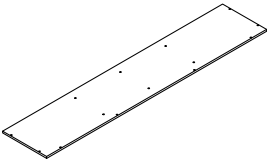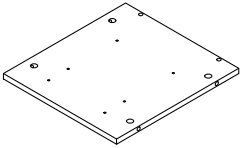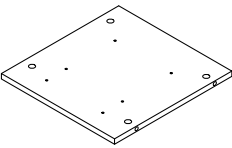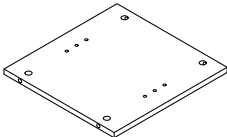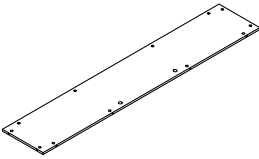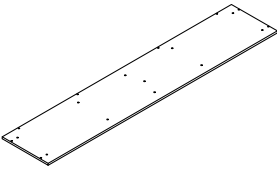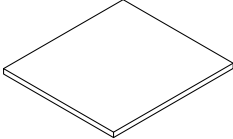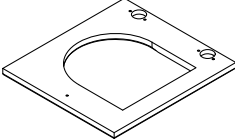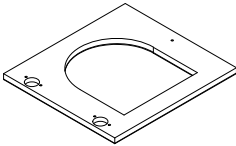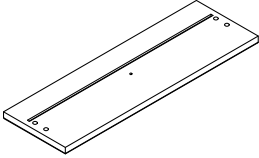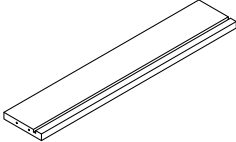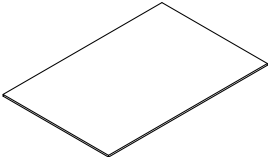1  1 pc	2  2 pcs	3  2 pcs	4  1 pc	5  1 pc
6  1 pc	7  2 pcs	8  1 pc	9  1 pc	10  5 pcs
11  4 pcs	12  4 pcs	13  4 pcs	14  4 pcs	15  4 pcs

Hardware List

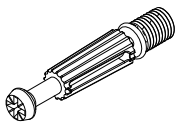
A	B	C	D	E	F
					
M6x40mm	Ø15x10mm	300 mm	Ø6x20mm	Dawan Hinge	M4x10
48+2pcs	48+2 pcs	4 sets	8+2 pcs	4 pcs	16+2 pcs

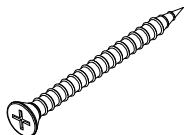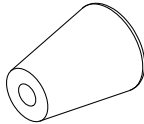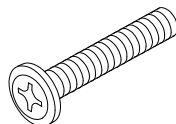G	H	I	J	K	L
					
Ø3.5x14mm	Ø3.5X35 mm	M8X30 mm		M4X22 mm	M5
56+2 pcs	16+2pcs	5+2 pcs	6 pcs	6+2 pcs	1 pcs

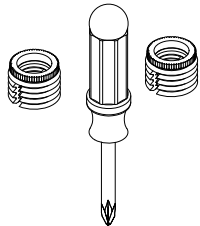
M					
					
1pc					

Installation of Cams and Pins

Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

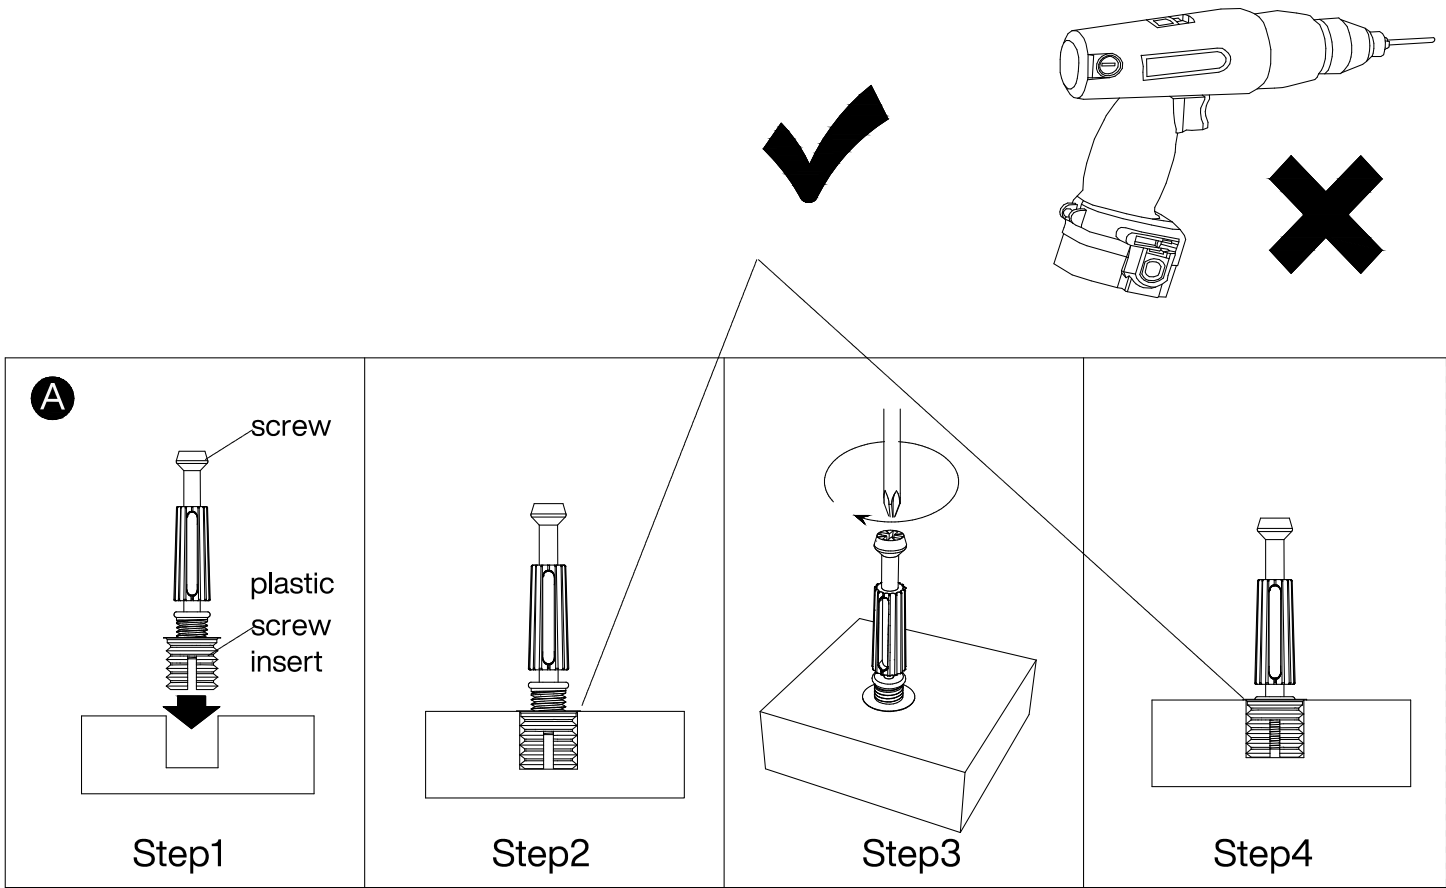


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

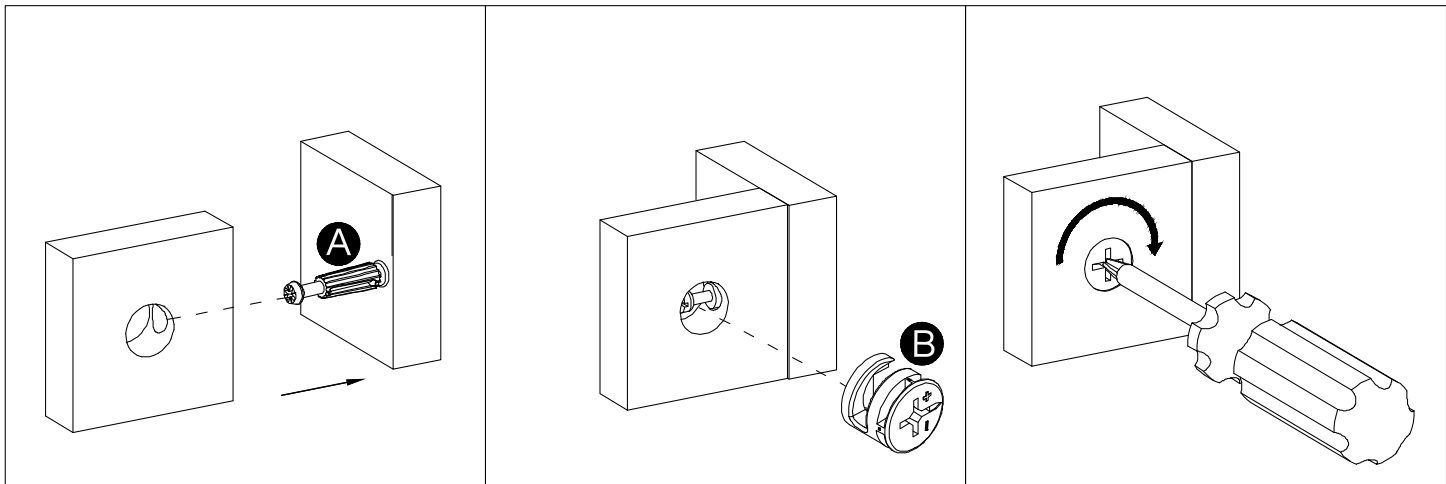

Please split component "C" into "C-1" and "C-2" before assembling the slide rail component, and then proceed to the next step of assembly


Step 1

Pull apart component "C" to each side, and then gently push up the lever of component "C-2"

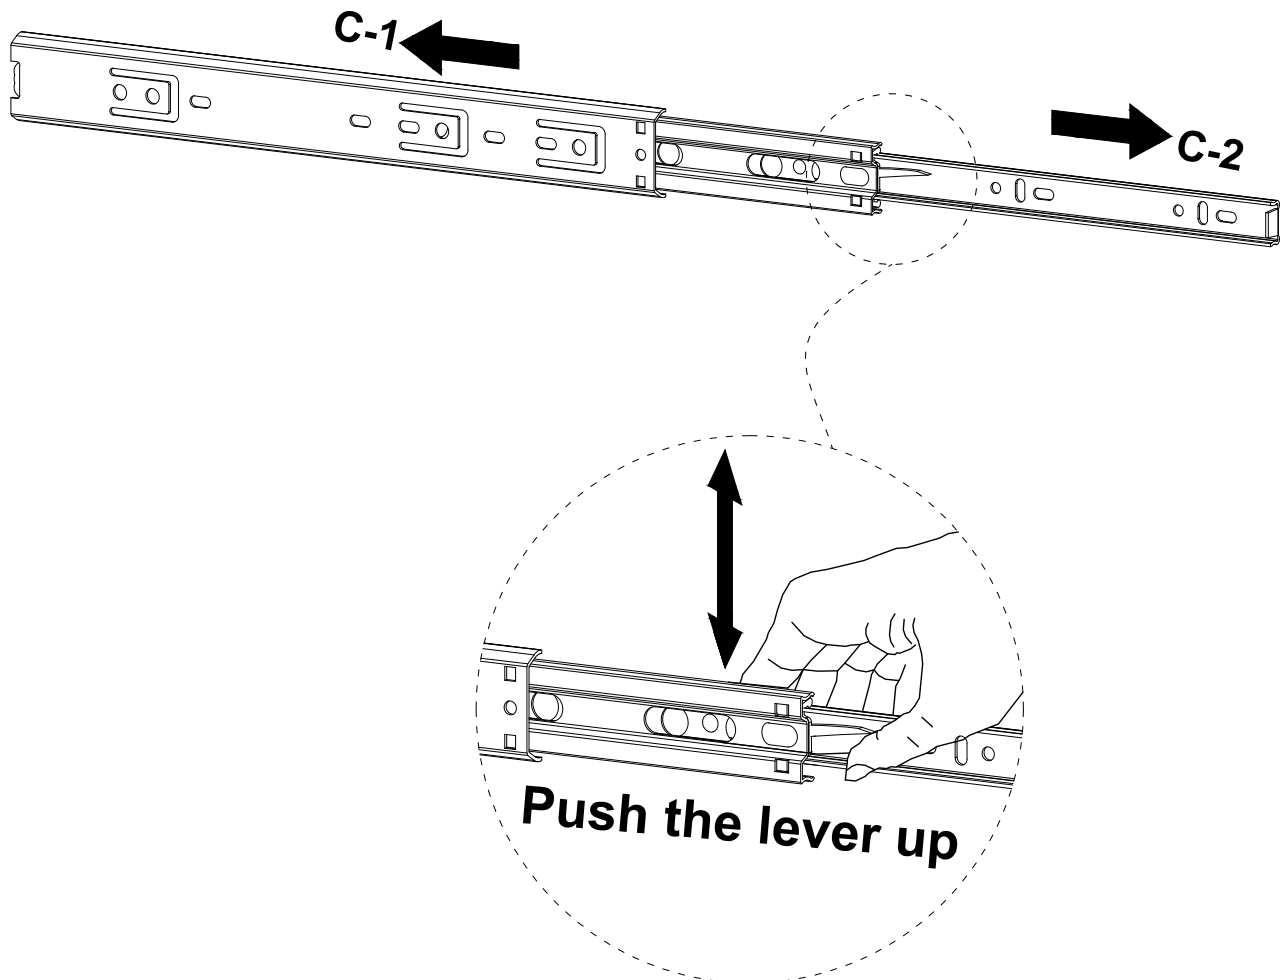



Step 2

Split component "C-1" and "C-2"

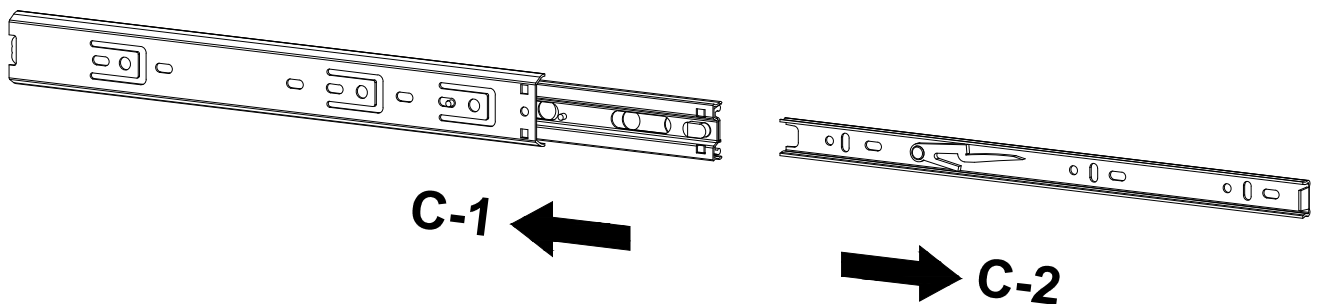

1


A

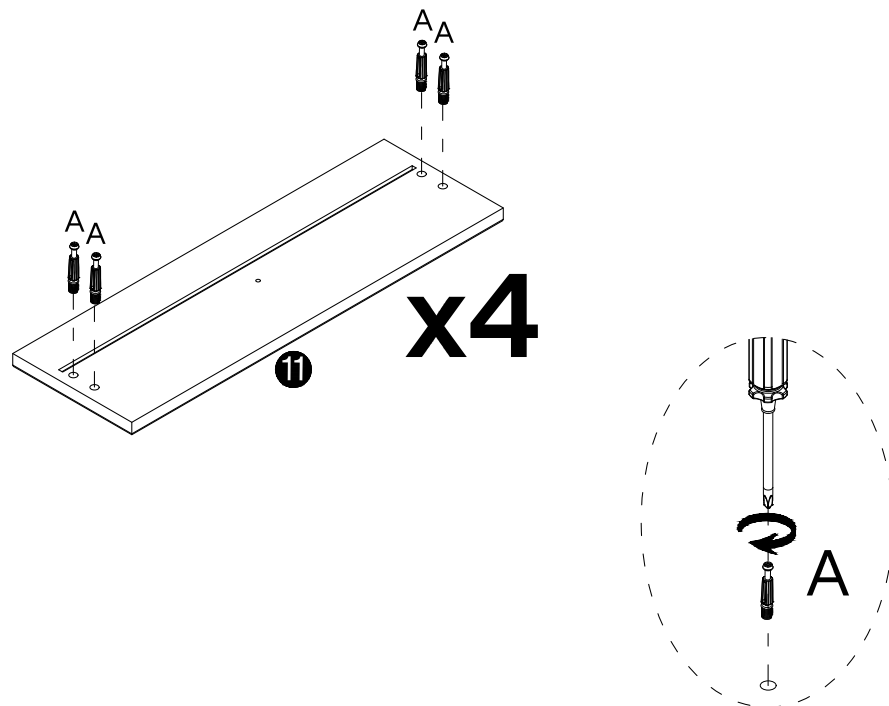M6x40mm
16 pcs




2

B

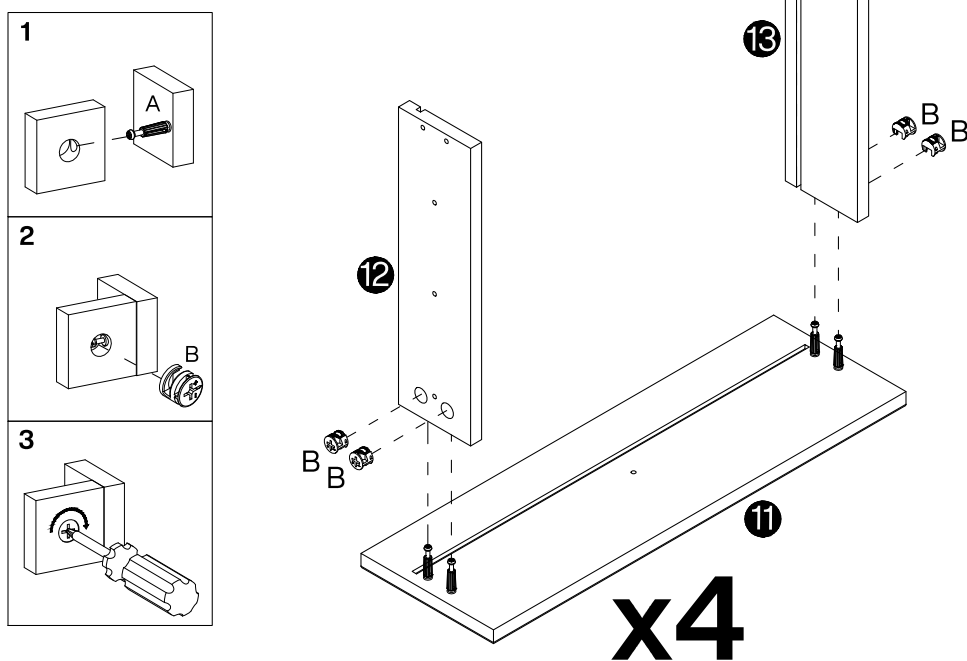
Ø15X10 mm
16 pcs



3

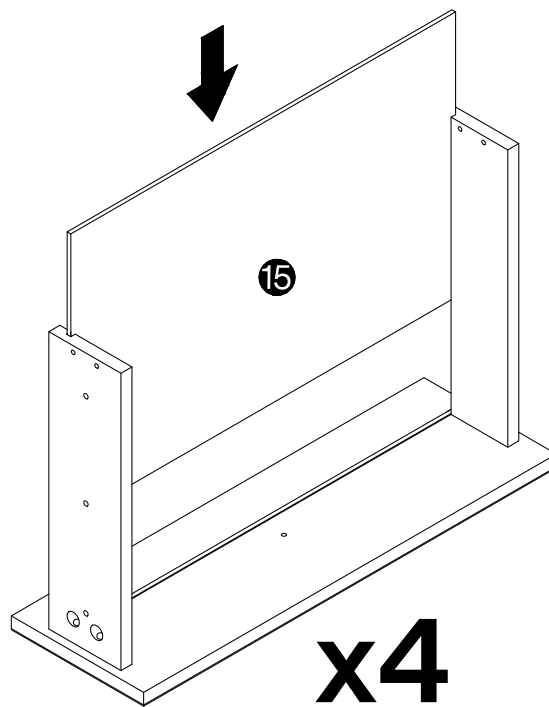

4

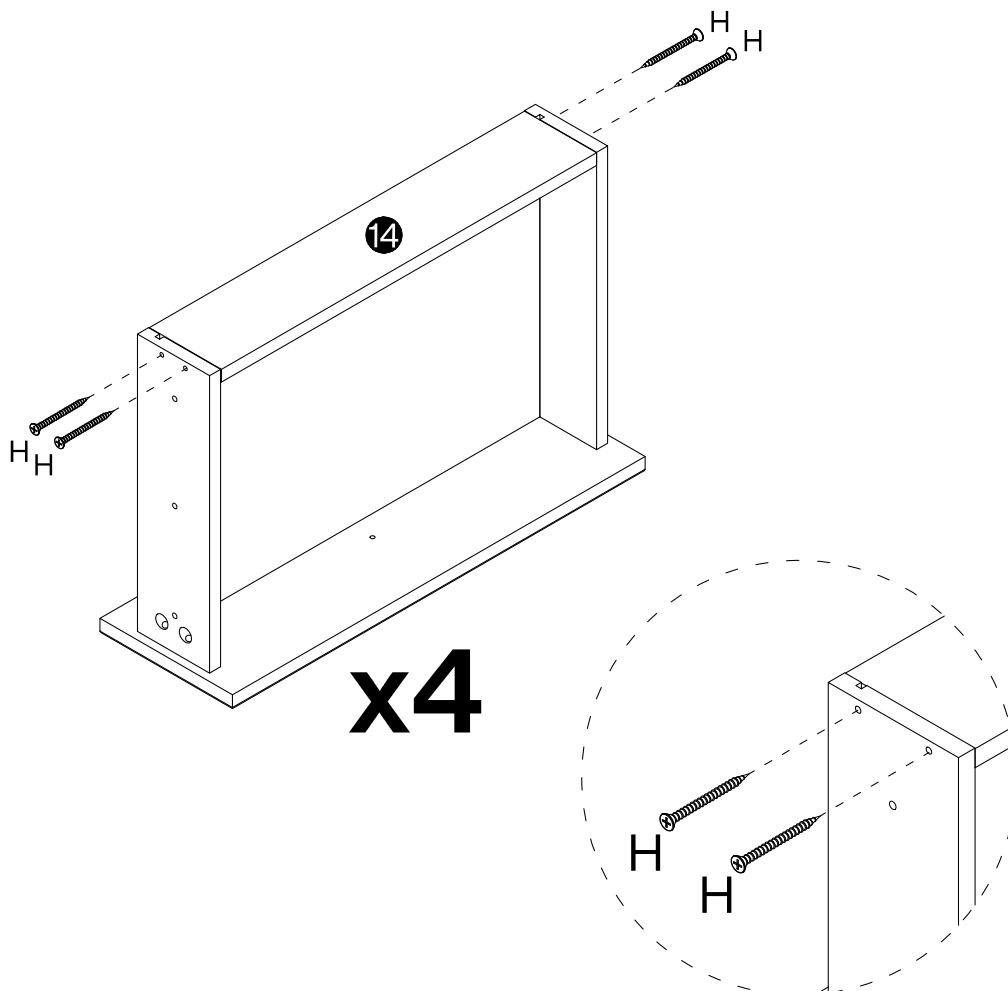


H




Ø3.5x35mm

16 pcs


5

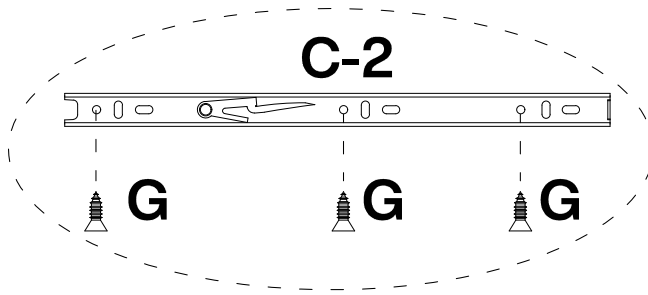


C-2	G
	 Ø3.5x14mm
8 pcs	24 pcs

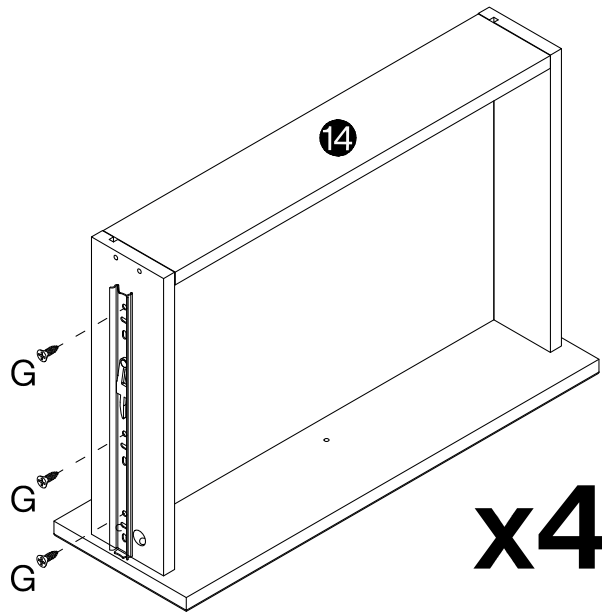


6


J	K
	 M4*22 mm
4 pcs	4 pcs

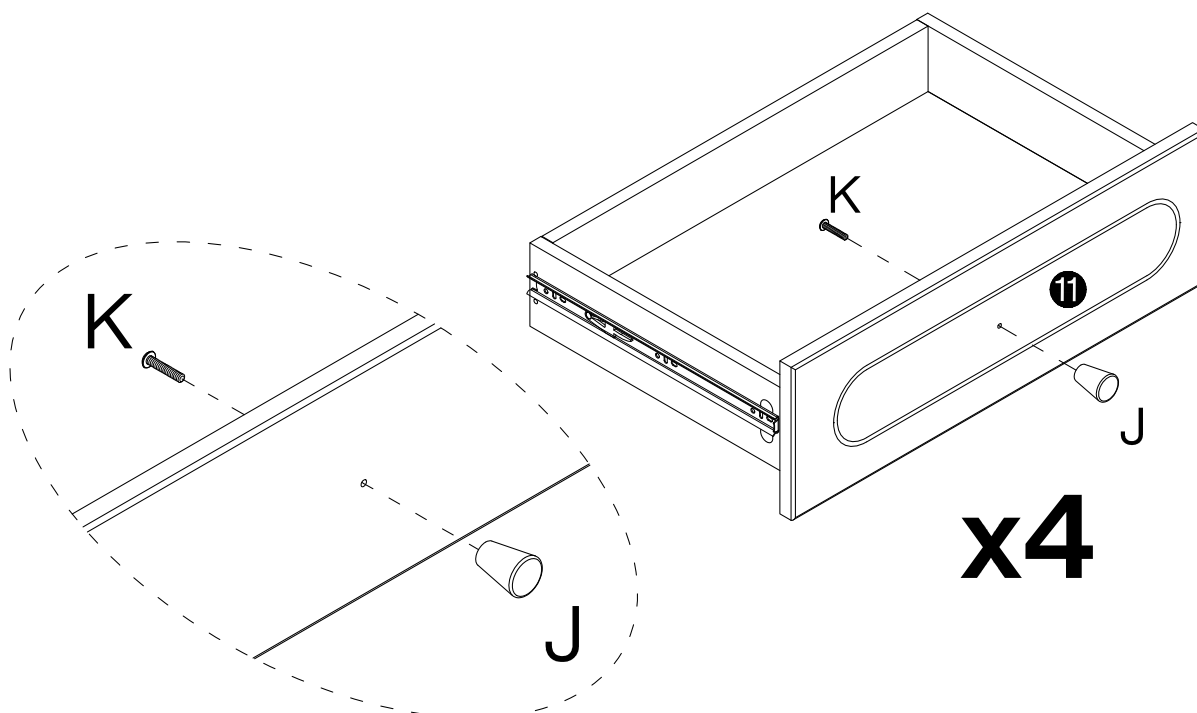


7


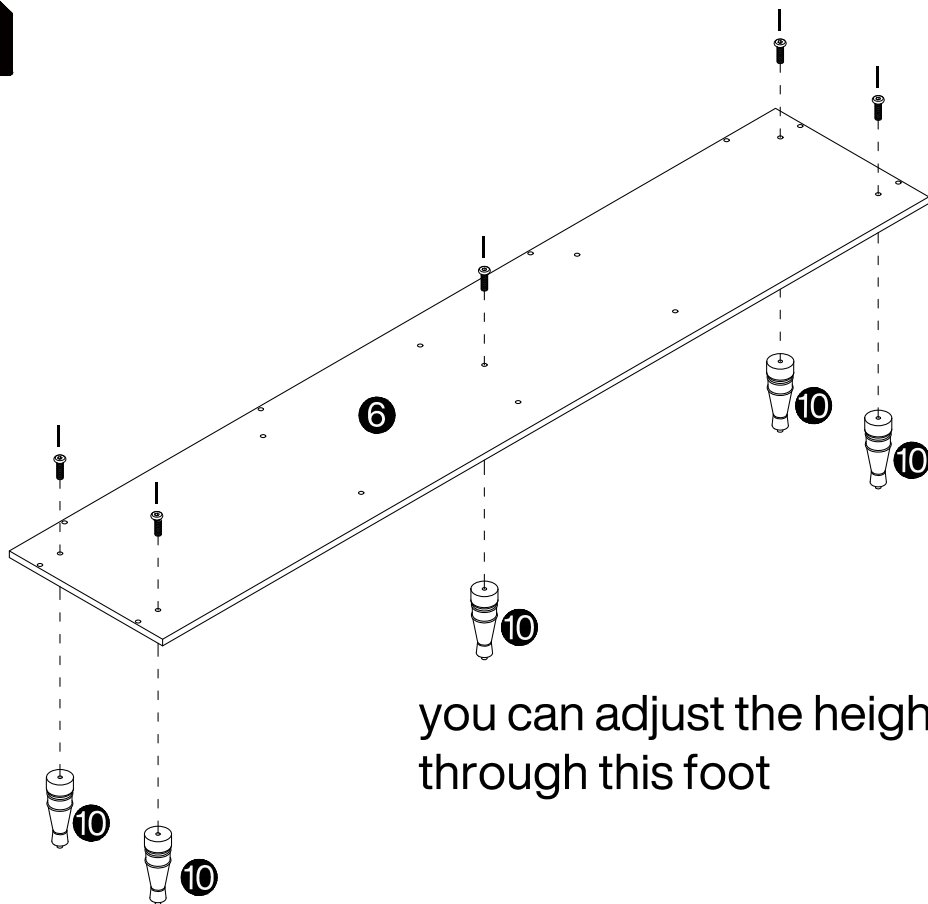



you can adjust the height
through this foot

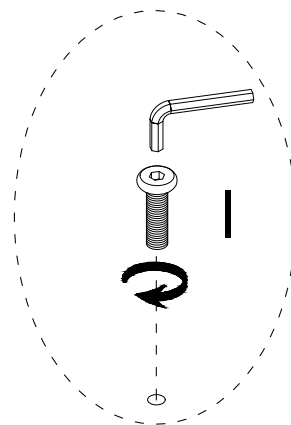


I

M8*30 mm
5 pcs

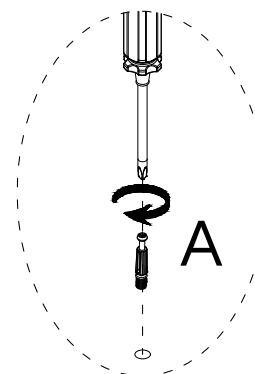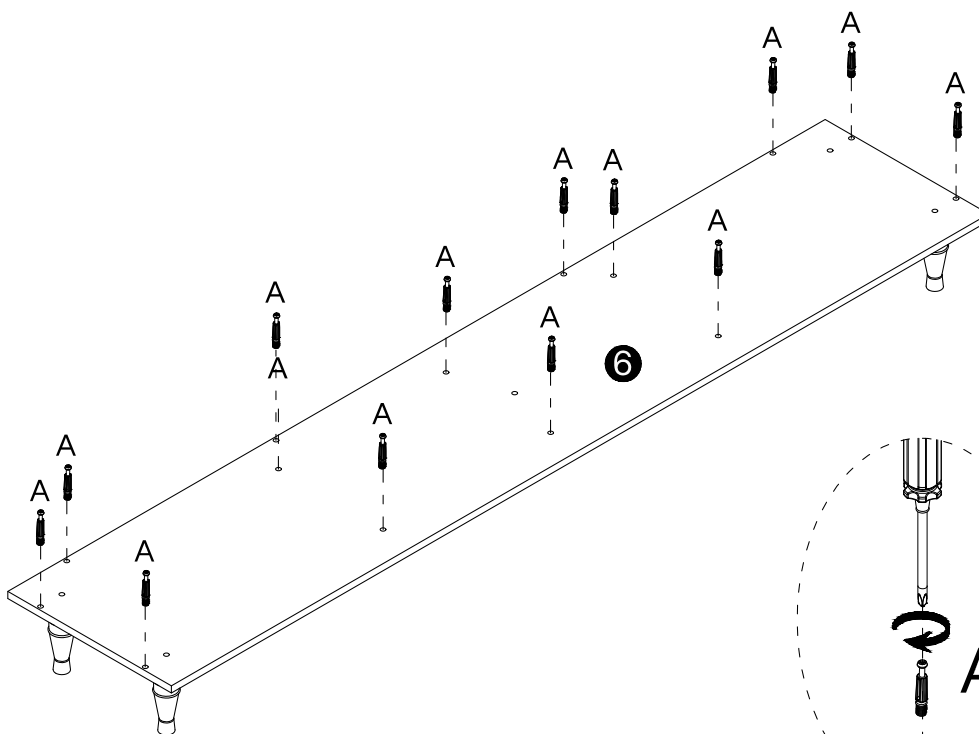8




A

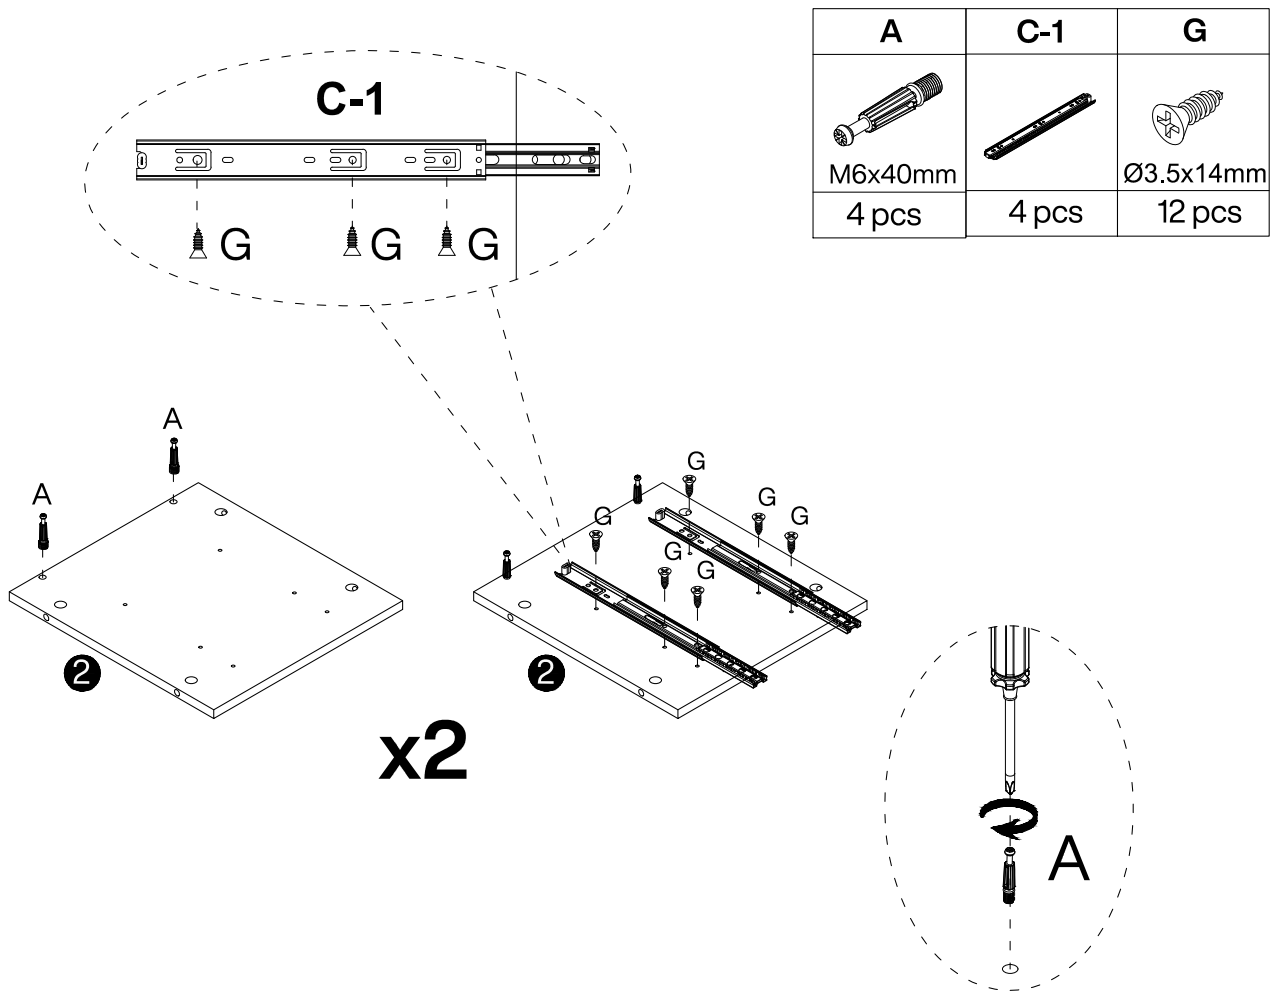M6x40mm
14 pcs


9

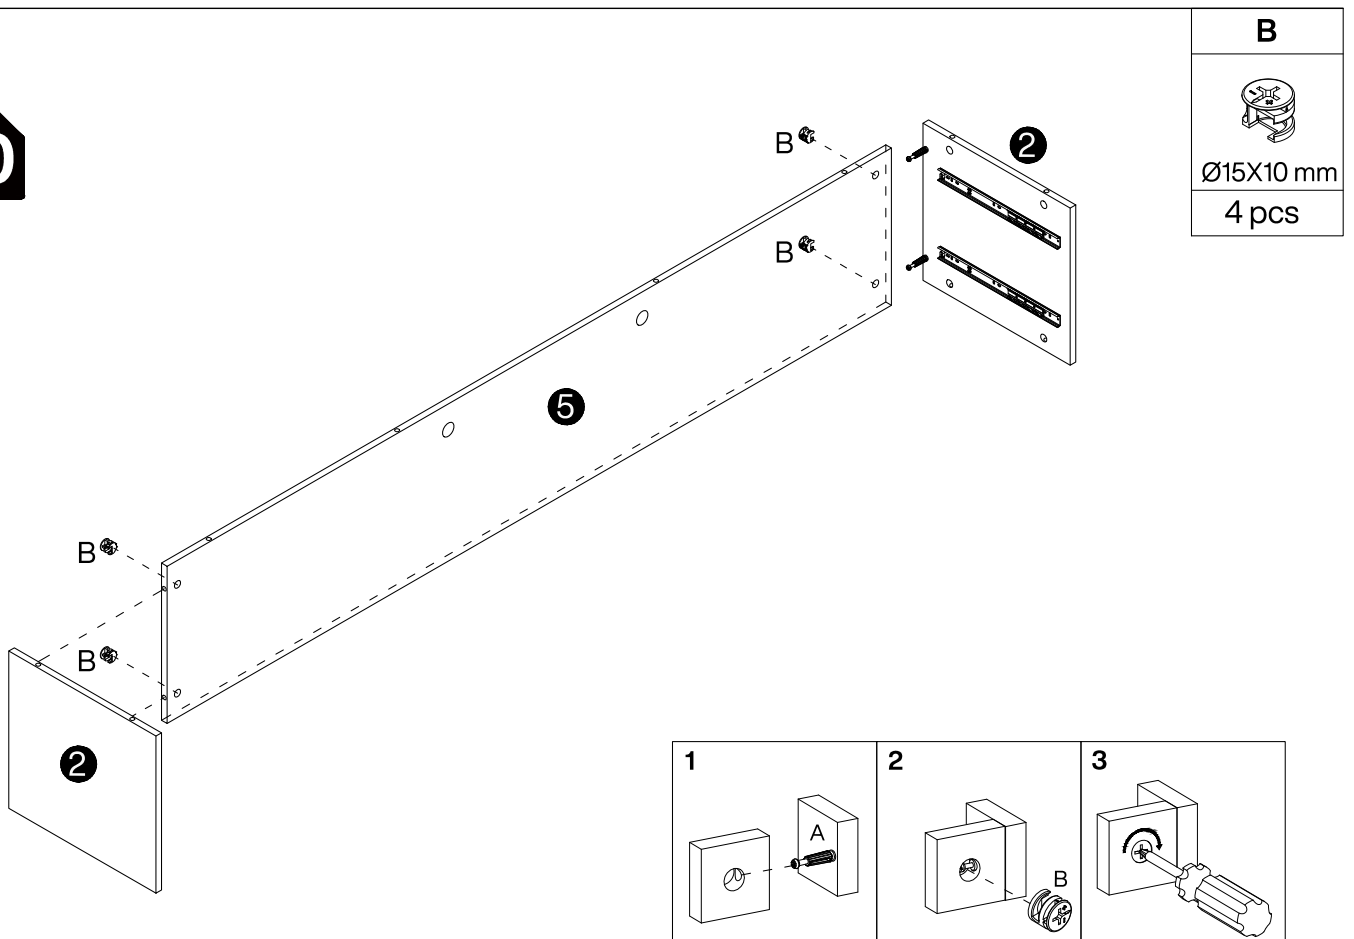

10




11

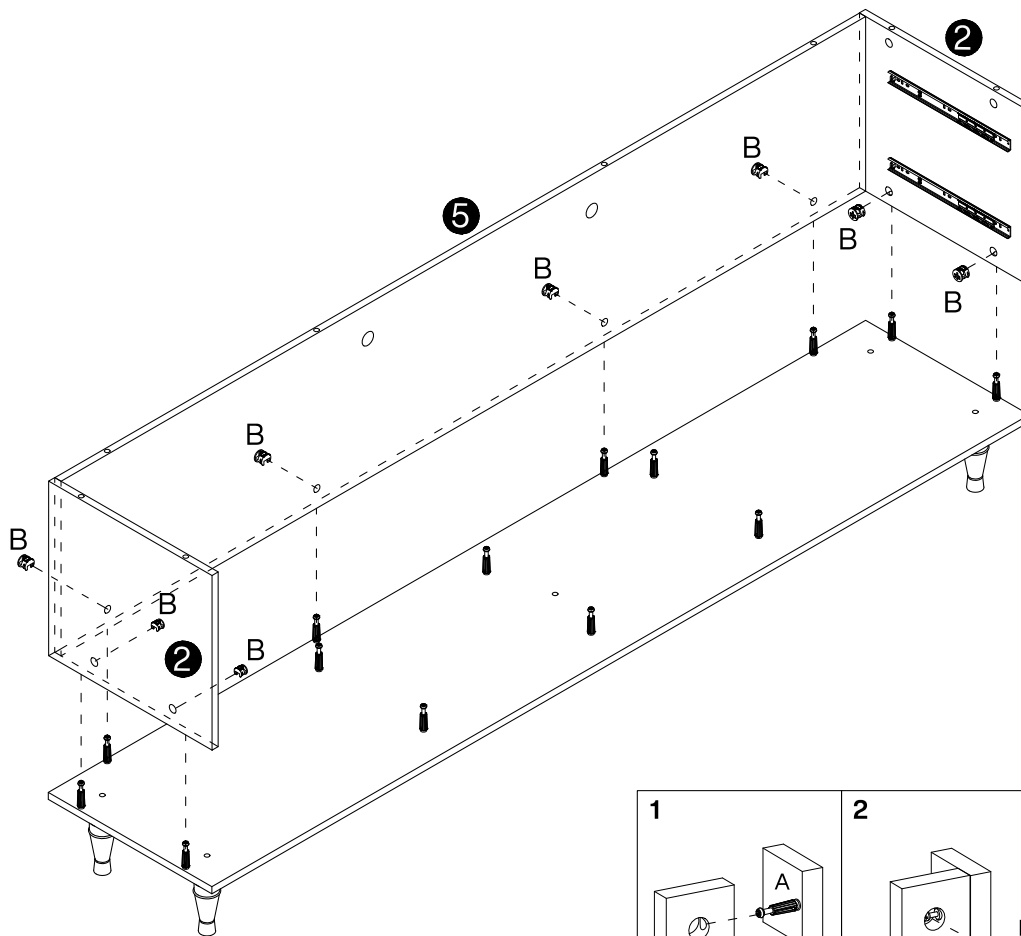


B

Ø15X10 mm
8 pcs

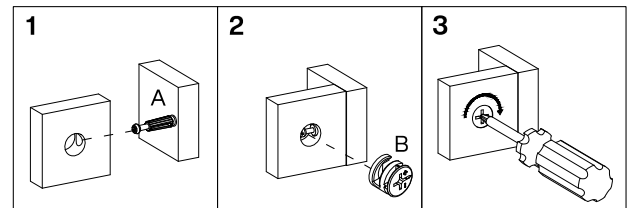


12

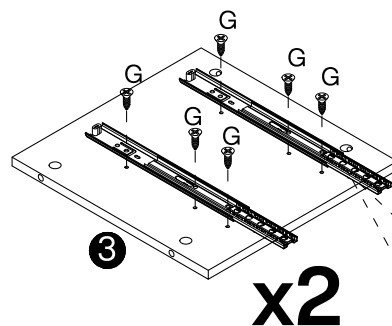


x2

C-1	G
	
4 pcs	Ø3.5x14mm
	12 pcs

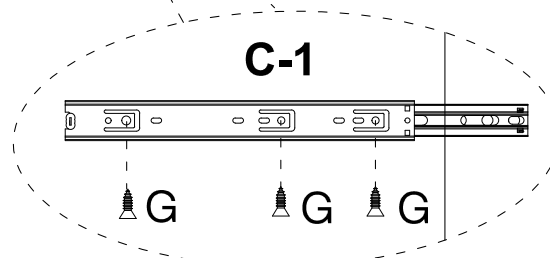


13

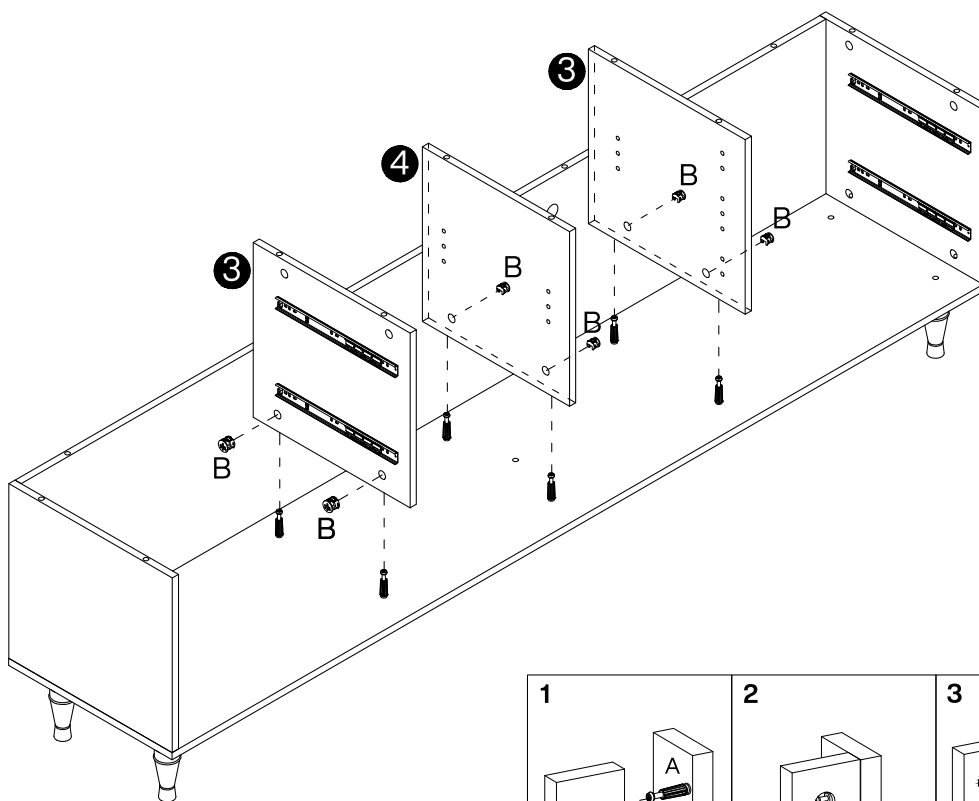


B

Ø15X10 mm
6 pcs

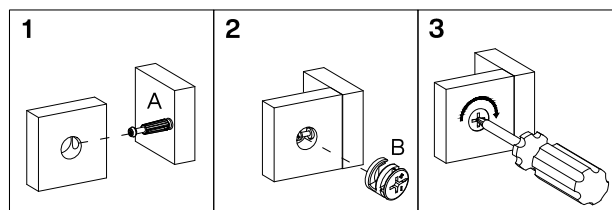


14

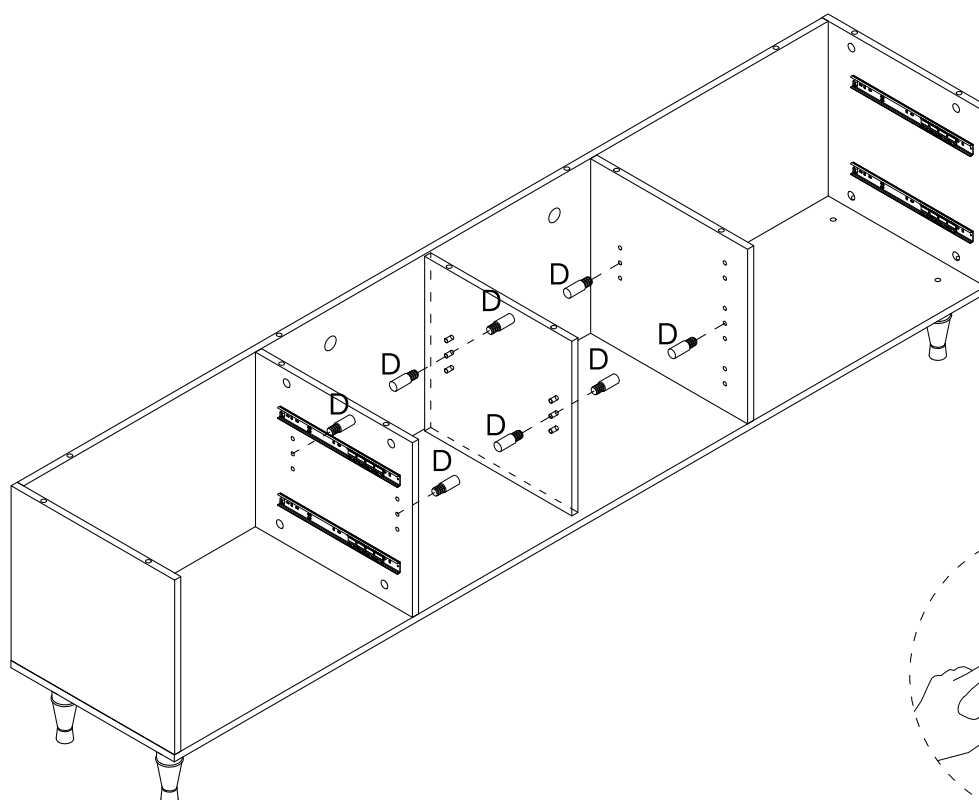


D


Ø6x20mm
8 pcs

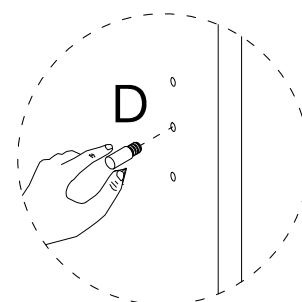

15

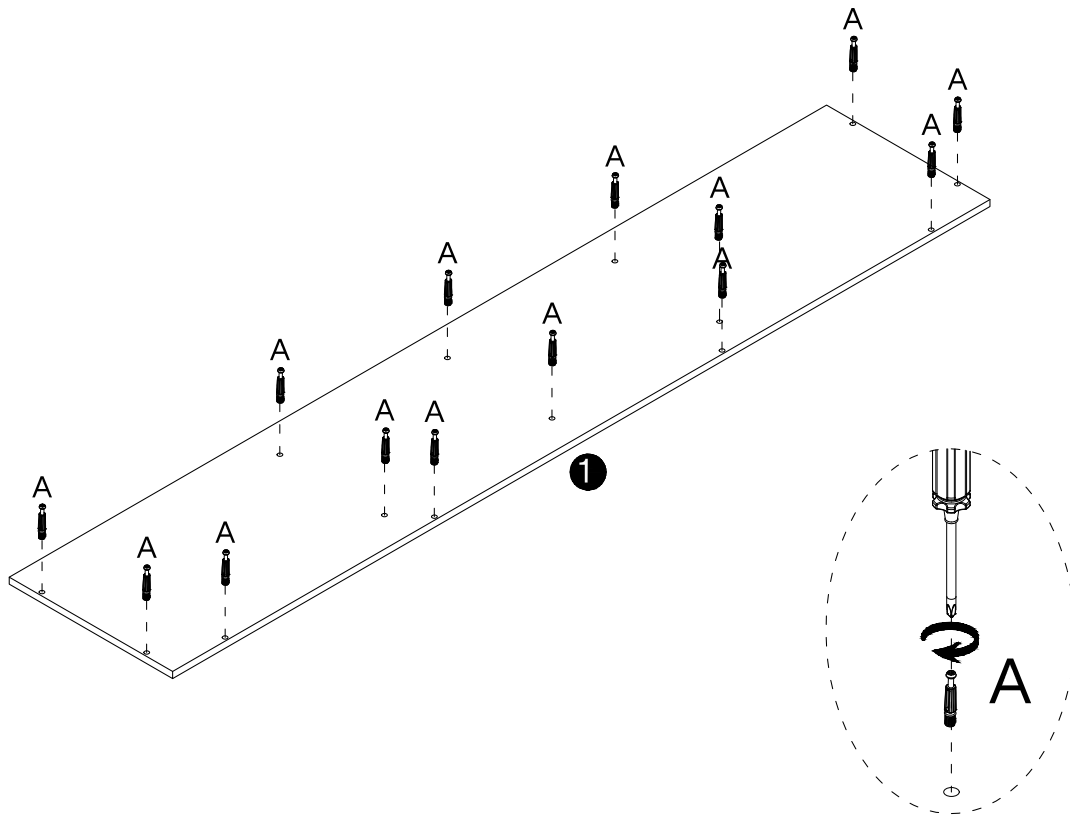


A



M6x40mm

14 pcs

16

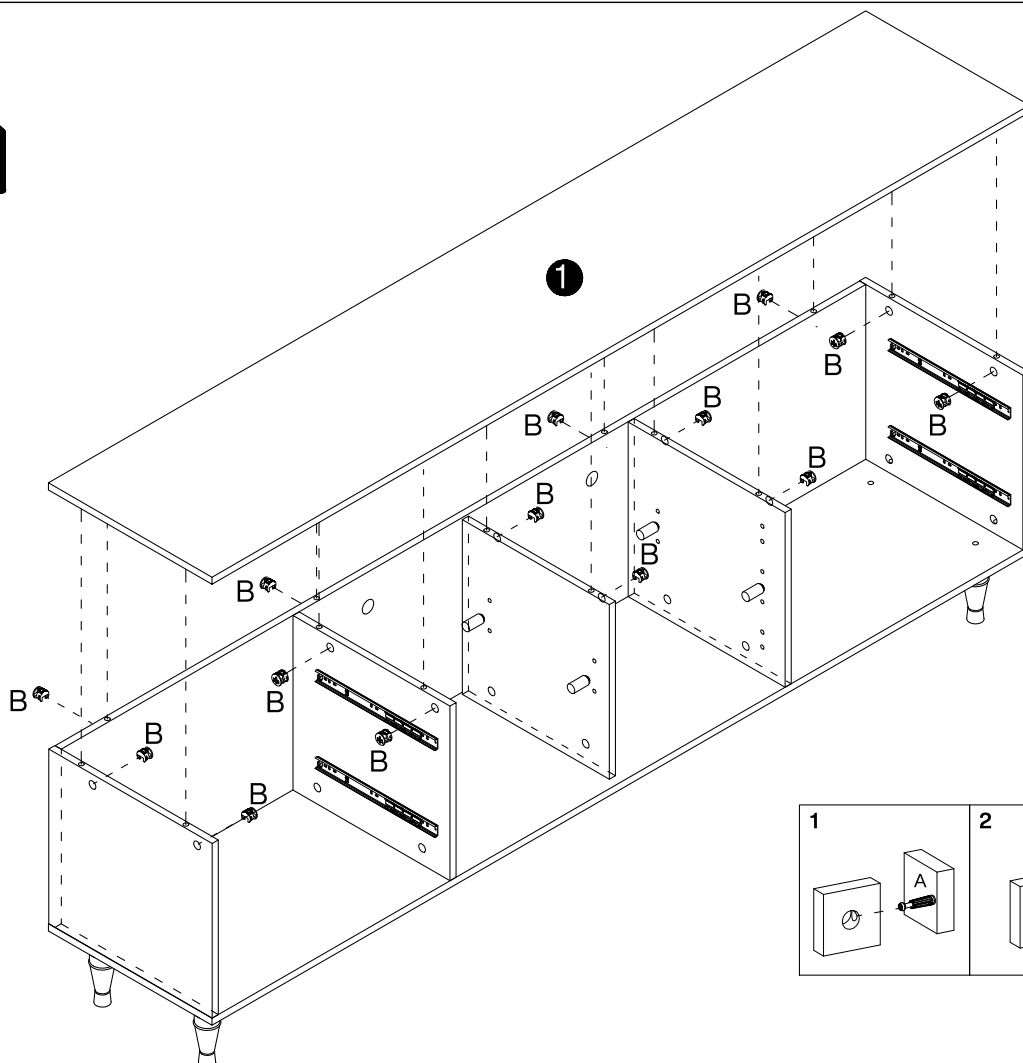


B




Ø15X10 mm



14 pcs



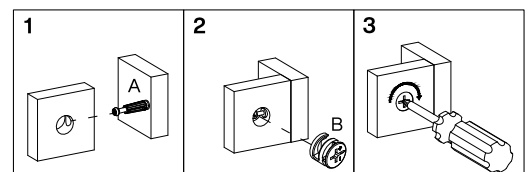


17

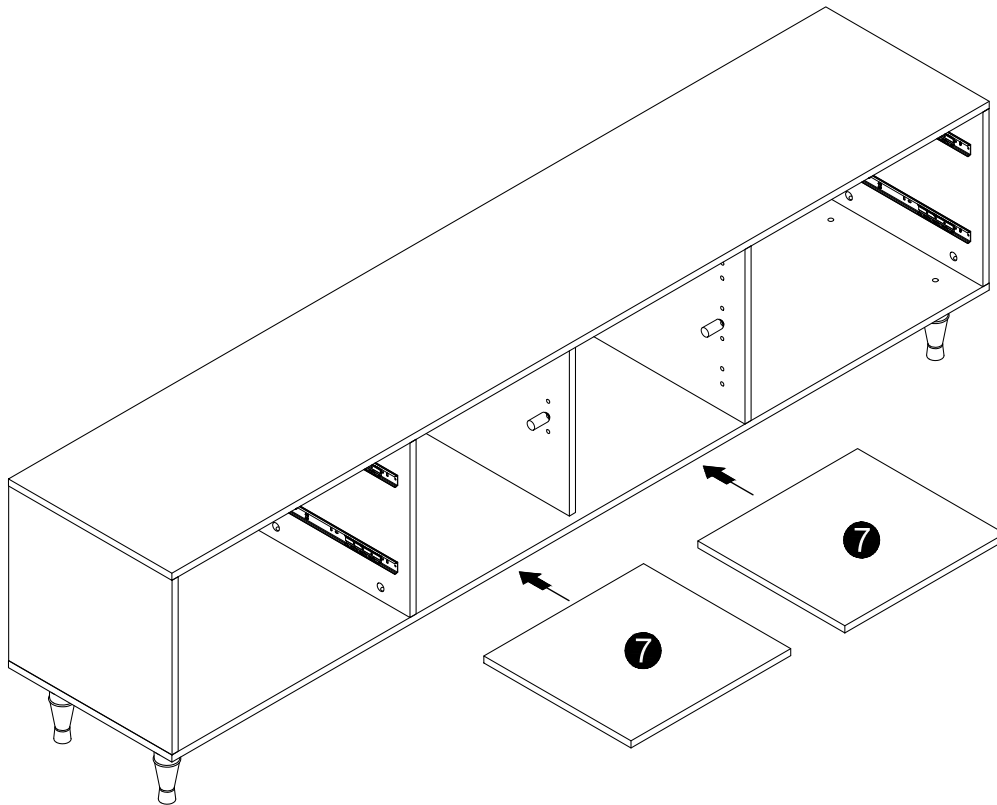


18

E	F	J	K
			
Dawan Hinge	M4x10		M4x22 mm
4 pcs	8 pcs	2 pcs	2 pcs

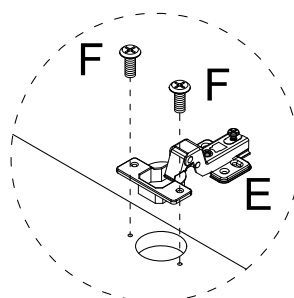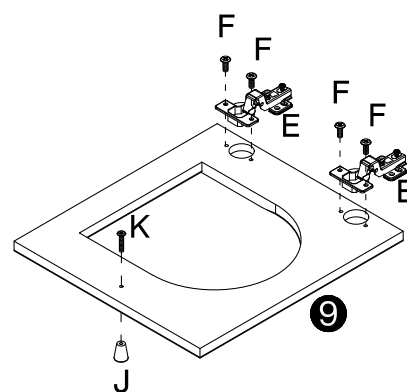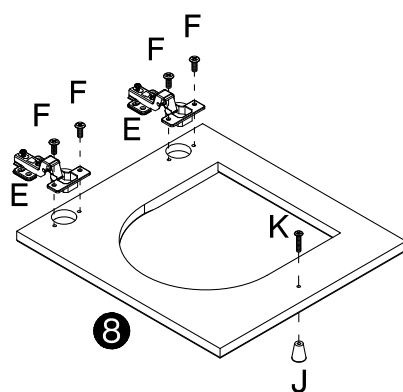


19

F	G
	
M4x10	Ø3.5x14mm
8 pcs	8 pcs




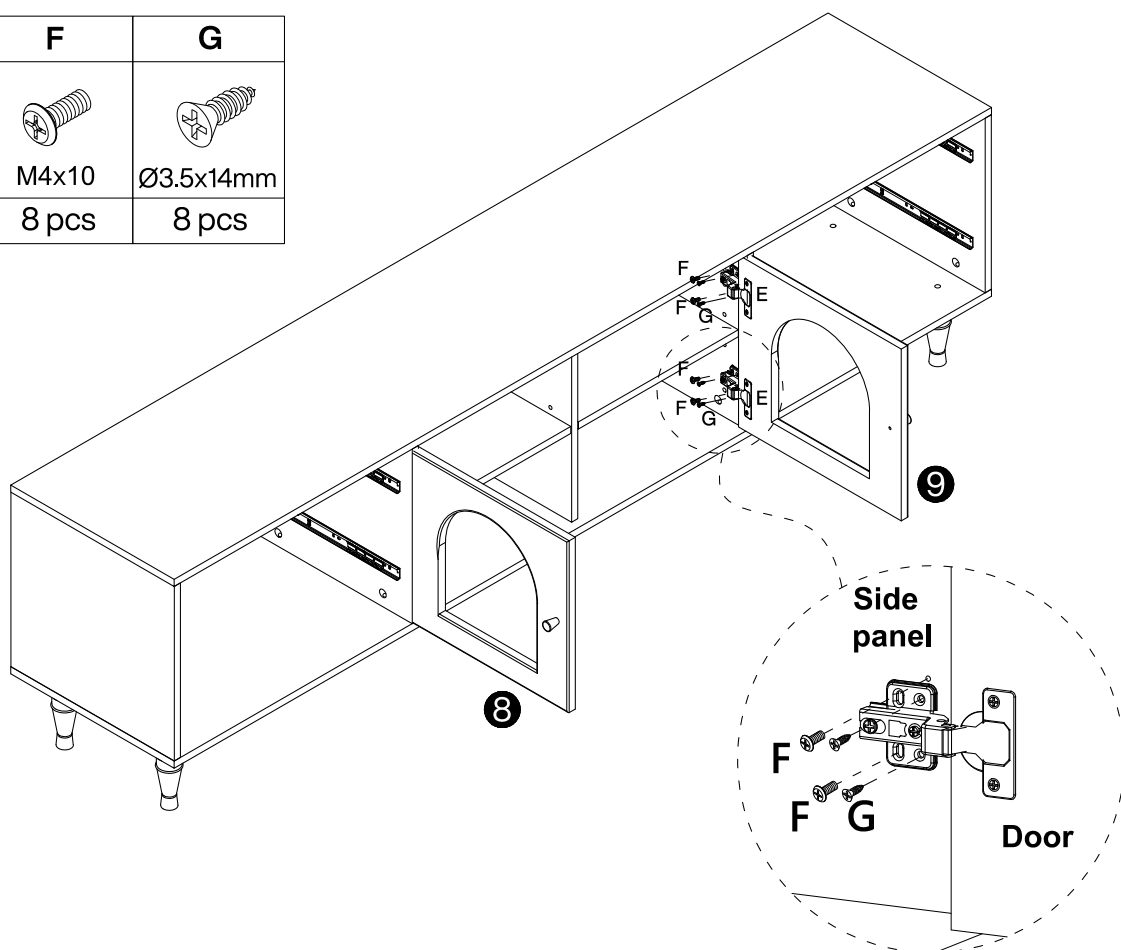


To prevent the door hinge from falling off, please install 4 screws

20




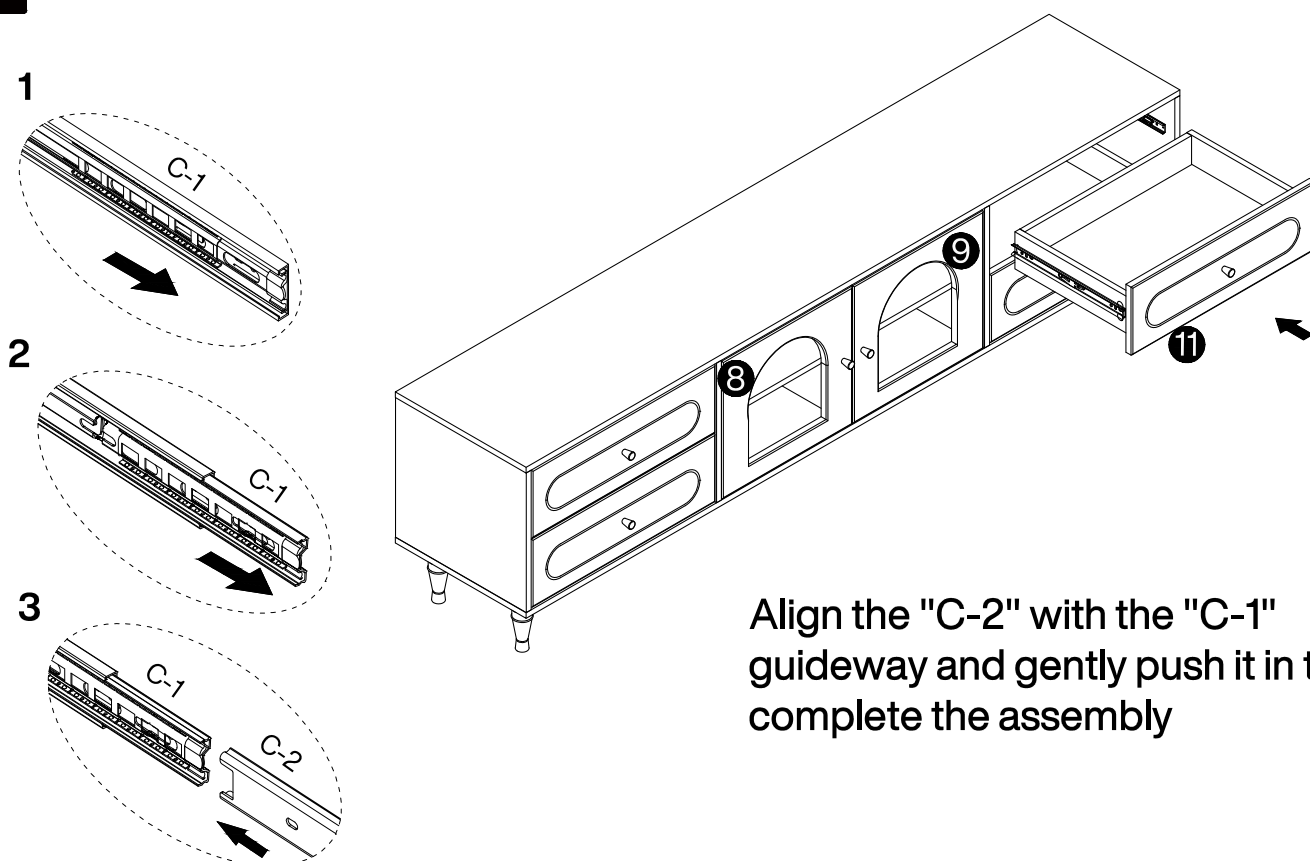


Align the "C-2" with the "C-1" guideway and gently push it in to complete the assembly

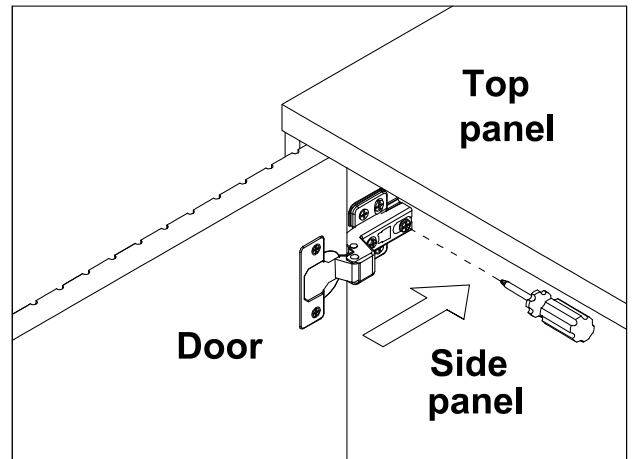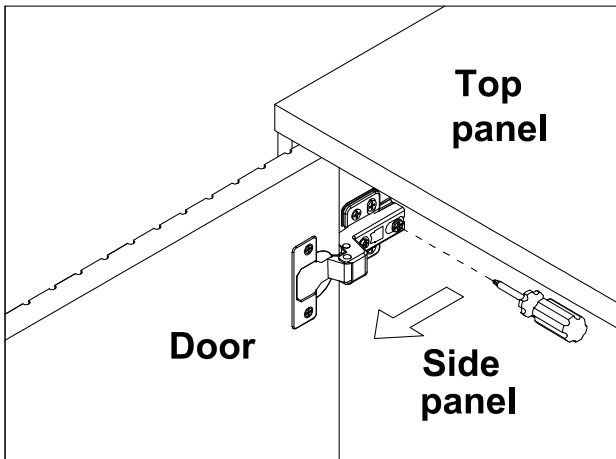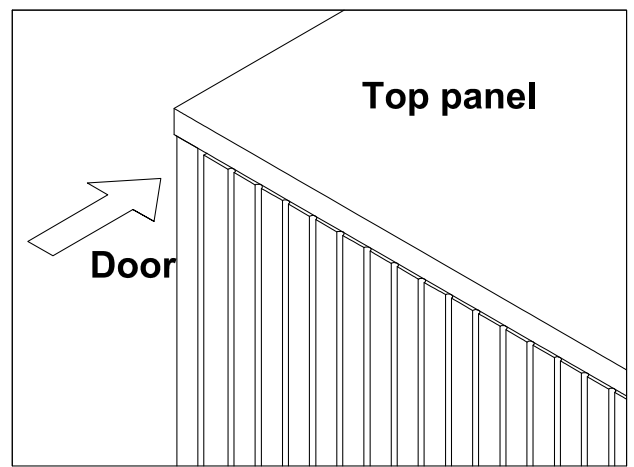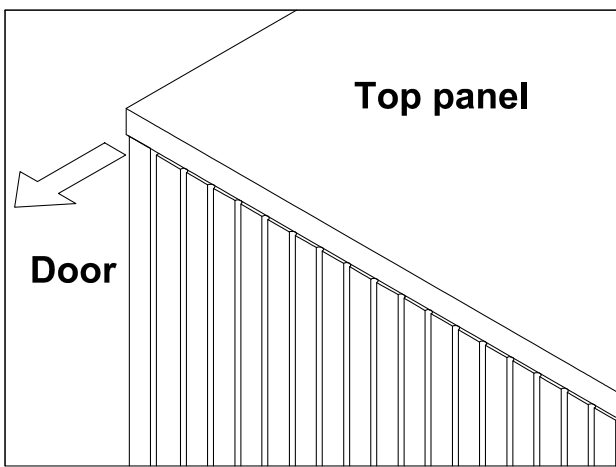

Pull the hinge forward a little.

Push the hinge back a little.

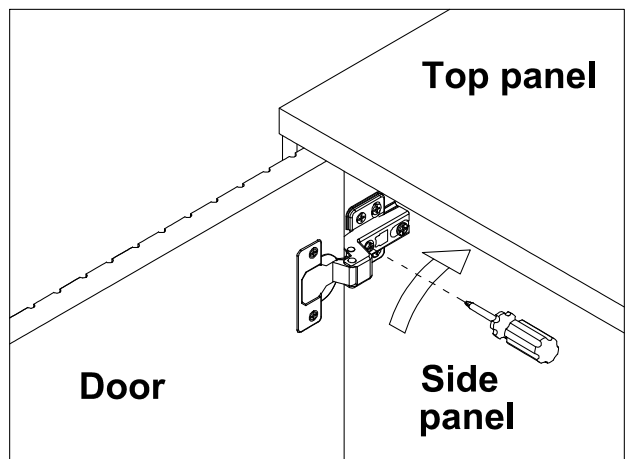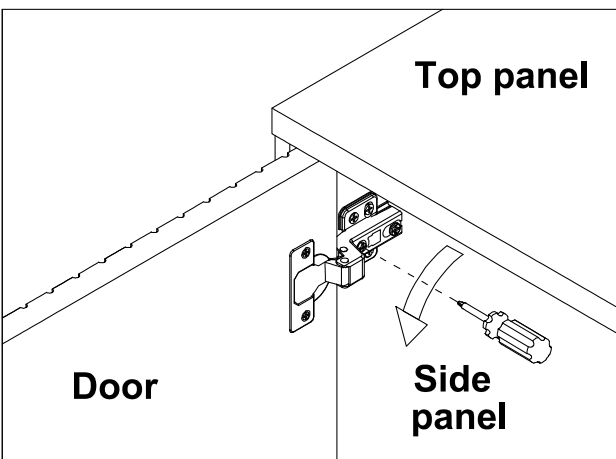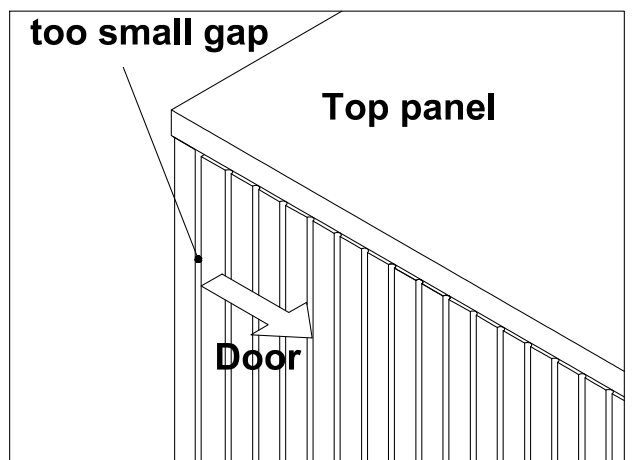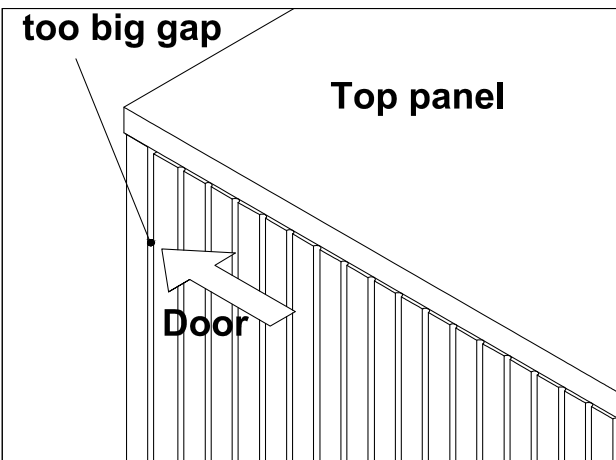

Turn the screw clockwise a little as shown to make the gap smaller

Turn the screw counterclockwise a little as shown to make the gap bigger