


Assembly Instruction

Accent Cabinet

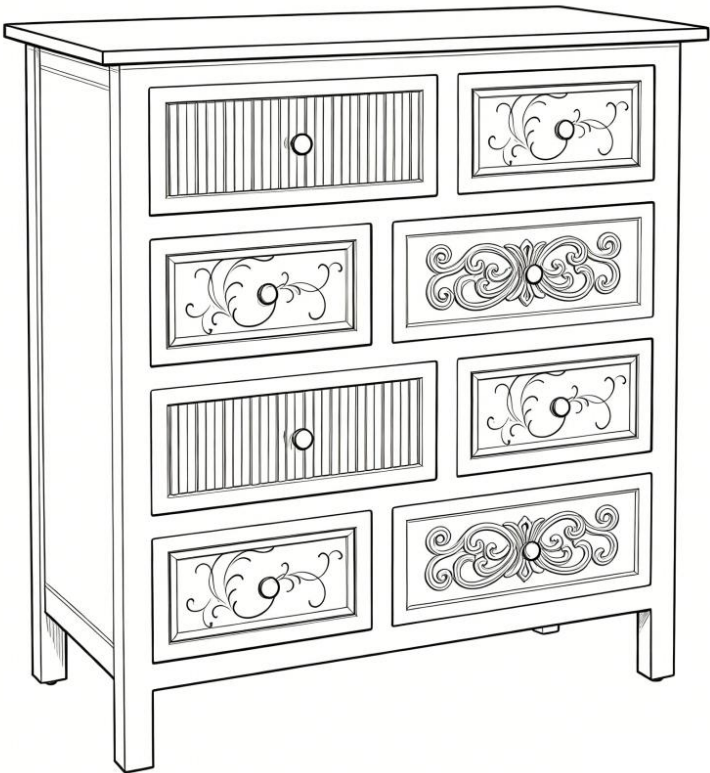

**WARNING:**

- Read all instructions carefully and completely before assembly and use.
- Retain for future reference.
- **DO NOT use power tools.**
- **DO NOT over-tighten hardware.**
- Periodically check all hardware and re-tighten as necessary.
- DO NOT sit or stand on product. Use only for intended purpose.
- DO NOT exceed 80 lbs for the tabletop and 10 lbs for the drawers& shelf, evenly distributed.

Parts List

Check all parts before assembly


Item no.	Reference image	QTY.	Item no.	Reference image	QTY.	Item no.	Reference image	QTY.
A.		1	G.		4	L.		4
B.		1	H.		2	M.		4
C.		1	I.		2	N.		4
D.		1	J.		8	O.		4
E.		4	K.		8	P.		1
F.		1						
H1.		8+1	H6.		32+4	H11.		8+1
H2.		8+1	H7.		32+4	H12.		4
H3.		16+2	H8.		1	H13.		4+1
H4.		16+2	H9.		1	H1: M6x30mm H3: M3.5x12mm H7: M4x25mm H10: M4x15mm H13: M4x20mm		
H5.		32+4	H10.		4+1			

Step 1: Put the Table Top (A) on a soft surface to protect the finish.


Attach the Panel (B) to Panel (A) with Hex bolt (H1) by Allen Key (H8). Turning the Panel (B) down.

Insert Panel (D&C) to Panel (B). Ensure the Panel (D&C) aligned with the Grooves on Panel (B).

Leave the hardware loose in this step.

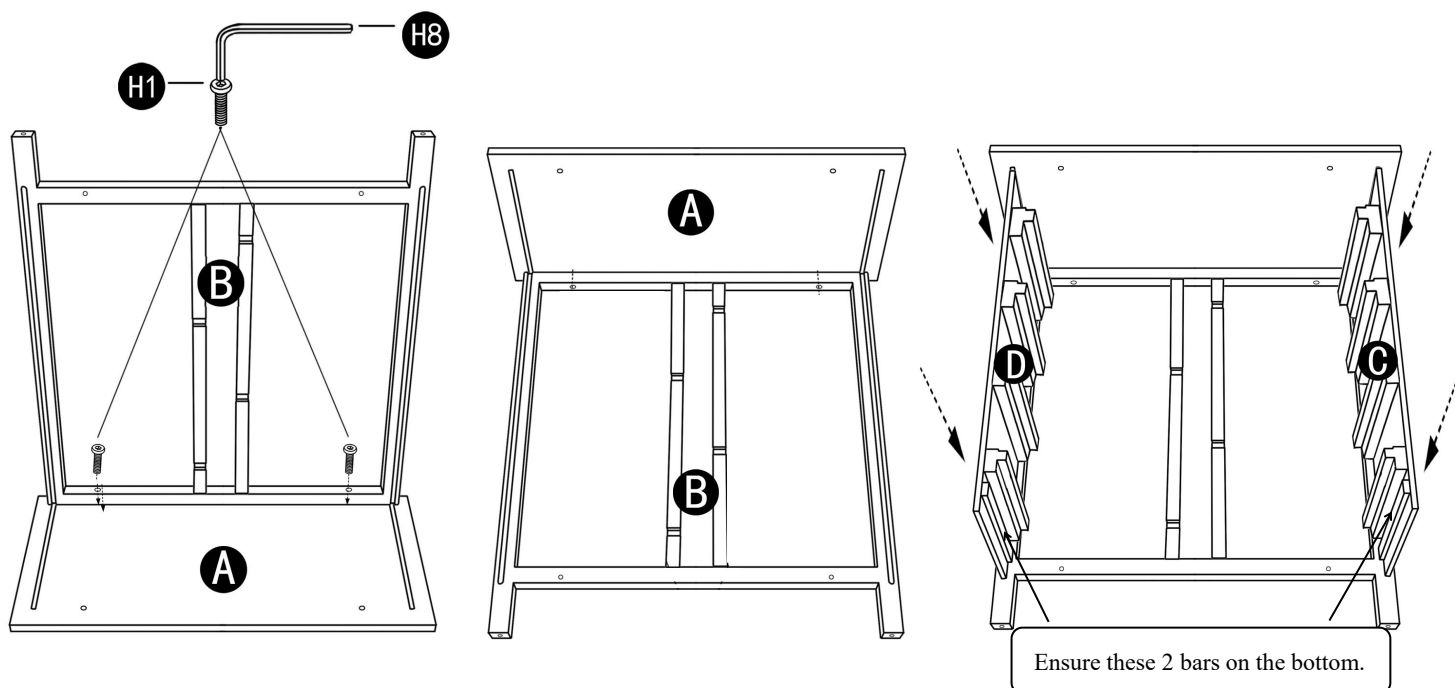

Step 2: Insert Wooden strip (E) to Panel (B) as shown below. Attach the Bottom Panel (P) to Panel (B) with Hex bolt (H1) & washer (H2) by Allen Key (H8). **Leave the hardware loose in this step.**

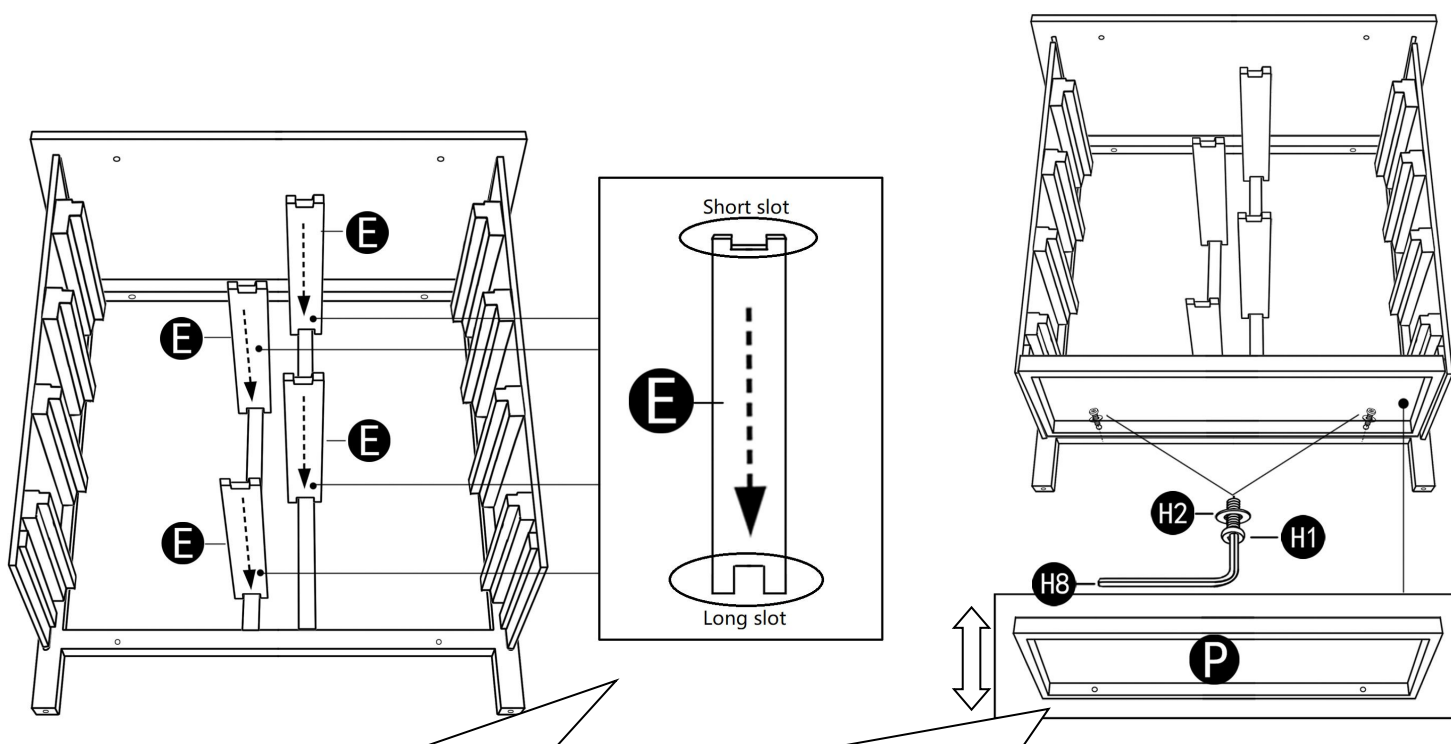


The longer slot on Wooden Strip (E) should face Back Panel (B).

Make sure Bottom Panel (P) is aligned with the bottom edge of Panel (B).

The position of Bottom Panel (P) affects the drawer installation.


If the drawers are not level after assembly, slightly loosen the hardware on Bottom Panel (P), adjust it up or down, and then retighten all hardware.

Step 3: Attach the Panel (F) to Panel (A) with Hex bolt (H1) by Allen Key (H8).
Tighten the Panel (F) to Panel (P) with Hex bolt (H1) & washer (H2) by Allen Key (H8).
Ensure the Panel (C&D) aligned with the Grooves on Panel (F&E).
Fully tighten all Bolts from step 1 to 3. Attach the Foot pad (H12) to all Leg as below.

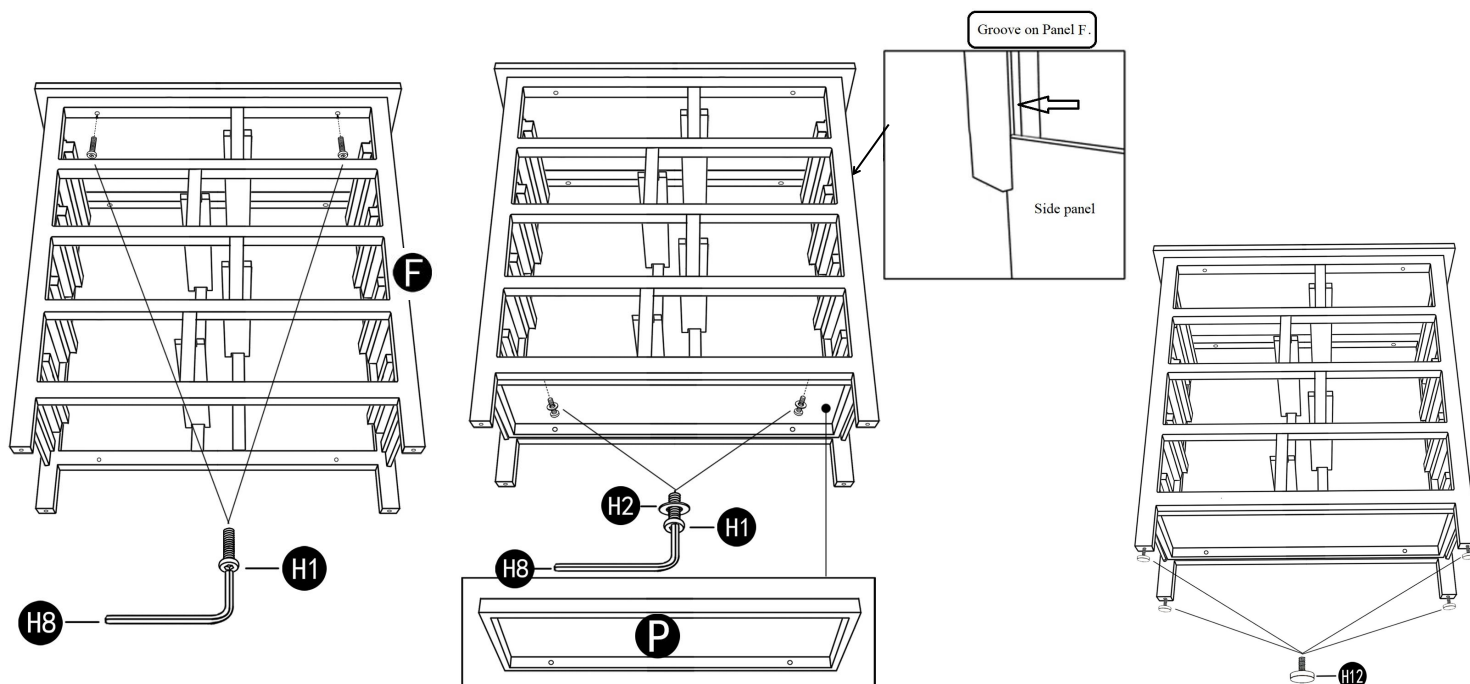


Step 4: TWO PEOPLE REQUIRED when turning the item upside down to avoid breaking the legs.


Step 7: Put the Top drawer's panel (H/J/K/L/N) on a soft surface to protect the finish.
Ensure to use the Bolt (H13) for the knob on this step. **Totally 2 drawers for this pattern.**

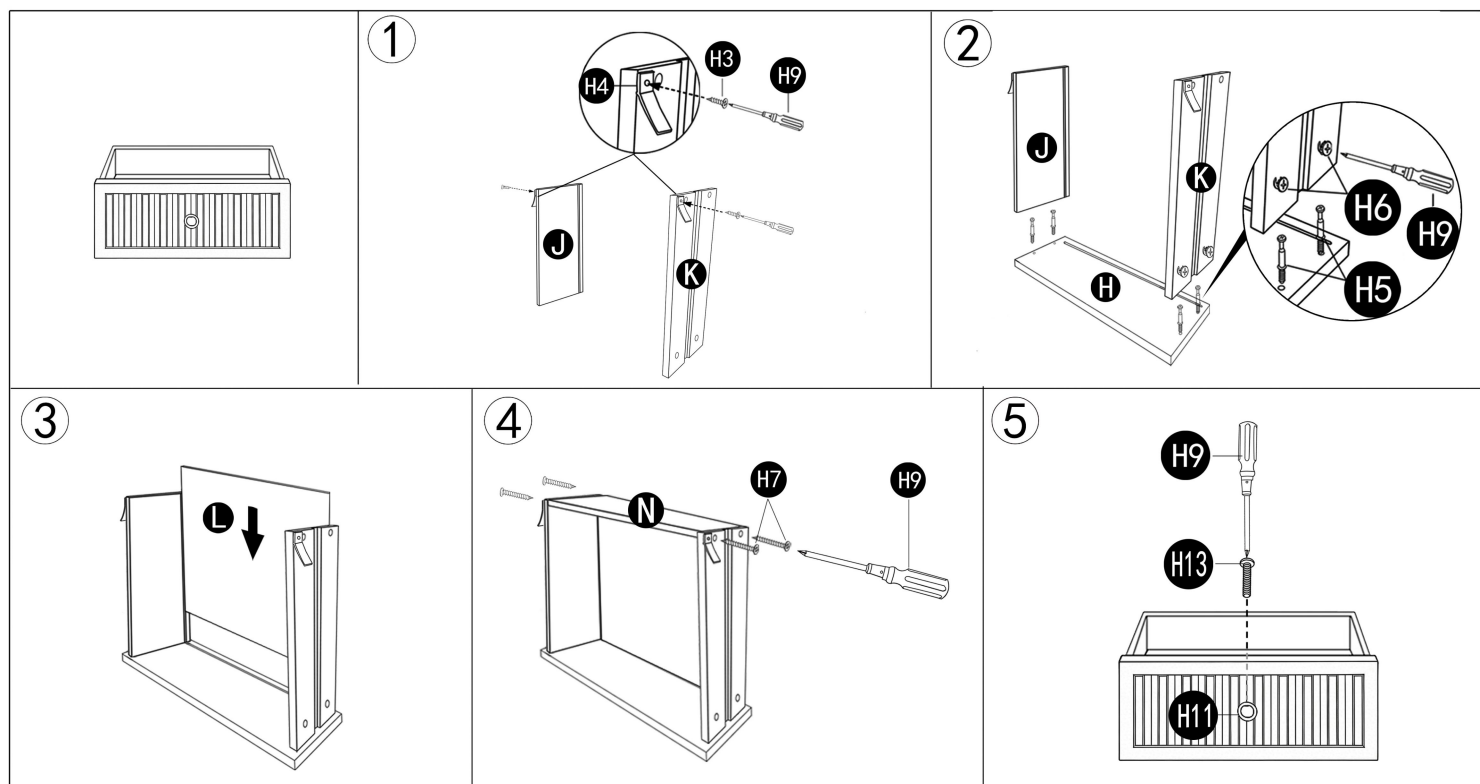

Step 5: Put the Top drawer's panel (**G/J/K/M/O**) on a soft surface to protect the finish.
 Ensure to use the Bolt (**H10**) for the knob on this step. **Totally 4 drawers for this pattern.**

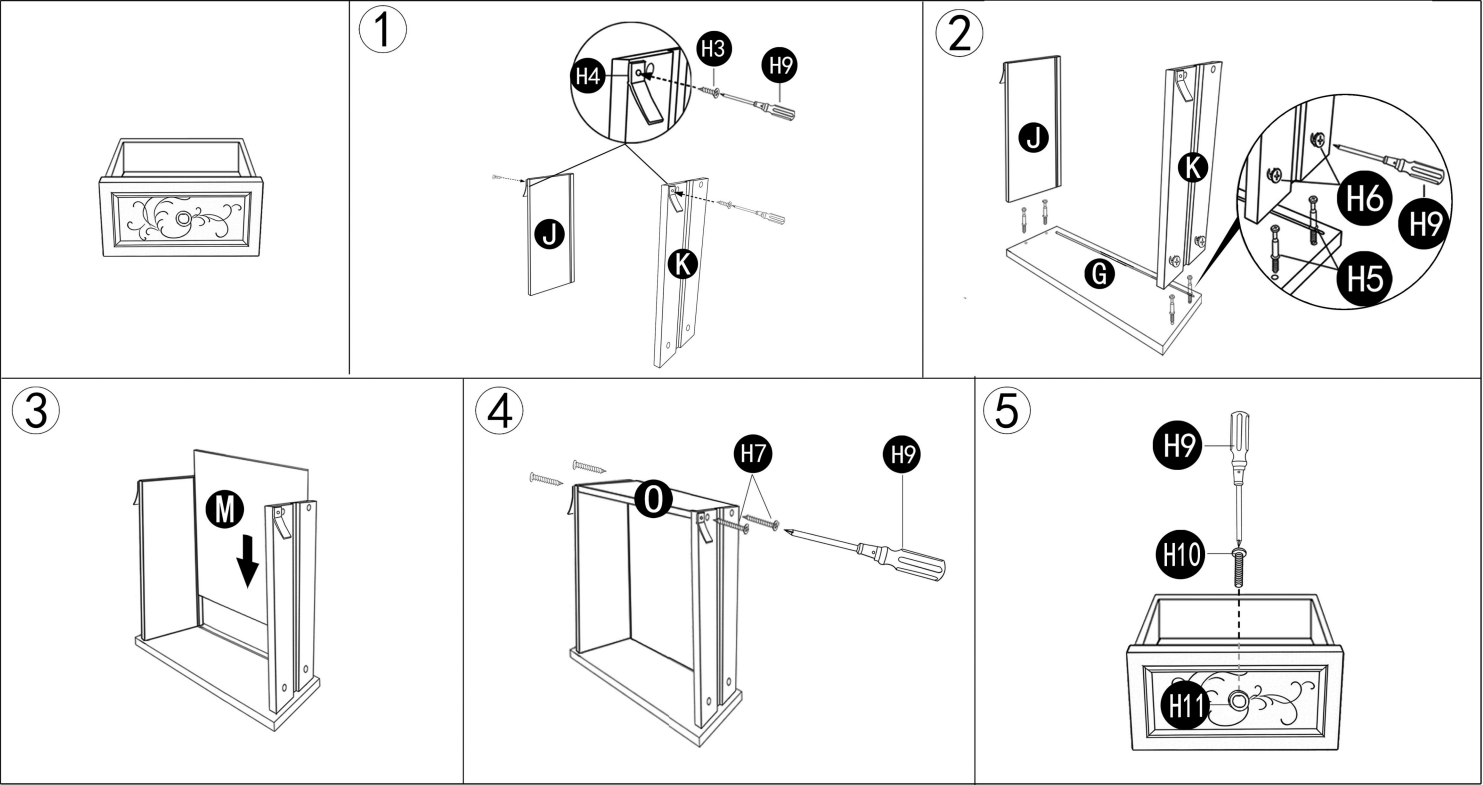

Step 6: Put the Top drawer's panel (**I/J/K/L/N**) on a soft surface to protect the finish.
 Ensure to use the Bolt (**H13**) for the knob on this step. **Totally 2 drawers for this pattern.**

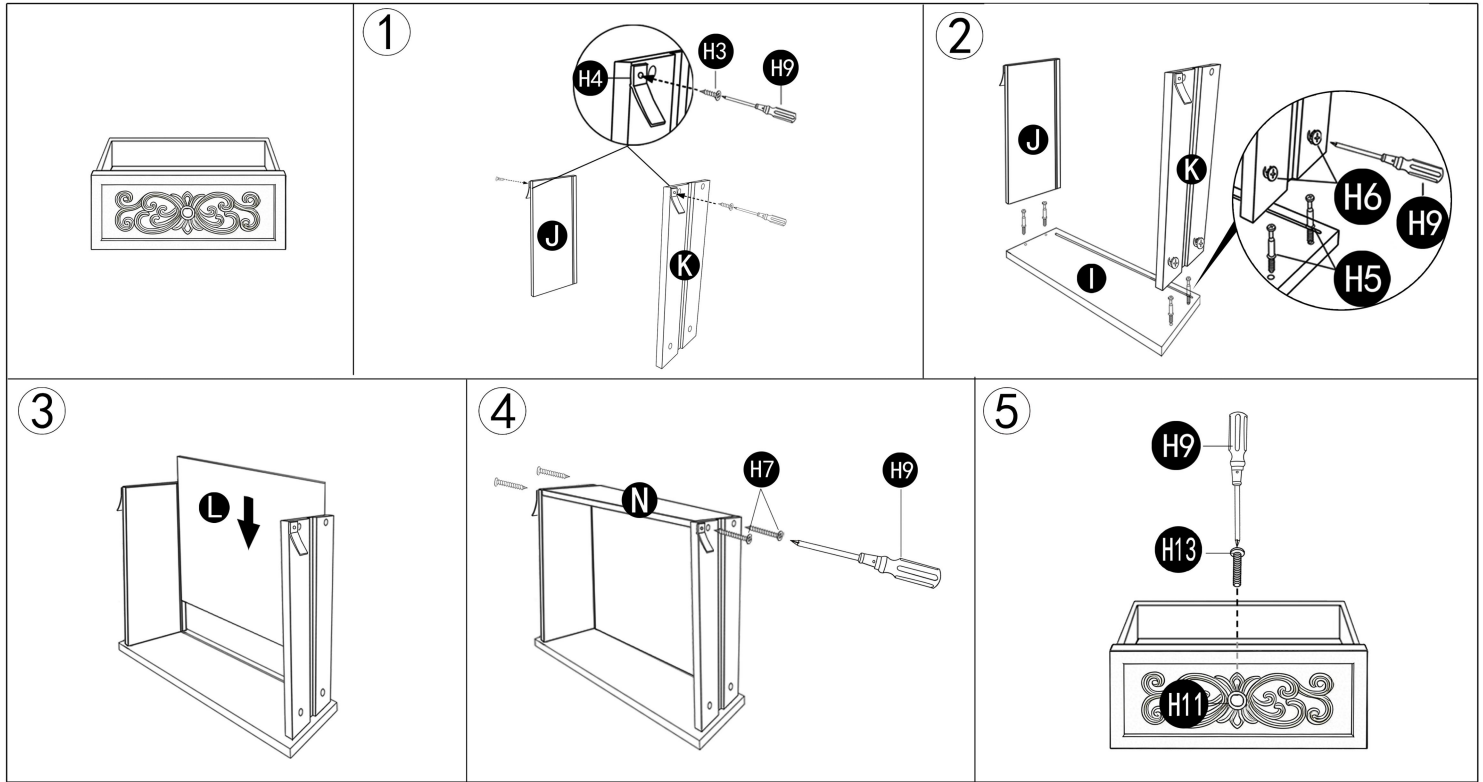

Place all drawers to the main Body. Assembly finished.

Thanks for buying this Living Room Furniture.

If you encounter any issues during installation or use, please email us at support@mi-din.com, including your order ID and a detailed description of the problem. If possible, please provide relevant images to expedite assistance. We will strive to resolve any issues promptly.