


# Assembly Guide

Keep manual for future reference.

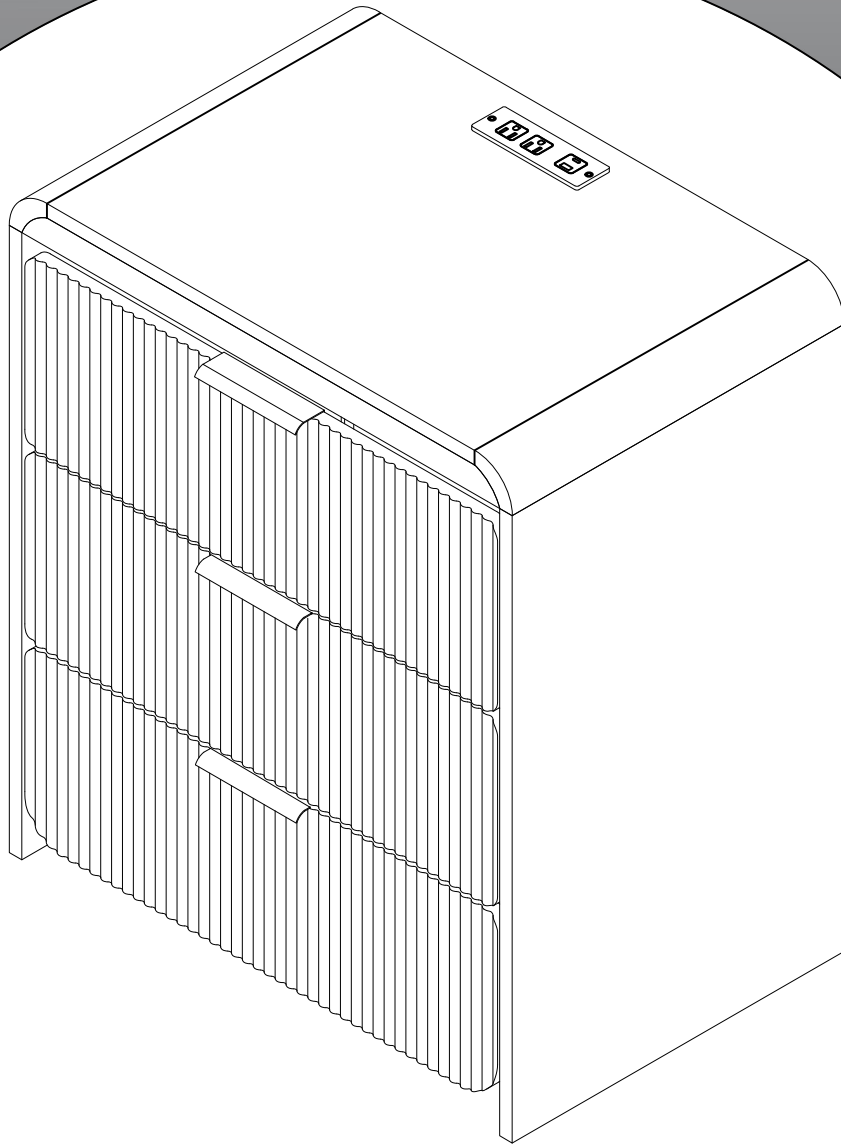

# Inform

## Assembly Instructions

Before beginning the assembly process, please read and save these instructions for reference. Following these guidelines will ensure a smooth and successful assembly of your product secure the components without excessive tightening.

### **1.Part Identification:**

Carefully separate and identify all the parts included in your package. Confirm that you have all the components listed in the instruction manual. This step will help you avoid any missing or misplaced parts during assembly.

### **2.Work Surface:**

To prevent any scratches or damage to the product, assemble it on a soft mat or a similar protective surface. This will provide a cushioned area for the components and protect the surfaces from unwanted marks.

### **3.Step-by-Step Assembly:**

Follow the assembly instructions provided, proceeding one step at a time. Take care to understand each step properly before proceeding to the next one. This sequential approach ensures that the assembly is done correctly and minimizes the chance of errors.

### **4.Proper Screw Seating:**

all screws are correctly seated. By partially tightening each screw and nut initially, you can ensure that they are aligned properly and fit securely before final tightening.

### **5.Avoid Over-Tightening:**

While each screw and nut should be tightened correctly, it is crucial not to over-tighten them. Over-tightening can cause damage to the product or compromise its structural integrity. Use the appropriate amount of force to secure the components without excessive tightening.


---

## Customer help center:

If you encounter any questions or problems during the assembly process, please do not hesitate to contact us.


We strive to provide excellent customer support and will respond to your inquiries within 24 hours. Our team will offer you a suitable solution to address any concerns you may have.

# Get to know your Boards

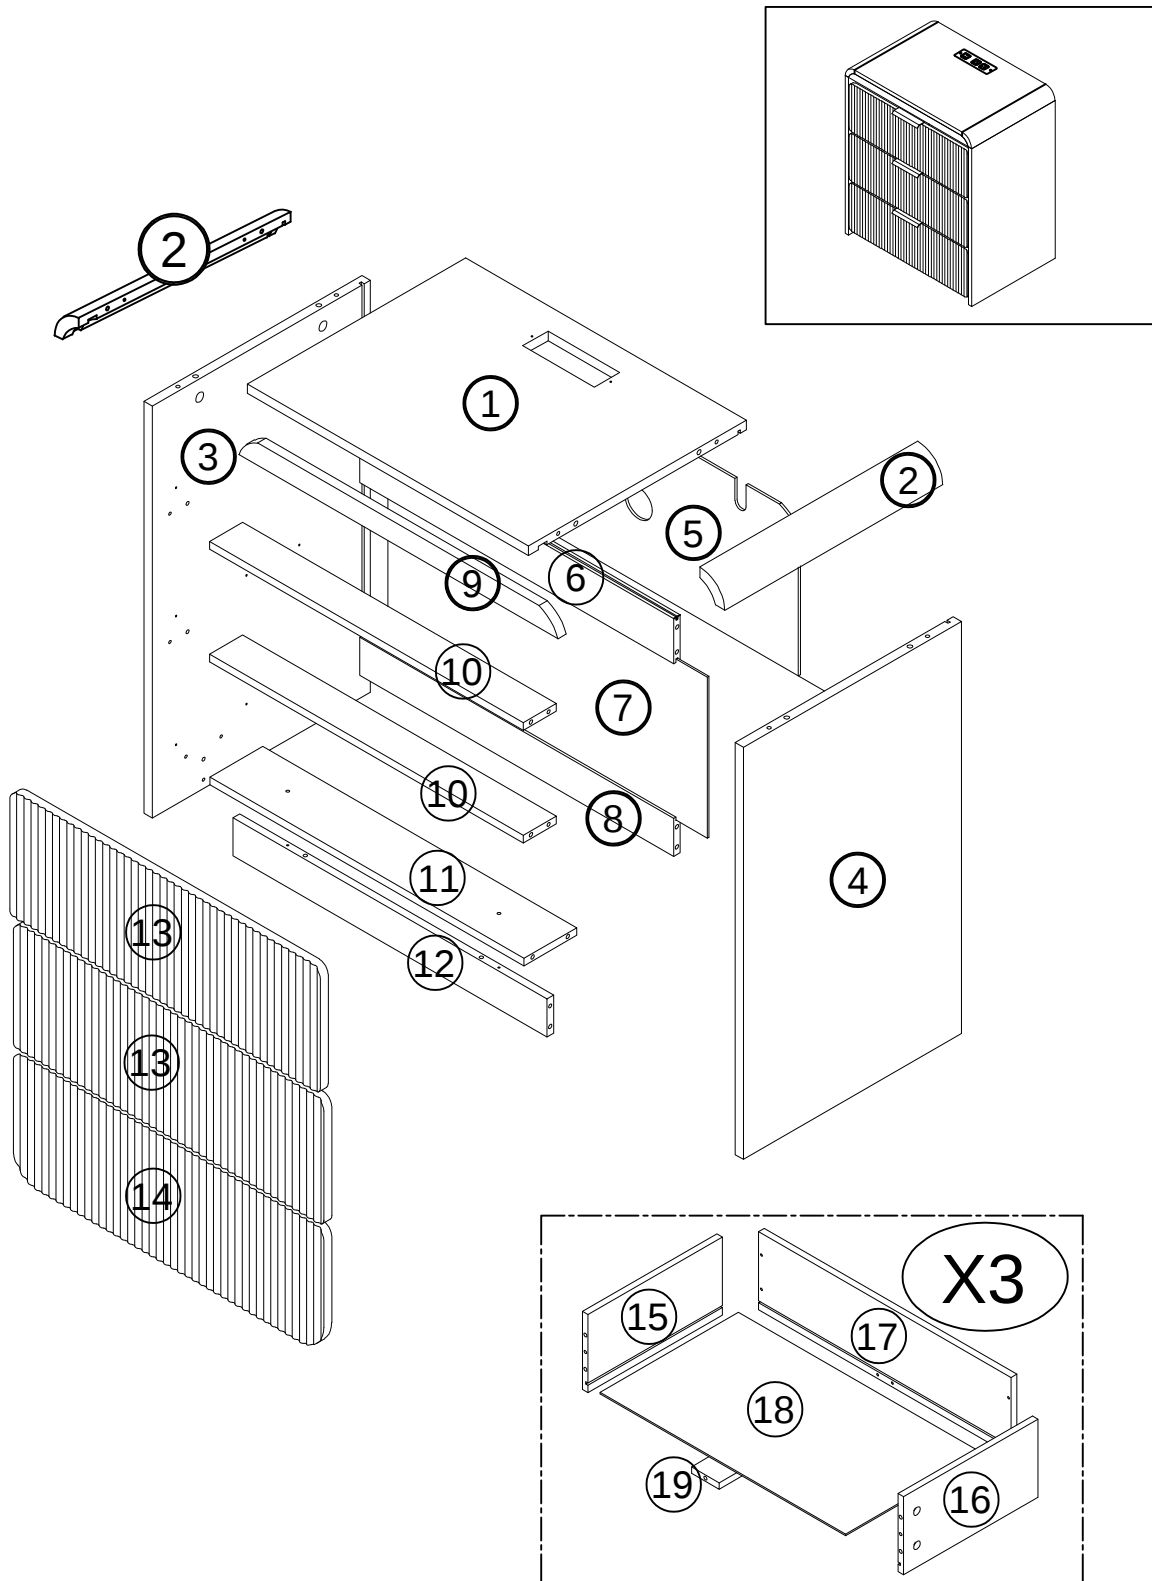


# Parts List

①

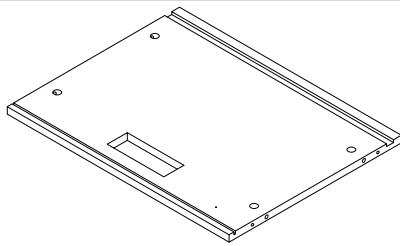


[ 1 ]

②

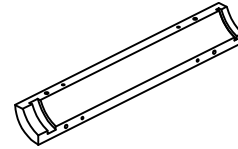


[ 2 ]

③

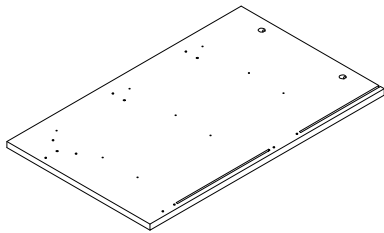


[ 1 ]

④

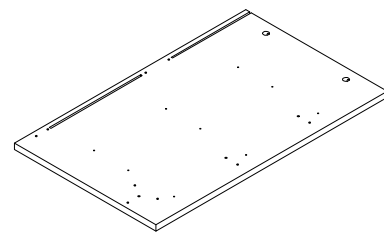


[ 1 ]

⑤

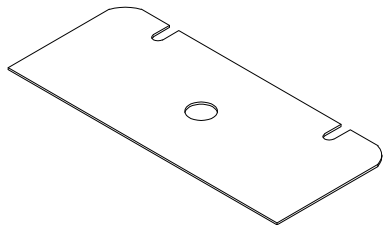


[ 1 ]

⑥

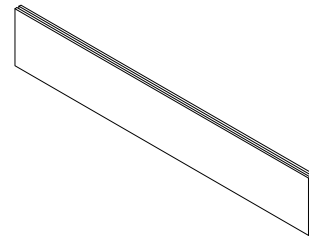


[ 1 ]

⑦

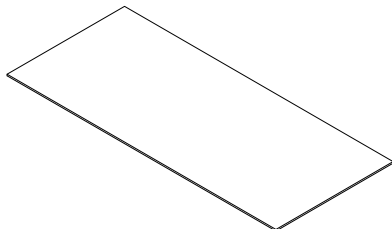


[ 1 ]

⑧

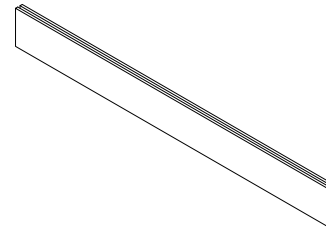


[ 1 ]

⑨

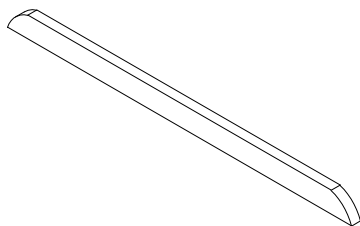


[ 1 ]

⑩

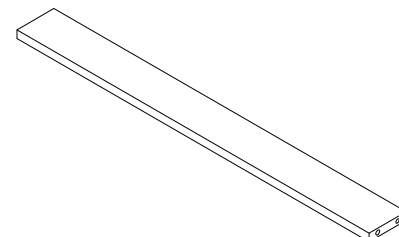


[ 2 ]

⑪

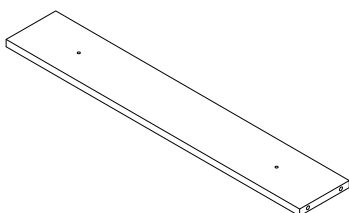

[ 1 ]


⑫

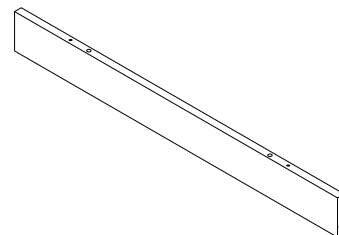

[ 1 ]


# Parts List

13

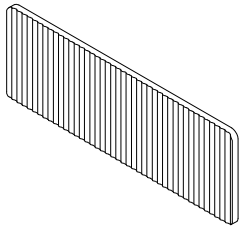


[ 2 ]

14

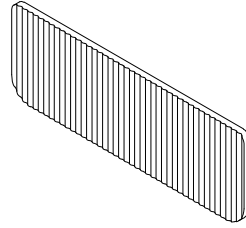


[ 1 ]

15

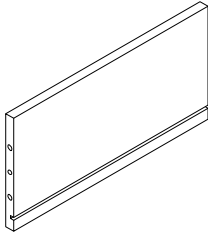


[ 3 ]

16

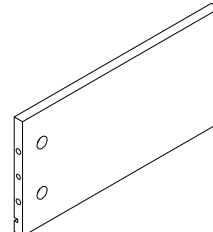


[ 3 ]

17

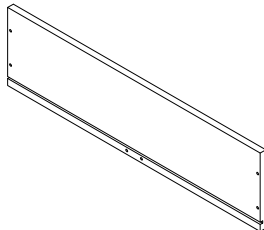


[ 3 ]

18

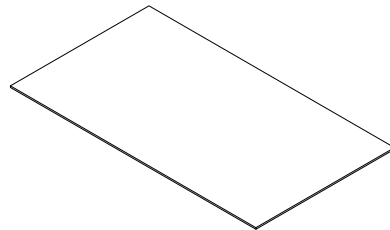

[ 3 ]

19




[ 3 ]

# Fasteners

Fasteners are shown actual size 1:1


(A)



[ 41 ]

KD Bolt  
M6x36mm

(B)



[ 41 ]

KD Cam  
Ø15x9.5mm

(C)



[ 22 ]

Wood Dowel  
6 x 30mm


(D)



[ 18 ]

ST4x35mm


(E)



[ 44 ]

ST3.5x12mm

(F)



[ 18 ]

ST3.0x16mm

(G)




[ 2 ]

Ø5.0x48mm

# Get to know your Hardware


(H)

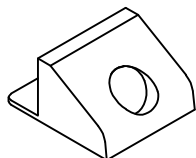

[ 18 ]

Back Clip


(I)

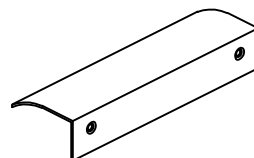

[ 3 ]

Handle

(J)



[ 4 ]

EVA Pads


(K)



[ 12 ]


Cover

(M)



[ 1 ]


(CL)



[ 3 ]

300mm Drawer


(CR)



[ 3 ]

300mm Drawer


(DL)



[ 3 ]

300mm Bottom exposy slide

(DR)




[ 3 ]


300mm Bottom exposy slide

# Get to know your Hardware

## TIP OVER RESTRAINT HARDWARE

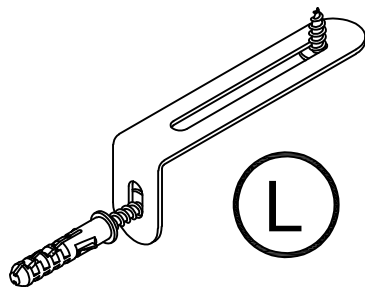


(L1)



[ 1 ]

ST4.0x38mm

(L2)



[ 1 ]

ST4.0x12mm


(L3)



[ 1 ]

Ø6.0x30mm

(L4)

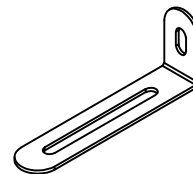


[ 1 ]

75\*25\*15\*1mm

# STEP 1


(E)



[ 9 ]

ST3.5x12mm


(CL)



[ 3 ]




300mm Drawer

(J)




[ 2 ]

EVA Pads

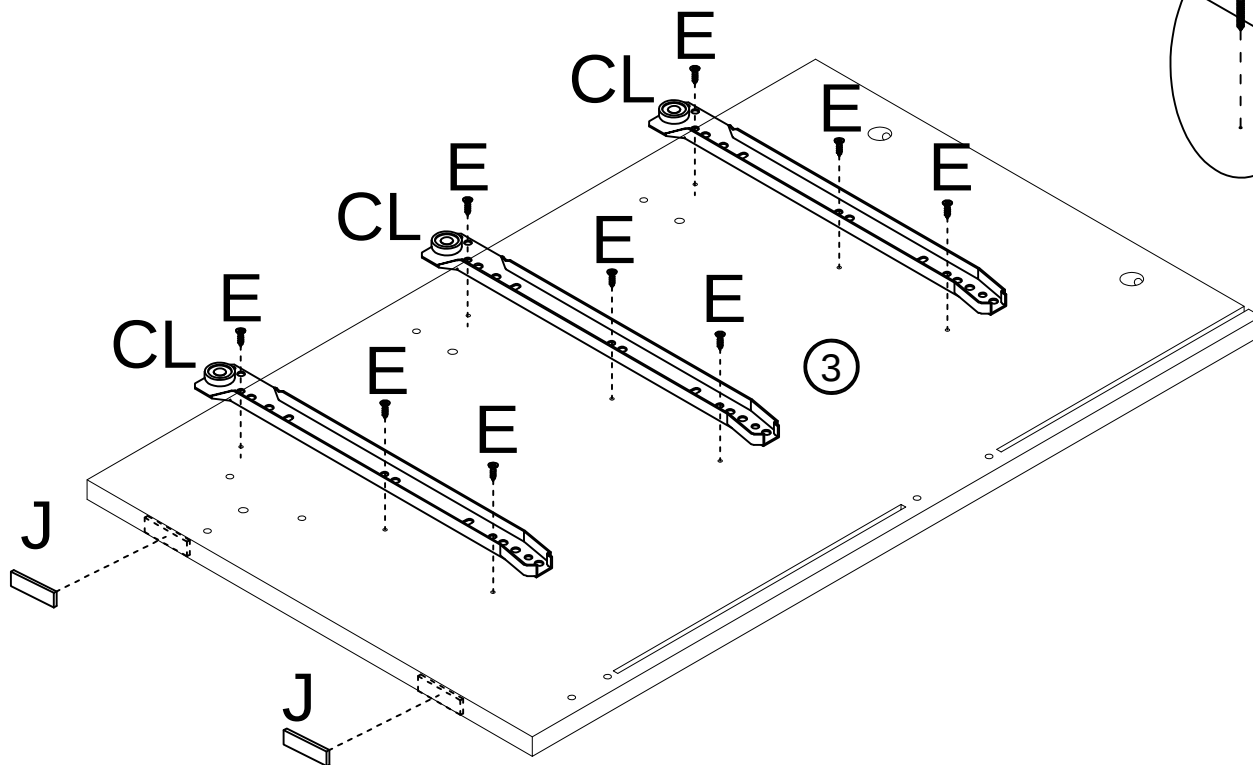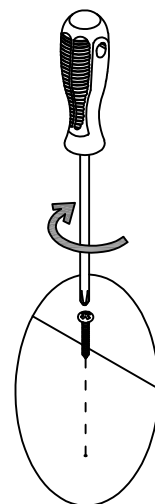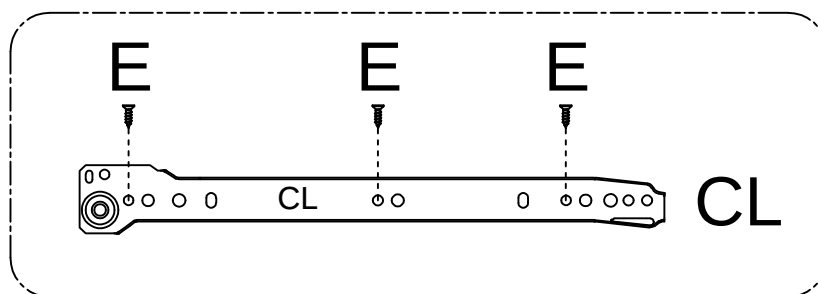



## STEP 2

(A)




[ 9 ]

KD Bolt  
M6x35mm

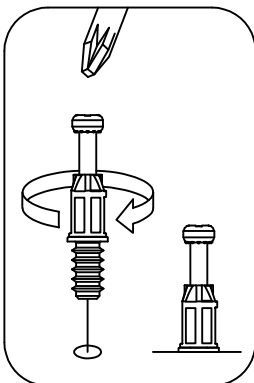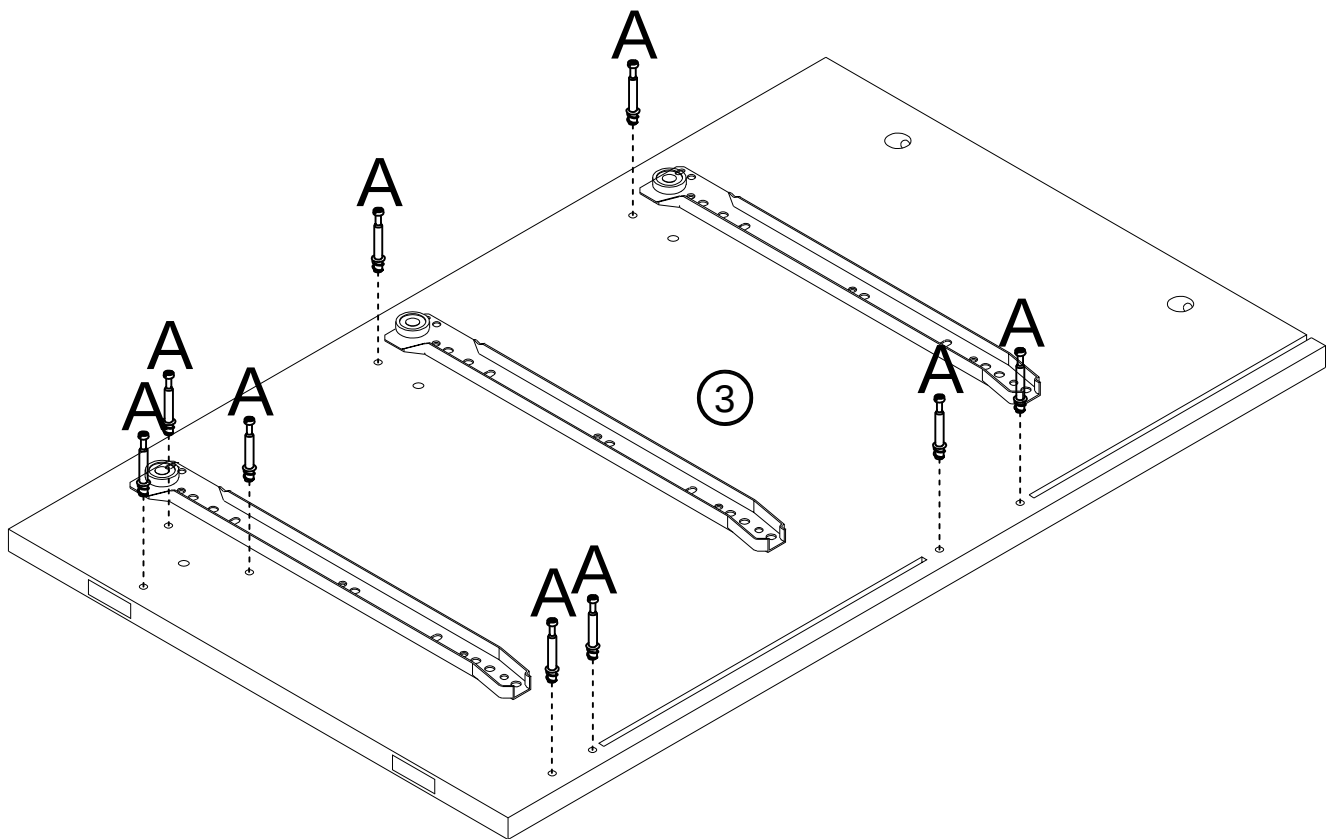

# STEP 3


(E)



[ 9 ]

ST3.5x12mm


(CR)



[ 3 ]




300mm Drawer

(J)




[ 2 ]

EVA Pads

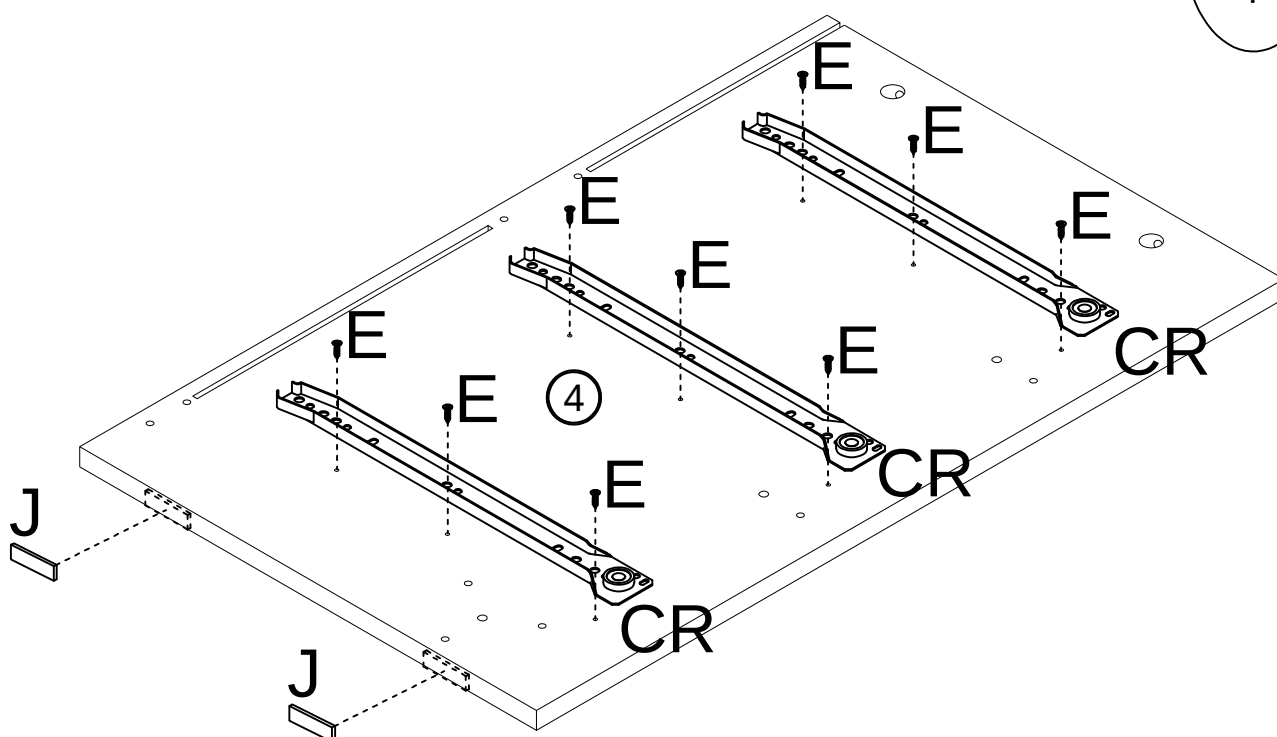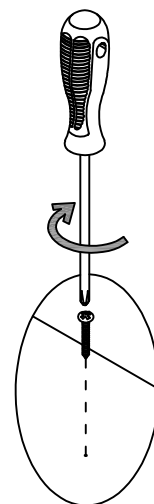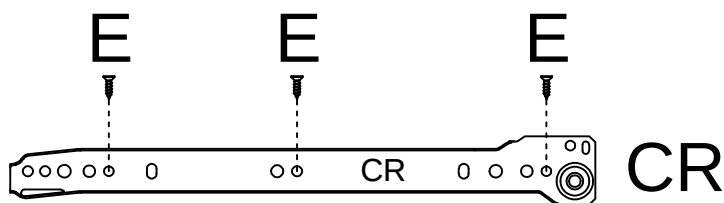



# STEP 4

(A)



[ 9 ]

KD Bolt  
M6x35mm

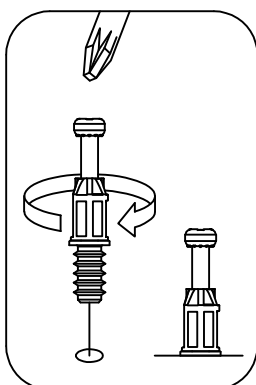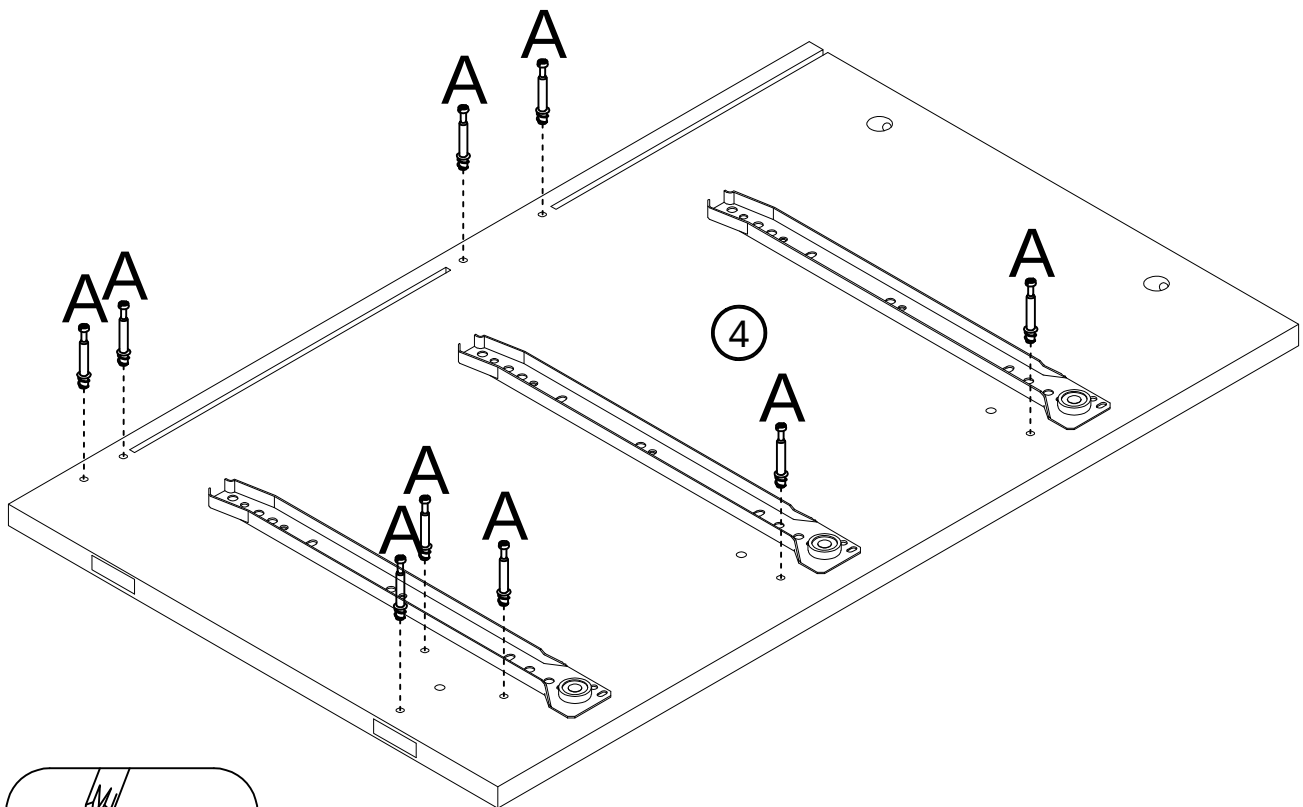

# STEP 5

(G)



[ 2 ]



Ø5.0x48mm

(C)




[ 2 ]

Wood Dowel  
6 x 30mm

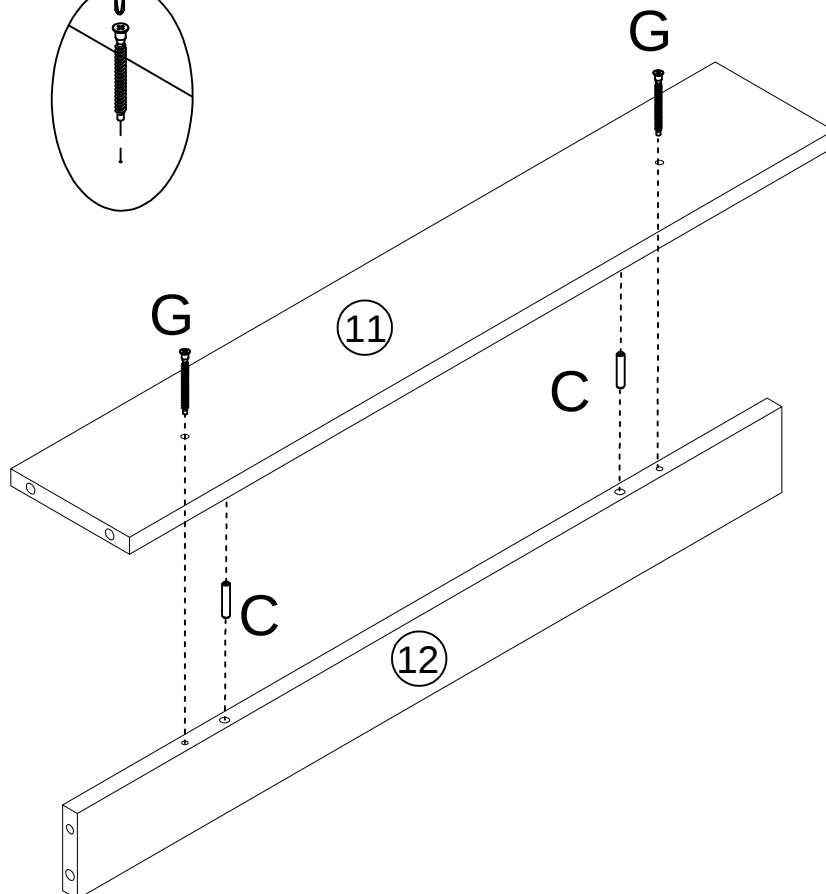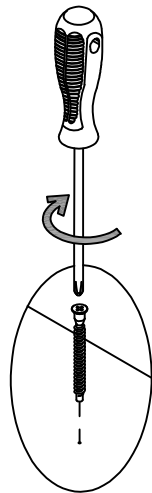

# STEP 6

(B)



[ 5 ]



KD Cam  
Ø15x9.5mm

(C)




[ 3 ]

Wood Dowel  
6 x 30mm

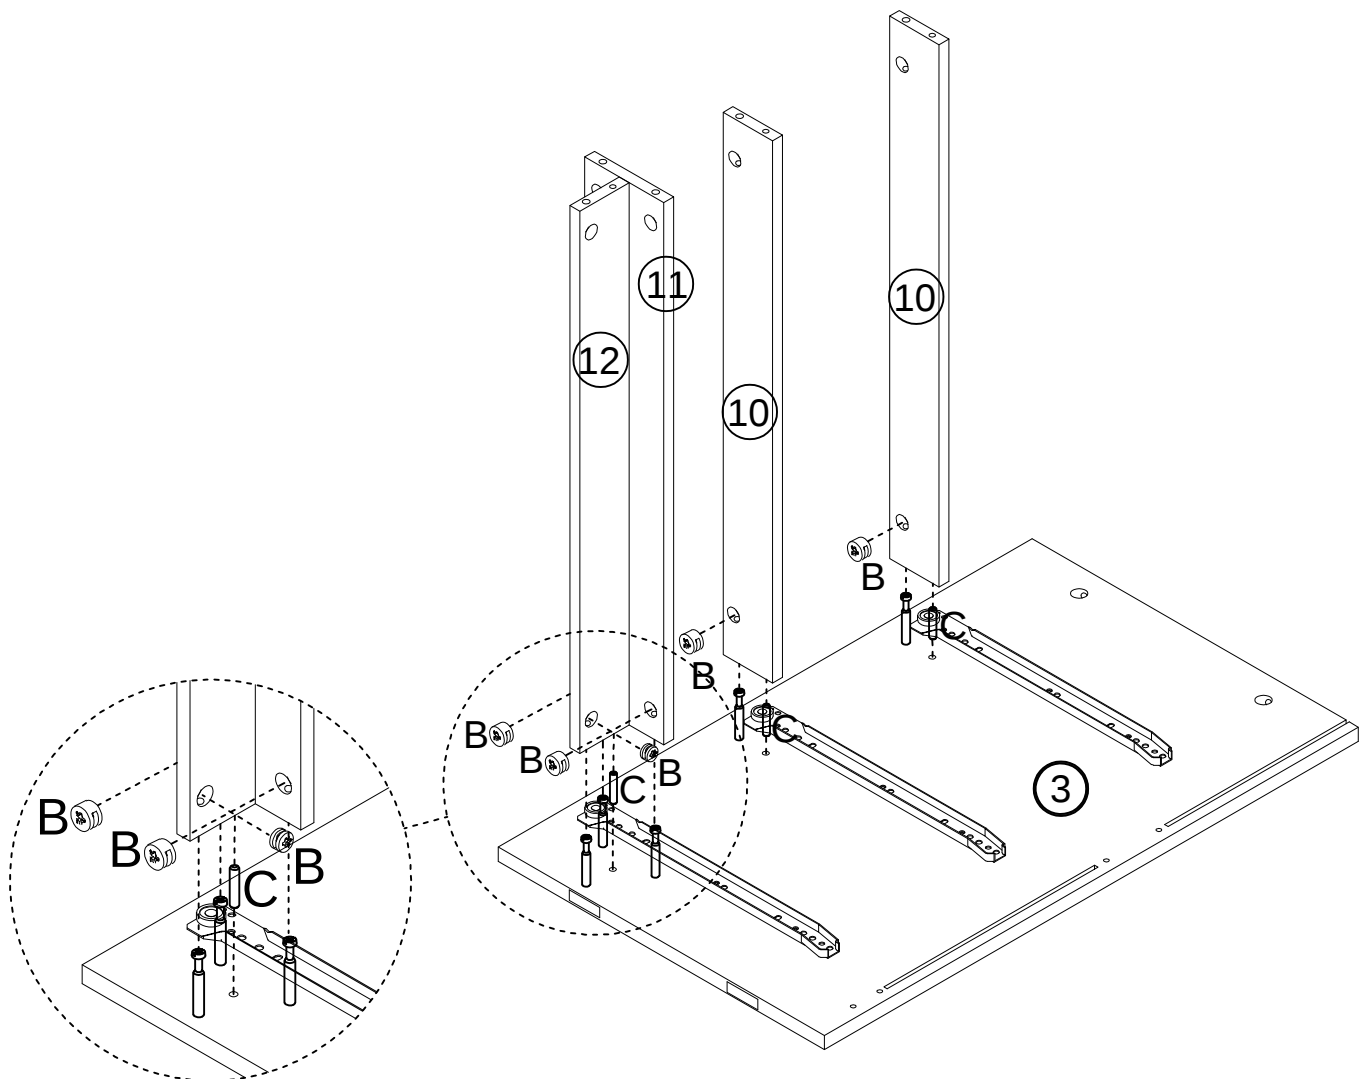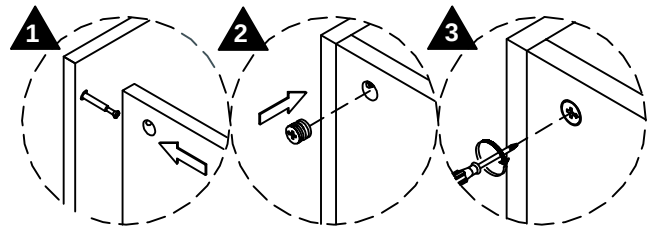



# STEP 7

(B)




[ 4 ]

KD Cam  
Ø15x9.5mm

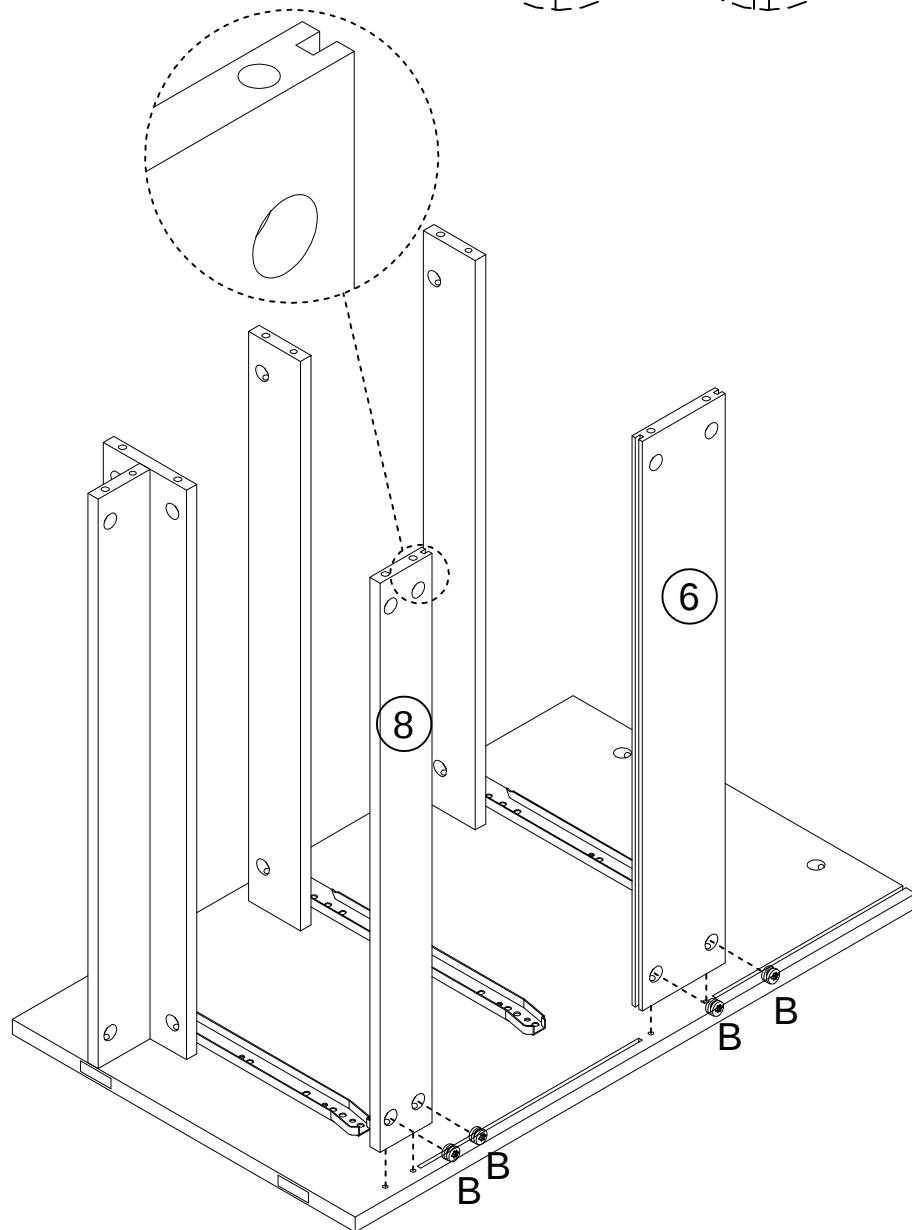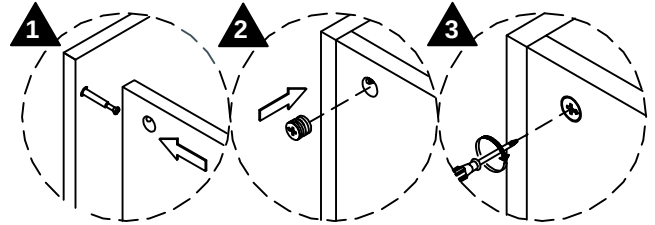

# STEP 8

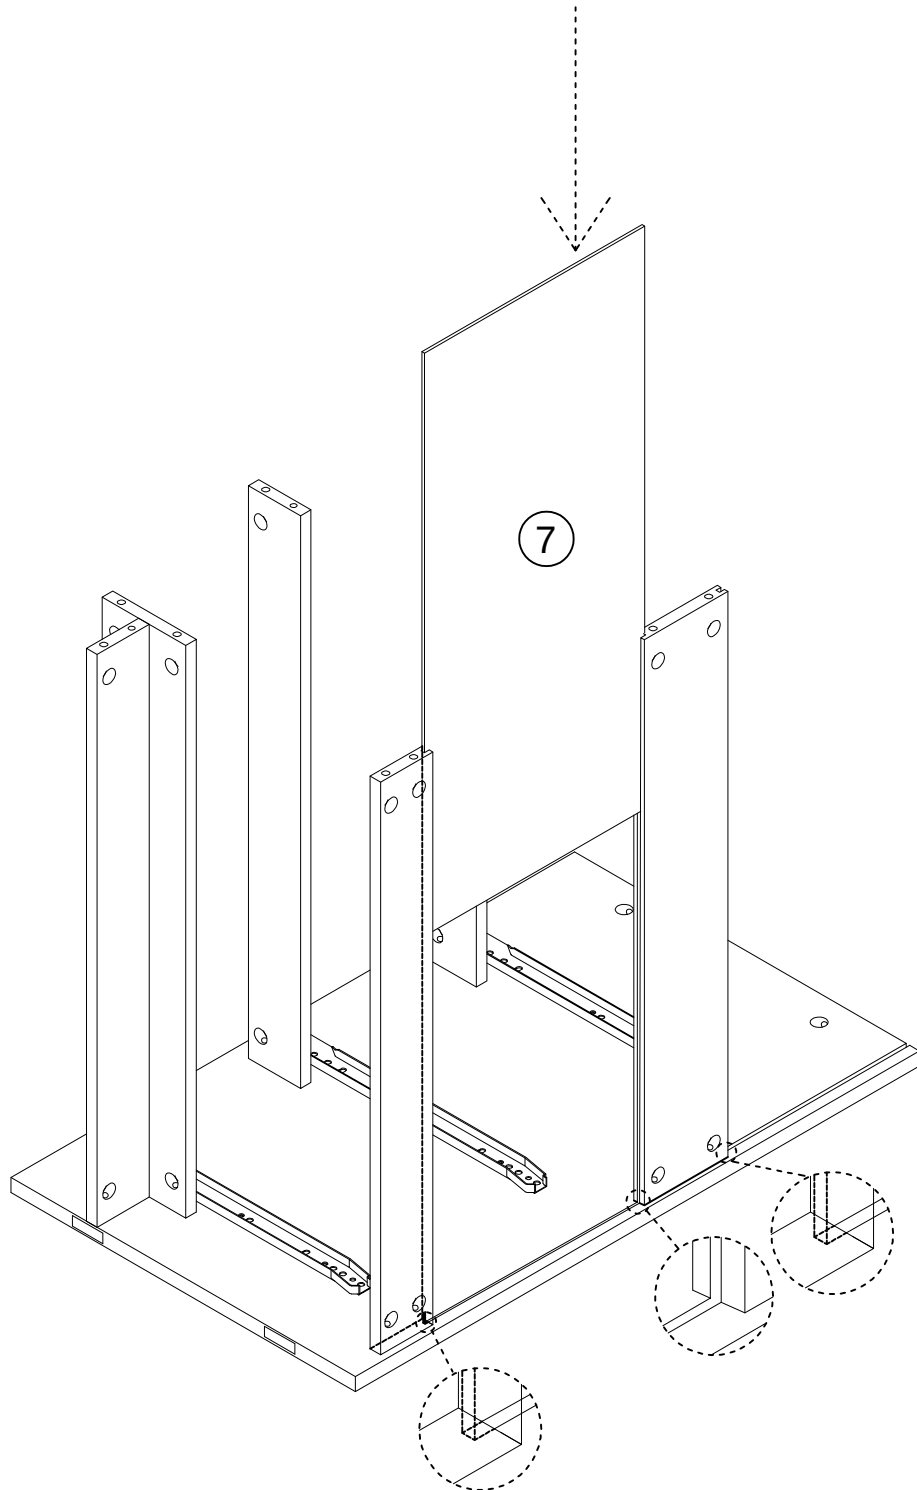


# STEP 9

Ⓒ




[ 3 ]

Wood Dowel  
6 x 30mm

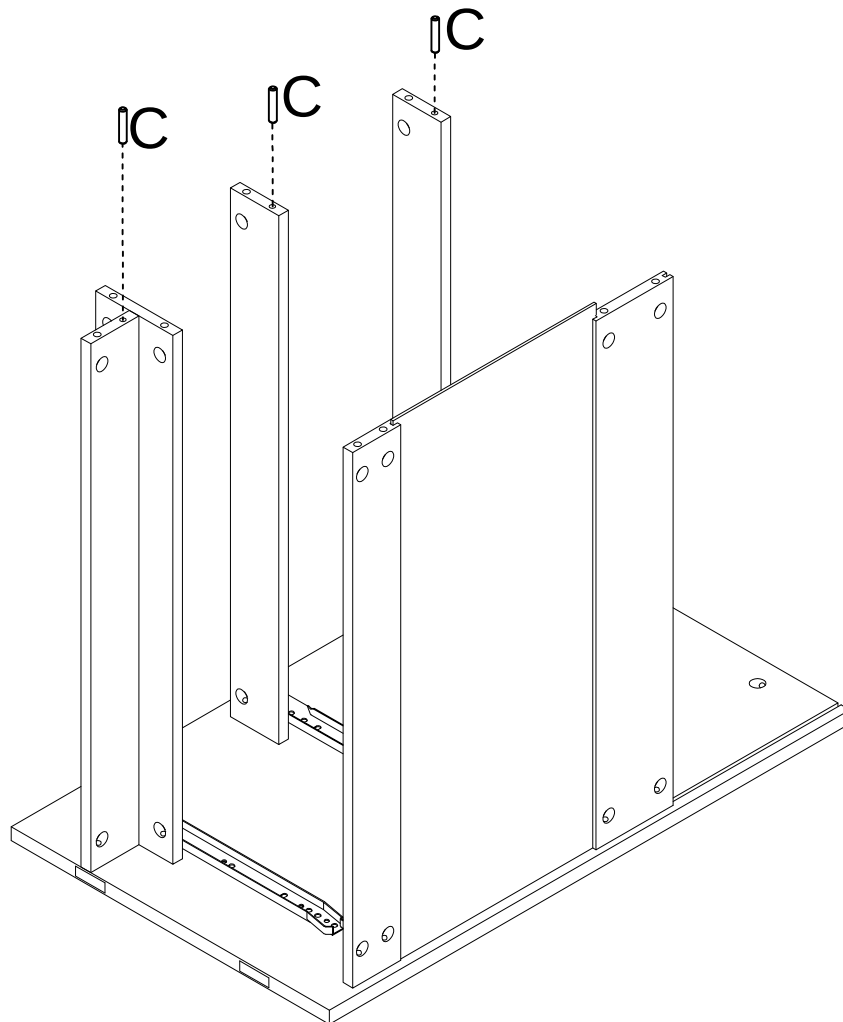



# STEP 10

(B)



[ 9 ]

KD Cam  
Ø15x9.5mm

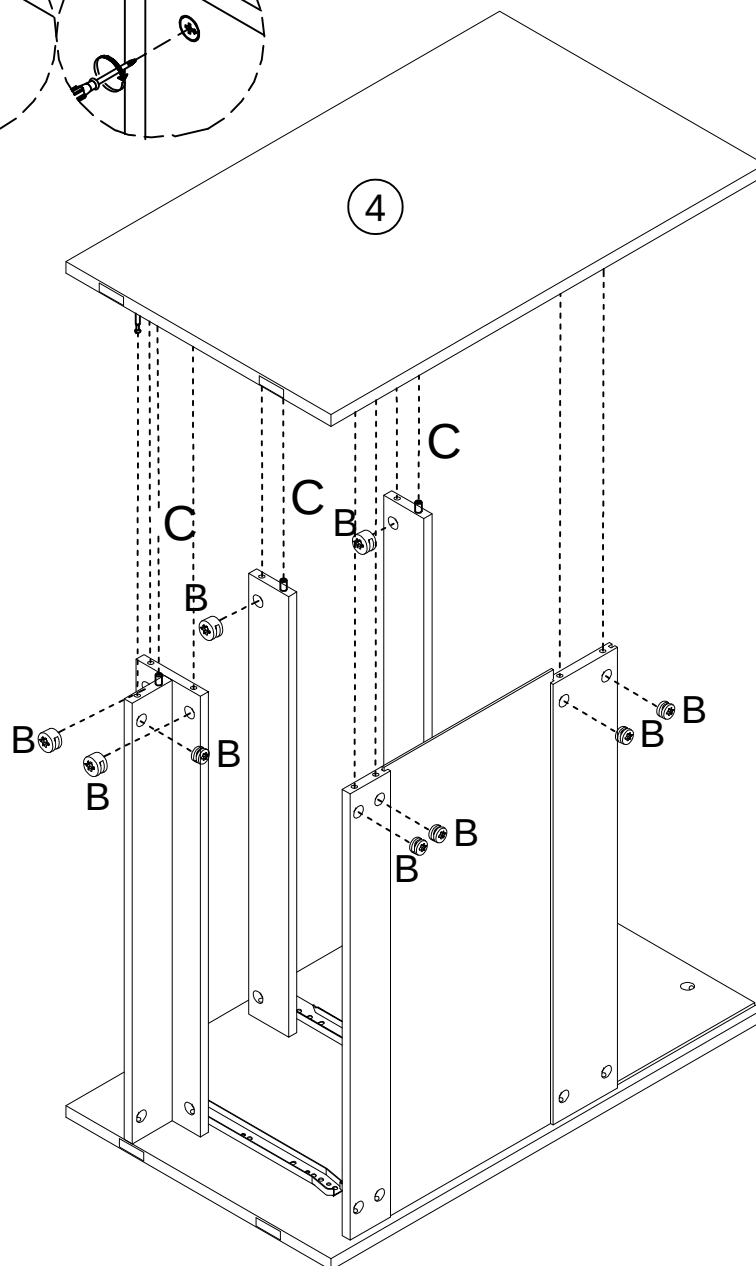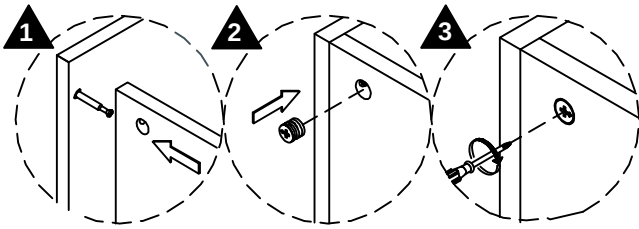


# STEP 11

Ⓒ




[ 4 ]

Wood Dowel  
6 x 30mm

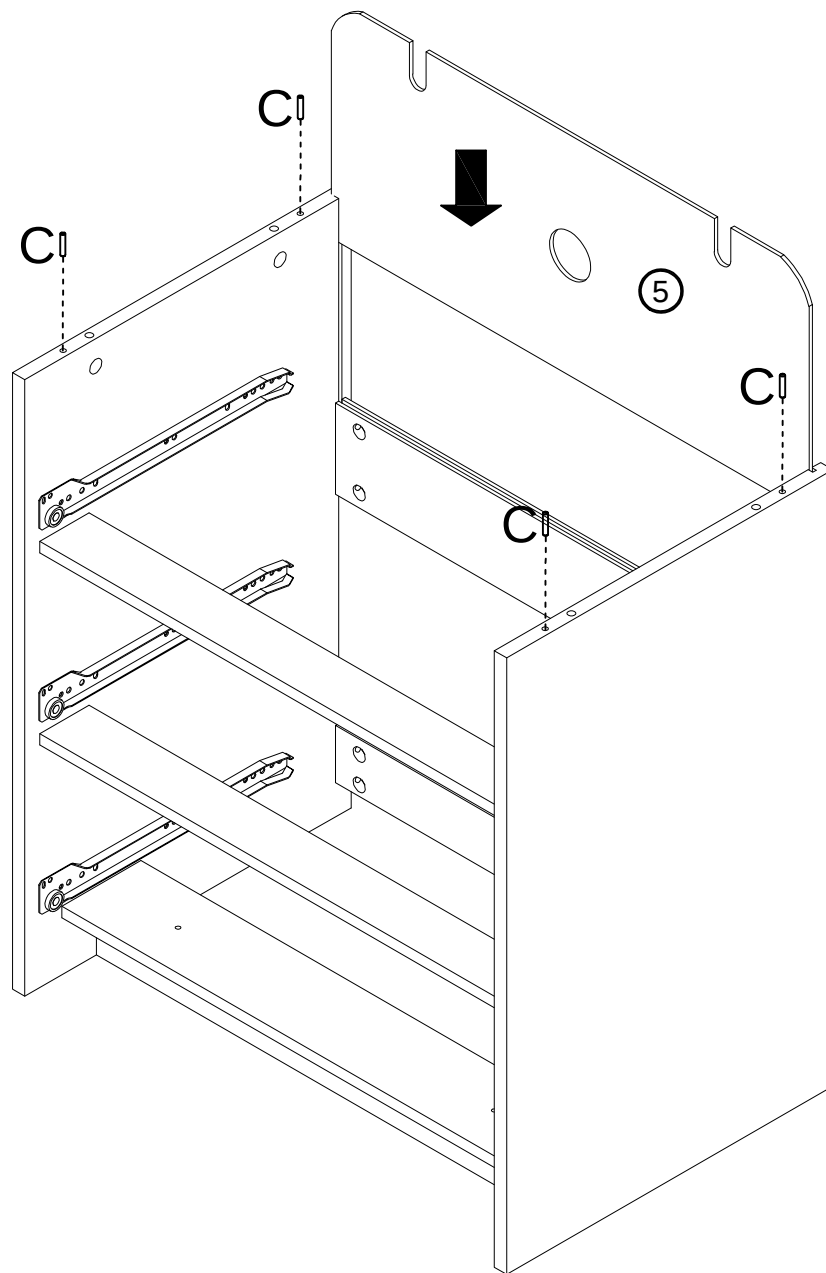




# STEP 12

(A)



[ 8 ]



KD Bolt  
M6x35mm

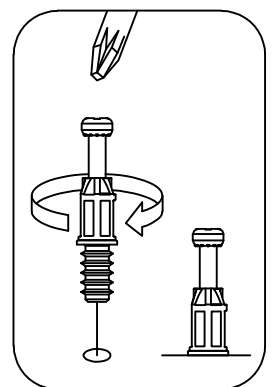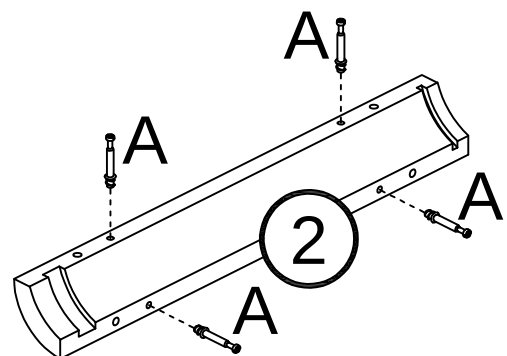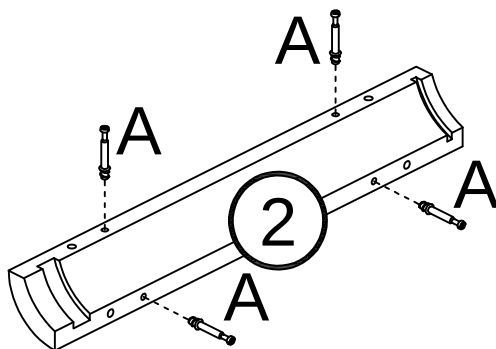

## STEP 13


[4]

[4]

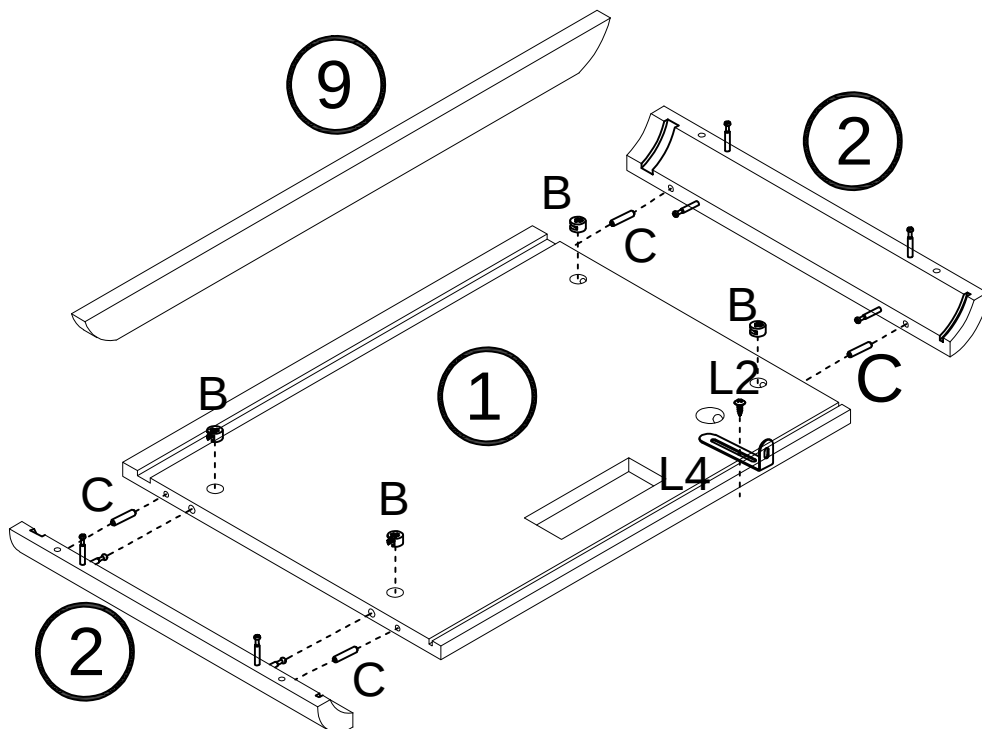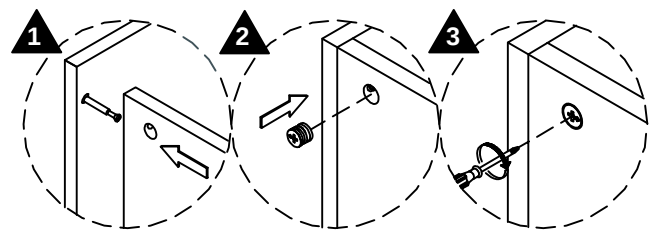

# STEP 14


Ⓕ



[ 2 ]


ST3.0x16mm

Ⓖ

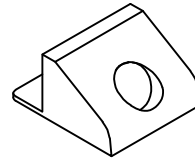


[ 2 ]

Back Clip

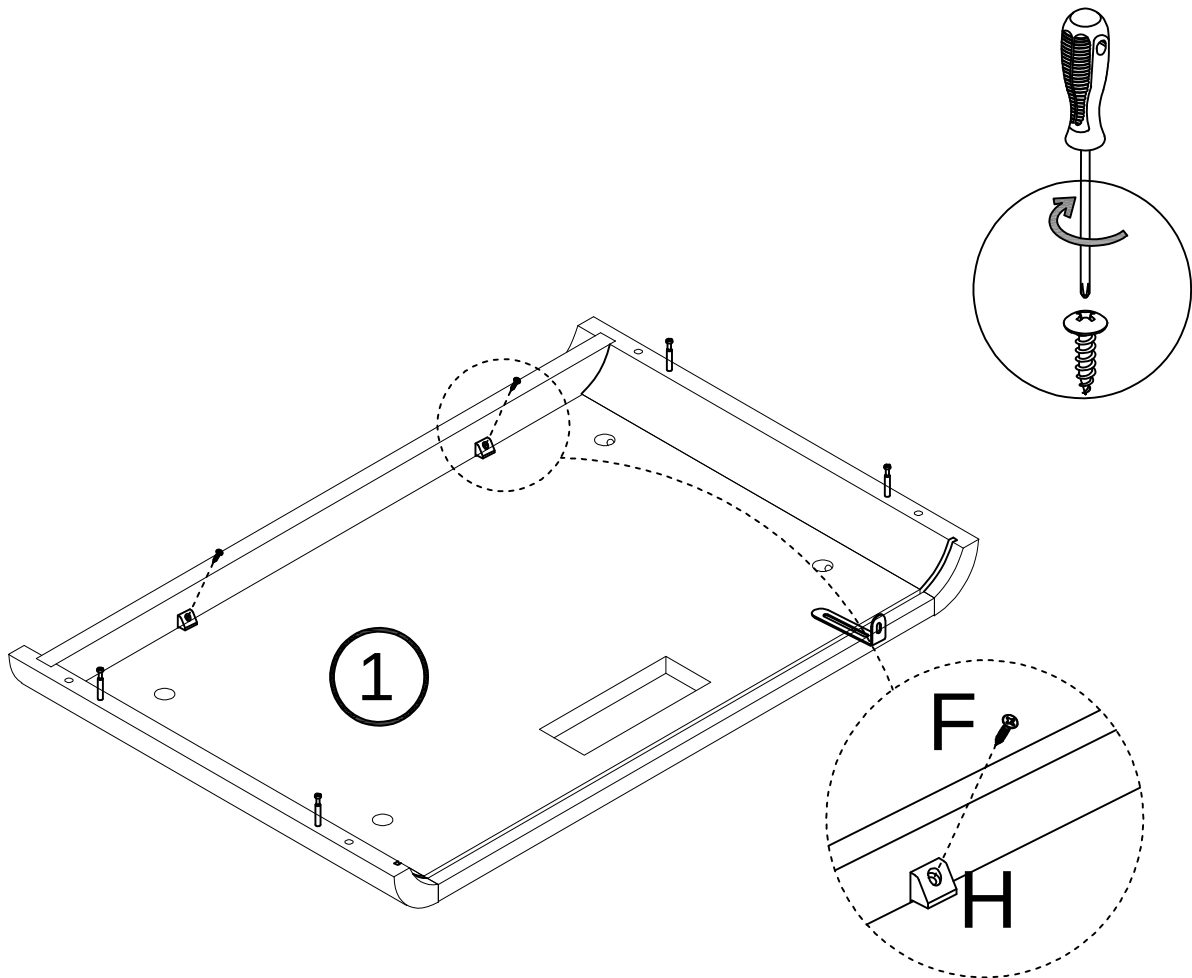



# STEP 15

(B)




KD Cam  
Ø15x9.5mm

[ 4 ]

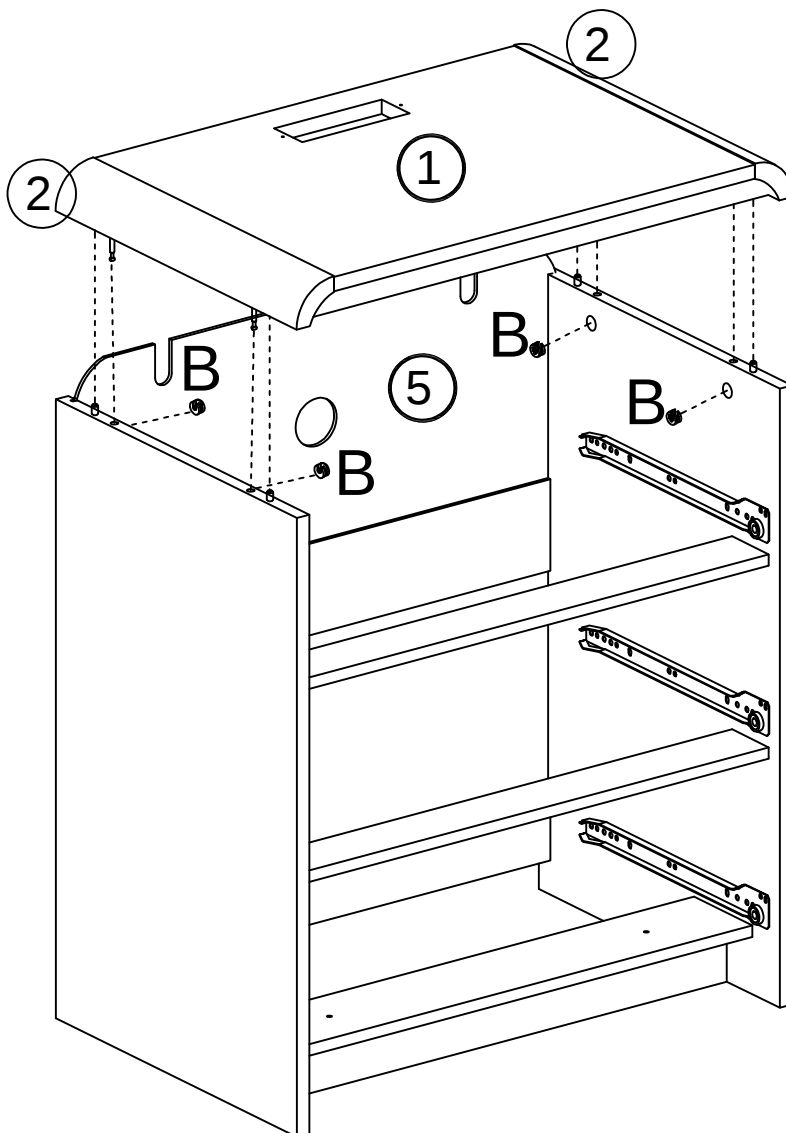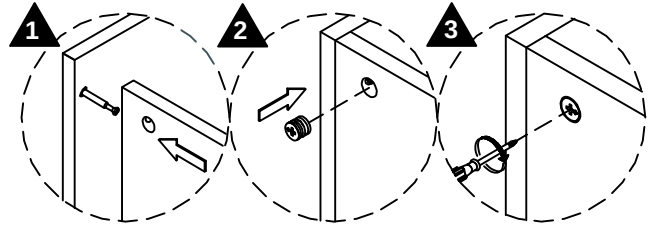

# STEP 16


(F)



ST3.0x16mm


[ 16 ]

(H)

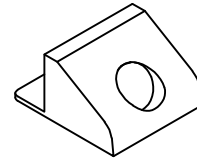


Back Clip

[ 16 ]

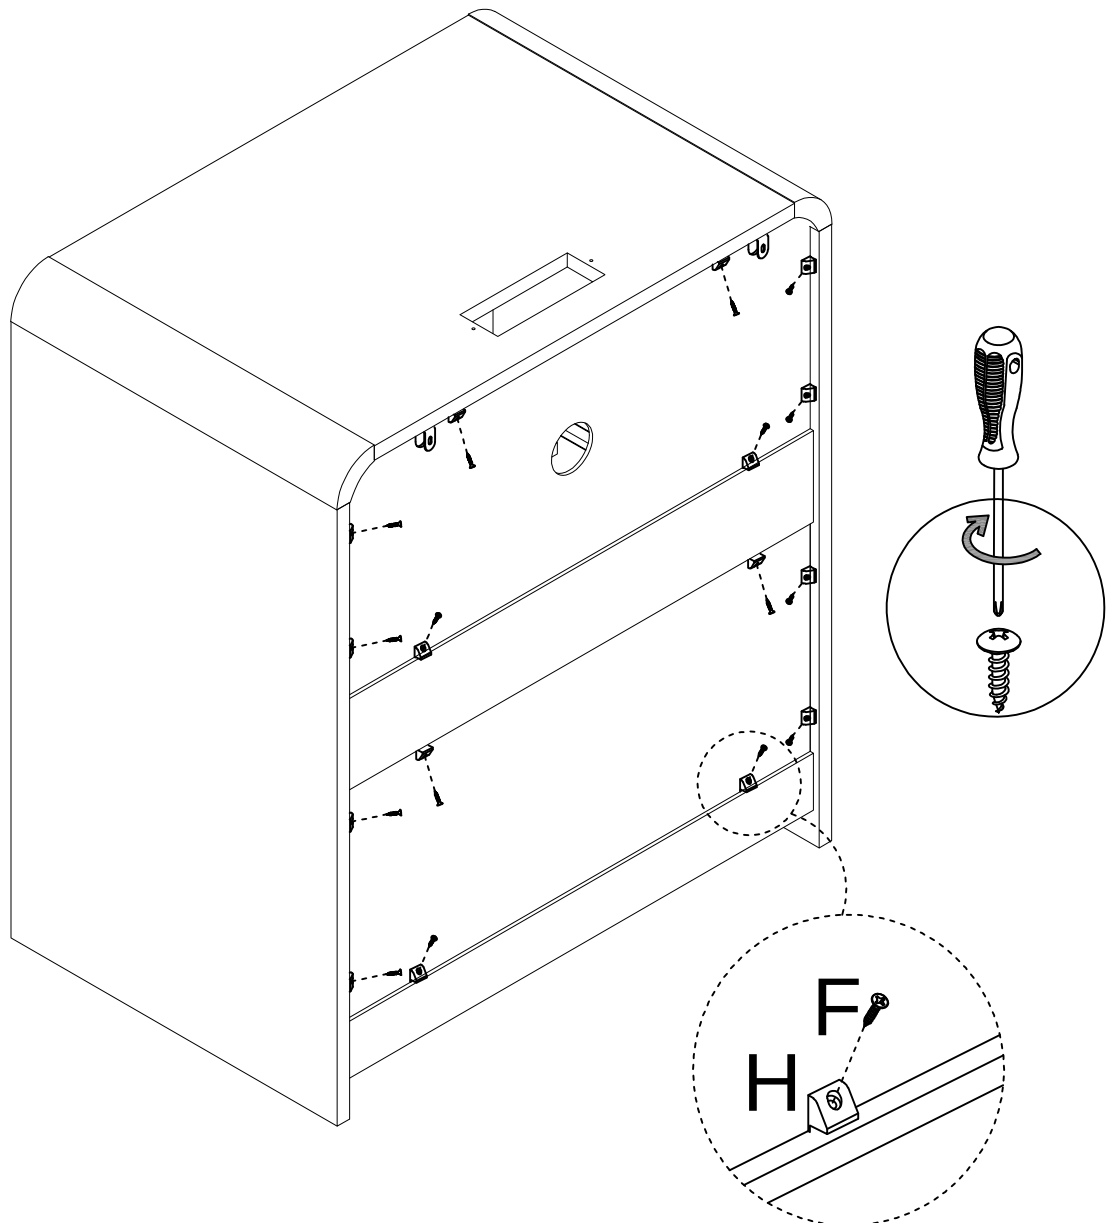

# STEP 17

(M)




[1]

(E)



[2]


ST3.5x12mm

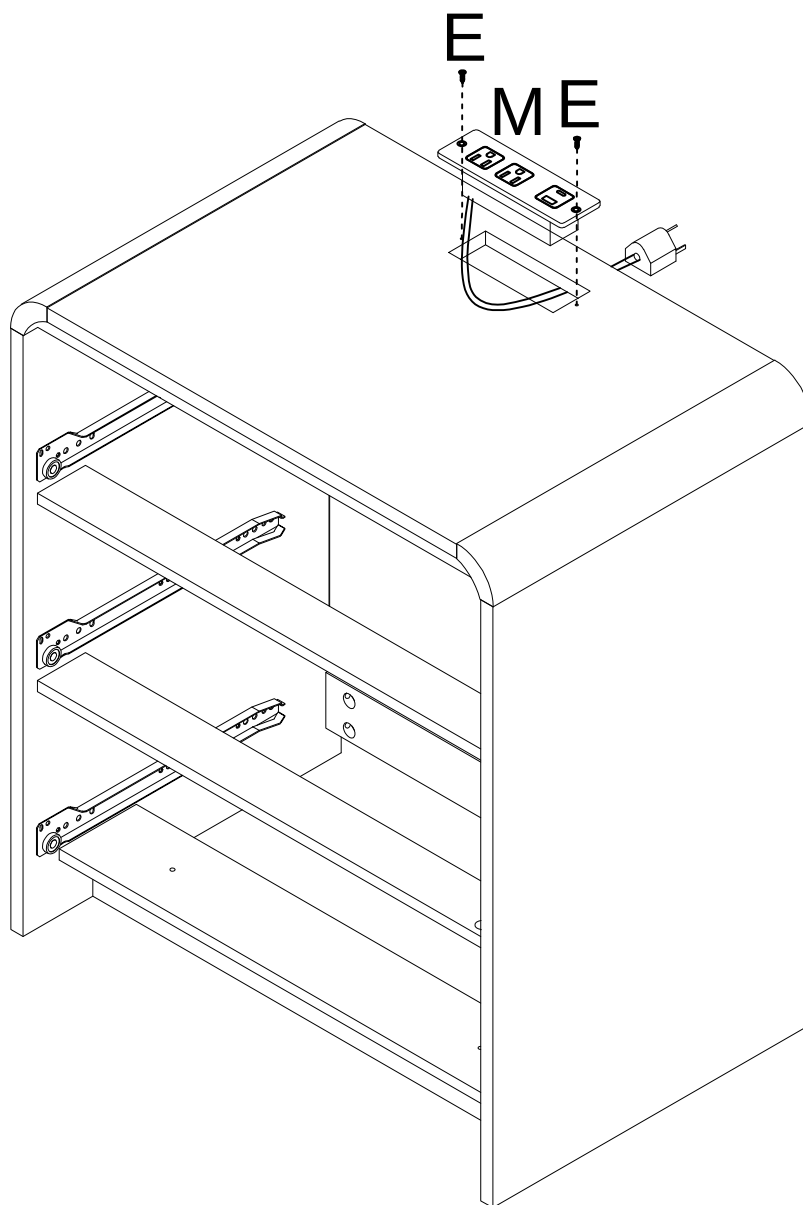


# STEP 18

Method 1: For solid or concrete wall.


1. Choose your desired location on the wall.  
Have your friend hold the product in place and use a pencil to mark where the anchor will go.

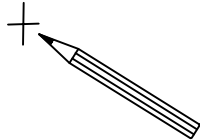


2. Pre-drill holes on the wall with a drill bit that is larger than the diameter of the wall anchors.

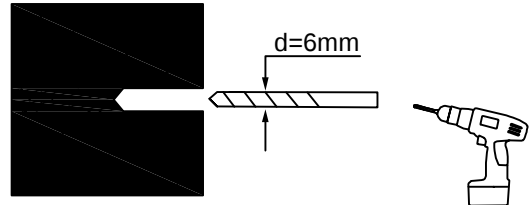

3. Gently insert the wall anchor into the pre-drilled hole.

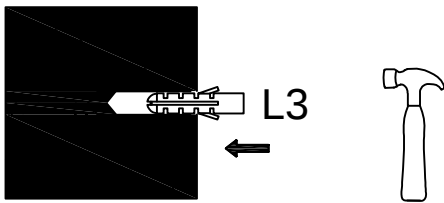


4. Insert the screws into the wall anchor with a screwdriver to complete the installation.

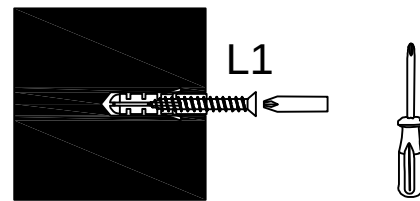

Ⓛ



L3



L1


[ 1 ]

WALL

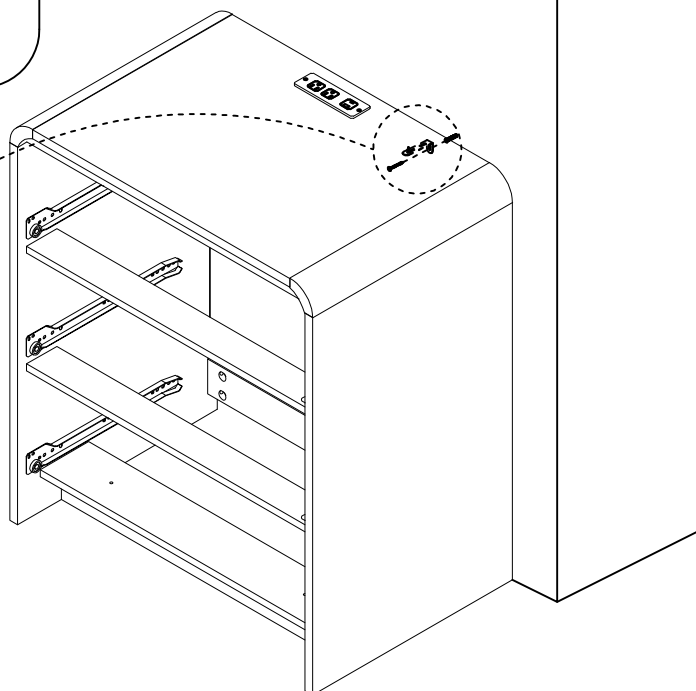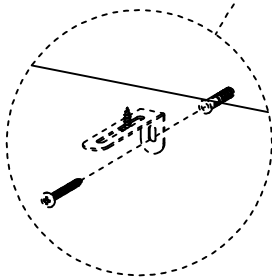


# STEP 19

(A)




[ 15 ]

KD Bolt  
M6x35mm

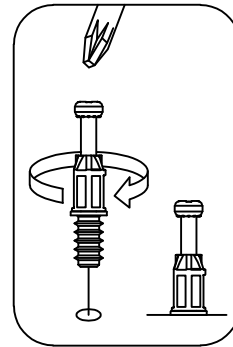

X2

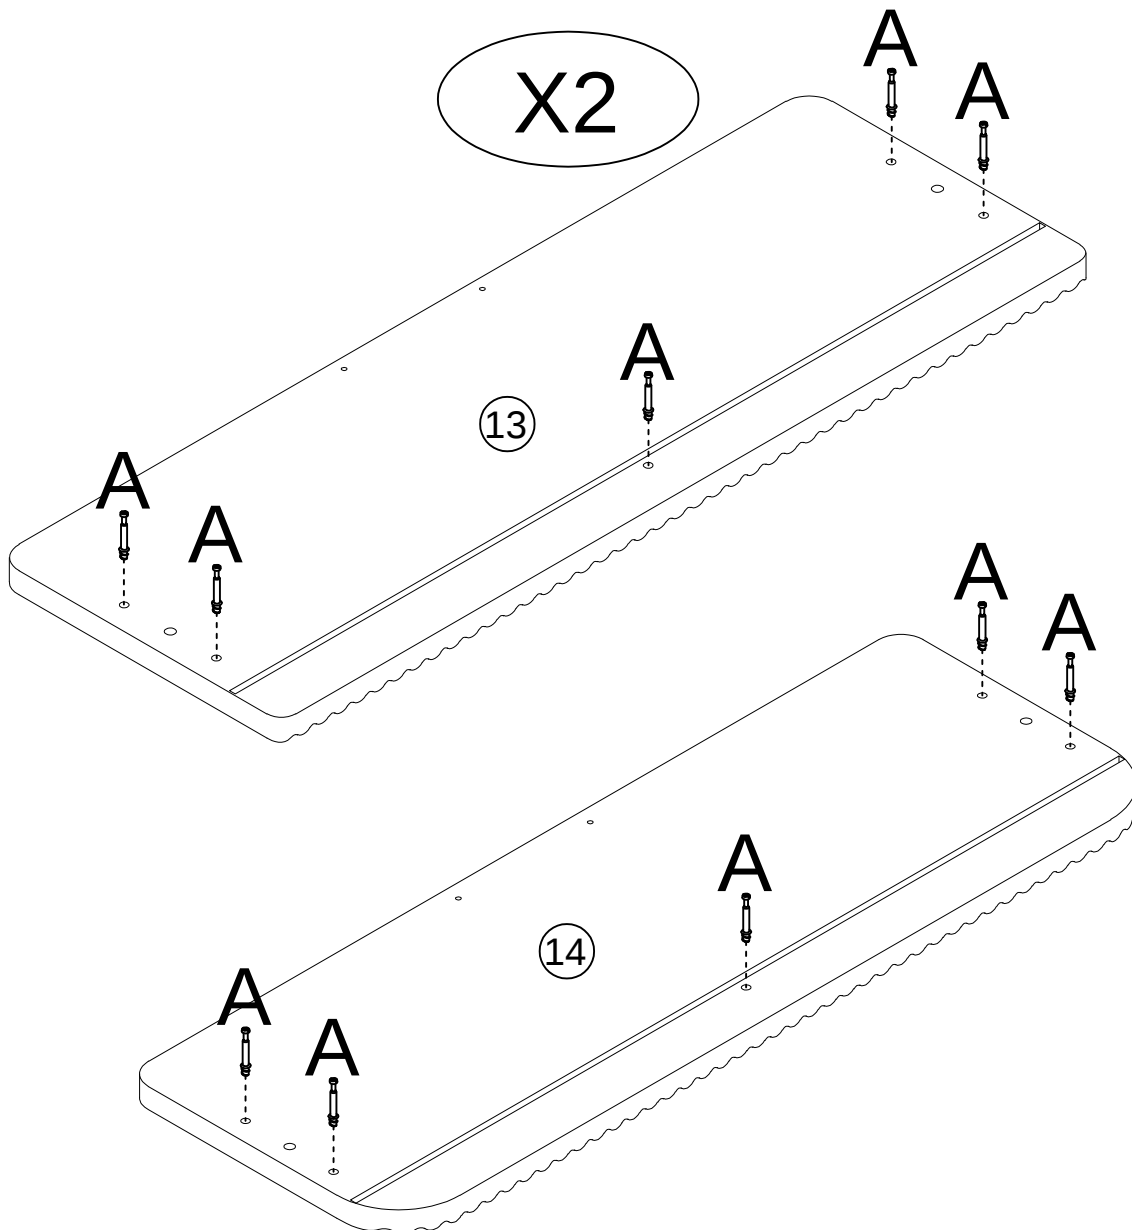

# STEP 20


(E)



[6]



ST3.5x12mm

(I)

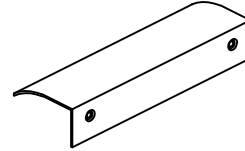


[3]

Handle

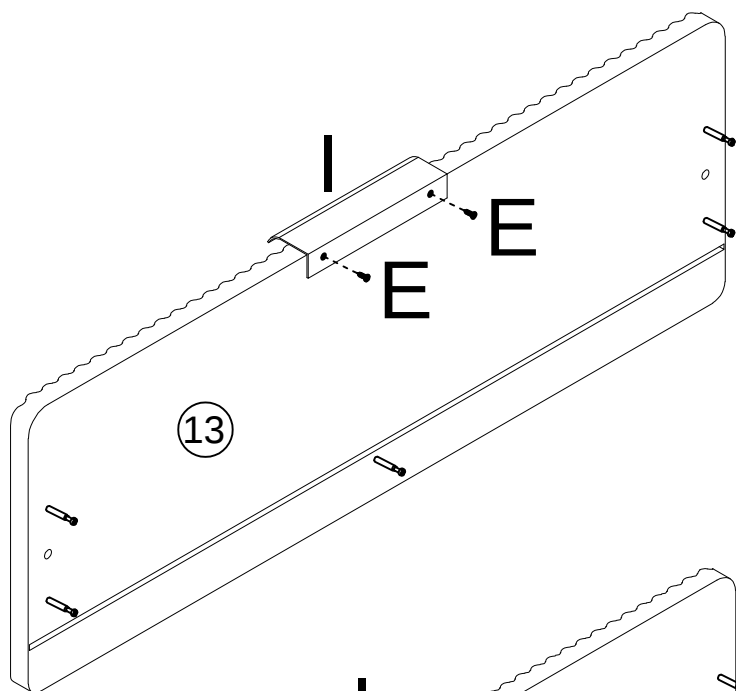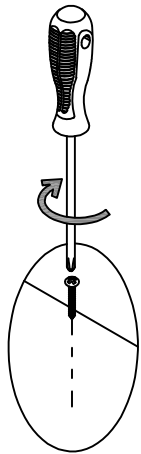

13

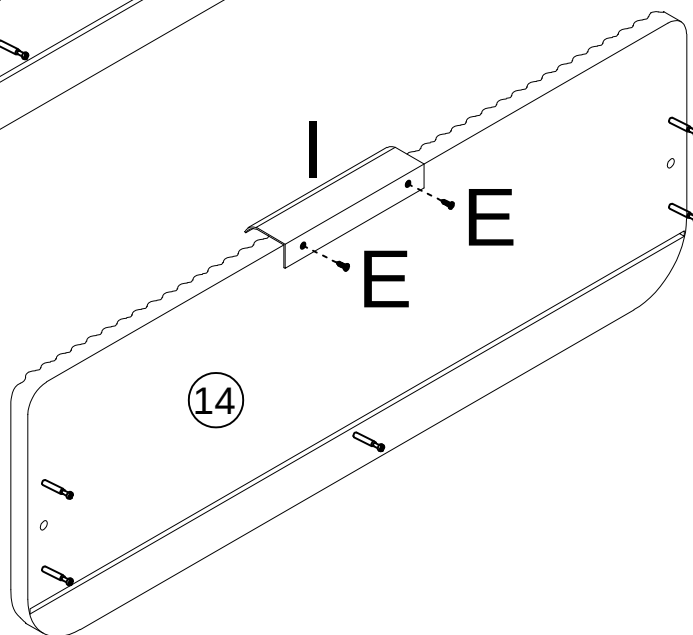

14

X2



# STEP 21

Ⓓ




[ 18 ]

ST4x35mm

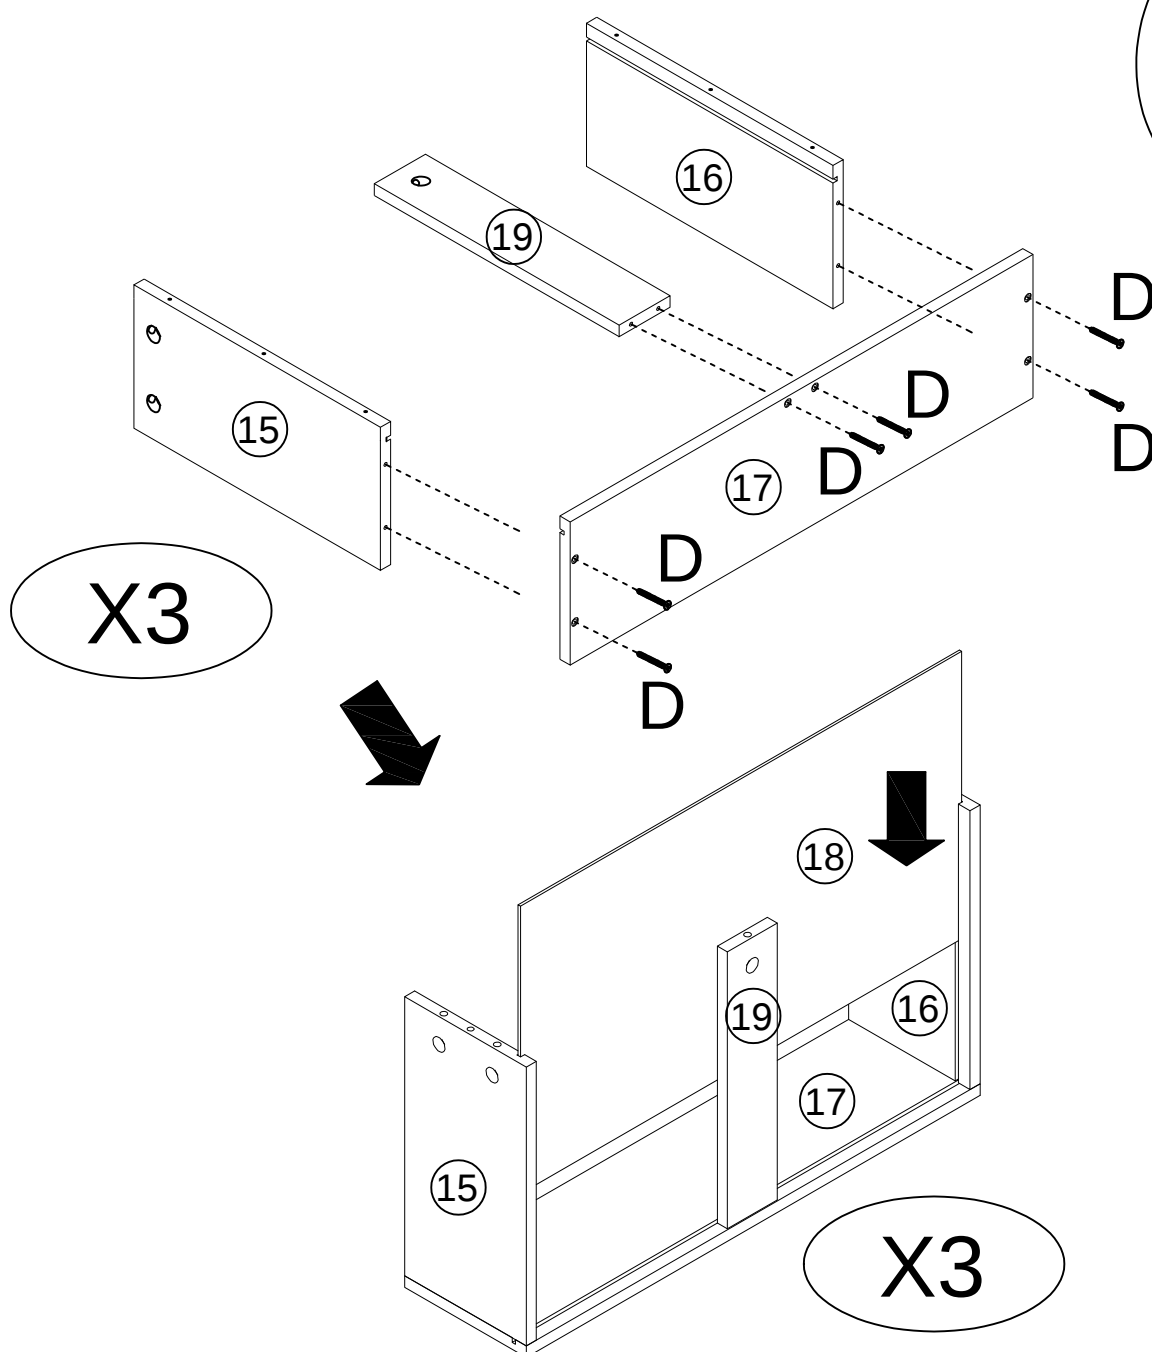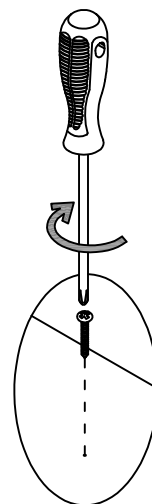


## STEP 22

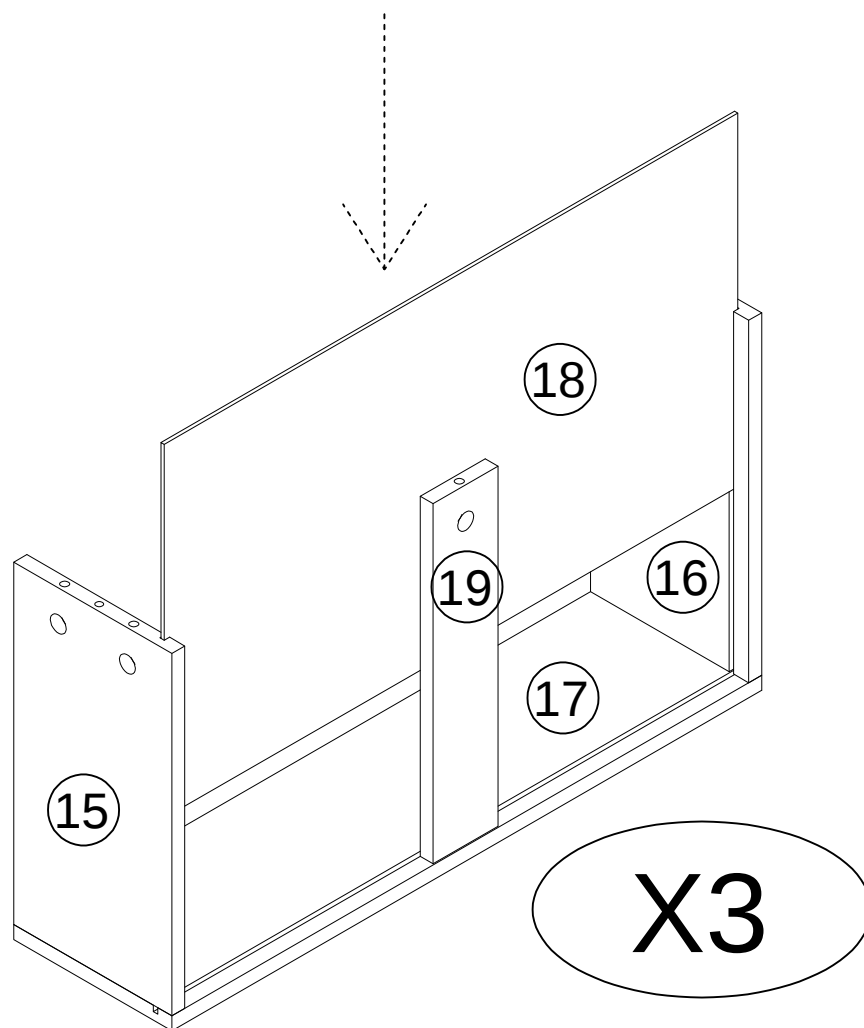

# STEP 23

(B)



[ 15 ]



KD Cam  
Ø15x9.5mm

(C)




[ 6 ]

Wood Dowel  
6 x 30mm

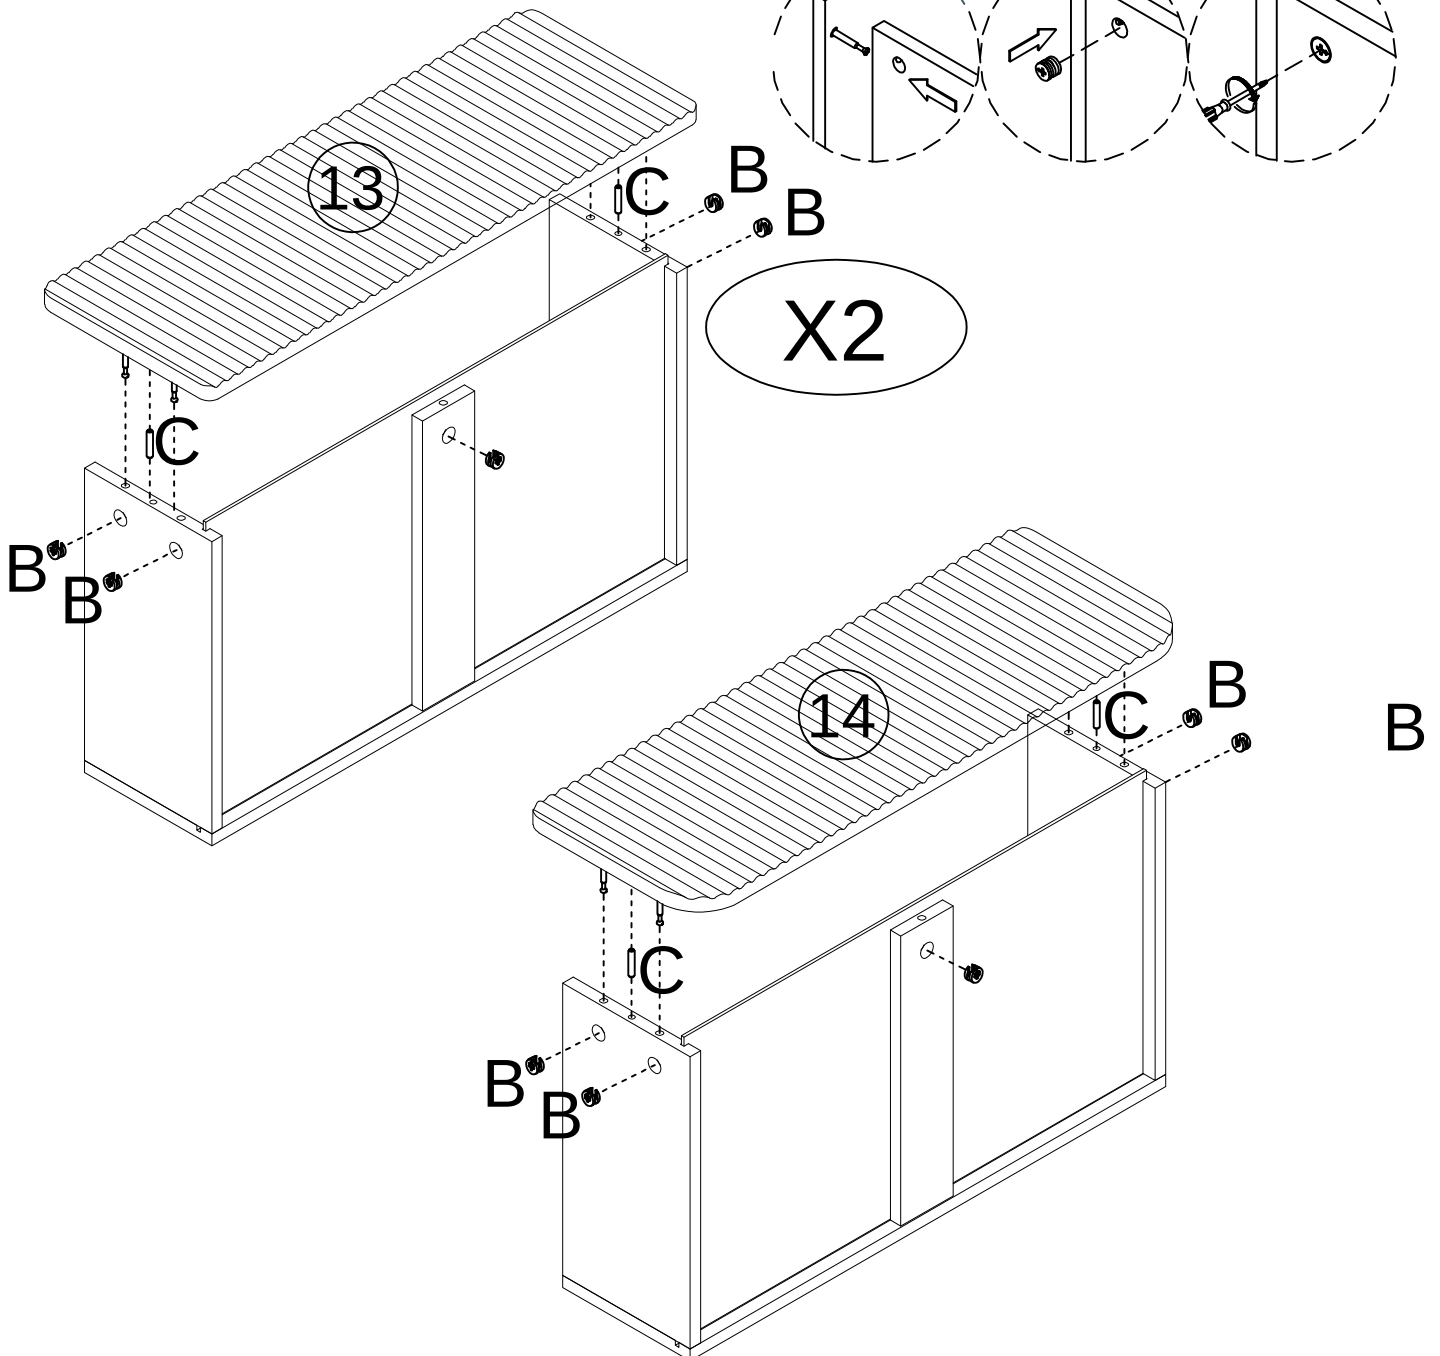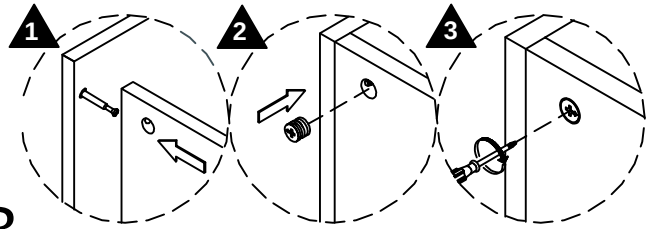

# STEP 24


(E)



[ 12 ]

ST3.5x12mm


(DR)



[ 2 ]




300mm Bottom exposy slide

(DL)



[ 2 ]

300mm Bottom exposy slide

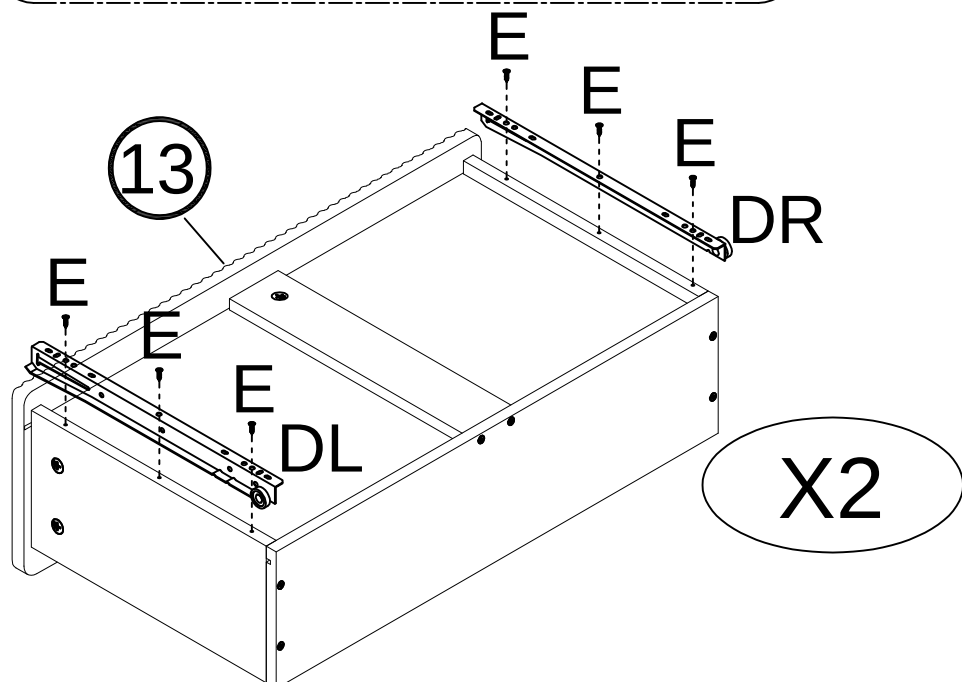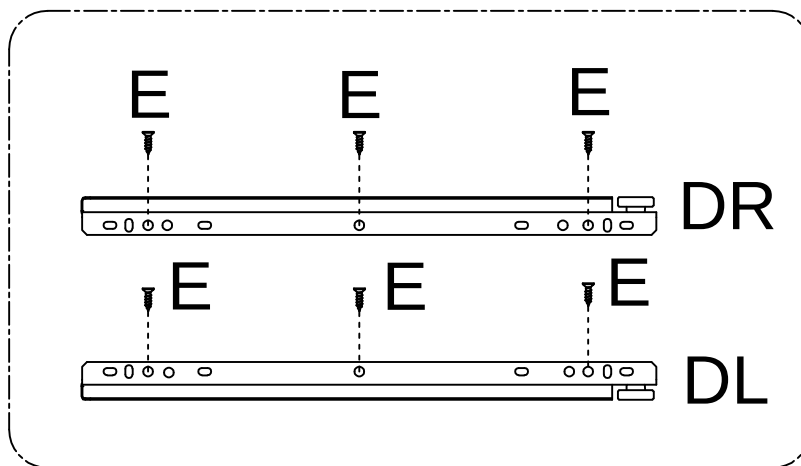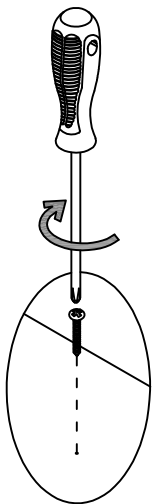

# STEP 25


(E)



[ 6 ]

ST3.5x12mm


(DR)



[ 1 ]




300mm Bottom exposy slide

(DL)




[ 1 ]

300mm Bottom exposy slide

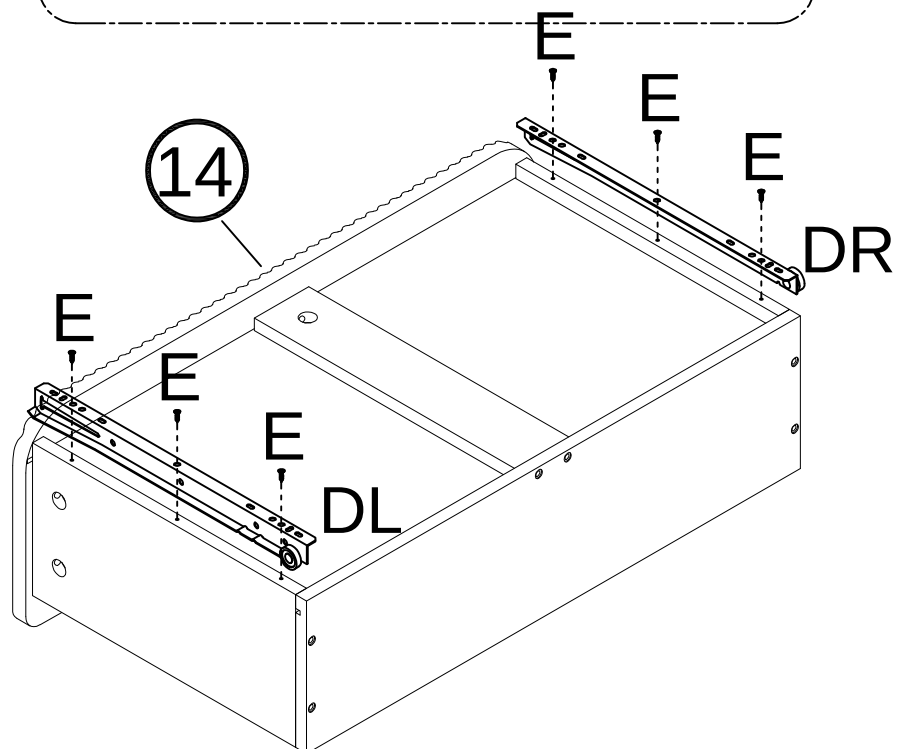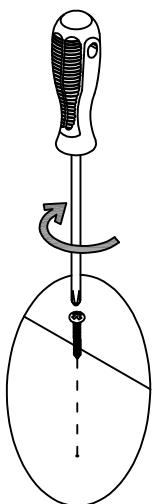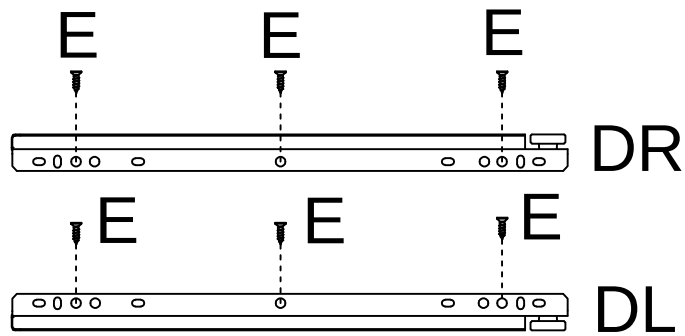


# STEP 26

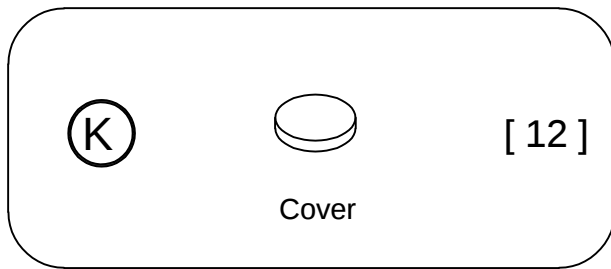


MAXIMUM WEIGHT: 40 LBS (18.2 KG)  
PESO MÁXIMO: 40 LIBRAS (18.2 KILOGRAMO)  
POIDS MAXIMUM: 40 LIVRES (18.2 KILOGRAMME)

MAXIMUM WEIGHT: 25 LBS (11.3 KG)  
PESO MÁXIMO: 25 LIBRAS (11.3 KILOGRAMO)  
POIDS MAXIMUM: 25 LIVRES (11.3 KILOGRAMME)

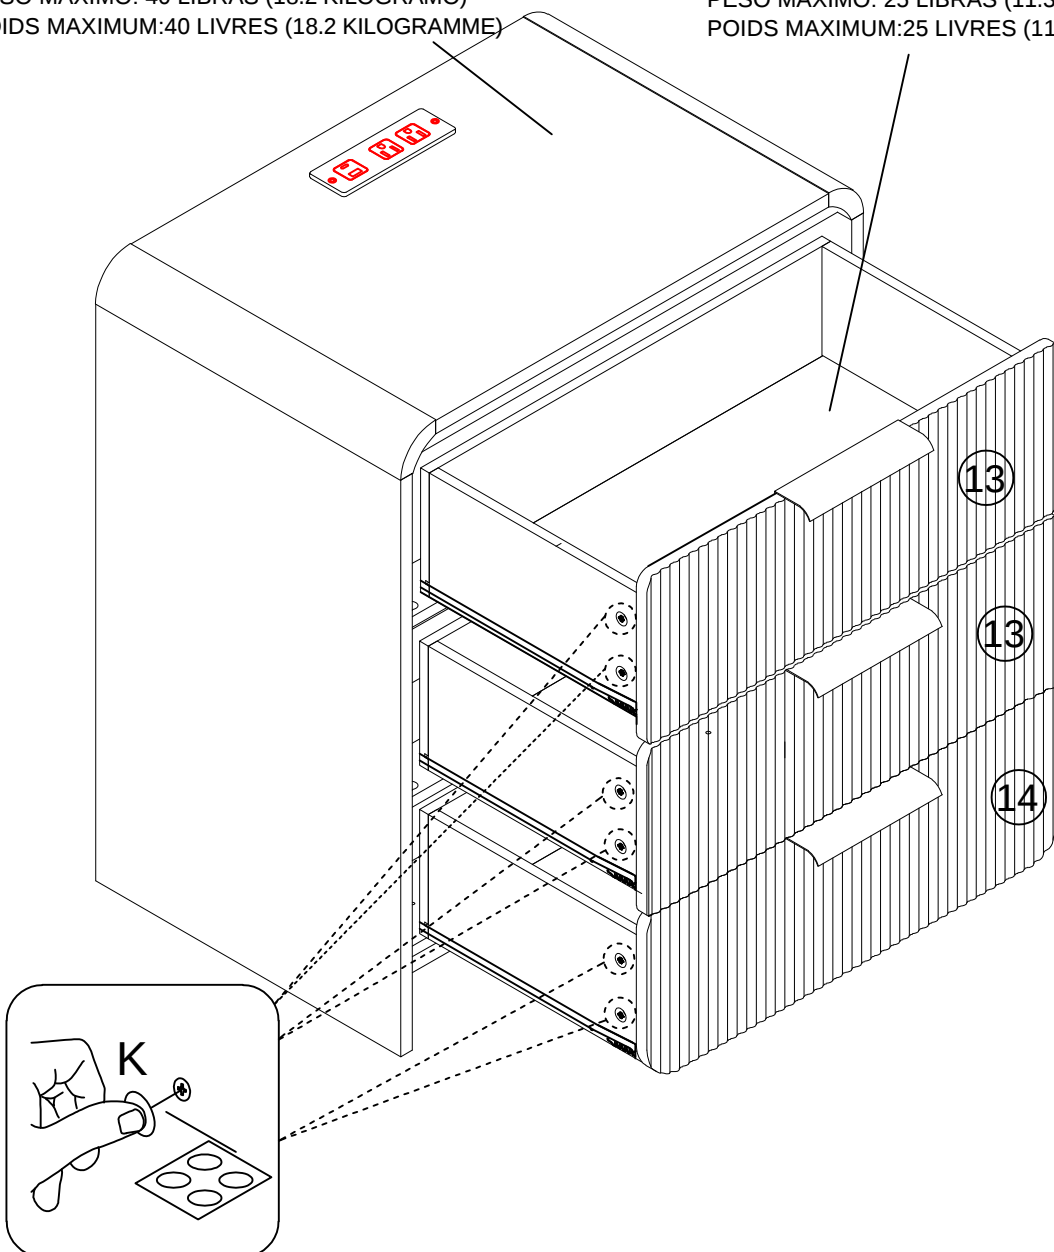

## STEP 27

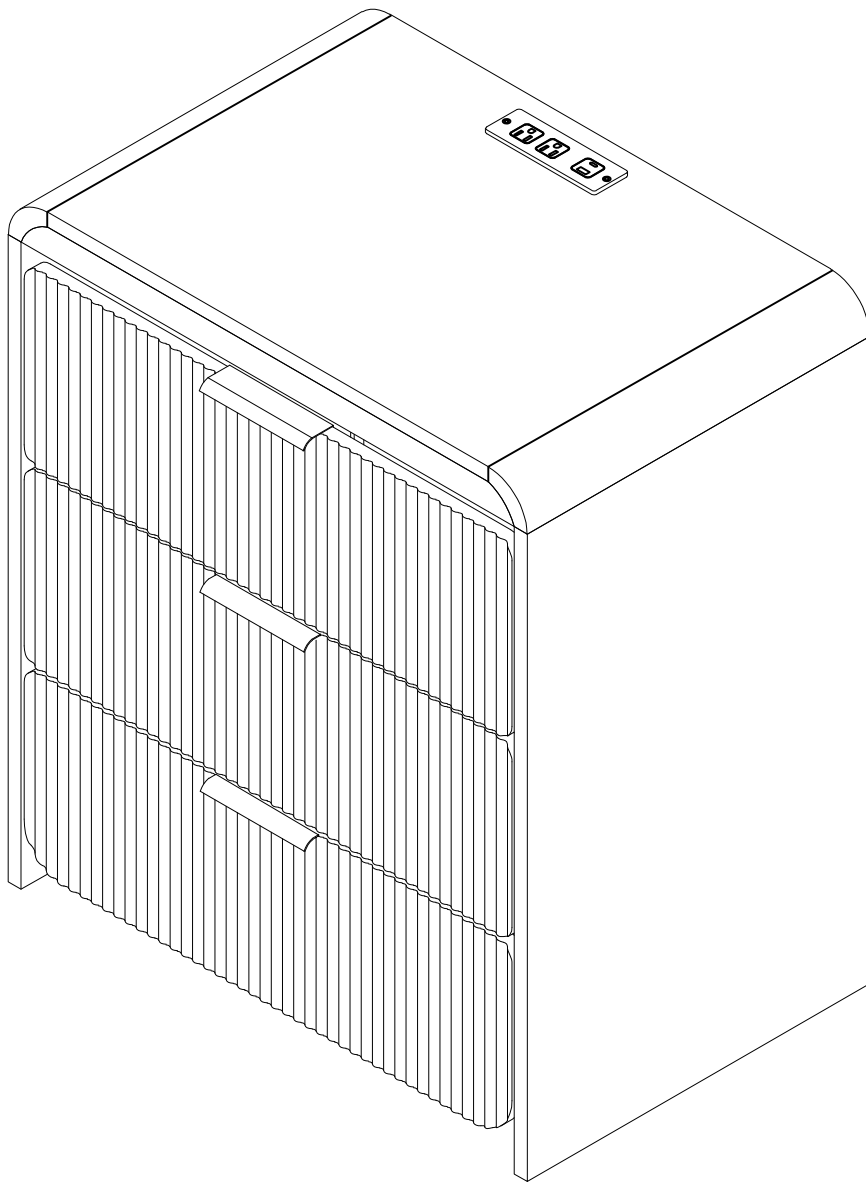

Installation complete